




# Multifunctional storage

## Assembly Instructions


we recommend using the included manual installation tool for assembly.  
If you choose to use a power drill, please set it to the lowest torque setting to prevent over-tightening, which may damage the wooden panels.

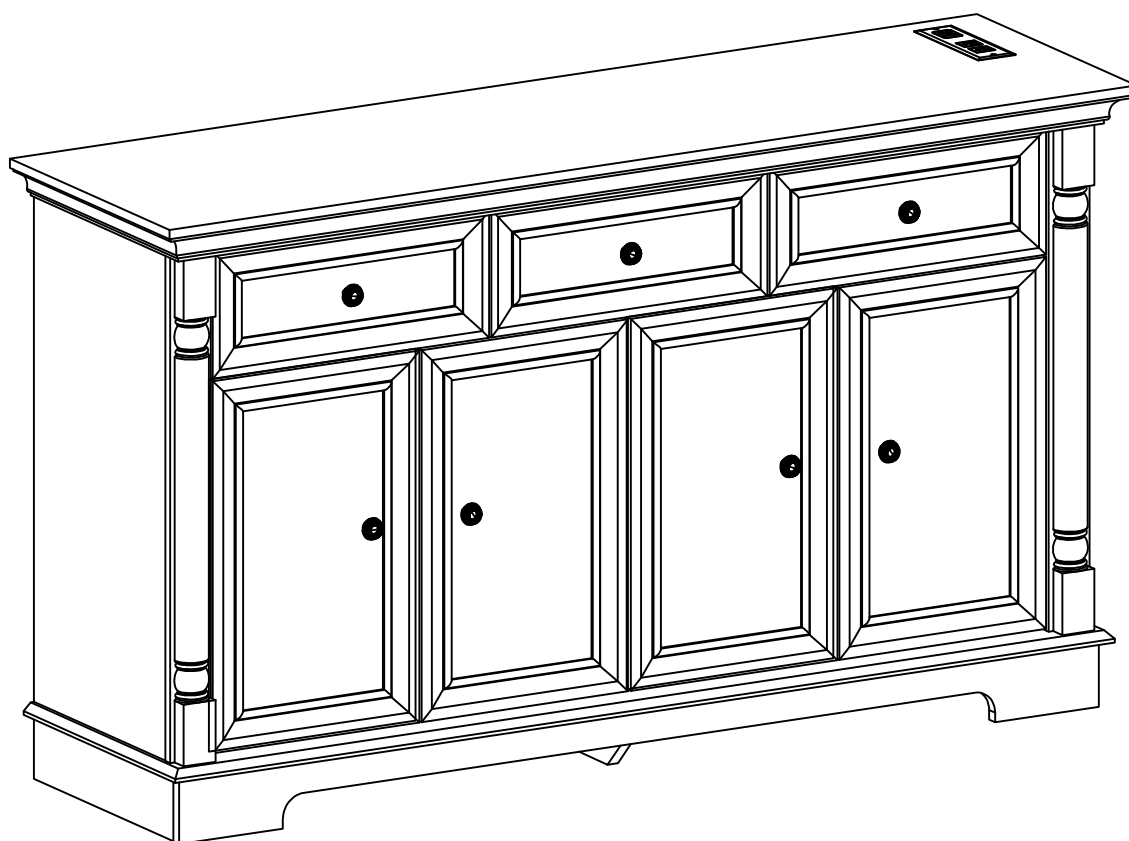


# Parts List

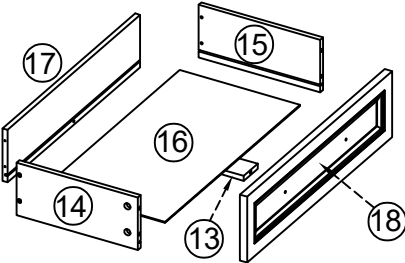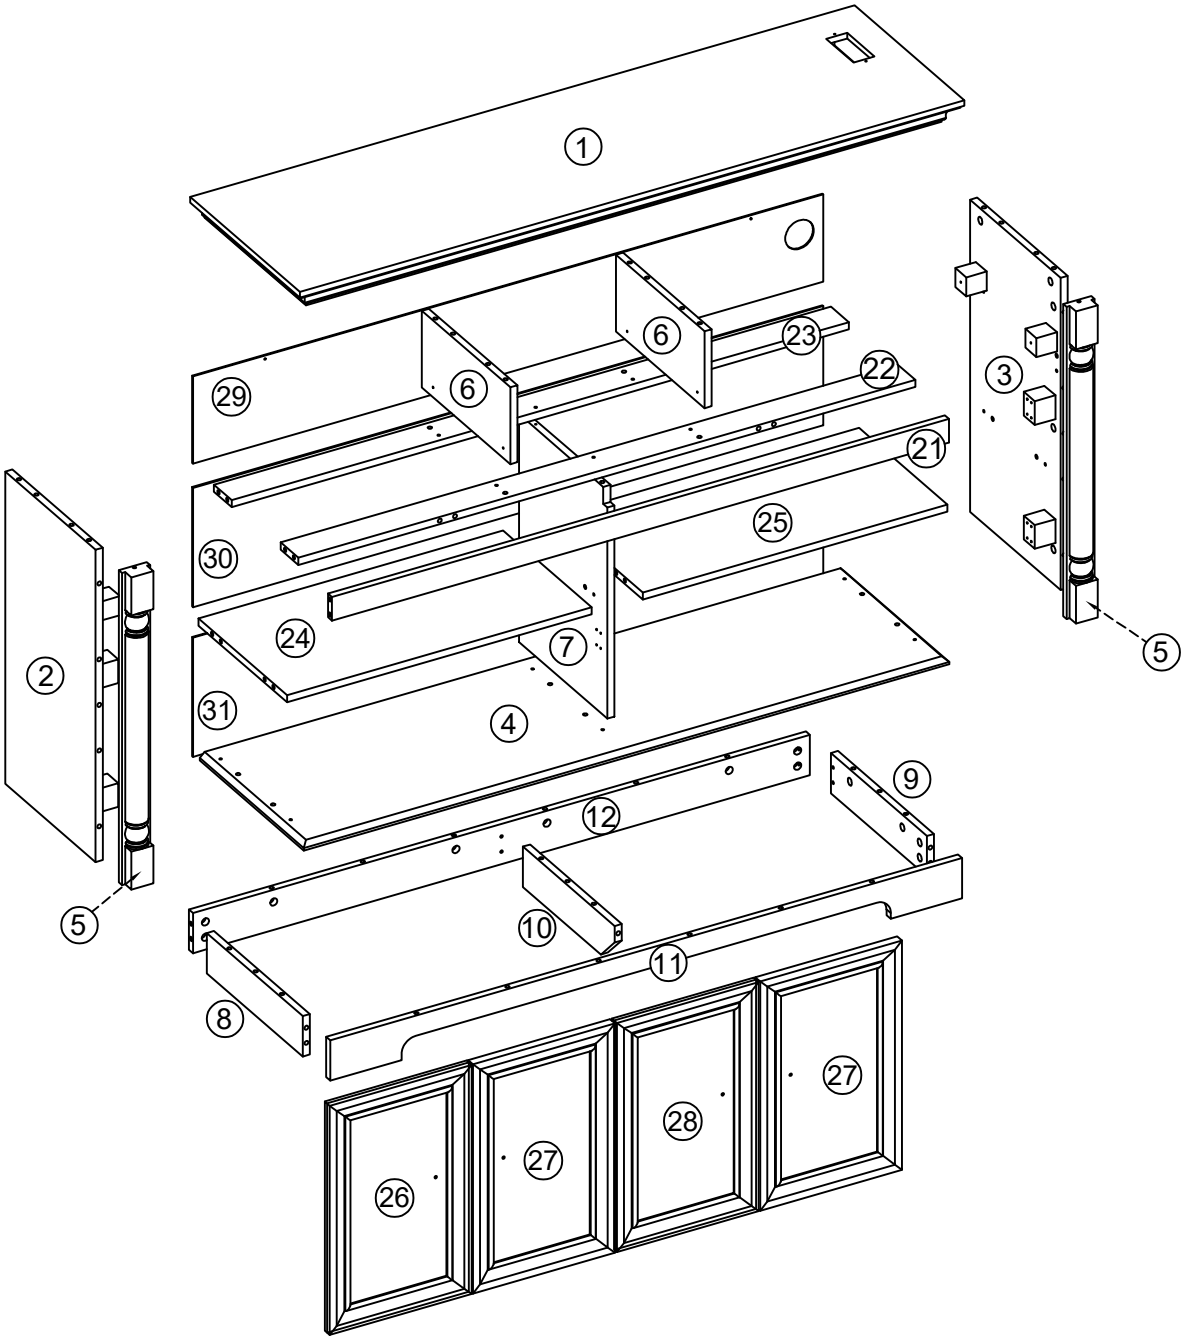

X1

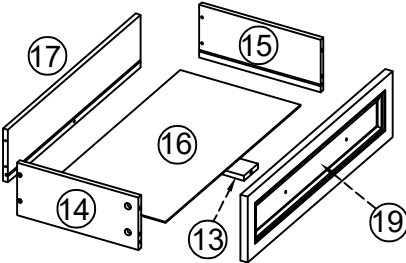


X1

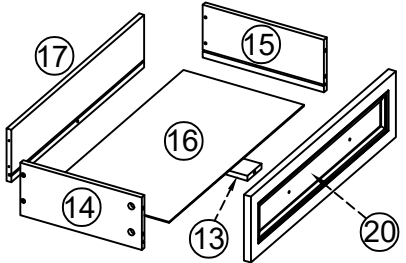


X1

# Hardware

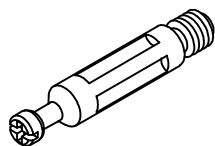


A x 69sets




Ø15X9.5MM

B x 69sets

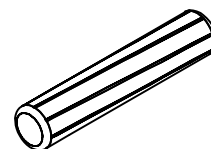


Ø8 x 30MM

C x 48pcs

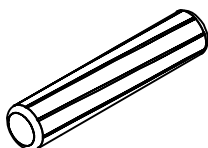


Ø6 x 30MM

D x 8pcs




3.5 x 12MM

E x 76pcs

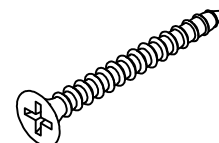


3.5 x 35MM

F x26pcs

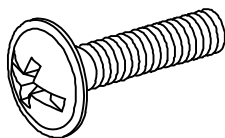


M4 x 16MM

G x 7pcs

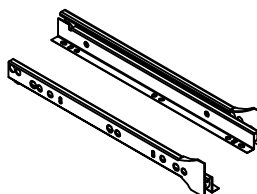


300MM

H x 3sets

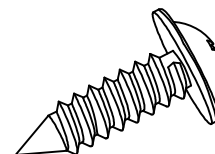


3.5 x 12MM


I x36pcs

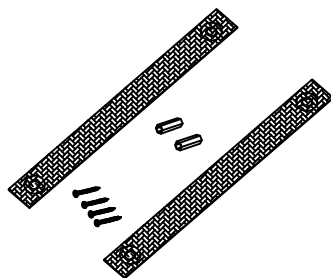


J x 1sets

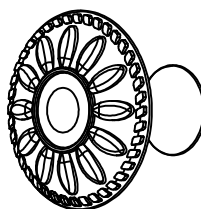


K x 7sets

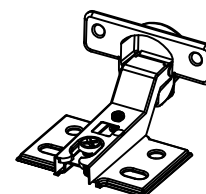


(L) x 4sets

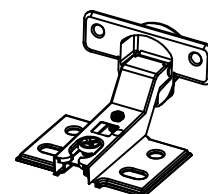

(M) x 4sets

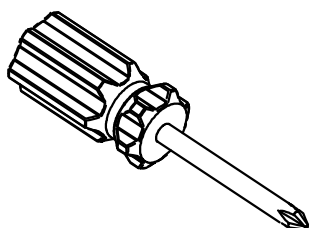



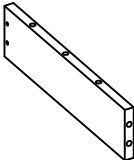
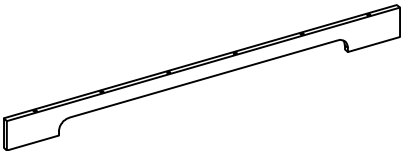
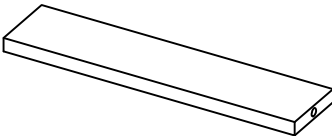
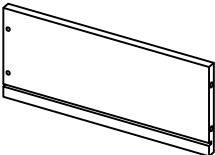





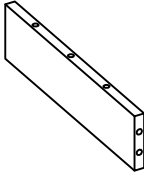
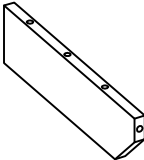
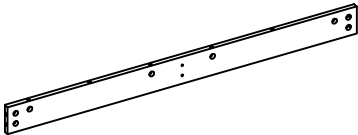
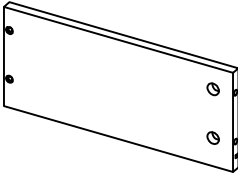
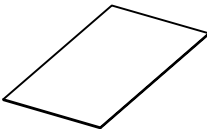
N x 1sets











O x 1sets







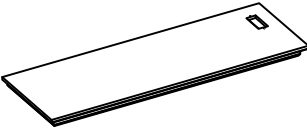
## ASSEMBLY MATERIAL

Item no.	Reference Image	Qty.
①		X1
③		X1
⑤		X2
⑦		X1
⑨		X1
⑪		X1
⑬		X3
⑮		X3

Item no.	Reference Image	Qty.
②		X1
④		X1
⑥		X2
⑧		X1
⑩		X1
⑫		X1
⑭		X3
⑯		X3

## ASSEMBLY MATERIAL

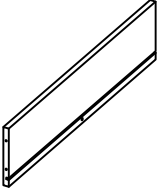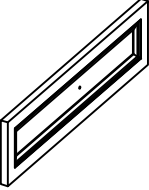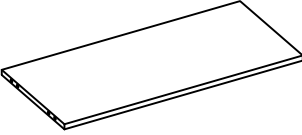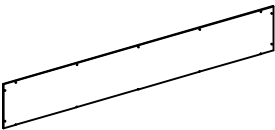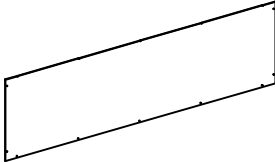Item no.	Reference Image	Qty.
<b>17</b>		X3
<b>19</b>		X1
<b>21</b>		X1
<b>23</b>		X1
<b>25</b>		X1
<b>27</b>		X2
<b>29</b>		X1
<b>31</b>		X1

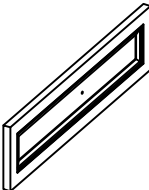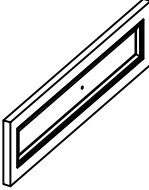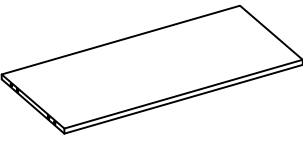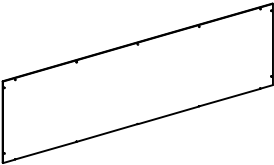Item no.	Reference Image	Qty.
<b>18</b>		X1
<b>20</b>		X1
<b>22</b>		X1
<b>24</b>		X1
<b>26</b>		X1
<b>28</b>		X1
<b>30</b>		X1


# Step 1

(E)

Ø3.5\*12mm  
4X


(H)

300MM CL  
2X

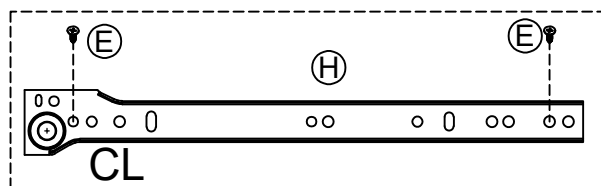


Install first rail on the left side of board.

Step:1

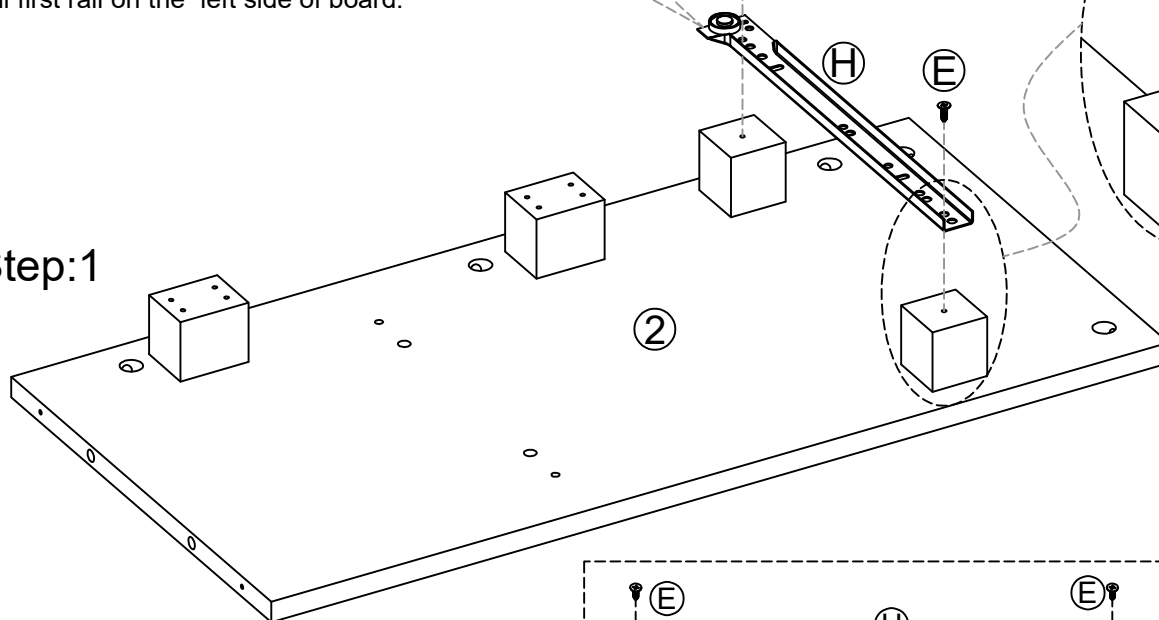


Step:2

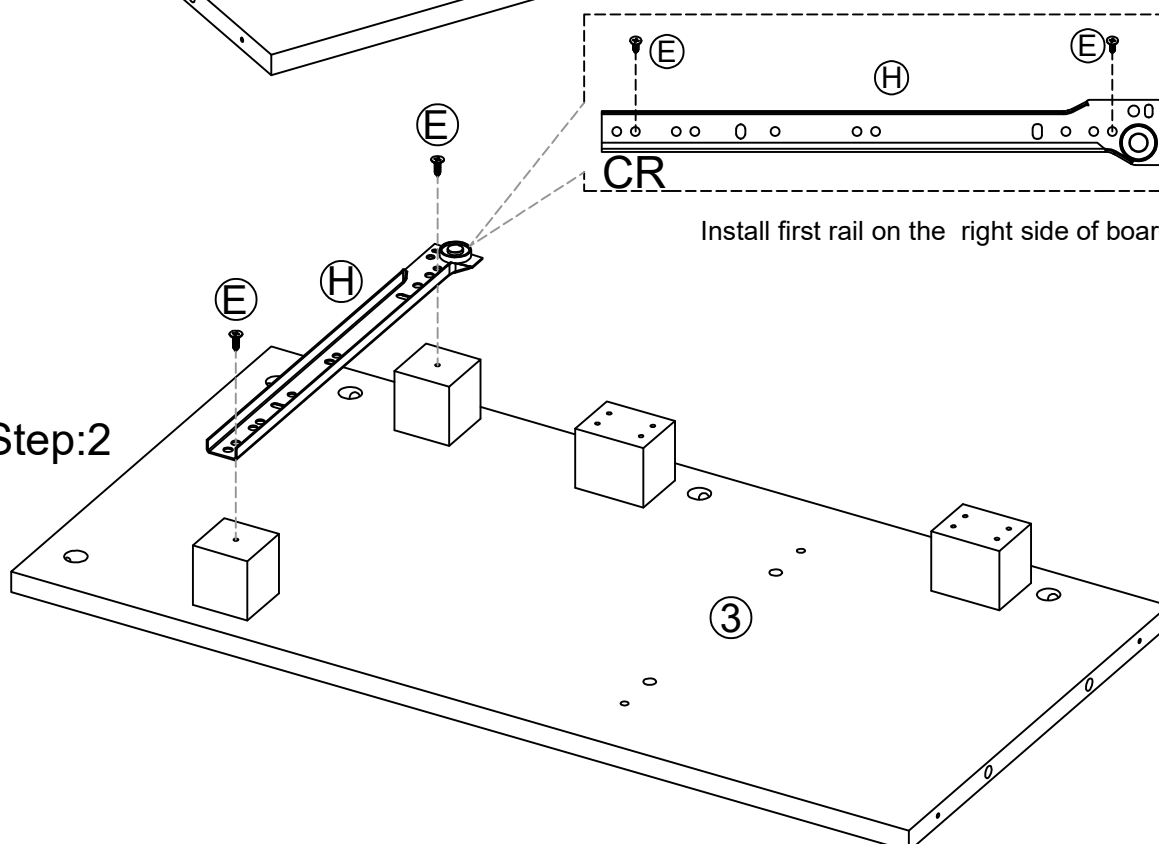

Install first rail on the right side of board.

## Step 2

A




6X

B








6X

C






Ø8\*30mm




4X

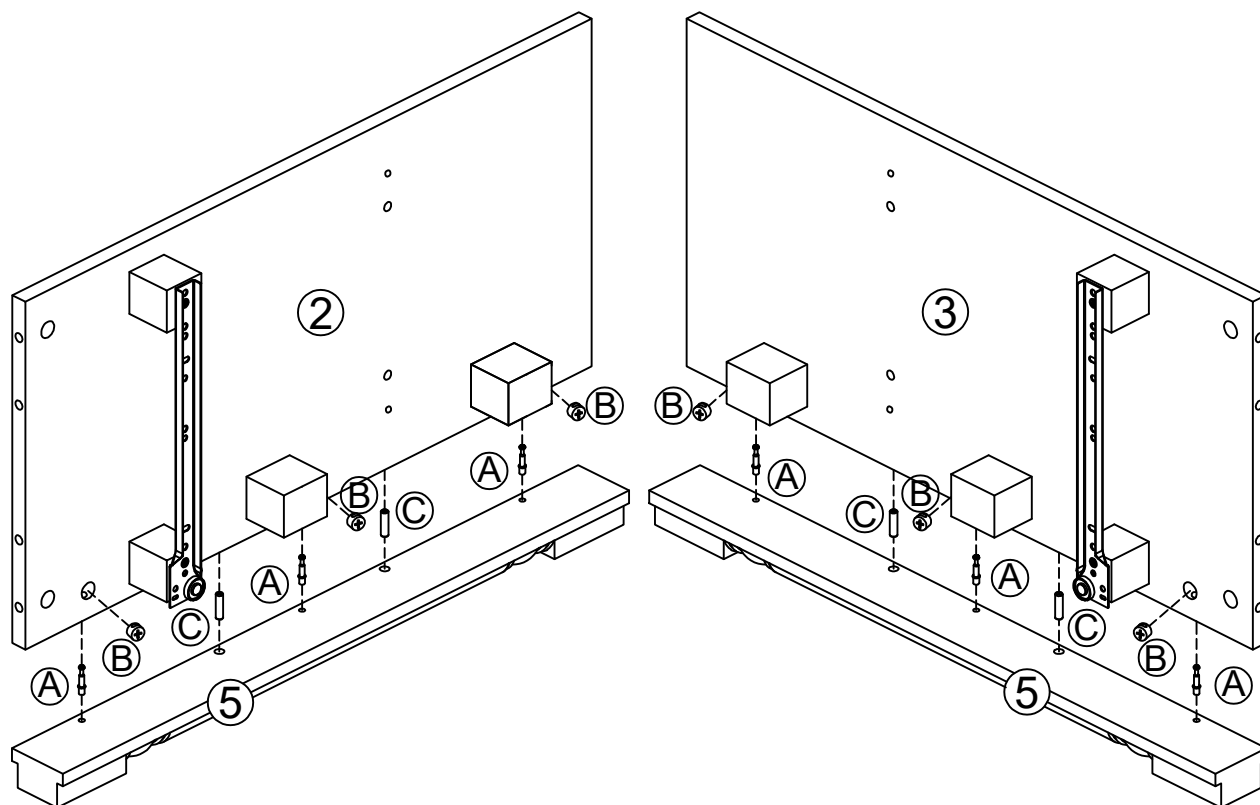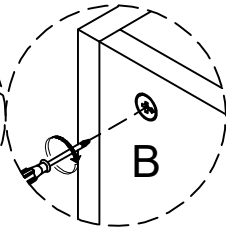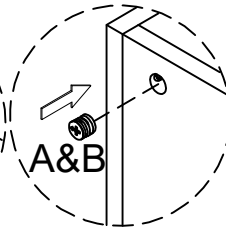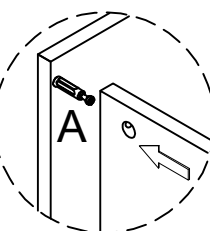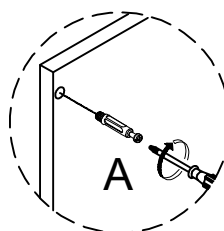

## Step 3


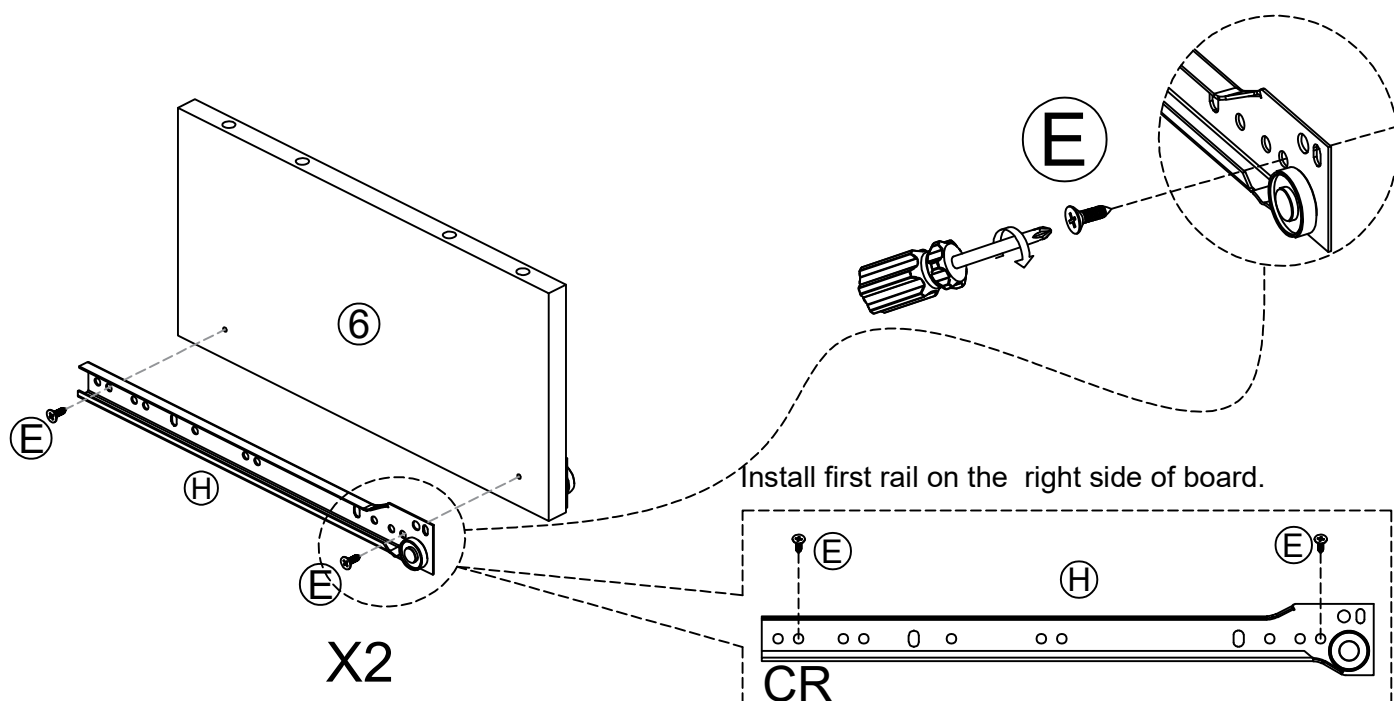
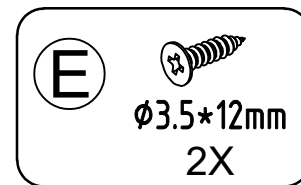
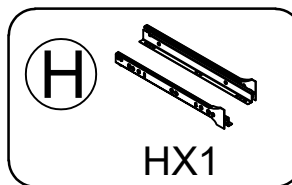


## Step 4

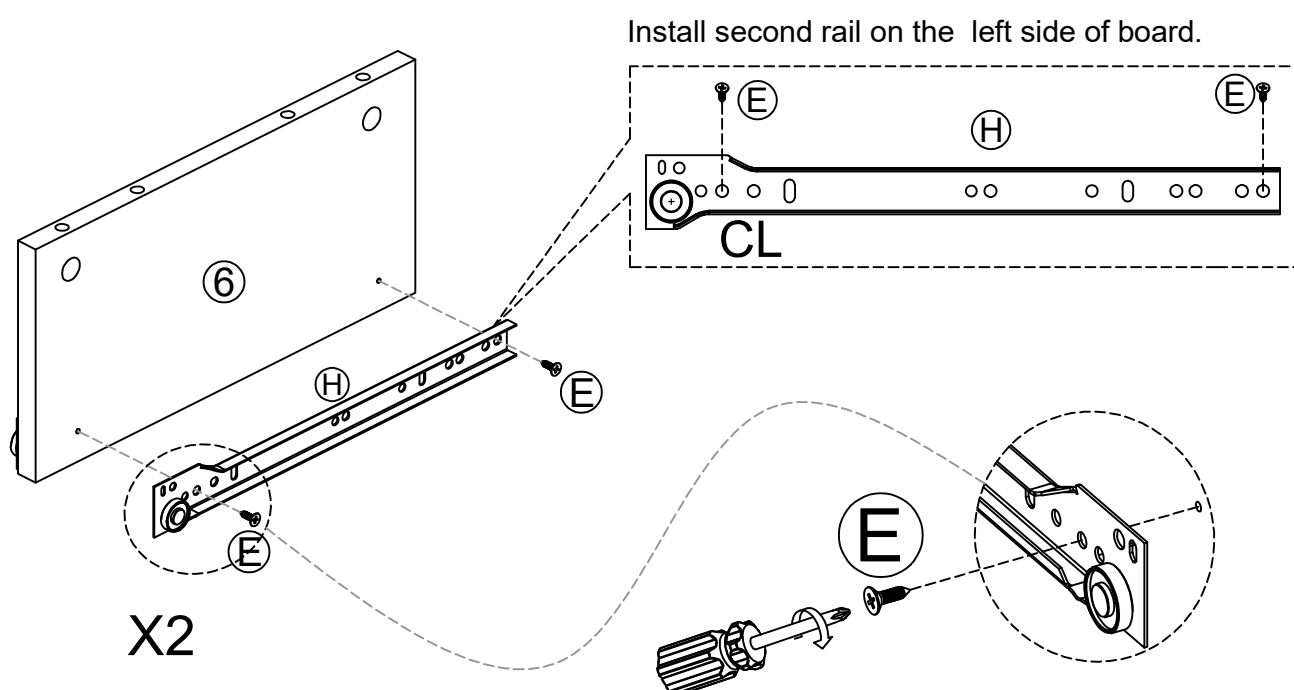
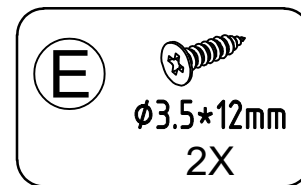
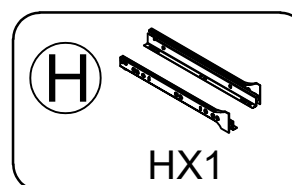












## Step 5

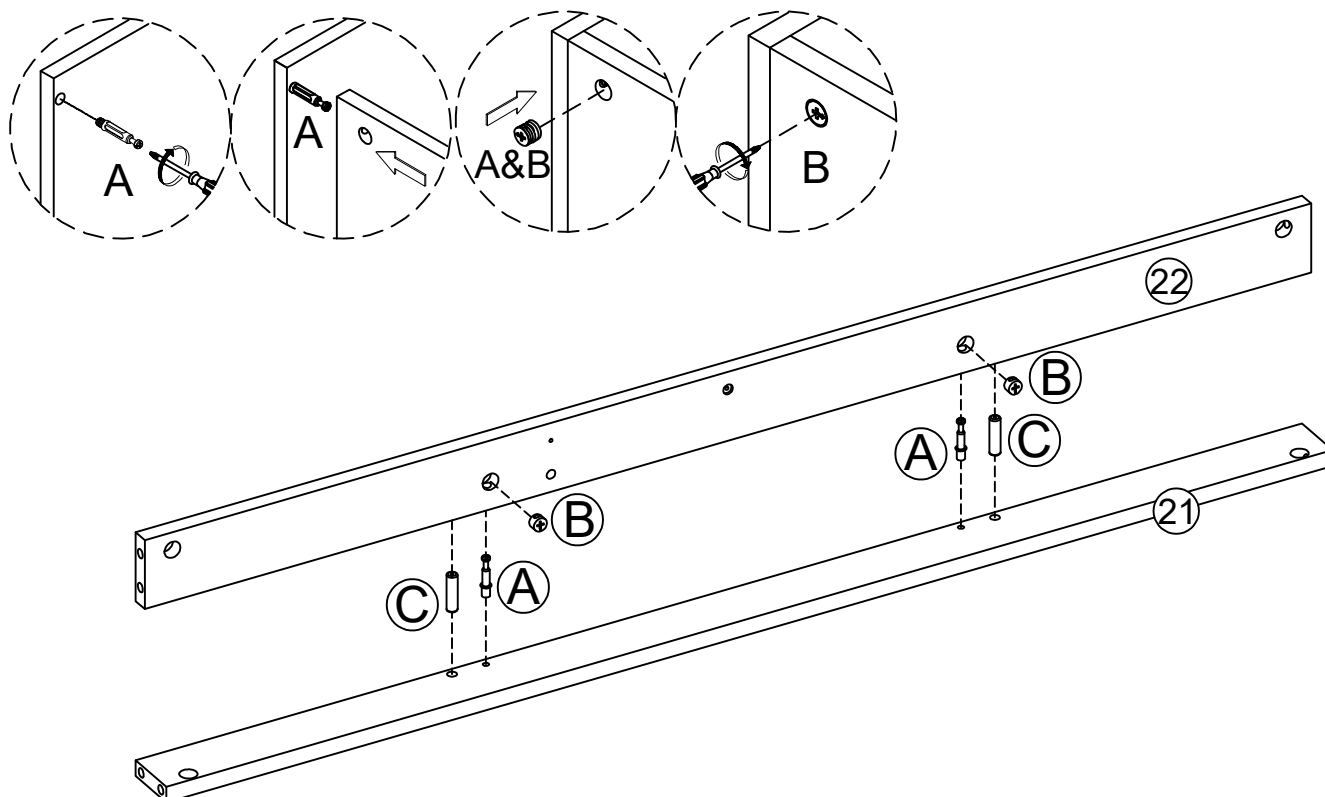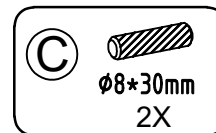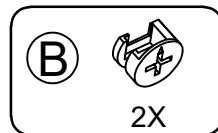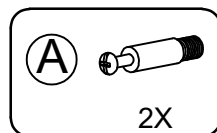









## Step 6

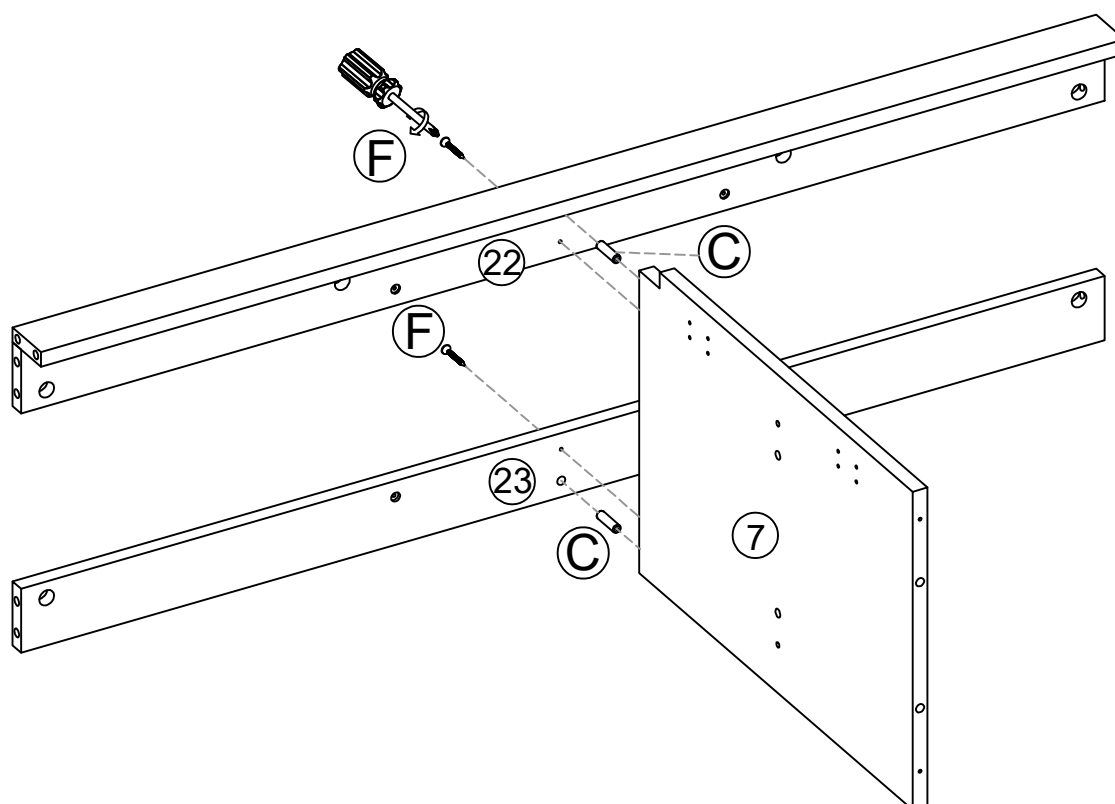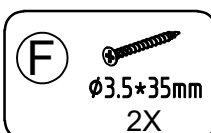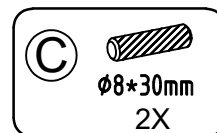





## Step 7

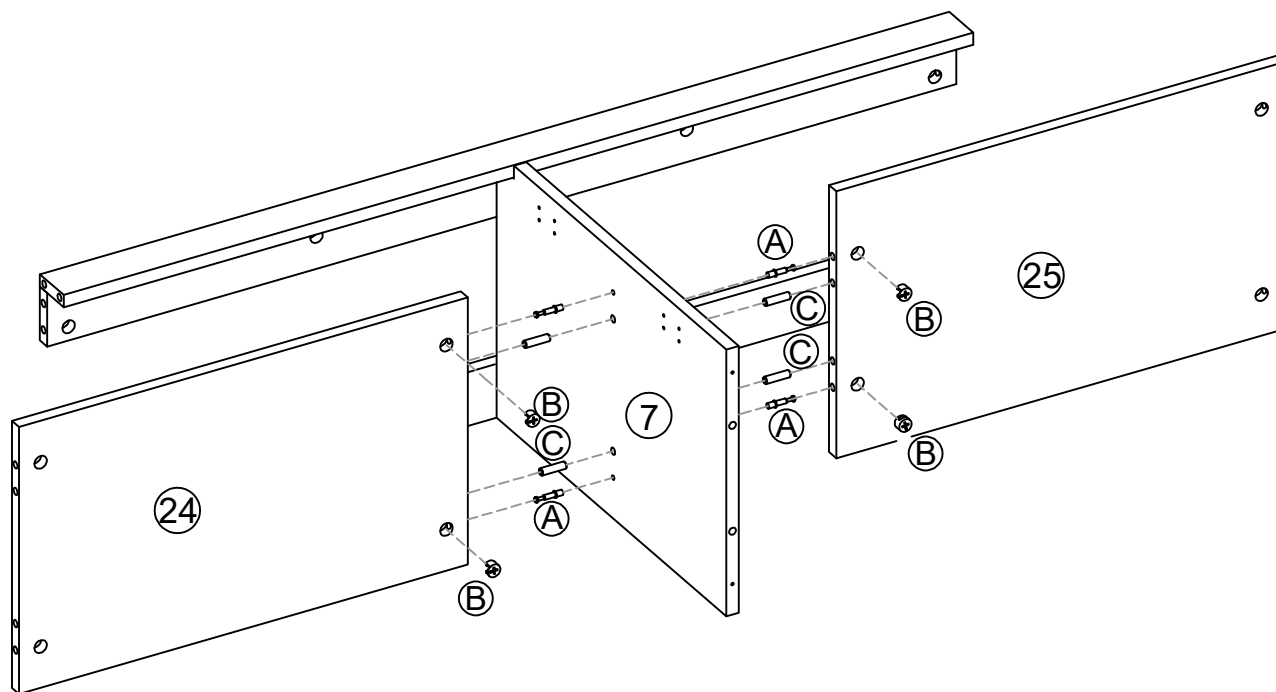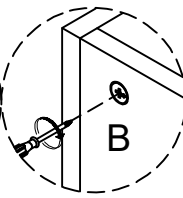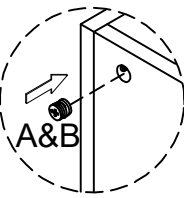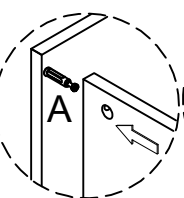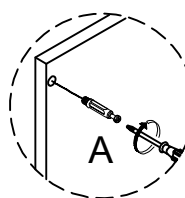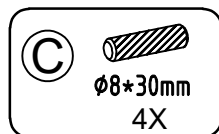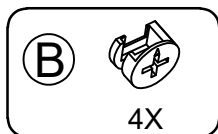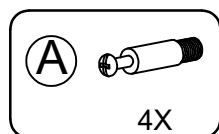





## Step 8

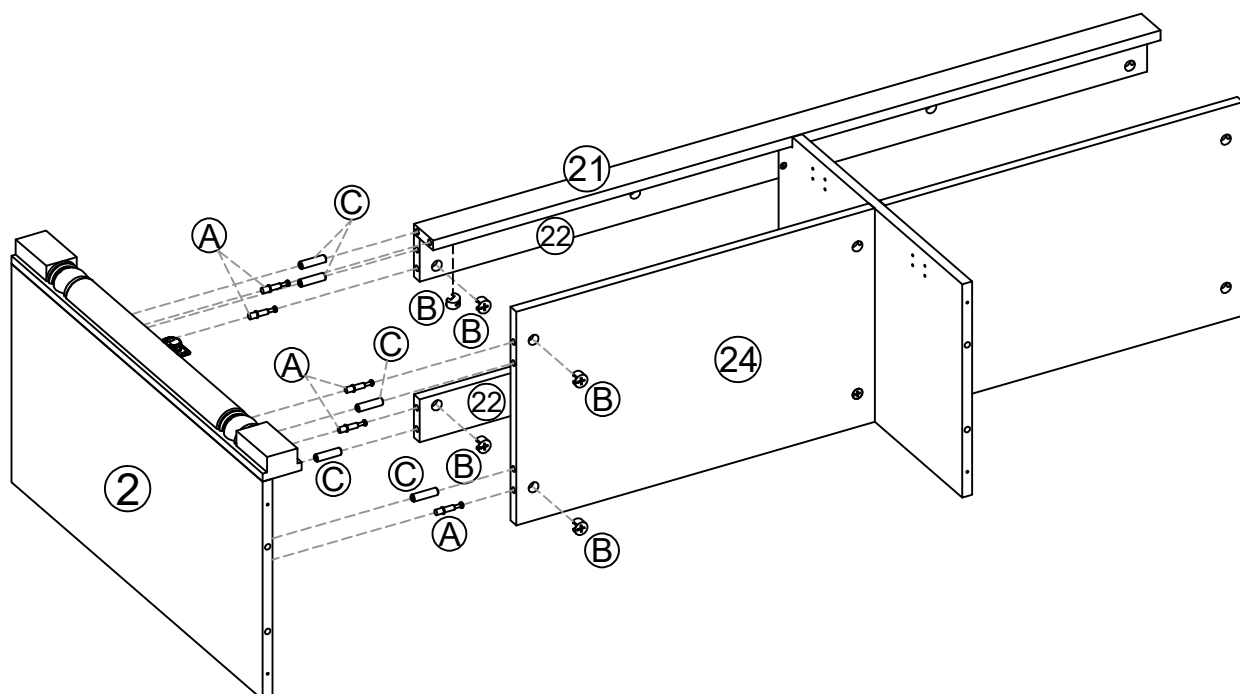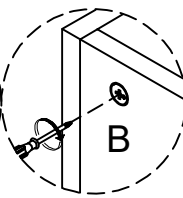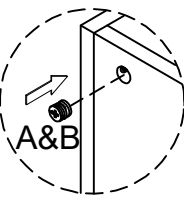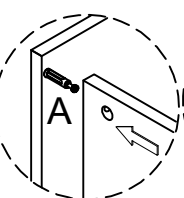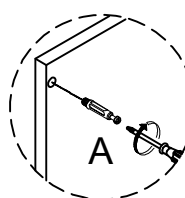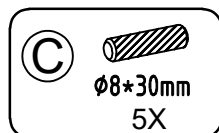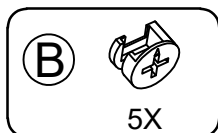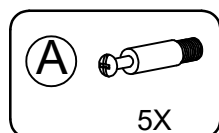





## Step 9

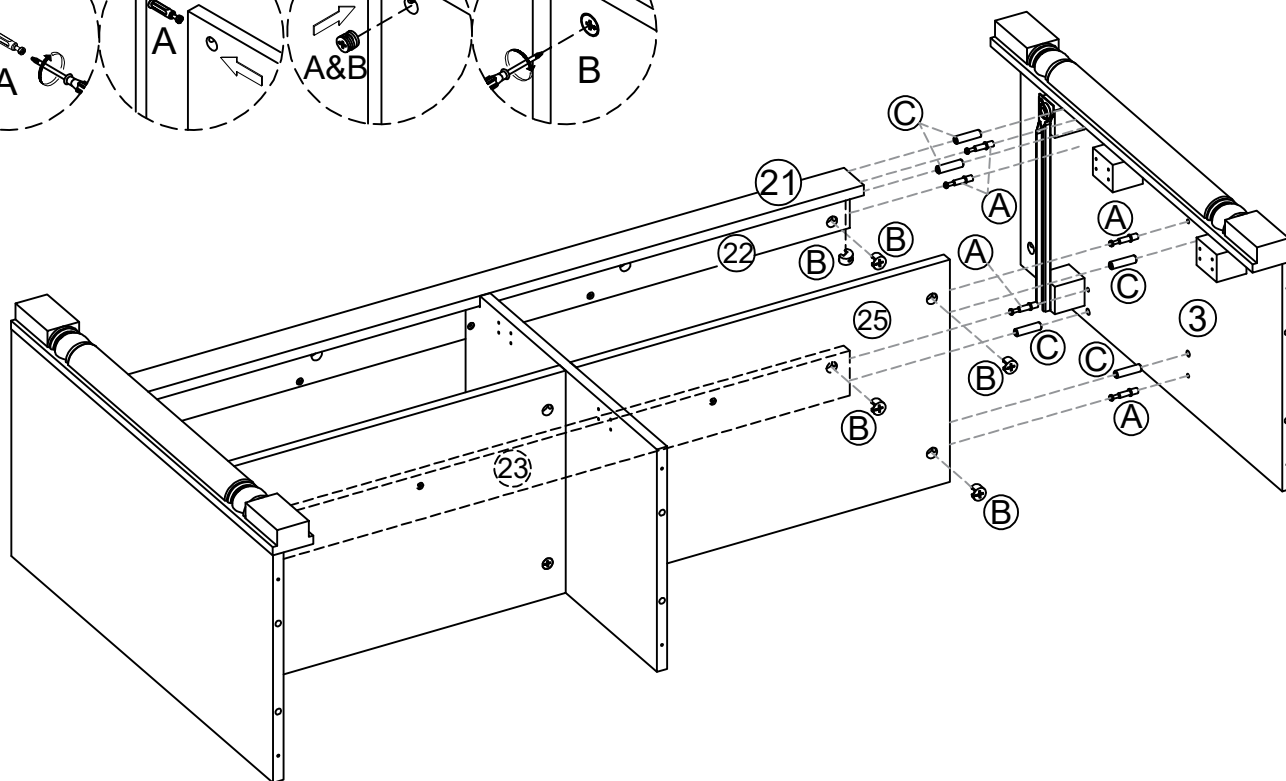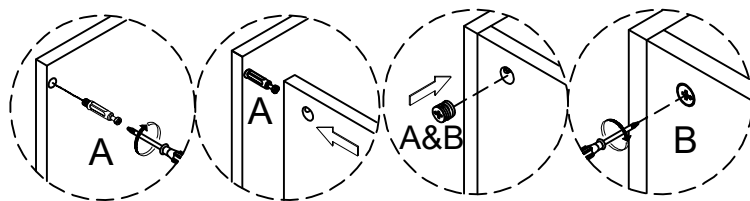




## Step 10

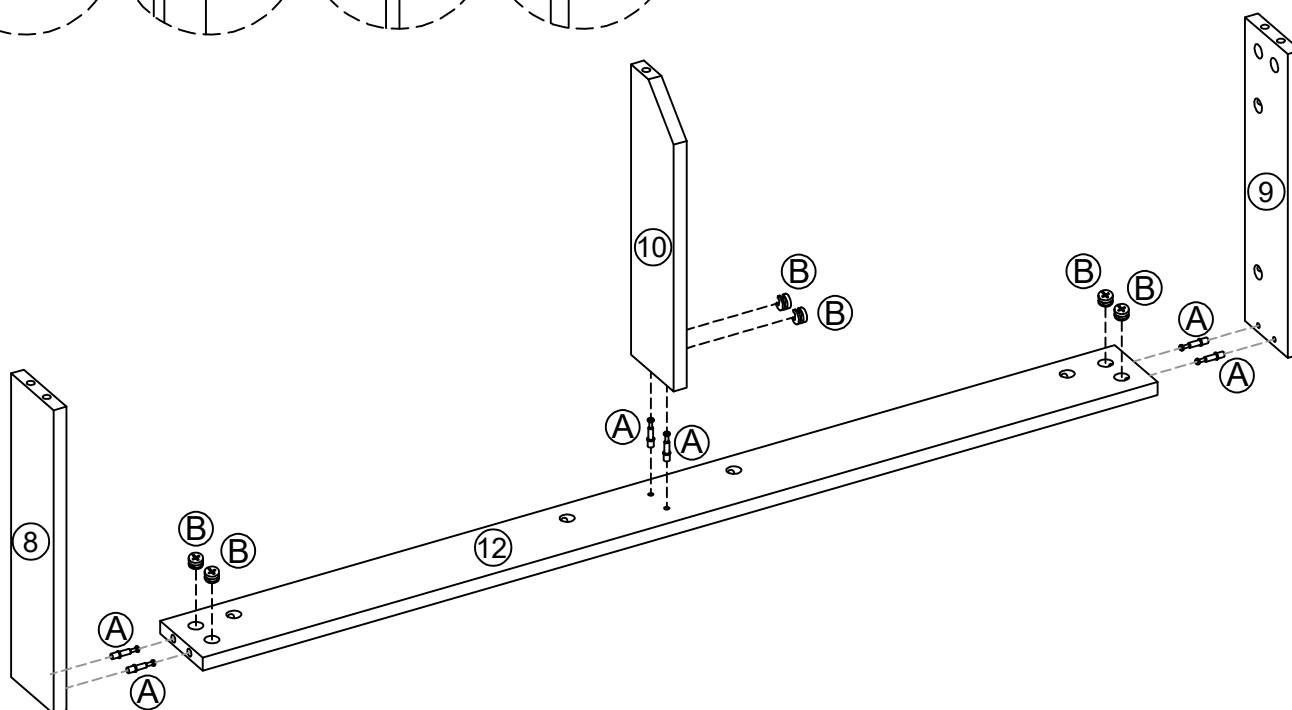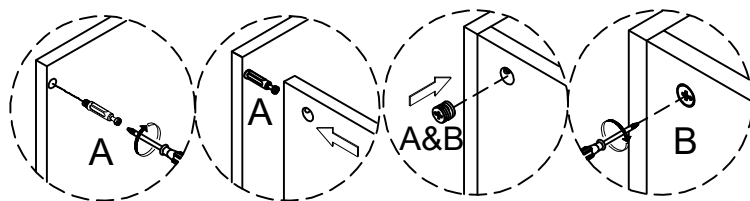

## Step 11

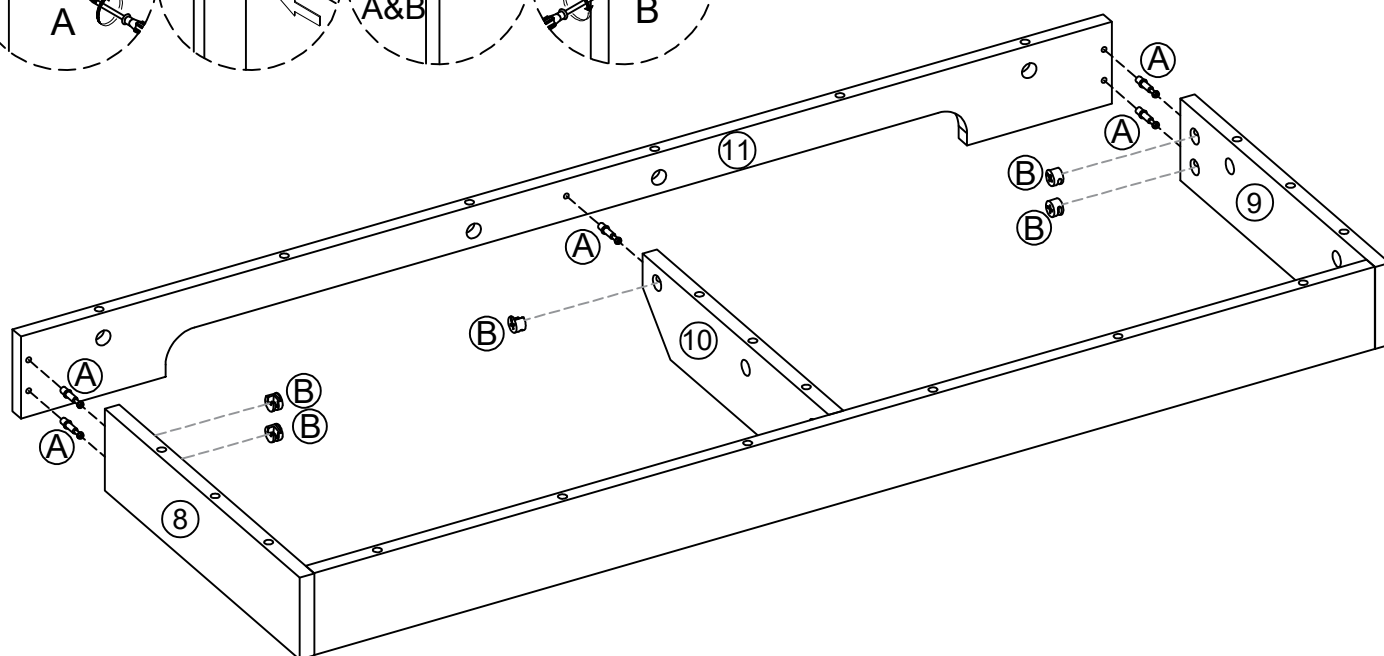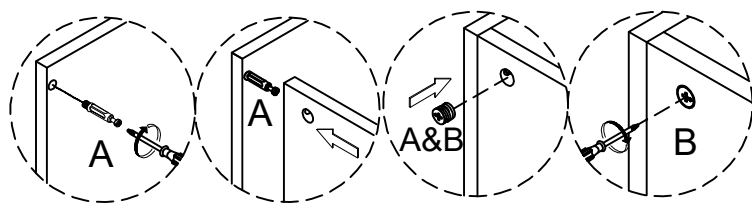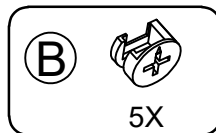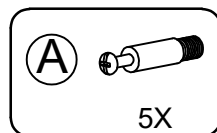

## Step 12

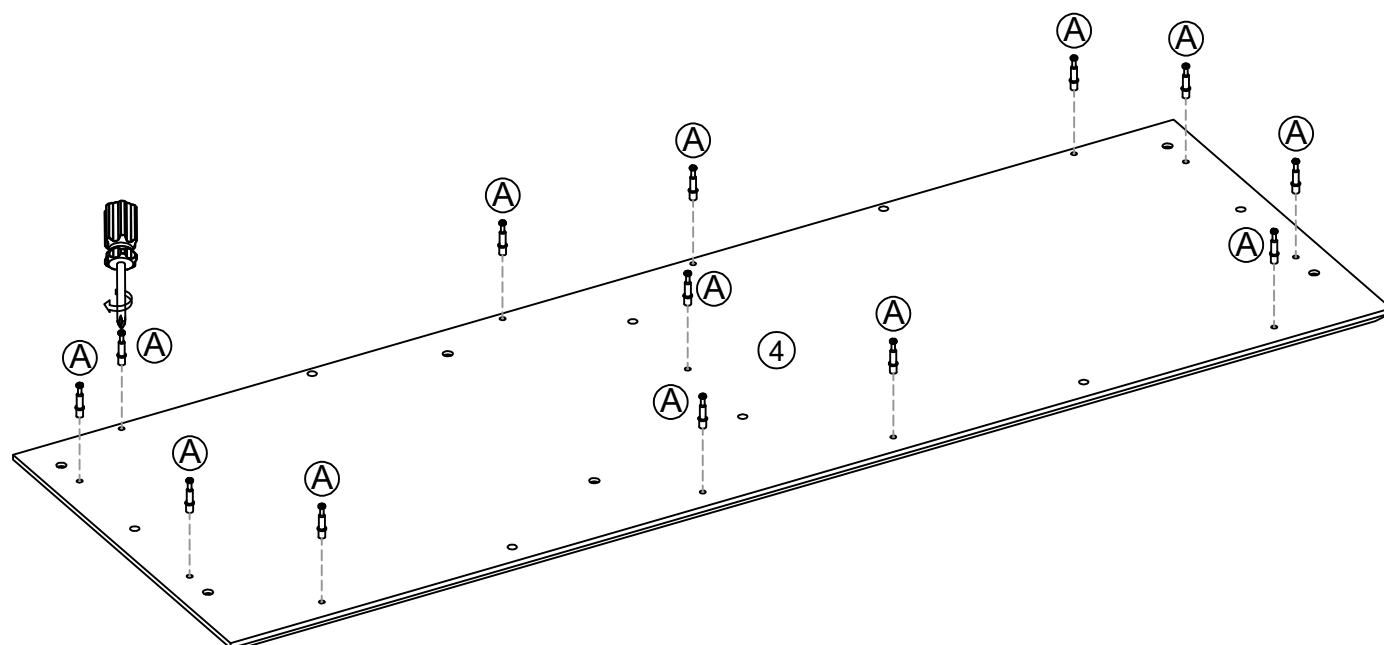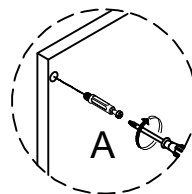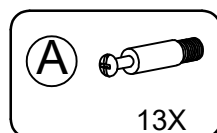


## Step 13

Ⓒ

Ø8\*30mm  
6X

Ⓕ

Ø3.5\*35mm  
6X

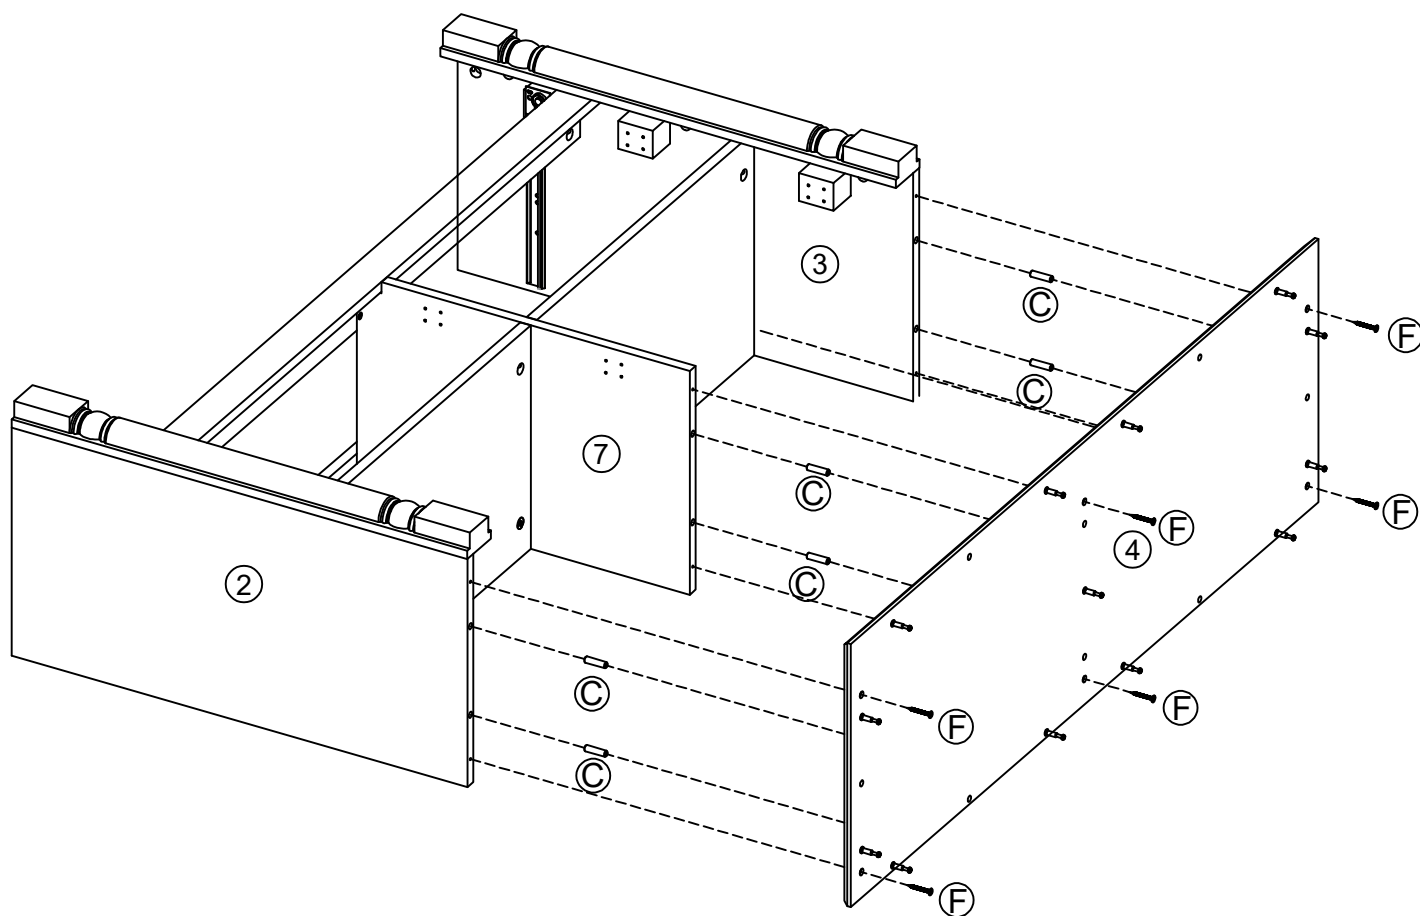

## Step 14

(B)





13X

(C)



Ø8\*30mm

8X

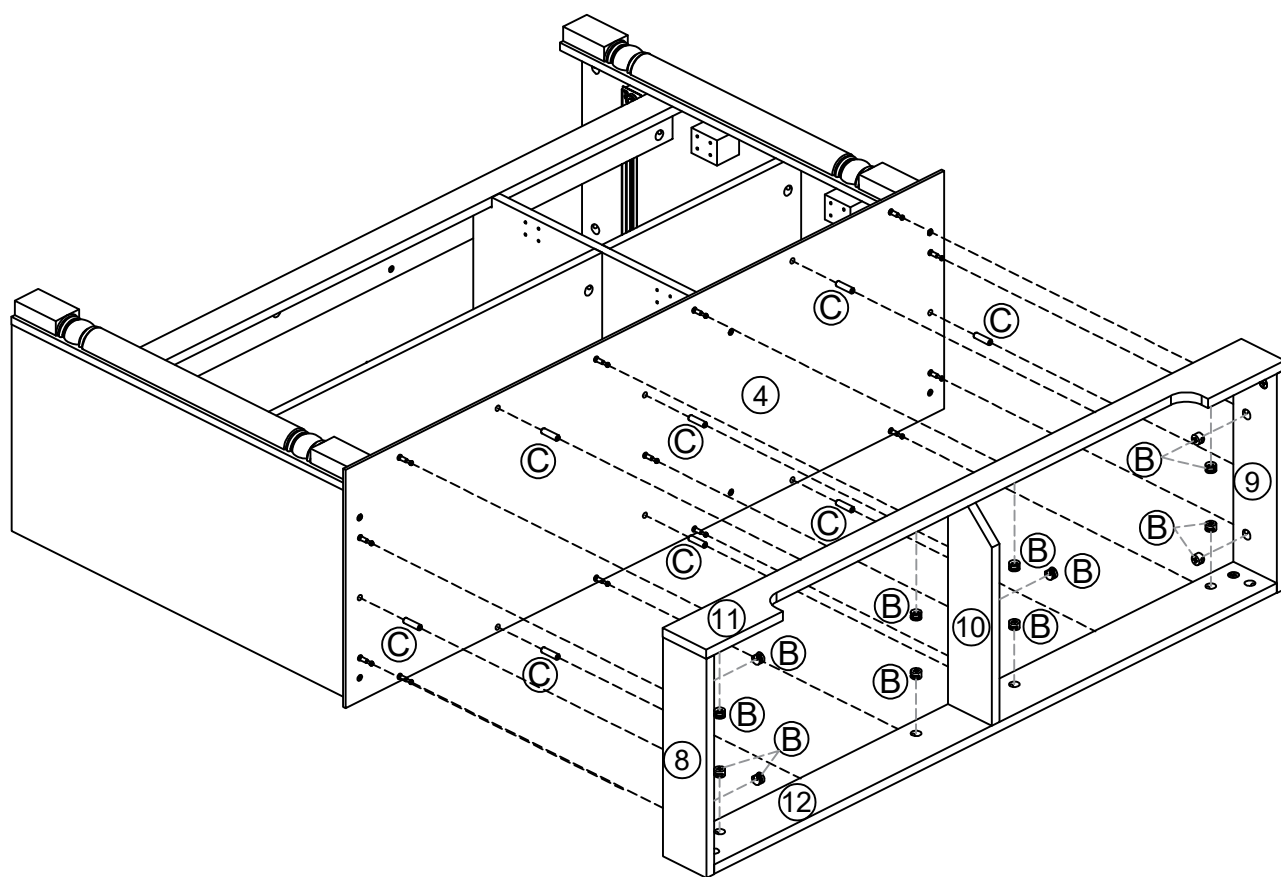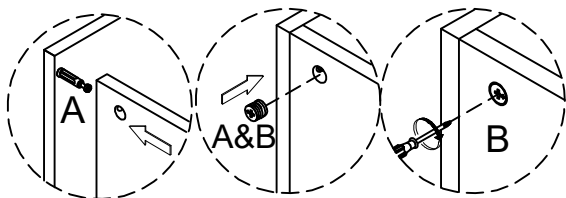


## Step 15

(C)






Ø8\*30mm  
4X

(F)


Ø3.5\*35mm  
4X

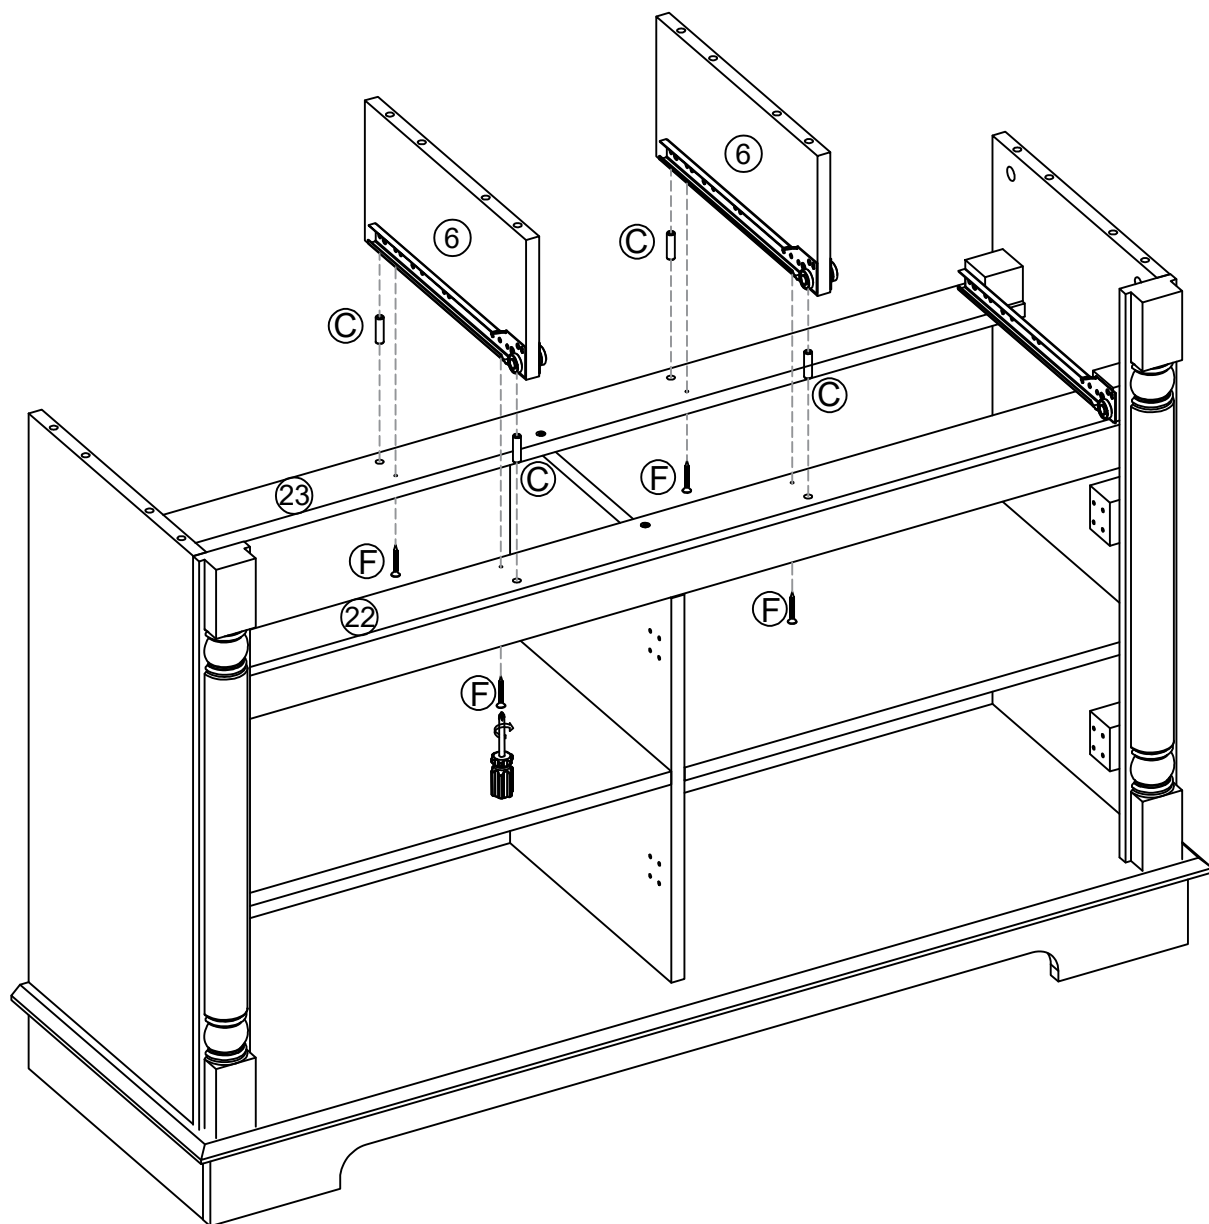

# Step 16

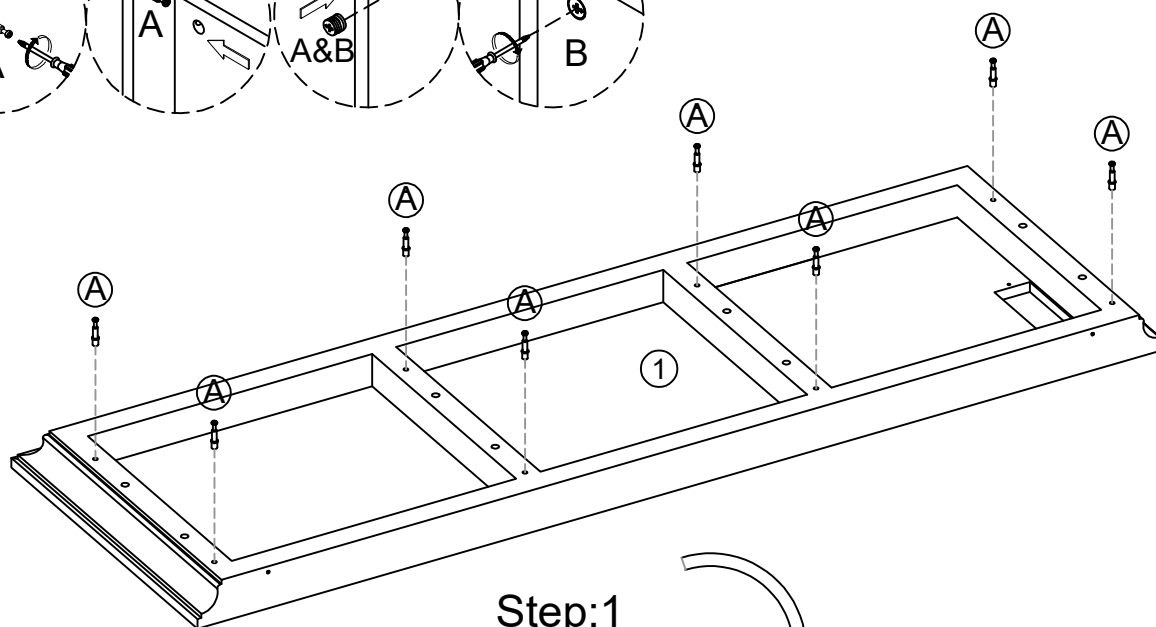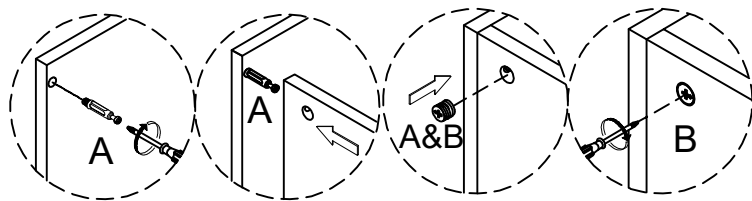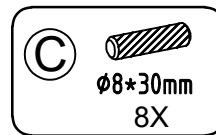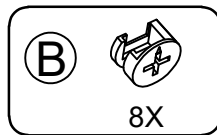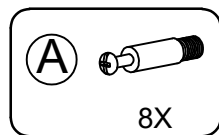






Step:1

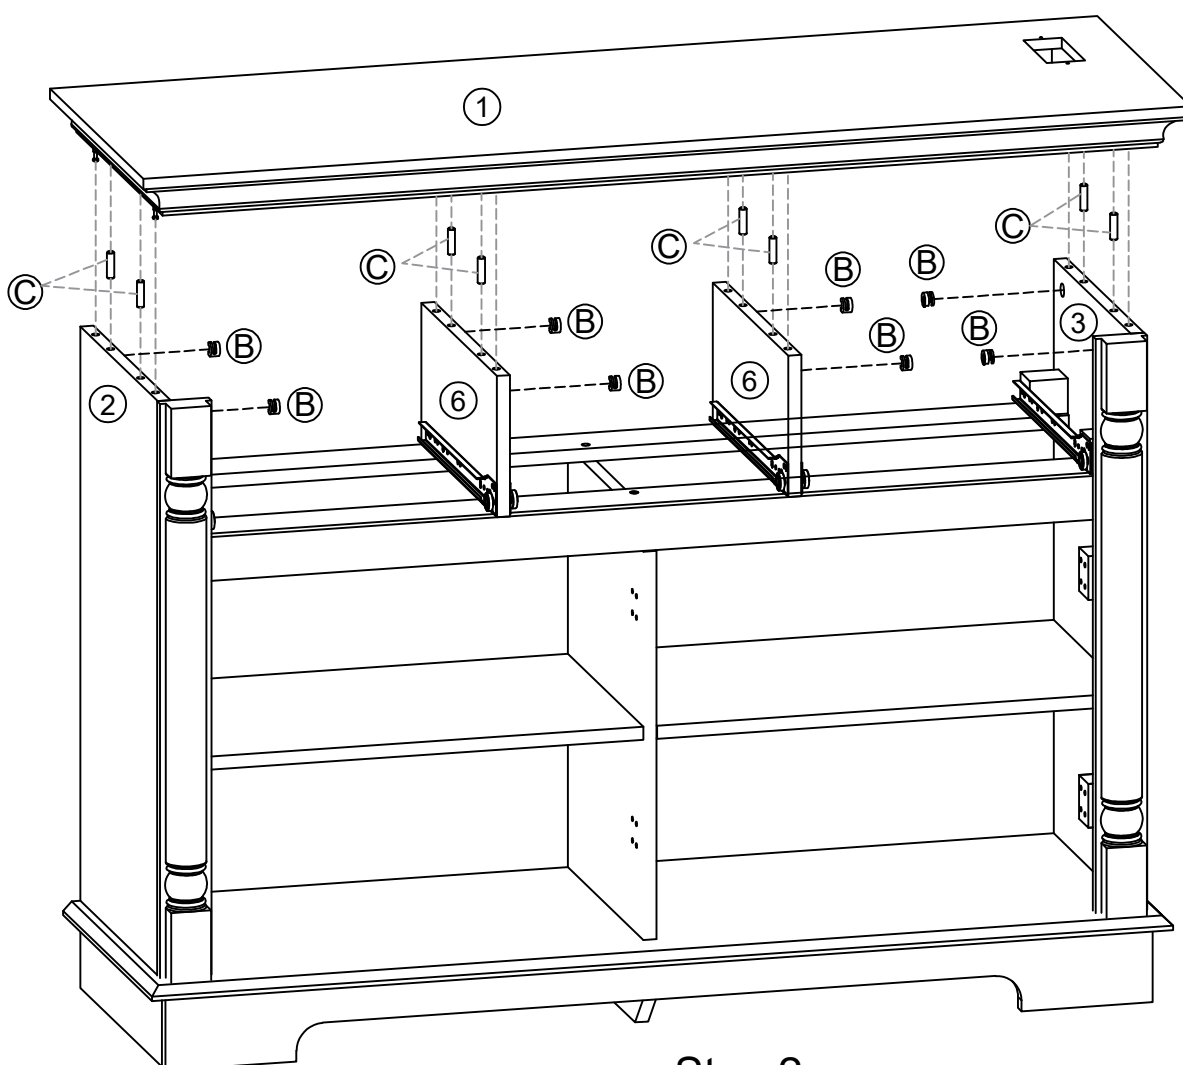






Step:2



## Step 17

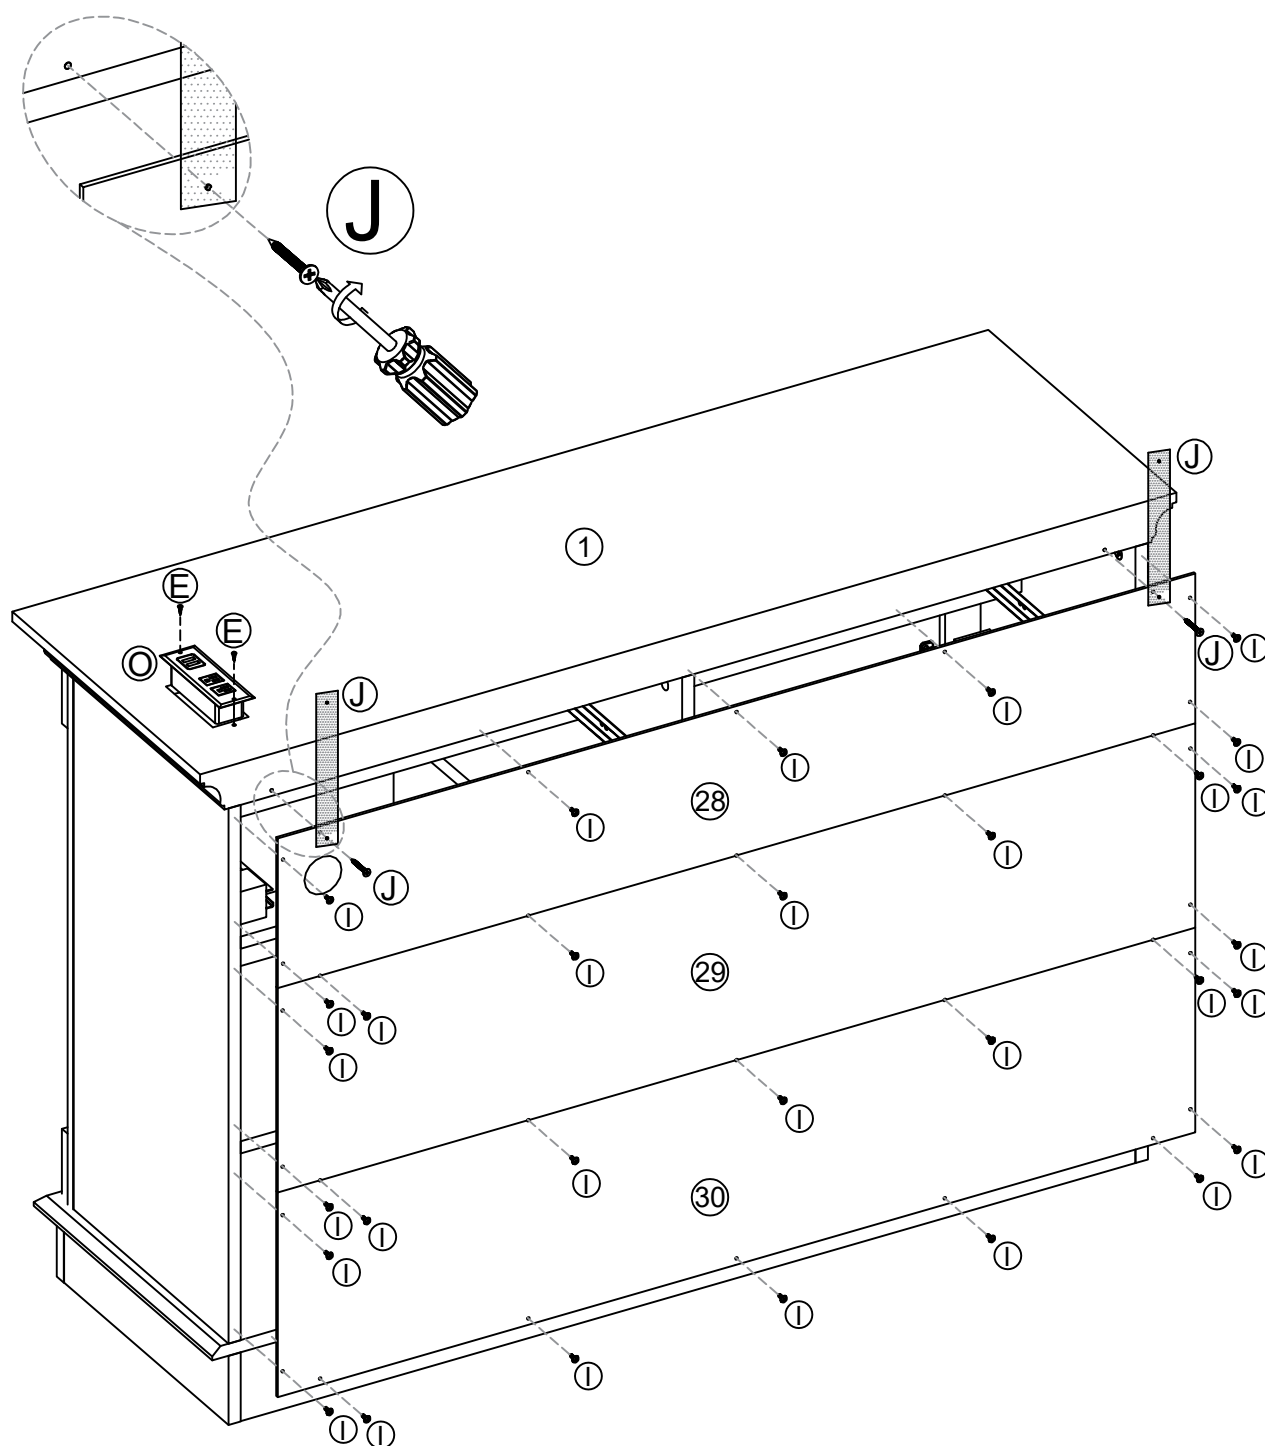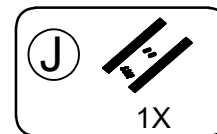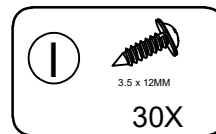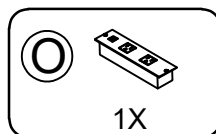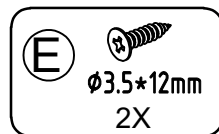


# Step 18

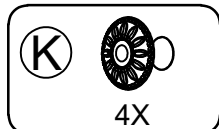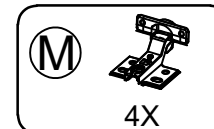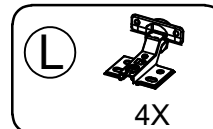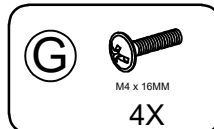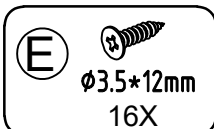


Clockwise rotation of the bolt increases the door hinge height;  
counterclockwise rotation of the bolt decreases the door hinge height.

Loosen the screw to adjust  
the length of the door hinge

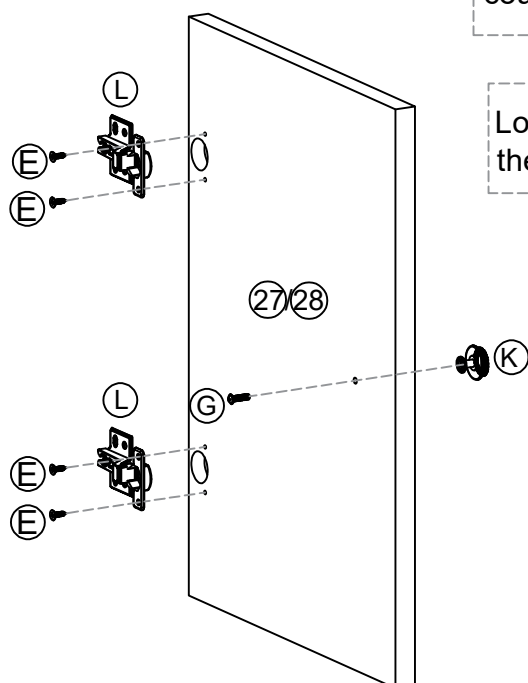


X2

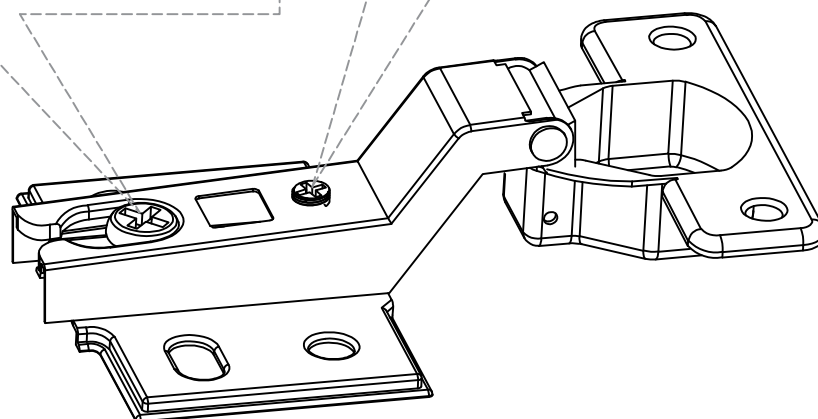


Hinge of big bend

Clockwise rotation of the bolt increases the door hinge height;  
counterclockwise rotation of the bolt decreases the door hinge height.

Loosen the screw to adjust  
the length of the door hinge



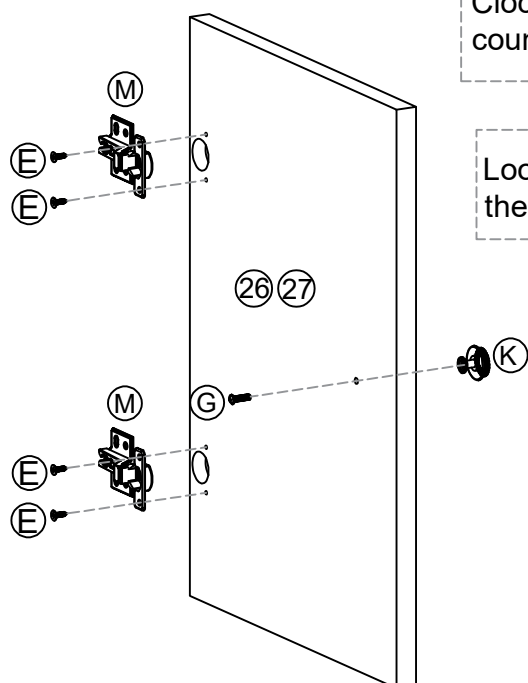


X2





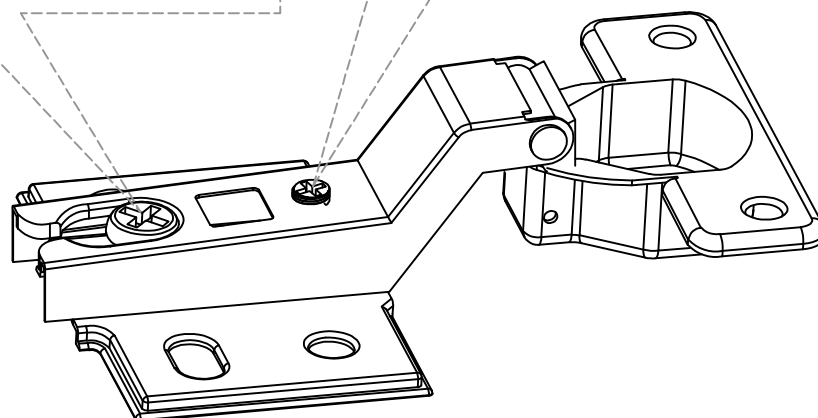


Hinge with a medium bend



## Step 19

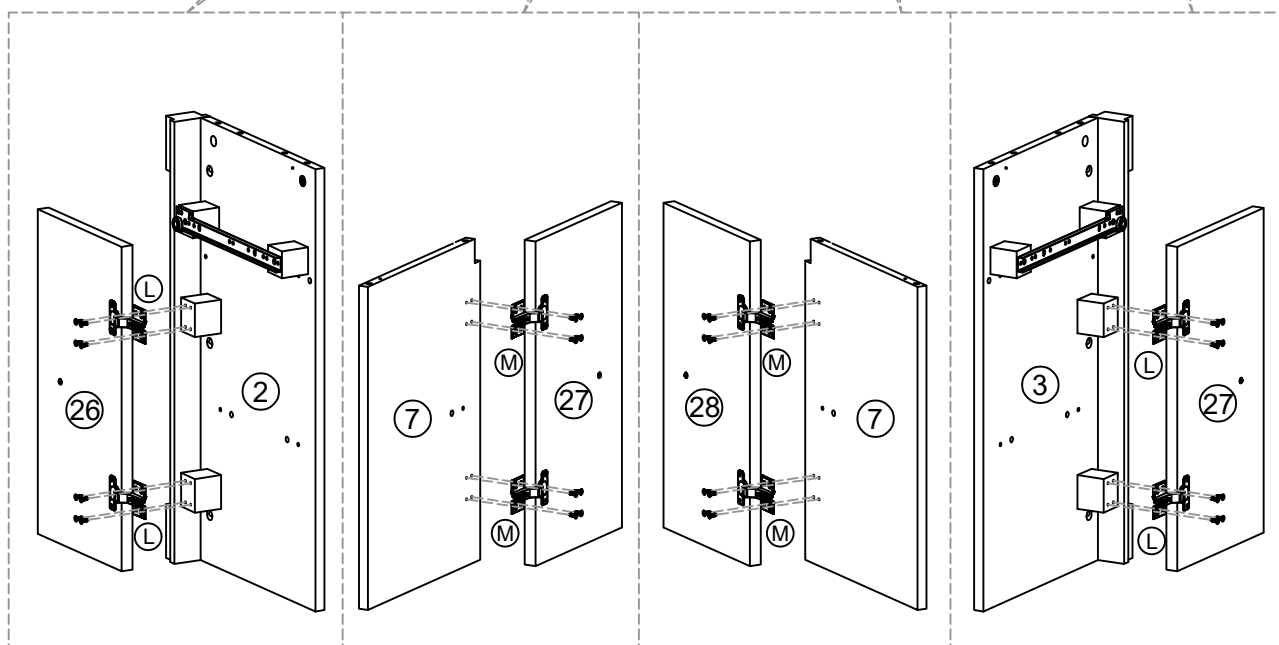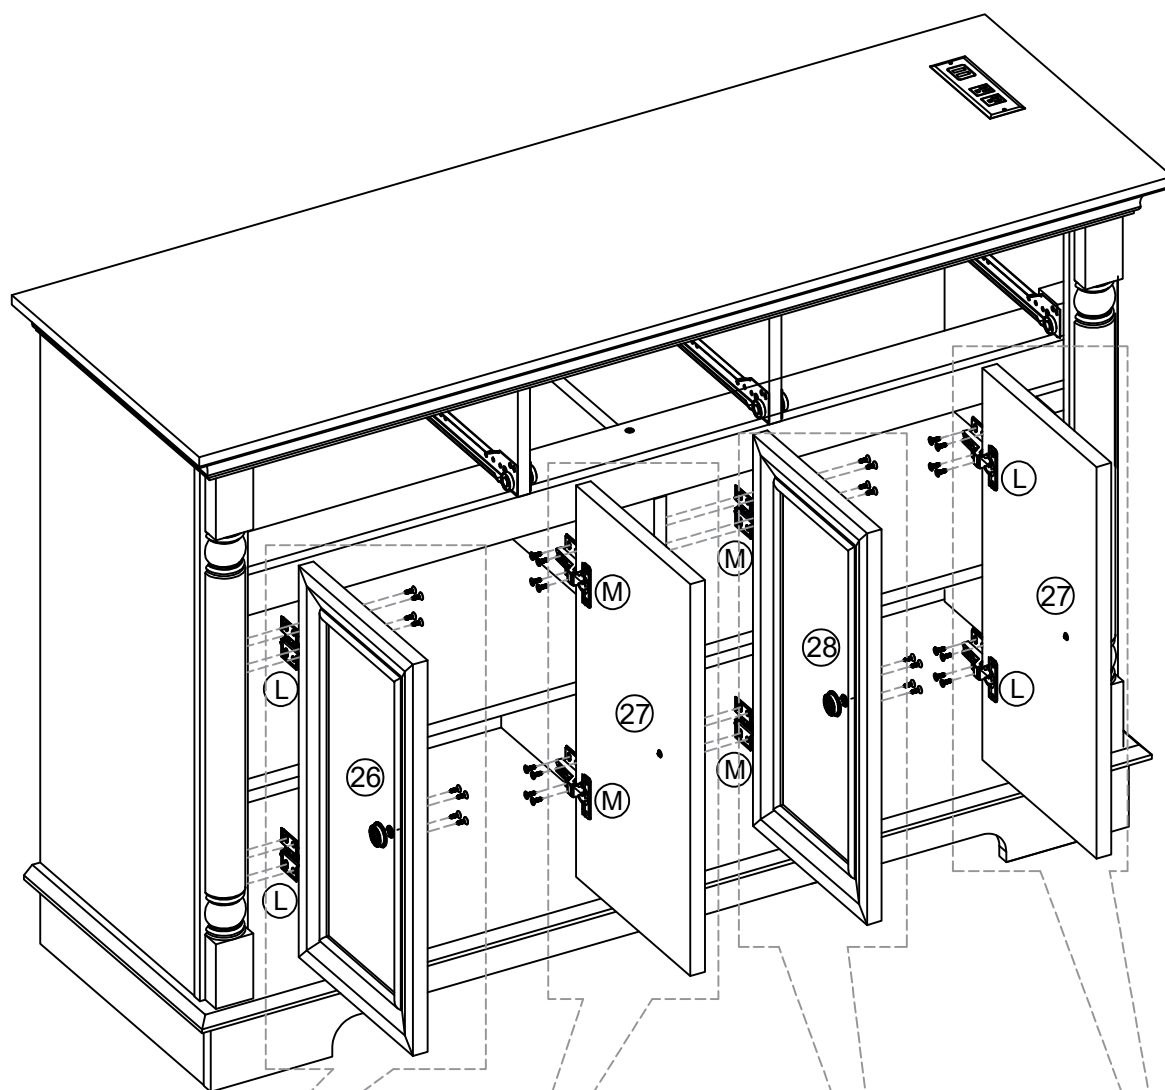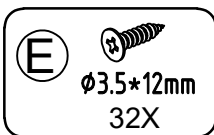


# Step 20

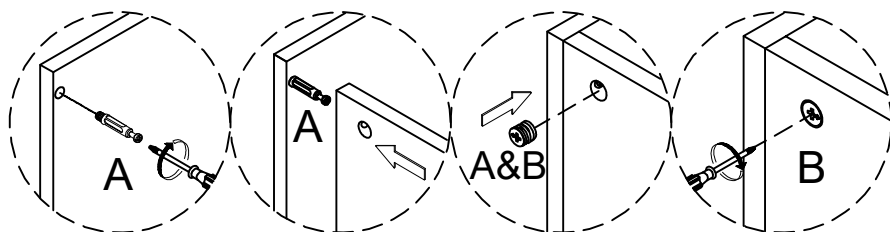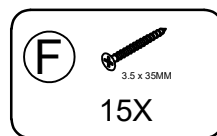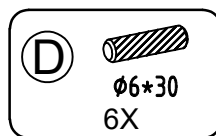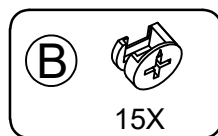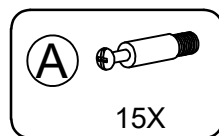






Step:1

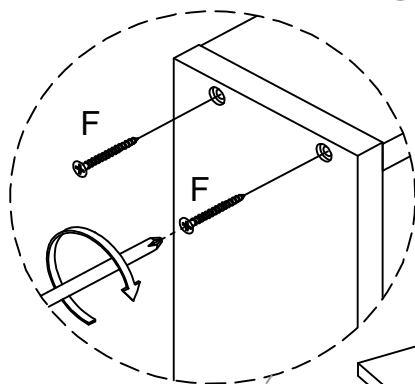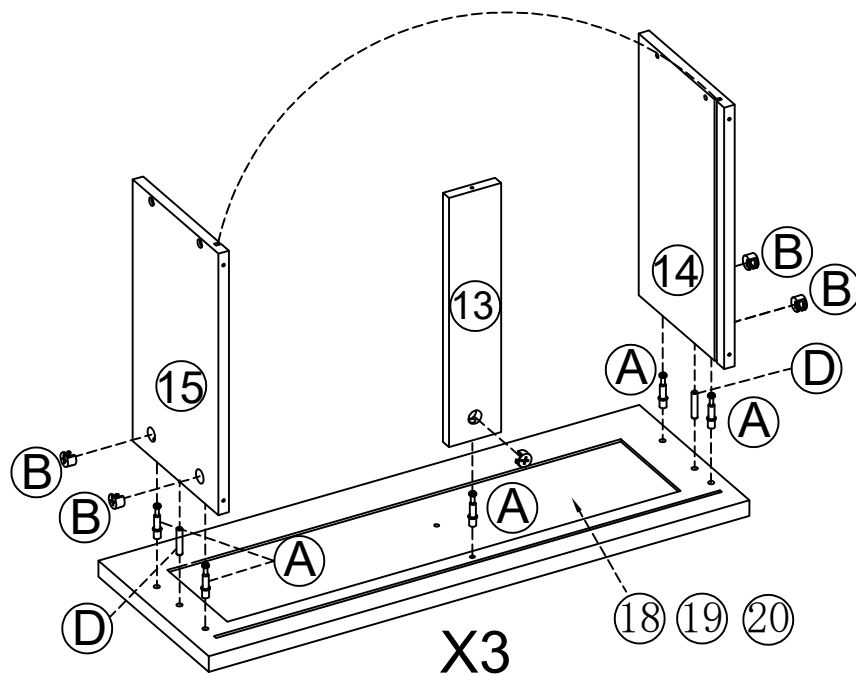



Step:2

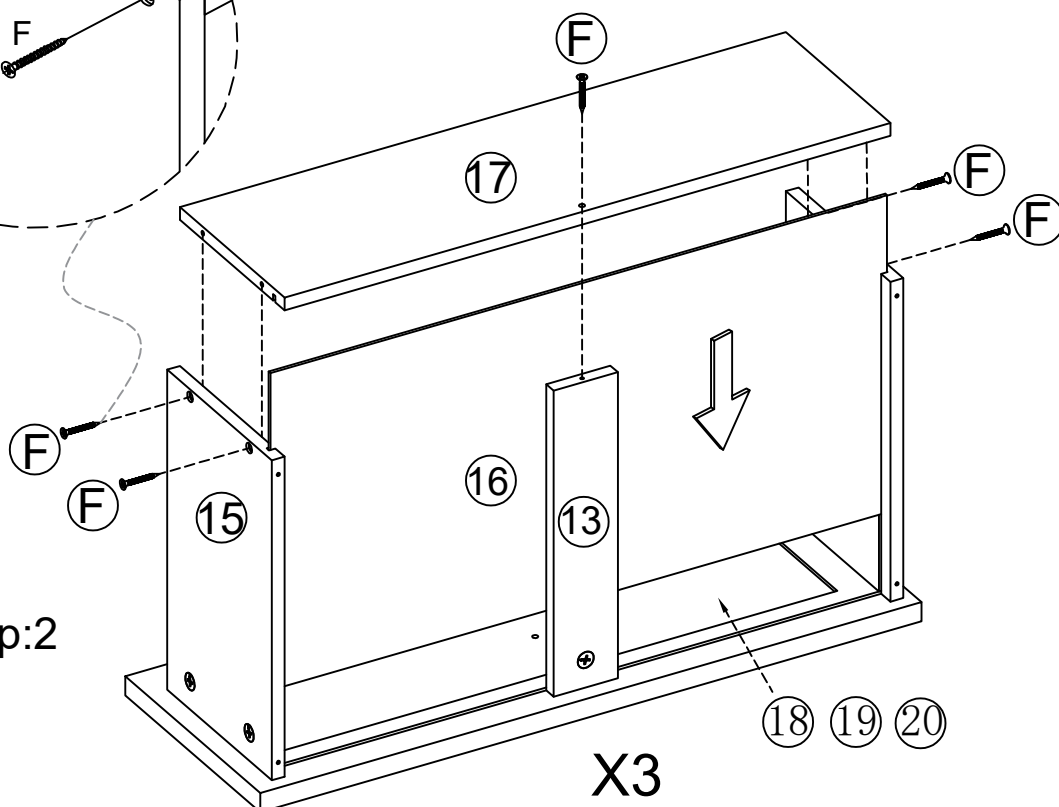



## Step 21

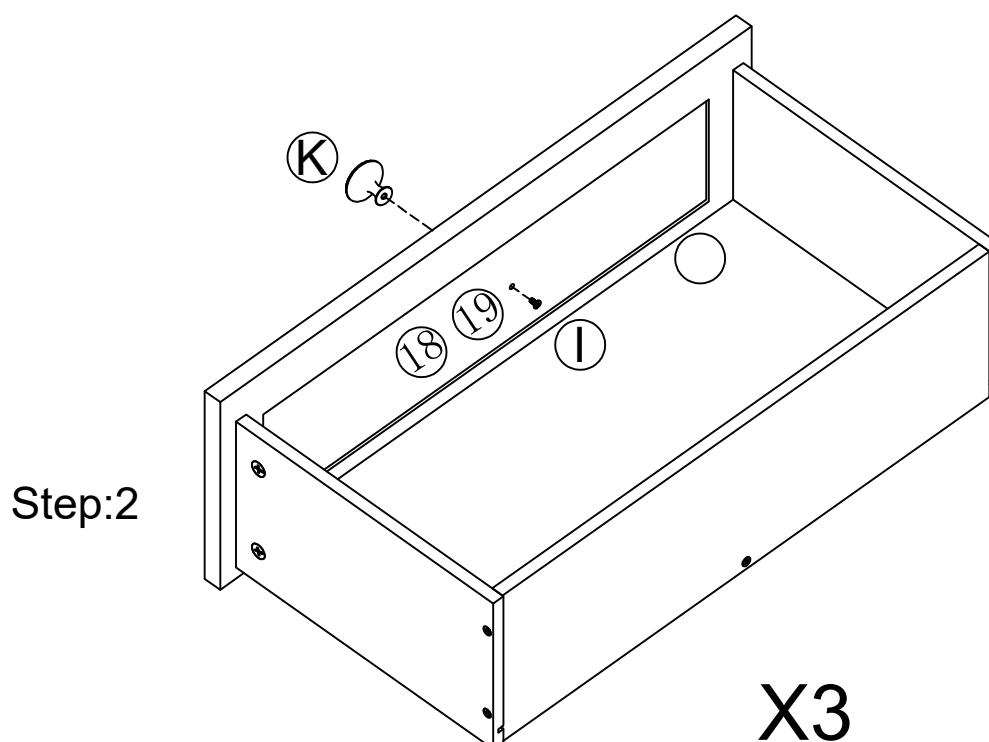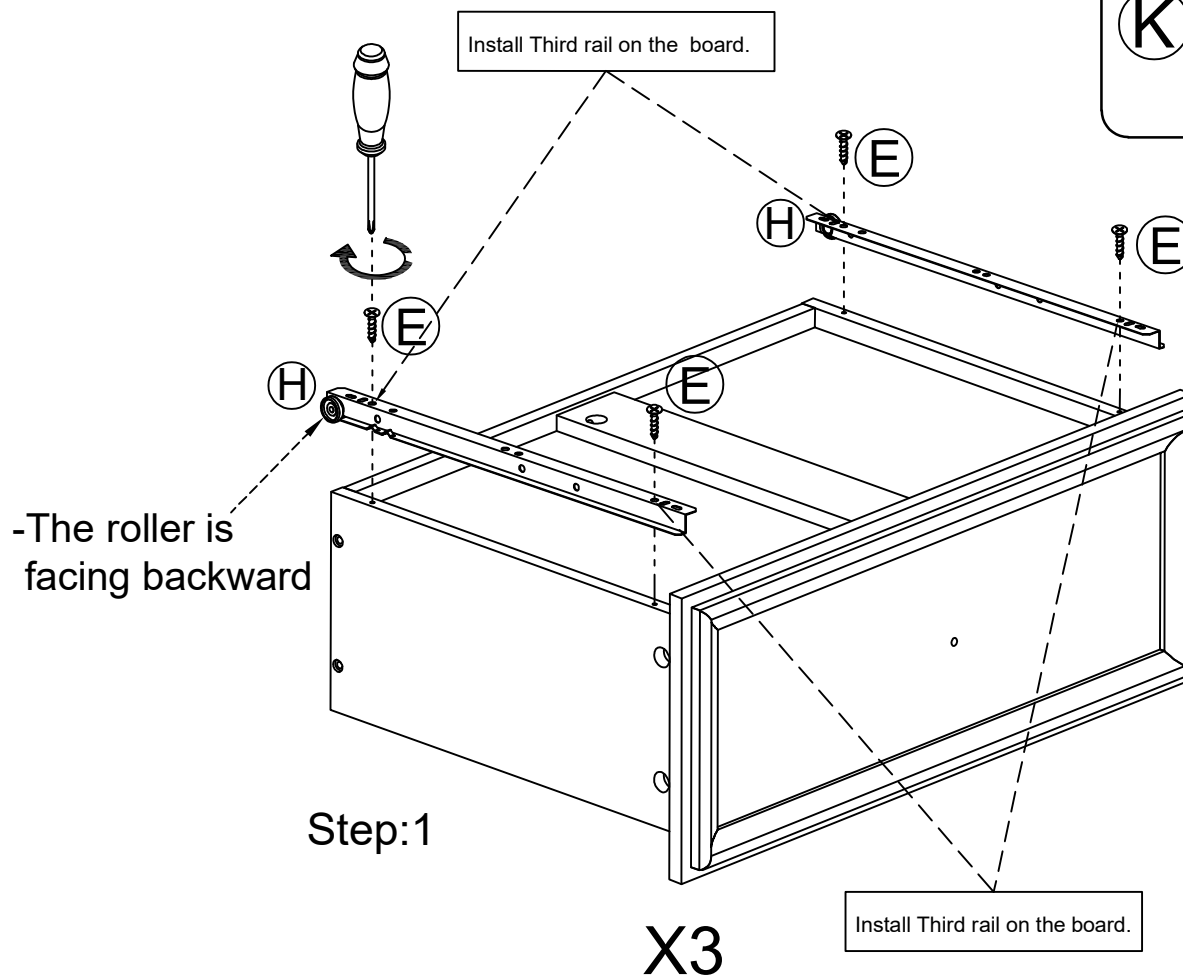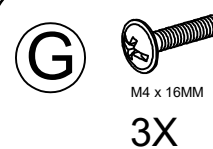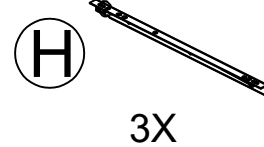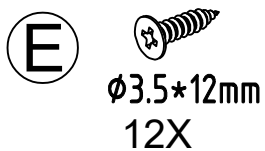

## Step 22

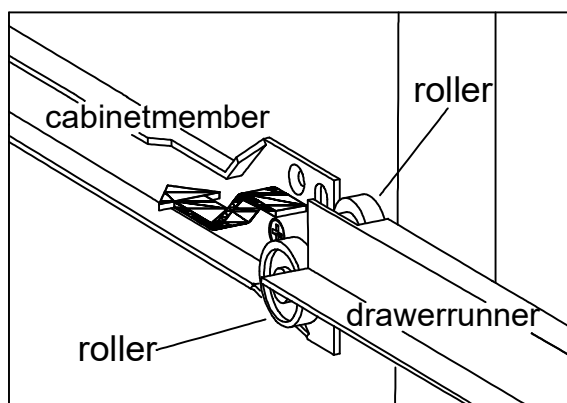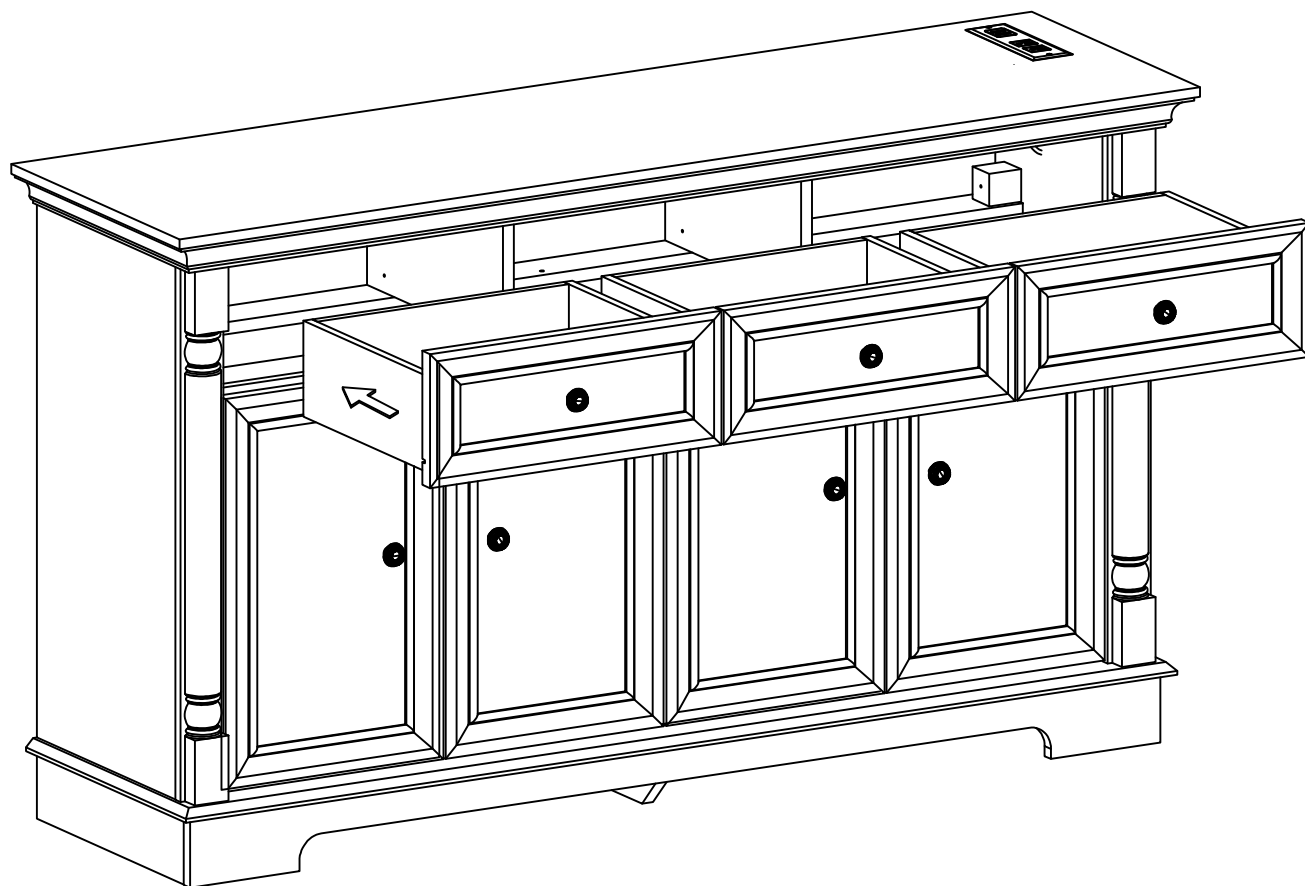

## Step 23

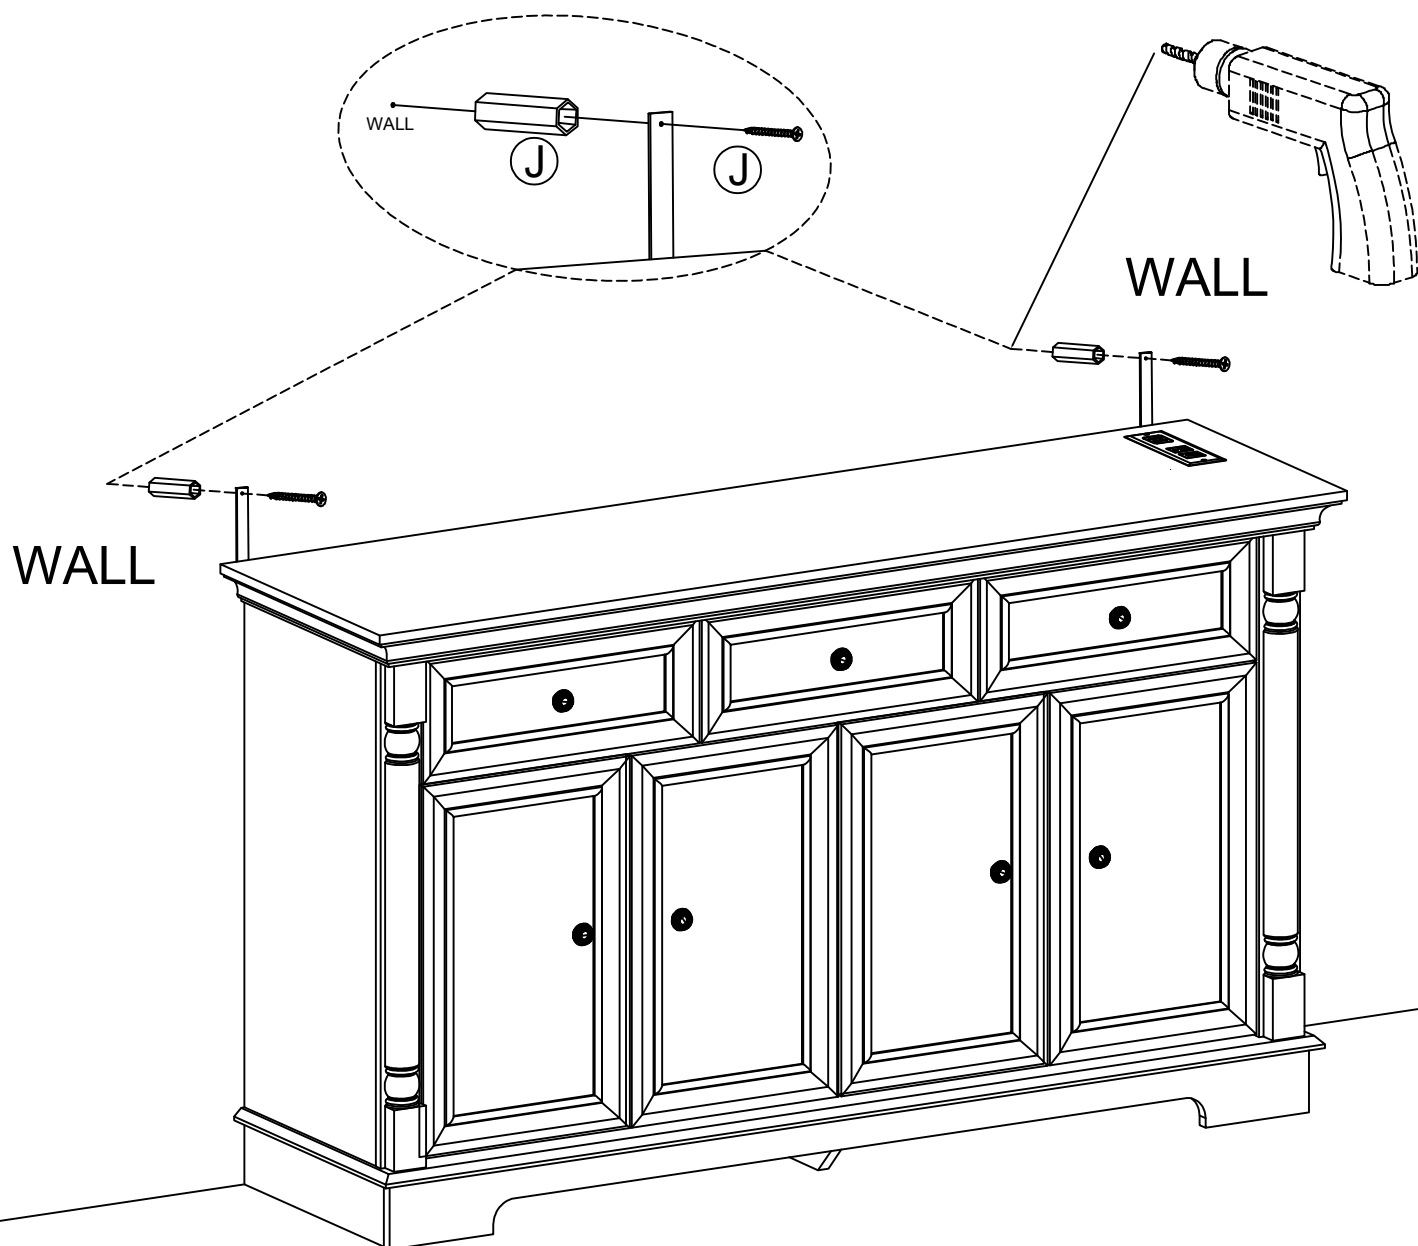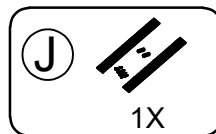

The furniture must permanently be fixed to the wall using the provided anti-tipping device to prevent it from tipping over.

- Mark the drill positions on the wall with a pencil.
- Drill a small hole on the marked positions.
- Insert a wall anchor into the drilled hole.
- Fix the anti-tipping strap to the wall using the provided screws.