



Multifunctional storage

Assembly Instructions


we recommend using the included manual installation tool for assembly.
If you choose to use a power drill, please set it to the lowest torque setting to prevent over-tightening, which may damage the wooden panels.

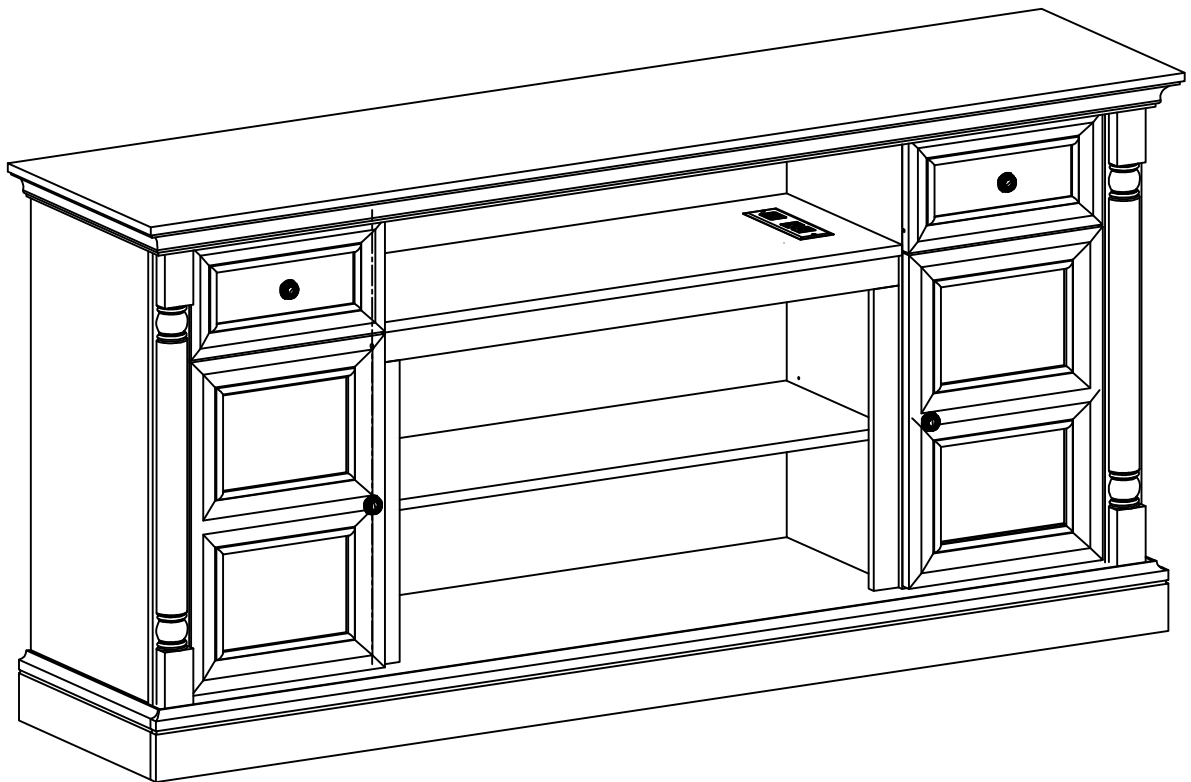


Parts List

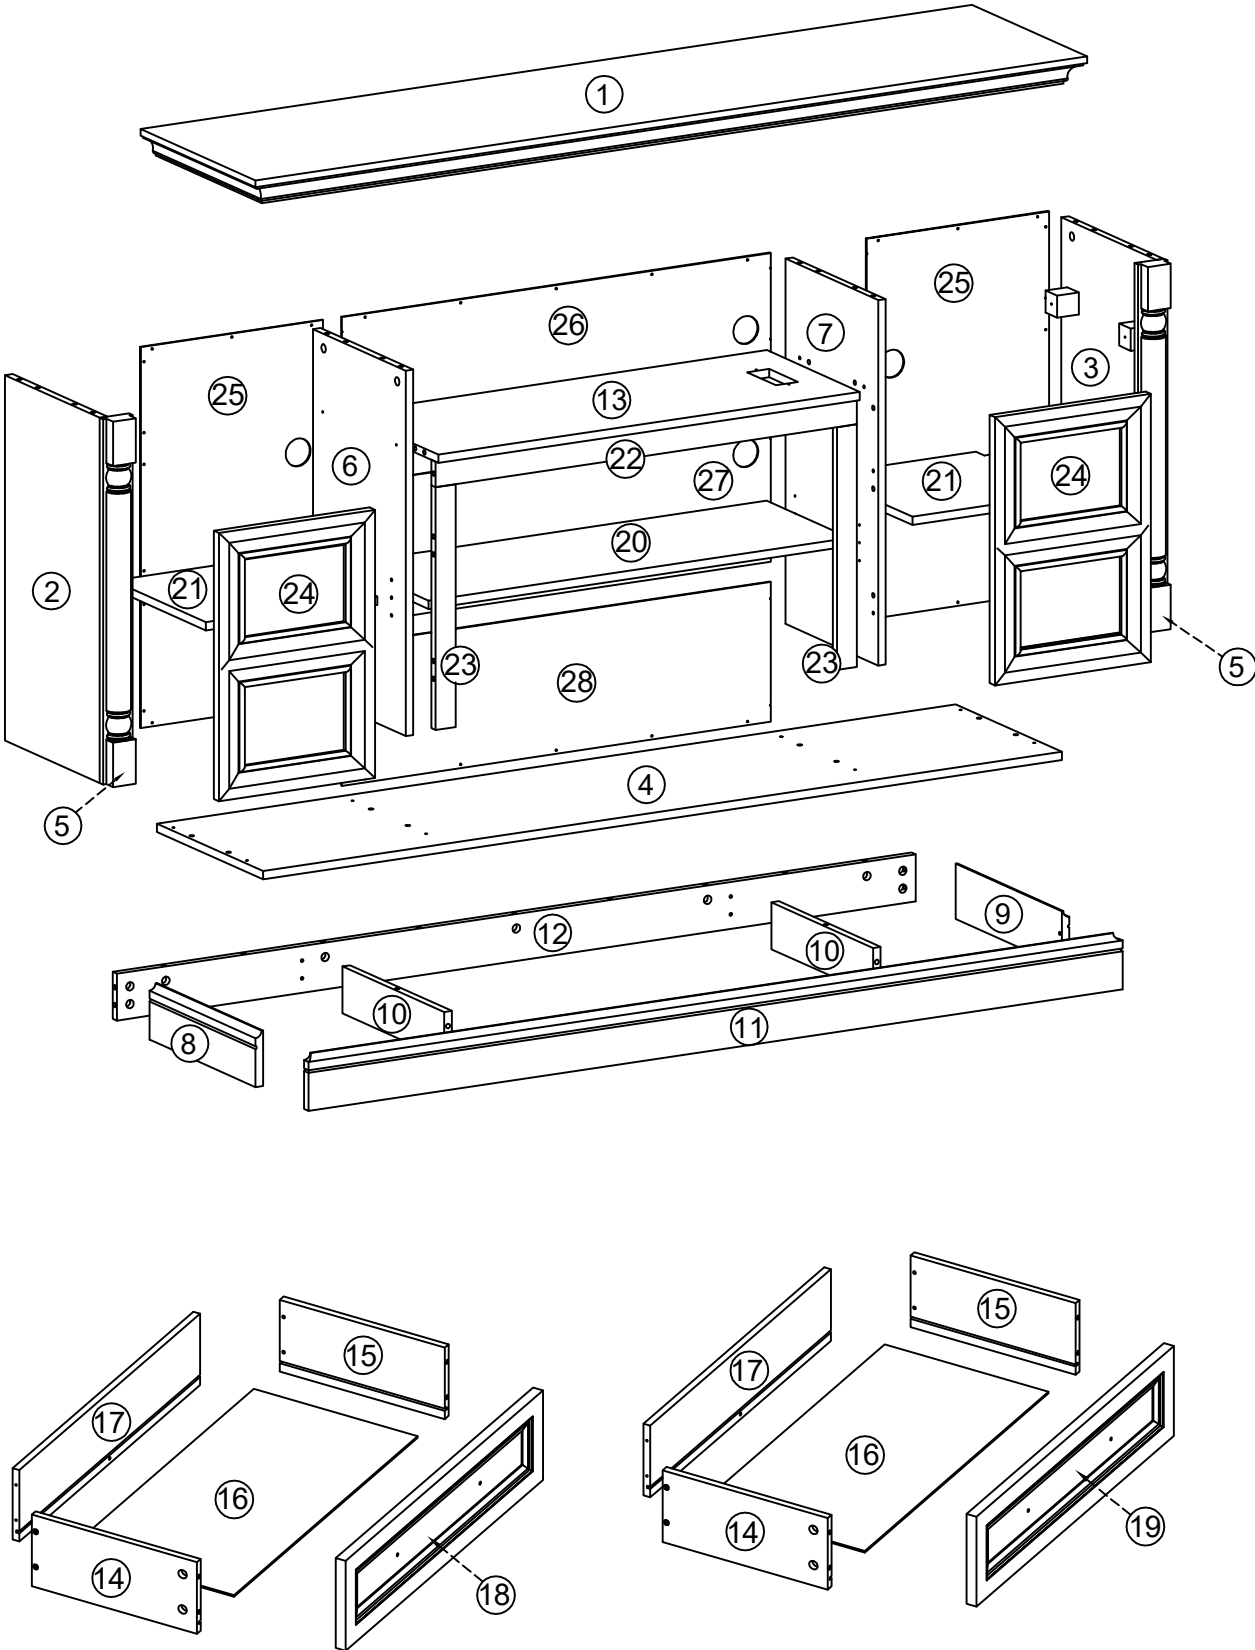

Hardware

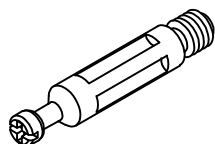


A x 58sets




Ø15X9.5MM

B x 58sets

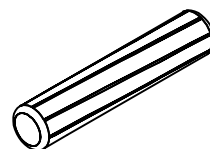


Ø8 x 30MM

C x 40pcs

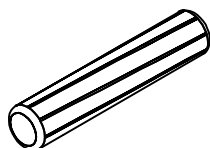


Ø6 x 30MM

D x 4pcs




3.5 x 12MM

E x 90pcs

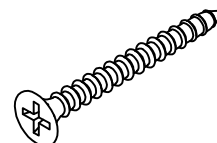

3.5 x 35MM

F x18pcs

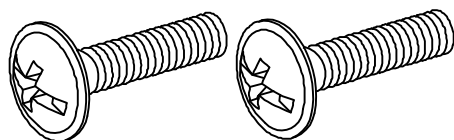


M4 x 16MM

M4 x 25MM


G x 2pcs

G x 2pcs

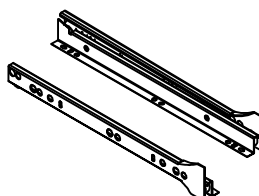


300MM

H x 2sets

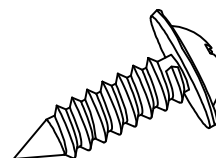


3.5 x 12MM


I x55pcs

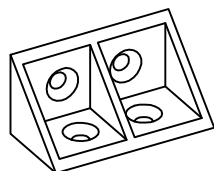


J x 11sets

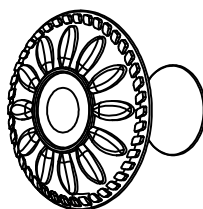


K x 4sets

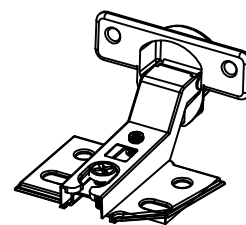


L x 4sets

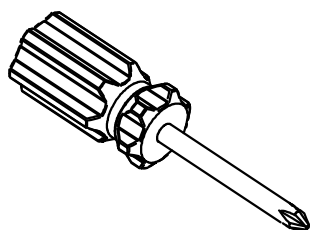


N x 1sets



O x 1sets

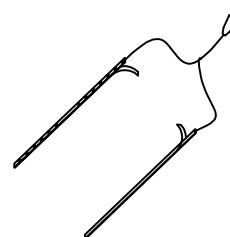

P x 1sets


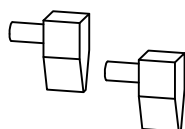








Q x 12sets








R x 4sets






ASSEMBLY MATERIAL

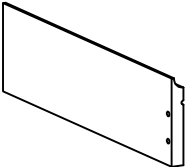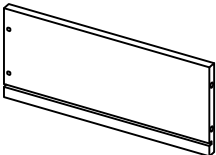Item no.	Reference Image	Oty.
①		X1
③		X1
⑤		X2
⑦		X1
⑨		X1
⑪		X1
⑬		X1
⑮		X2

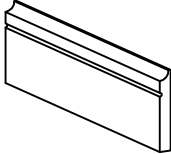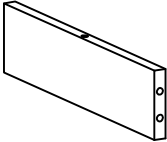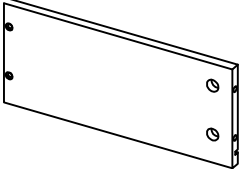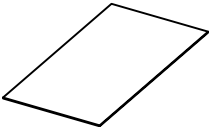Item no.	Reference Image	Oty.
②		X1
④		X1
⑥		X1
⑧		X1
⑩		X2
⑫		X1
⑭		X2
⑯		X2

ASSEMBLY MATERIAL

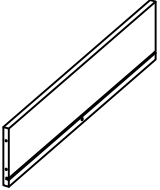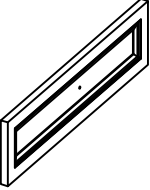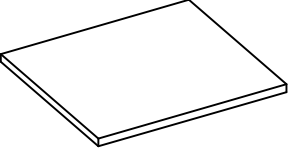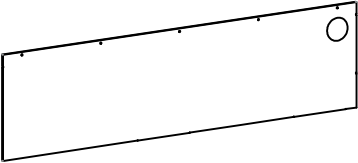Item no.	Reference Image	Qty.
17		X2
19		X1
21		X2
23		X2
25		X2
27		X2

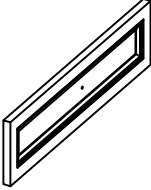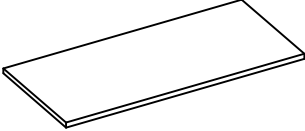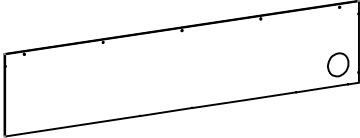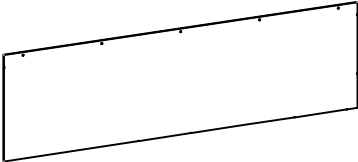Item no.	Reference Image	Qty.
18		X1
20		X1
22		X1
24		X2
26		X1
28		X1


Step 1

(E)

Ø3.5*12mm
4X



(H)

300MM CL
2X

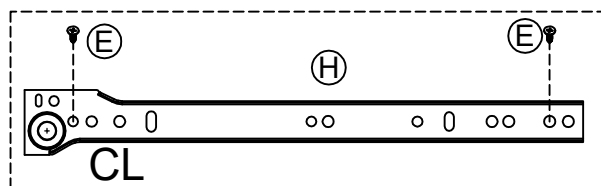


Install first rail on the left side of board.

Step:1







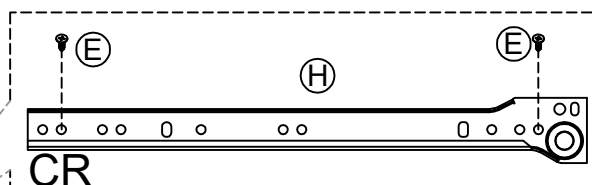
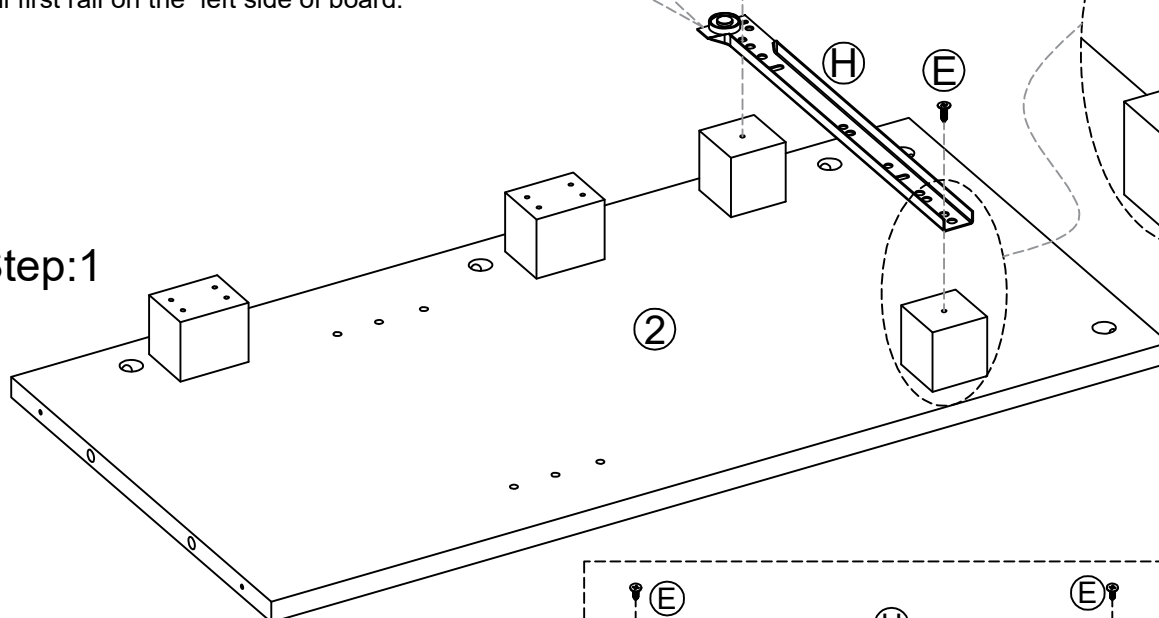


Install first rail on the right side of board.

Step:2

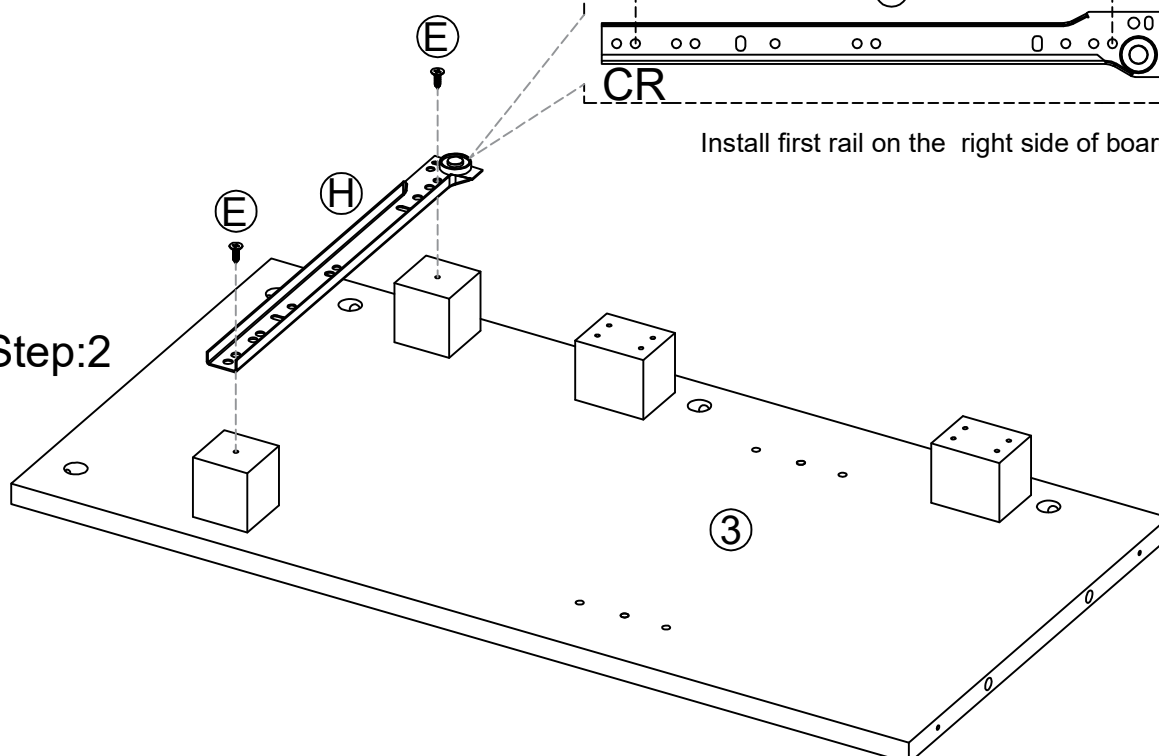


Step 2

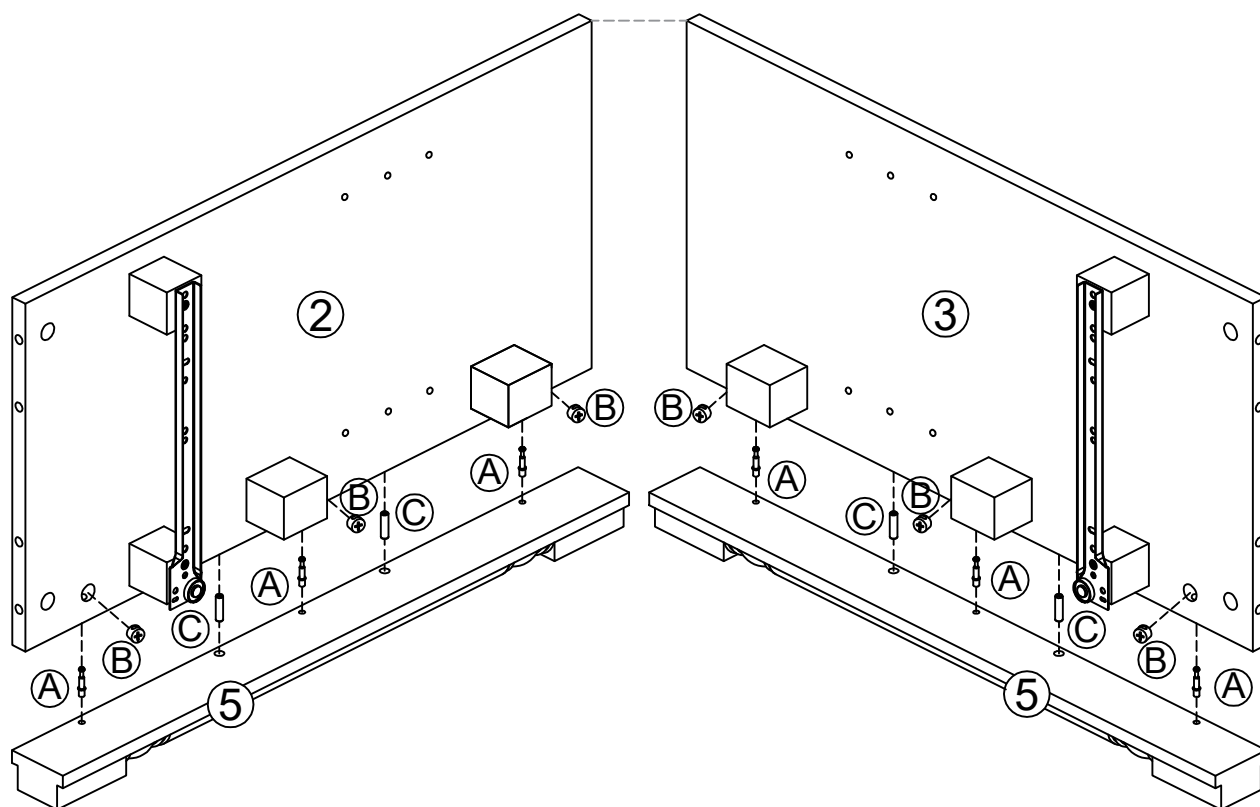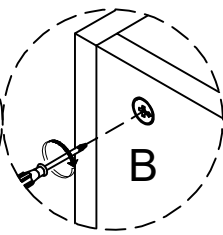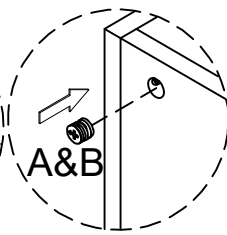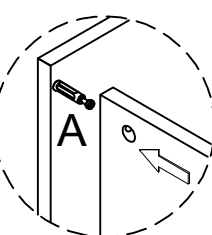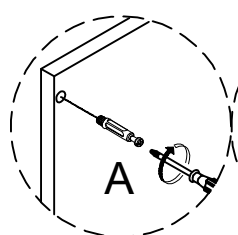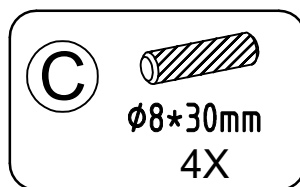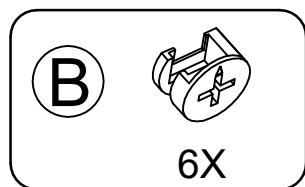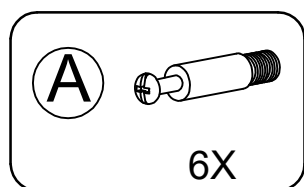

Step 3

(H)



HX1


(E)



Ø3.5*12mm


2X

Install first rail on the right side of board.

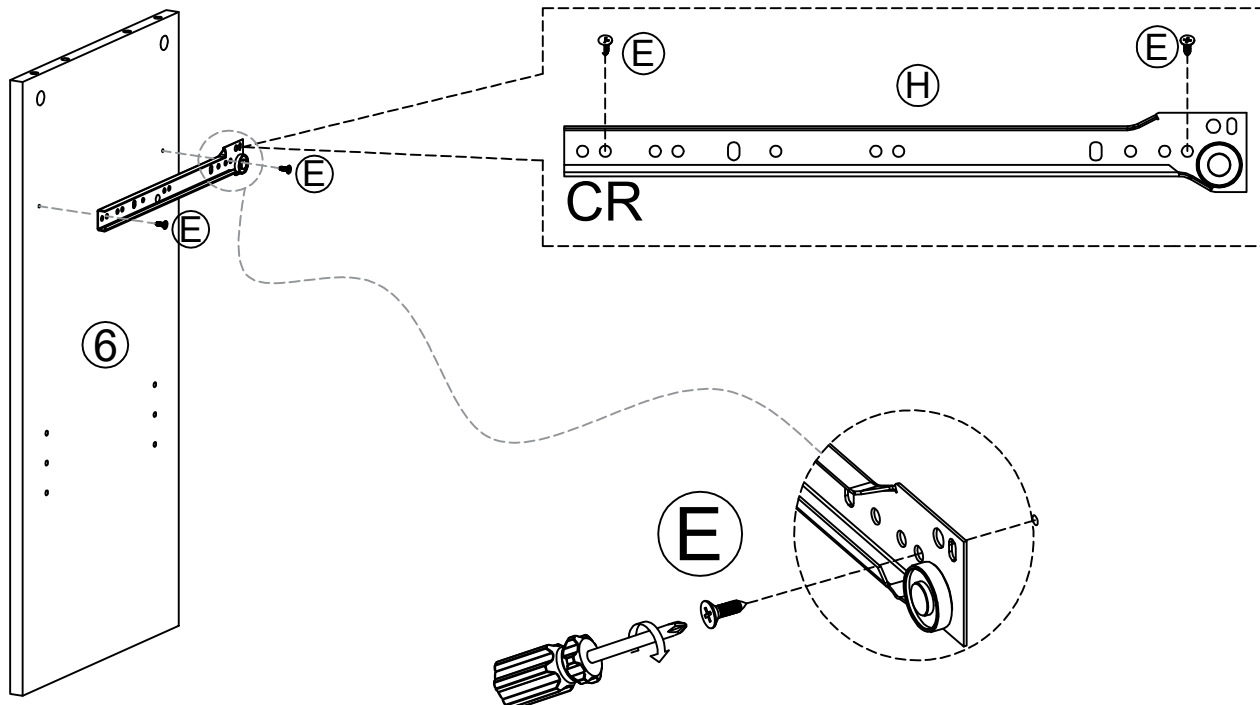

Step 4

(H)



HX1


(E)








Ø3.5*12mm

2X





Install first rail on the left side of board.

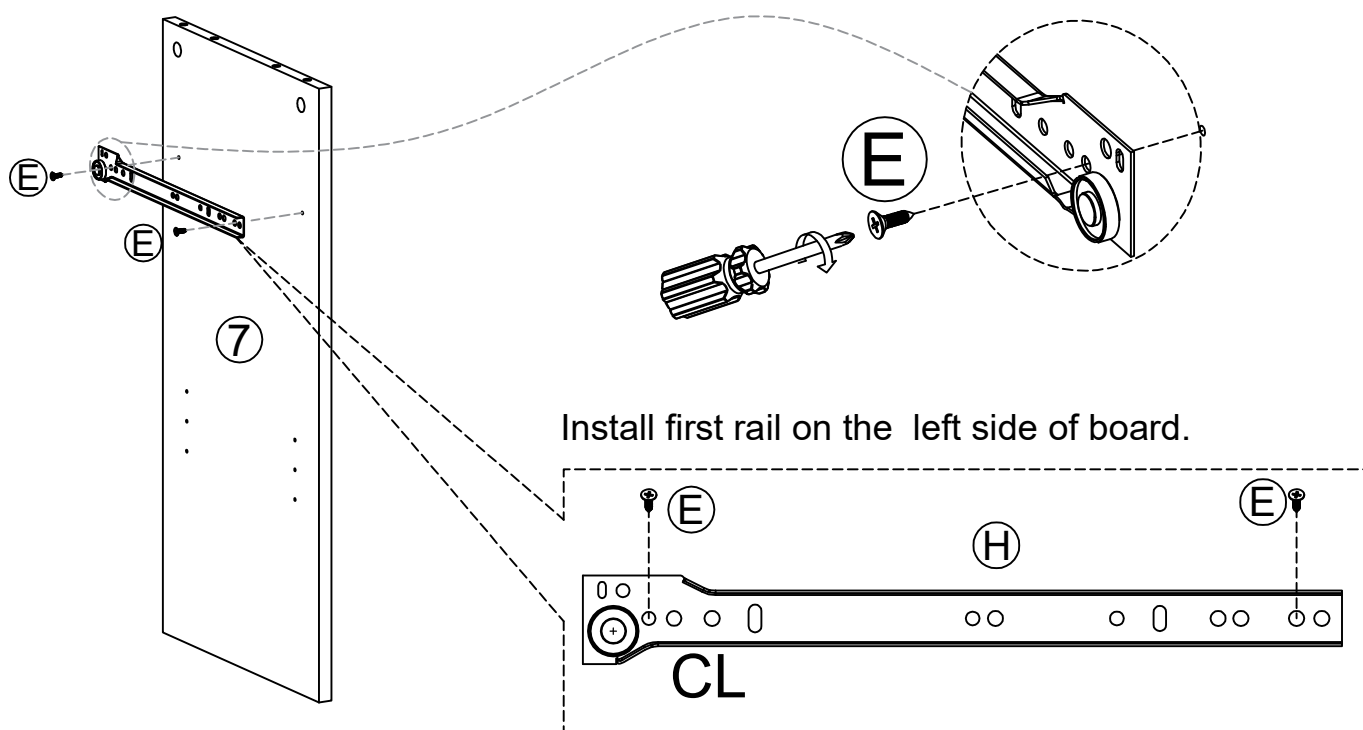


Step 5

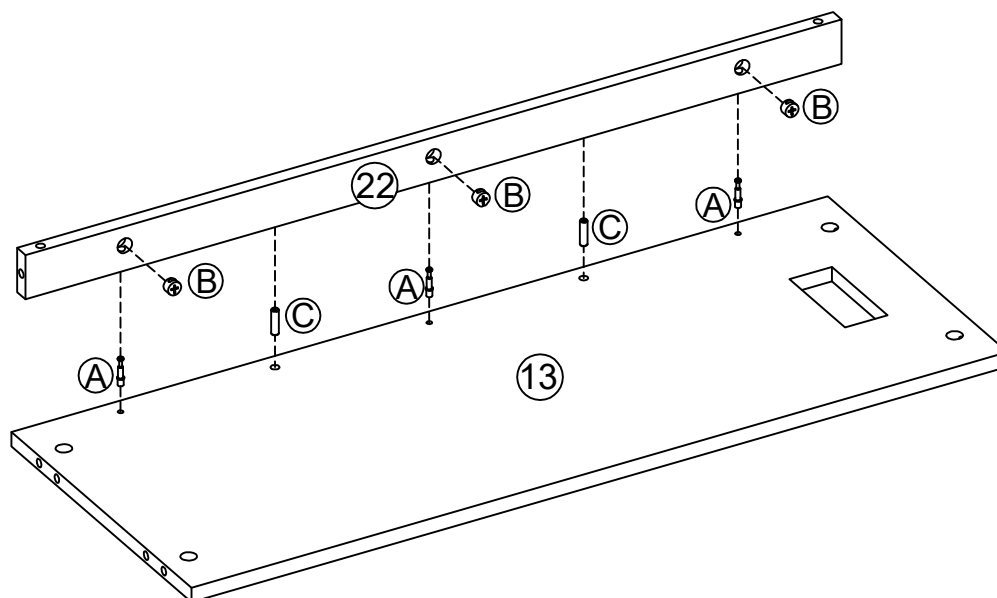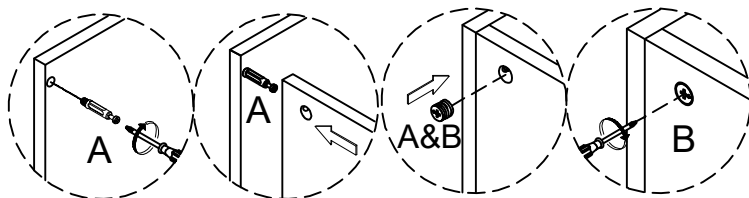


Step 6

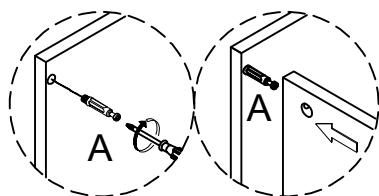






Step:1

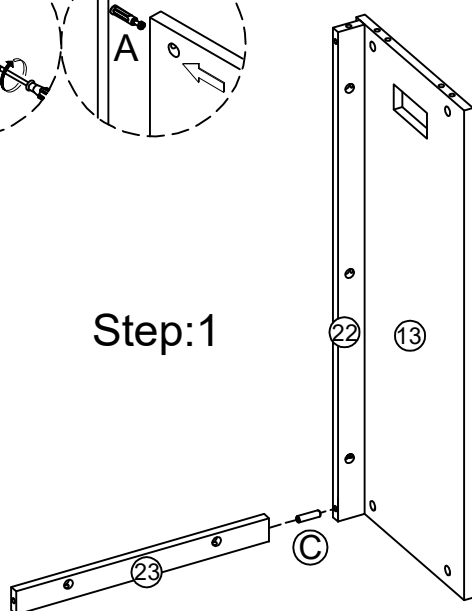


Step:2

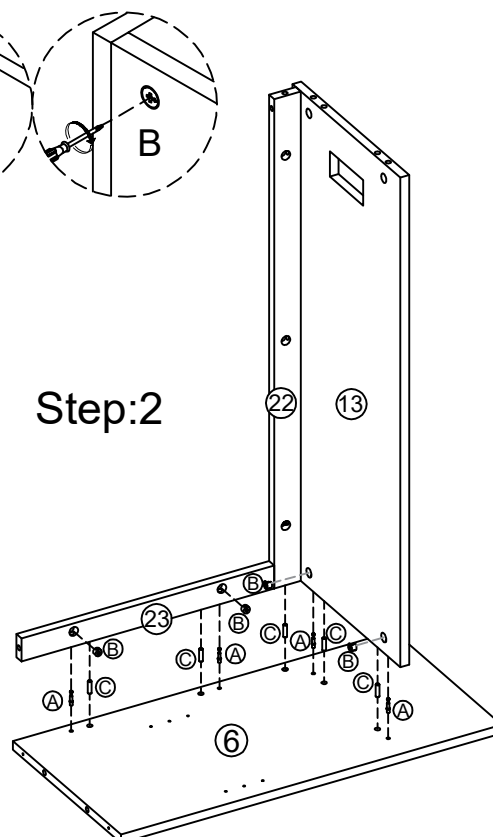

Step 7

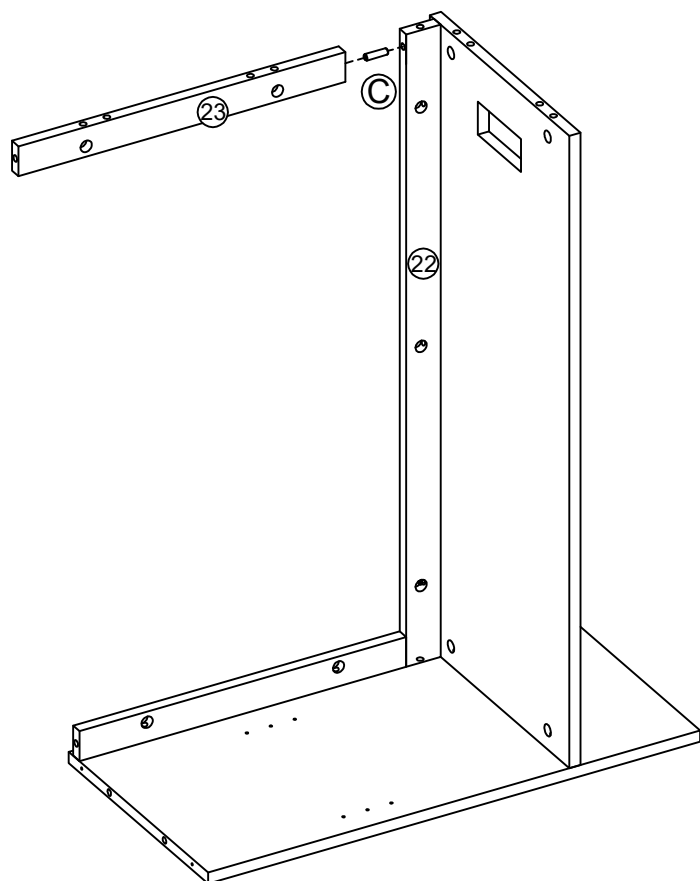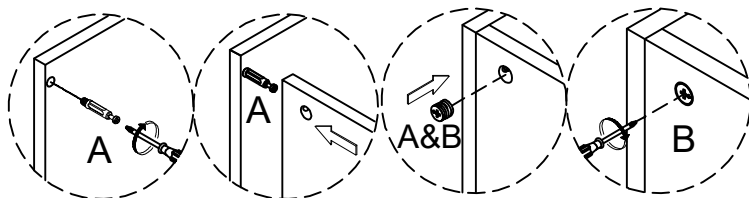

Step:1

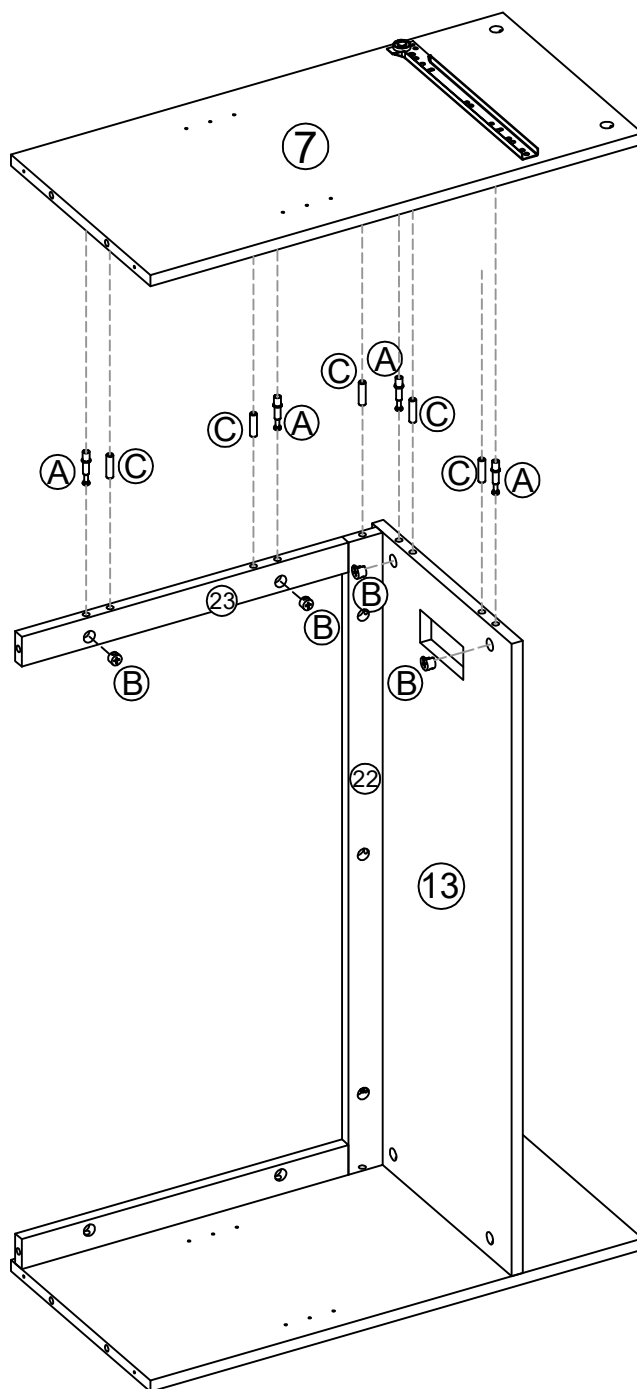


Step:2

Step 8

(C) 
Ø8*30mm
8X

(F) 
Ø3.5*35mm
8X

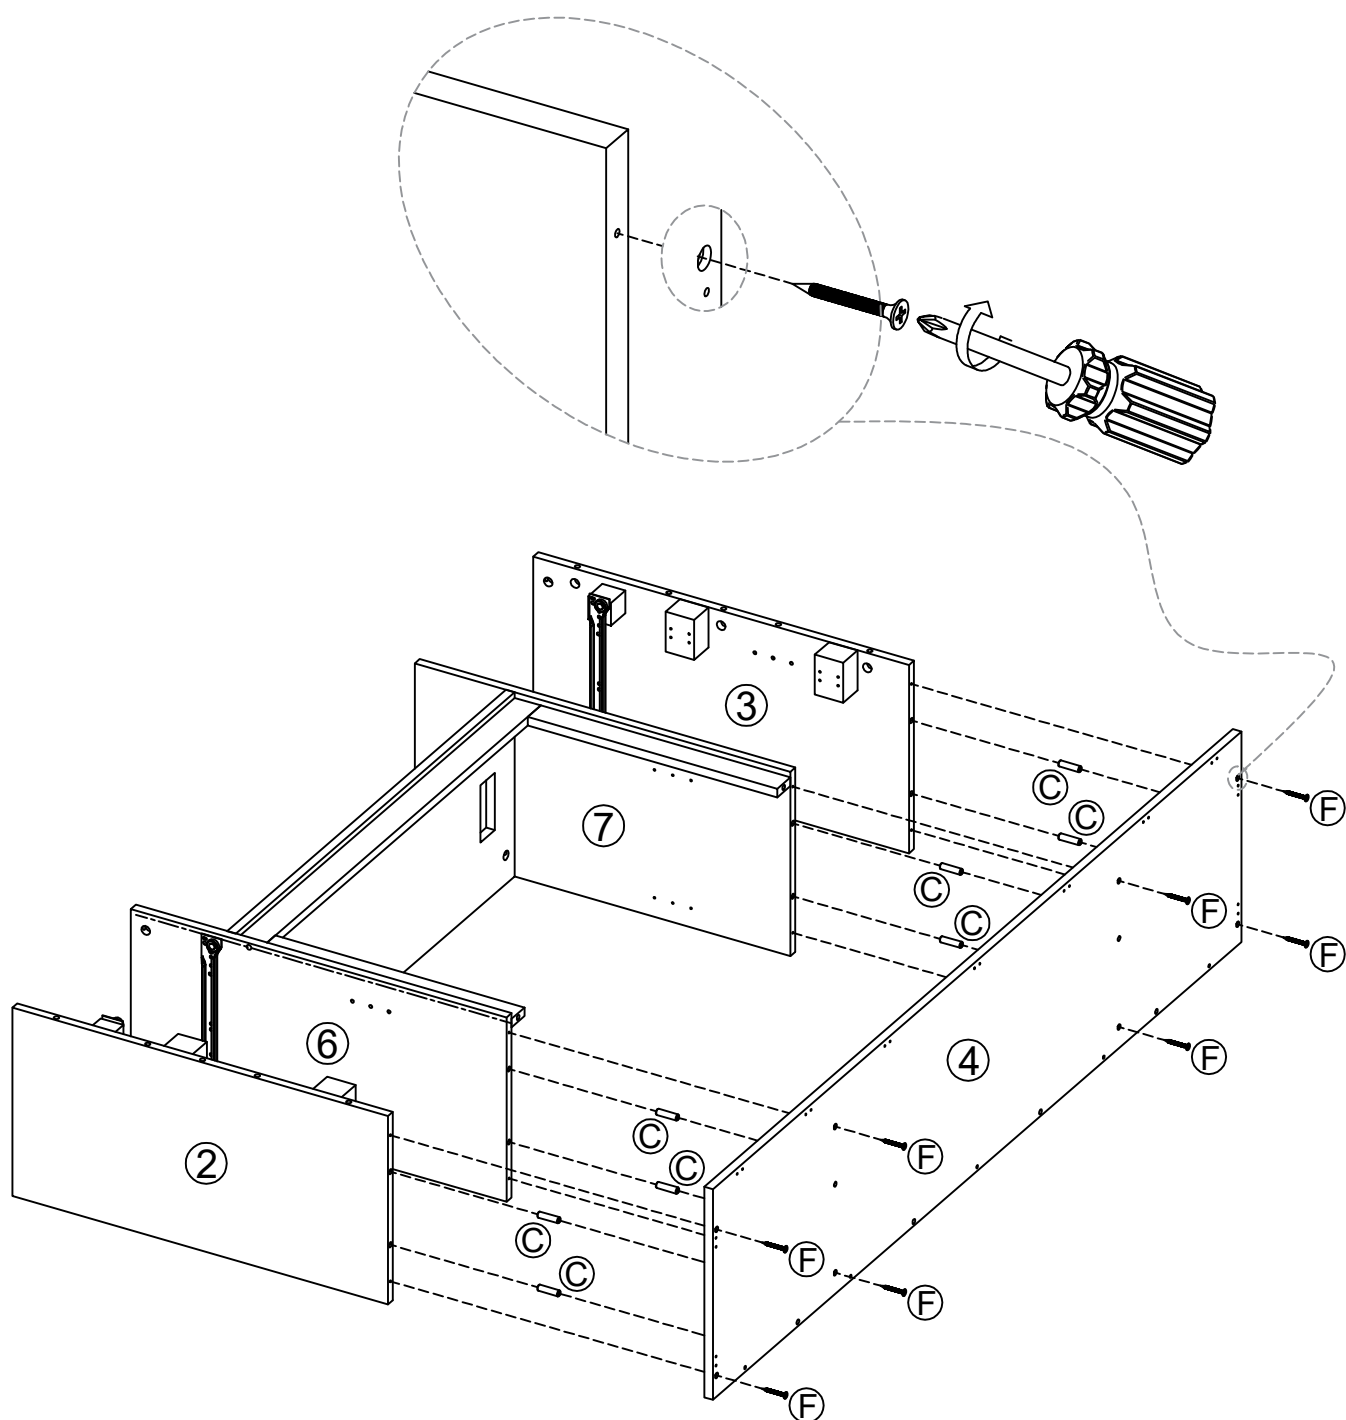


Step 9


(E)


ø3.5*12mm
22X





(J)







11X

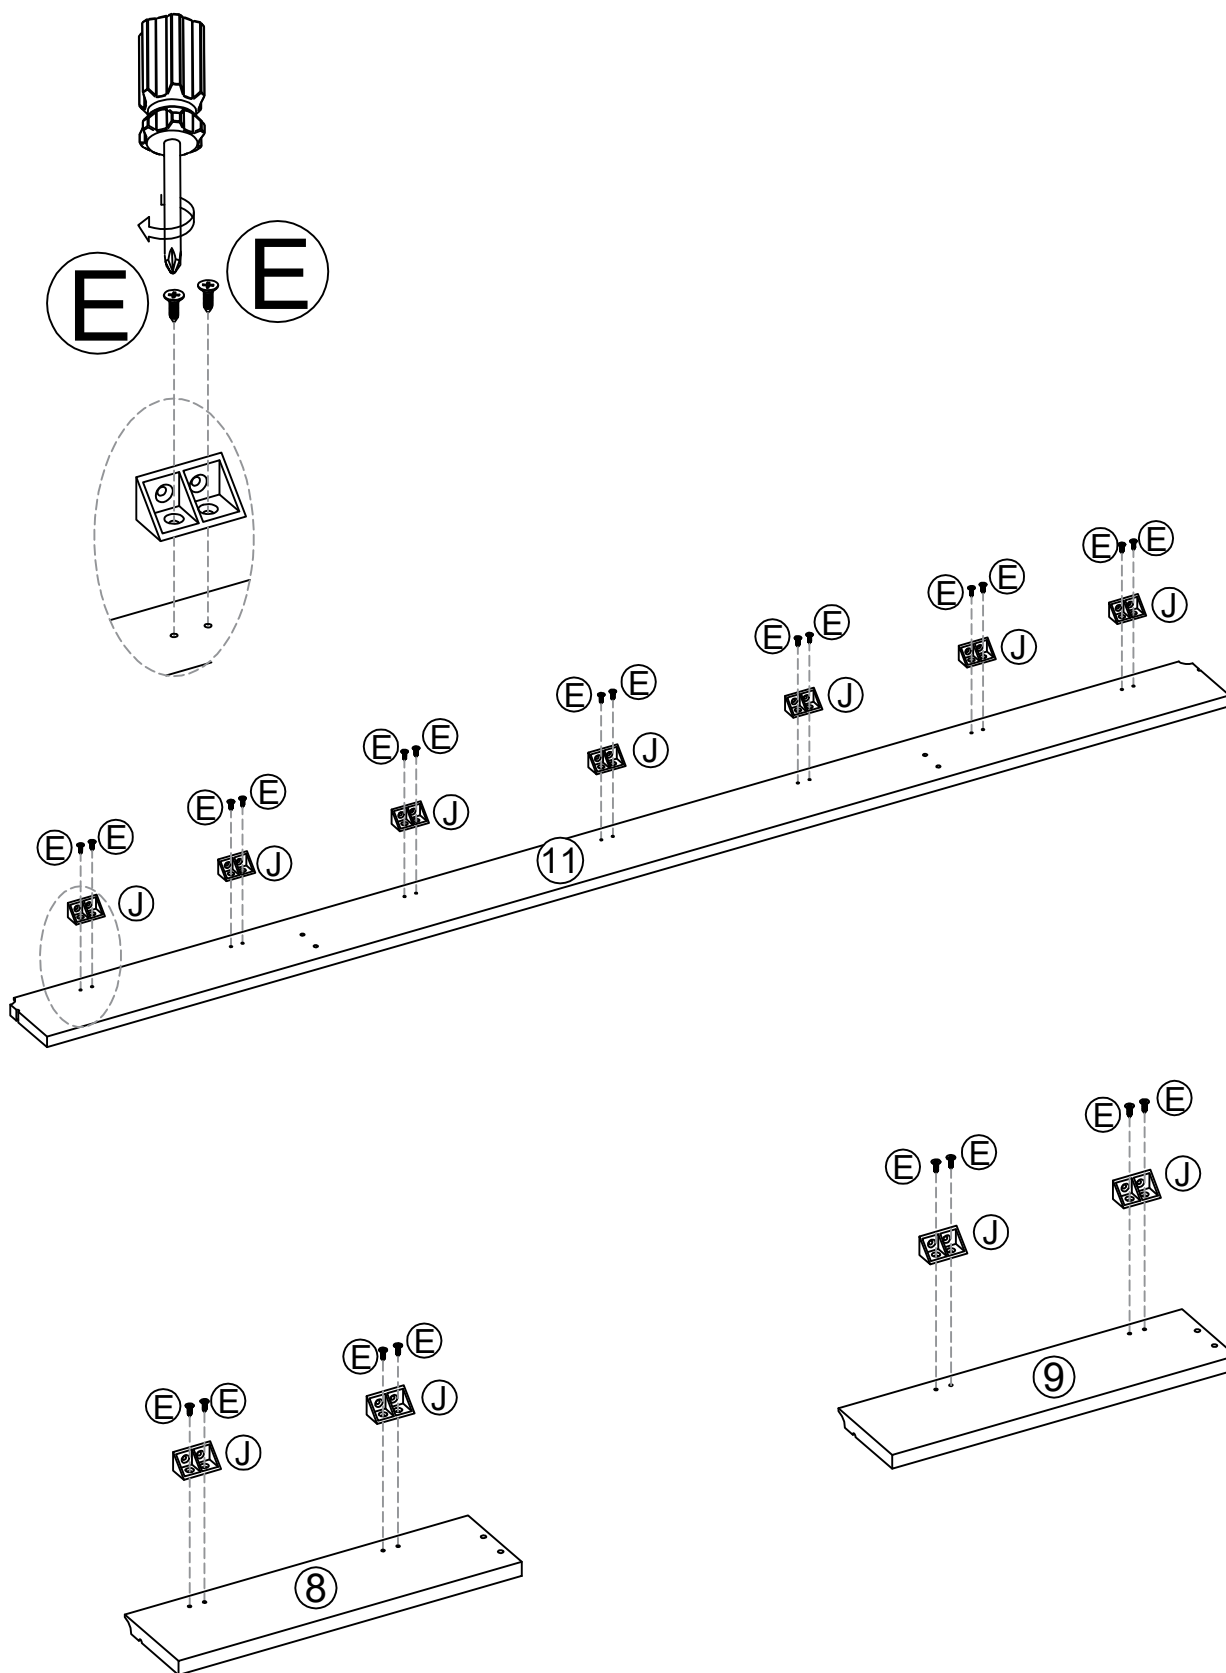








Step 10

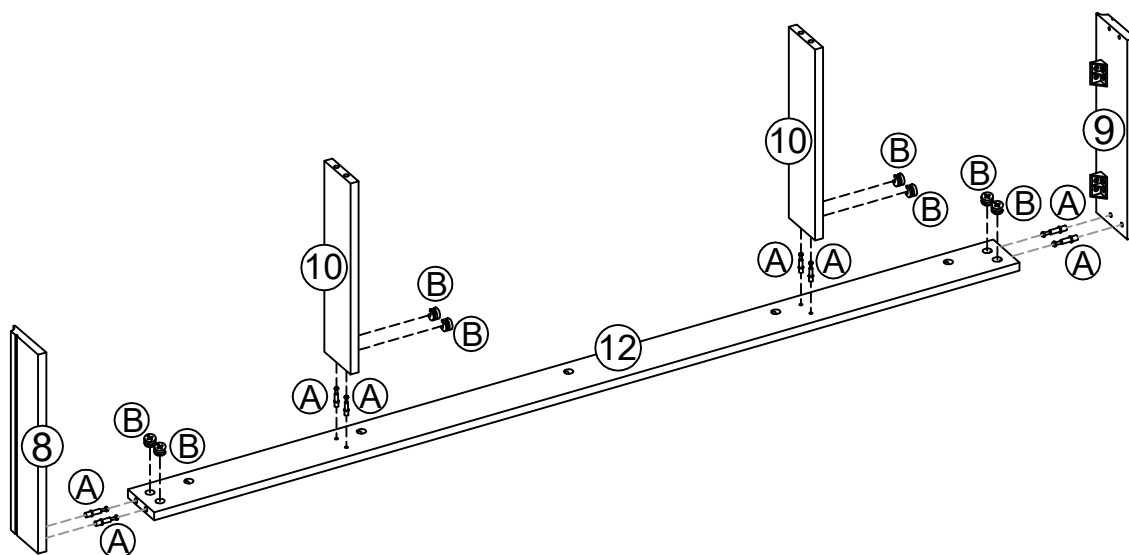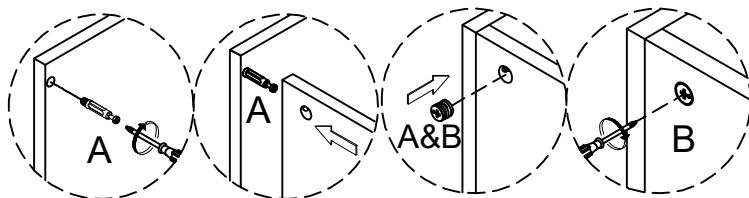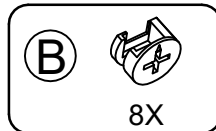




Step 11

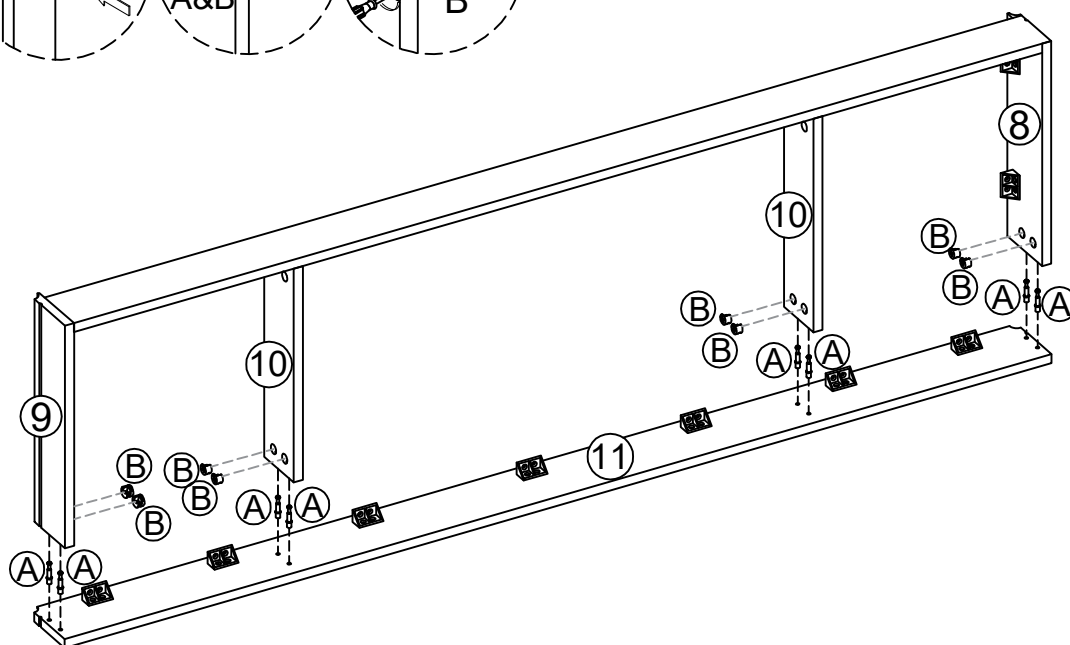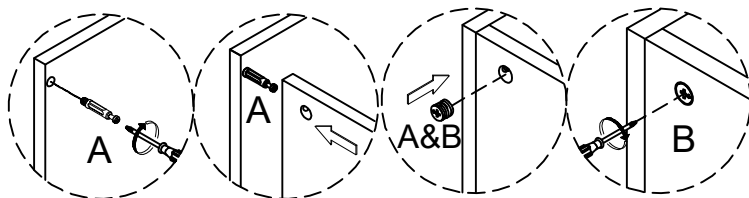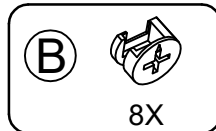






Step 12

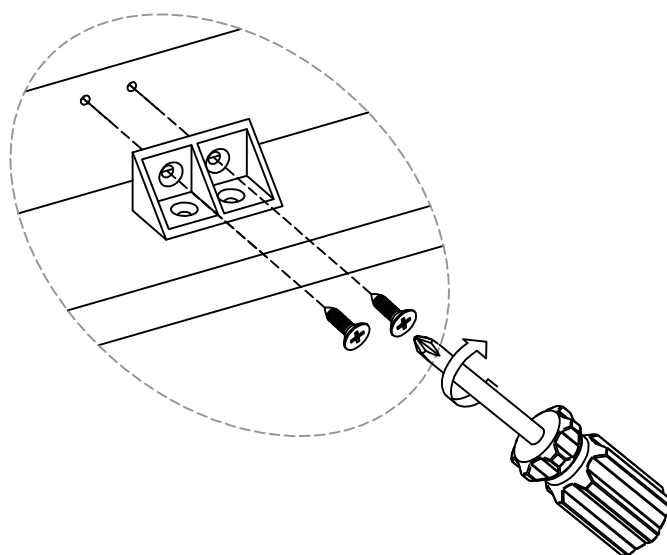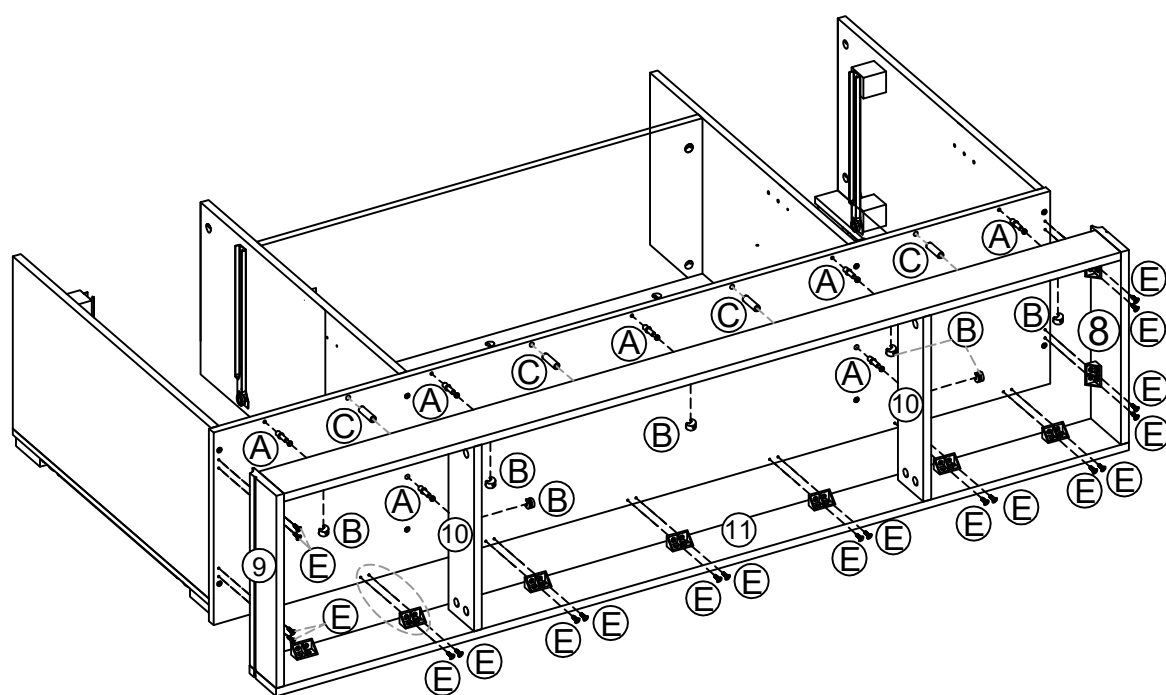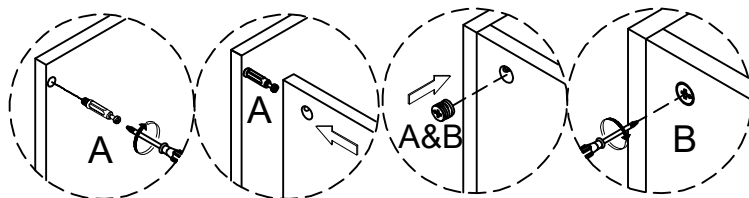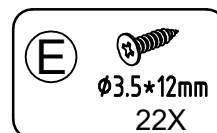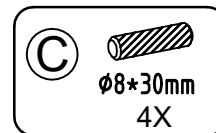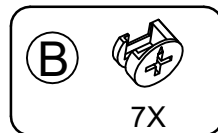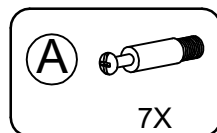


Step 13

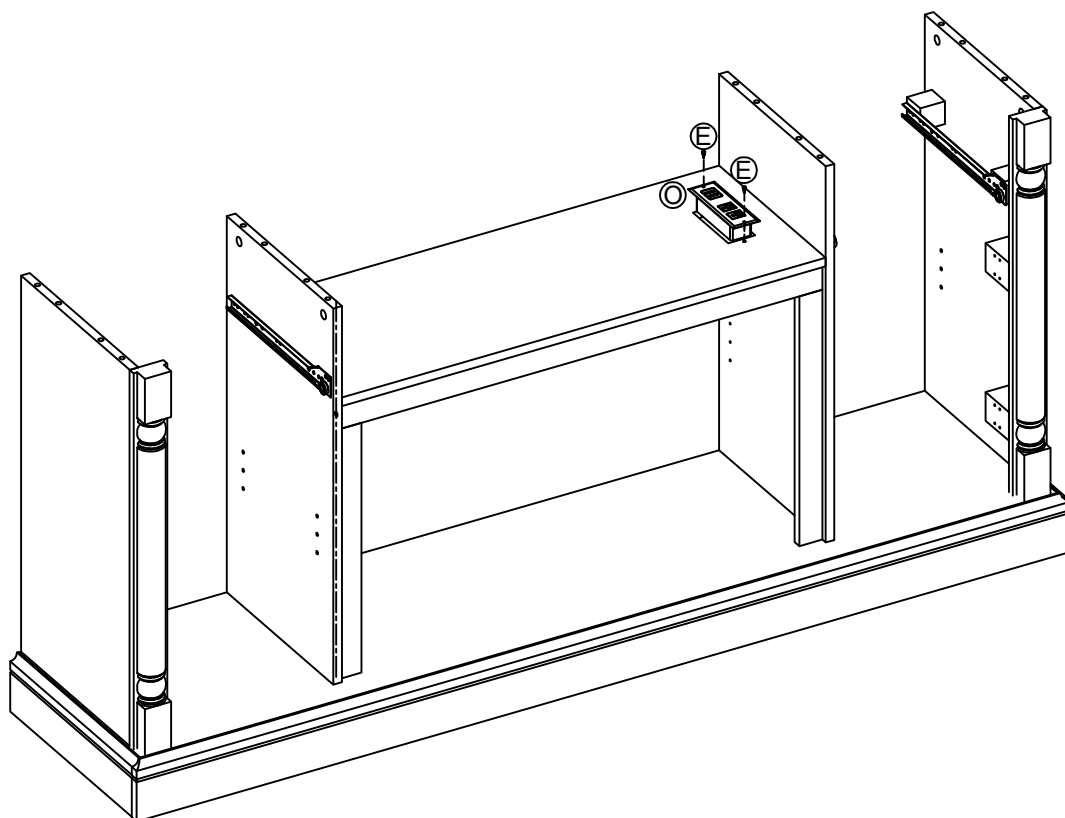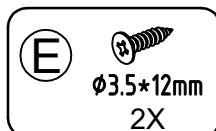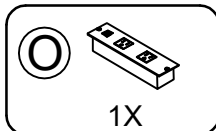

Step 14

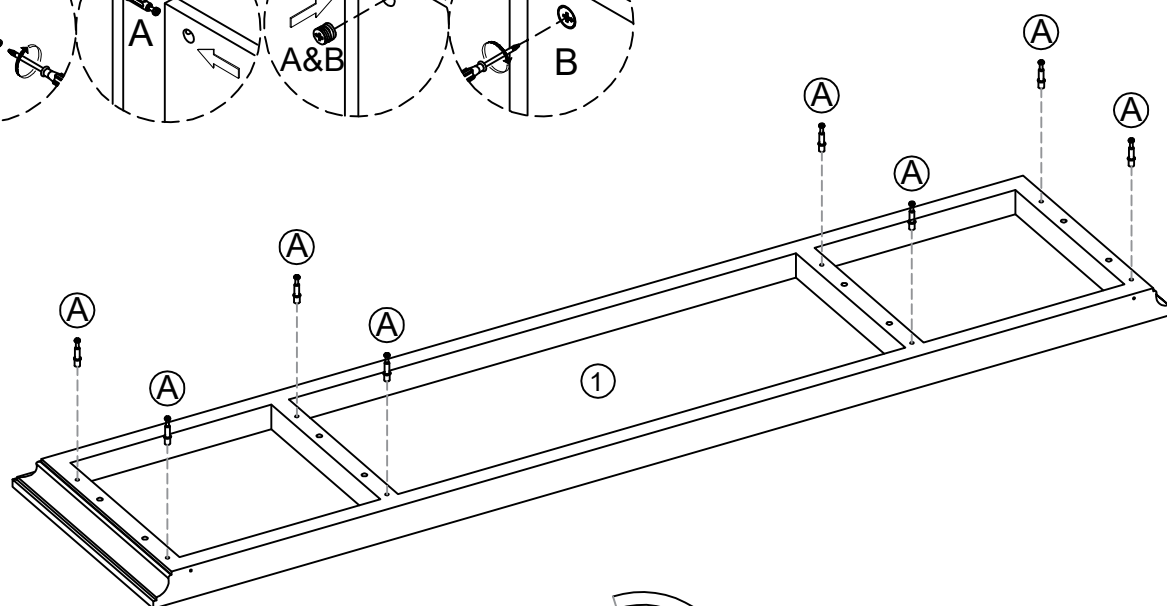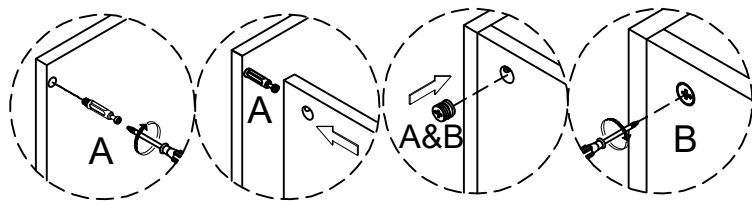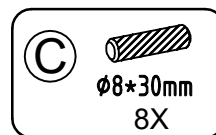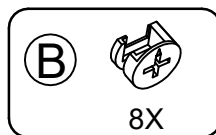
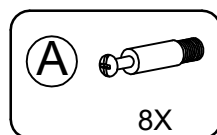


Step:1


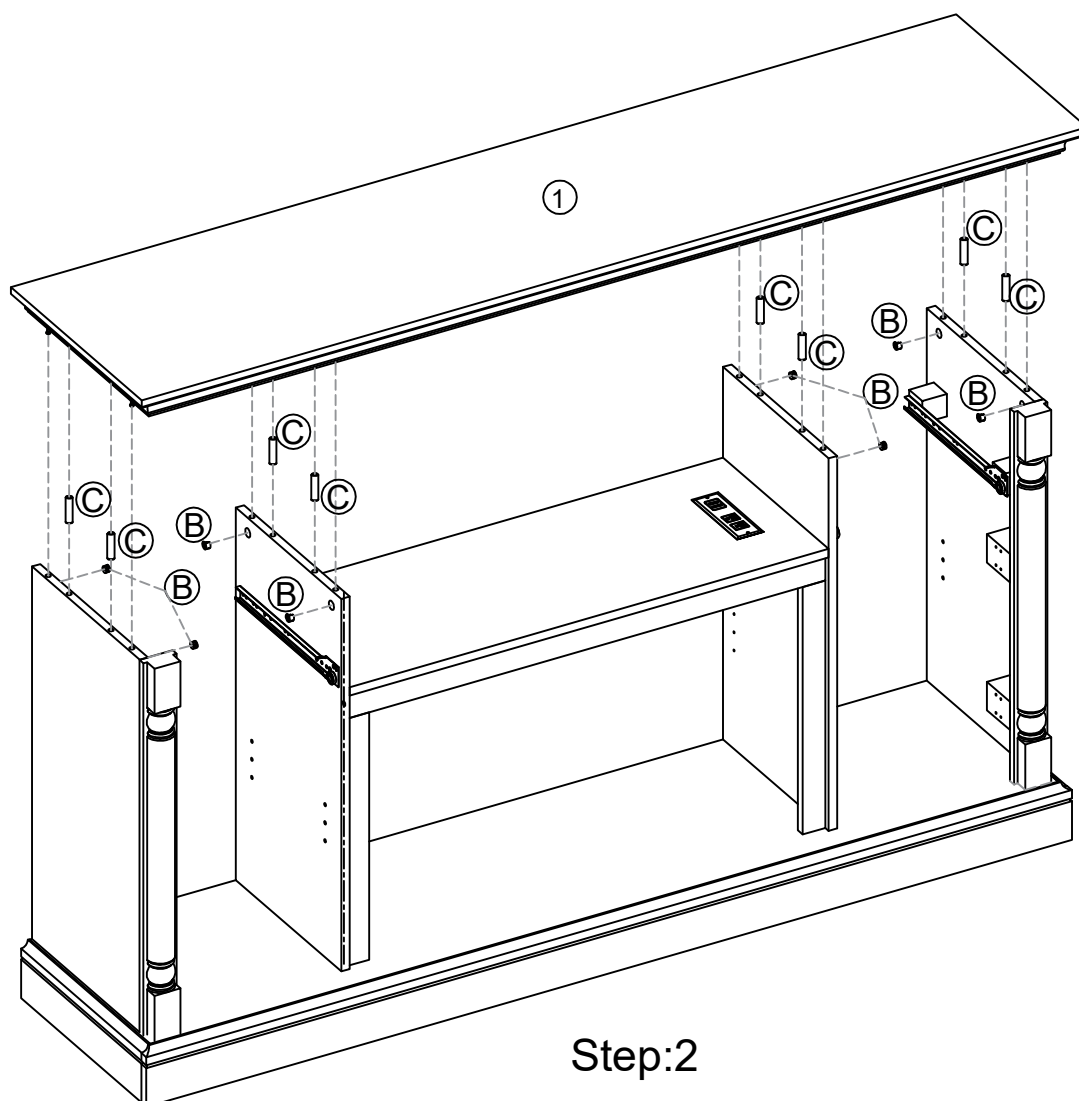


Step:2


Step 15

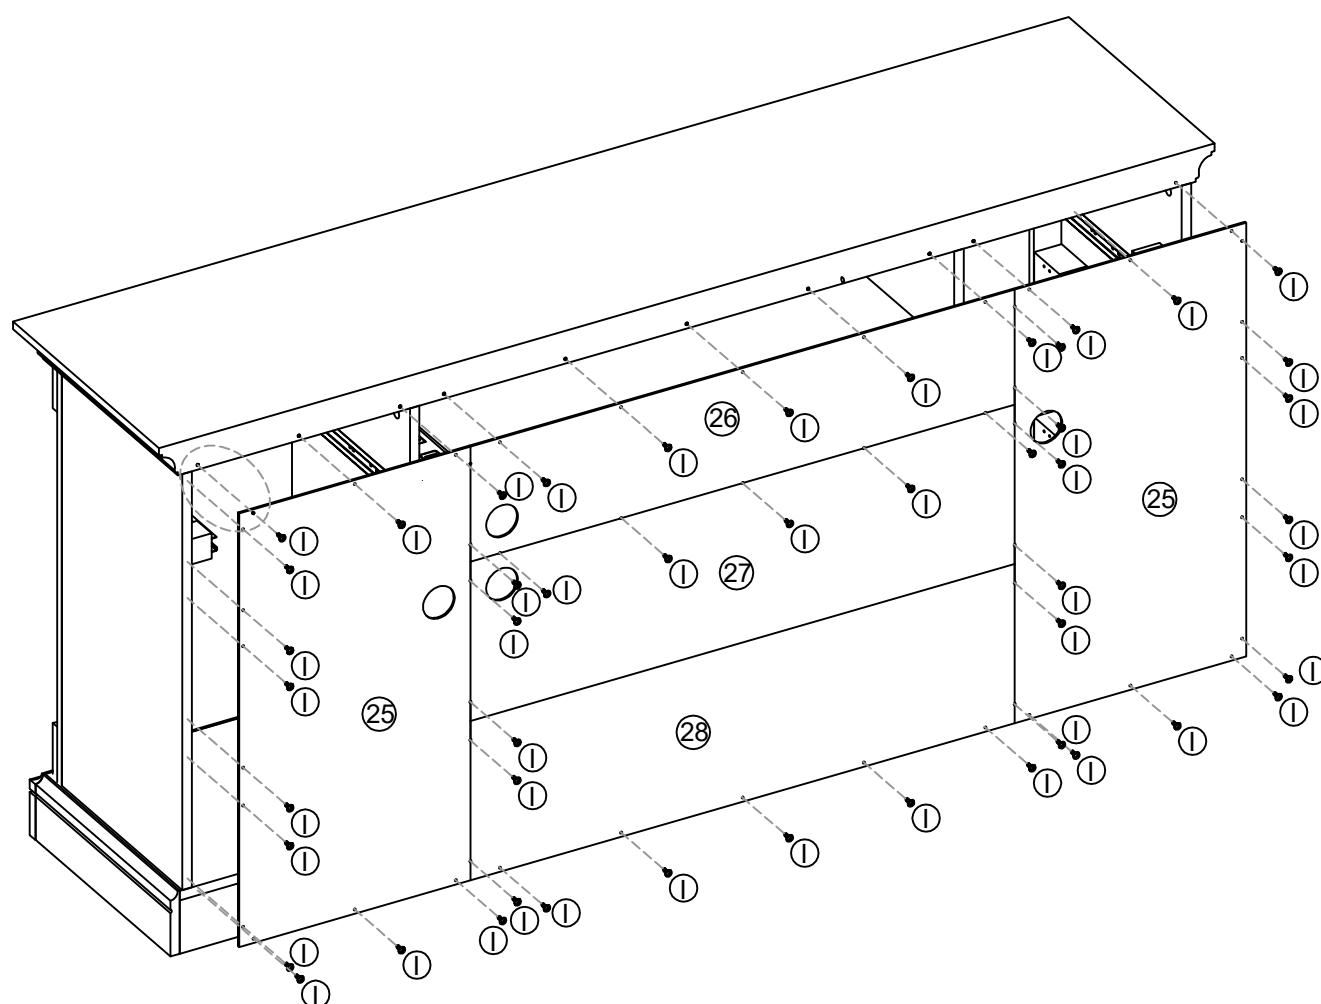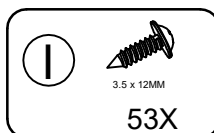

Step 16

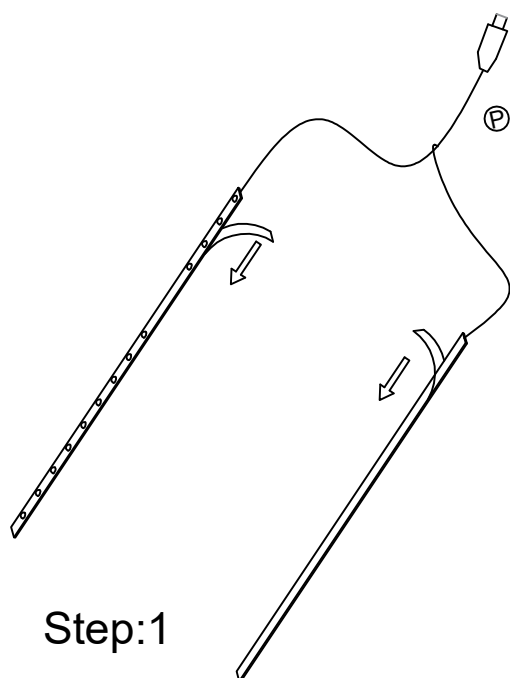
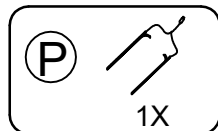


Step:1

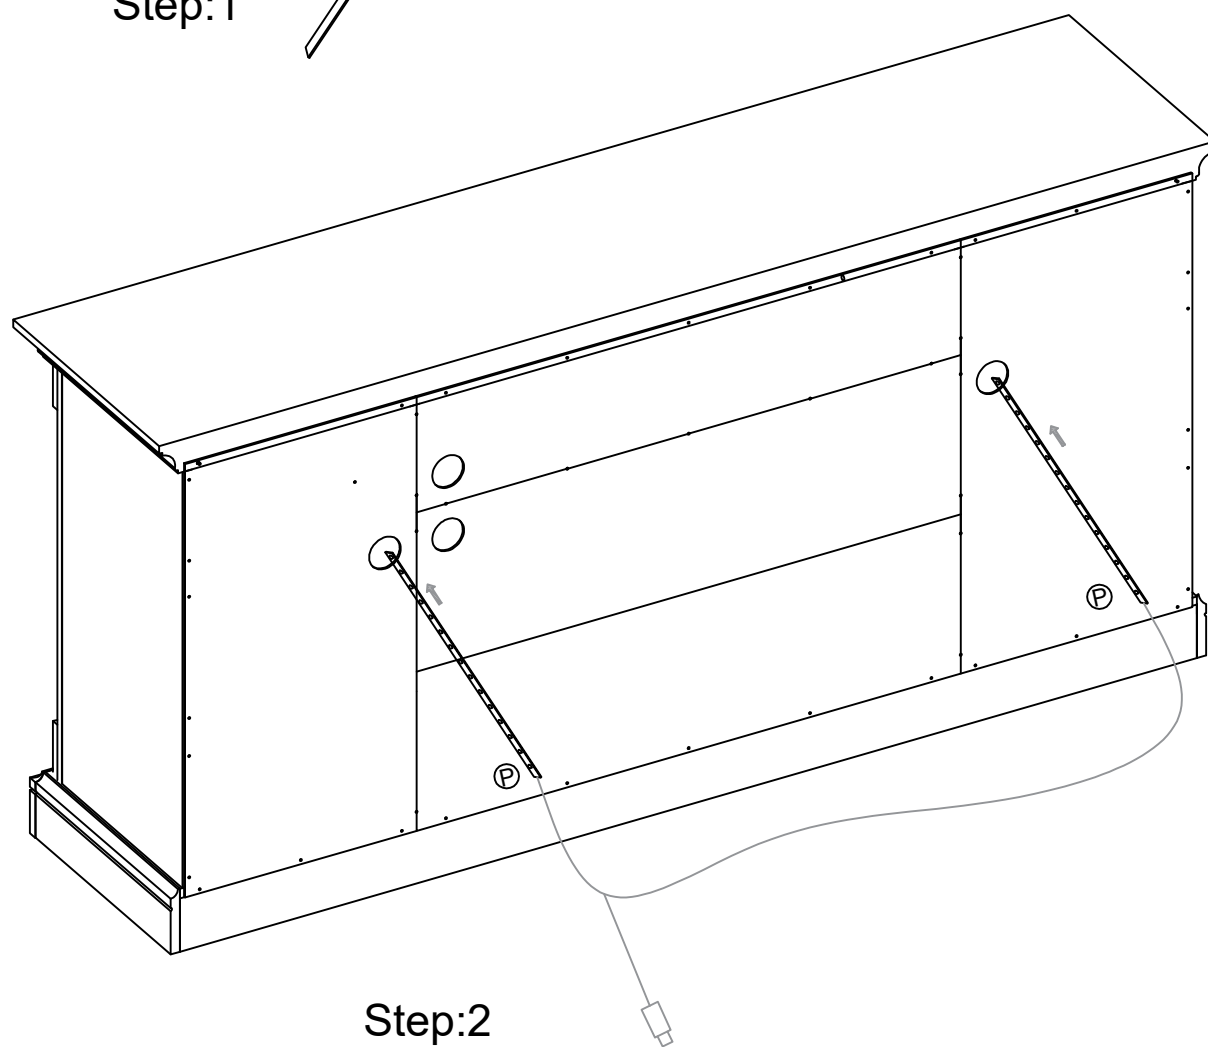

Step:2

Step 17

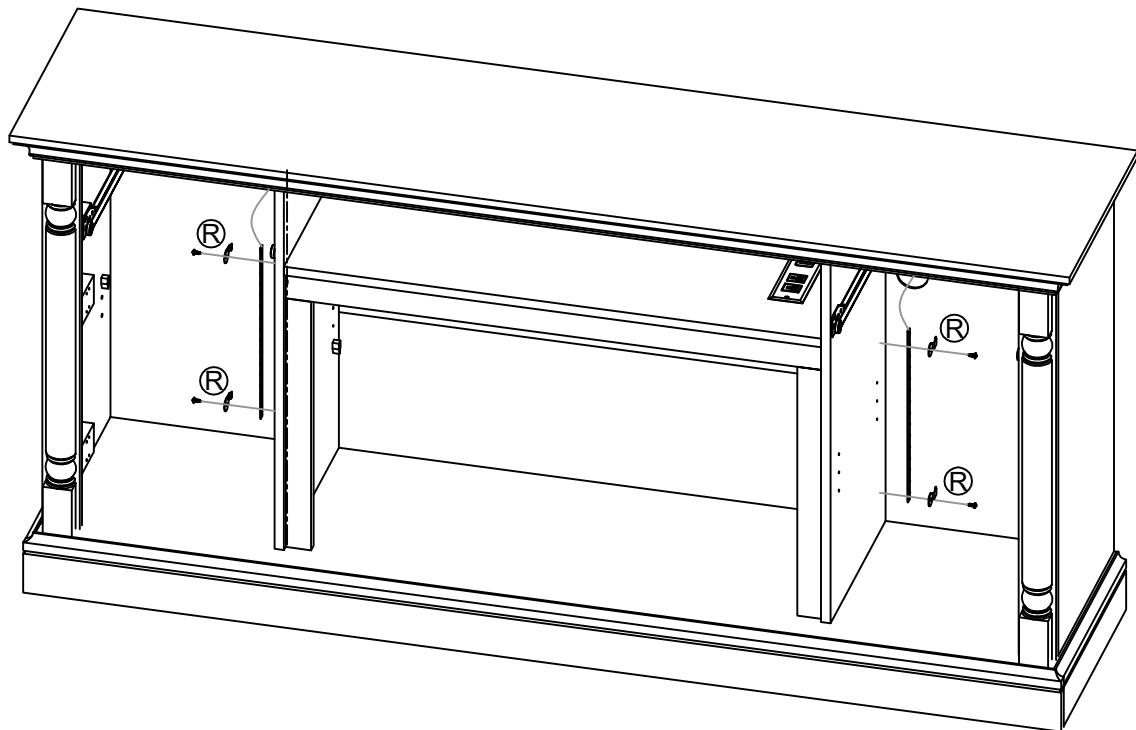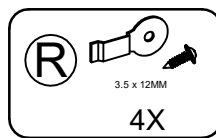


Step 18


Q



12X




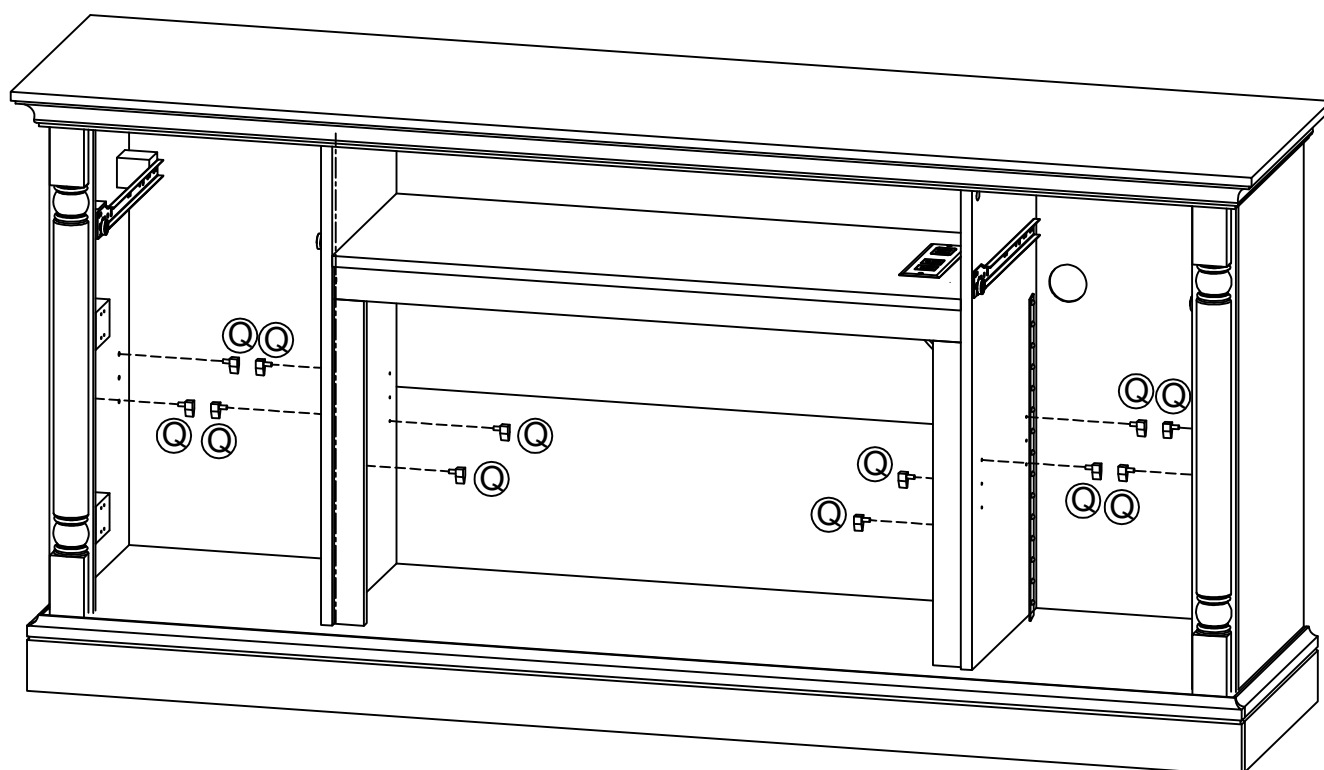


Step 19

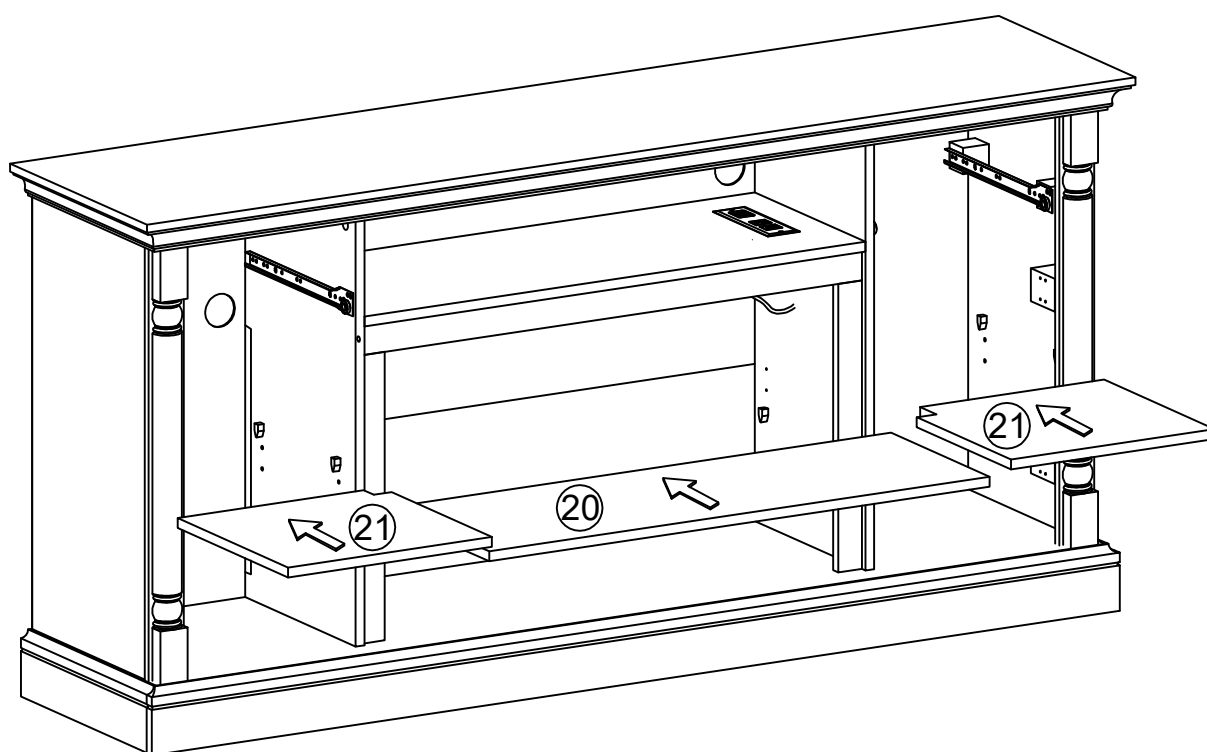


Note: The notch on the 21st piece of the layer board is inward to leave space for the LED strip.

Step 20

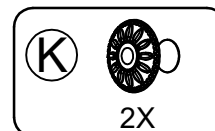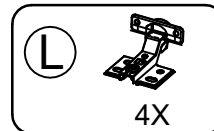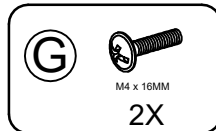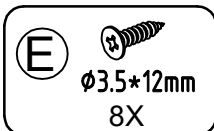


Clockwise rotation of the bolt increases the door hinge height;
counterclockwise rotation of the bolt decreases the door hinge height.

Loosen the screw to adjust
the length of the door hinge




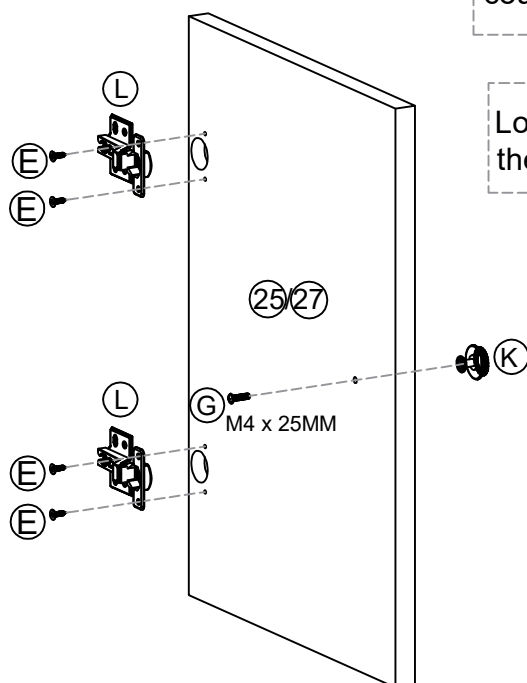


X2





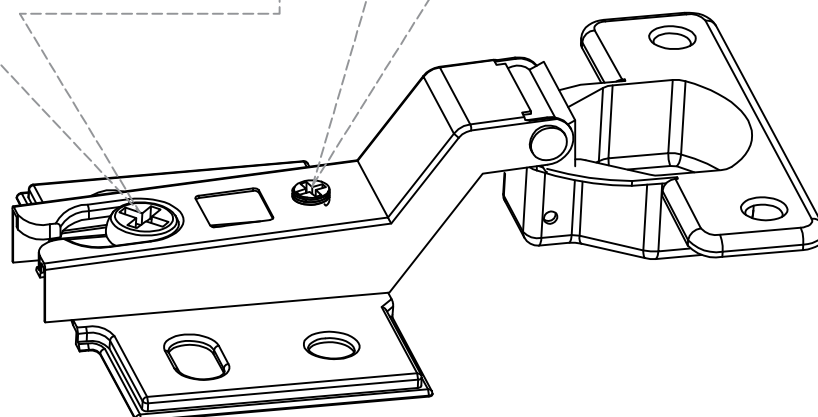


Hinge of big bend



Step 21

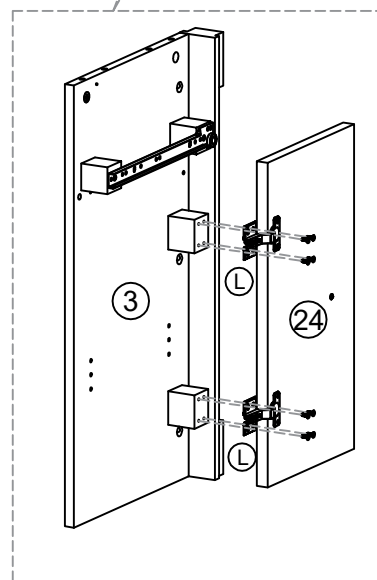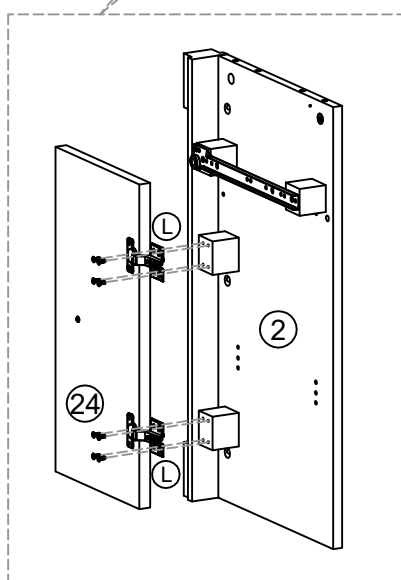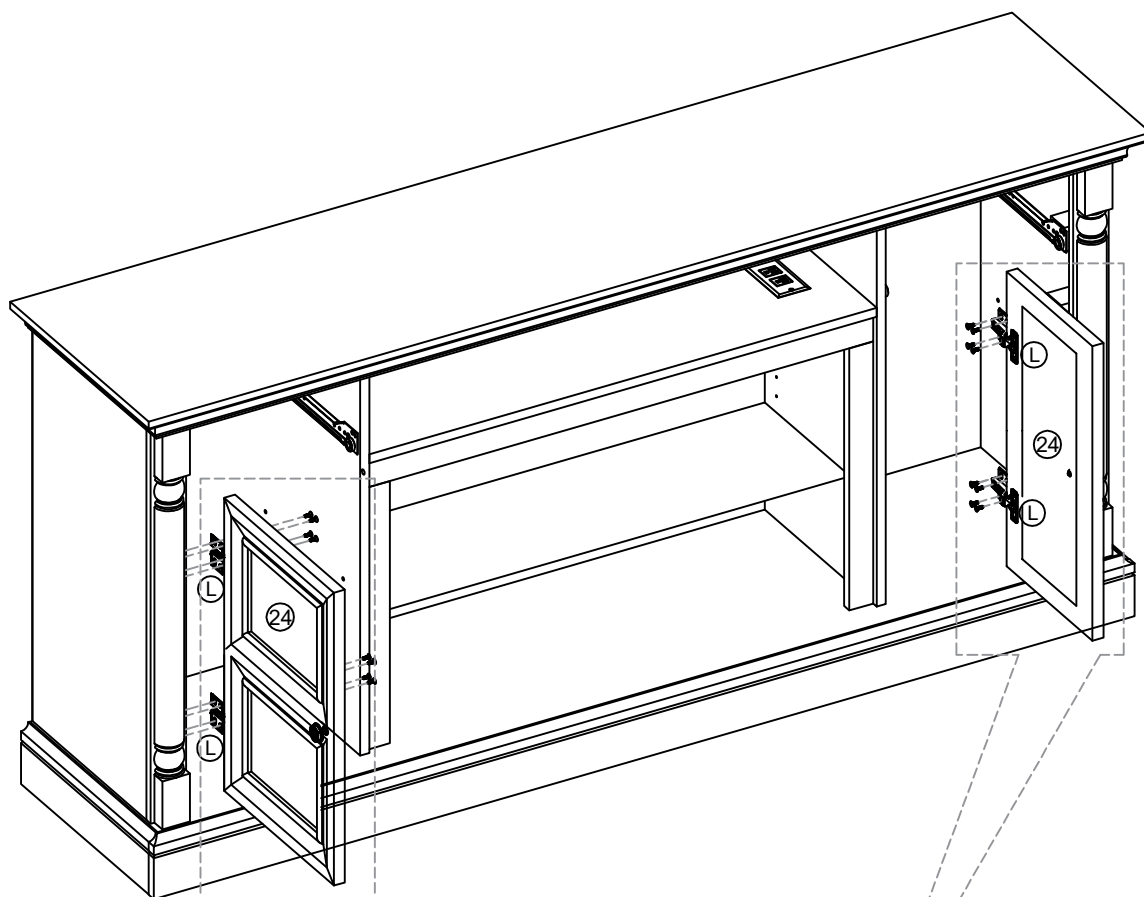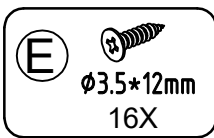


Step 22

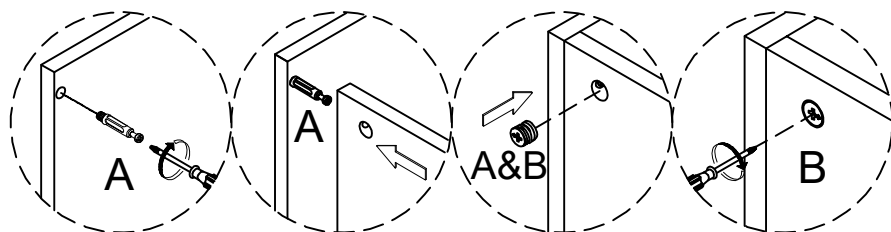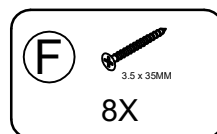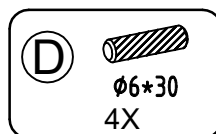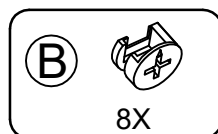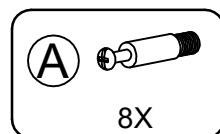







Step:1

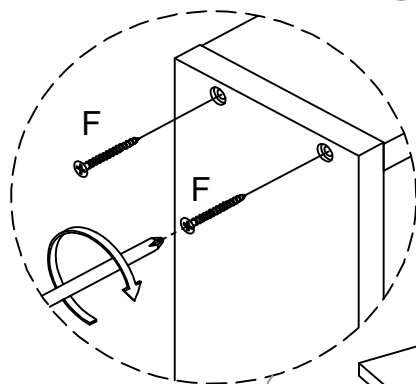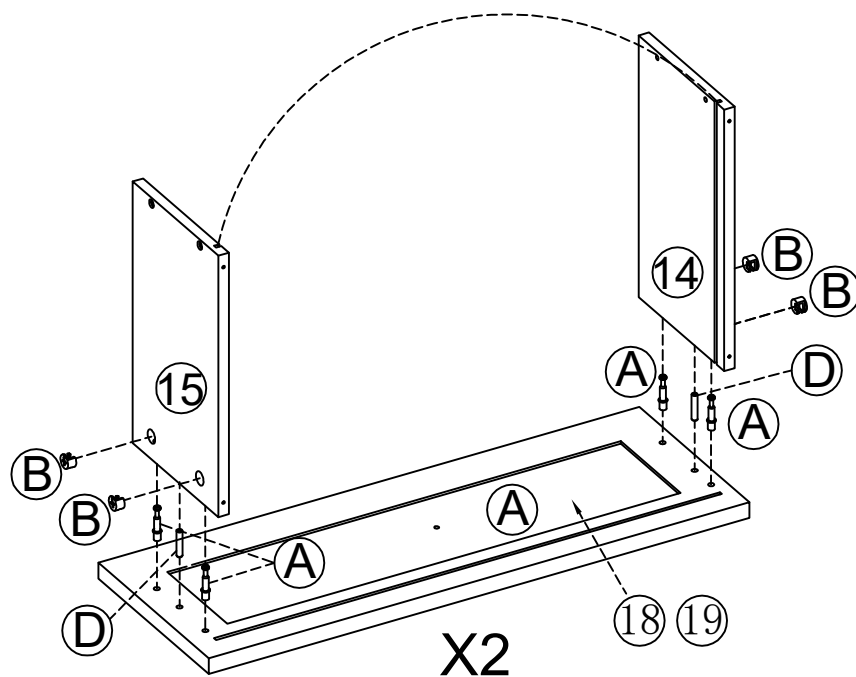

Step:2

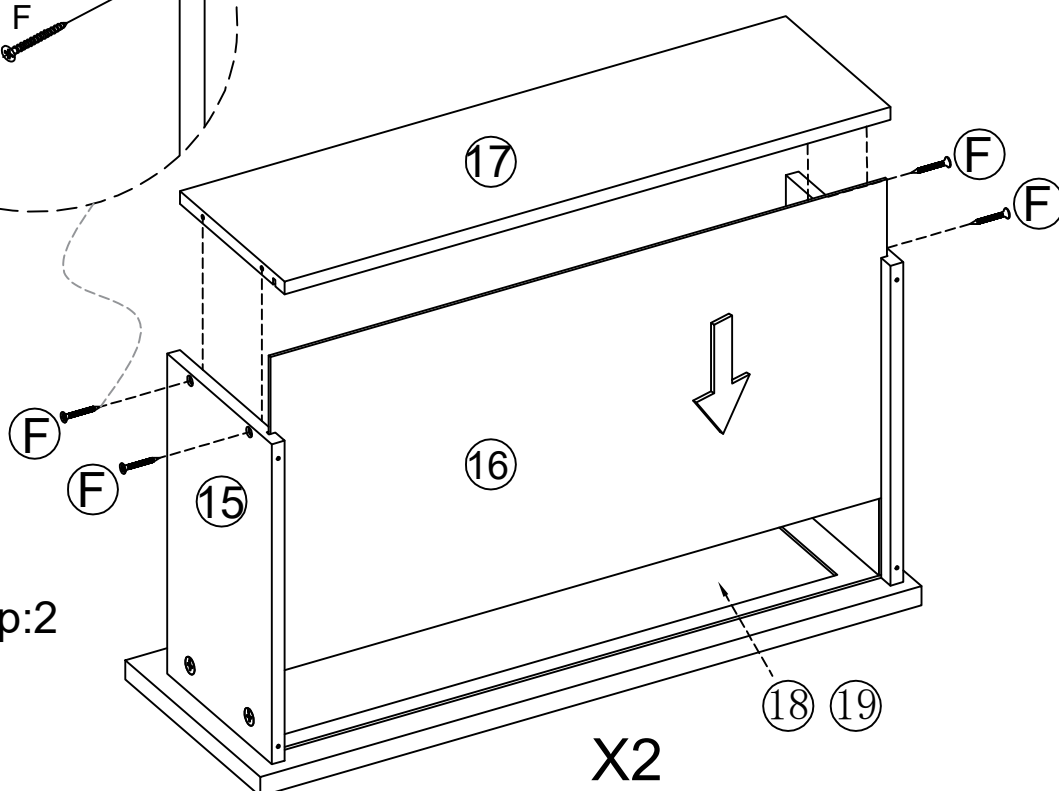

Step 23

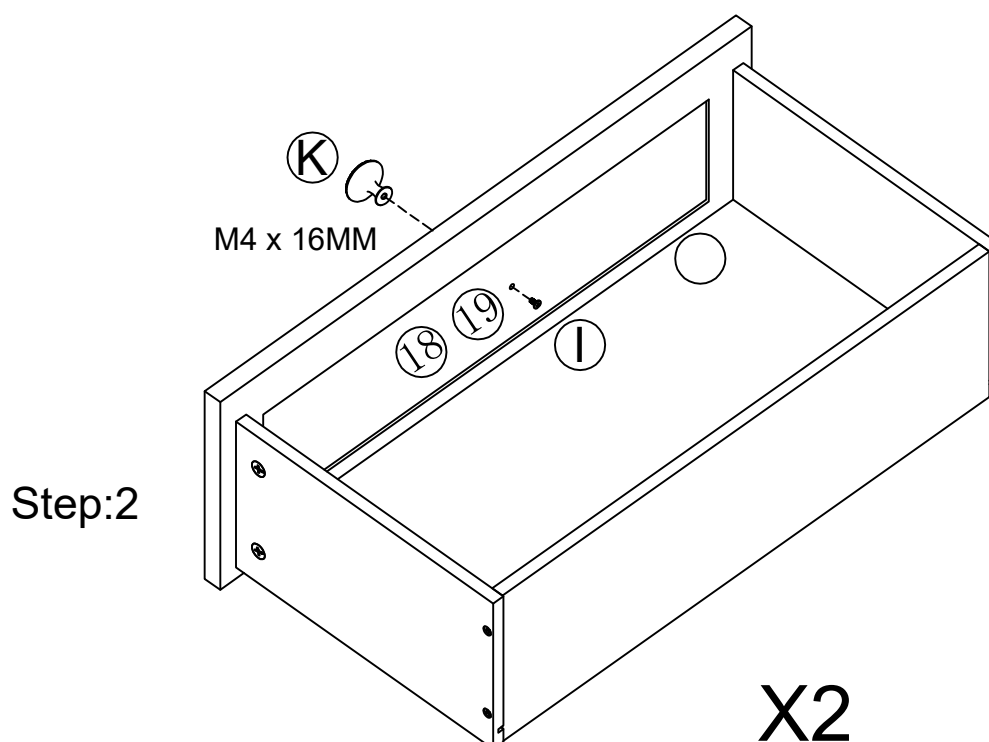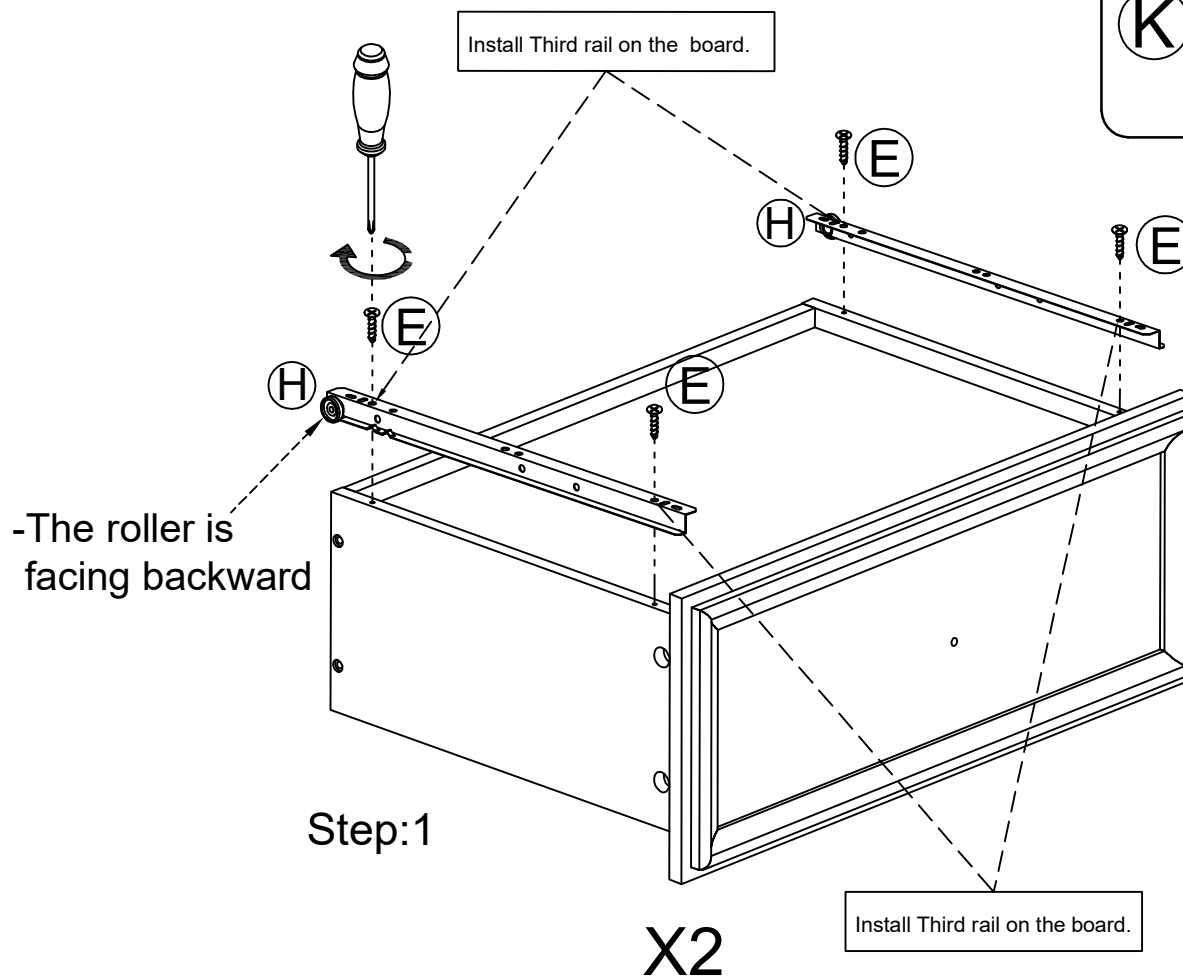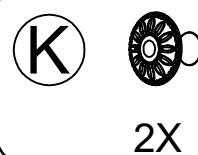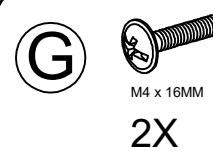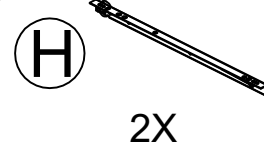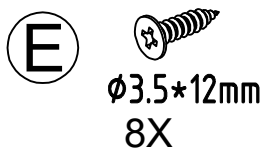

Step 24

