











Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance

- ⊘  • Not for commercial use. For residential use only.
- ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- ⊘  • Do not put hot items directly on furniture surface.
- ⊘  • Do not clean furniture with harsh cleansers or polish.
- ⊘  • Do not place furniture under direct sunlight.
- ⊘  • Do not place furniture near heating or cooling vents.
- ⊘  • Do not write on furniture without a padded barrier to protect the surface.
- ⊘  • Do not place furniture outside . For indoor use only.
- ⊘  • Stains may be removed with mild soap solution and damp cloth.
- ⊘  • Children should not climb or jump on the furniture.




- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in carton for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.





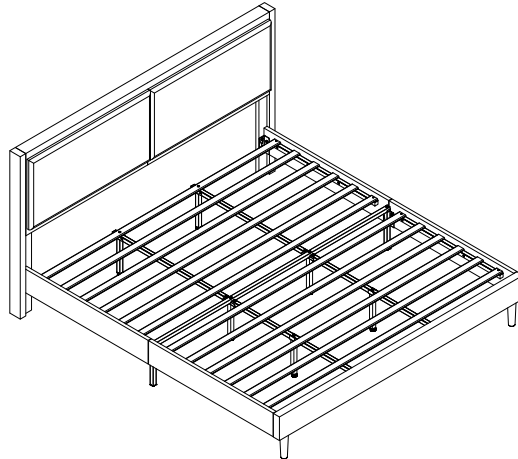



Upholstered Bed

N769P292586E/N769P292587E
N769P292586K/N769P292587K















Parts List

N769P292586E

| Label | Picture | Description | QTY |
|-------|---|---------------------|-----|
| A1 |  | Right Headboard | 1 |
| A2 |  | Left Headboard | 1 |
| B |  | Right Post | 1 |
| C |  | Left Post | 1 |
| D |  | Right Headboard Leg | 1 |
| E |  | Left Headboard Leg | 1 |
| F |  | Side Panel | 4 |
| G |  | Footboard | 1 |









Parts List

N769P292586E

| Label | Picture | Description | QTY |
|-------|---|-------------------|-----|
| H |  | Back Center Rail | 2 |
| I |  | Front Center Rail | 2 |
| J |  | Side Leg | 2 |
| K |  | Support Leg | 2 |
| L |  | Center Leg | 2 |
| M |  | Cross Brace | 1 |
| N |  | Back Slat | 1 |
| O |  | Front Slat | 1 |
| P |  | V-Bracket | 4 |
| Q |  | Footboard Leg | 2 |
| R |  | Headboard Bracket | 6 |
| S |  | Headboard Brace | 2 |


Hardware

N769P292586E

| Label | Picture | Description | QTY |
|-------|---|-------------------------------|-----|
| ① |  | Bolt Ø5/16"×45mm | 16 |
| ② |  | Bolt Ø5/16"×35mm | 8 |
| ③ |  | Bolt Ø5/16"×25mm | 12 |
| ④ |  | Bolt Ø5/16"× 19mm | 28 |
| ⑤ |  | Bolt Ø1/4" x 45mm | 2 |
| ⑥ |  | Screw M4 X 30mm | 8 |
| ⑦ |  | L-Allen Key 4mm | 1 |
| ⑧ |  | Screwdriver (Not provided) | 1 |

Assembly Preparation

Before
Beginnin
g
Assembly
:

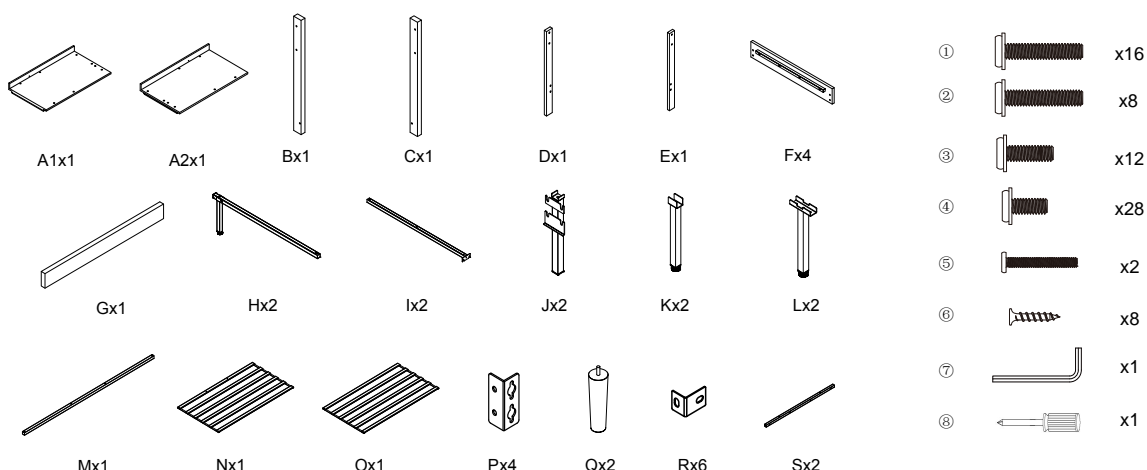

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

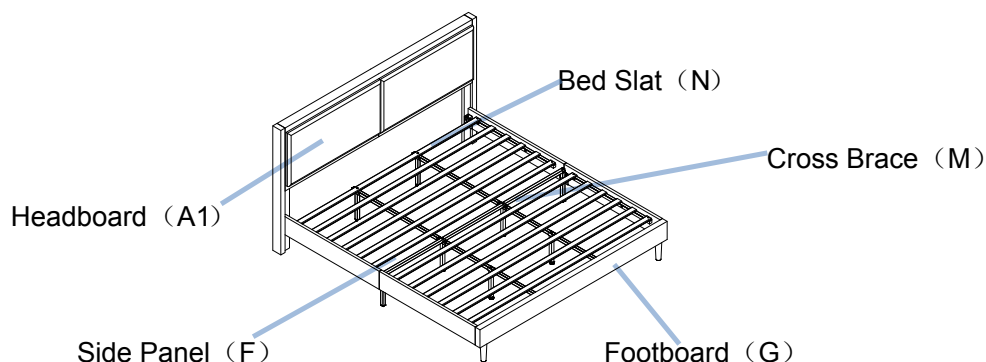


This Upholstered Bed has multiple parts and may require up to some 30 minutes to assemble. To give you an overview of the Upholstered Bed parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

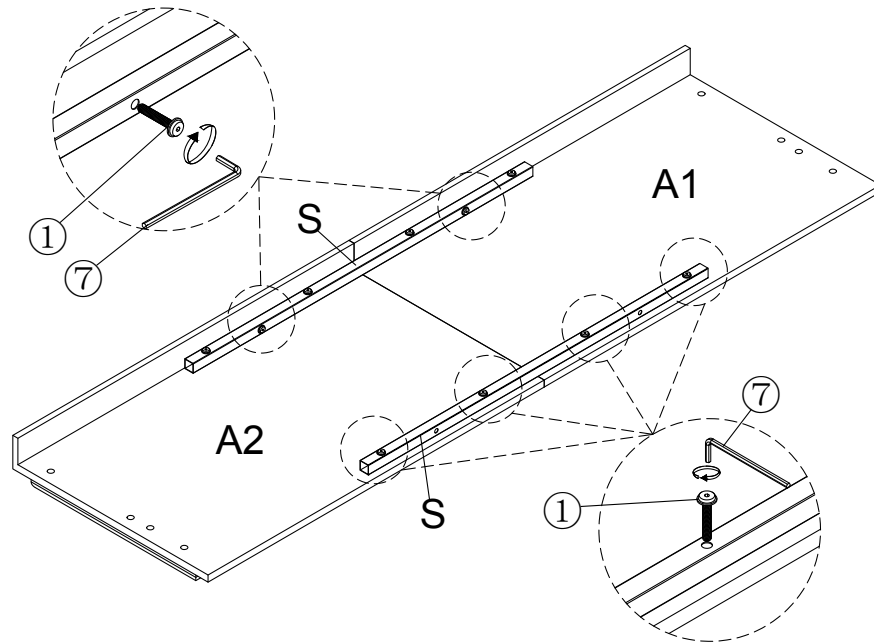


Attached Headboard Brace (S) to Right Headboard (A1) and Left Headboard (A2) by using Bolts (1) and L-Allen Key (7).

Step 2

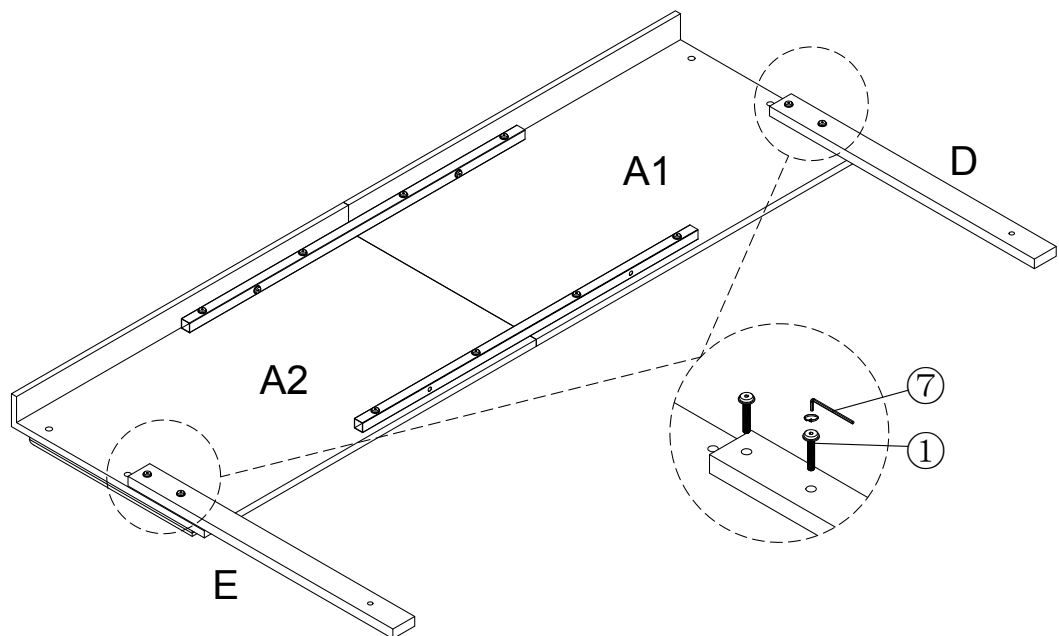


Attached Right Headboard Leg (D) to Right Headboard (A1) and Left Headboard Leg (E) to Left Headboard (A2) by using Bolts (1) and L-Allen Key (7).

Step 3

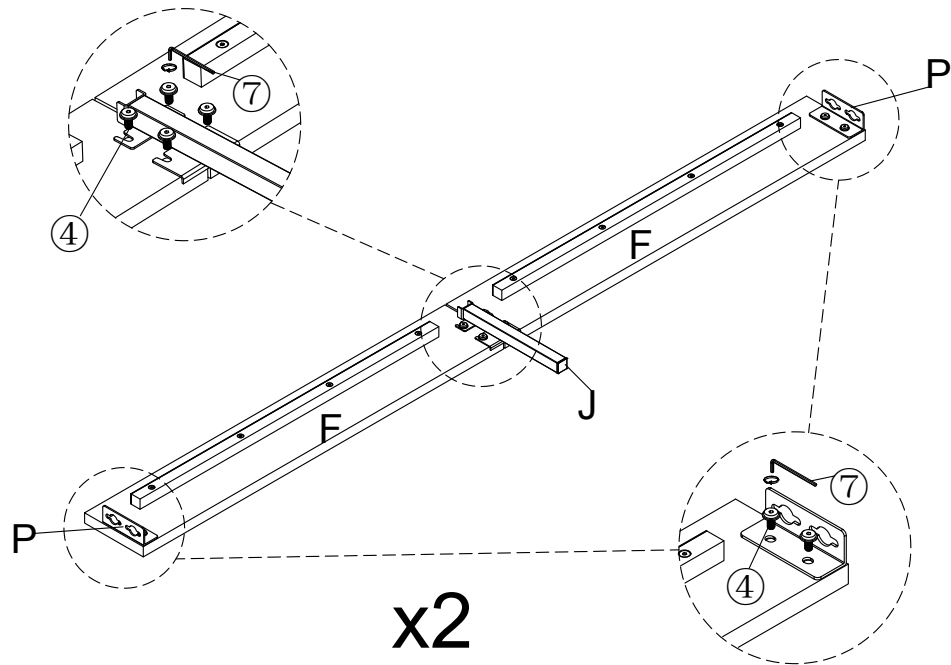


Attached Side Leg (J) to Side Panel (F) by using Bolts (4) and Attached V-Bracket (P) to Side Panel (F) by using Bolts (4) and L-Allen Key(7).

Step 4

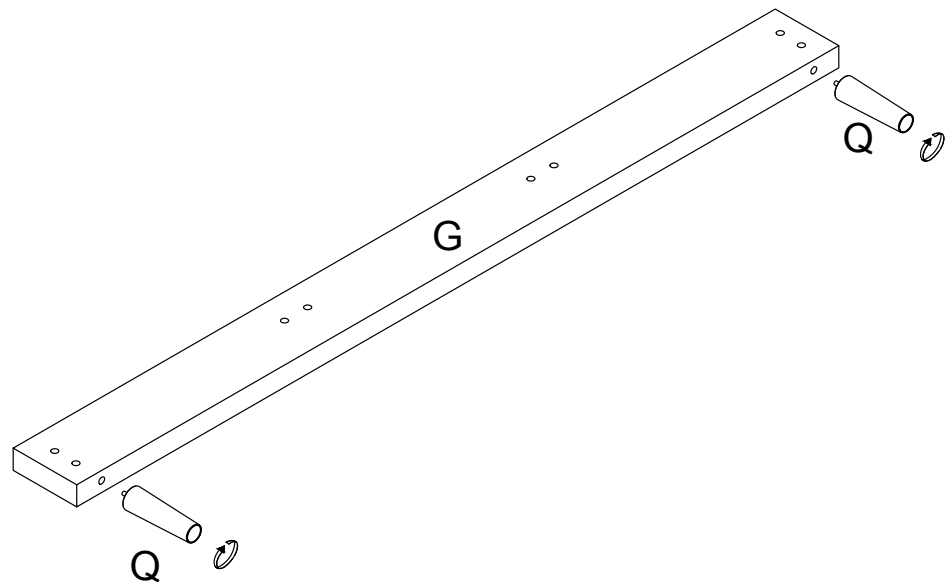


Attached Footboard Leg (Q) to Footboard (G).

Step 5

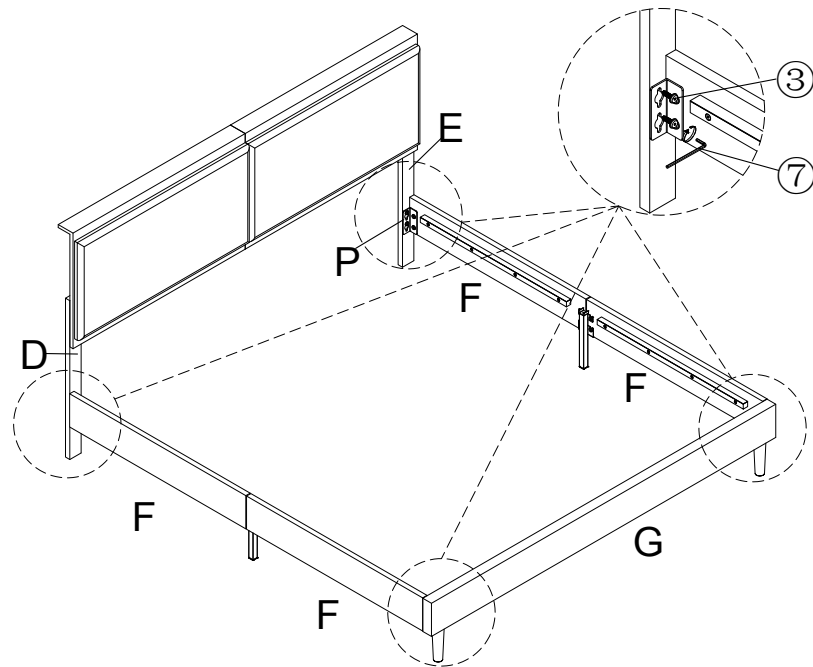


Attached V-Bracket (P) and Side Panel (F) to Right Headboard Leg (D) and Left Headboard Leg (E) by using Bolts (③) and L-Allen Key (⑦), Attached V-Bracket (P) and Side Panel (F) to Footboard (G) by using Bolts (③) and L-Allen Key (⑦).

Step 6

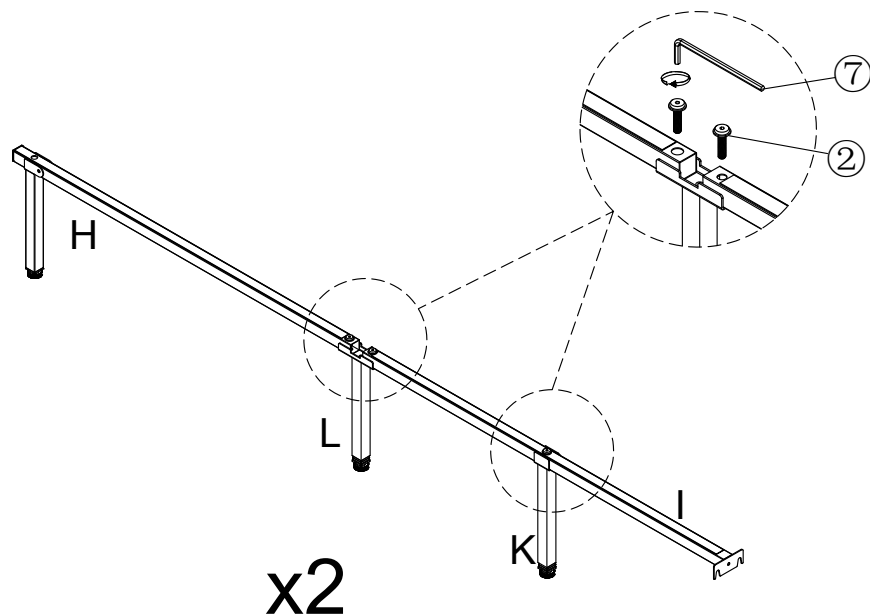


Attached Front Center Rail (I) to Support Leg (K) by using Bolts (②) and L-Allen Key (⑦), Attached Front Center Rail (I) and Back Center Rail (H) to Center Leg (L) by using Bolts (②) and L-Allen Key (⑦).

Step 7

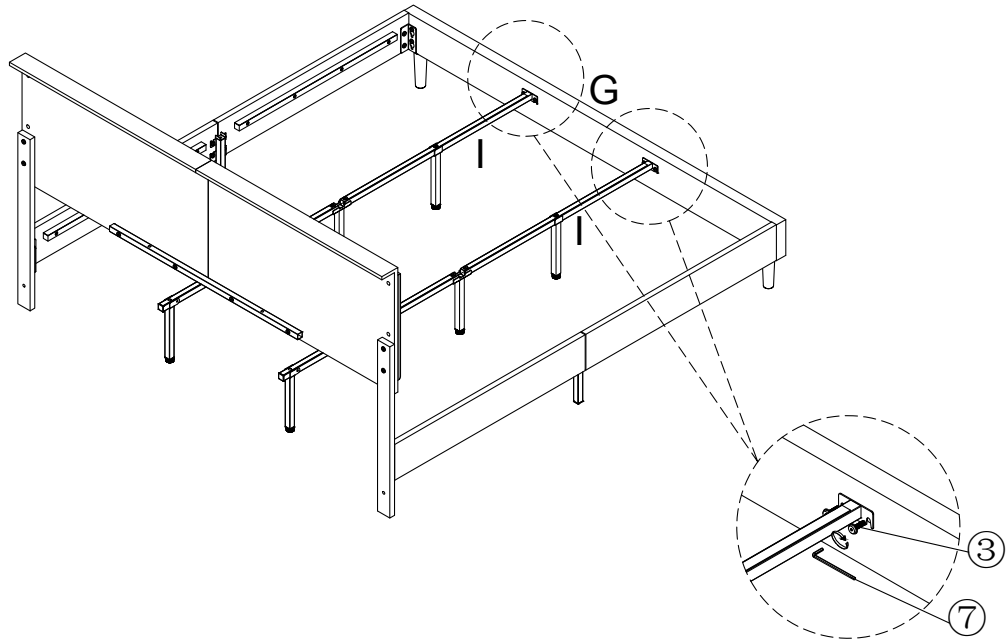


Attached Front Center rail (I) to Footboard (G) by using Bolts (3) and L-Allen Key (7).

Step 8

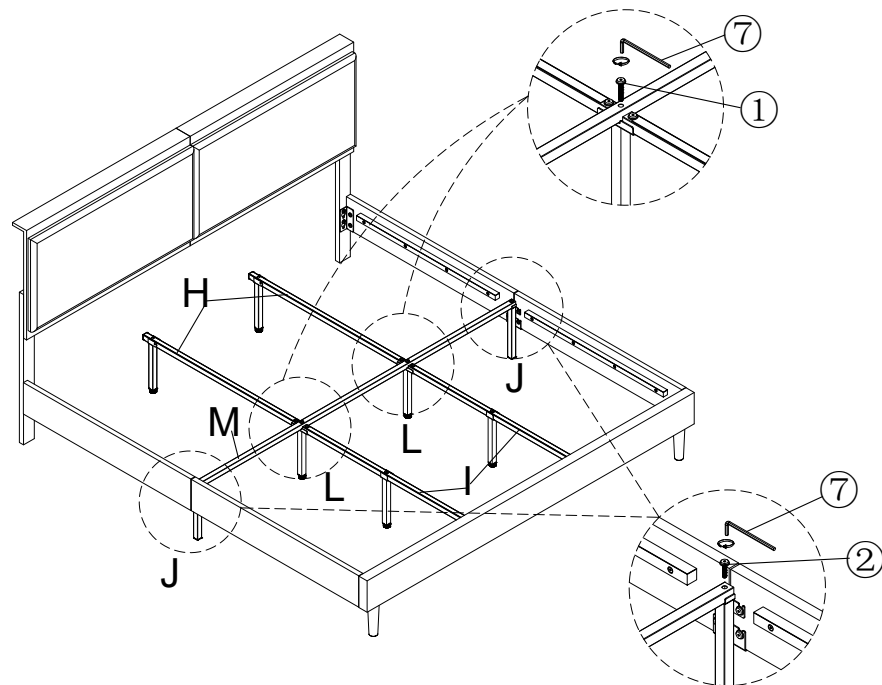


Attached Cross Brace (M) to Side Leg (J) by using Bolts (2) and L-Allen Key (7), Attached Cross Brace (M) to Center Leg (L) by using Bolts (1) and L-Allen Key (7).

Step 9

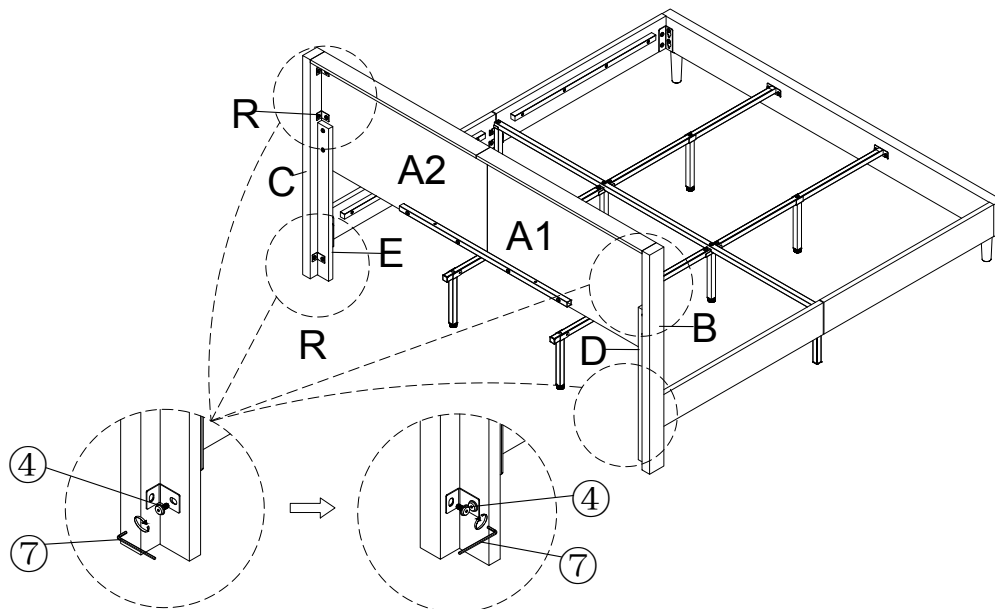


Attached Headboard Bracket (R) to Right Headboard (A1) and Right Post (B) and Right Headboard Leg (D) by using Bolts (4) and L-Allen Key (7).
Attached Headboard Bracket (R) to Left Headboard (A2) and Left Post (C) and Left Headboard Leg (E) by using Bolts (4) and L-Allen Key (7).

Step 10

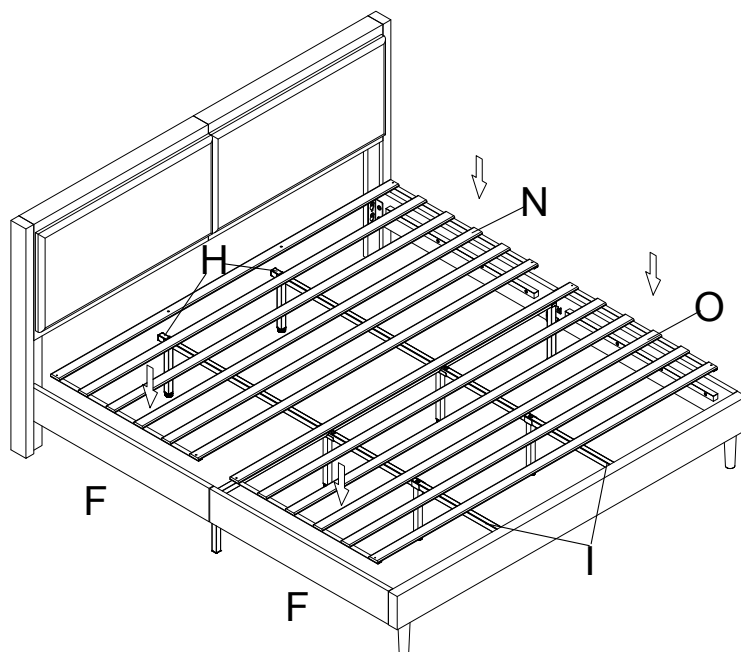


Attached Back Slat (N) to Side Panel (F) and Back Center Rail (H),
Attached Front Slat (O) to Side Panel (F) and Front Center Rail (I).

Step 11

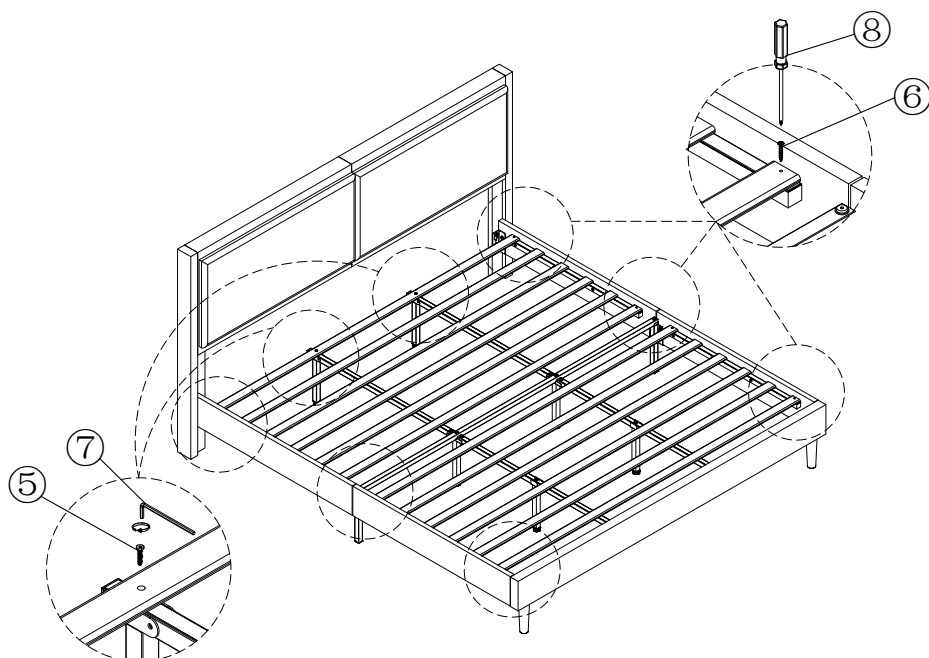

Attached Back Slat (N) to Side Panel (F) and Back Center Rail (H) by using Screws (⑥) and Screwdriver (⑧) Bolts (⑤) and L-Allen Key (⑦), Attached Front Slat (O) to Side Panel (F) and Front Center Rail (I) by using Screws (⑥) and Screwdriver (⑧).

Step 12

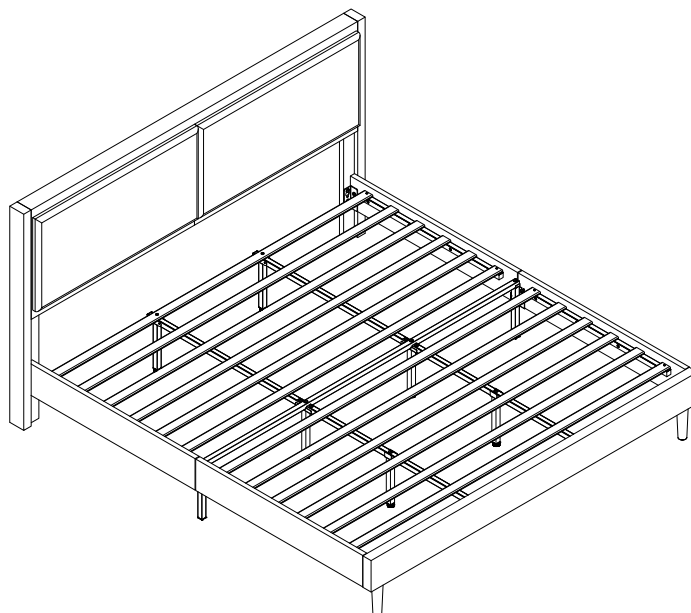

Your Upholstered Bed is ready for use.
This Upholstered Bed can only be used on a flat, level surface.