



ASSEMBLY INSTRUCTIONS

TWIN BED WITH 2 STORAGE

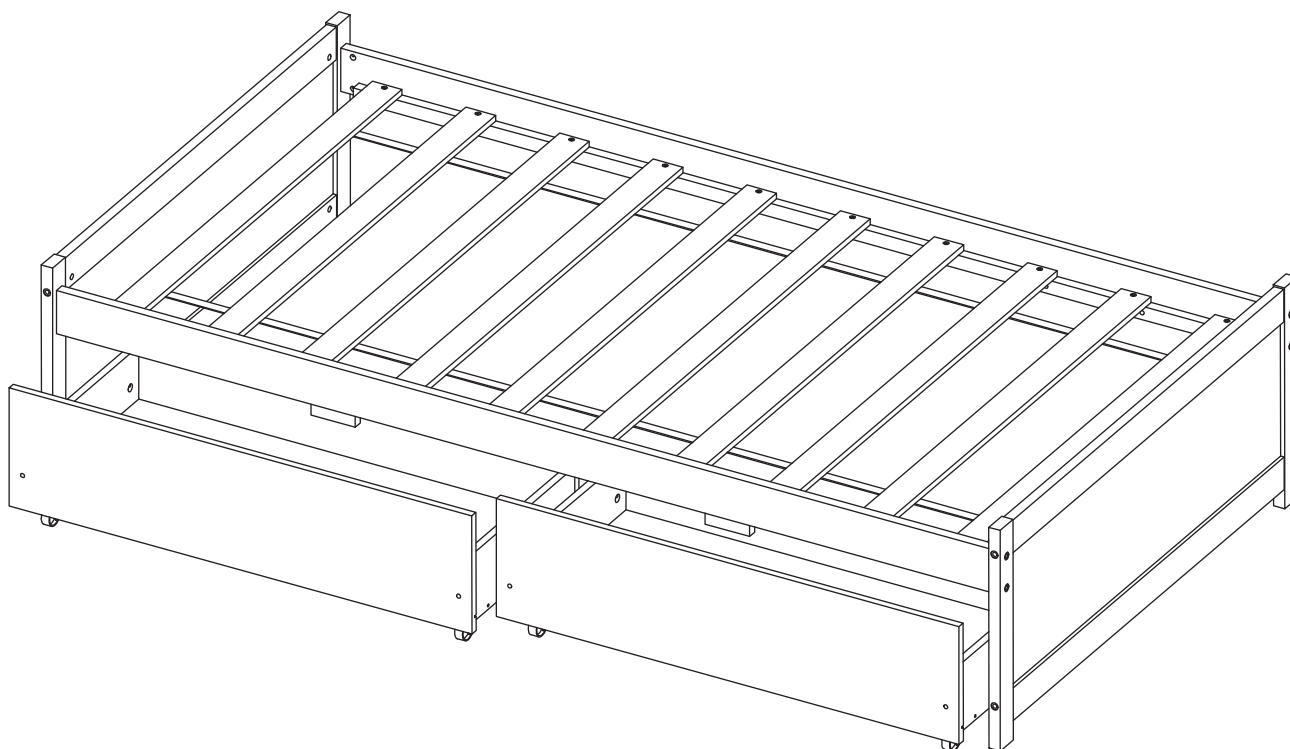










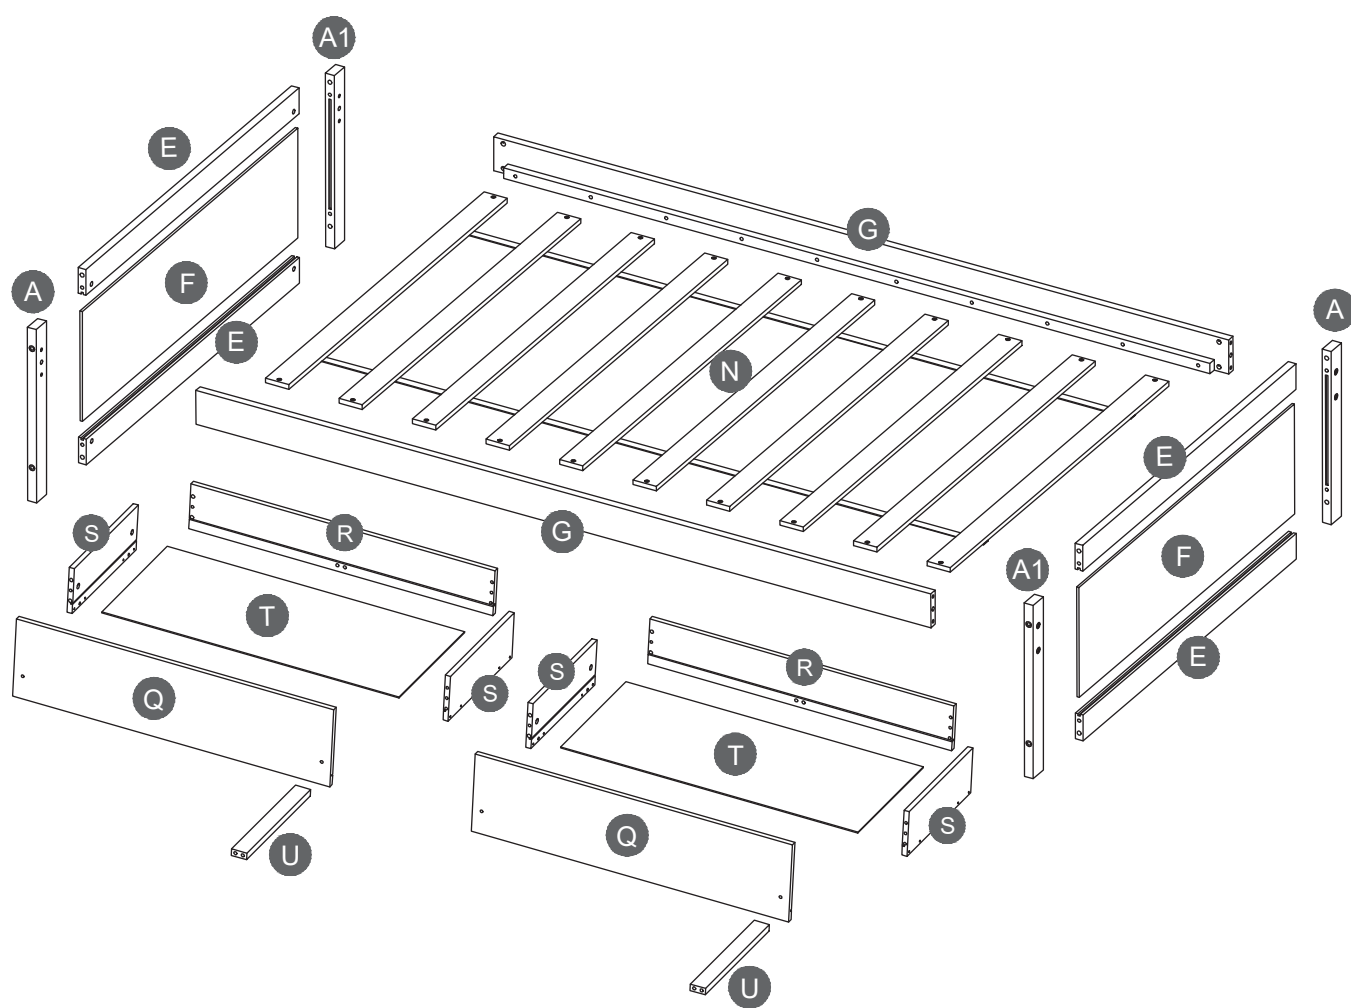

MK33702











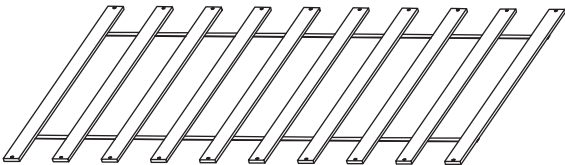

Detail View




Part List

<div>A</div> <div>  </div> <div>Leg - 2pcs</div>	<div>A1</div> <div>  </div> <div>Leg - 2pcs</div>
<div>E</div> <div>  </div> <div>Hb. Fb. Top Bottom Panel - 4pcs</div>	<div>F</div> <div>  </div> <div>Hb. Fb. Mid. Panel - 2pcs</div>
<div>G</div> <div>  </div> <div>Side Rail (Front & Back) - 2pcs</div>	<div>N</div> <div>  </div> <div>Bed Slats - 1set</div>
<div>Q</div> <div>  </div> <div>Front Panel (Storage) - 2pcs</div>	<div>R</div> <div>  </div> <div>Back Panel (Storage) - 2pcs</div>
<div>S</div> <div>  </div> <div>Side Panel (Storage) - 4pcs</div>	<div>T</div> <div>  </div> <div>Bottom Panel (Storage) - 2pcs</div>
<div>U</div> <div>  </div> <div>Bottom Panel (Storage) - 2pcs</div>	

Hardware List


1	 M6 x 80mm JCBC (8pcs)	2	 M6 x 15mm Barrel Nut (16pcs)	3	 M10 x 40mm Wood Dowel (12pcs)
4	 M6 x 60mm JCBC (8pcs)	5	 M6 x 70mm JCBC (8pcs)	6	 M8 x 30mm Wood Dowel (32pcs)
7	 M4 x 25mm CSK Screw (20pcs)	8	 Caster (8pcs)	9	 M4 x 32mm CSK Screw (20pcs)
10	 M6 x 13mm Barrel Nut (8pcs)	11	 90 x 35 x 19mm Storage Stopper (2pcs)	12	 M4 Allen Key (1pc)

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

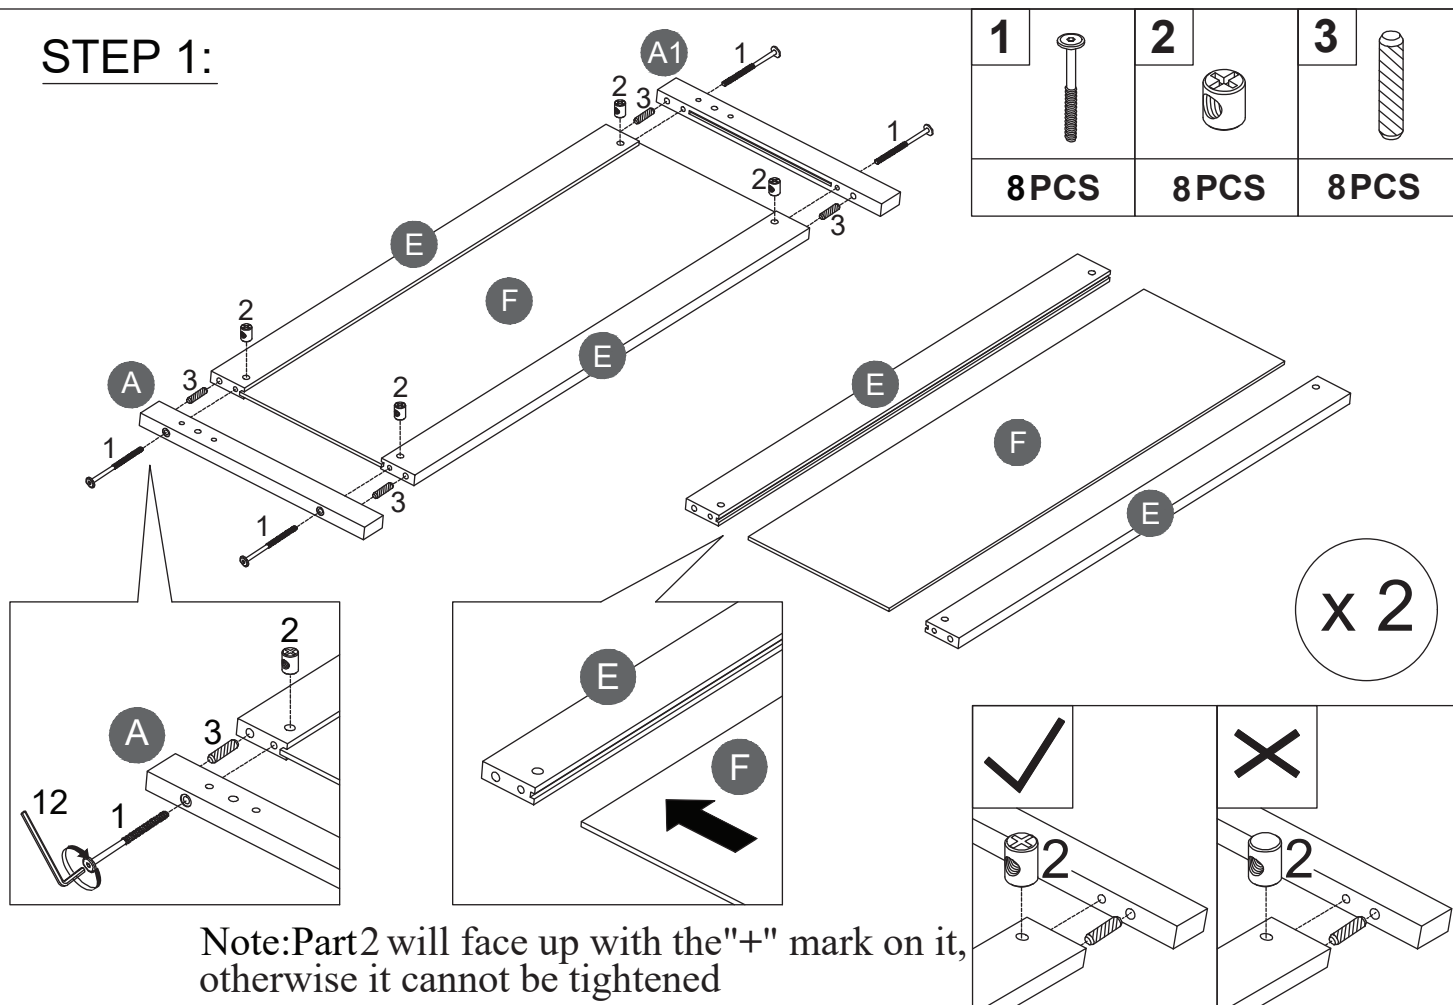


STEP 2:

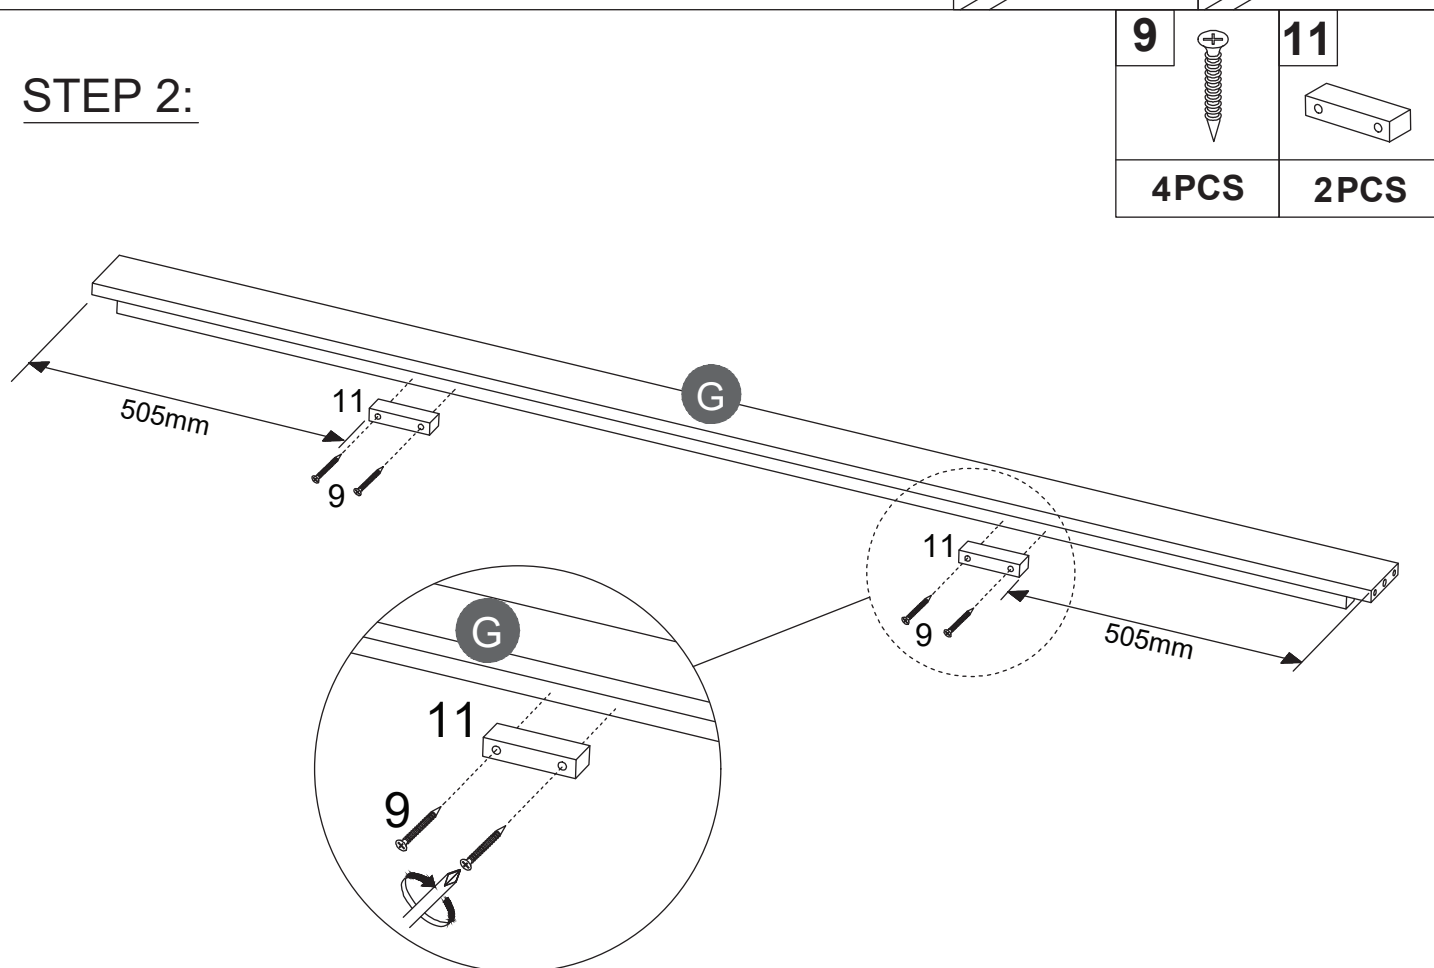


Storage Stopper (11) with Side Rail (Front) by using Screw CSK M4 x 32mm (9)

STEP 3:

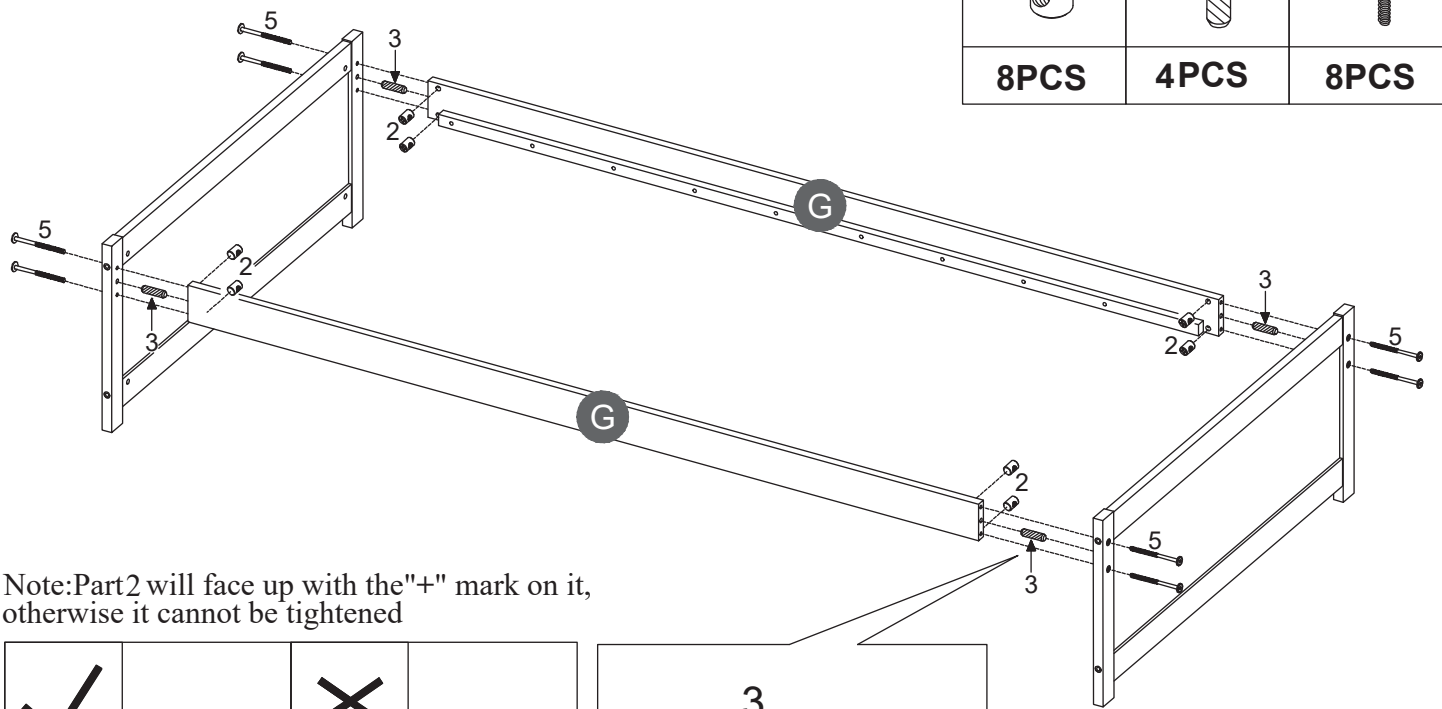


2	3	5
8PCS	4PCS	8PCS


Note: Part 2 will face up with the "+" mark on it, otherwise it cannot be tightened

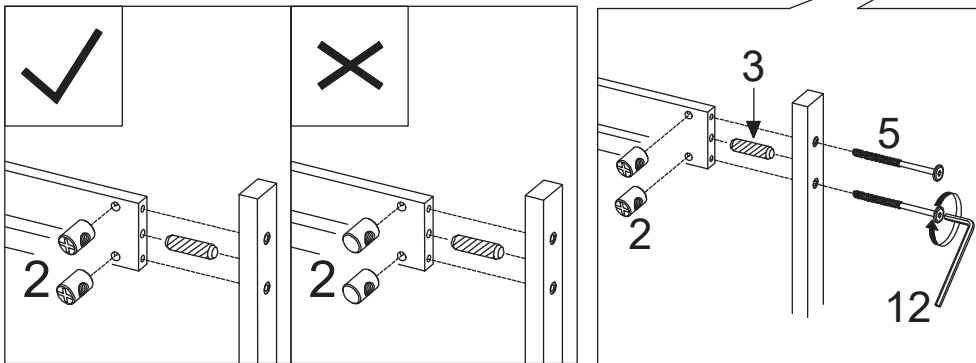

STEP 4:

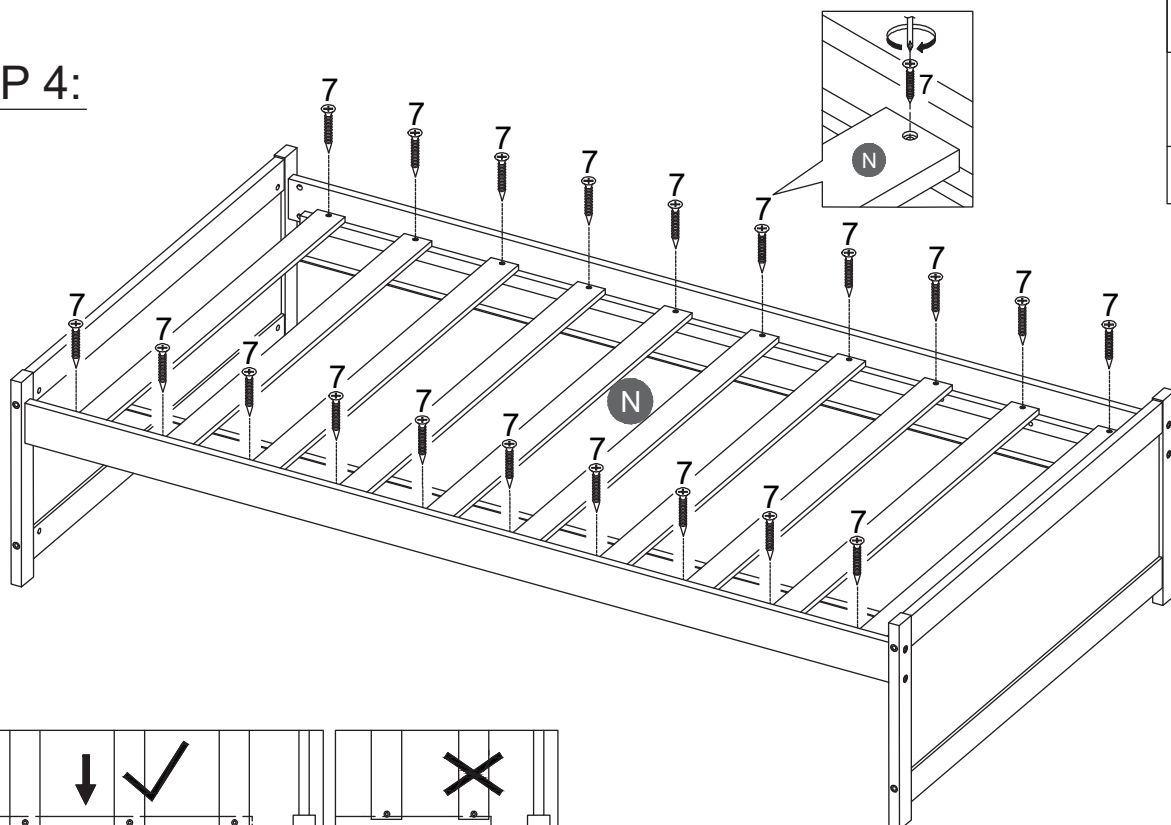




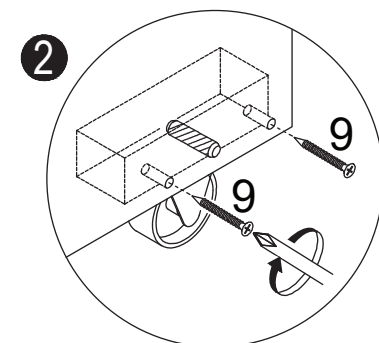
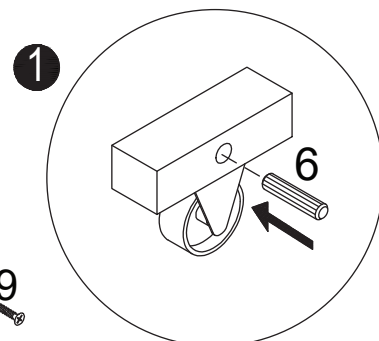
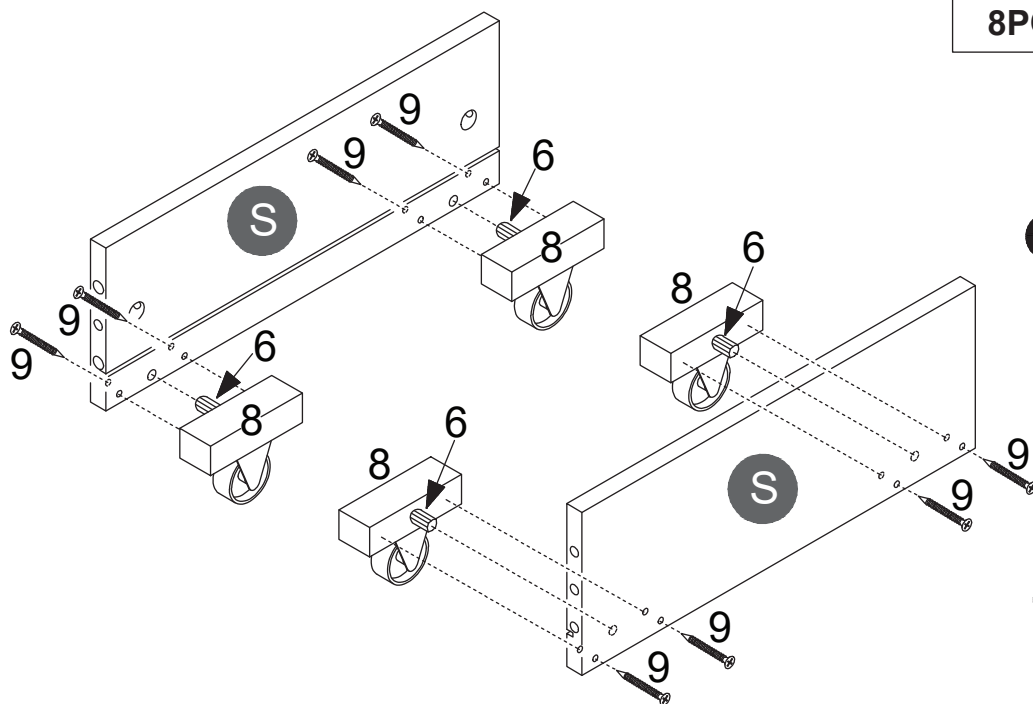
7
20PCS

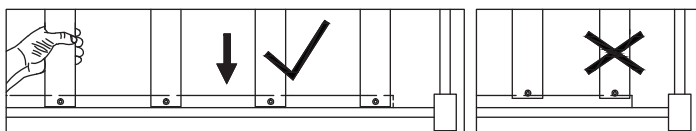

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.




STEP 5:




6		8		9	
8PCS		8PCS		16PCS	



x 2


STEP 6:

4		6		10	
4PCS		12PCS		4PCS	

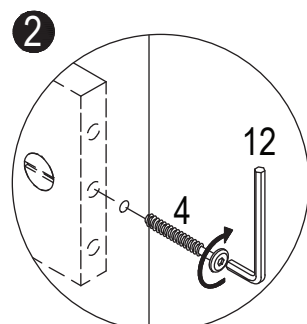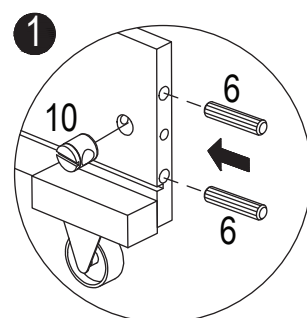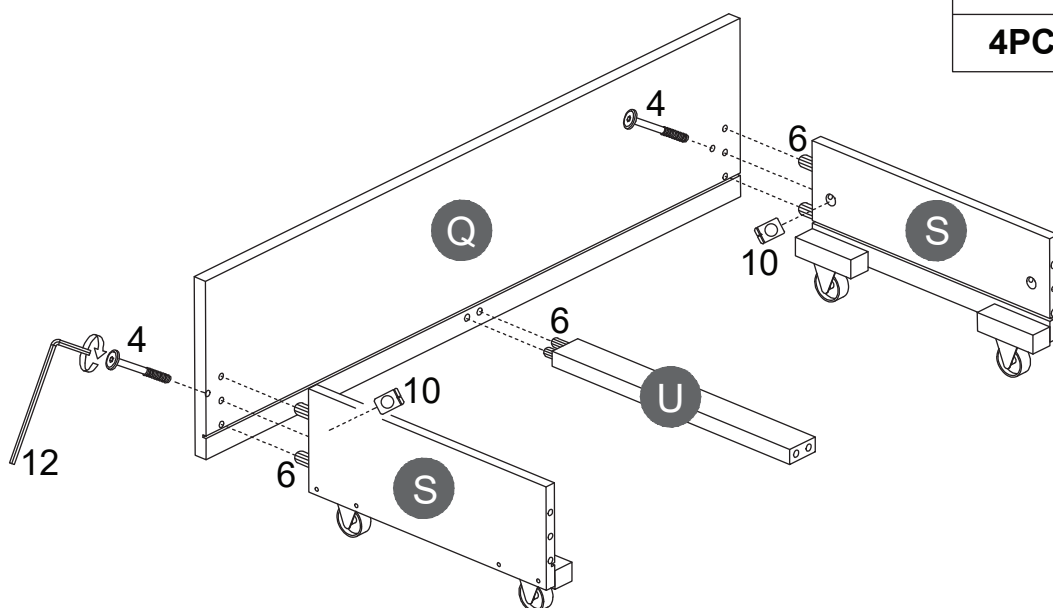




x 2



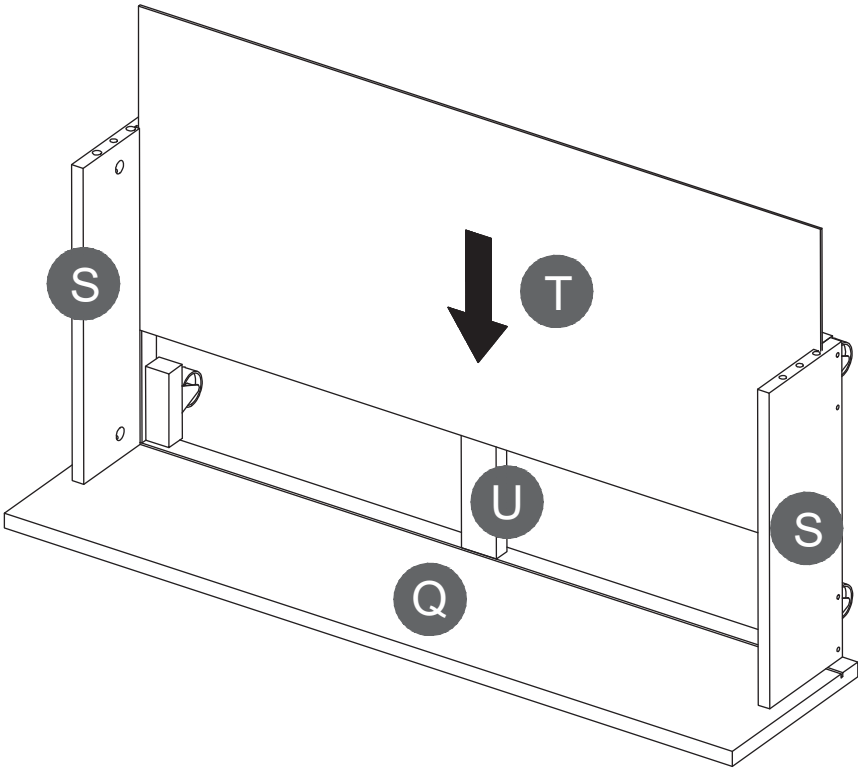
STEP 7:



x 2

STEP 8:

4		6		10	
4PCS		12PCS		4PCS	

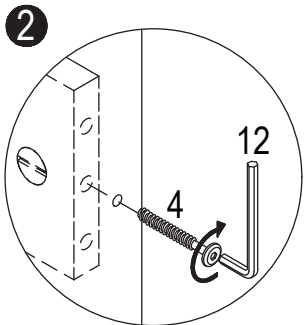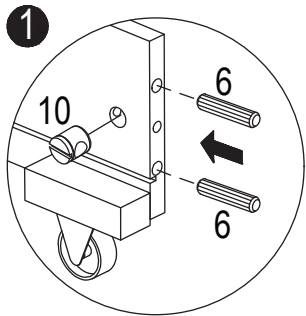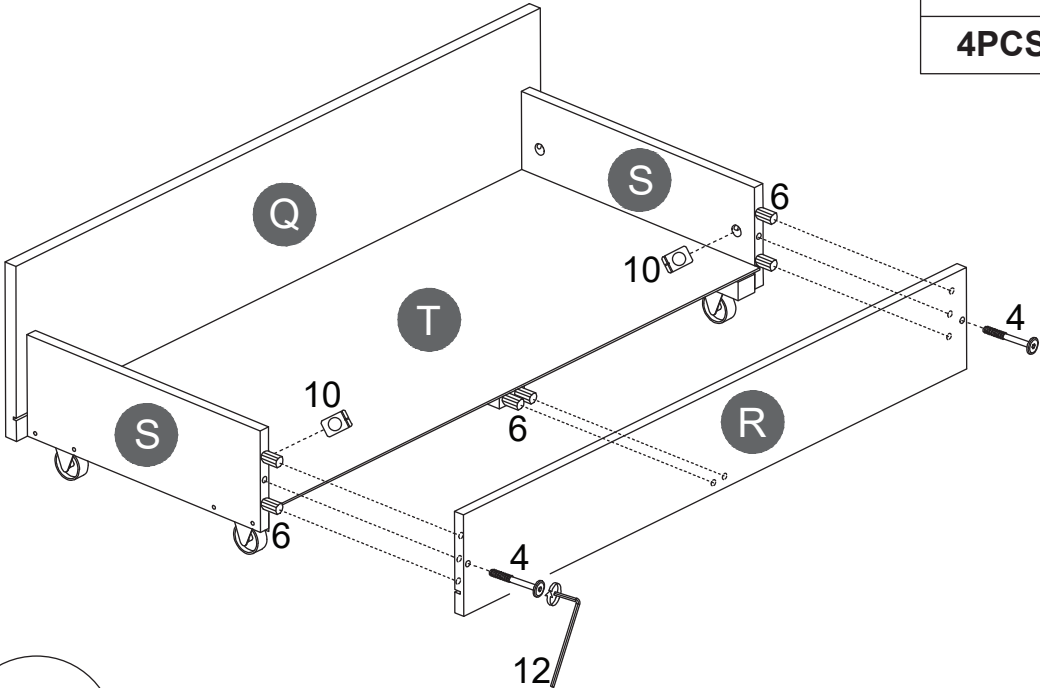

x 2

STEP 9:

