


# Hall Tree

**Assembly Instructions - Please keep for future reference**

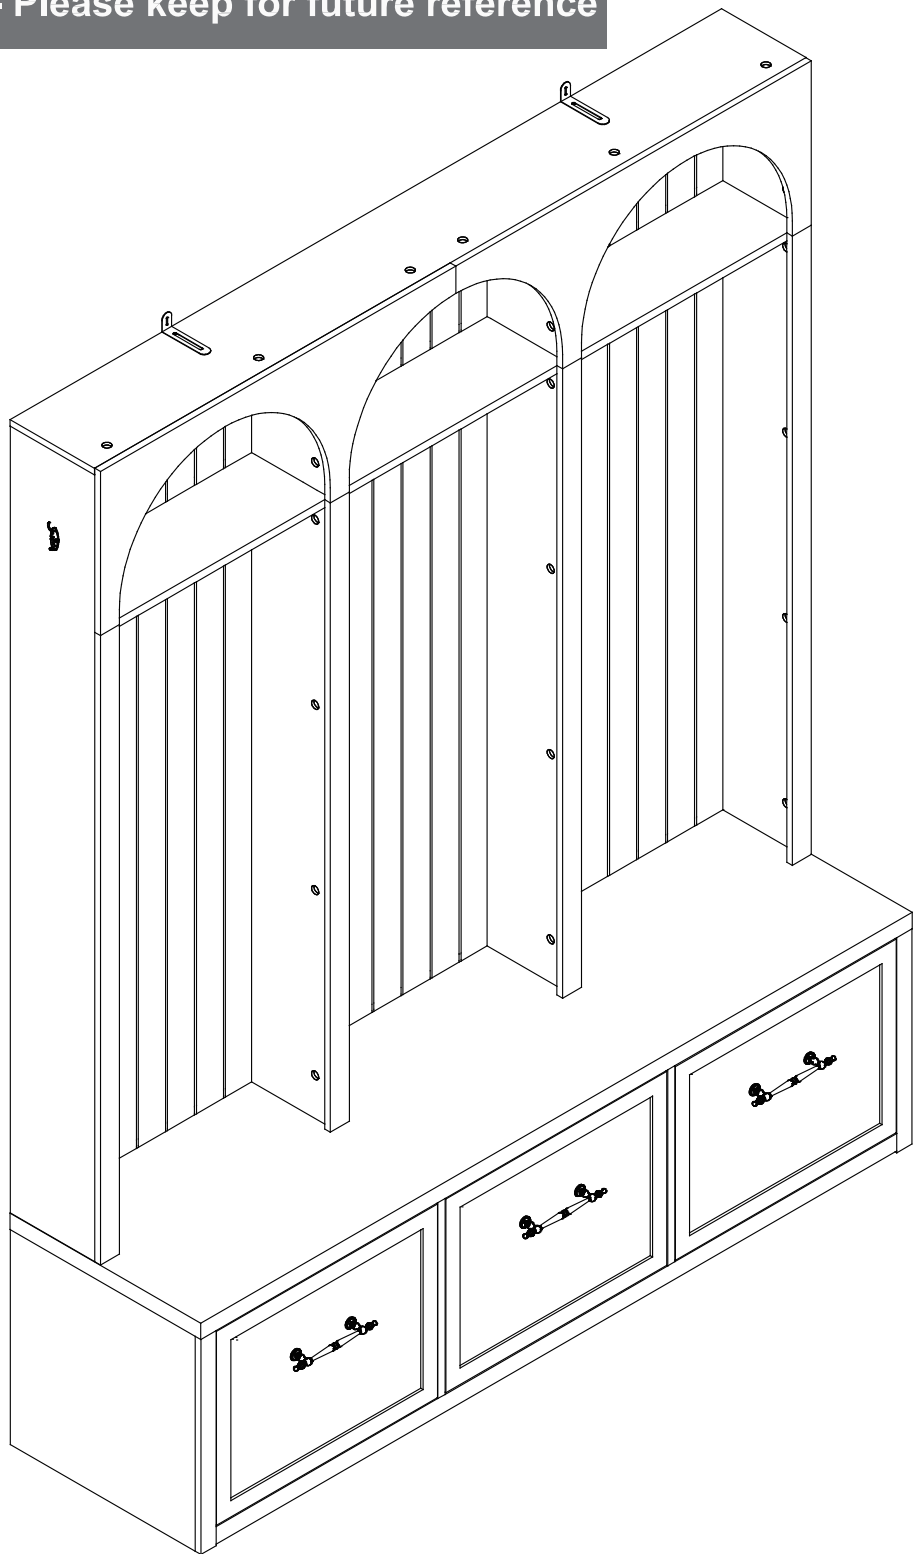

## Dimensions

Width- 59.05inch

Depth-15.75inch

Height-74.8inch

**Important – Please read these instructions fully before starting assembly**



# Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

**WARNING**  
**In order to help prevent overturning –**  
**please follow these instructions**






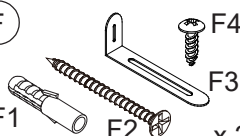




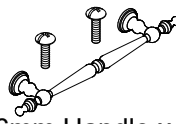





To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)  
Do not allow children to climb or hang on the furniture  
Do not open more than one drawer at a time  
Do not place heavy items in the top drawers  
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


# Components - Fittings

Please check you have all the panels listed below



Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

|  |  |  |  |
|--|--|--|--|
| <b>A</b><br><br>Cam Bolt x 108+2    | <b>B</b><br><br>6*30mm Dowel x 69+2 | <b>C</b><br><br>Cam lock x 108+2      | <b>D</b><br><br>Slide x6              |
| <b>E</b><br><br>3*12mm Screw x 24+2 | <b>F</b><br><br>F1 F2 F3 F4 x 2set  | <b>G</b><br><br>4*40mm Screw x 12+1   | <b>H</b><br><br>4*30mm Screw x 12+1   |
| <b>I</b><br><br>3*14mm Hook x 2set  | <b>J</b><br><br>x 36set             | <b>K</b><br><br>4*16mm Handle x 3set | <b>L</b><br><br>Light wood color x 28 |
| <b>M</b><br><br>Allen key x 1      | <b>N</b><br><br>4*25mm Screw x 4    | <b>O</b><br><br>3*16mm Hook x 6set  | <b>P</b><br><br>Perfect fit x 28      |

**Tools required** Not Included



Phillips screwdriver  
(medium & large)

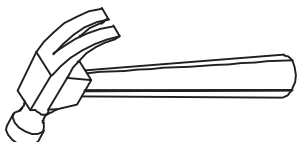


# Using Camlocks

## Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.  
NE PAS SERRER EXCESSIVEMENT.

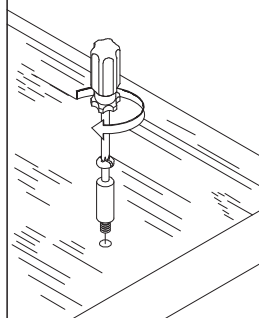

## Step 2

Push the male camlock into the entry hole.

2

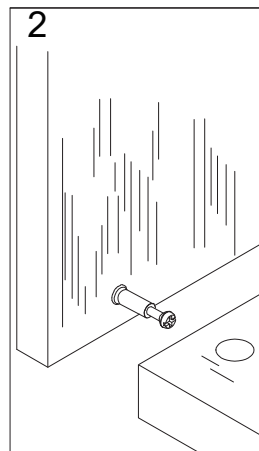


## Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

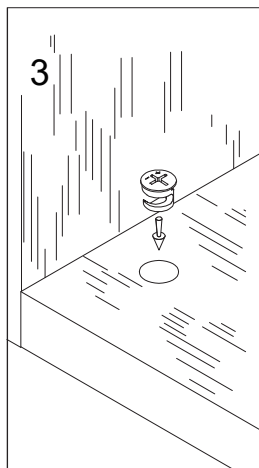


## Step 4

Turn the female camlock clockwise with a screwdriver.



You should feel a click when the camlock is locked in place.

The joint is now secure.

4

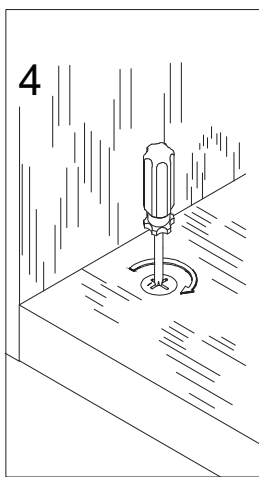





# Assembly Instructions




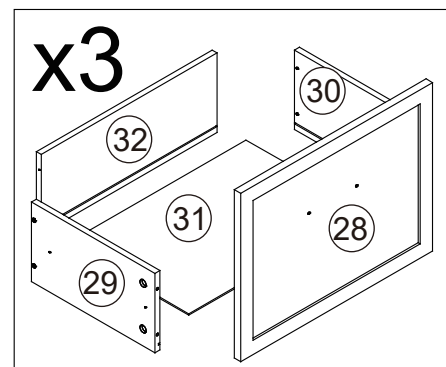
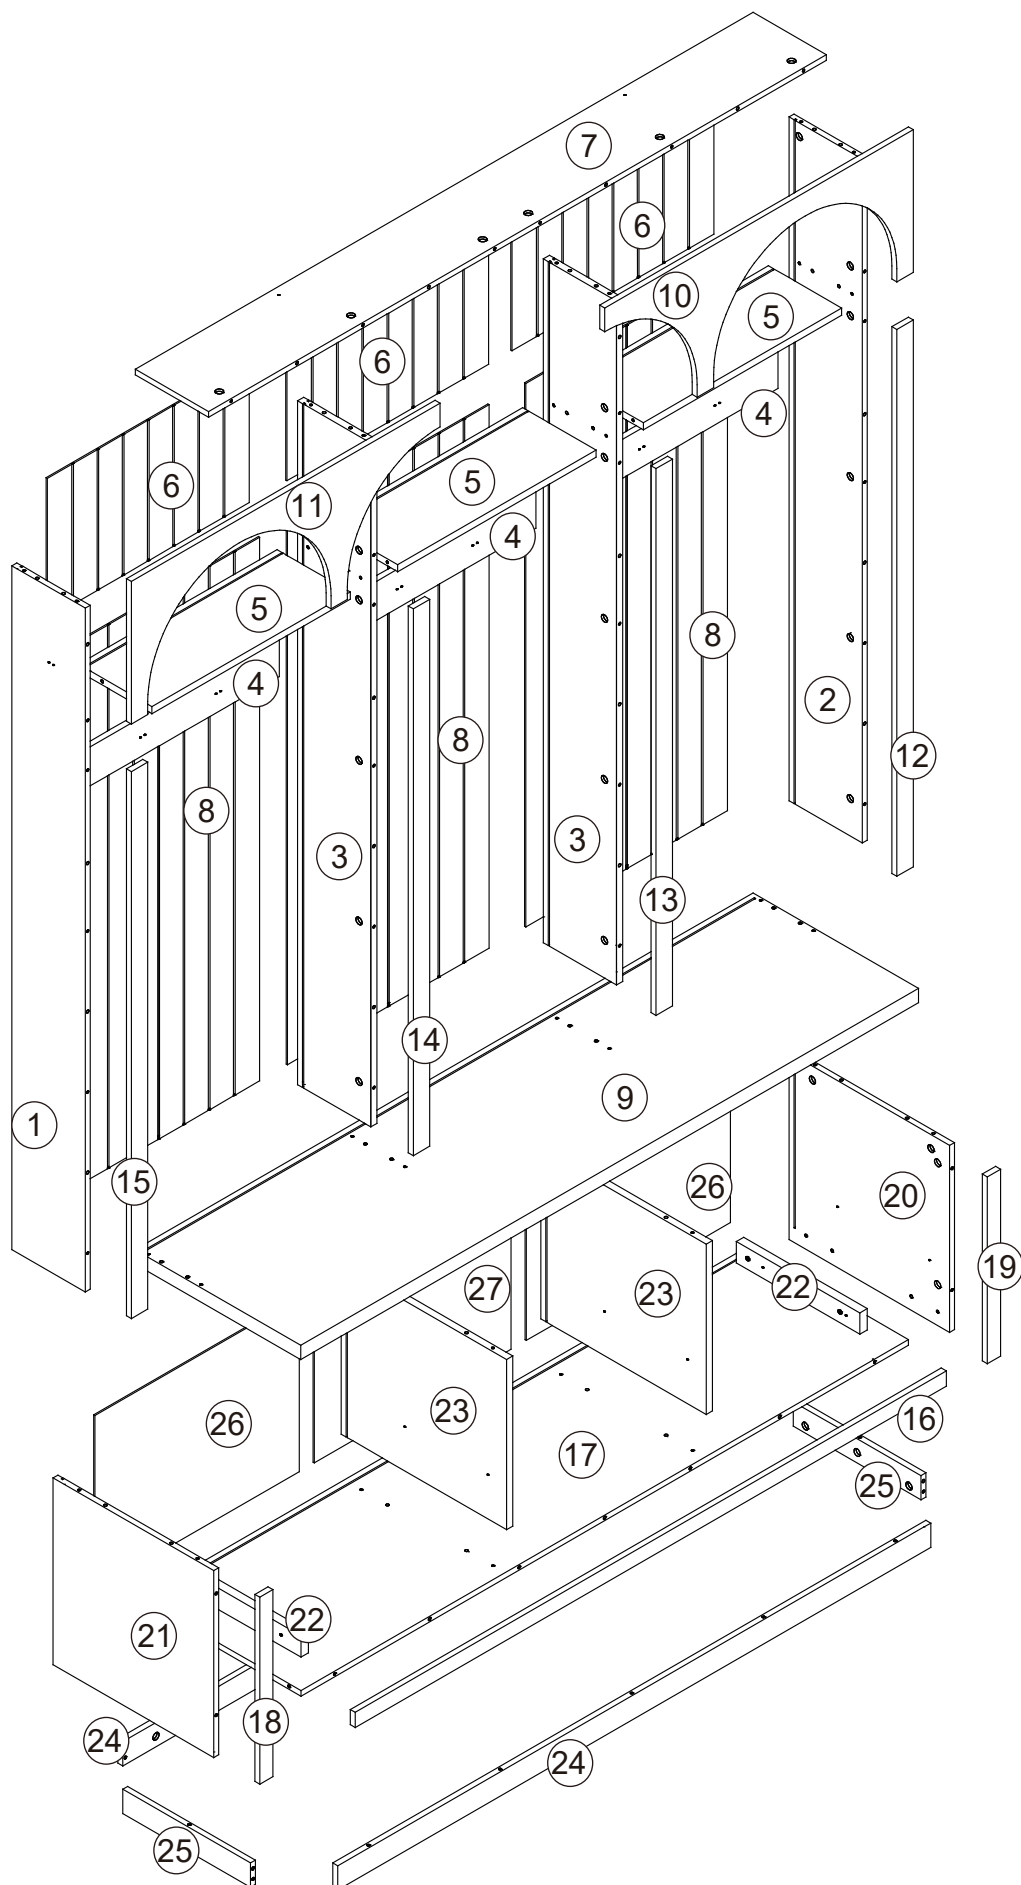







# PART LIST






This product comes in 1 box.

N721P324463










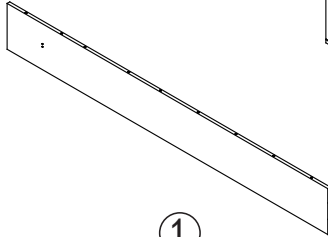
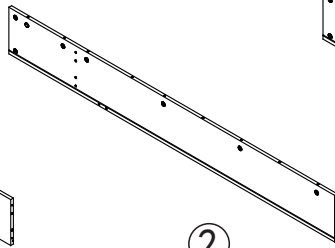
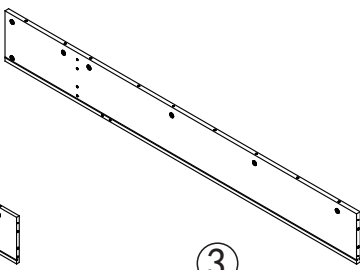
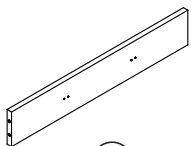
|   |   |  |   |
|---|---|--|---|
|  |  |  |  |
| ①<br>x1<br>1440x188x12mm  | ②<br>x1<br>1440x188x12mm  | ③<br>x2<br>1440x188x15mm   | ④<br>x3<br>482x82x12mm  |
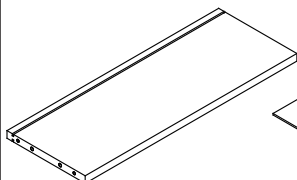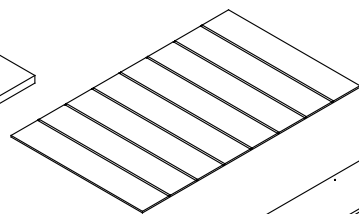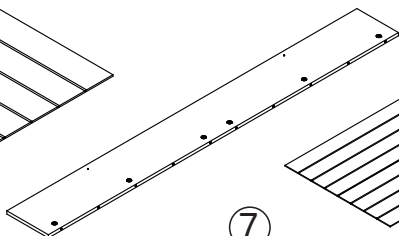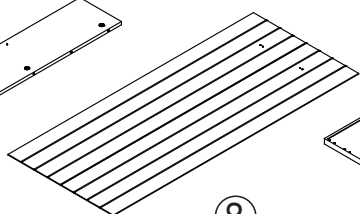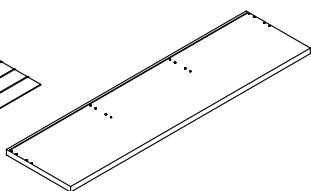
|   |  |   |   |  |
|---|--|---|---|--|
|  |  |  |  |  |
| ⑤<br>x3<br>482x188x15mm   | ⑥<br>x3<br>490x296x3mm   | ⑦<br>x1<br>1501x188x12mm  | ⑧<br>x3<br>1144x490x3mm   | ⑨<br>x1<br>1501x400x30mm   |
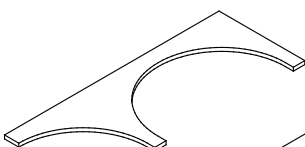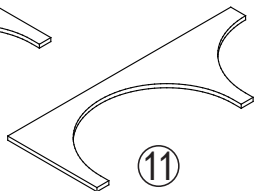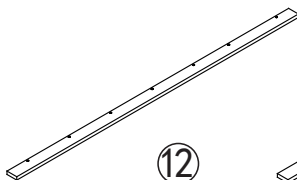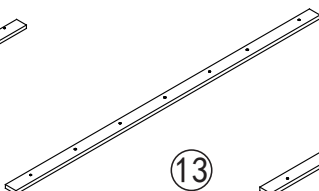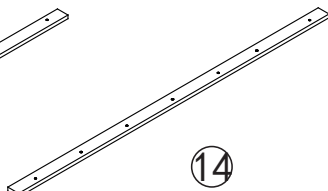
|   |   |   |  |   |
|---|---|---|--|---|
|  |  |  |  |  |
| ⑩<br>x1<br>750x300x12mm   | ⑪<br>x1<br>750x300x12mm   | ⑫<br>x1<br>1151x40x12mm   | ⑬<br>x1<br>1151x40x12mm  | ⑭<br>x1<br>1151x40x12mm   |

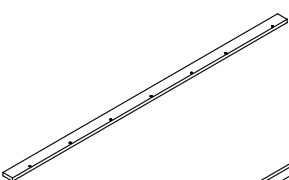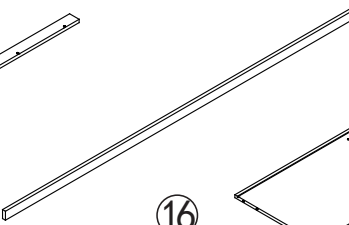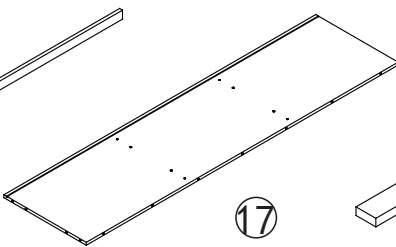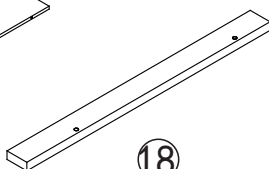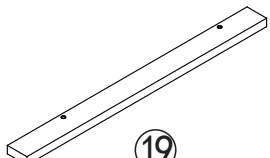
|   |   |   |  |   |
|---|---|---|--|---|
|  |  |  |  |  |
| ⑮<br>x1<br>1151x40x12mm   | ⑯<br>x1<br>1438x32x12mm   | ⑰<br>x1<br>1477x388x12mm  | ⑱<br>x1<br>391x32x12mm   | ⑲<br>x1<br>391x32x12mm  |

# PART LIST

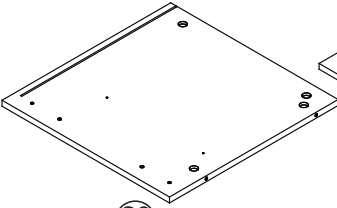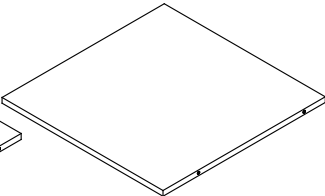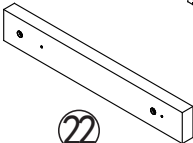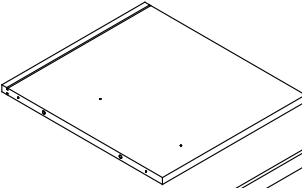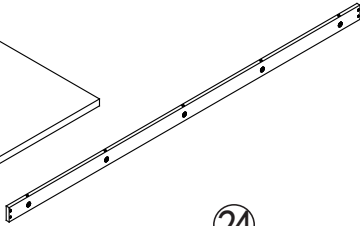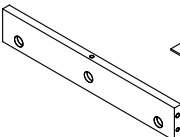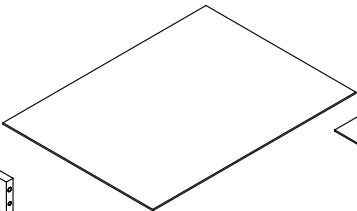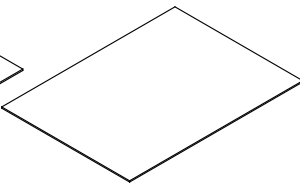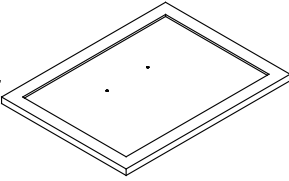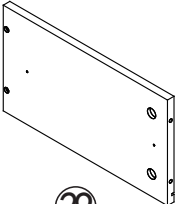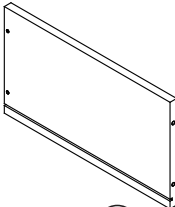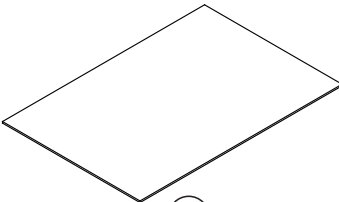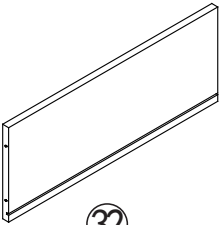
|   |  |   |   |  |
|---|--|---|---|--|
|  <p>②①<br/>x1<br/>391x388x12mm</p>   |  <p>②①<br/>x1<br/>391x388x12mm</p>  |  <p>②②<br/>x2<br/>300x45x18mm</p>    |  <p>②③<br/>x2<br/>400x358x15mm</p>  |  <p>②④<br/>x2<br/>1441x51x12mm</p>  |
|  <p>②⑤<br/>x2<br/>310x51x12mm</p>   |  <p>②⑥<br/>x2<br/>496x366x3mm</p>  |  <p>②⑦<br/>x1<br/>478x366x3mm</p>   |  <p>②⑧<br/>x3<br/>466x354x17mm</p> |  <p>②⑨<br/>x3<br/>300x167x12mm</p> |
|  <p>③①<br/>x3<br/>300x167x12mm</p> |  <p>③②<br/>x3<br/>435x296x3mm</p> |  <p>③③<br/>x3<br/>427x167x12mm</p> |   |  |

# Assembly Instructions

## Step 1

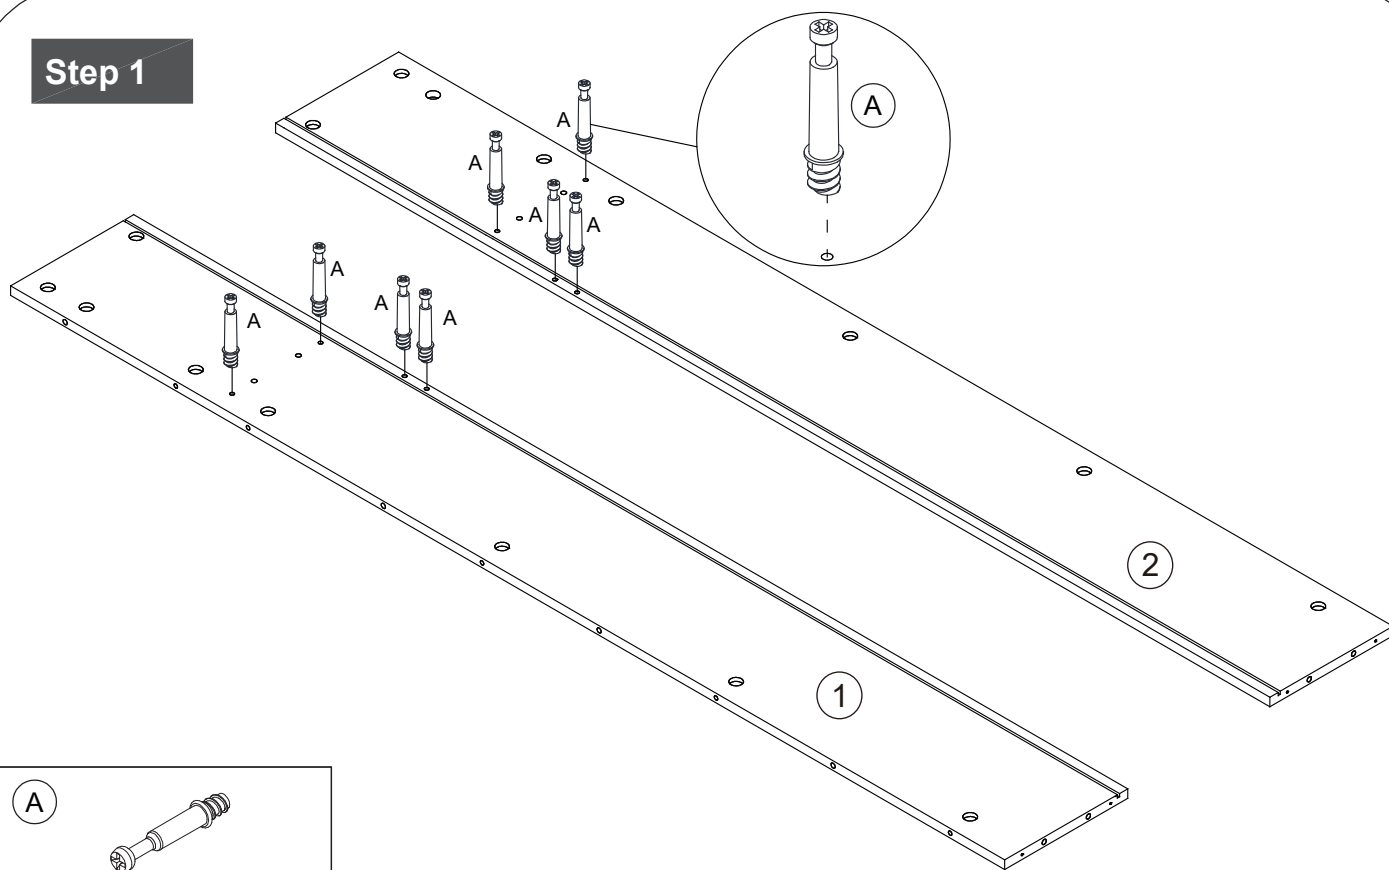


A




Cam Bolt x 8

## Step 2

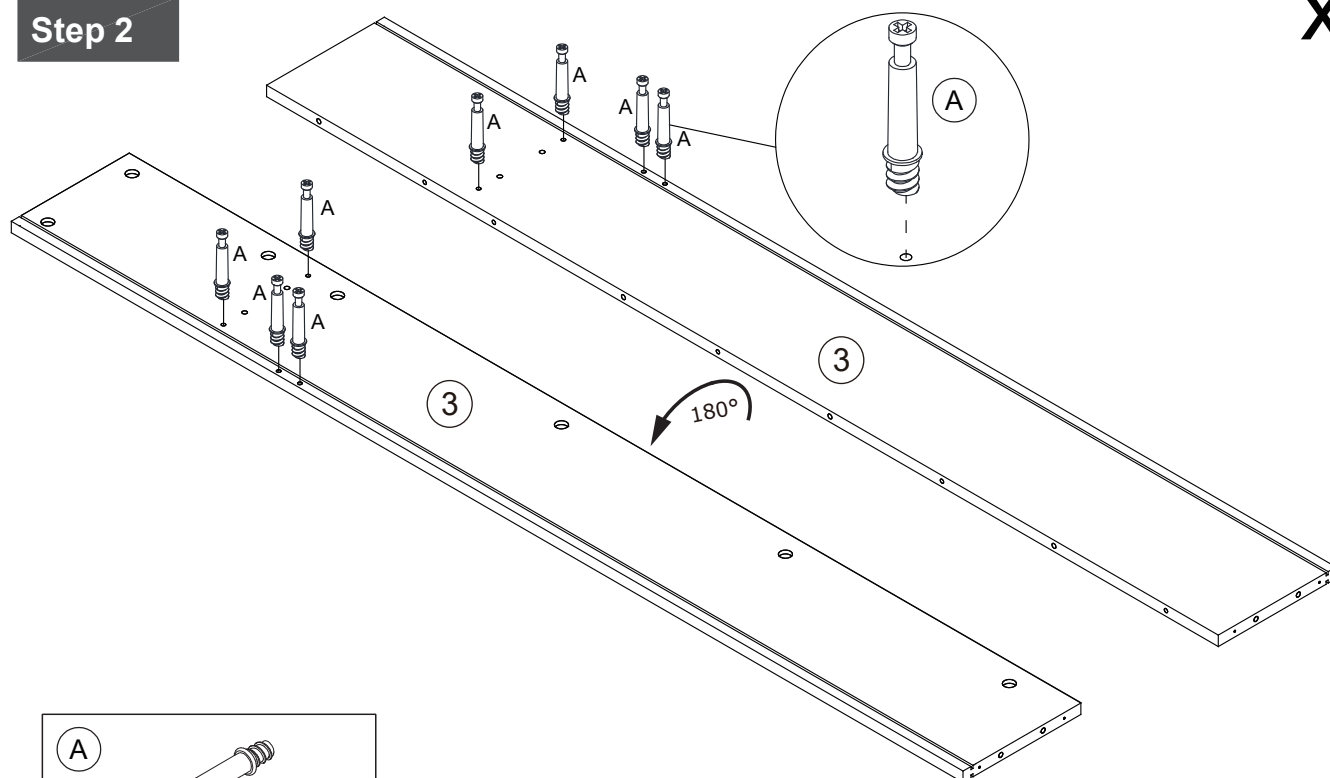

A




Cam Bolt x 16

x2

# Assembly Instructions

## Step 3

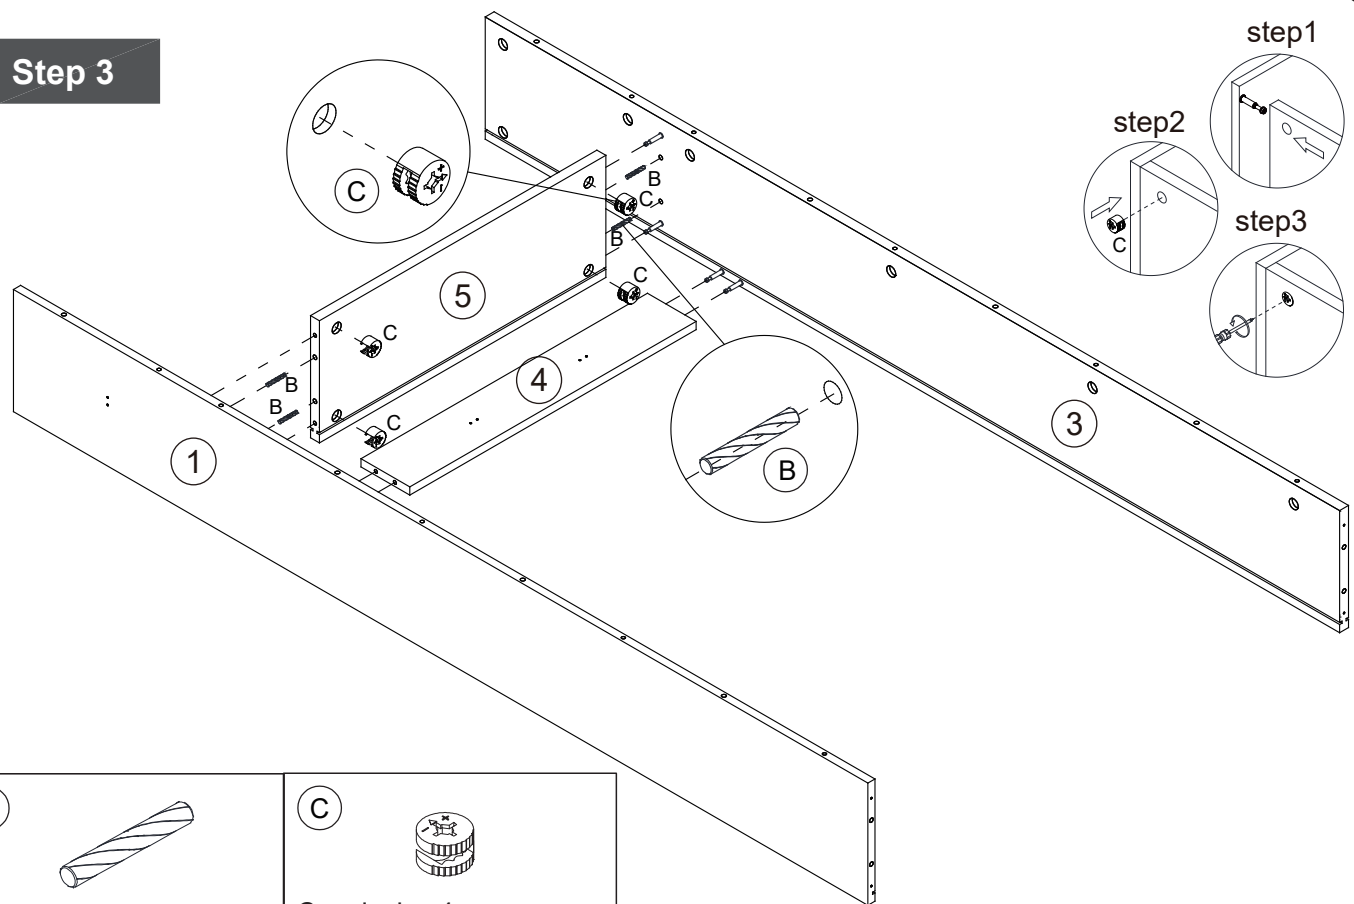

(B)




6\*30mm Dowel x 4

(C)



Cam lock x 4

## Step 4

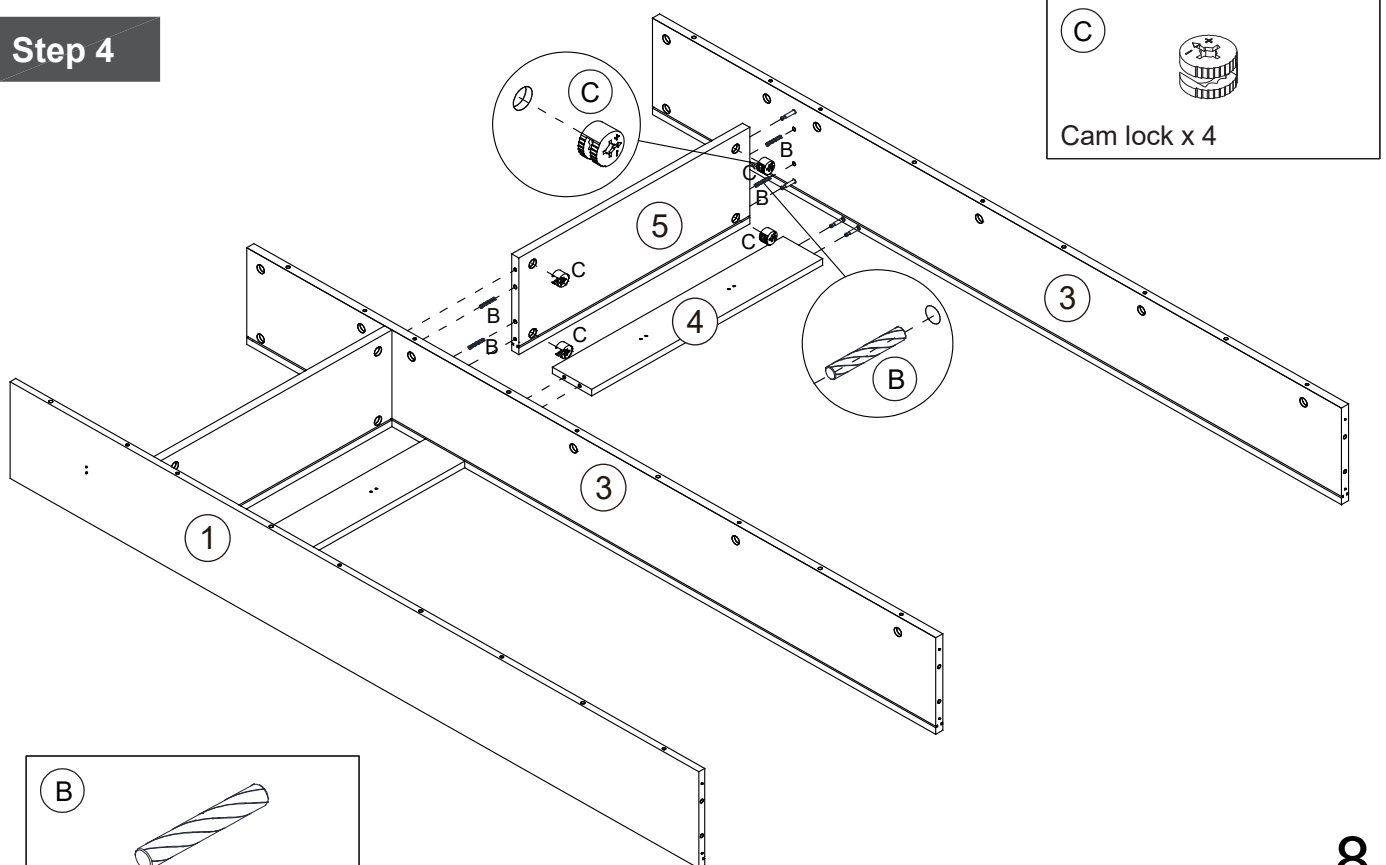

(B)



6\*30mm Dowel x 4


(C)




Cam lock x 4

# Assembly Instructions

## Step 5

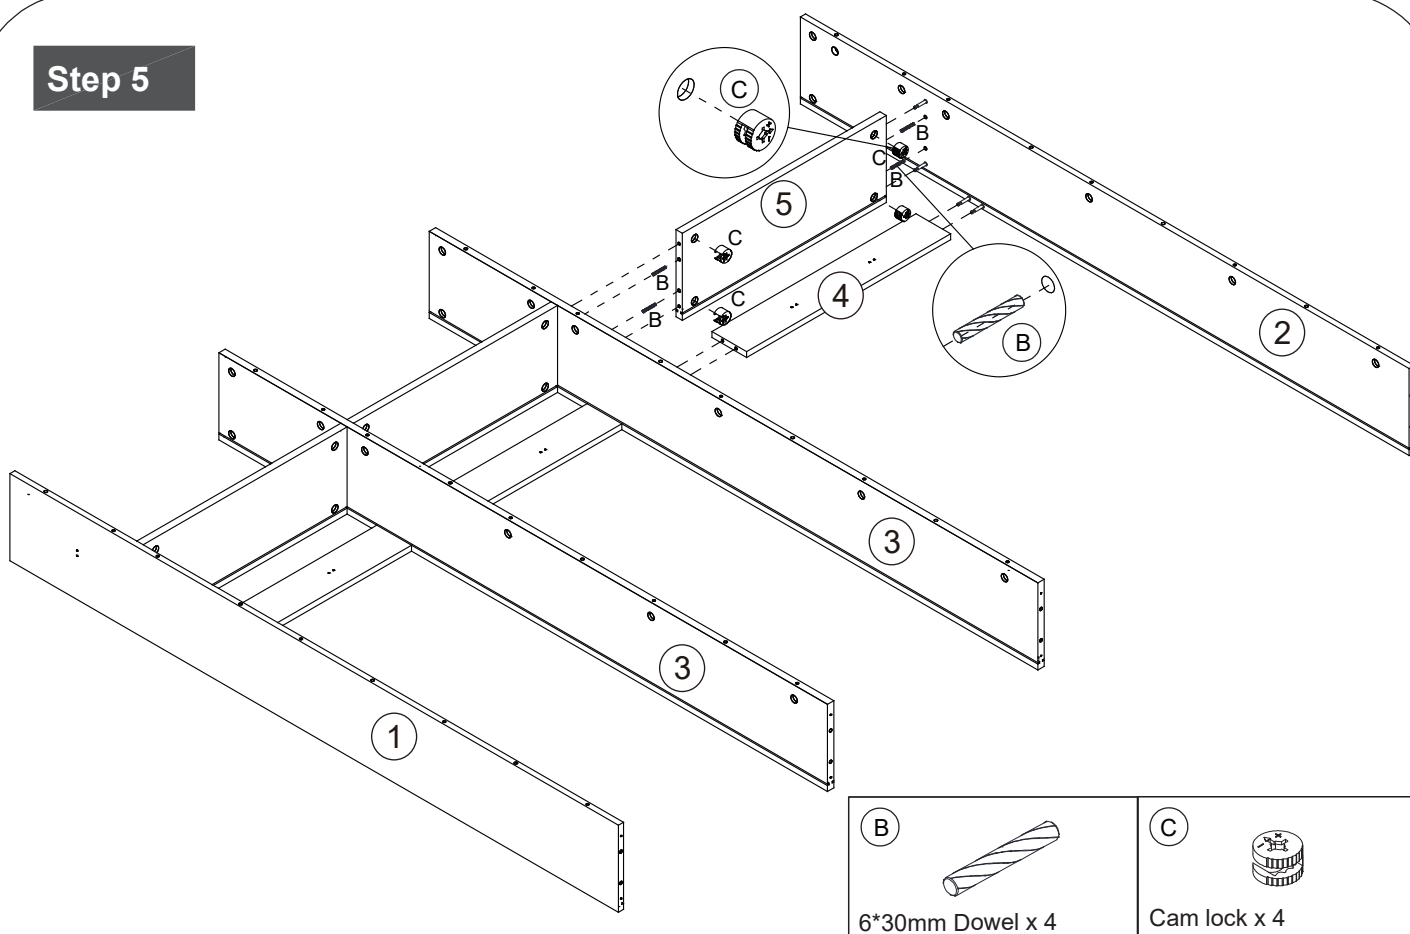


## Step 6

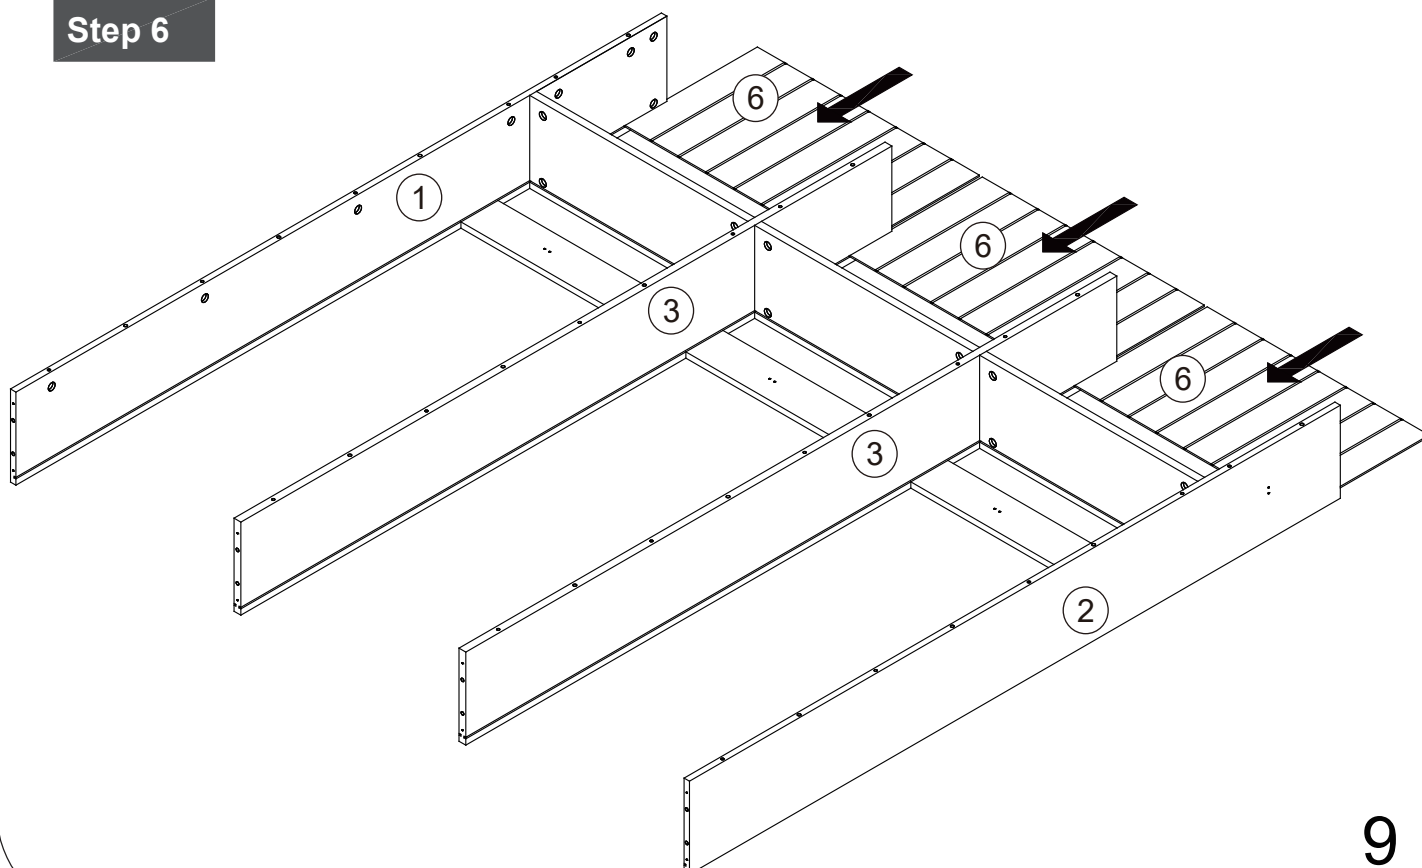


# Assembly Instructions

## Step 7

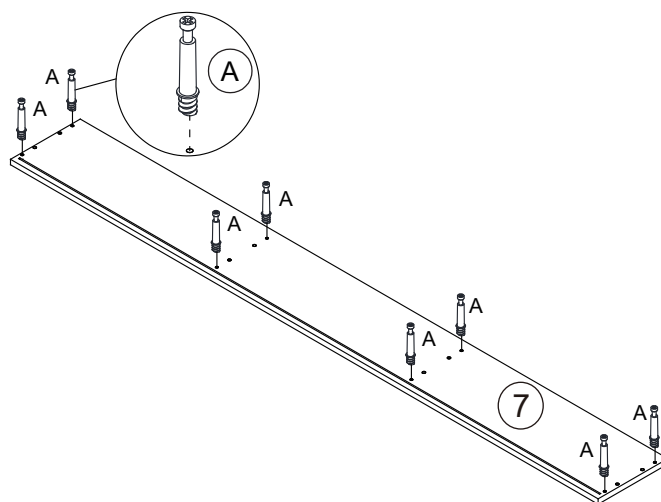


(A)



Cam Bolt x 8

## Step 8

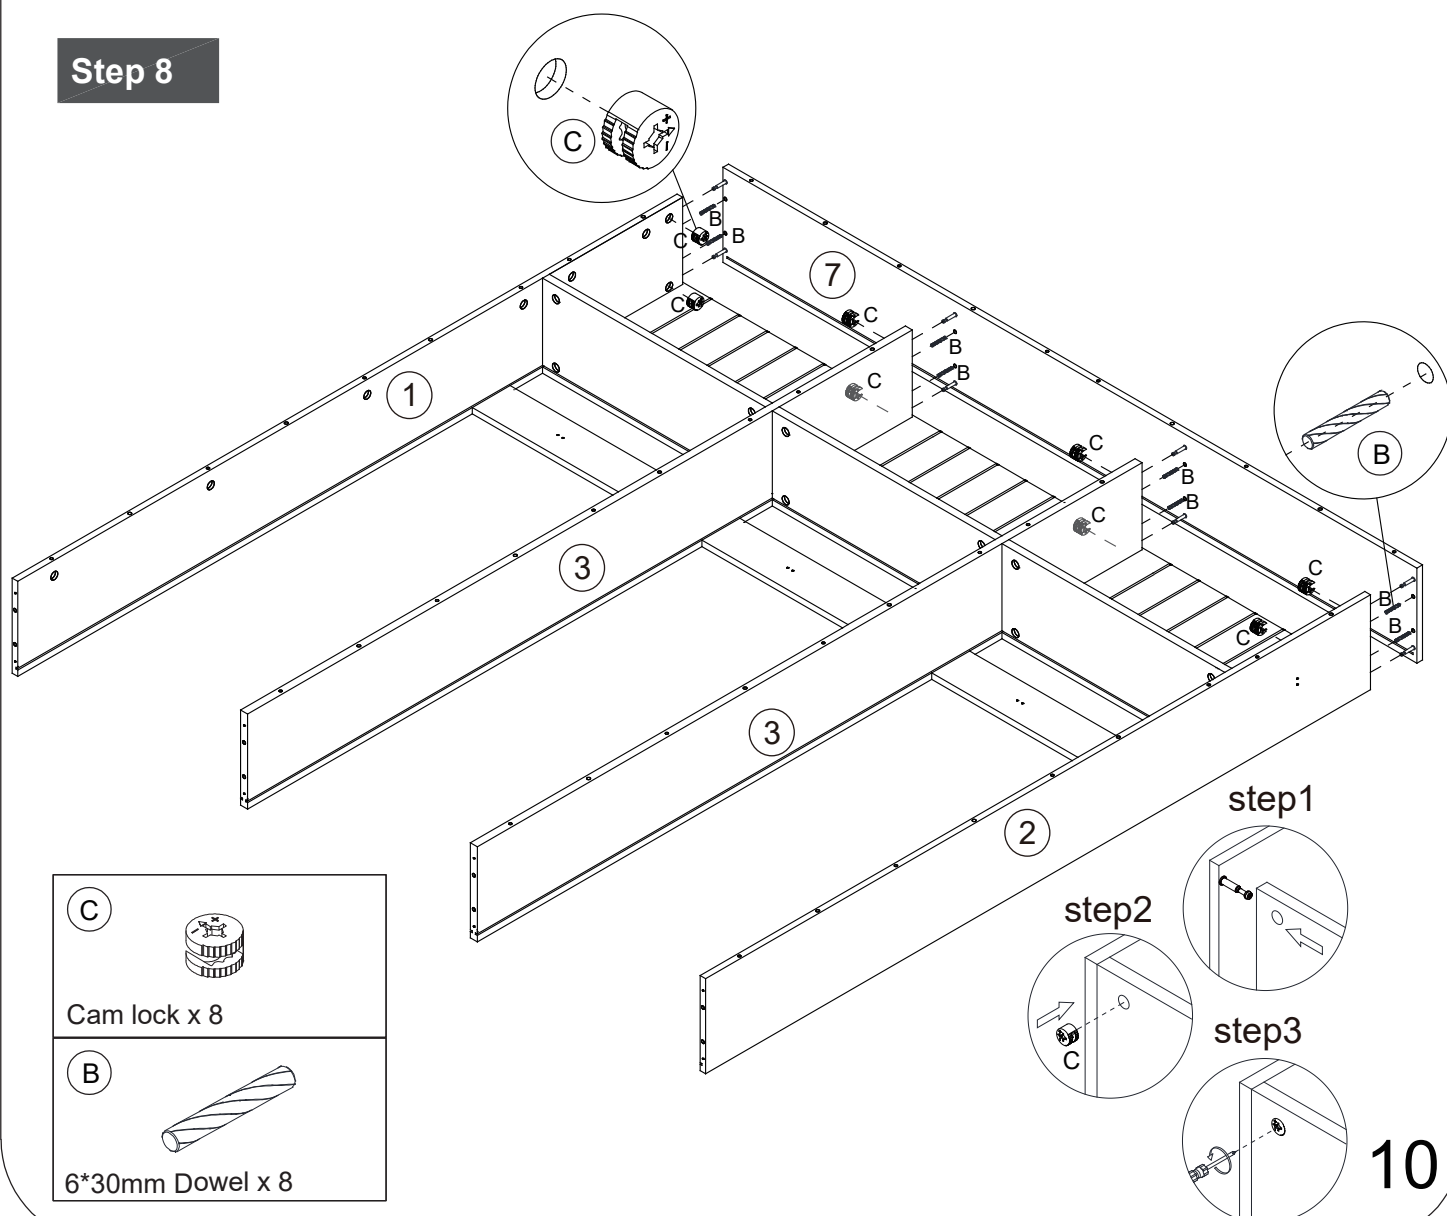

(C)



Cam lock x 8

(B)



6\*30mm Dowel x 8


step1

step2

step3

# Assembly Instructions

## Step 9

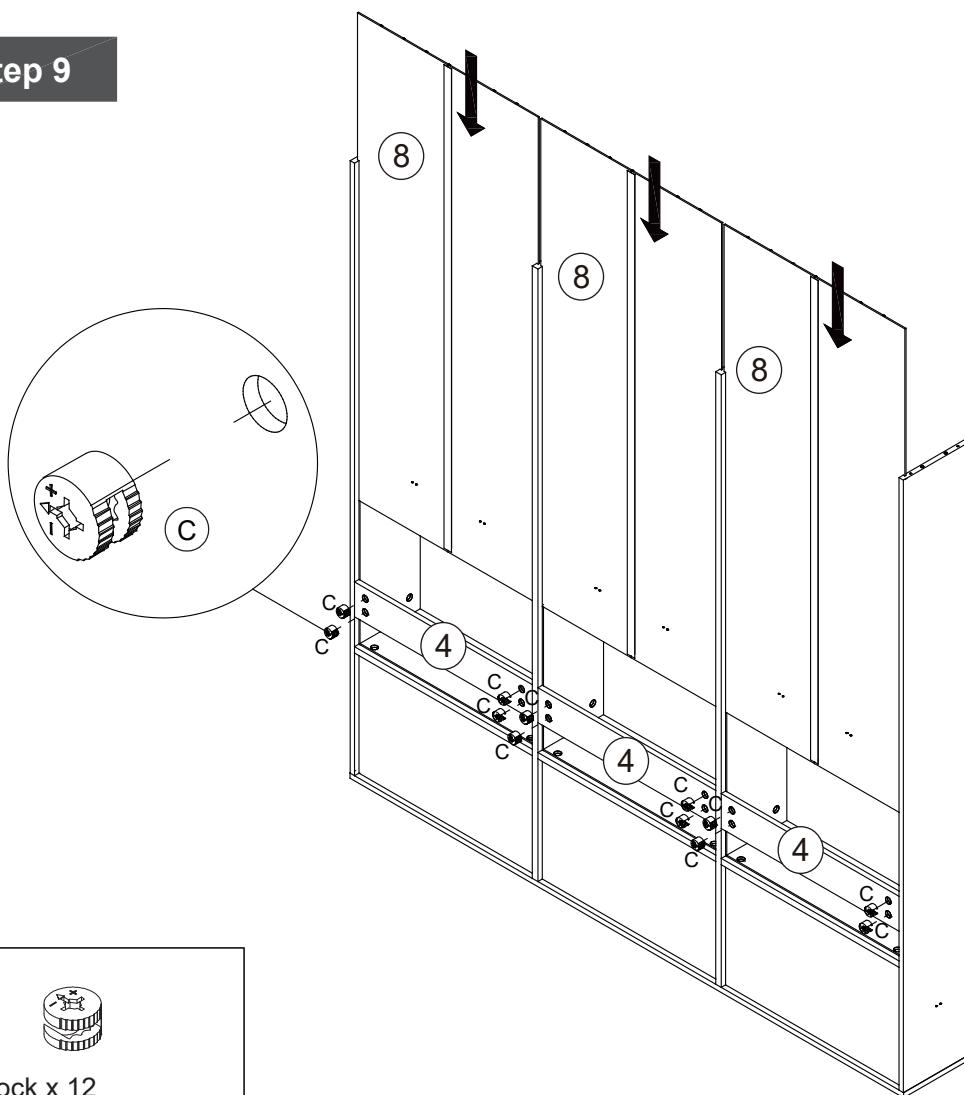


C




Cam lock x 12

## Step 10

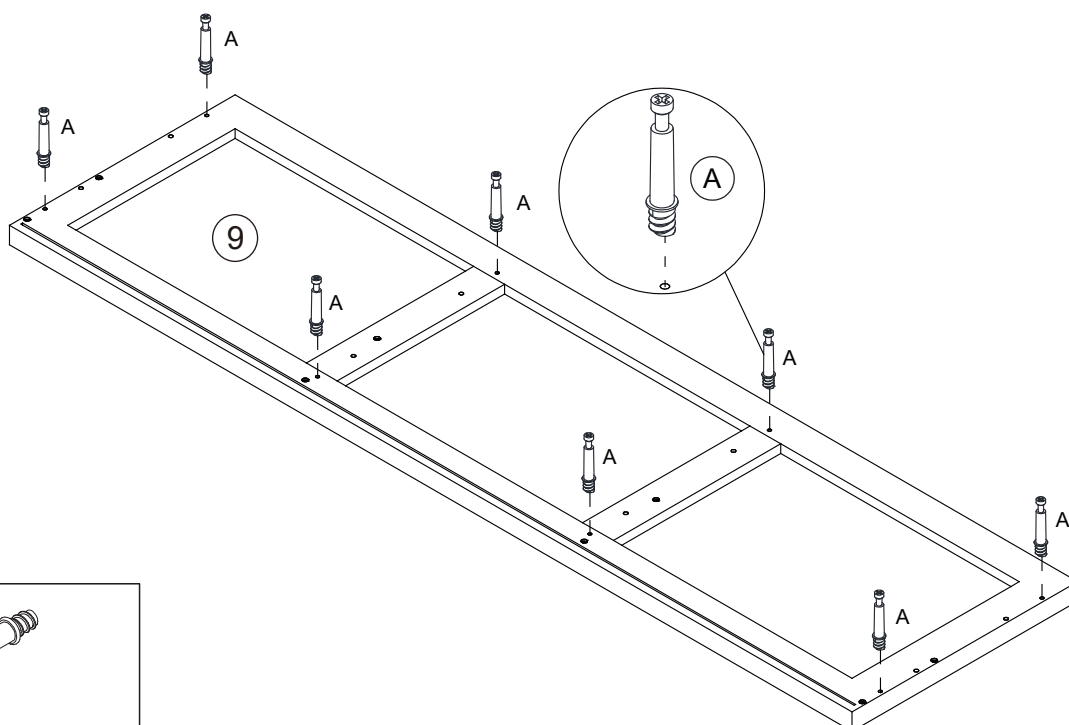

A




Cam Bolt x 8

# Assembly Instructions

## Step 11

Note that when installing panel No.9, one person should hold it to prevent it from falling and causing injury.

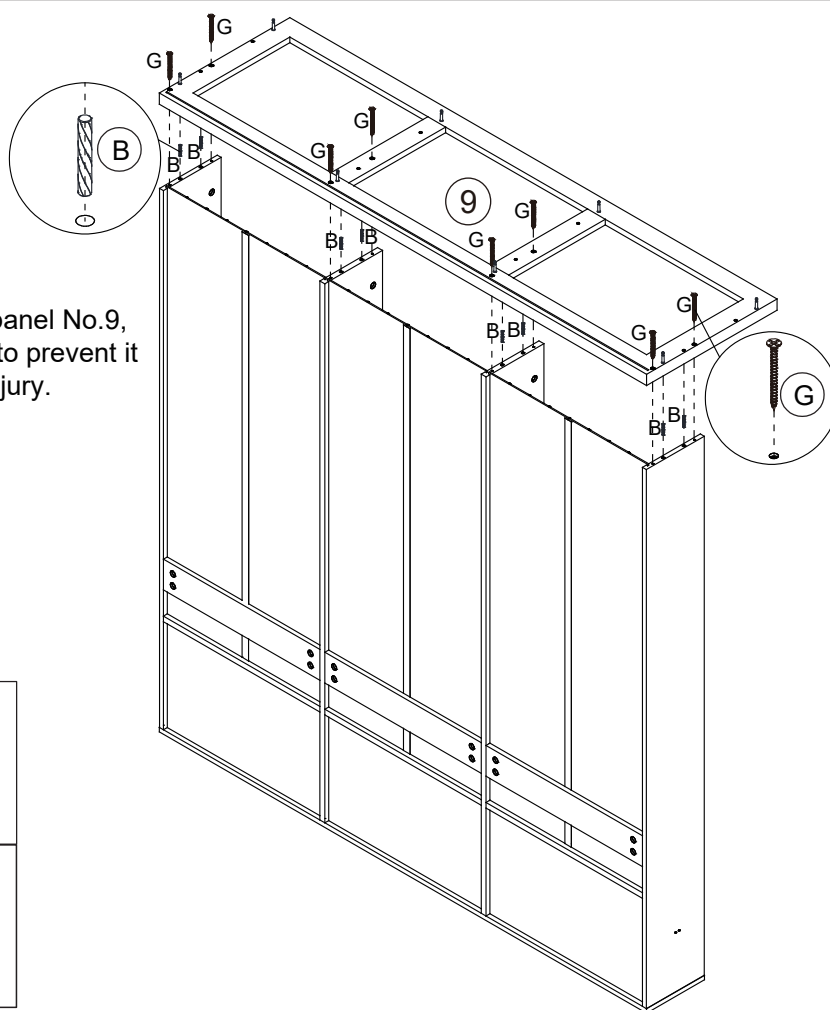


G




4\*40mm Screw x 8

B




6\*30mm Dowel x 8

## Step 12

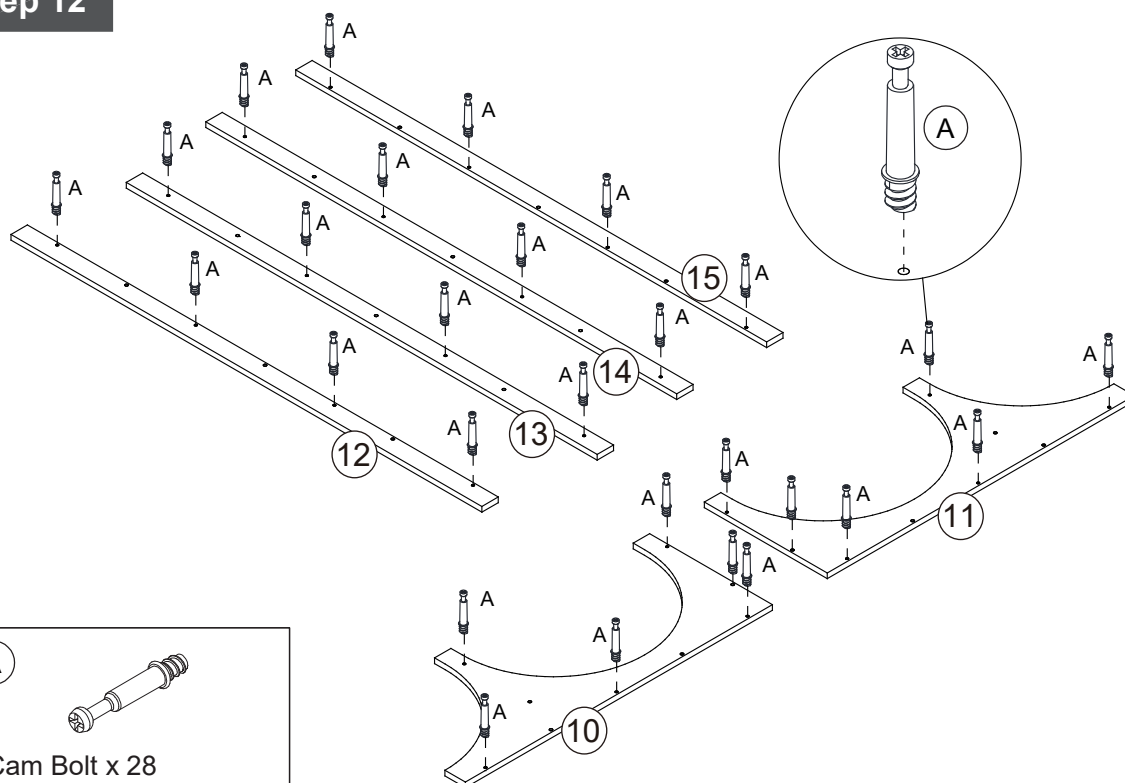

A



Cam Bolt x 28

# Assembly Instructions

## Step 13

F-F4




x 2set

F-F3



x 2set

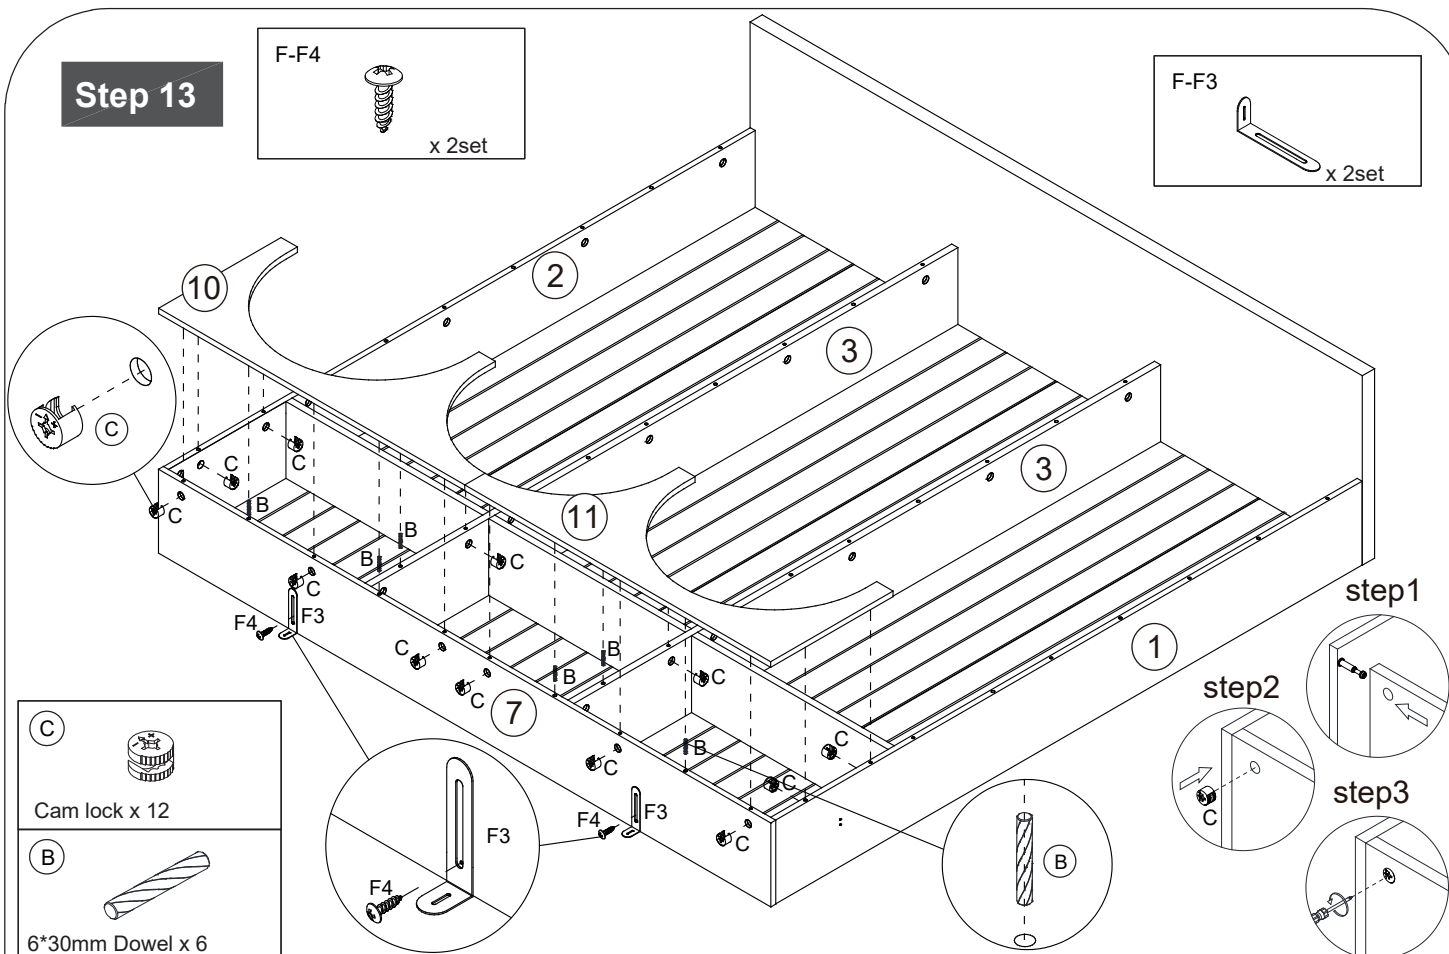

## Step 14

(C)




Cam lock x 16

(B)




6\*30mm Dowel x 12

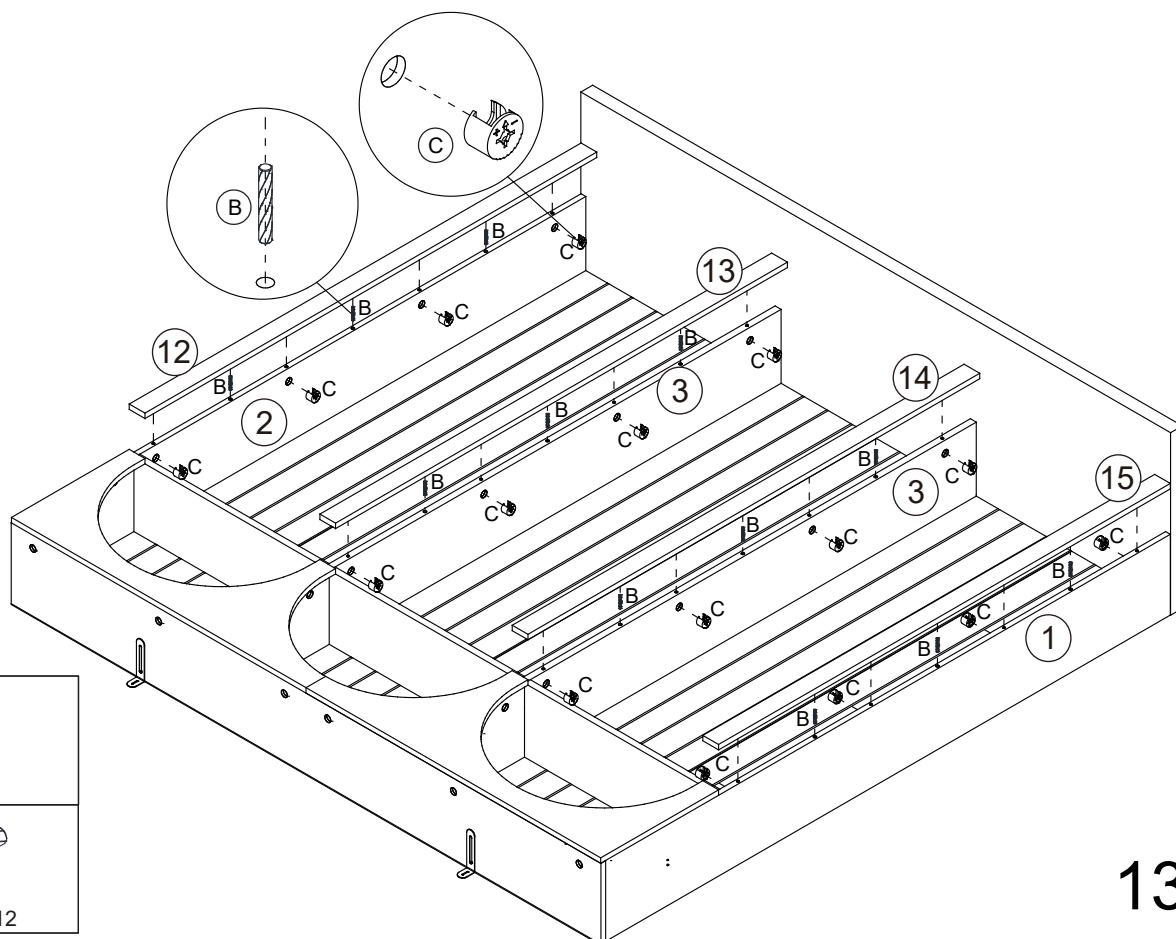


# Assembly Instructions

## Step 15

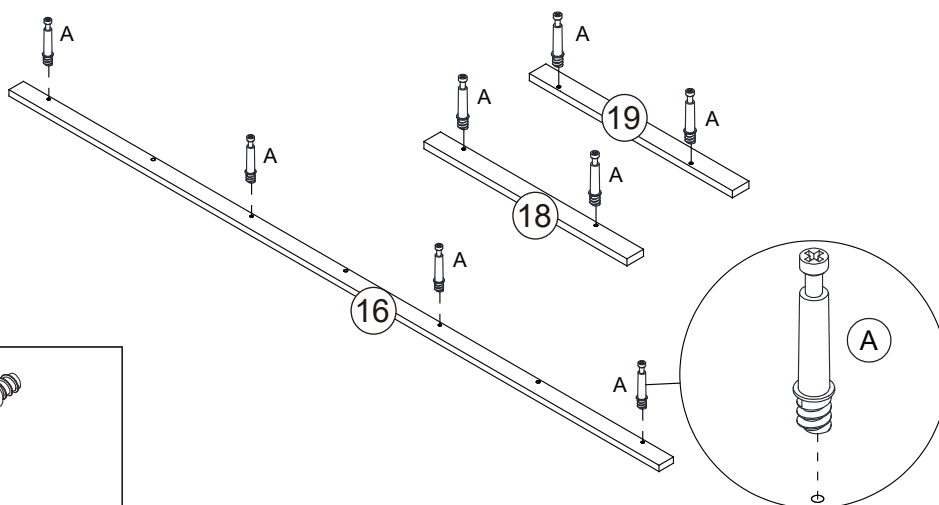


(A)



Cam Bolt x 8

## Step 16

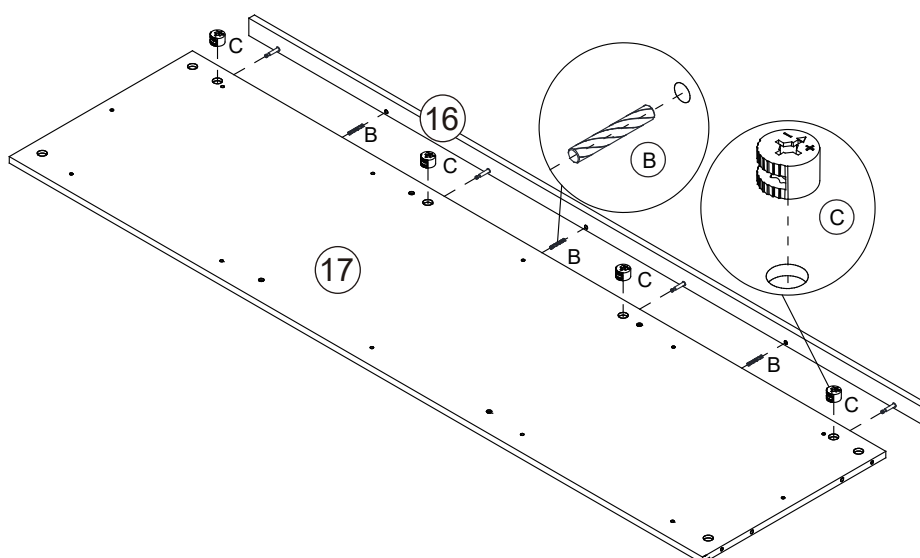

(C)




Cam lock x 4

(B)



6\*30mm Dowel x 3

## Step 17

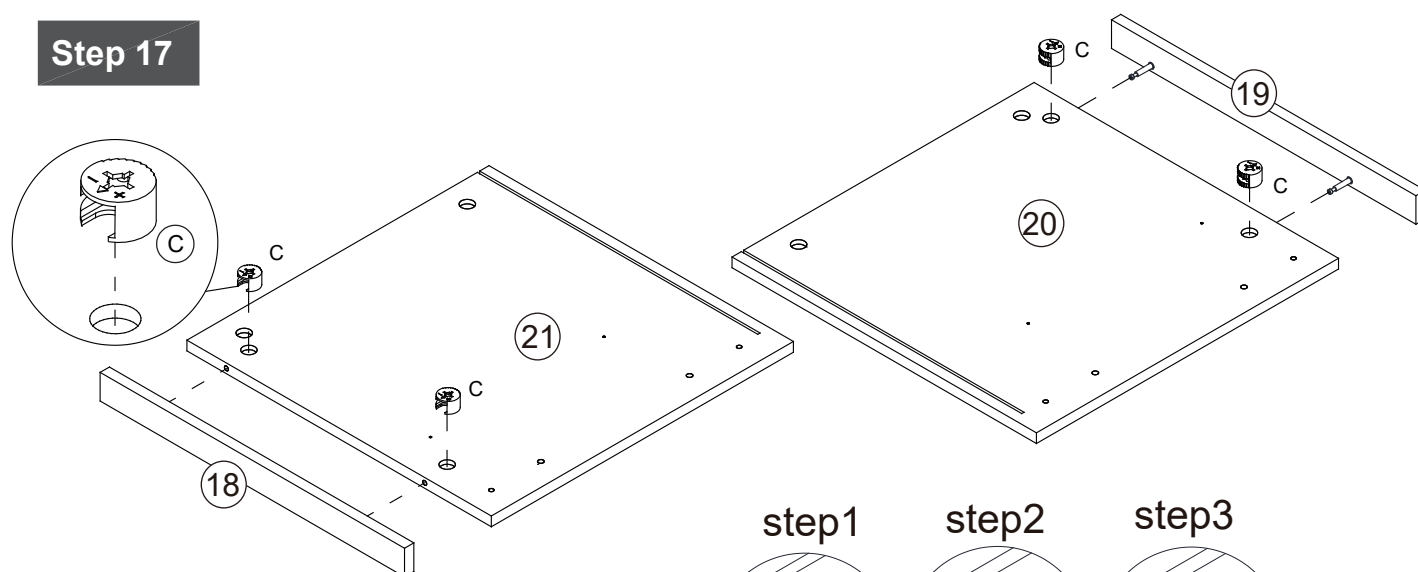

(C)






Cam lock x 4

step1


step2

step3

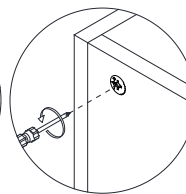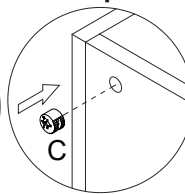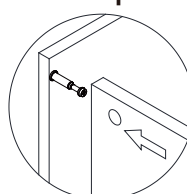

# Assembly Instructions


## Step 18

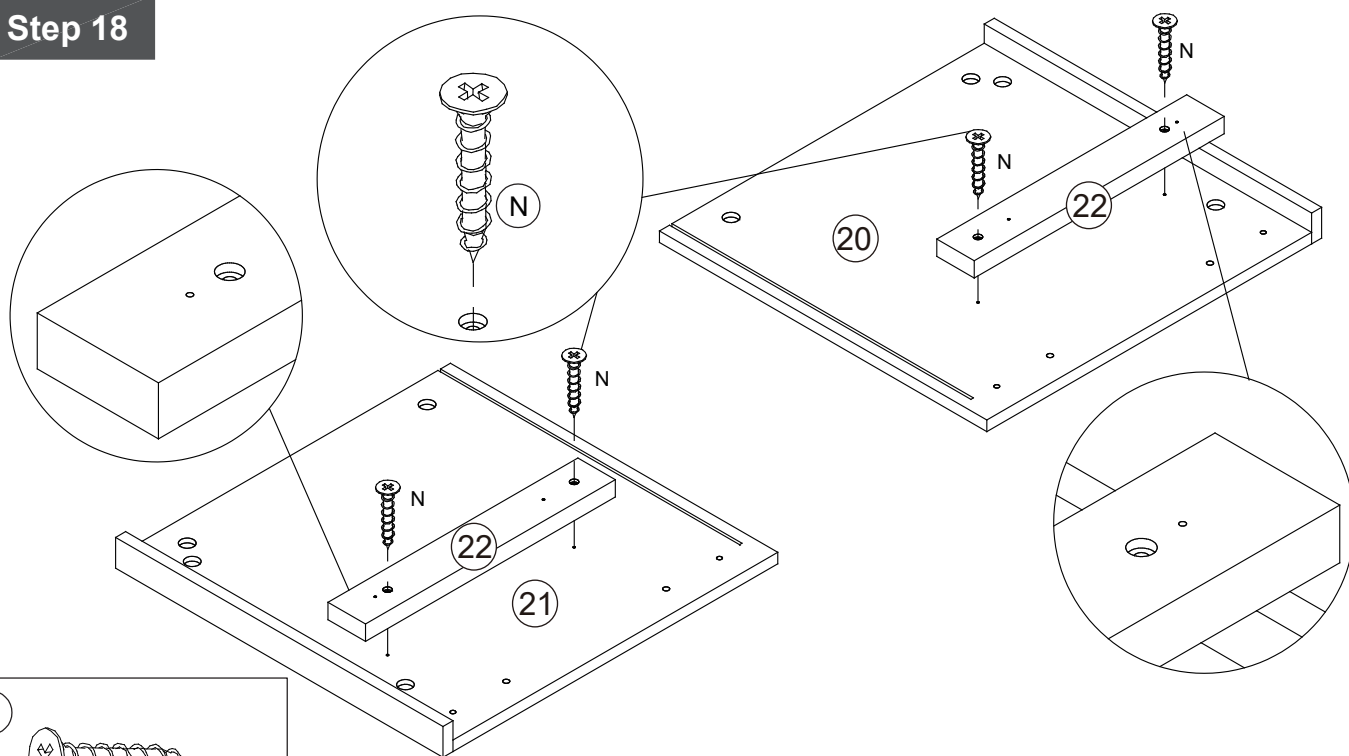

(N)  
4\*25mm Screw x 4


## Step 19

x6

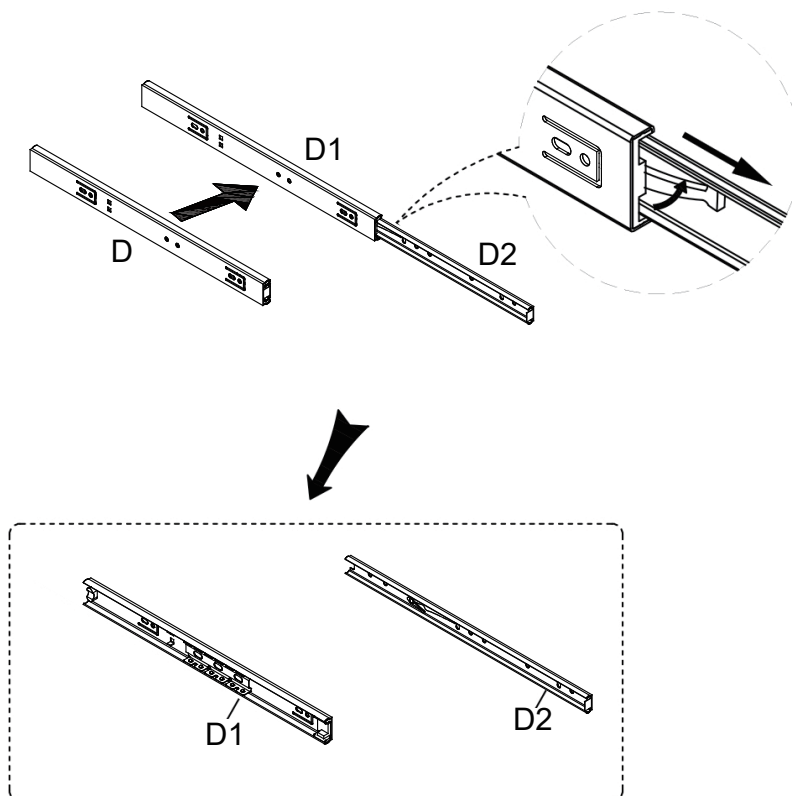

# Assembly Instructions


## Step 19

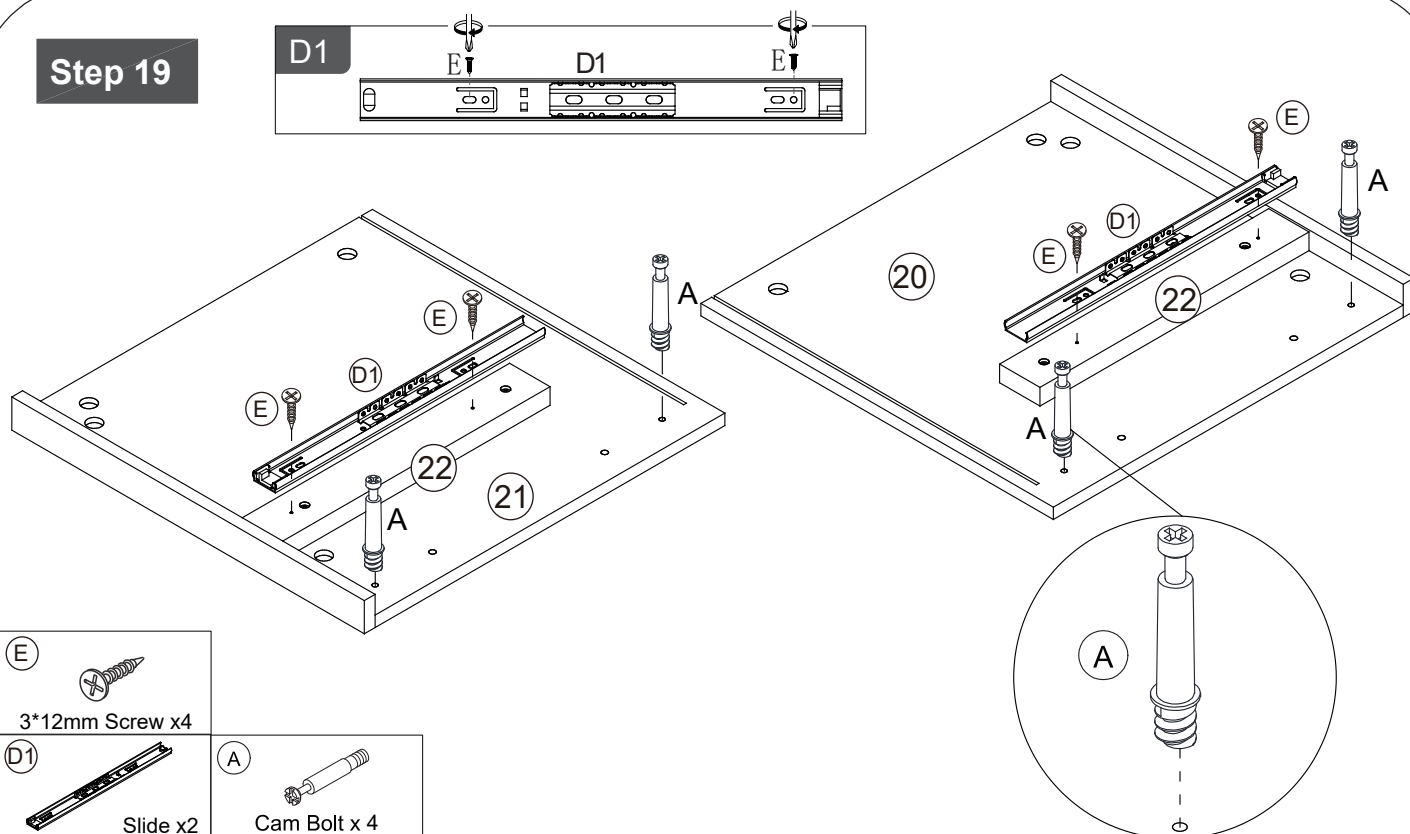

## Step 20



Both sides of the part#23 need to be installed with slide

x2

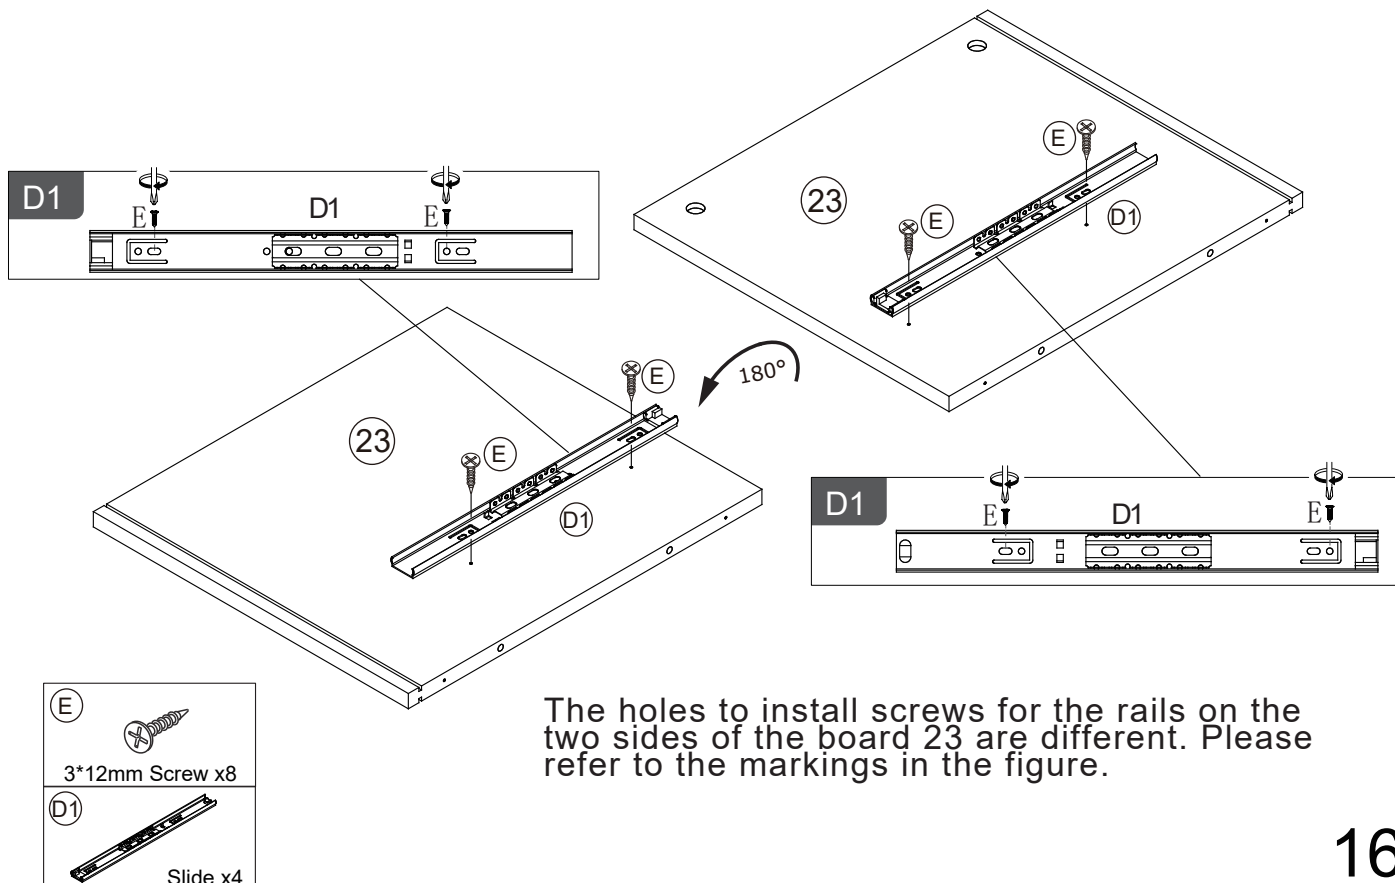

# Assembly Instructions

## Step 21



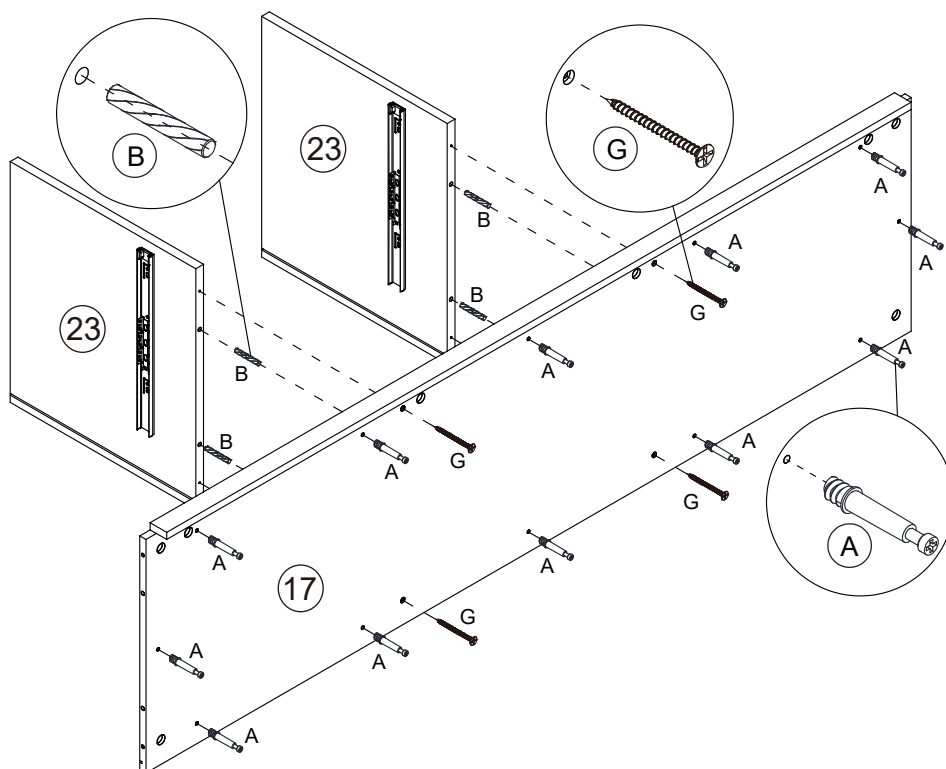
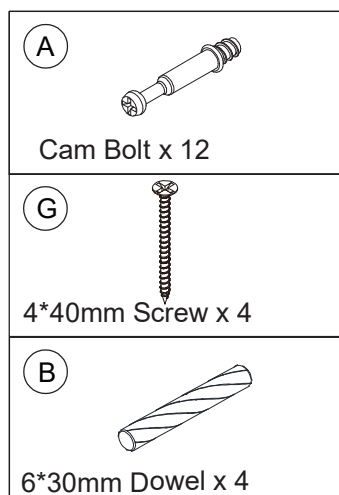


## Step 22

step1


step2

step3

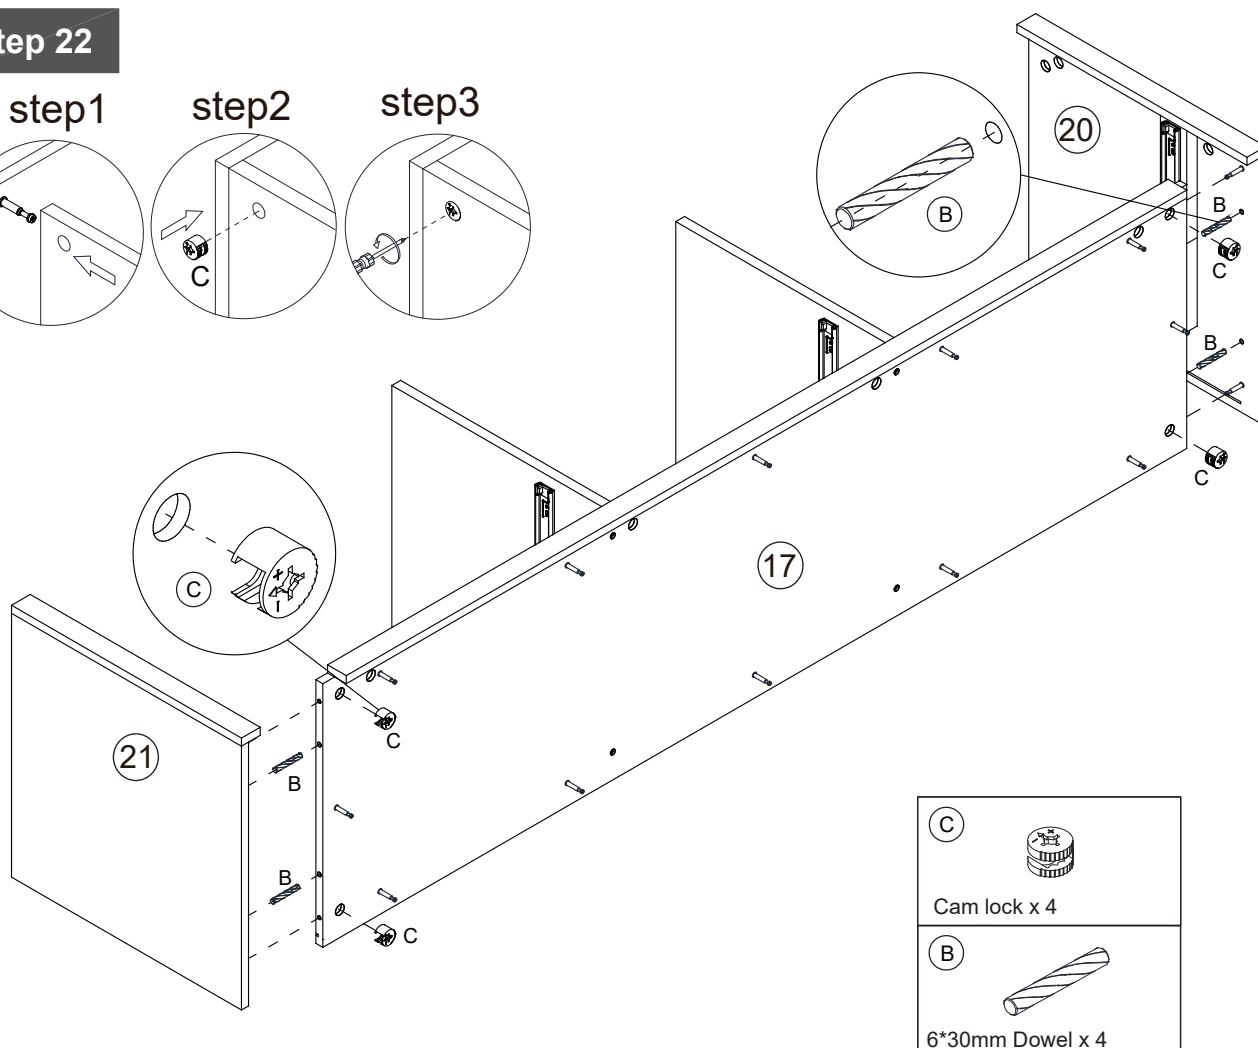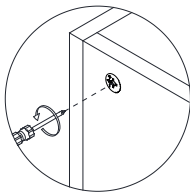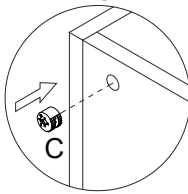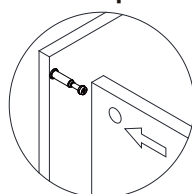


# Assembly Instructions

## Step 23



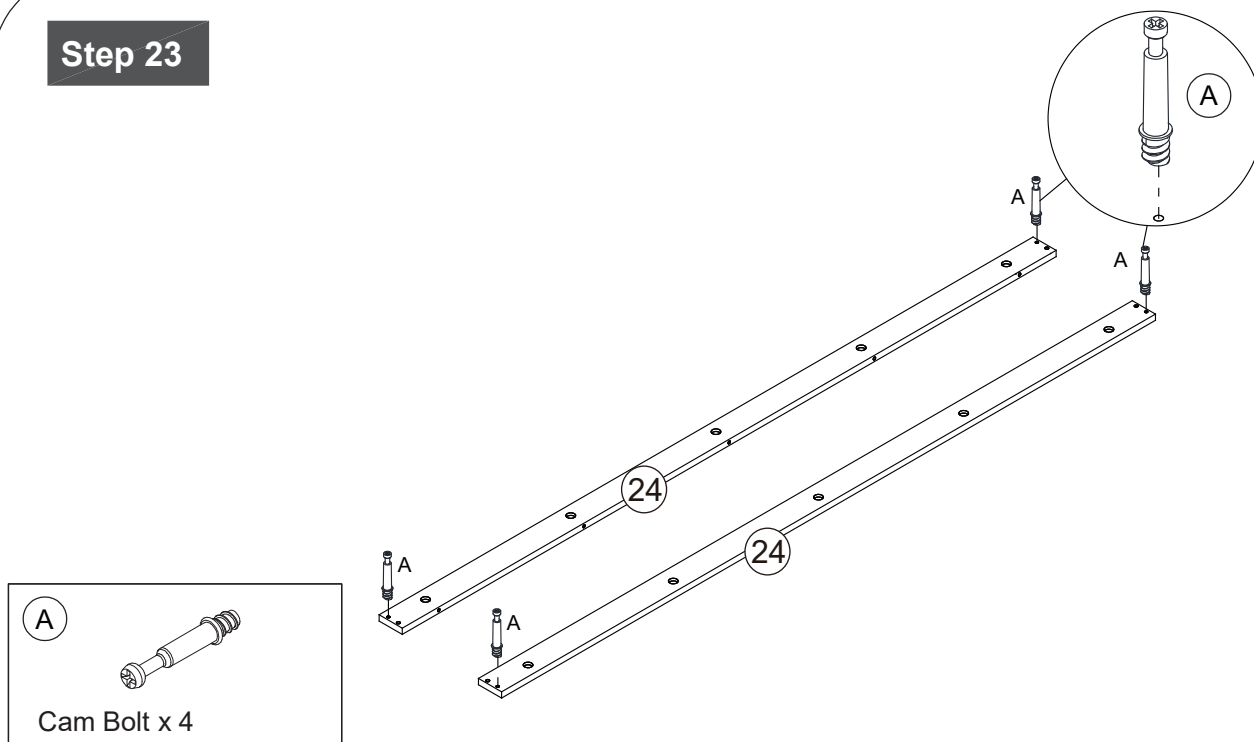


## Step 24

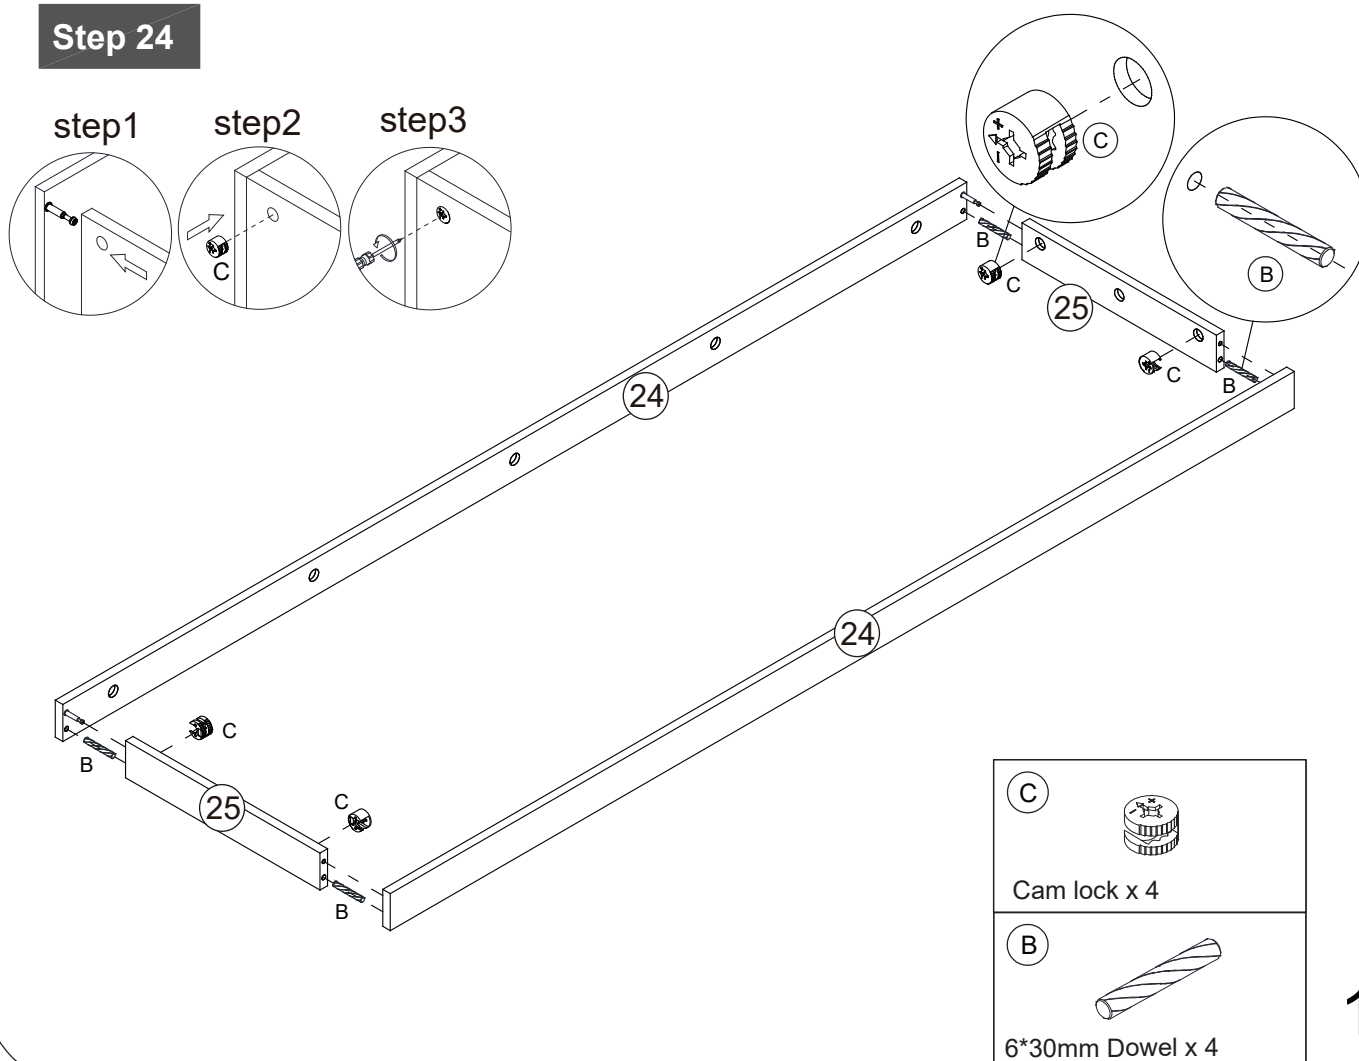


# Assembly Instructions

## Step 25

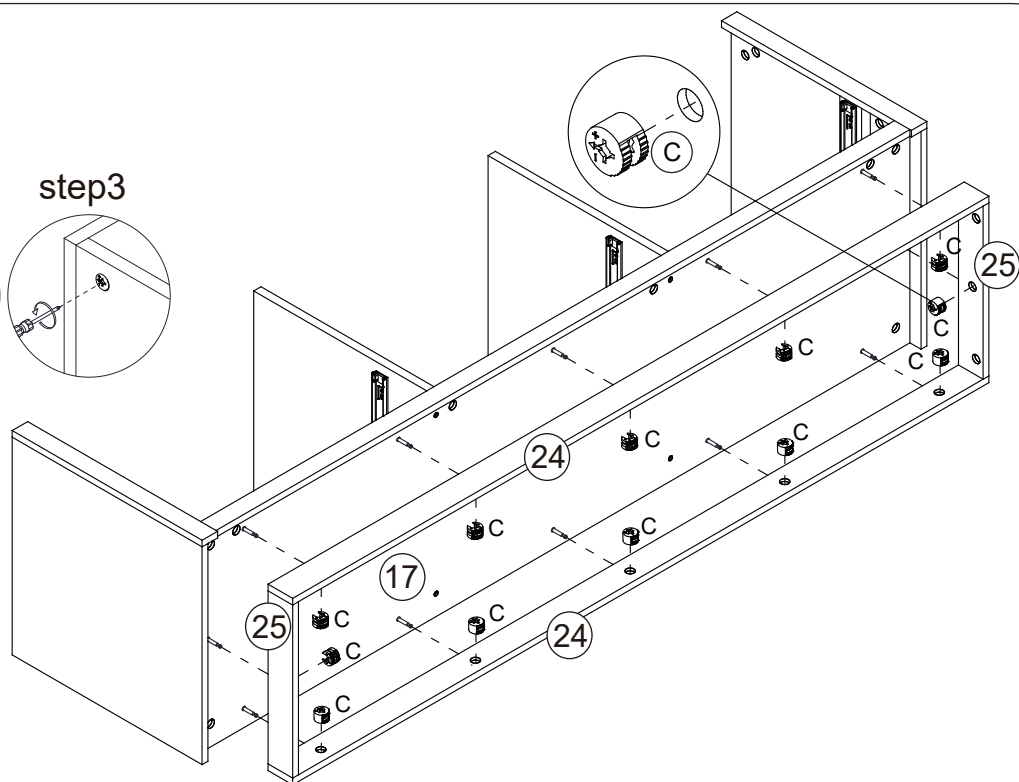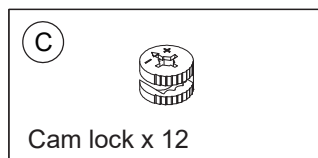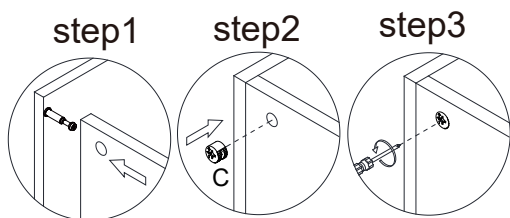


## Step 26

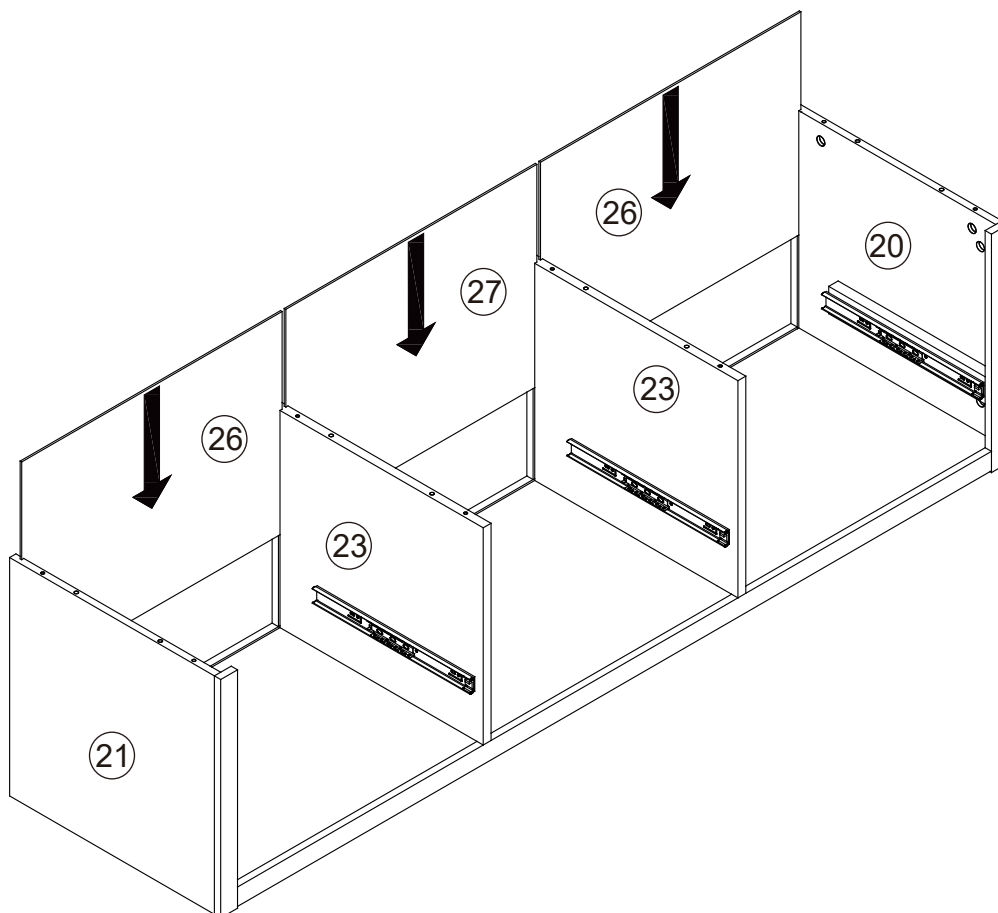


# Assembly Instructions

## Step 27



step1

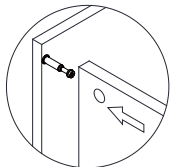

step2

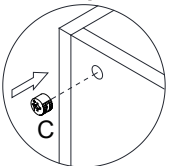


step3

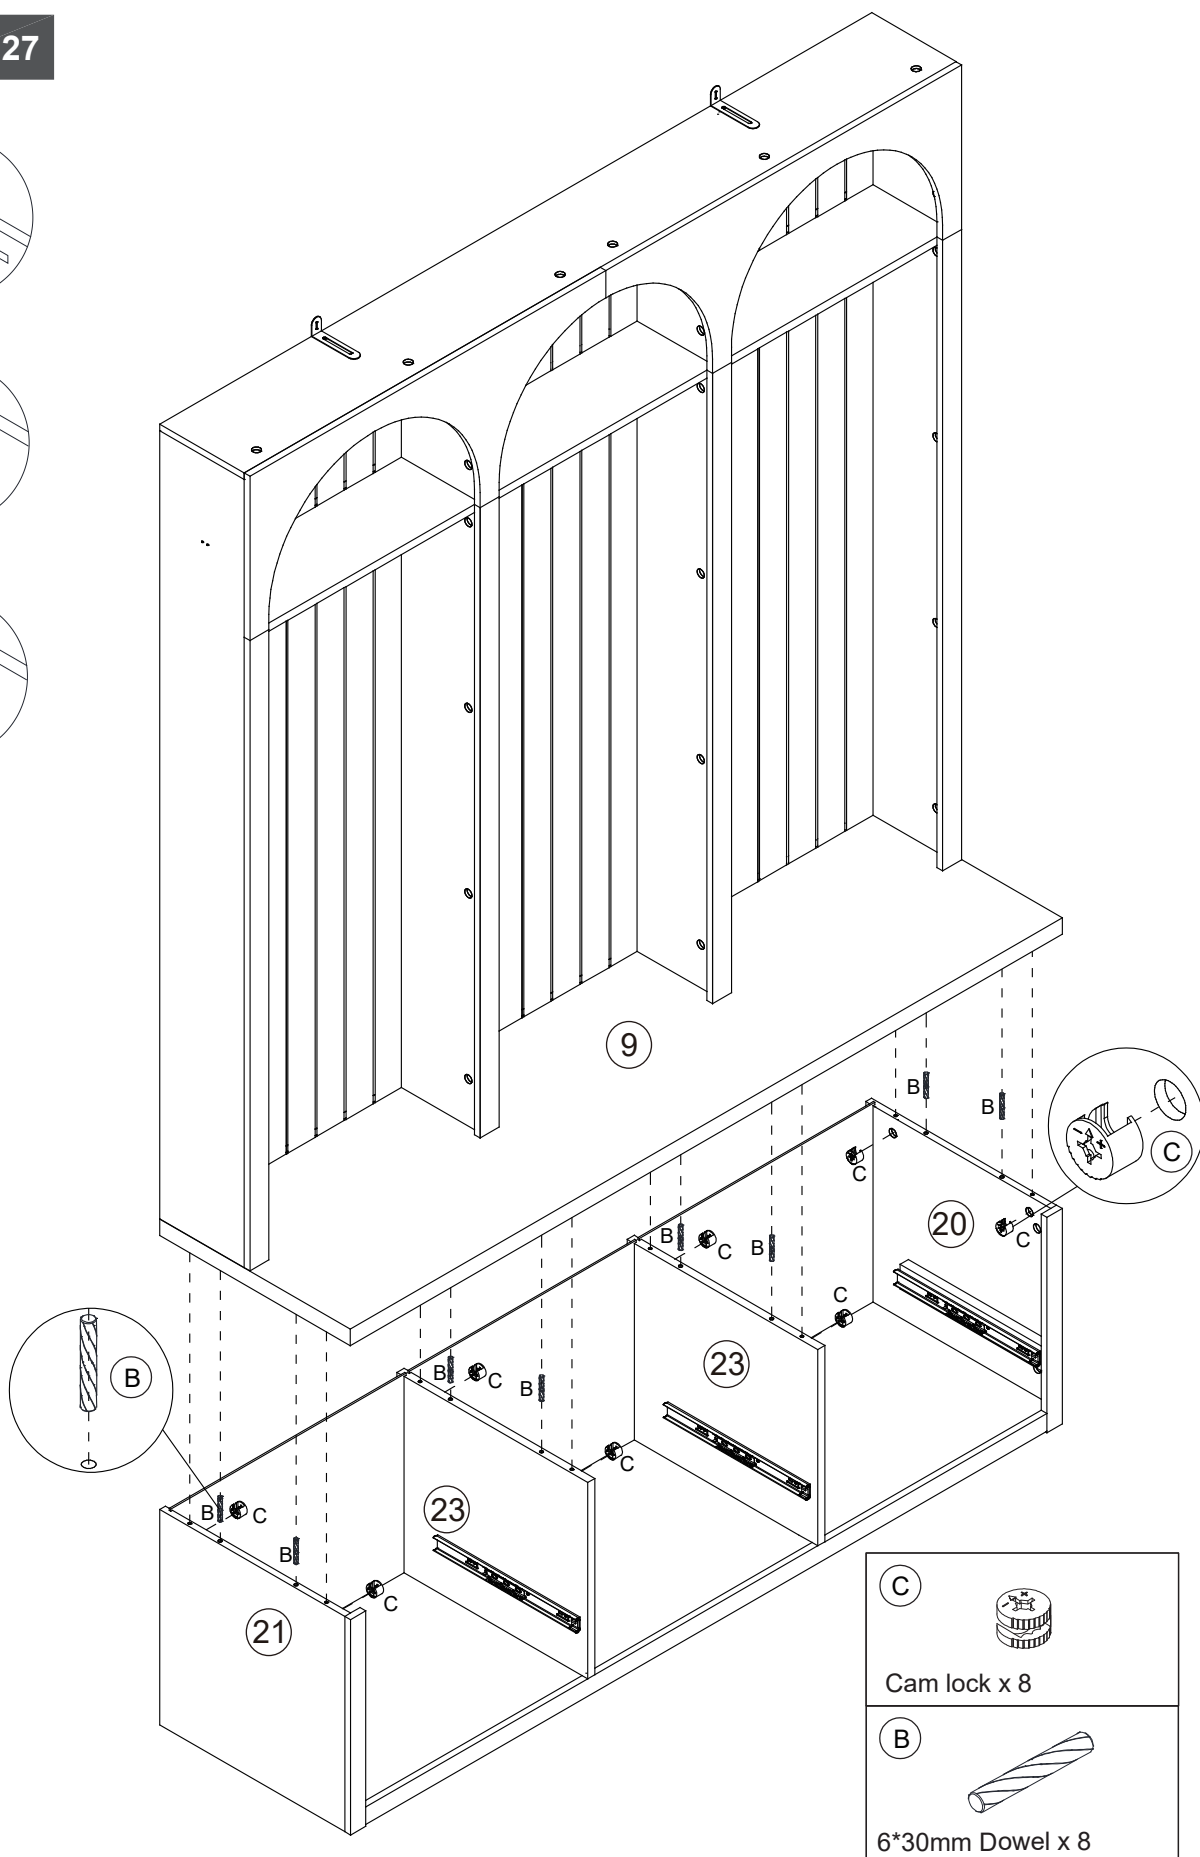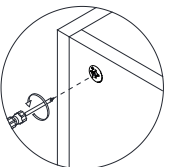


# Assembly Instructions

## Step 28



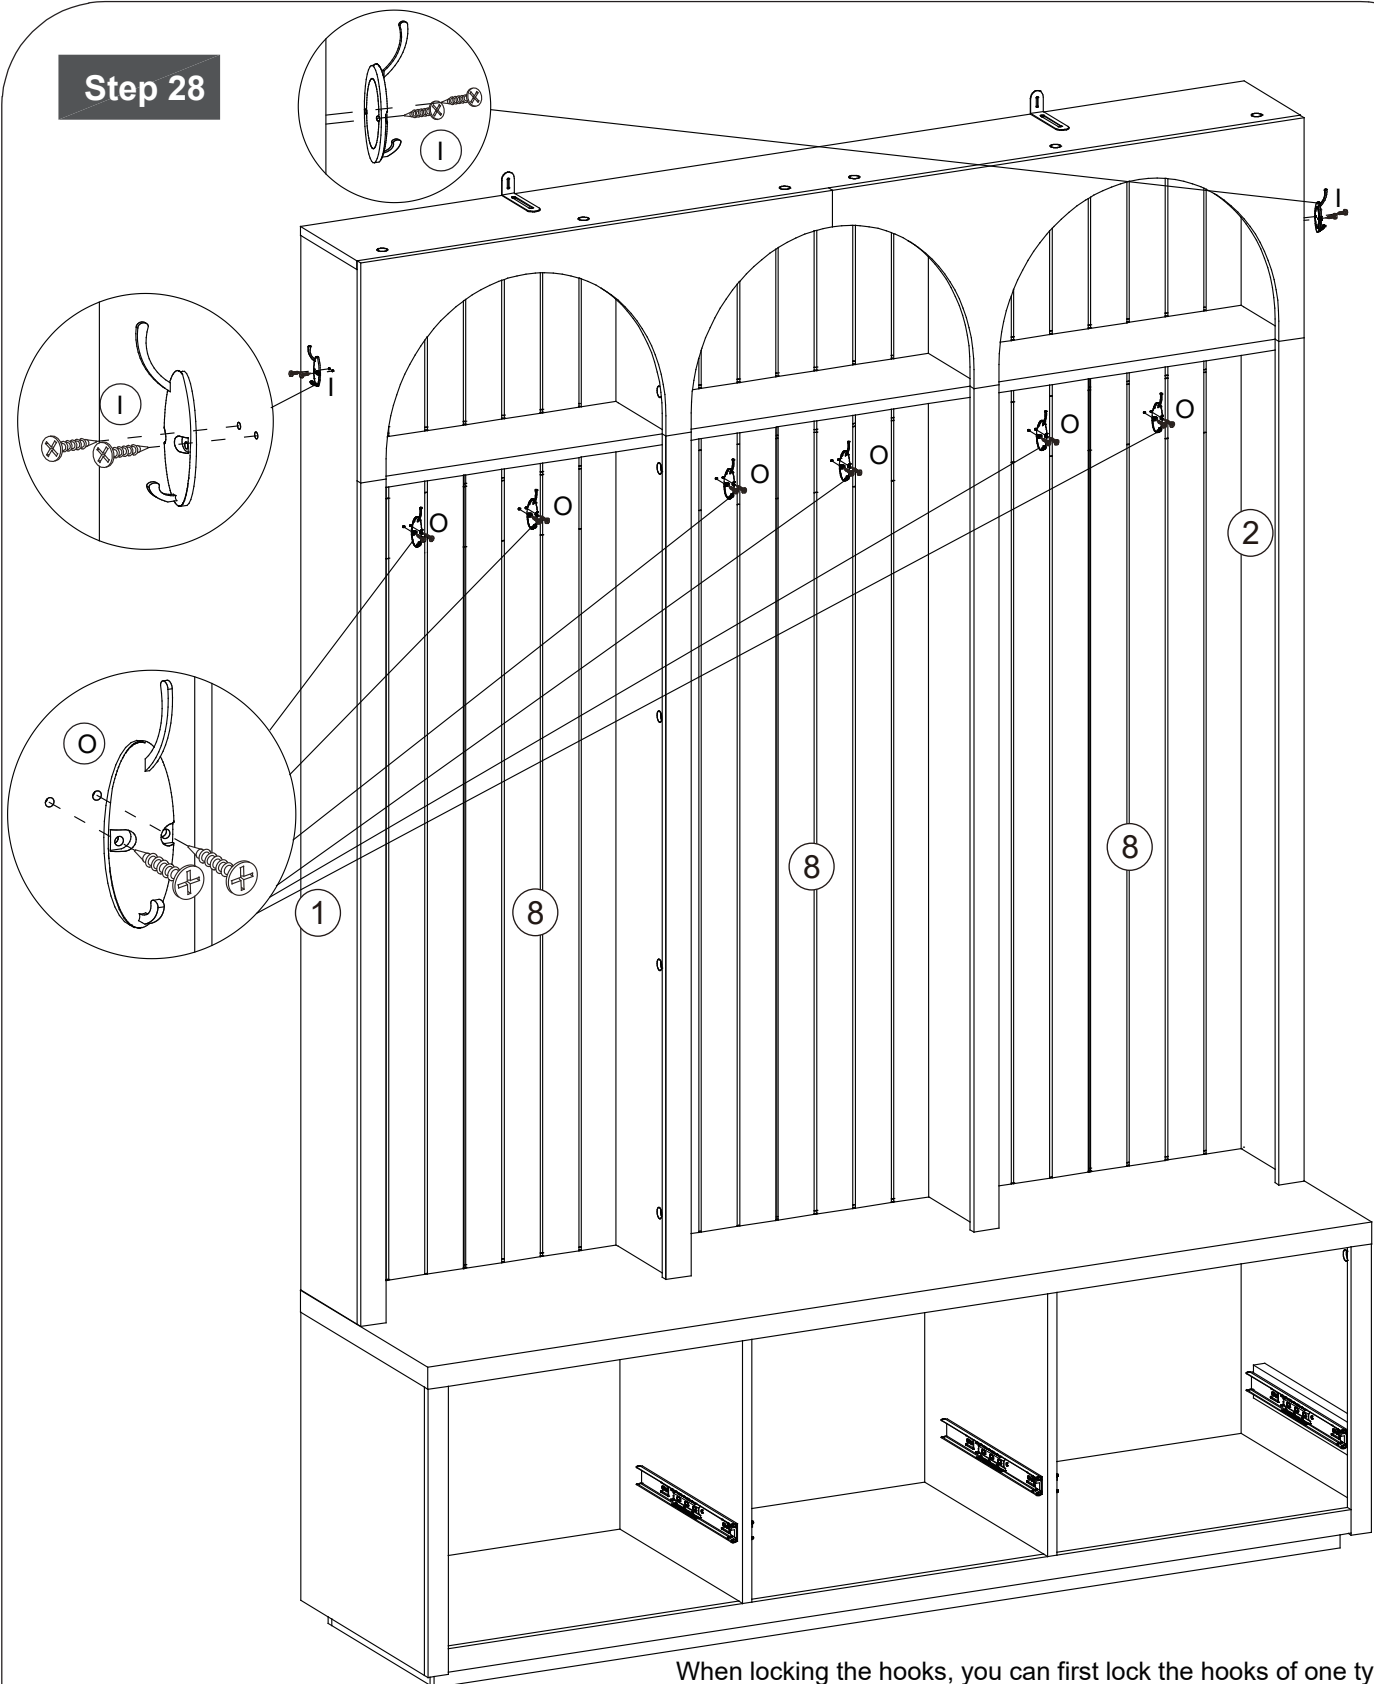


When locking the hooks, you can first lock the hooks of one type of numbering, and then lock the hooks of the other type of numbering. Pay attention to the fact that the lengths of the screws for the two types of hooks are different, so as to avoid locking them incorrectly.

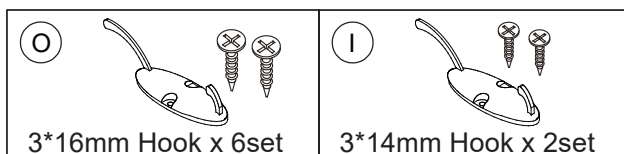

# Assembly Instructions


## Step 29

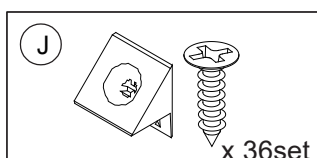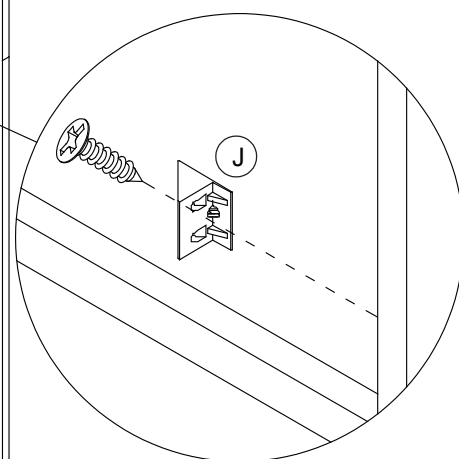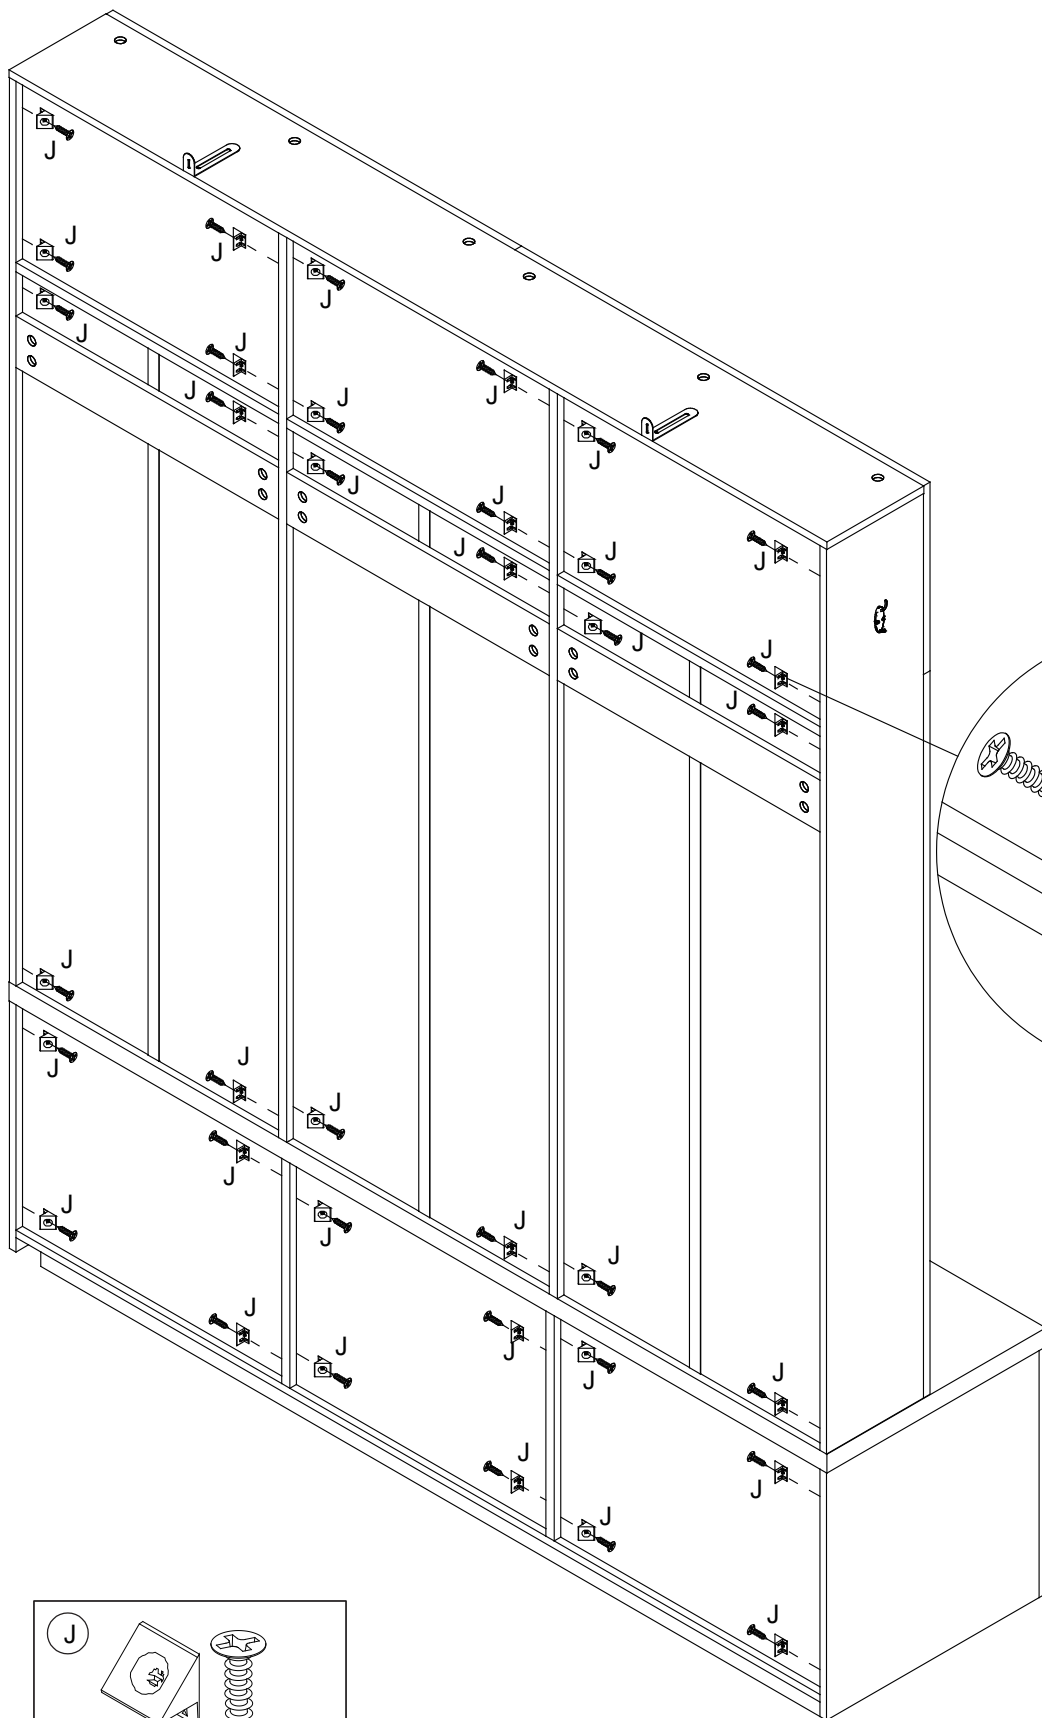


# Assembly Instructions

## Step 30

x3

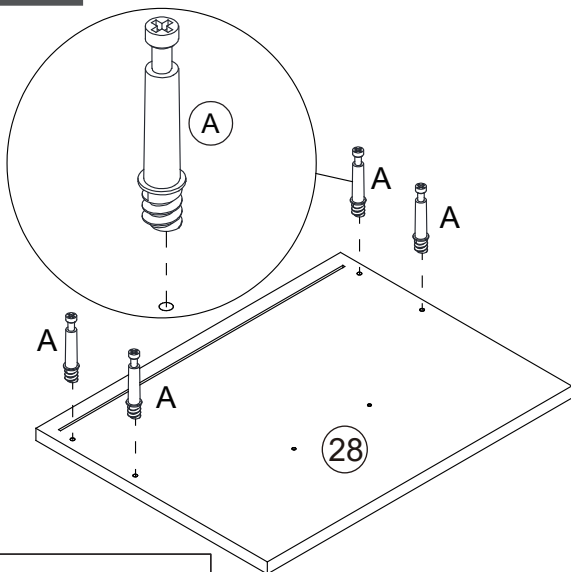


A




Cam Bolt x12

x3

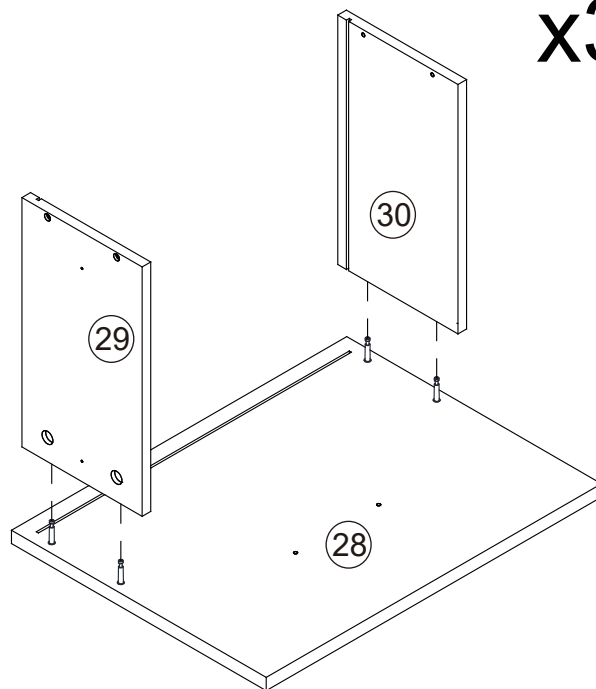


## Step 31

x3

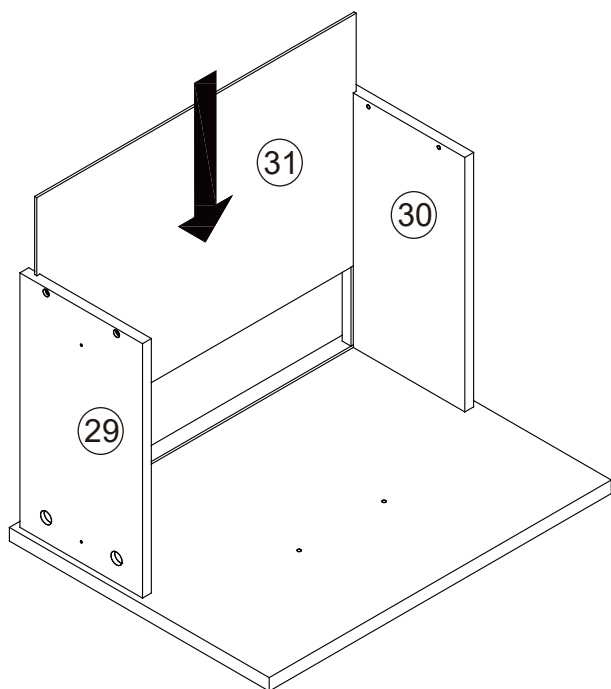

x3

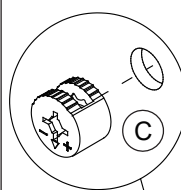

C

C




Cam lock x 12

23

# Assembly Instructions

## Step 32




x3

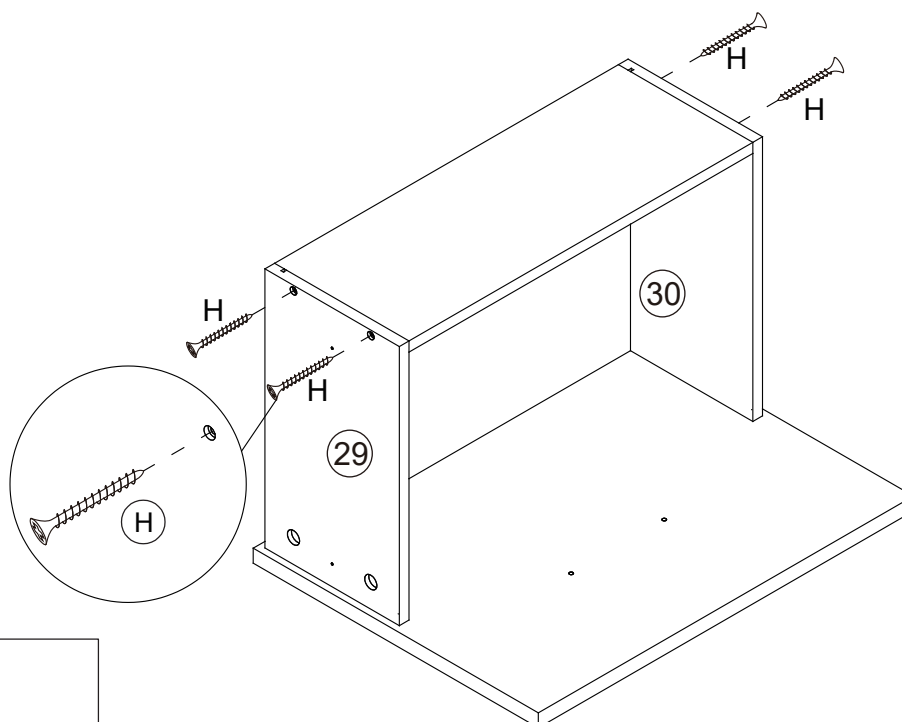

(H)  
4\*30mm Screw x 12

## Step 33

x3

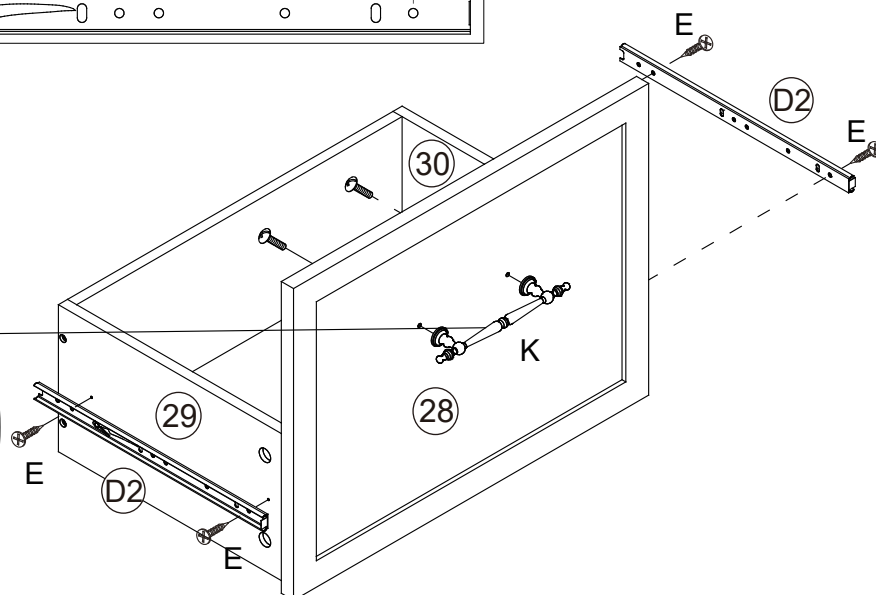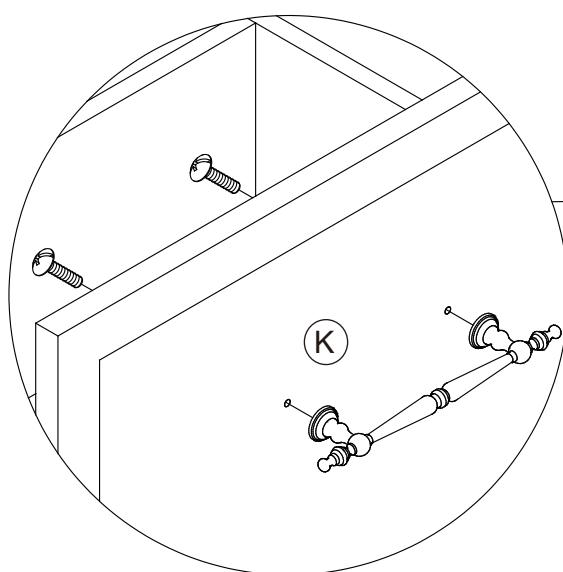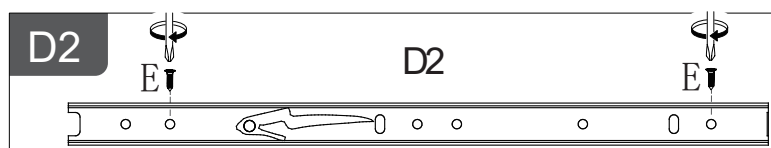

(E)  
3\*12mm Screw x12

(K)  
4\*16mm Handle x 3set

(D2)  
Slide x6










24

# Assembly Instructions

## Step 34

### WALL

Please note that there are two colors of hole stickers. When pasting them, please select and paste the corresponding hole stickers according to the color of the board to avoid pasting them incorrectly.

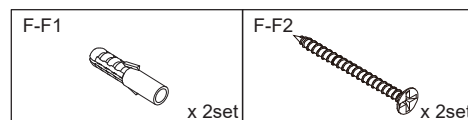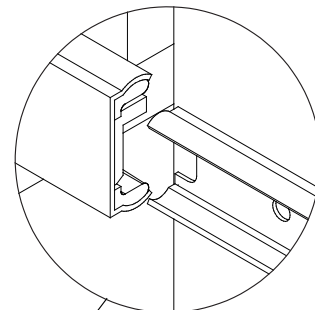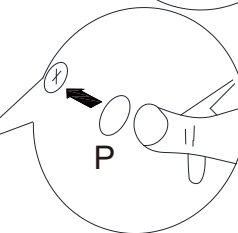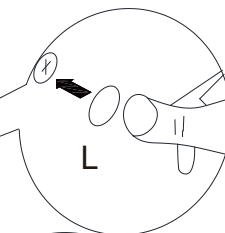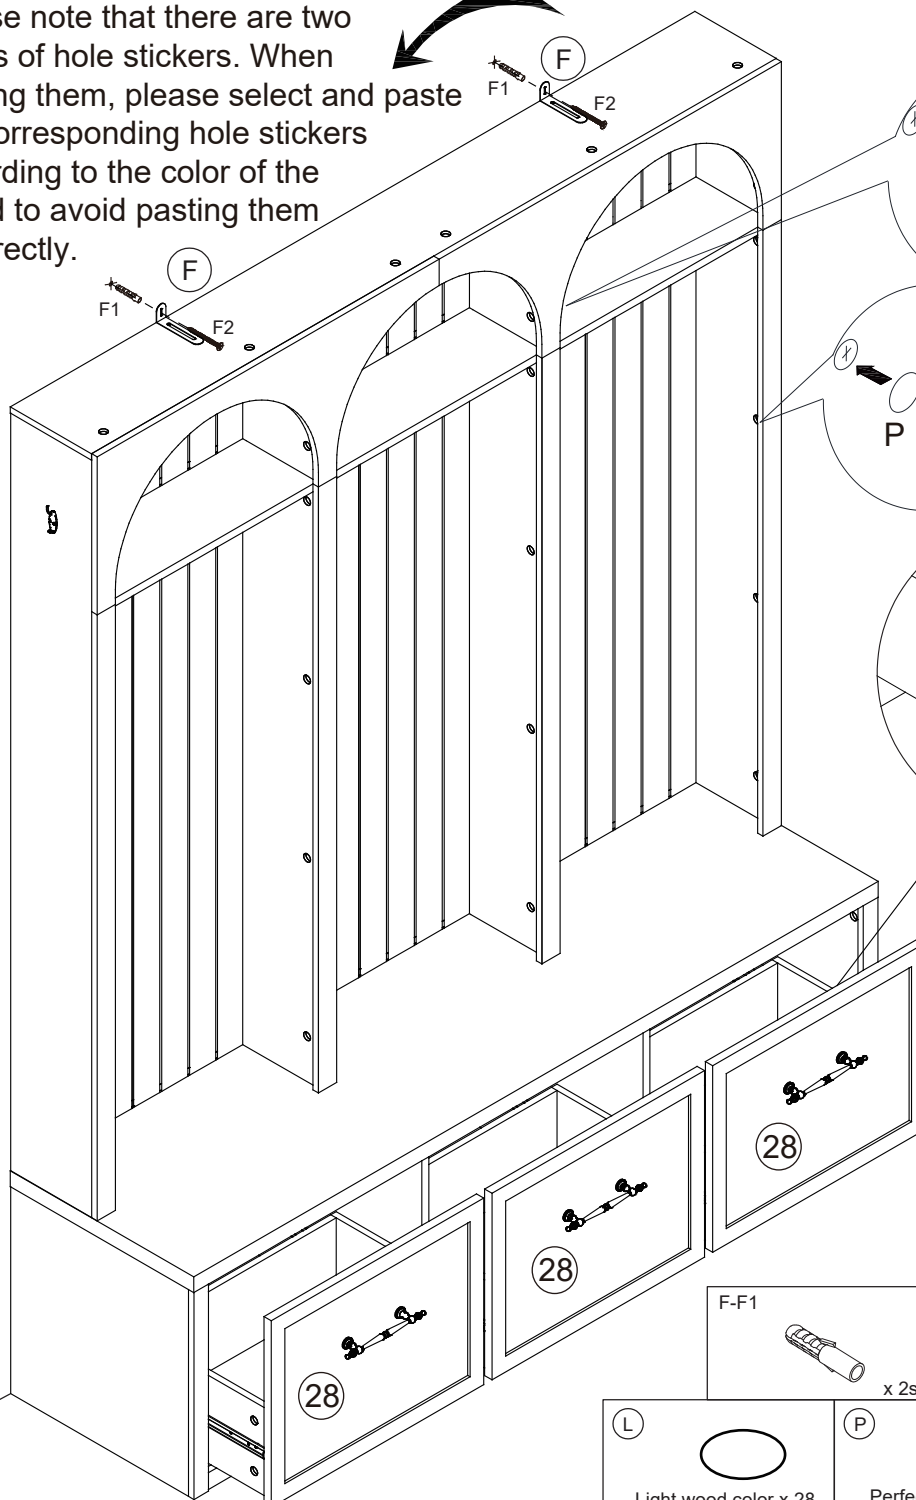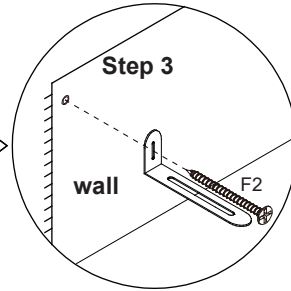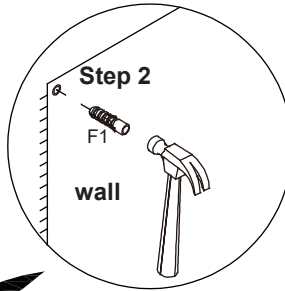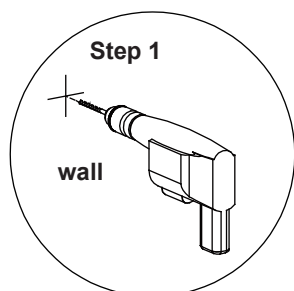

# Assembly Instructions

Finish

