



## ASSEMBLY INSTRUCTIONS

CT203

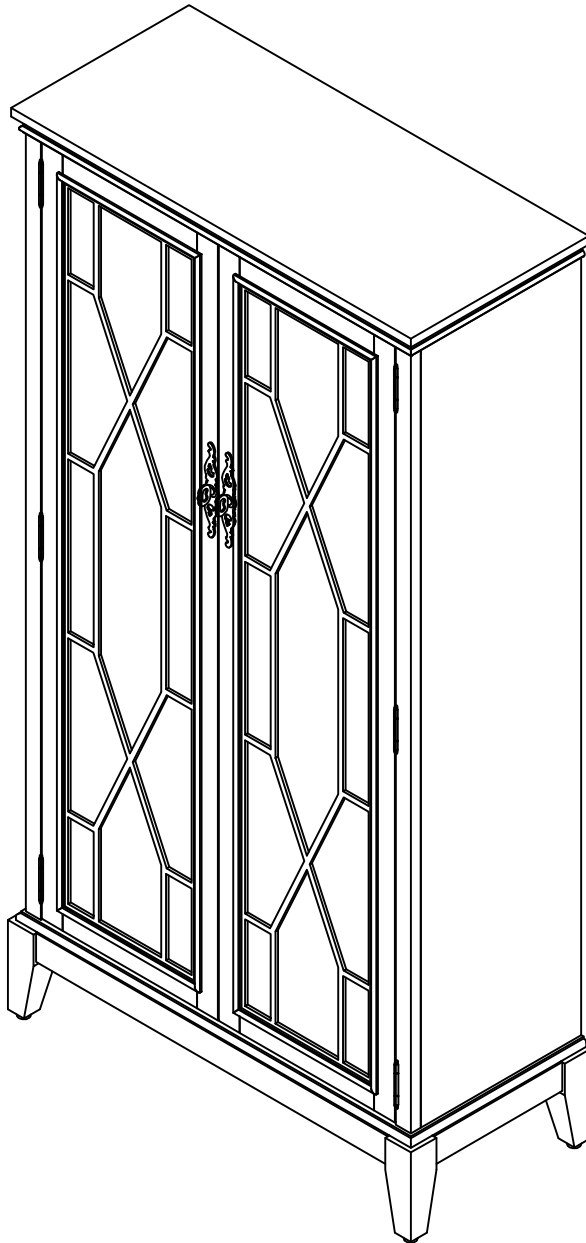


### Notice:


1. Follow the installation instructions. Please confirm all accessories are present before installation.
2. Do not fully tighten the screws during initial assembly. Tighten them completely only after all pieces are correctly aligned.
3. If you encounter any issues during installation, please contact our customer service for assistance.
4. Unbox the item from the side labeled "Open" and lay a protective mat or cloth on the floor to avoid scratches.

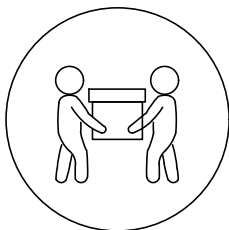

Recommended Assembly:  
2 people




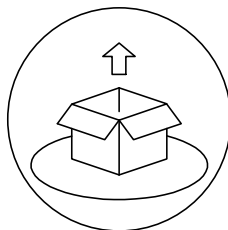



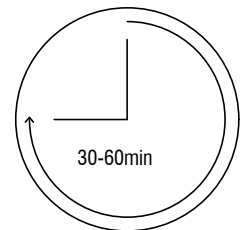


Lay a protective mat  
or cloth










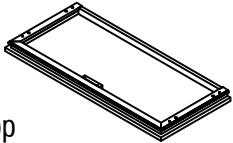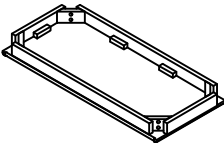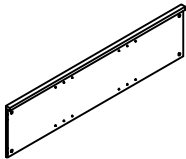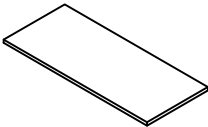

Estimate installation  
time

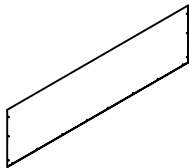
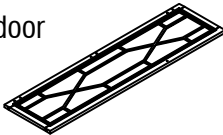

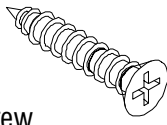



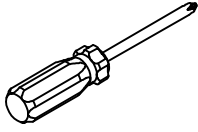
## Accessories List

Item no.	Reference Image	Qty
1	 <p>Cabinet Top</p>	1
2	 <p>Bottom frame</p>	1
3	 <p>Side panel</p>	2
4	 <p>Shelf</p>	2

Item no.	Reference Image	Qty
5	 <p>Backboard</p>	2
6	 <p>Left cabinet door</p>	1
7	 <p>Right cabinet door</p>	1
8	 <p>Leg</p>	4


## Hardware List

Item no.	Reference Image	Qty
A	M6*36 	8
B	Ø15*9 	8
C	Ø8*30 	8
D	5/16"*45 	8
	Ø8*14 	8
	Ø8 	8
E	5 	1
F	M3*16 Umbrella head screw 	32+3
G	Anti toppling assembly 	2

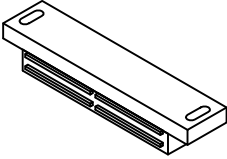
Item no.	Reference Image	Qty
H	Ø6*10 	8
I	71*16*12 	2
	35*12*1 	4
J	M3*16 Flat head screw 	46+4
K	85*29*28 	6
L	167*23*8 30*26*9 	2
	M4*28 	2
M		1

## ASSEMBLY INSTRUCTIONS

1




D 8pcs



E 1pc

Install the Legs (8) on the bottom frame (2).

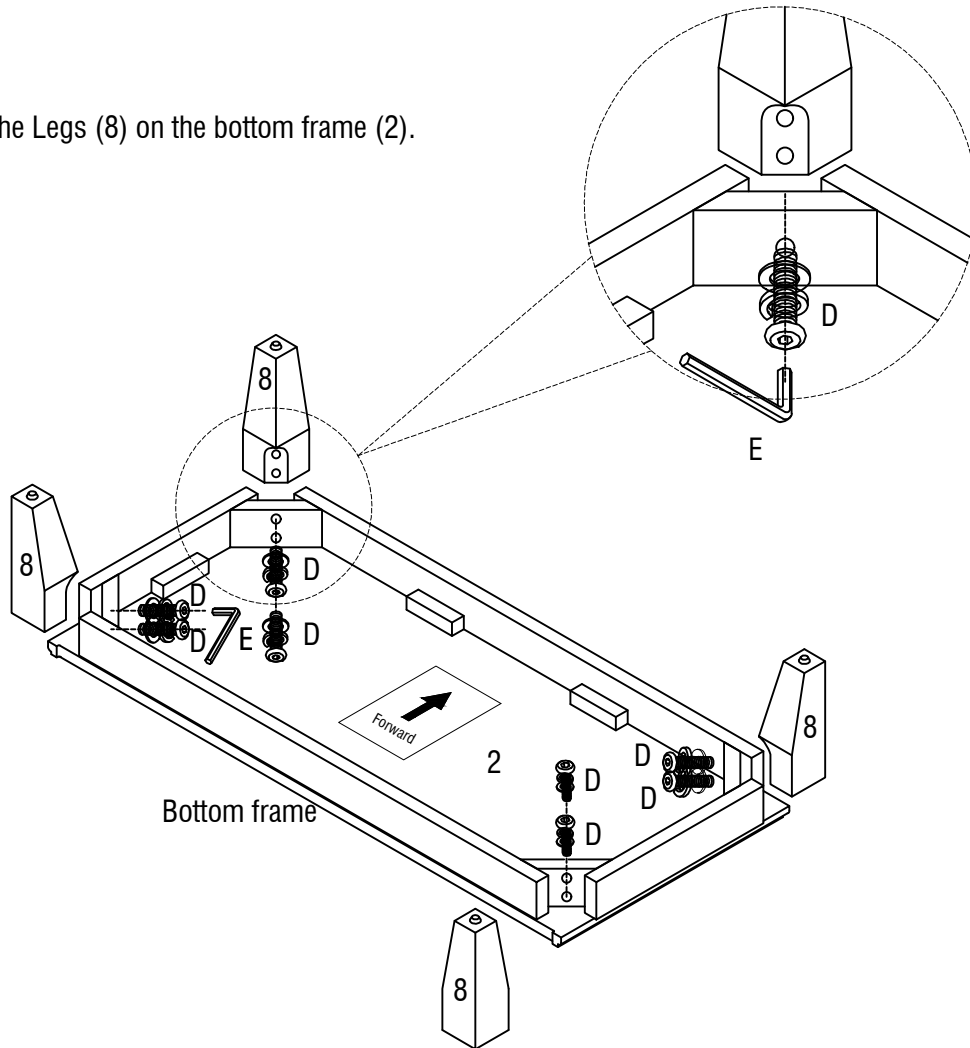

## ASSEMBLY INSTRUCTIONS

2

M6\*36



A 4pcs

71\*16\*12




I 1pc

M3\*16




F 2pcs



M 1pc

F  
Umbrella head screw



Install CamPosts (A) into threaded inserts in Bottom Frame (2).

Rotate the adjustment feet of the four legs to ensure that the cabinet is protected and leveled.


Attach Door Stop (I) to Bottom Frame (2) using Screw (F).

# ASSEMBLY INSTRUCTIONS

3




A 4pcs




I 1pc



F 2pcs



M

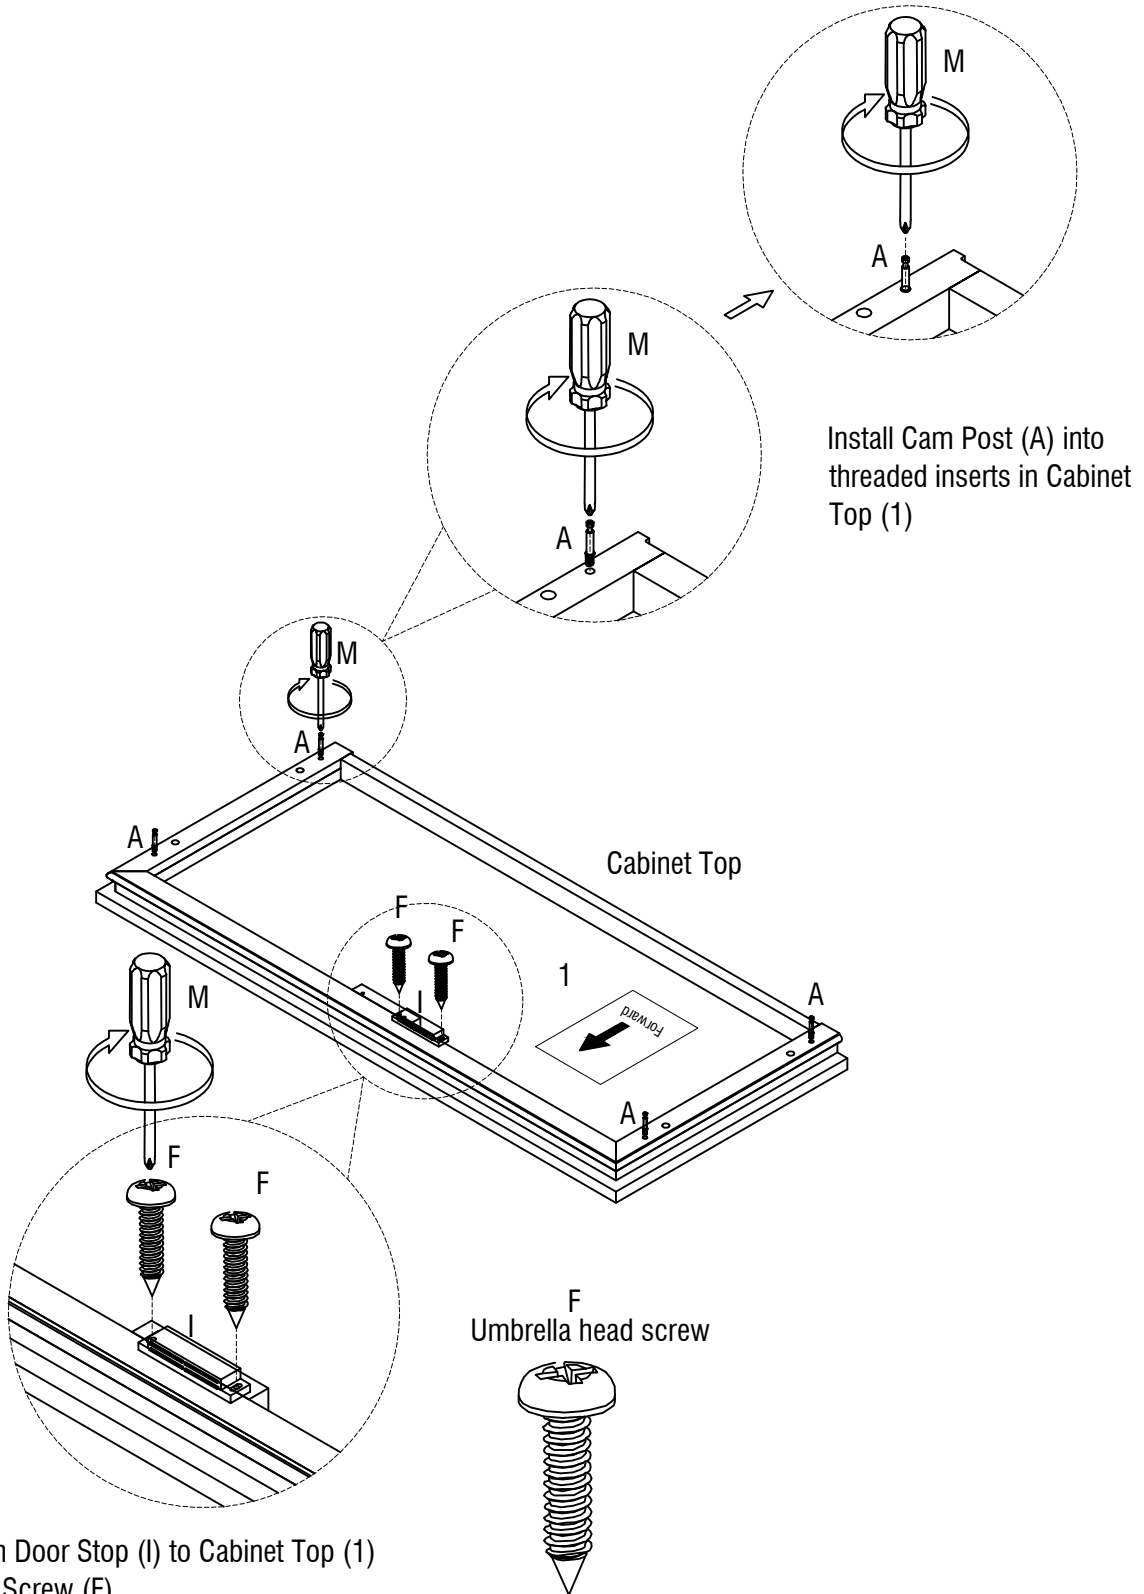

Attach Door Stop (I) to Cabinet Top (1) using Screw (F).


## ASSEMBLY INSTRUCTIONS

4

Ø8\*30




C 8pcs

Insert Wood Dowels (C) into Side Panel (3).

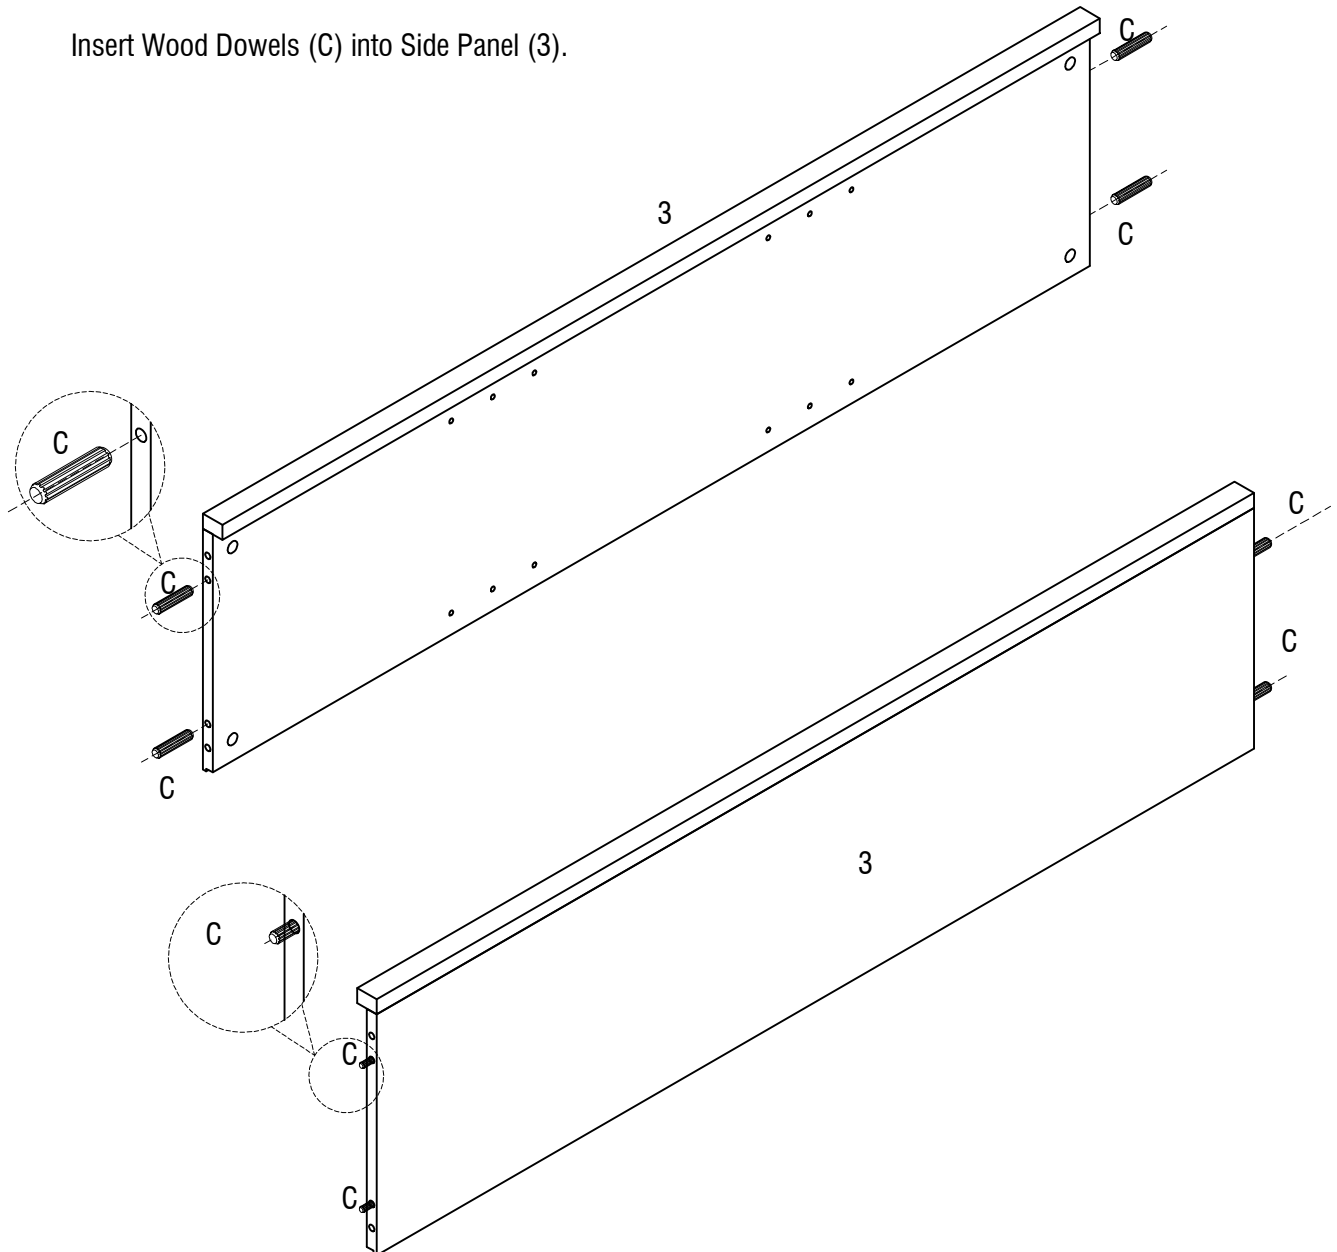


## ASSEMBLY INSTRUCTIONS


CAM BOLT INSTALLATION AS BELOW:

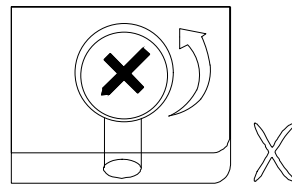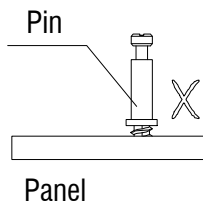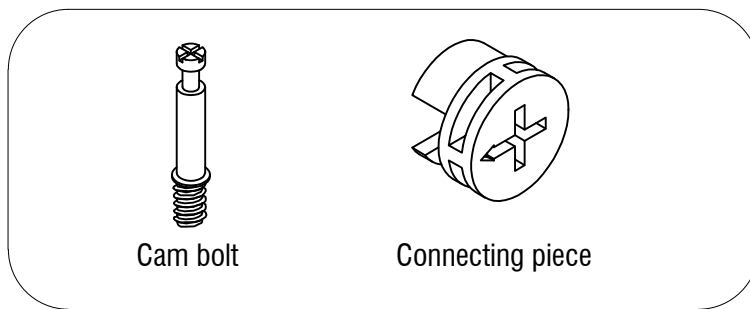

Rotate connecting piece if found in the position illustrated above.

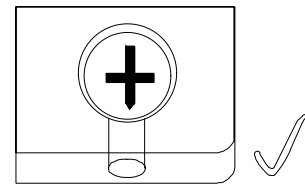

Correct orientation to receive bolts.

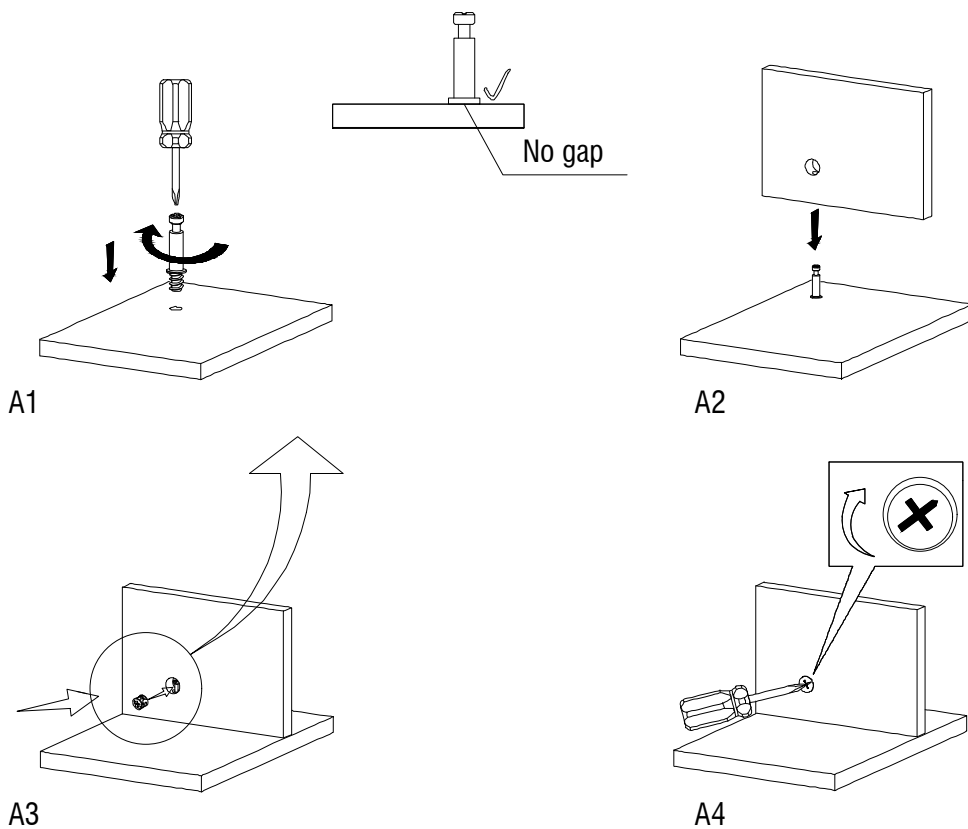



## ASSEMBLY INSTRUCTIONS

5


Ø15\*9  
B 4pcs

M

NOTE: The arrow on the face of the Cam (B) should point towards the Cam Post (A) for proper alignment.


Attach Left and Right Side Panels (3) to Bottom Frame (2) by turning Cams Fastener(B).

Please ensure maintain consistent front-to-back alignment between Side Panels and Bottom Frame in this step.

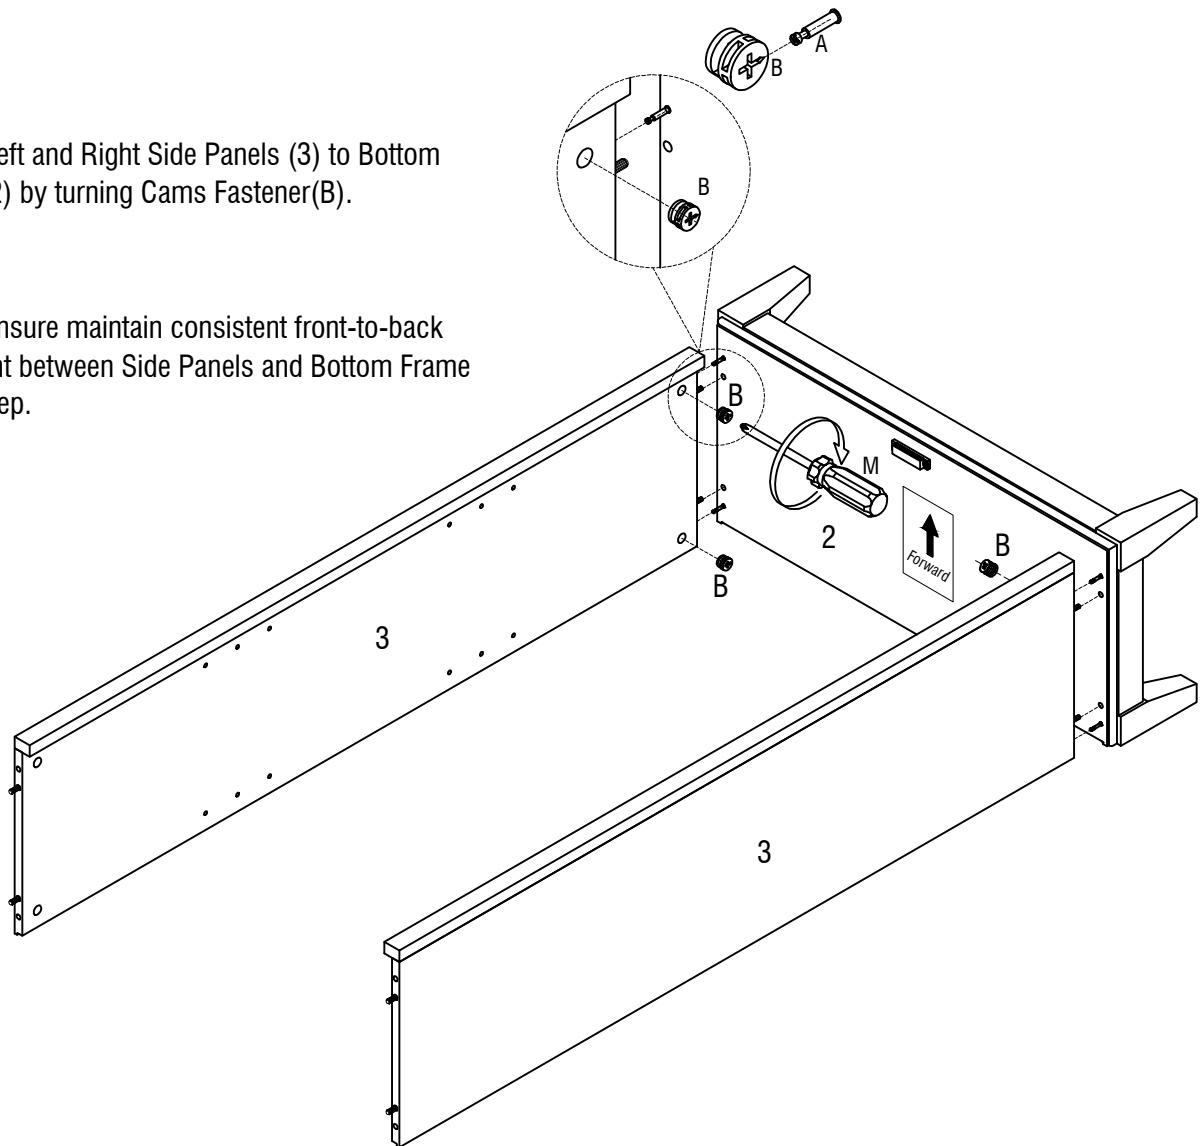


## ASSEMBLY INSTRUCTIONS



6



B 4pcs



M

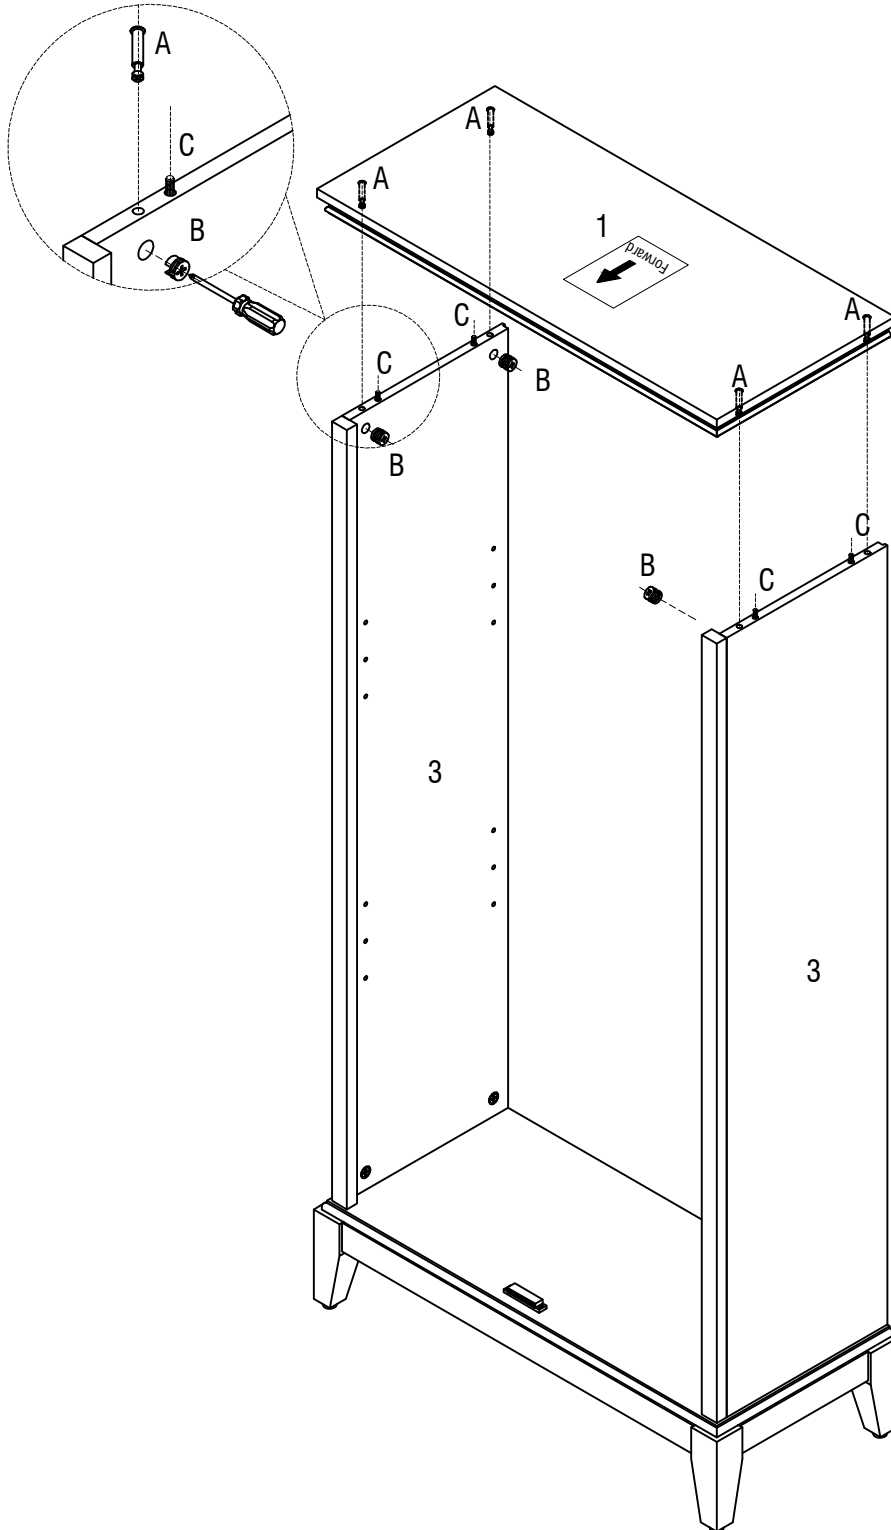

Attach Cabinet Top (1) to Side Panels(3) by turning Cams Fastener(B).

## ASSEMBLY INSTRUCTIONS


7

M3\*16

F 28pcs




G 2pcs




M

Install the Back Panels (5) using Screw (F).

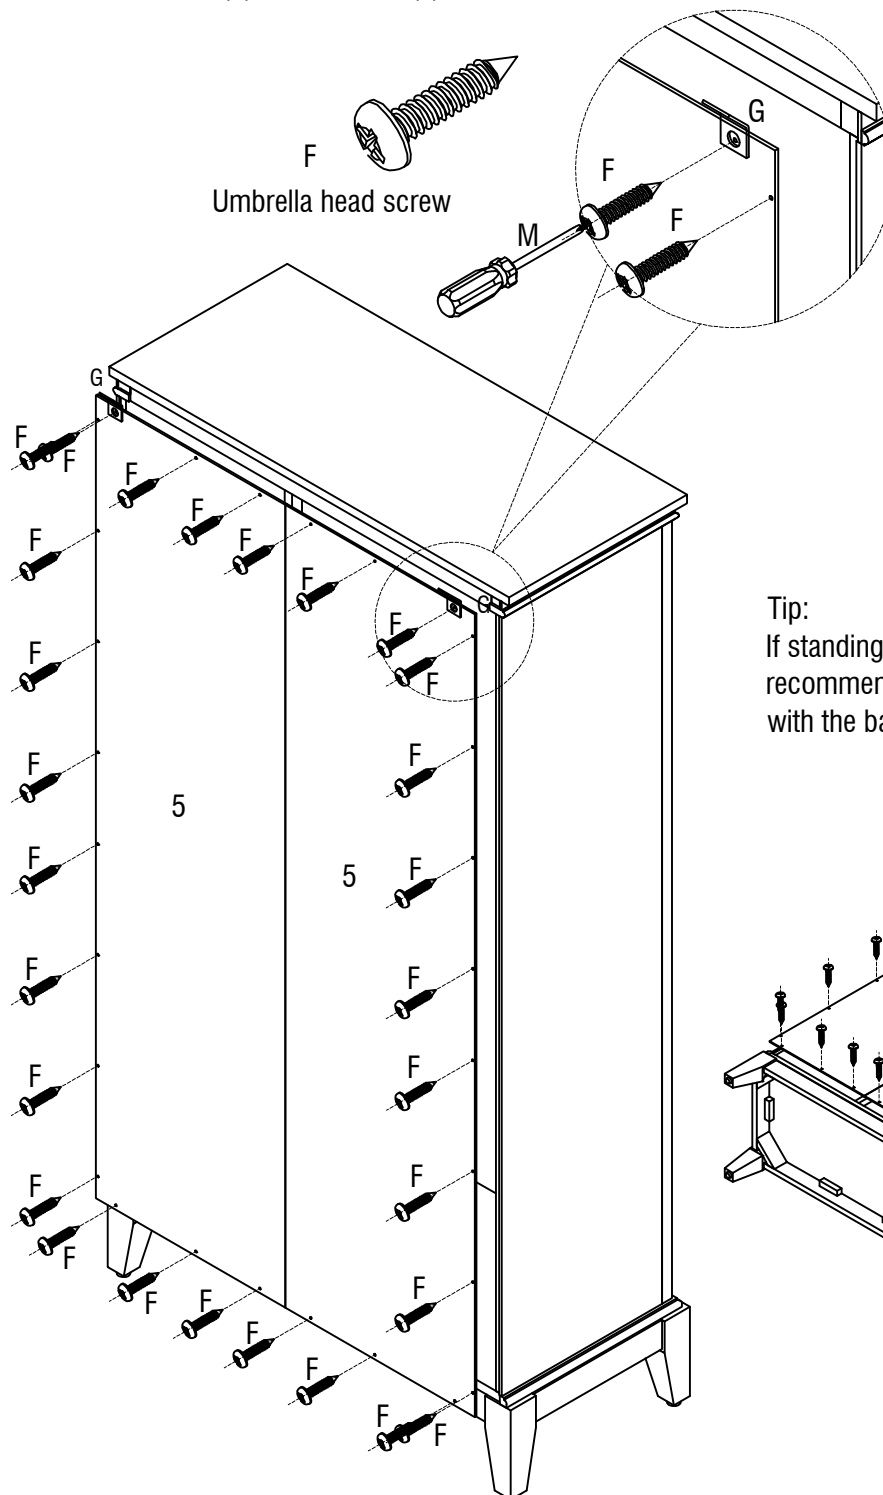

Install the Anti Toppling Device (G) on the Back Panels (5)

Tip:  
If standing up for assembly is inconvenient, it is recommended to place it flat and assemble it with the back facing up.

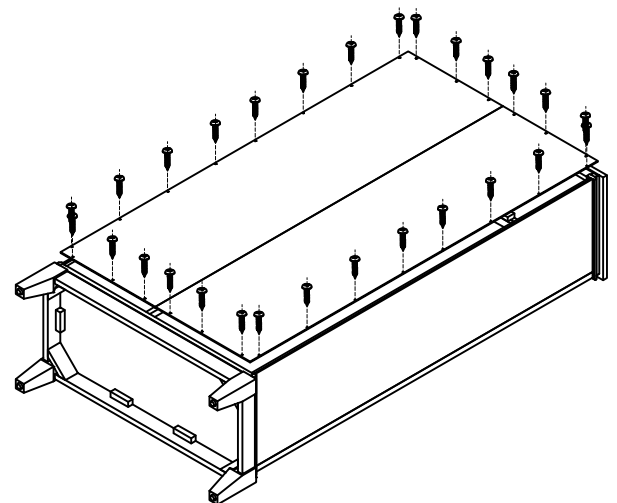

## ASSEMBLY INSTRUCTIONS

8

35\*12\*1



I 4pcs

M3\*16




J 16pcs

85\*29\*28




K 6pcs

167\*23\*8



30\*26\*9 L 2pcs


M4\*28



M

J


Flat head screw



Insert Screw (J) through Hinge (K) into the door guide hole. Partially tighten screws (do not fully tighten yet).

Notice:

Ensure the door panel is fully loosened before standing it upright, which allows fine-tuning the door position in the next step.

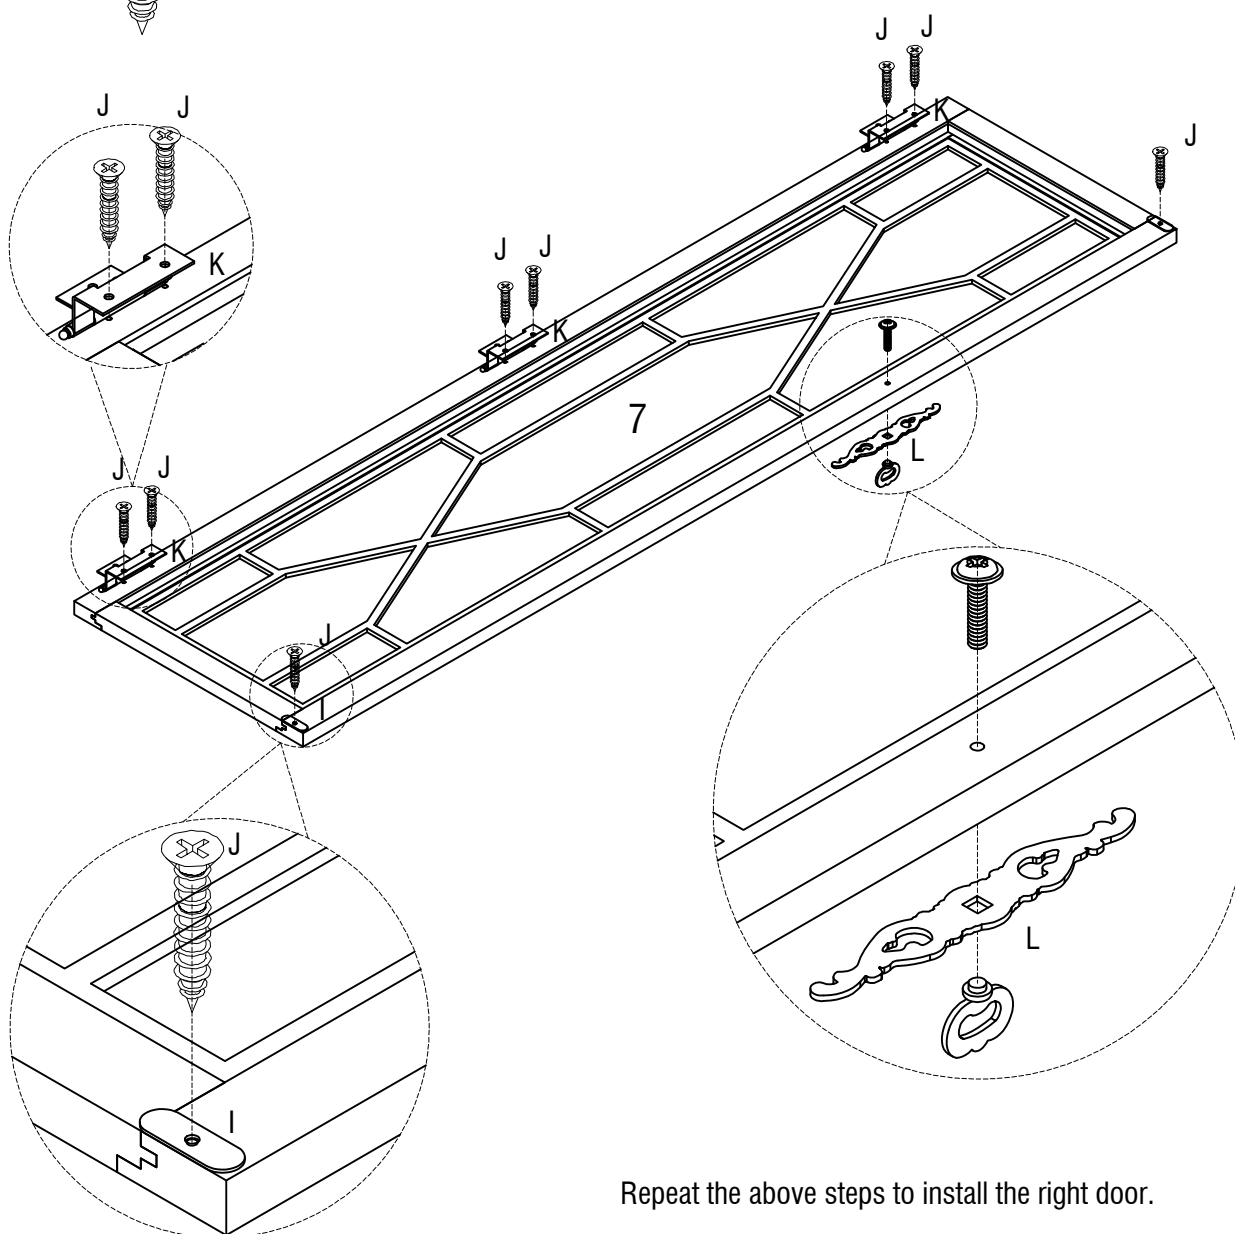

Repeat the above steps to install the right door.

Install Part I using the Screw (J).


## ASSEMBLY INSTRUCTIONS

9

M3\*16




J 30pcs

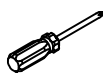

M

Pass Screw (J) through the hole in Hinge (K). Align with the three pillar lead hole on the Side Panel. Partially tighten screws until they are 50-70% engaged (do not fully tighten).


Close the door and adjust seam gaps around all edges. After debugging, tighten each screw.

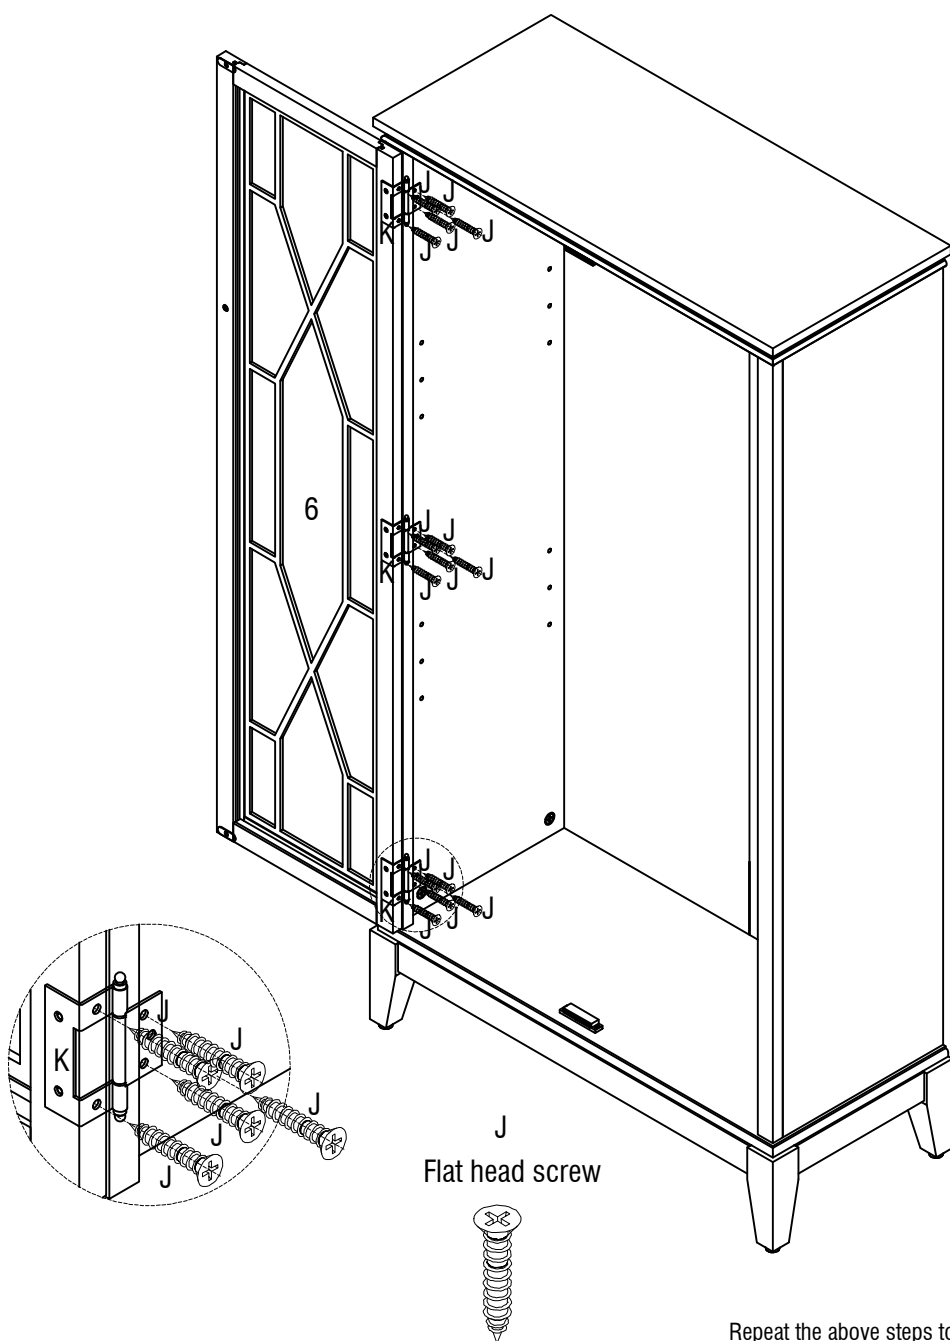

Repeat the above steps to install the right door.


## ASSEMBLY INSTRUCTIONS

10

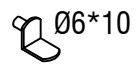


H 8pcs

Install Shelf Support Pins (H) into Left and Right Side Panel (3).  
Install Moveable Shelves (4).

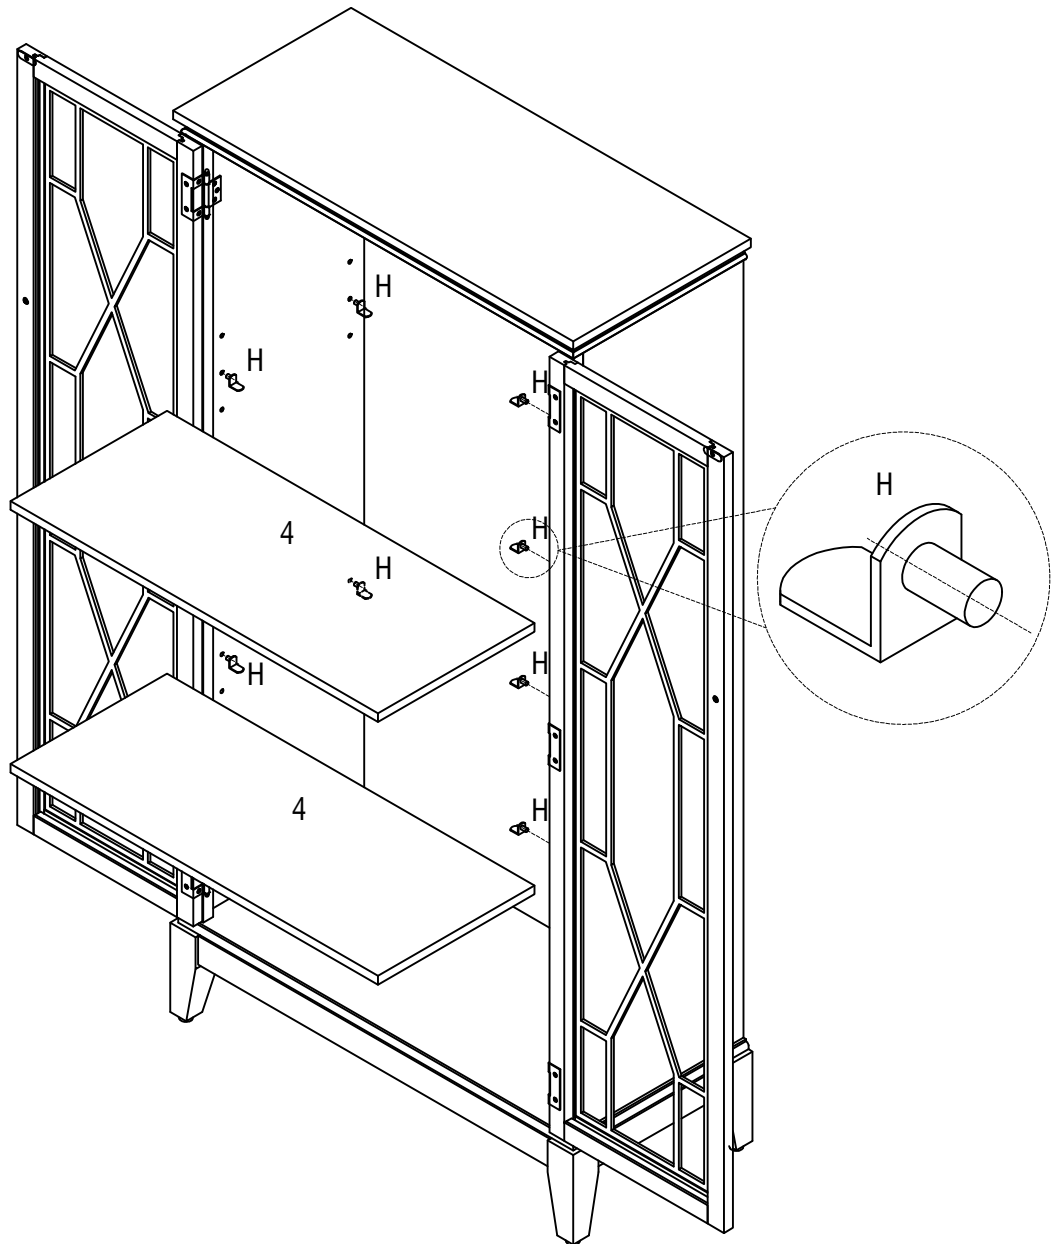


## ASSEMBLY INSTRUCTIONS

11



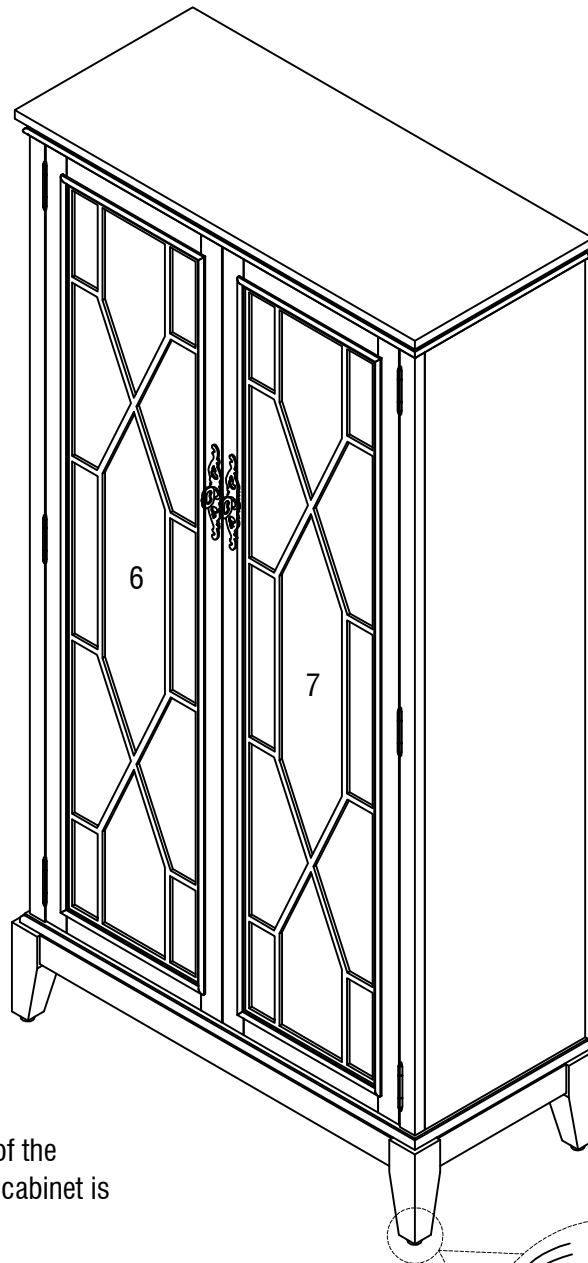


Rotate the adjustment feet of the four legs to ensure that the cabinet is protected and leveled.

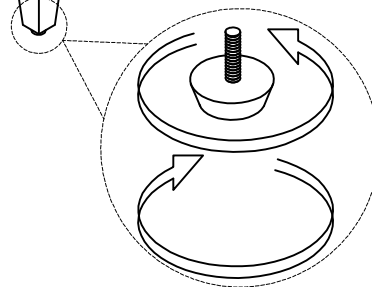

## ASSEMBLY INSTRUCTIONS

12

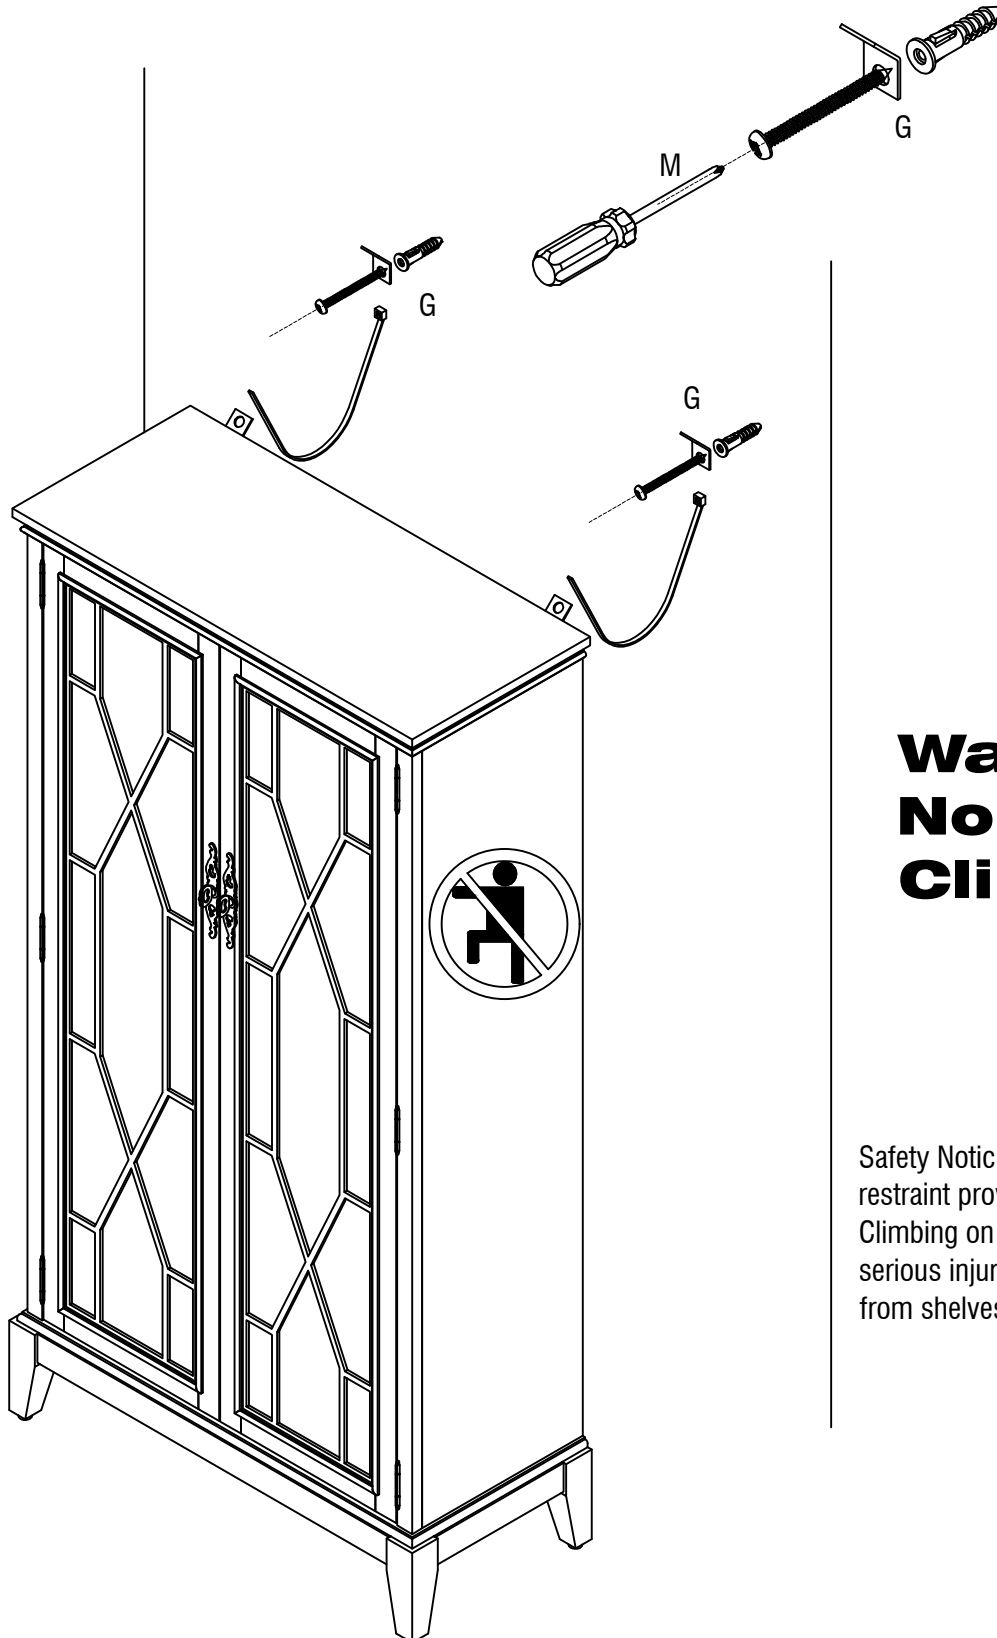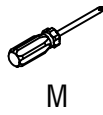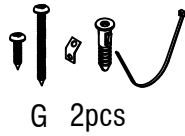


**Warning:  
No  
Climbing**

Safety Notice: Always install tipover restraint provided.  
Climbing on furniture may result in serious injury. Keep children away from shelves, cabinets and furniture.





## WARNING

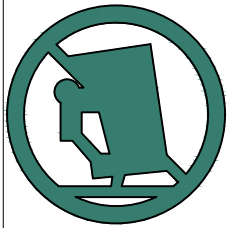

1.Safety Notice: To prevent serious injury or death from tip-over, this cabinet must be securely anchored to the wall using the provided anti-tip device. Always follow the installation instructions carefully.

2.Locate Wall Studs: Use a stud finder to locate the wall studs where the cabinet will be anchored. Attach Anti-Tip Bracket: Secure the anti-tip bracket to the wall stud using the provided screws. Ensure the bracket is level and firmly attached. Anchor the Cabinet: Position the cabinet against the wall and attach it to the anti-tip bracket using the designated attachment points. Verify Stability: Gently test the cabinet to ensure it is securely anchored and does not tilt forward.

3.Never allow children to climb or hang on the cabinet. Do not place heavy items on open drawers or doors, as this may cause the cabinet to tip over. Regularly check the anti-tip device to ensure it remains securely attached.