


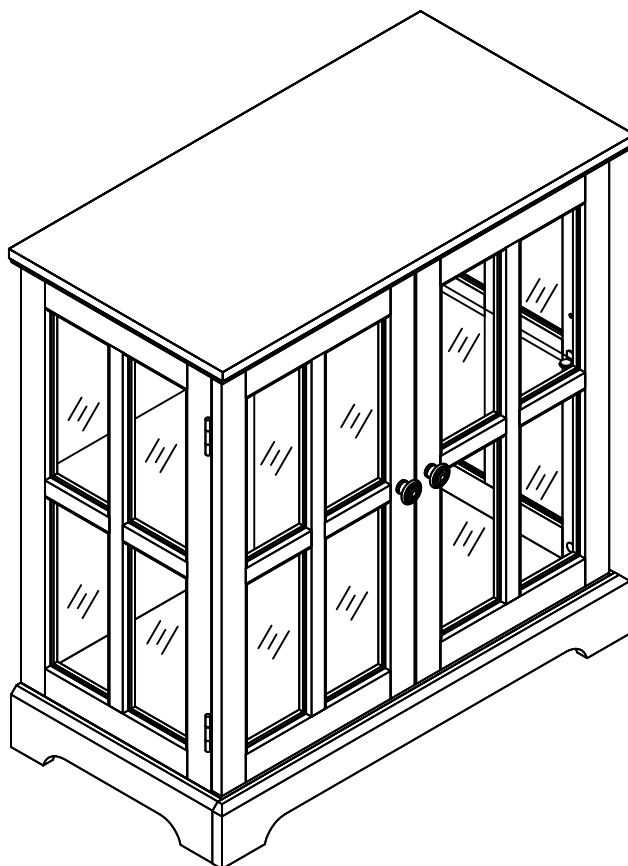


TWO DOORS GLASS CABINET

Item: YS-024

Assembly Instruction


NOTE: This instruction manual contains IMPORTANT safety information. Please read carefully before assembling the product

List of Parts

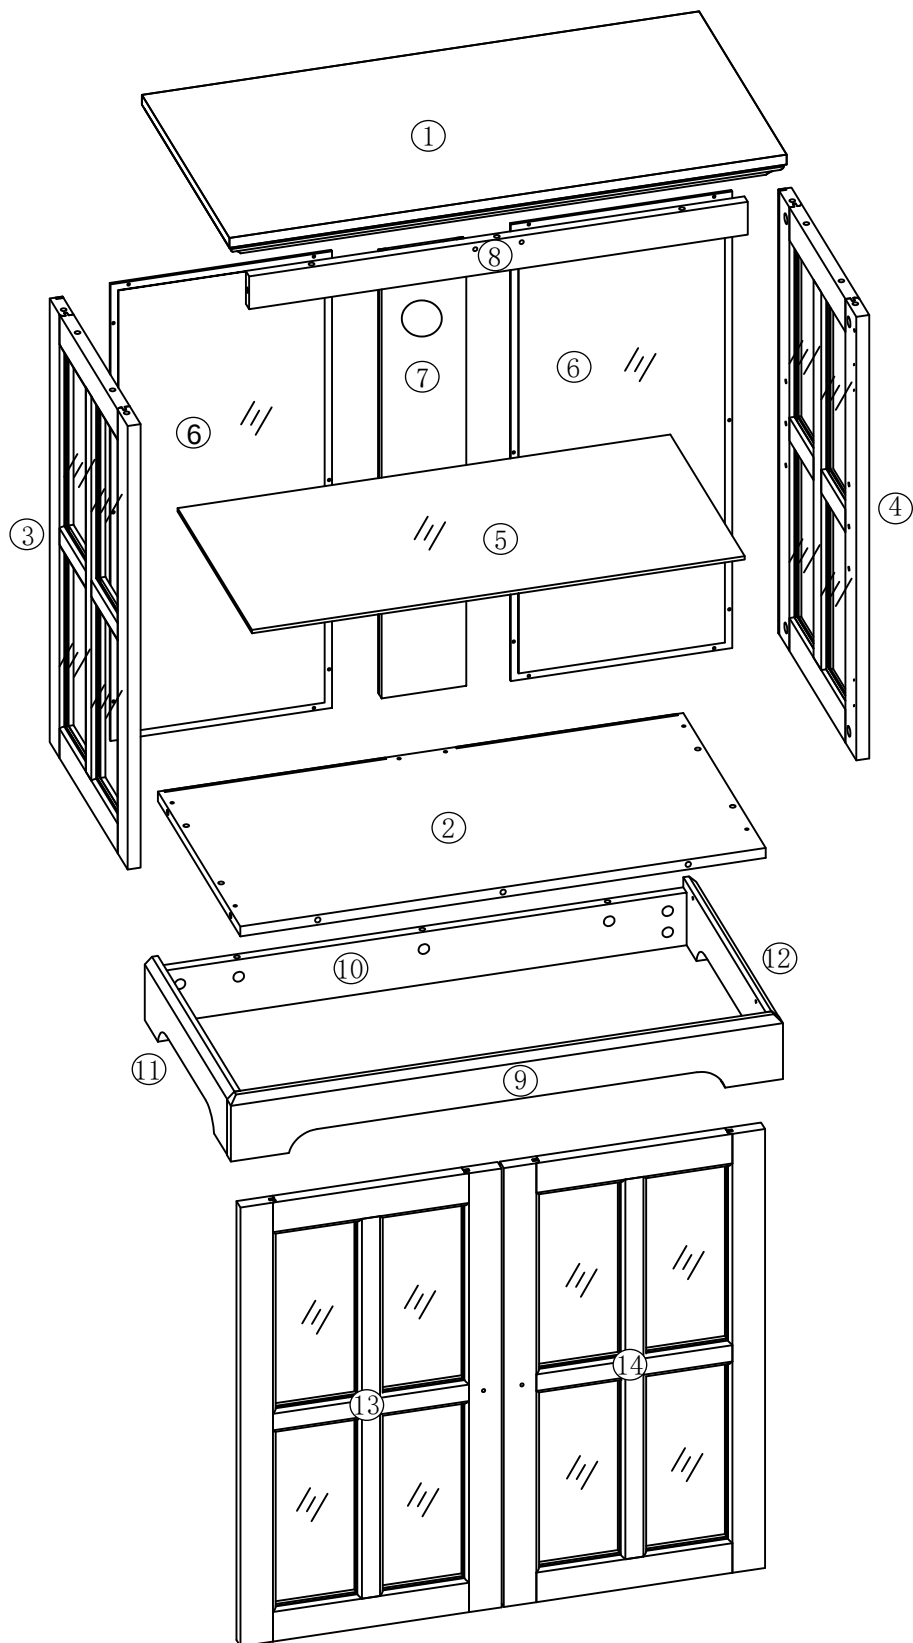

Hardware

A x 35+2




Ø6 x 34mm

B x 35+2



Ø15 x 10mm

C x 8+1




Ø8*30mm

D x 4+1



Ø3*12mm


E x 2



F x 2



G x 2



Ø4*25mm

H x 8+2




Ø20mm

I x 34+2



Ø3.5*14mm

J x 2



K x 4



L x 20+2




Ø3.5*12mm


M x 4




N x 2




O X 1

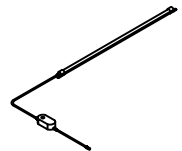

P X 1




Q X 1




STEP1

A x 15




Ø6 x 34mm

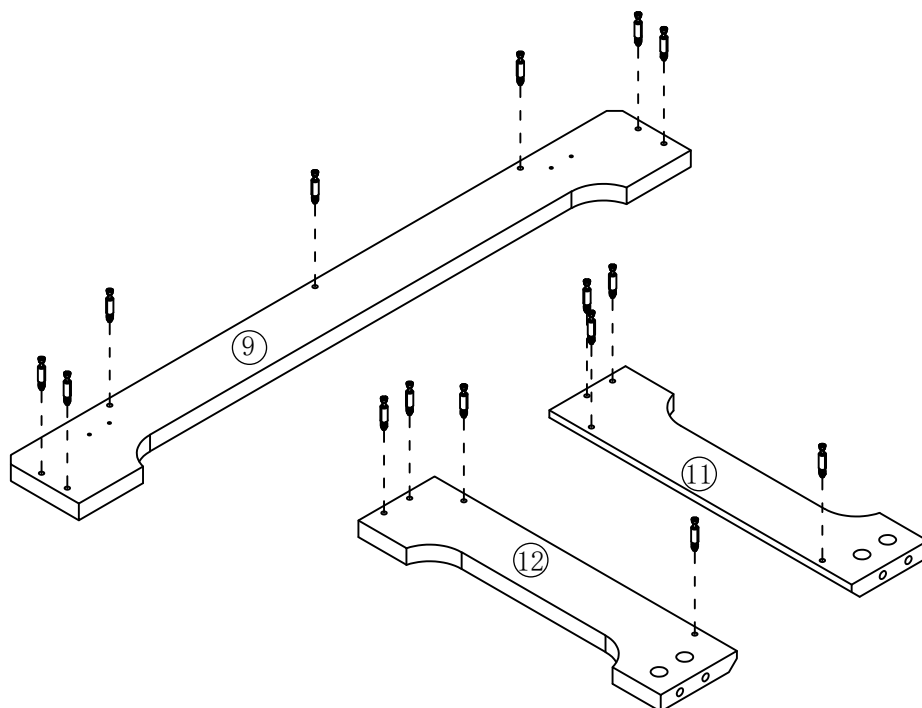


STEP2

A x 9



Ø6 x 34mm

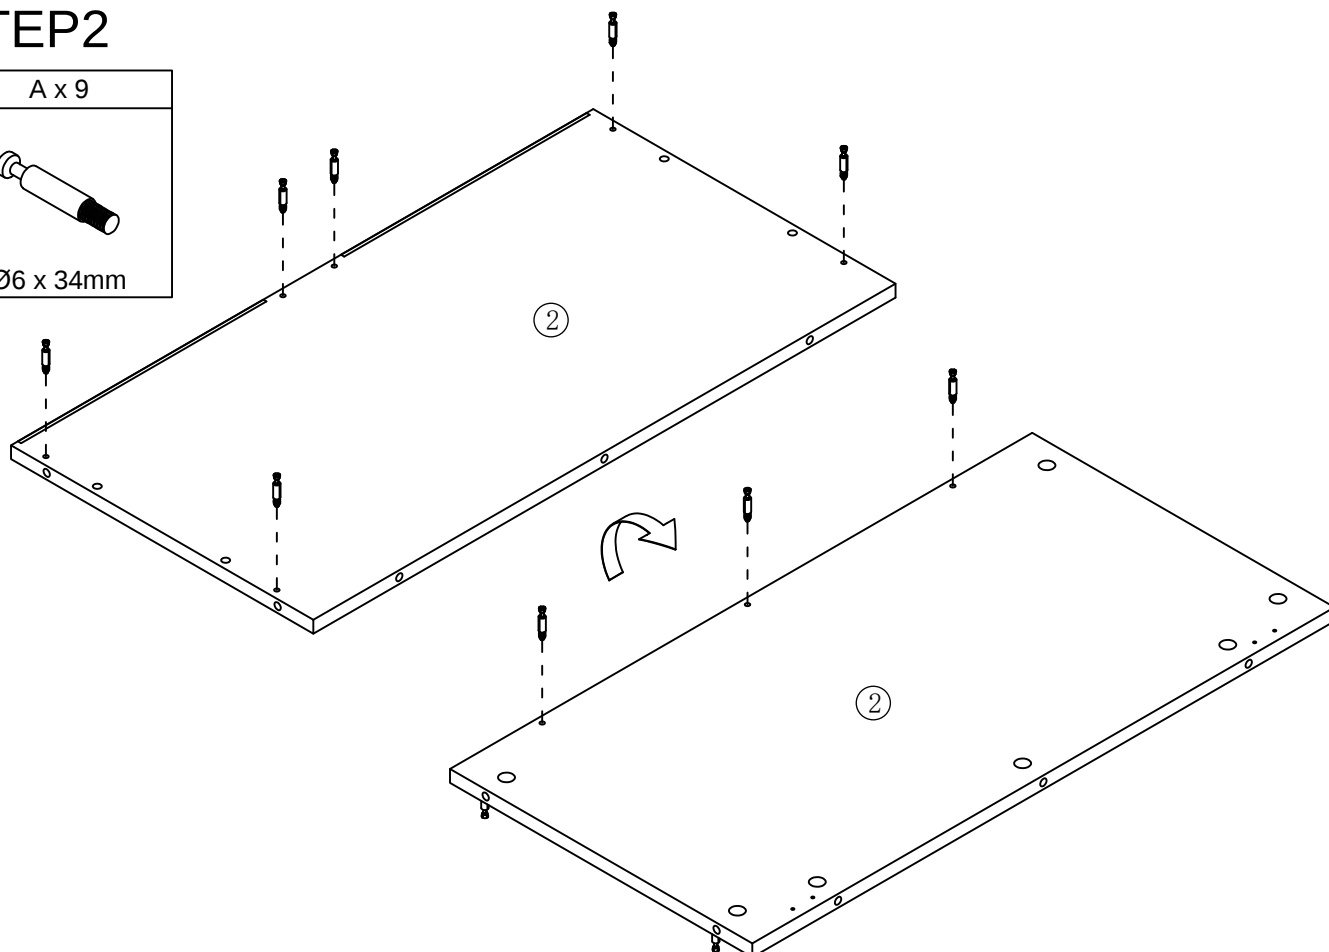


STEP3

B x 3



Ø15 x 10mm

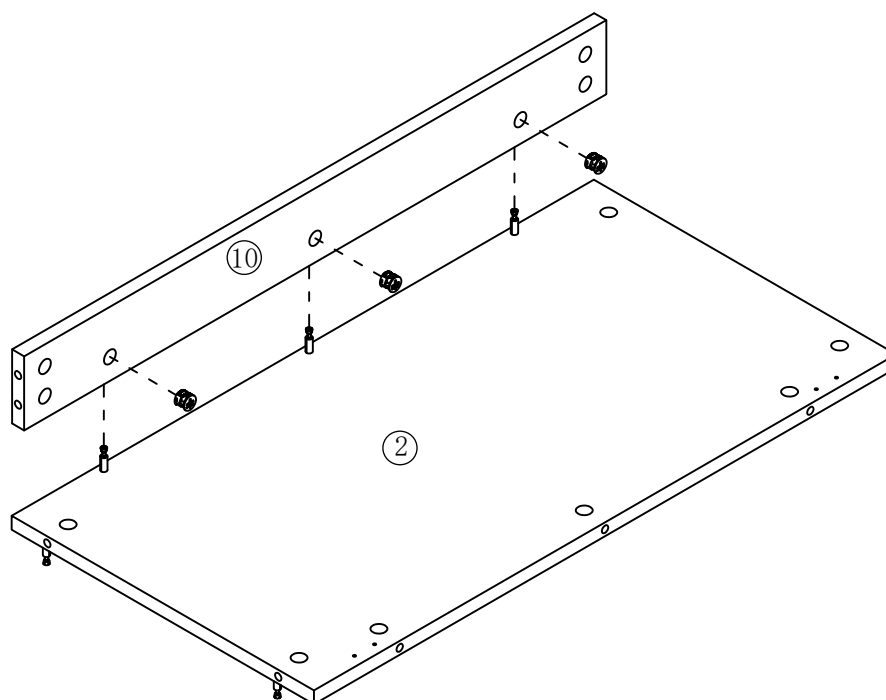


STEP4

B x 8



Ø15 x 10mm

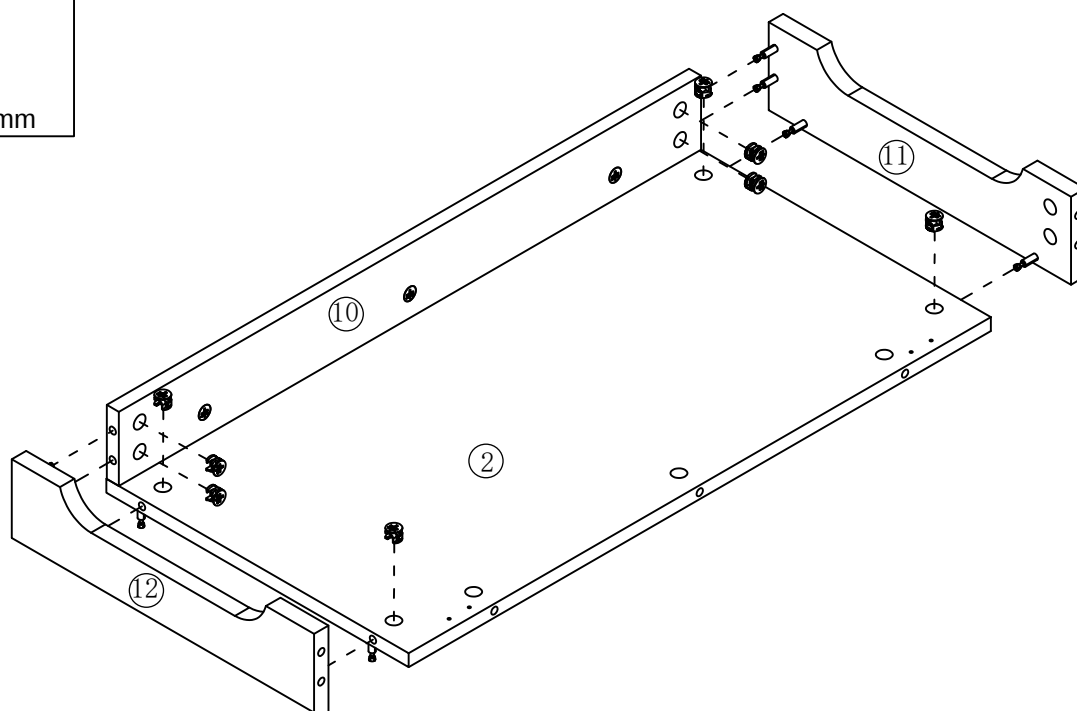


STEP5

B x 7



Ø15 x 10mm

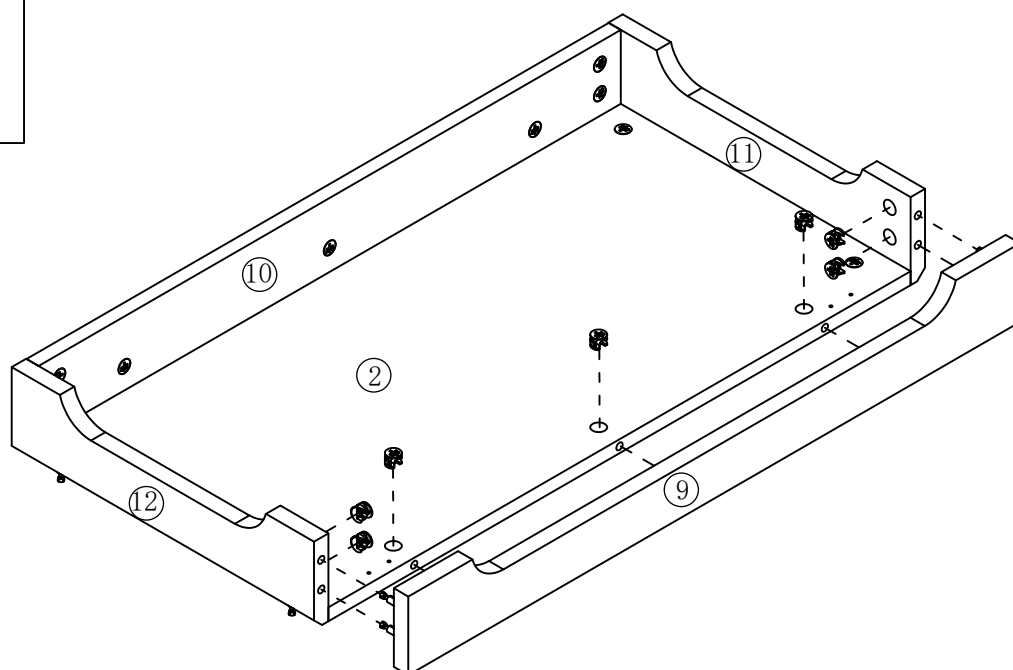



STEP6

I x 8




Ø3.5*14mm

J x 2

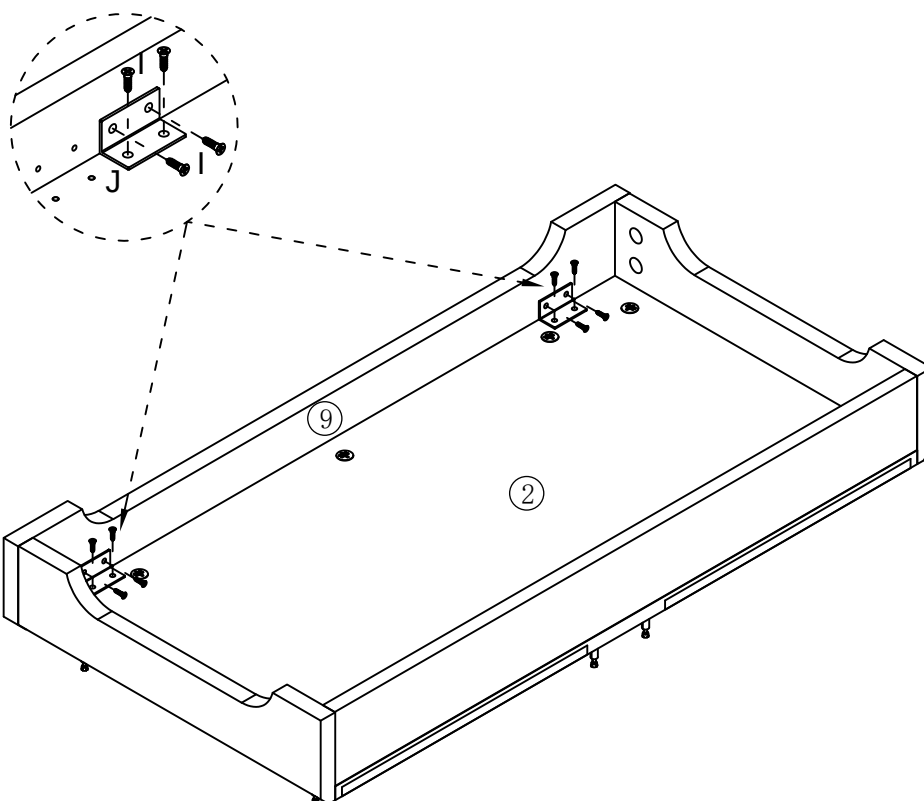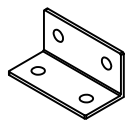


STEP7

A x 2



Ø6 x 34mm

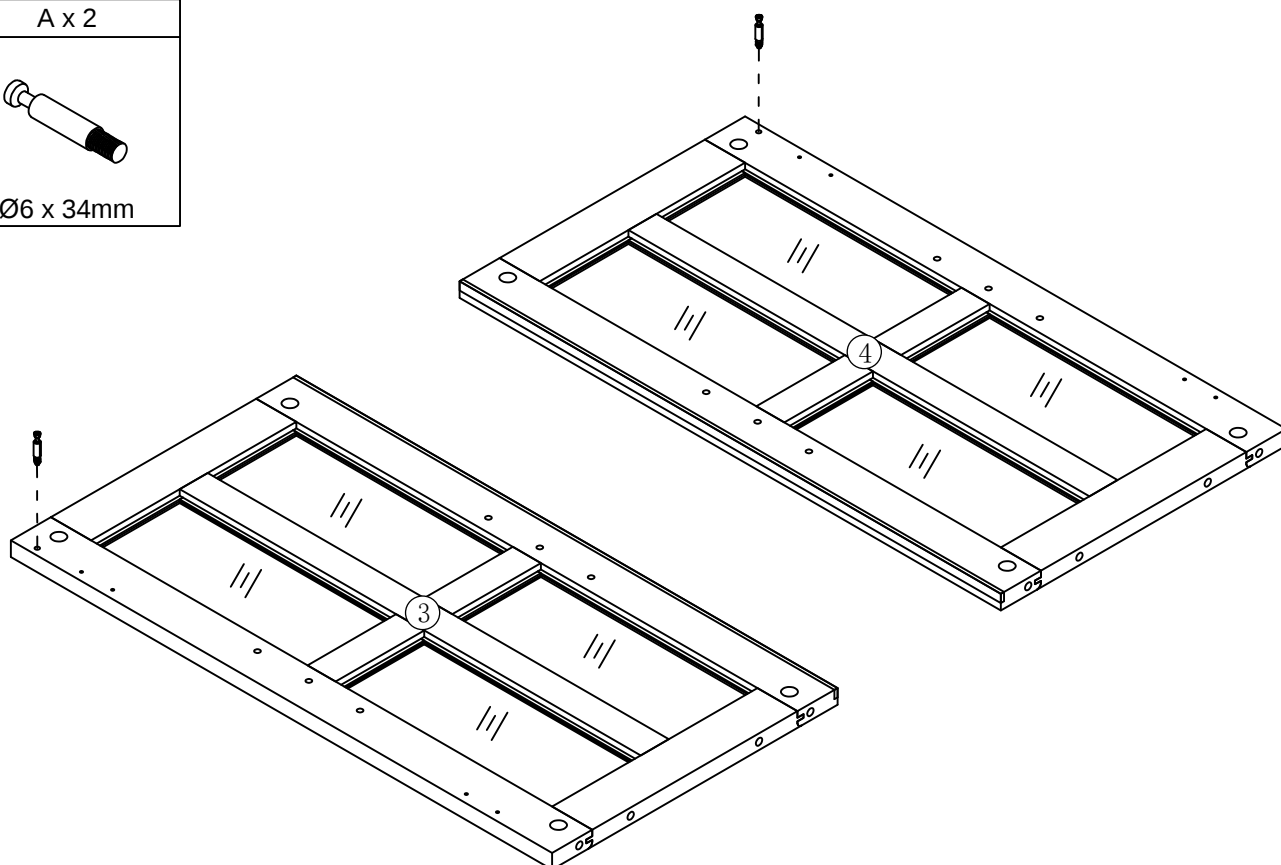


STEP8

B x 2



Ø15 x 10mm

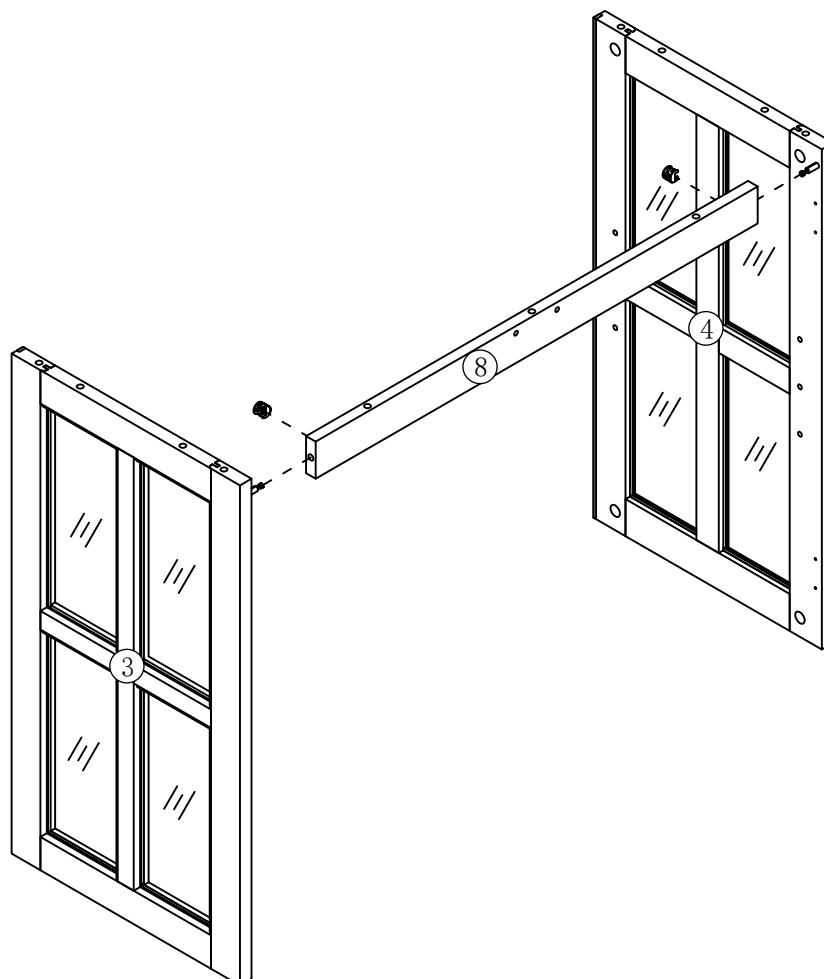


STEP9

B x 6




Ø15 x 10mm

C x 4



Ø8*30mm

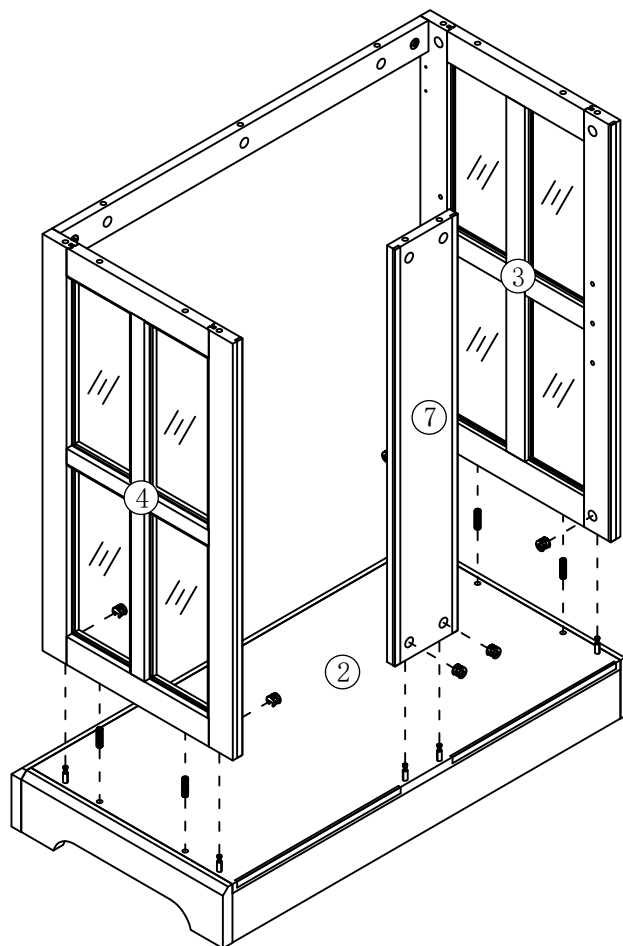


STEP10

A x 9



Ø6 x 34mm

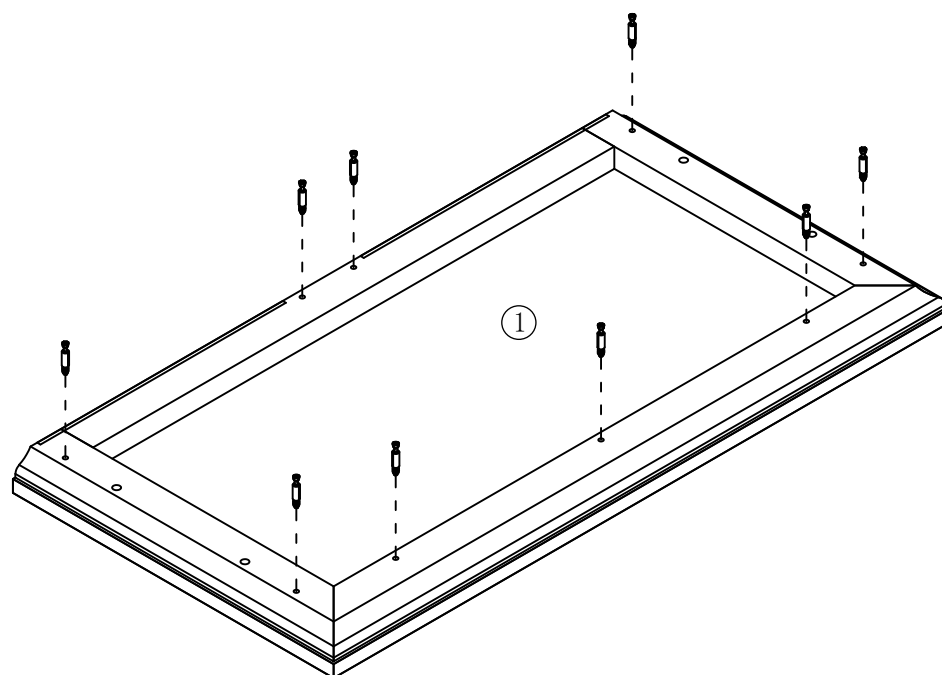



STEP11

I x 2



Ø3.5*14mm

O X 1

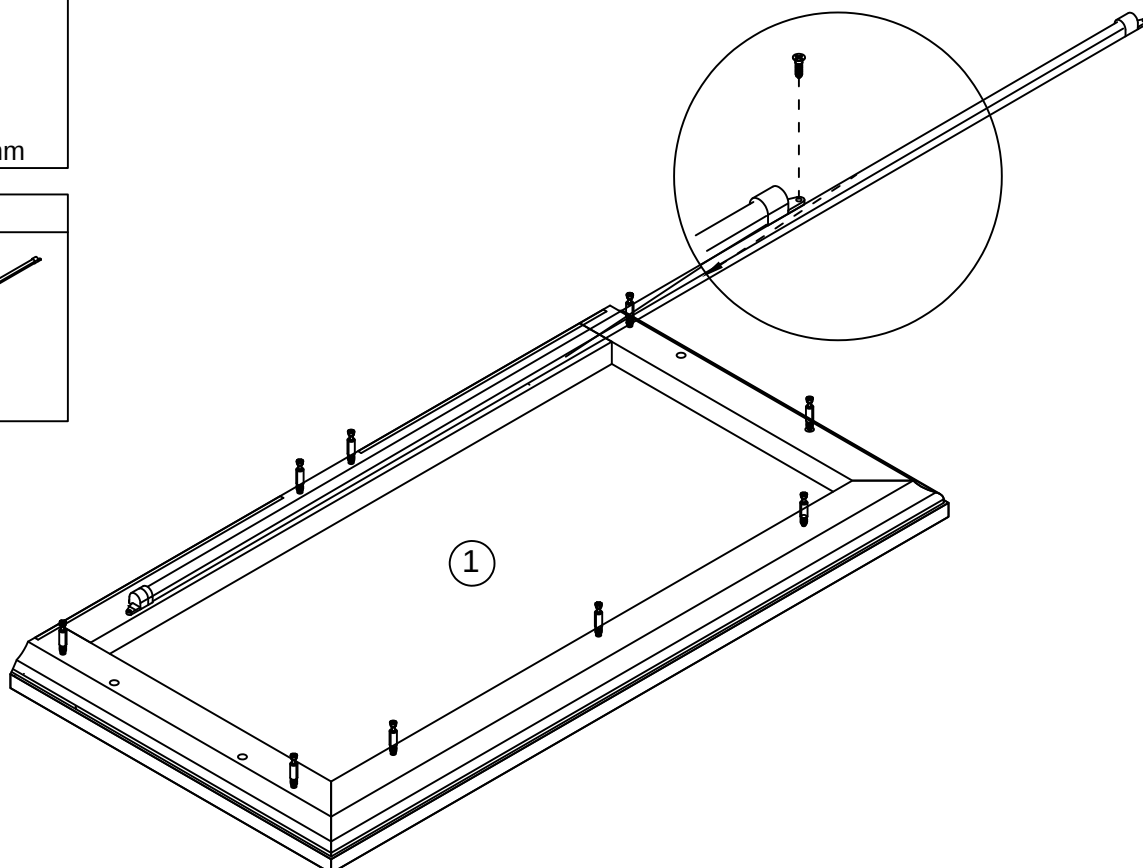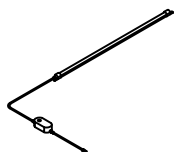


STEP12

B x 9




Ø15 x 10mm

C x 4



Ø8*30mm

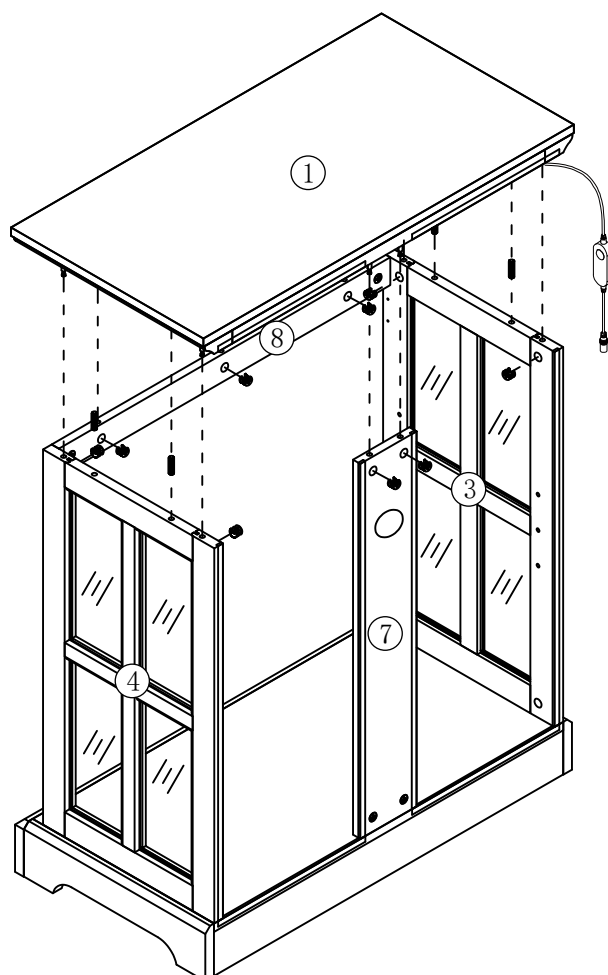


STEP13


L x 20



Ø3.5*12mm

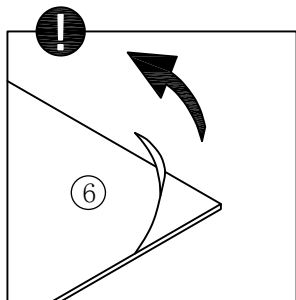

Remove protective film
on the mirror panel.

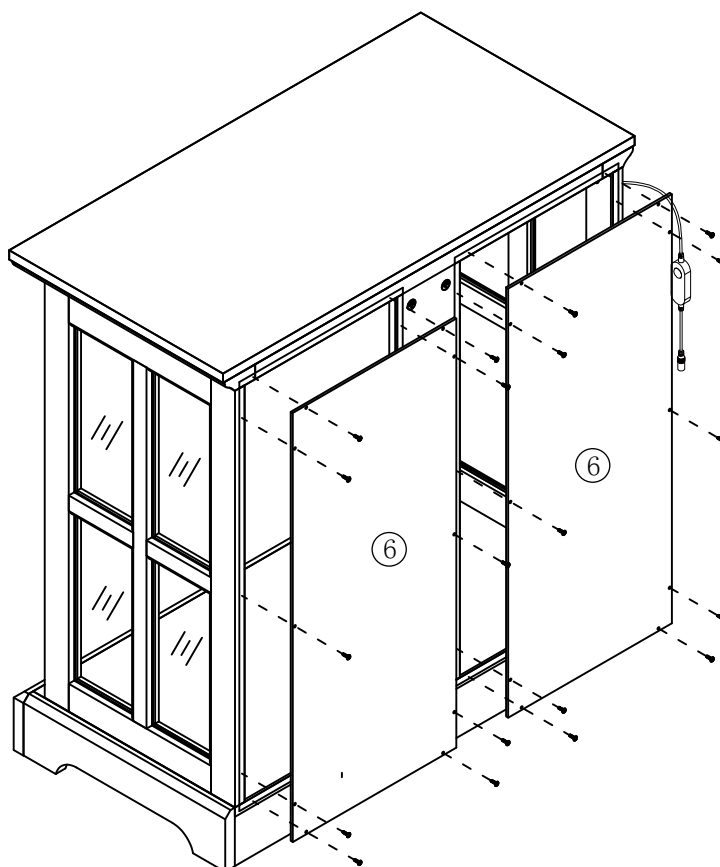


STEP14

H x 8



Ø20mm

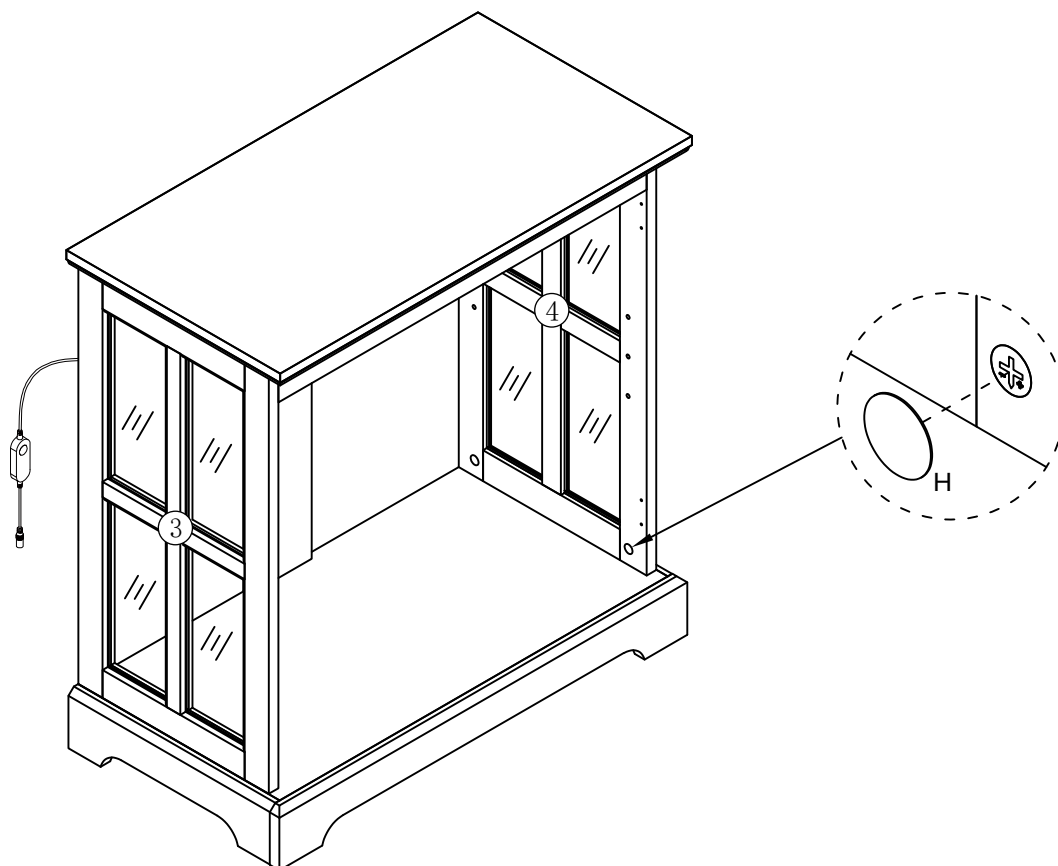



STEP15

I x 8




Ø3.5*14mm

M x 4

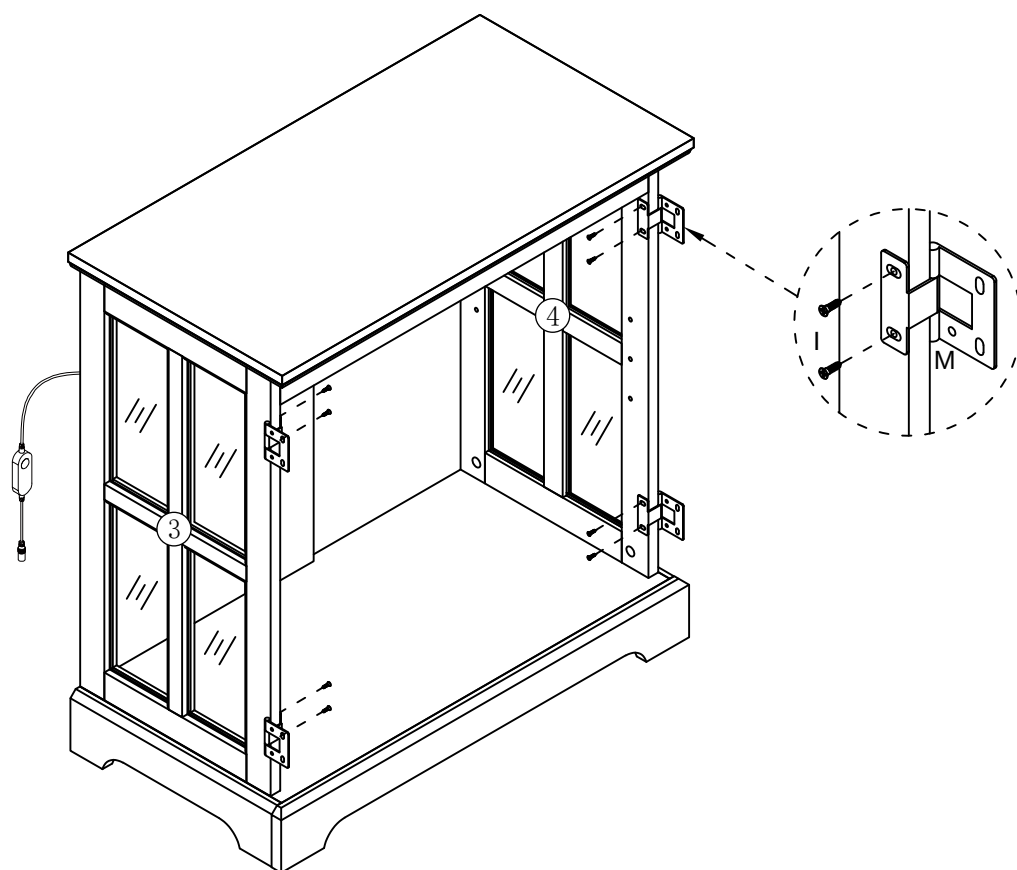

STEP16

K x 4

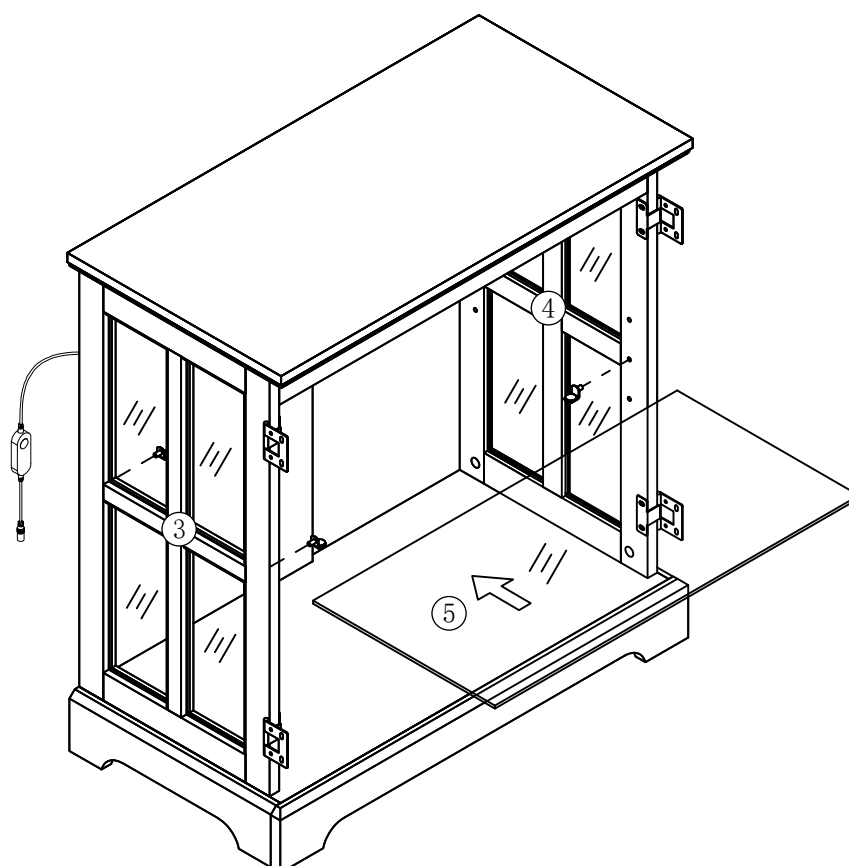


STEP17

F x 2



G x 2





Ø4*25mm

D x 4



Ø3*12mm

E x 2

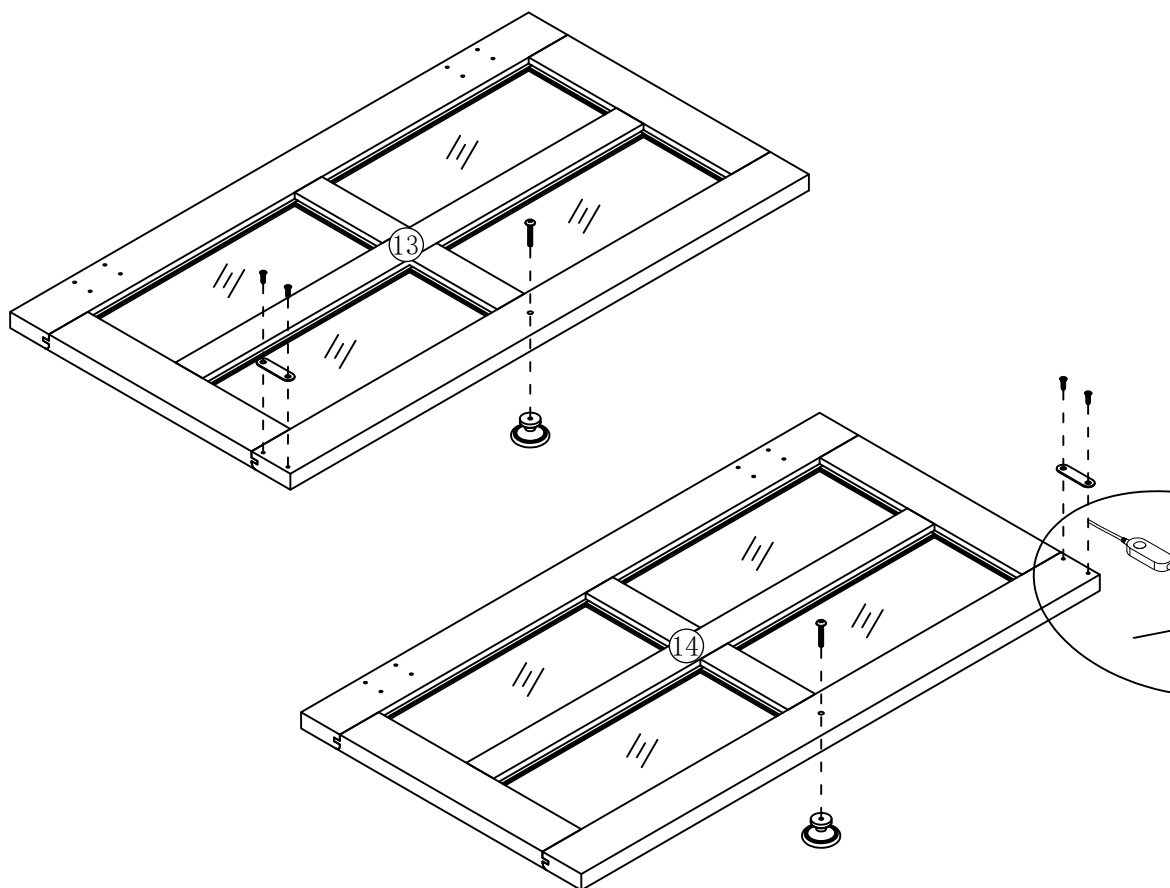


STEP18




I x 16





Ø3.5*14mm

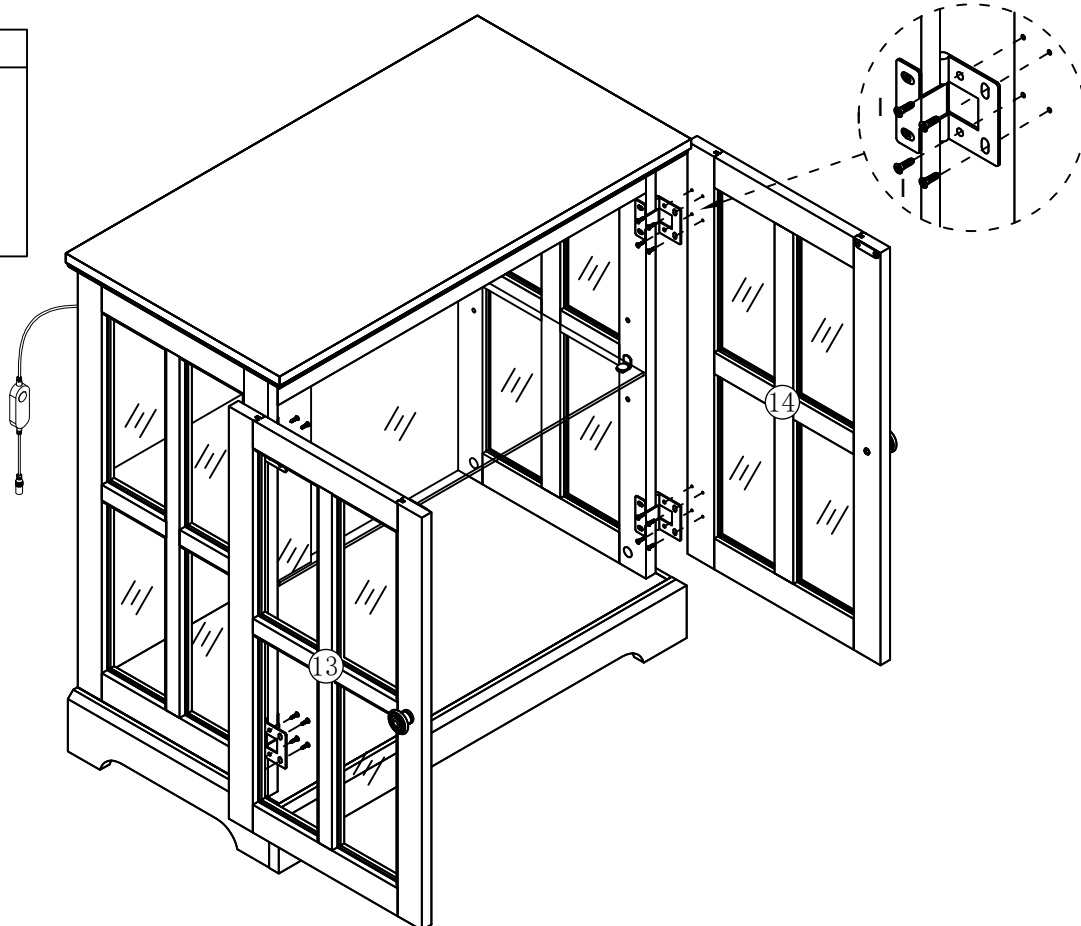

STEP19

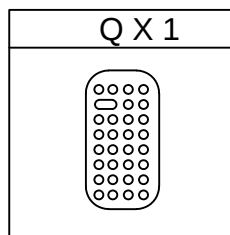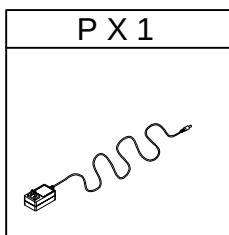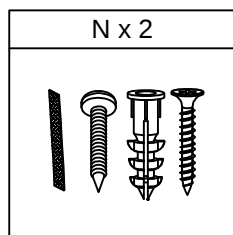

Wall

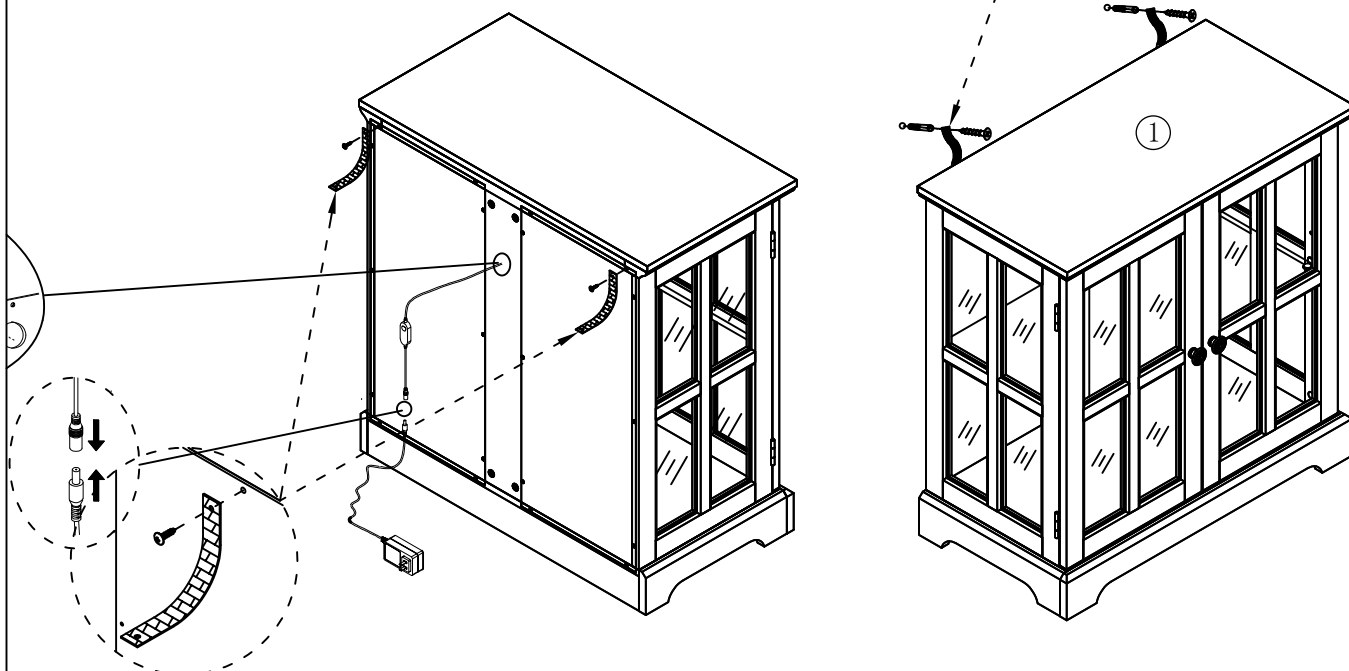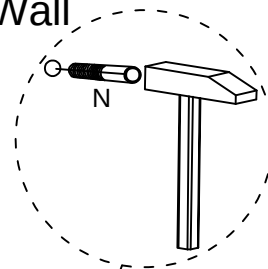

STEP20

