




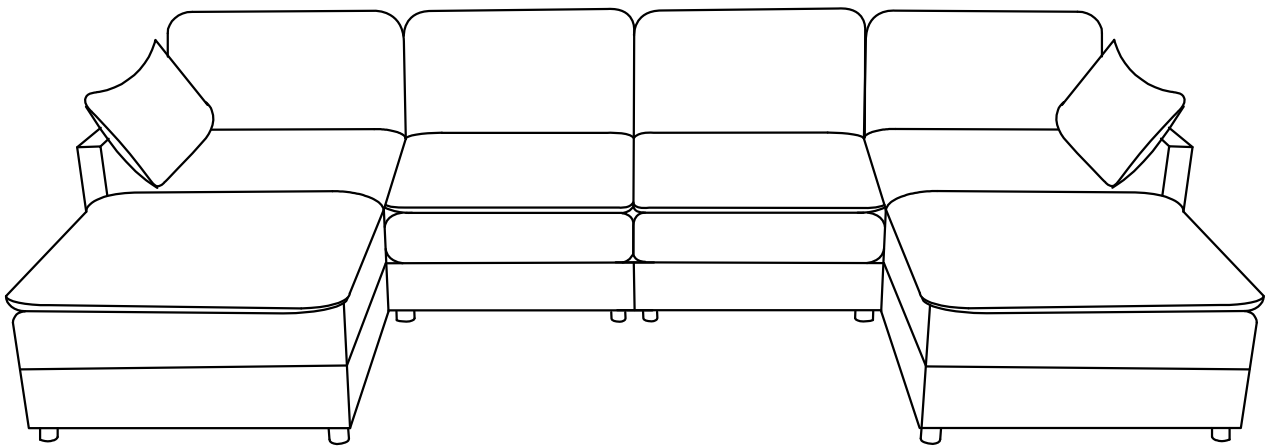

















ASSEMBLY INSTRUCTIONS





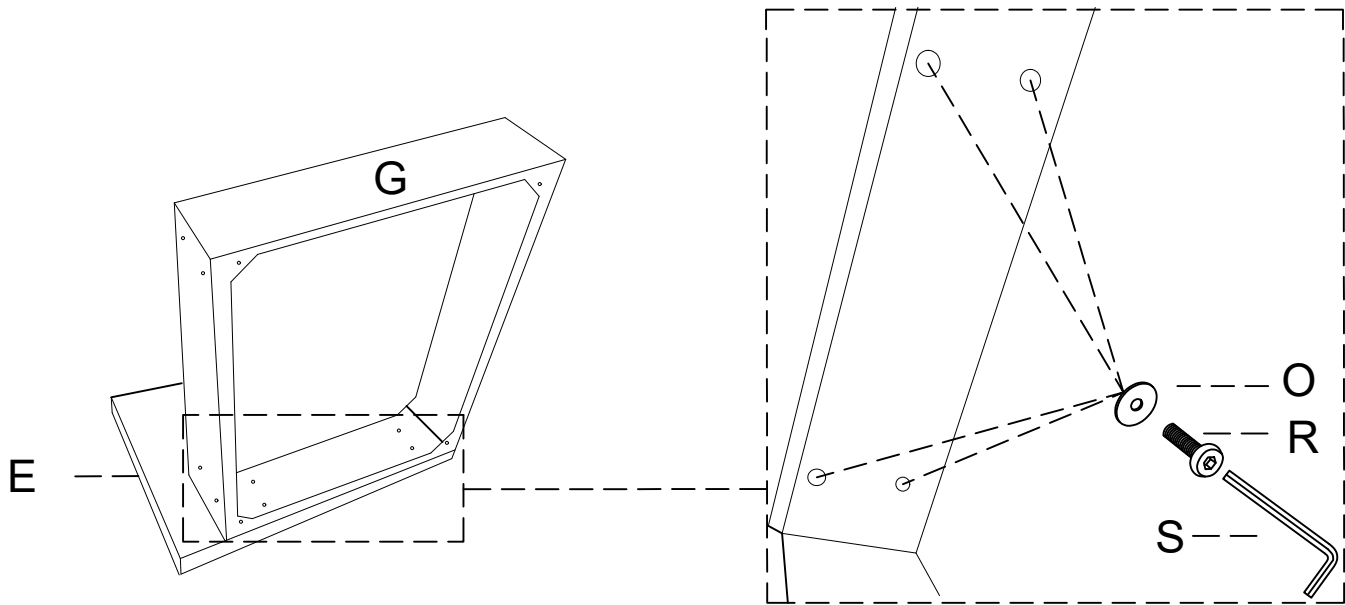
NOTE:

1. Please check the product you have received. If you find any parts missing, please contact the customer service team for help. They will deal with it in time.
2. Please assemble the product according to the instruction manual.
3. Any screw should not be tightened too hard before each part placing in the correct place. Please tighten all the screws finally after confirming all the parts in the right place to guarantee the stability of the product.
4. Don't open the vacuumed bags if you want to return the product or have a replacement product



NO	PARTS	QTY	DESCRIPTION
A		4PCS	Back Cushion
B		4PCS	Seat Cushion
C		2PCS	Ottoman Cushion
D		2PCS	Pillow
E		1PC	Left Armrest
F		1PC	Right Armrest
G		4PCS	Seat Frame
H		2PCS	Ottoman Frame
I		4PCS	Back Frame
J		2PCS	Angle Iron
K		3PCS	Backrest Connecting Piece
L		24PCS	Legs
M		12+1PCS	Nuts
N		24+1PCS	Plastic Washer
O		58+1PCS	Washers M8*φ20MM
P		10+1PCS	Screws M6*20MM
Q		16+1PCS	Screws M6*40MM
R		20+1PCS	Screws M8*55MM
S		1PC	Wrench
T		1PC	Open-end Wrench


1. Install one seat frame G to the left armrest E with screws R and washers O.

CODE	HARDWARE	QTY
R	 M8*55mm	4
O		4







2. Install another seat frame G to the right armrest F with screws R and washers O.

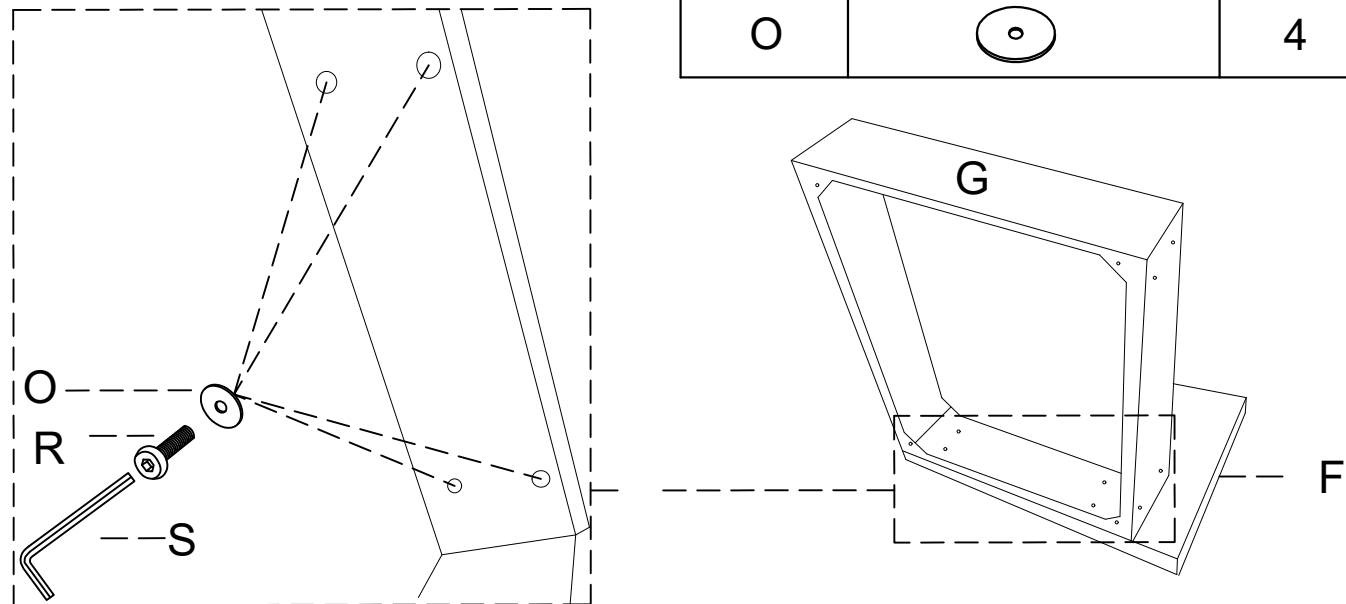CODE	HARDWARE	QTY
R	 M8*55mm	4
O		4






3. Connect the seat frame G with screws R, washers O and nuts M.

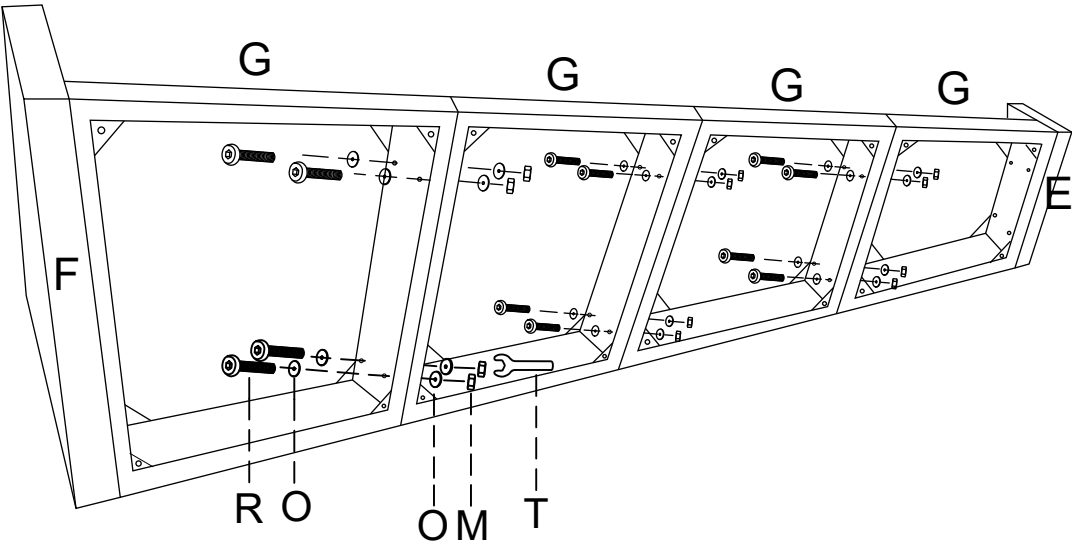CODE	HARDWARE	QTY
R	 M8*55mm	12
M		12
O		24




4. Install the back frame I to the seat frame G with screws Q and washers O.


CODE	HARDWARE	QTY
Q	 M6*40mm	16
O		16

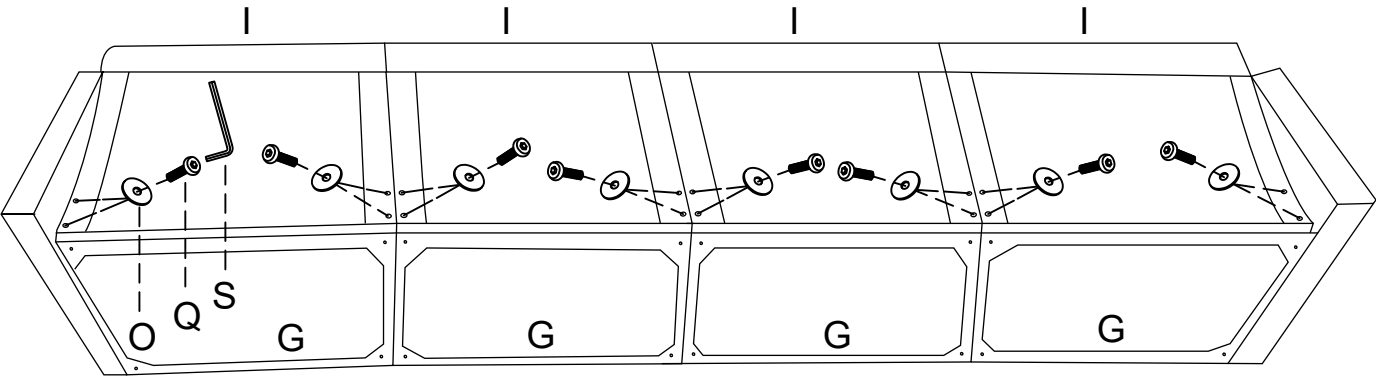

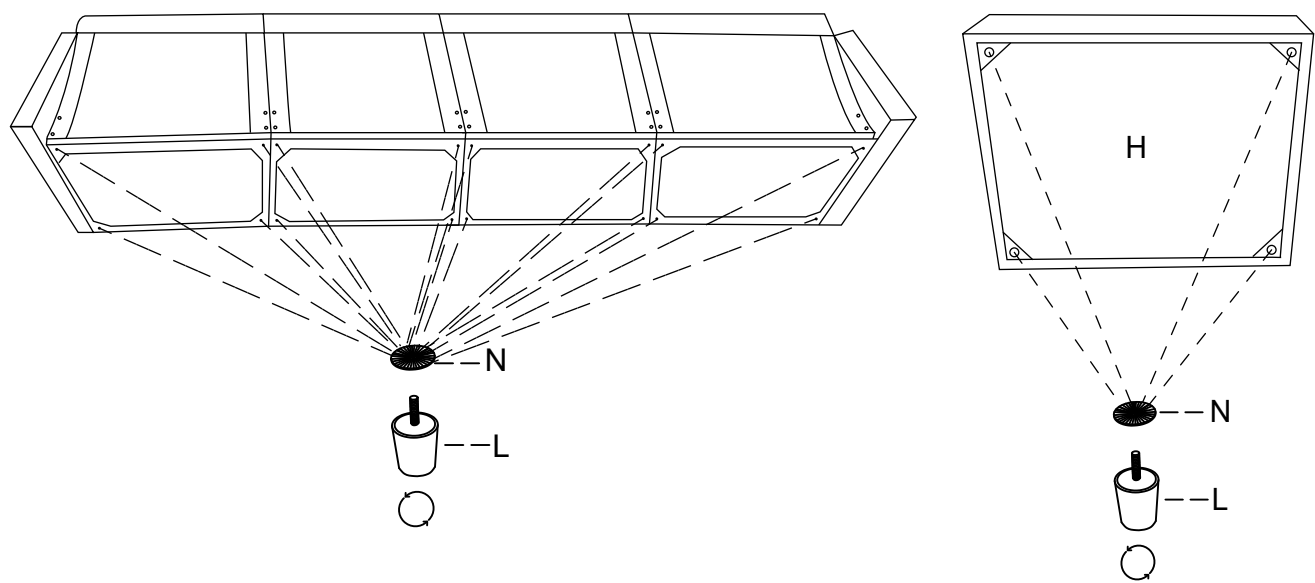

5. Screw in legs L and plastic washers N clockwise until secure.

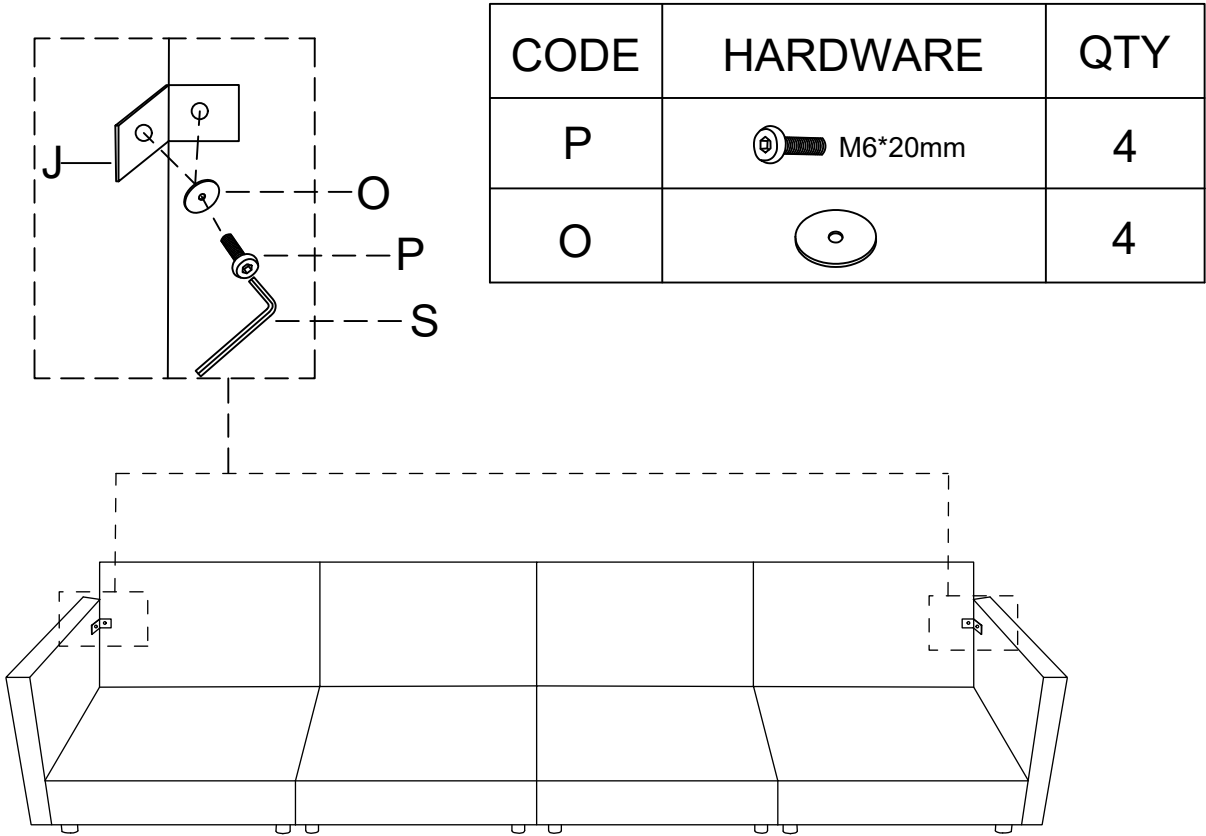


6. Install the angle iron J with screws P and washers O.




7. Install the connecting piece K to the back frame I with screws P and washers O.







CODE	HARDWARE	QTY
P	 M6*20mm	6
O		6

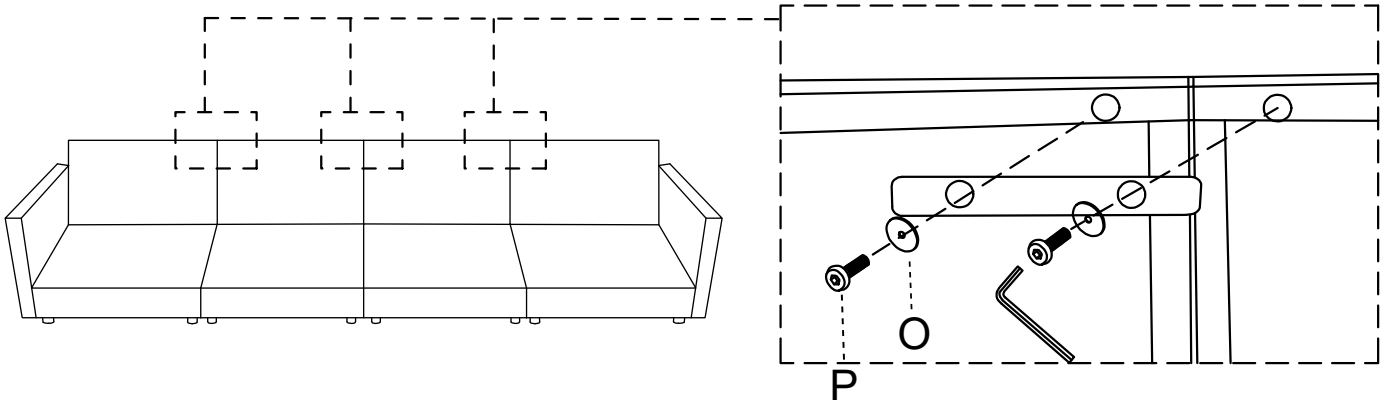

8. Put the ottoman cushion C on the ottoman frame H.

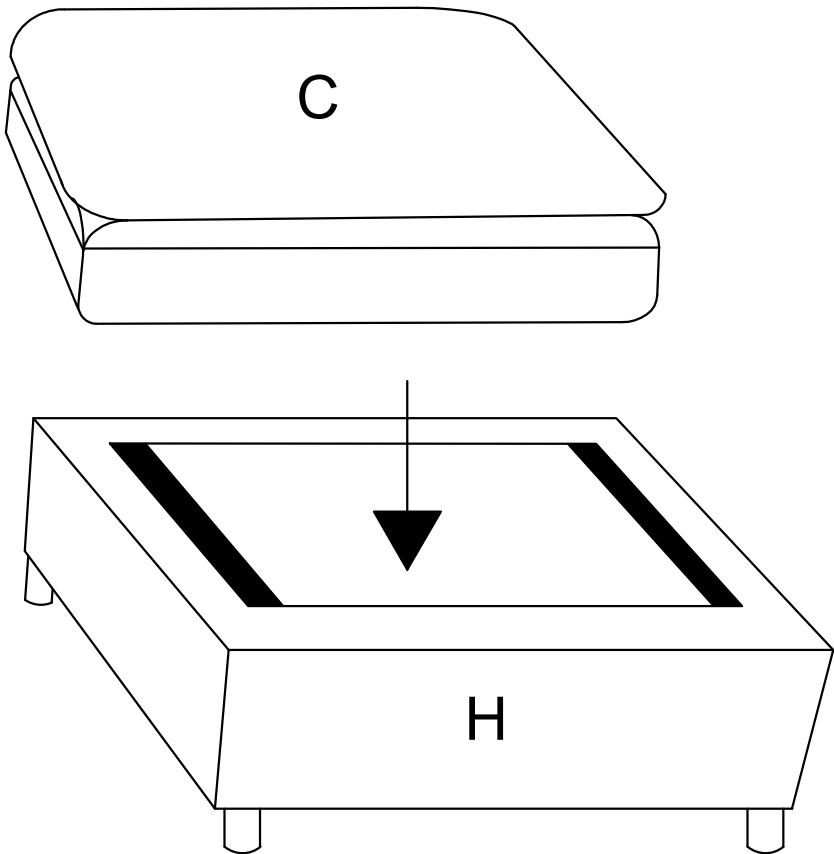

9. Put the seat cushion B and back cushion A on the sofa.

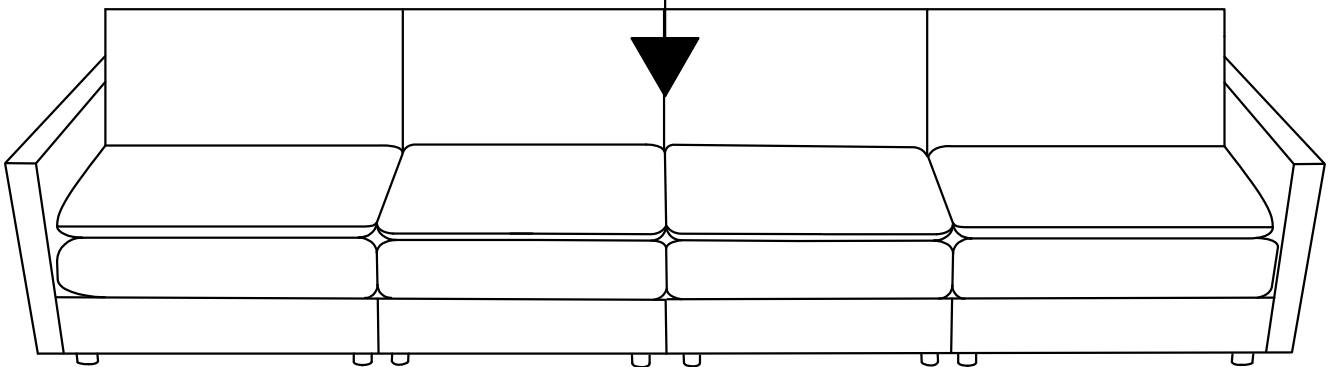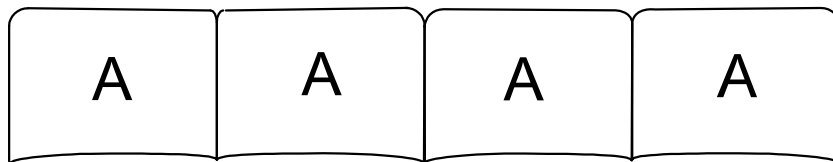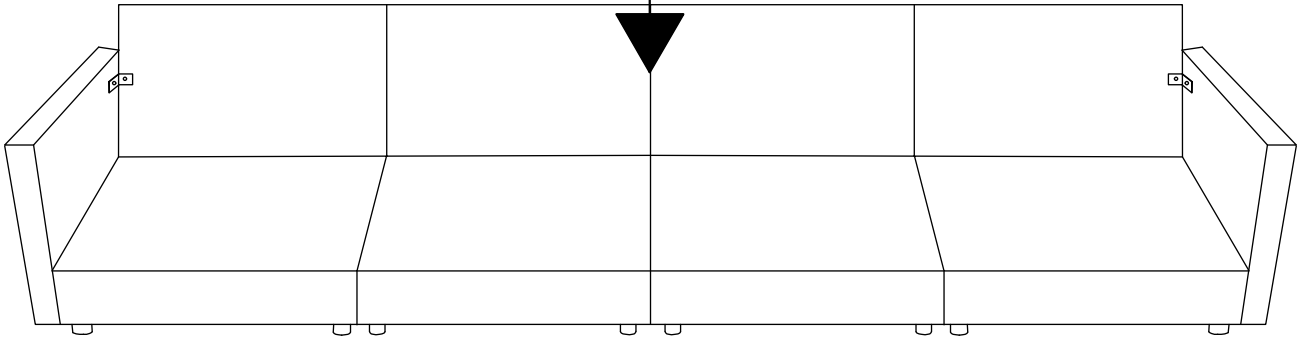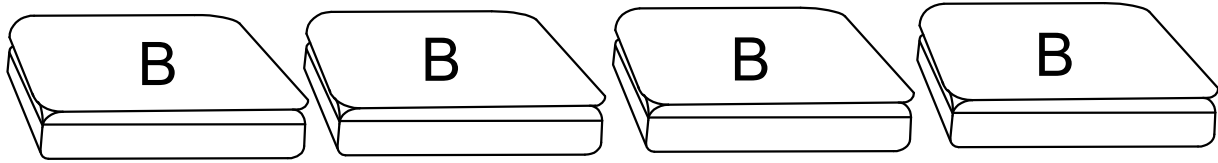

10. Put the pillows D on the sofa.

