


# Kitchen Island Carts

Assembly Instructions - Please keep for future reference

N707P186349

N707P186350

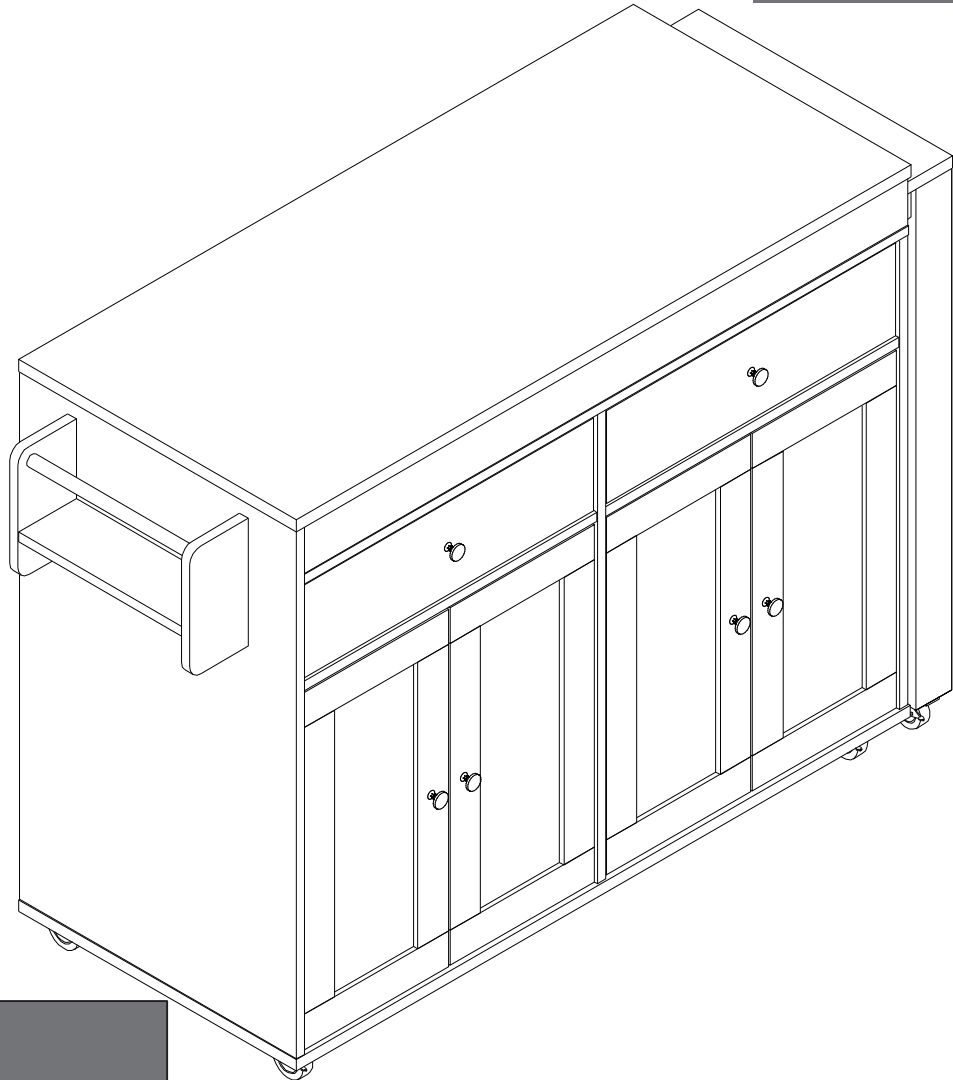

## Dimensions

Width-74inch

Depth-19.76inch+18.3inch

Height-36inch

**Important – Please read these instructions fully before starting assembly**

Issue 1 - 08/08/24



# Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

## **WARNING** In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)  
Do not allow children to climb or hang on the furniture  
Do not open more than one drawer at a time  
Do not place heavy items in the top drawers  
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


















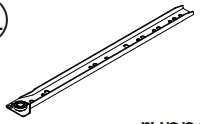
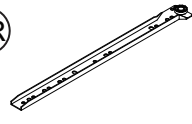
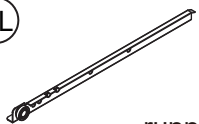
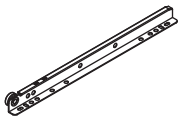
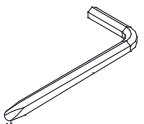
Please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type

# Components - Fittings


Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.
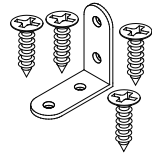
<b>(A)</b>  Cam Bolt x 27+2	<b>(B)</b>  Cam lock x 27+2	<b>(C)</b>  6*30mm Dowel x 38+2	<b>(D)</b>  Drawer slide x 2
<b>(E)</b>  3*12mm Screw x 16+1	<b>(F)</b>  4*40mm Screw x 45+2	<b>(G)</b>  Magnetic impact x 4	<b>(H)</b>  Caster x 3
<b>(I)</b>  Locking caster x 4	<b>(J)</b>  4*20mm Handle x 6set	<b>(K)</b>  Suction sheet x 4	<b>(L)</b>  x 8
<b>(M)</b>  4*30mm Screw x 12+1	<b>(N)</b>  8*30mm Dowel x 2	<b>(O)</b>  x 2	<b>(P)</b>  Perfect fit x12
<b>(Q)</b>  3.5*14mm Screw x 12+1	<b>(CL)</b>  runner x2	<b>(CR)</b>  runner x 2	<b>(DL)</b>  runner x2
<b>(DR)</b>  runner x 2	<b>(R)</b>  Allen key x 1		

## Tools required

## Ruler - Use this ruler to help correctly identify the screws

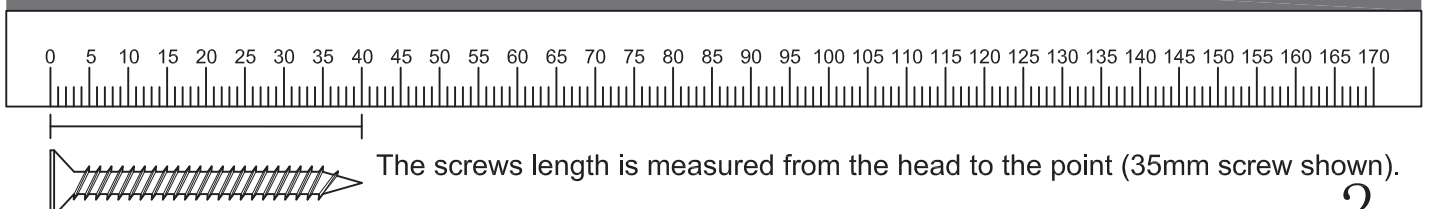


# Using Camlocks

## Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.  
NE PAS SERRER EXCESSIVEMENT.

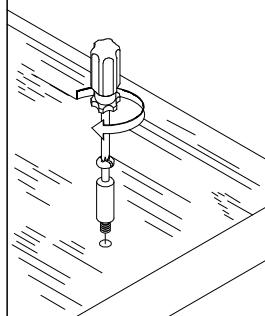

## Step 2

Push the male camlock into the entry hole.

2

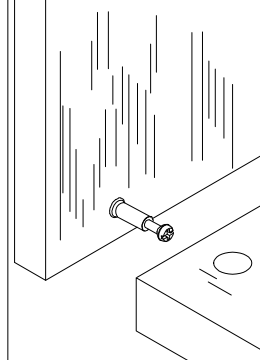


## Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

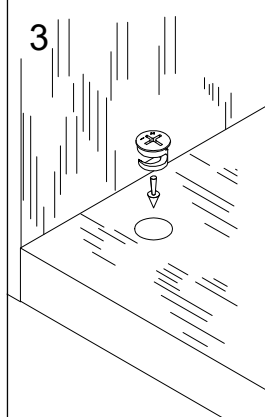


## Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.


The joint is now secure.

4

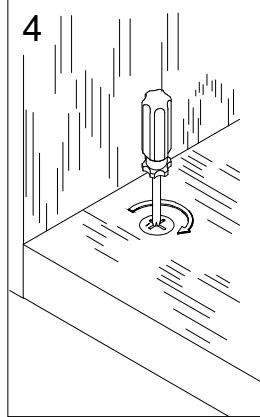


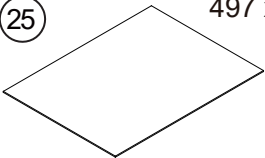
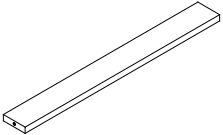
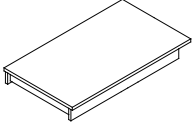
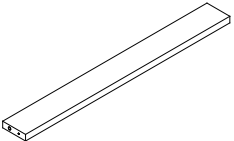
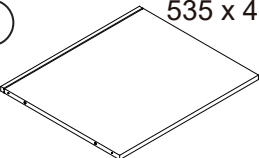
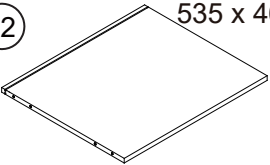

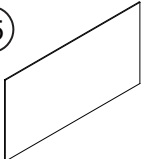


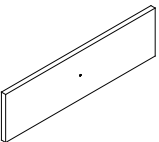


# Assembly Instructions

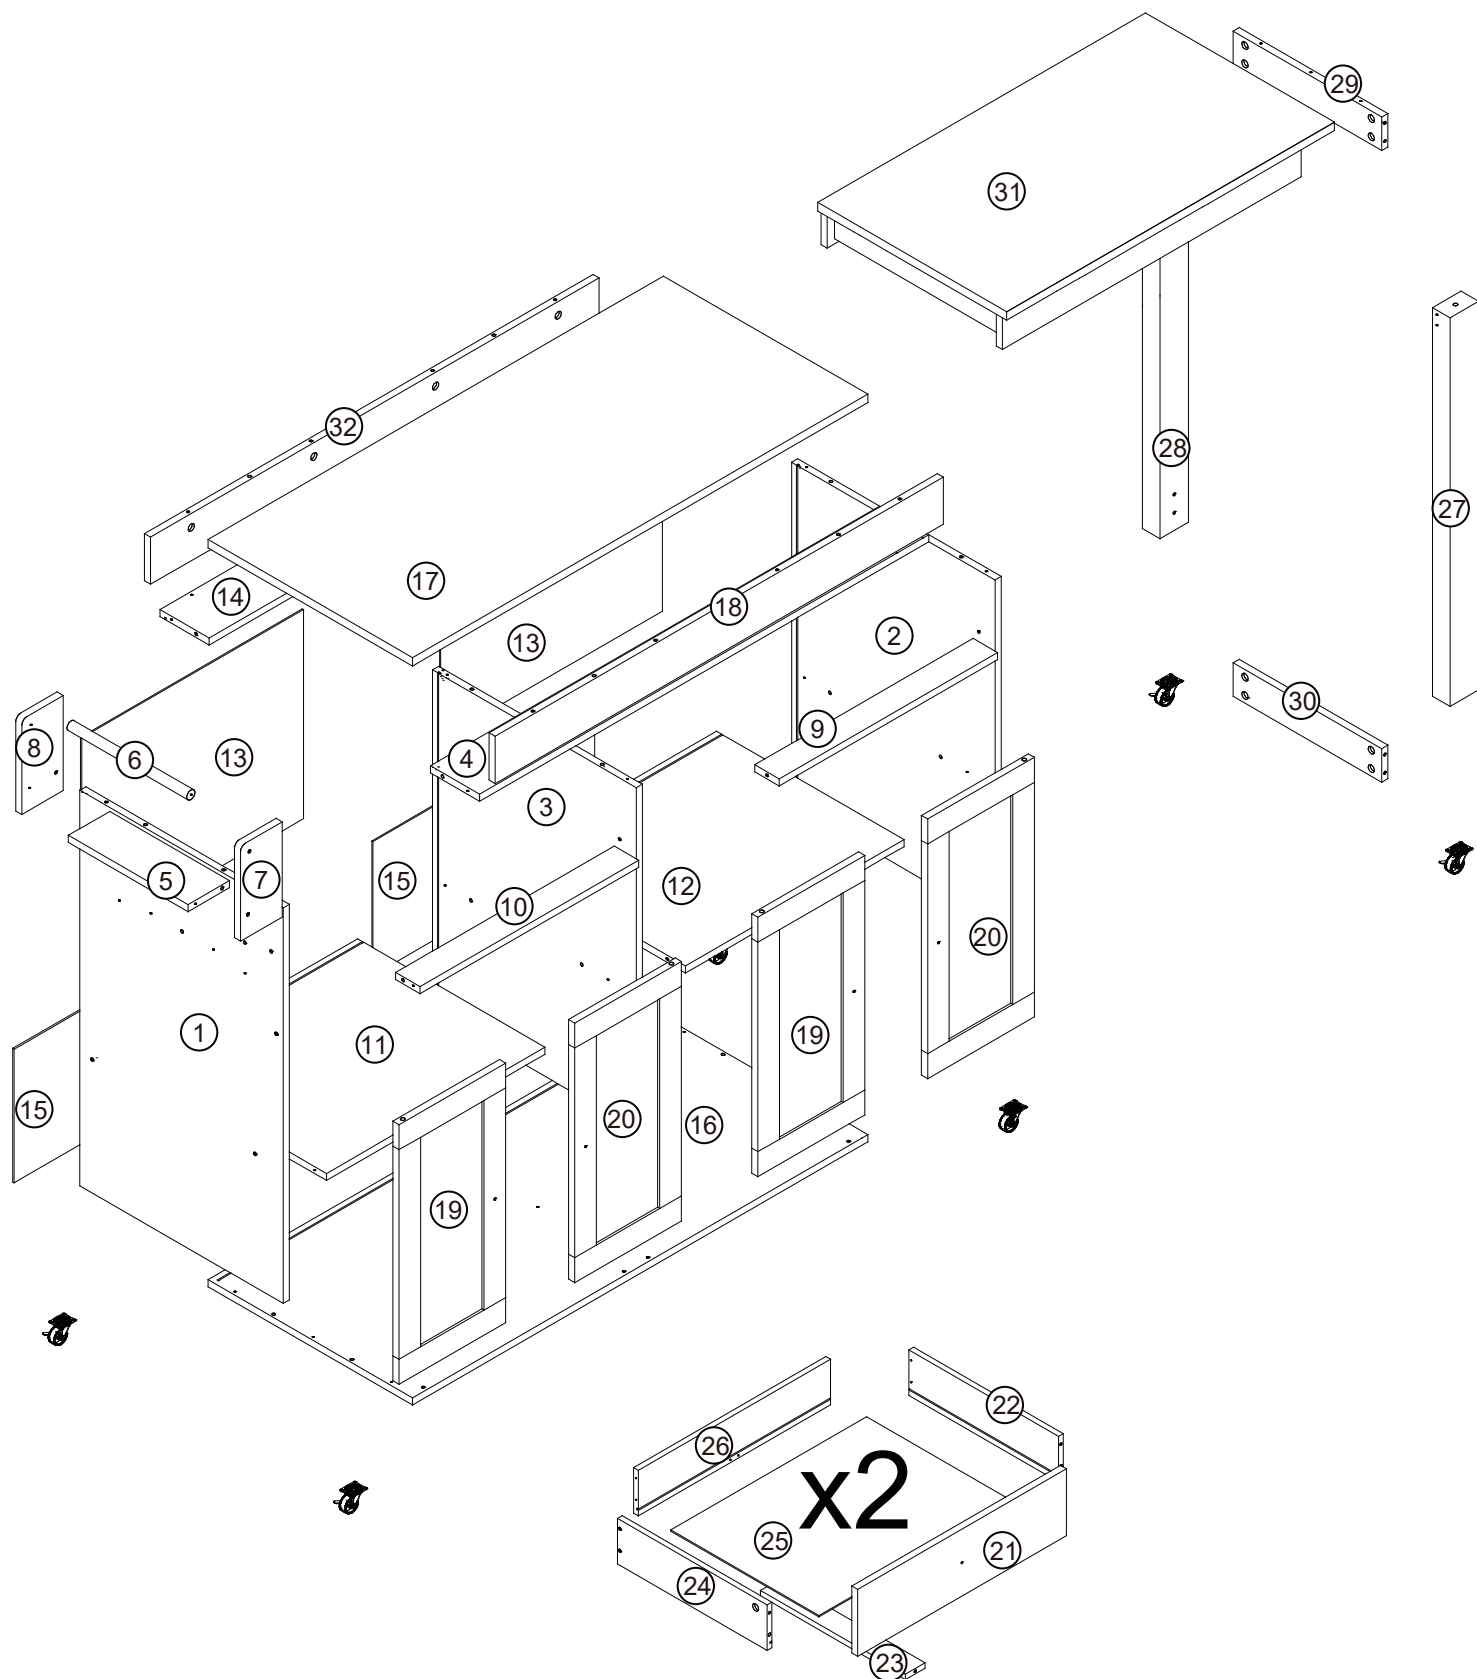


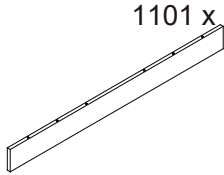


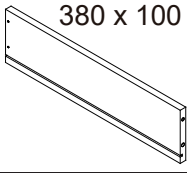
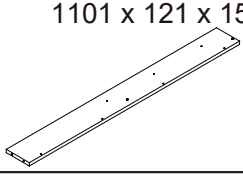
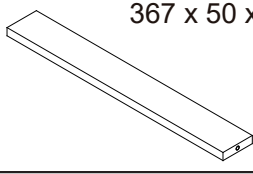
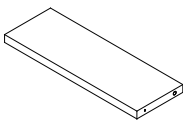
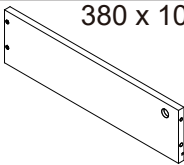
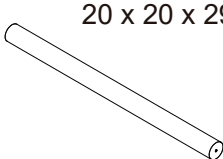
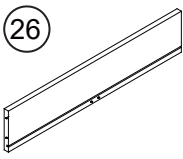




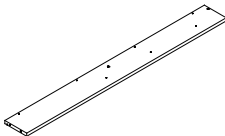
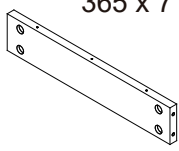
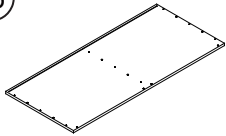
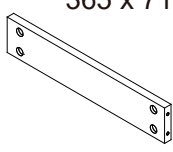
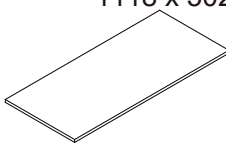
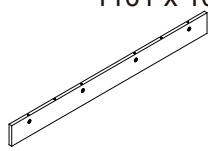
# Assembly Instructions

## N707P186349

<p>① 840 x 500 x 15 mm</p>  <p><b>1</b></p>	<p>②⑤ 497 x 376 x 3 mm</p>  <p><b>2</b></p>
<p>⑨ 535 x 60 x 15 mm</p>  <p><b>1</b></p>	<p>③① 805 x 464 x 84 mm</p>  <p><b>1</b></p>
<p>⑩ 535 x 60 x 15 mm</p>  <p><b>1</b></p>	
<p>⑪ 535 x 460 x 15 mm</p>  <p><b>1</b></p>	
<p>⑫ 535 x 460 x 15 mm</p>  <p><b>1</b></p>	
<p>⑬ 544 x 444 x 3 mm</p>  <p><b>2</b></p>	
<p>⑮ 544 x 284 x 3 mm</p>  <p><b>2</b></p>	
<p>⑰ 551 x 262 x 15 mm</p>  <p><b>2</b></p>	
<p>⑳ 551 x 262 x 15 mm</p>  <p><b>2</b></p>	
<p>㉑ 530 x 147 x 15 mm</p>  <p><b>2</b></p>	


# Assembly Instructions

## N707P186350


 <p>725 x 500 x 15 mm</p> <p><b>1</b></p>	 <p>1101 x 100 x 15 mm</p> <p><b>1</b></p>	 <p>Hardware kit x1</p>
 <p>725 x 500 x 15 mm</p> <p><b>1</b></p>	 <p>380 x 100 x 12 mm</p> <p><b>2</b></p>	
 <p>1101 x 121 x 15 mm</p> <p><b>1</b></p>	 <p>367 x 50 x 12 mm</p> <p><b>2</b></p>	
 <p>294 x 102 x 15 mm</p> <p><b>1</b></p>	 <p>380 x 100 x 12 mm</p> <p><b>2</b></p>	
 <p>20 x 20 x 294 mm</p> <p><b>1</b></p>	 <p>488 x 100 x 12 mm</p> <p><b>2</b></p>	
 <p>202 x 102 x 15 mm</p> <p><b>1</b></p>	 <p>825 x 70 x 43 mm</p> <p><b>1</b></p>	
 <p>202 x 102 x 15 mm</p> <p><b>1</b></p>	 <p>825 x 70 x 43 mm</p> <p><b>1</b></p>	
 <p>1101 x 121 x 15 mm</p> <p><b>1</b></p>	 <p>365 x 71 x 15 mm</p> <p><b>1</b></p>	
 <p>1118 x 502 x 15 mm</p> <p><b>1</b></p>	 <p>365 x 71 x 15 mm</p> <p><b>1</b></p>	
 <p>1118 x 502 x 18 mm</p> <p><b>1</b></p>	 <p>1101 x 100 x 15 mm</p> <p><b>1</b></p>	

# Assembly Instructions

## Step 1

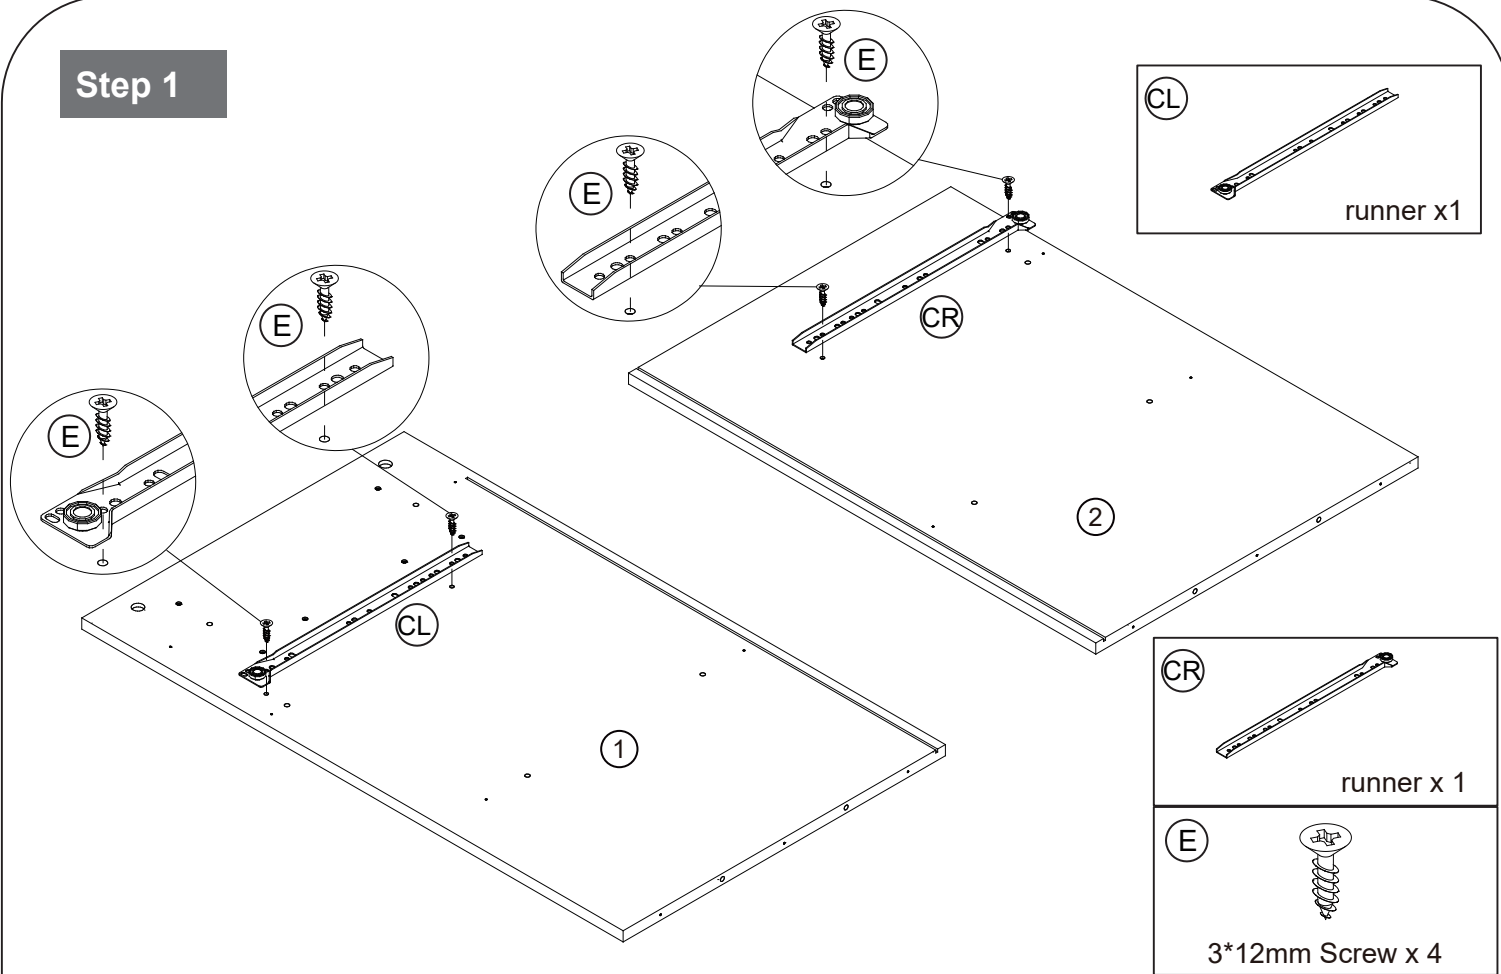


## Step 2

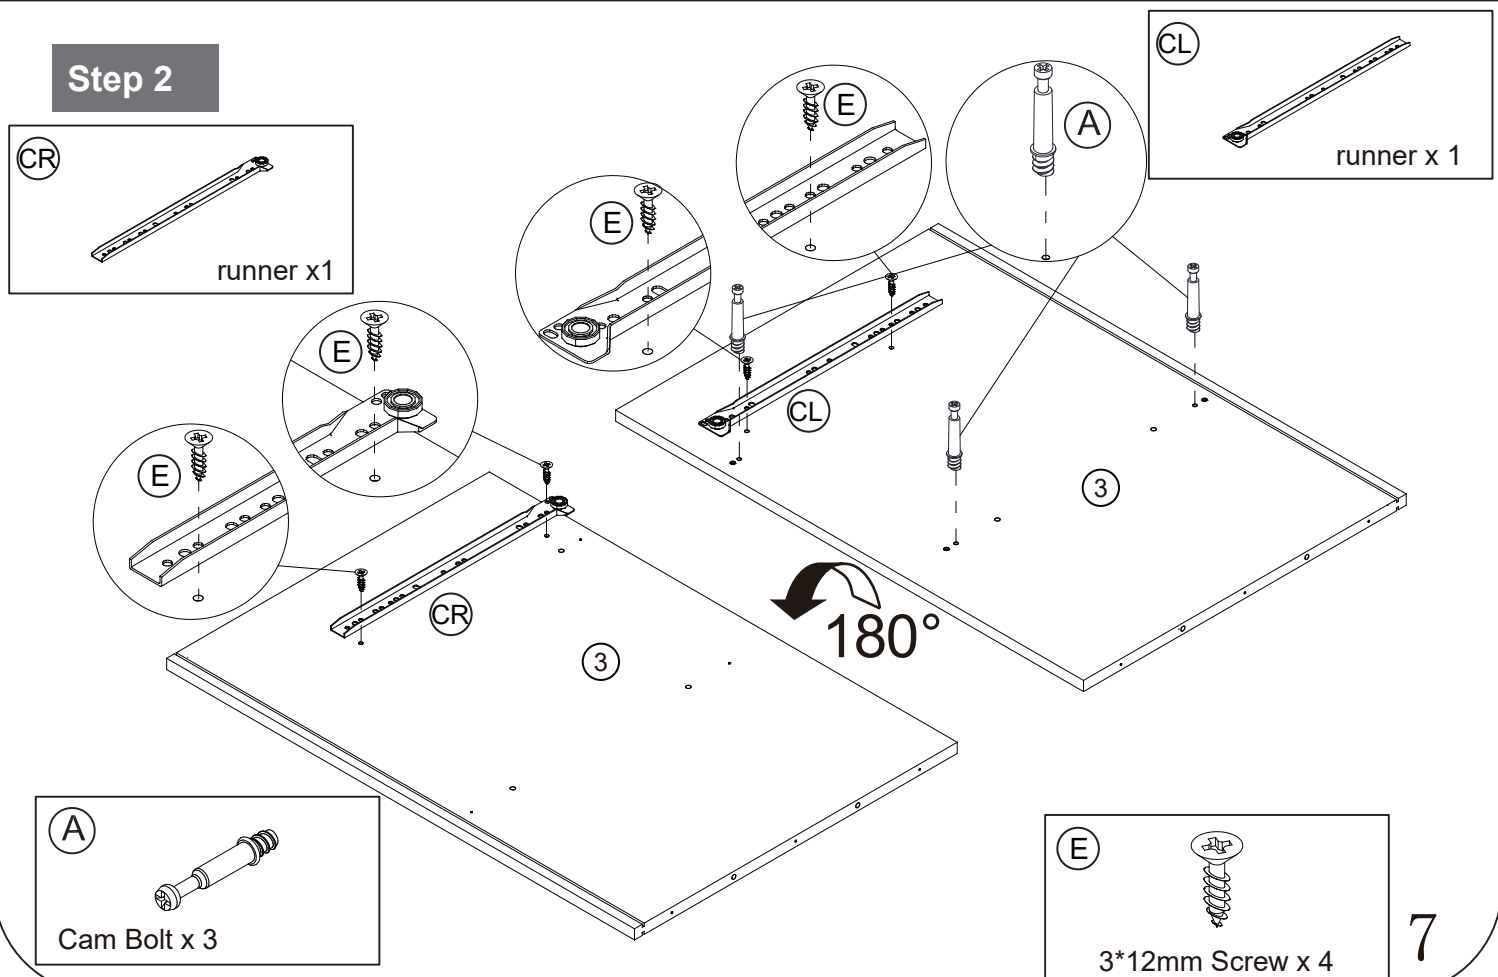


# Assembly Instructions

## Step 3

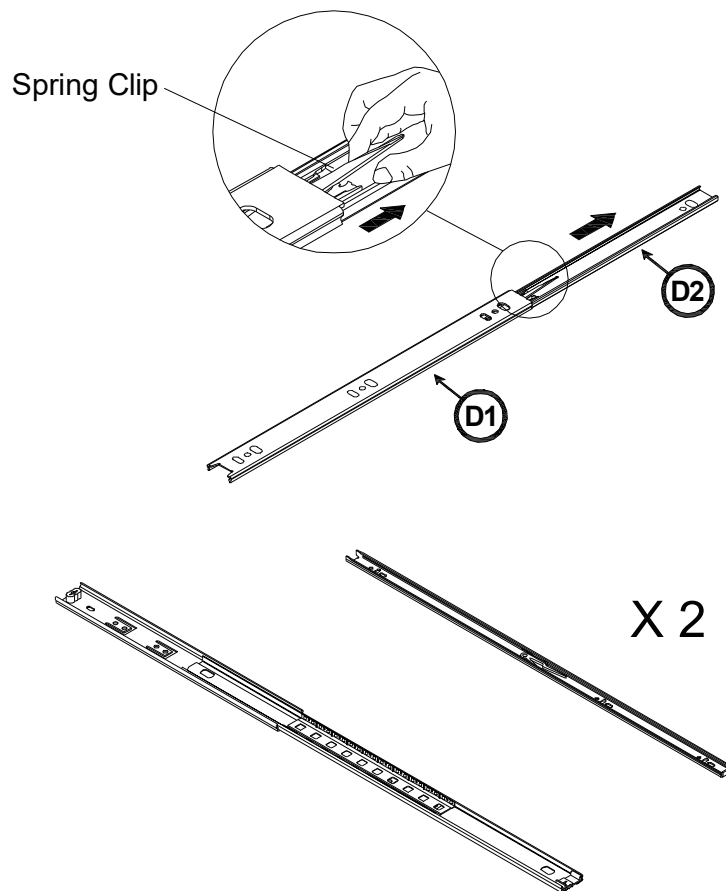


## Step 4


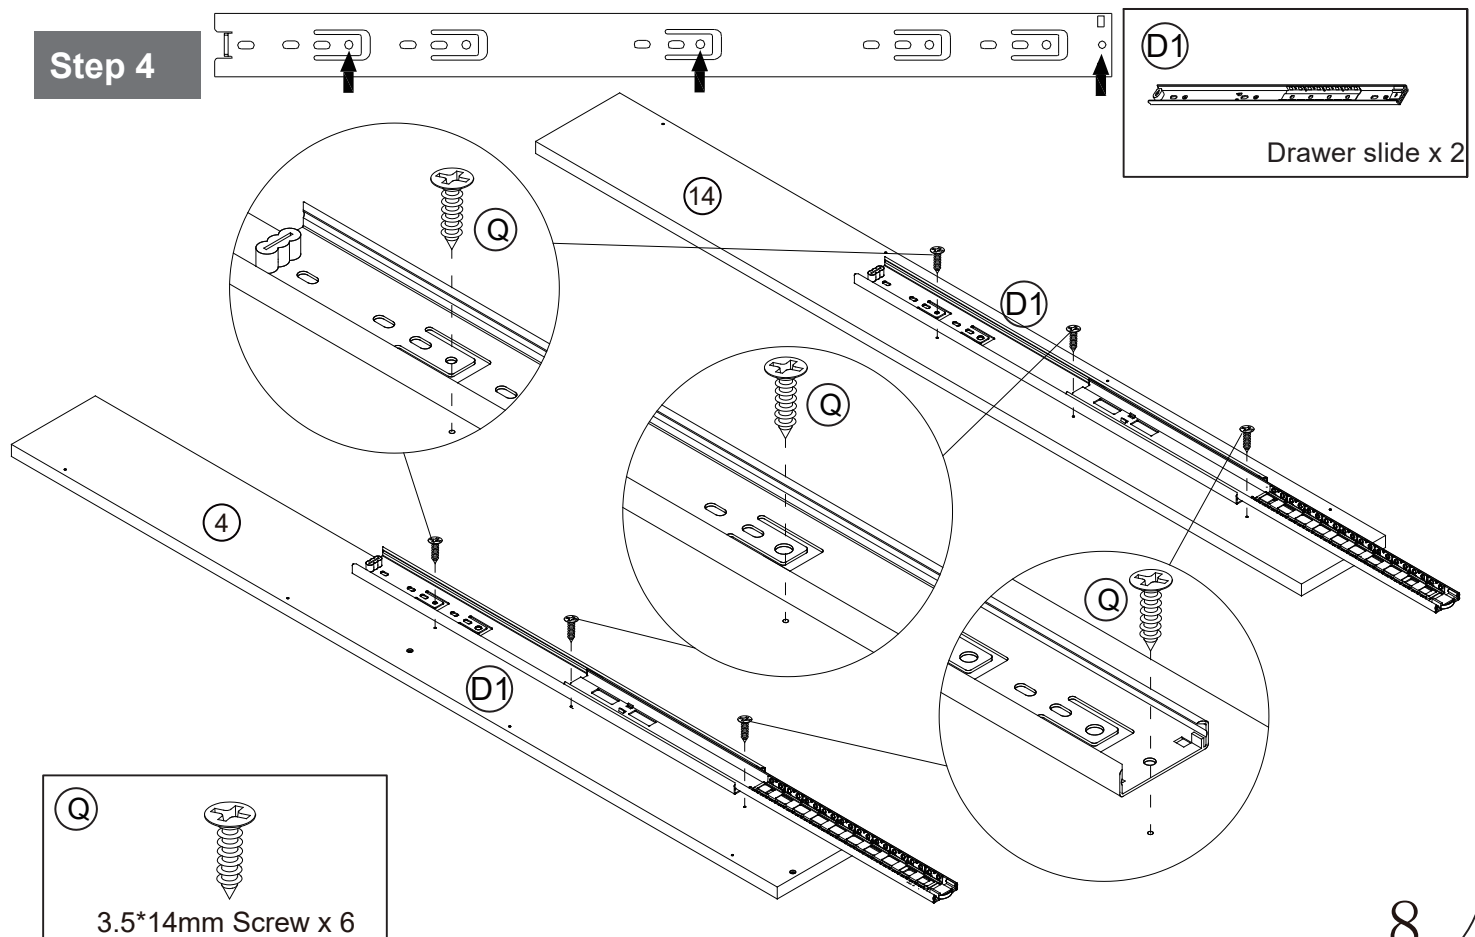


# Assembly Instructions

## Step 5

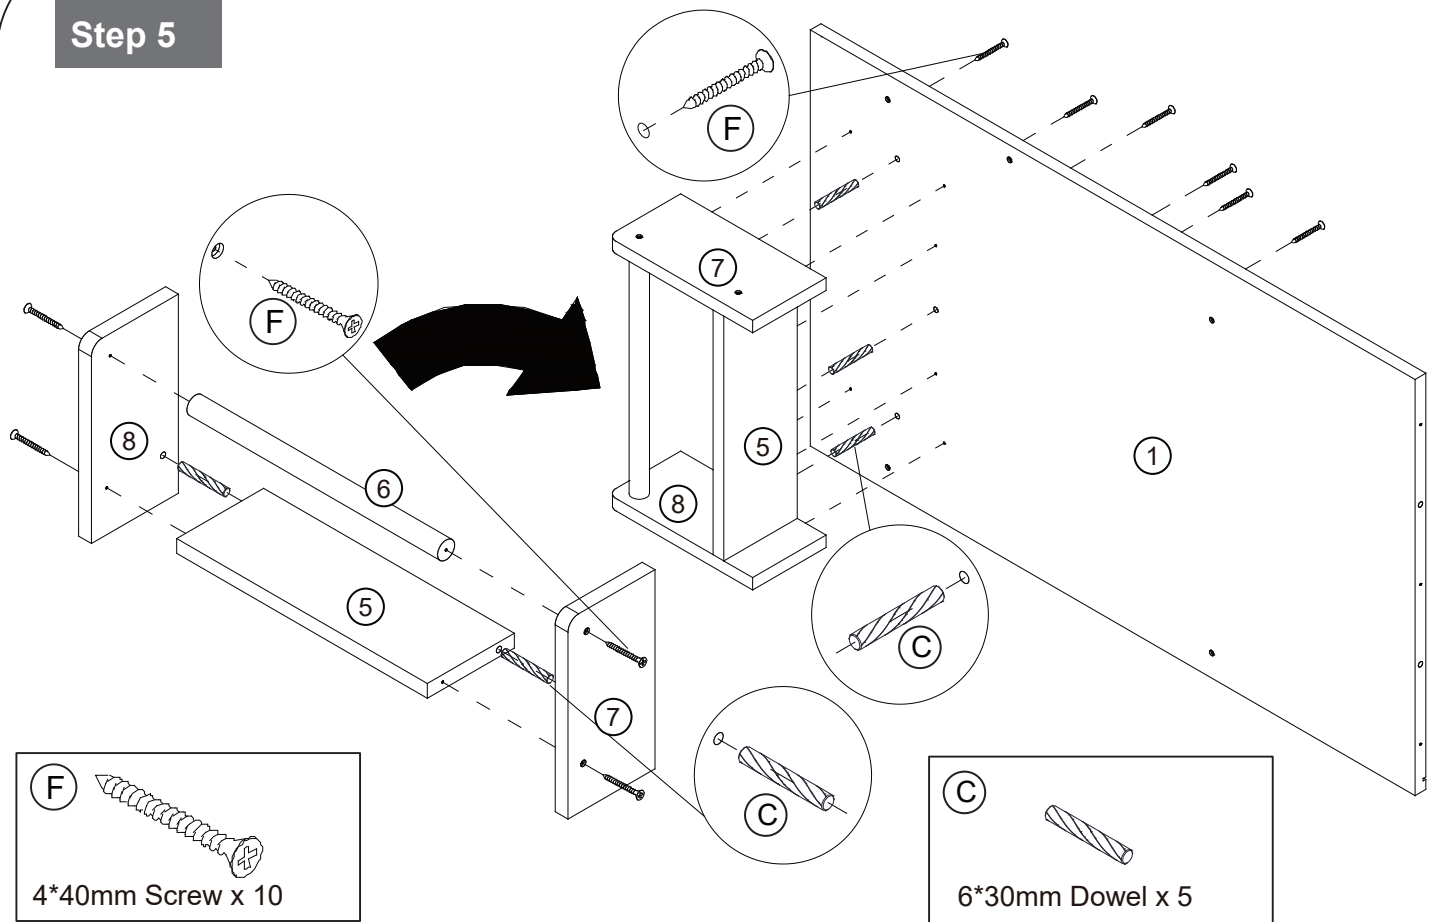



## Step 6

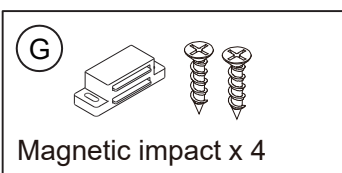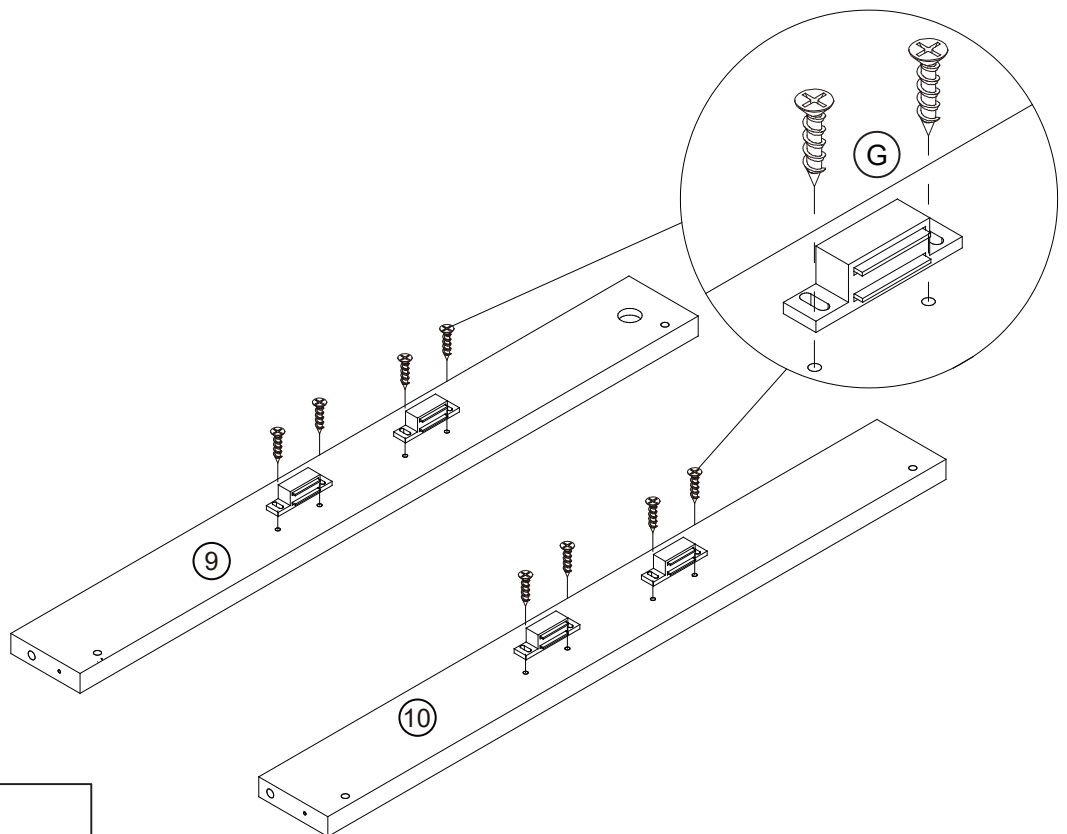


# Assembly Instructions


## Step 7

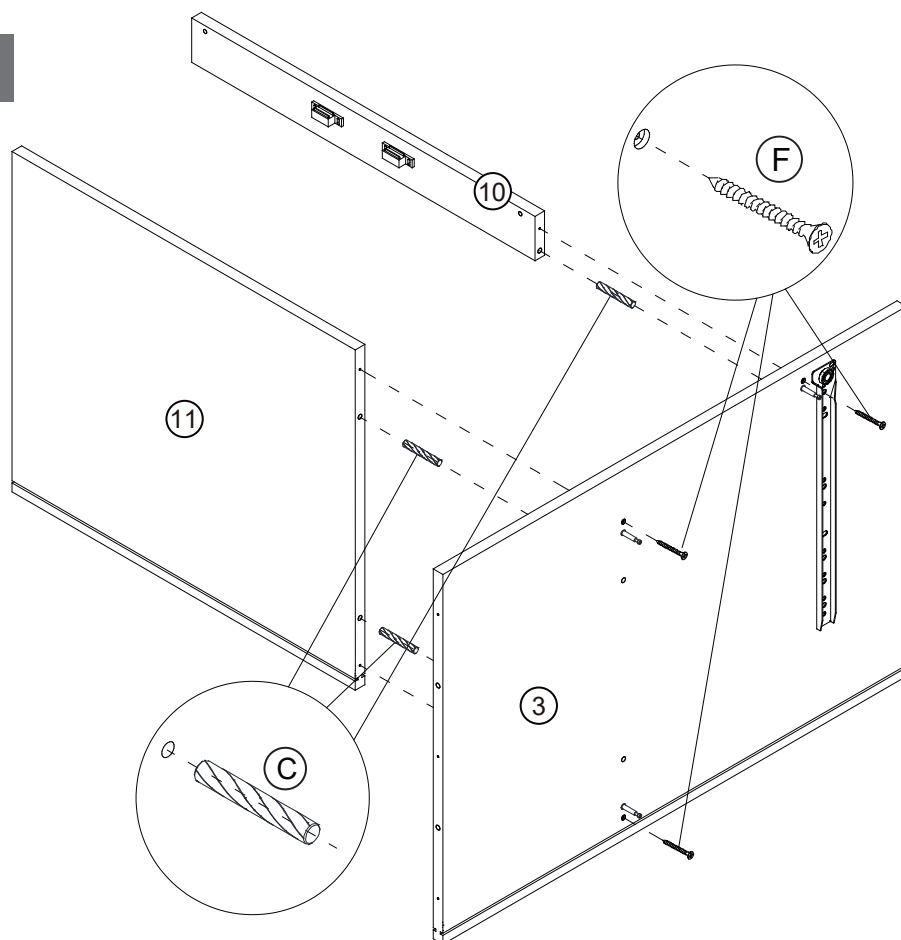


**F**   
4\*40mm Screw x 3

**C**   
6\*30mm Dowel x 3

## Step 8

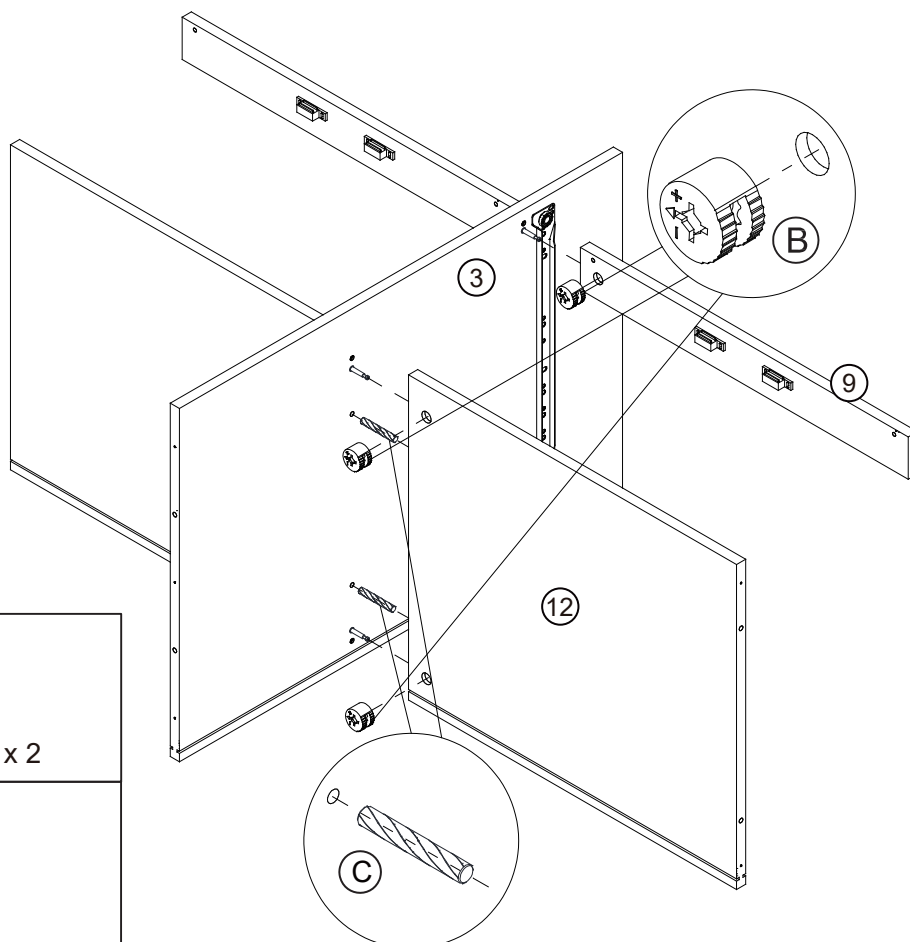



**C**   
6\*30mm Dowel x 2

**B**   
Cam lock x 3

# Assembly Instructions


## Step 9

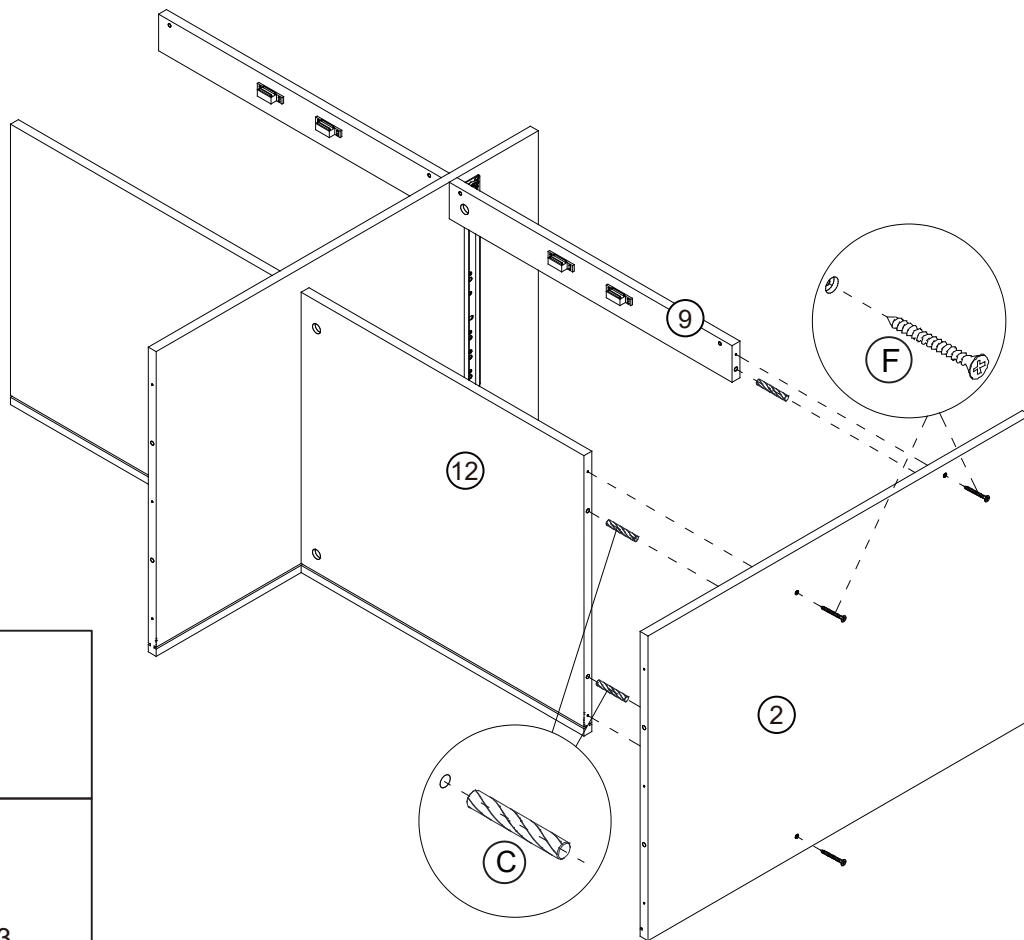

(F)   
4\*40mm Screw x 3

(C)   
6\*30mm Dowel x 3



## Step 10

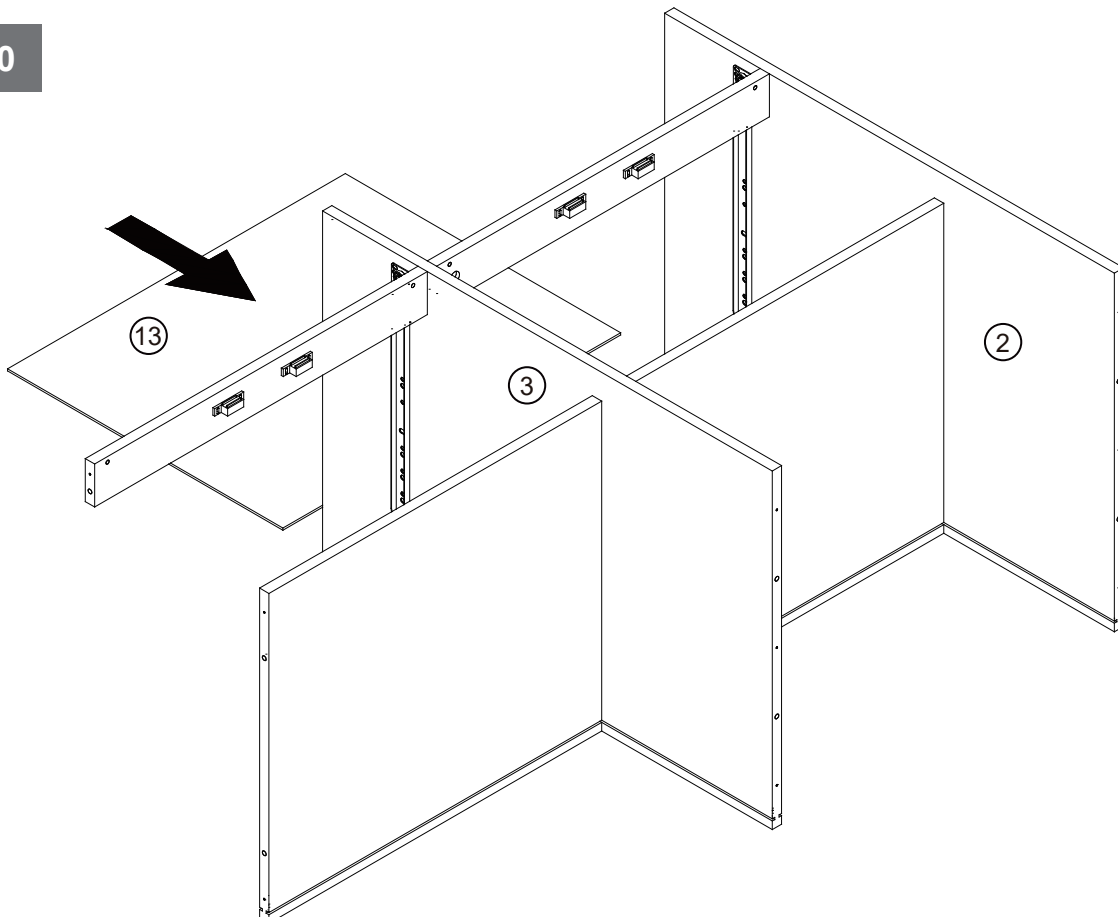




# Assembly Instructions

## Step 11

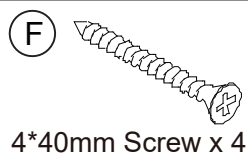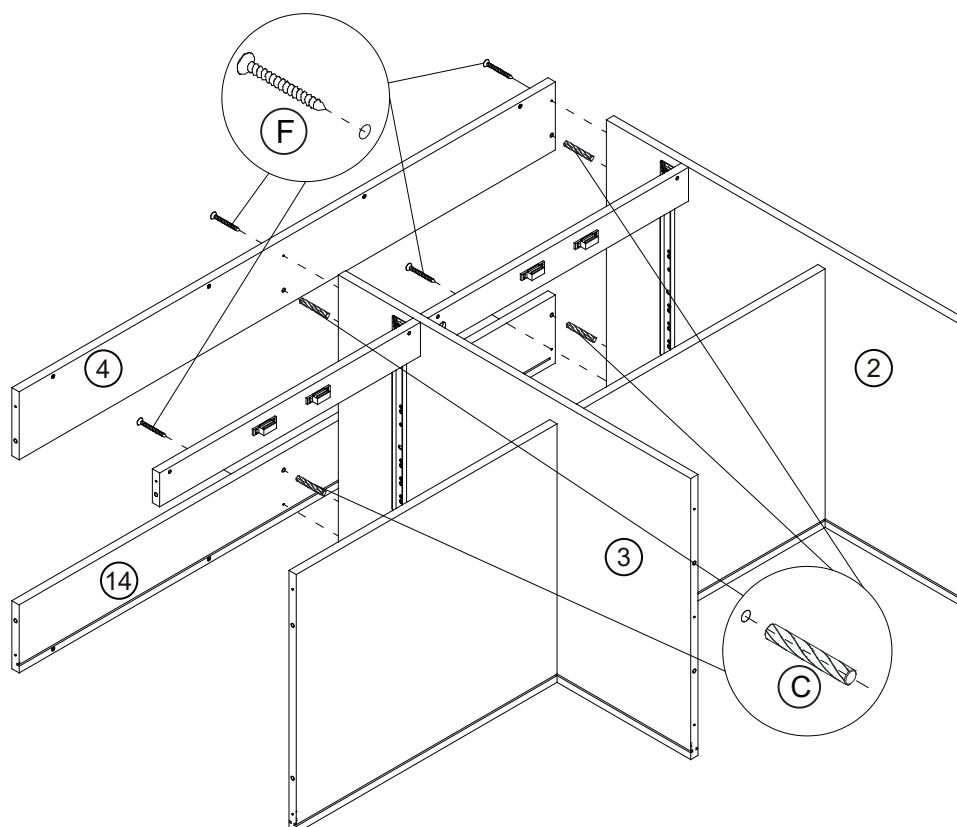


## Step 12

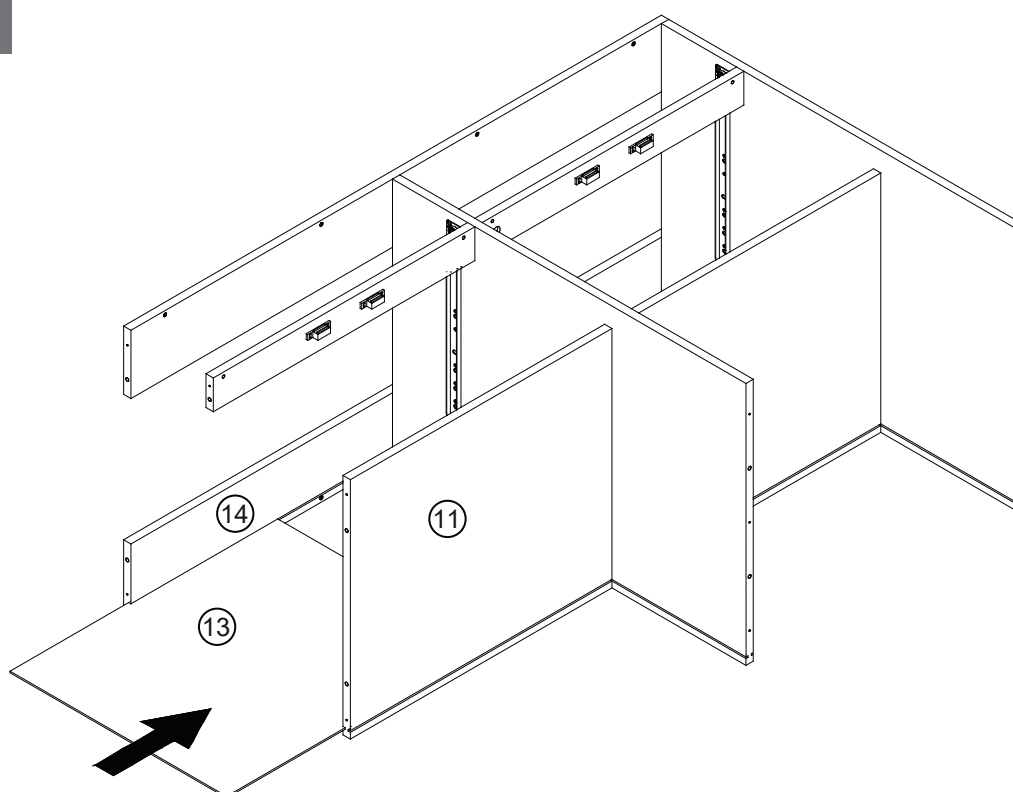


# Assembly Instructions

## Step 13

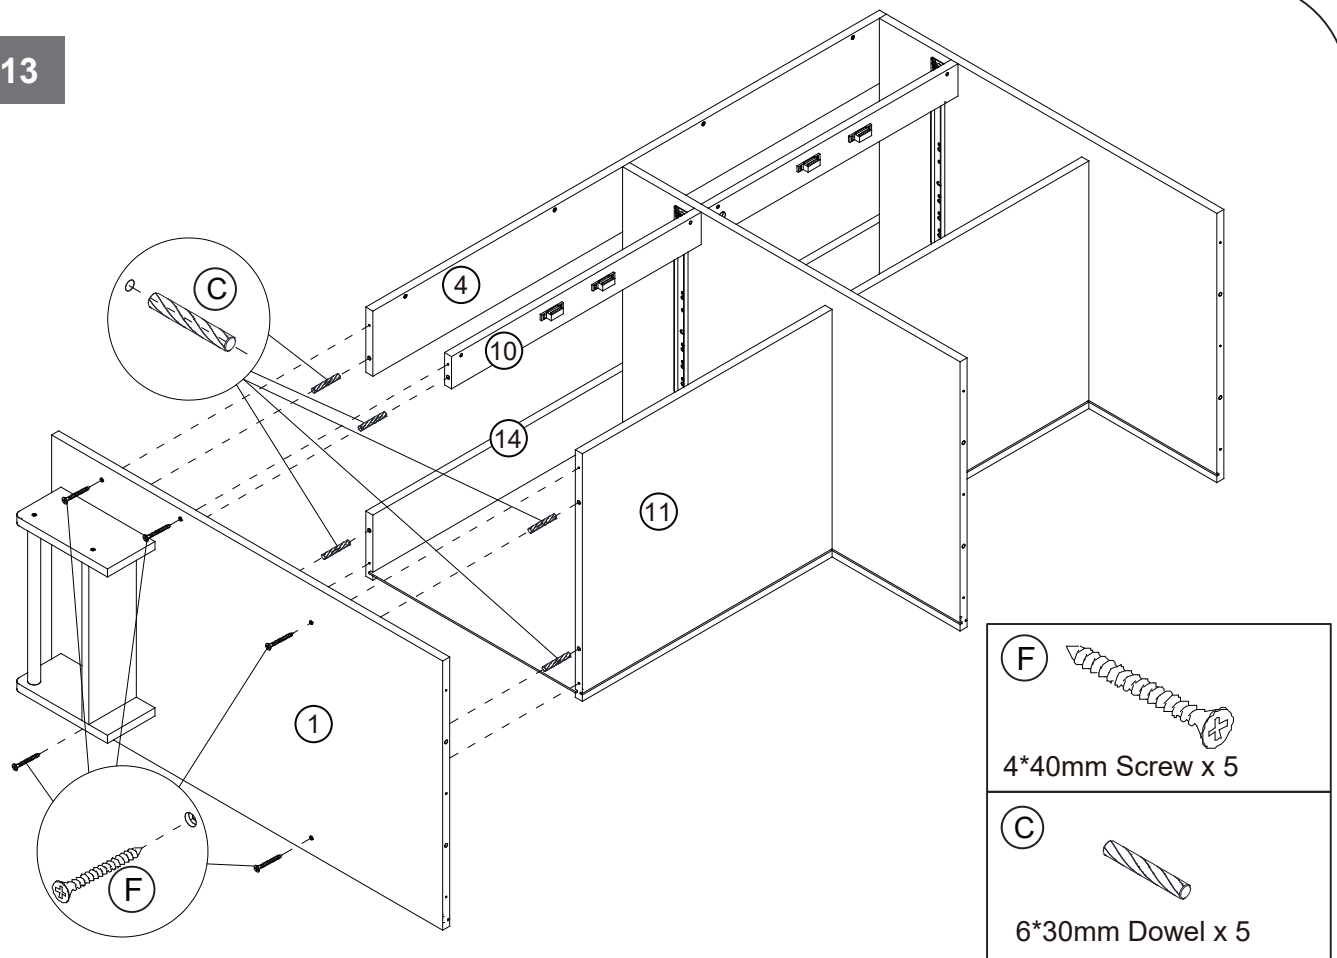


## Step 14

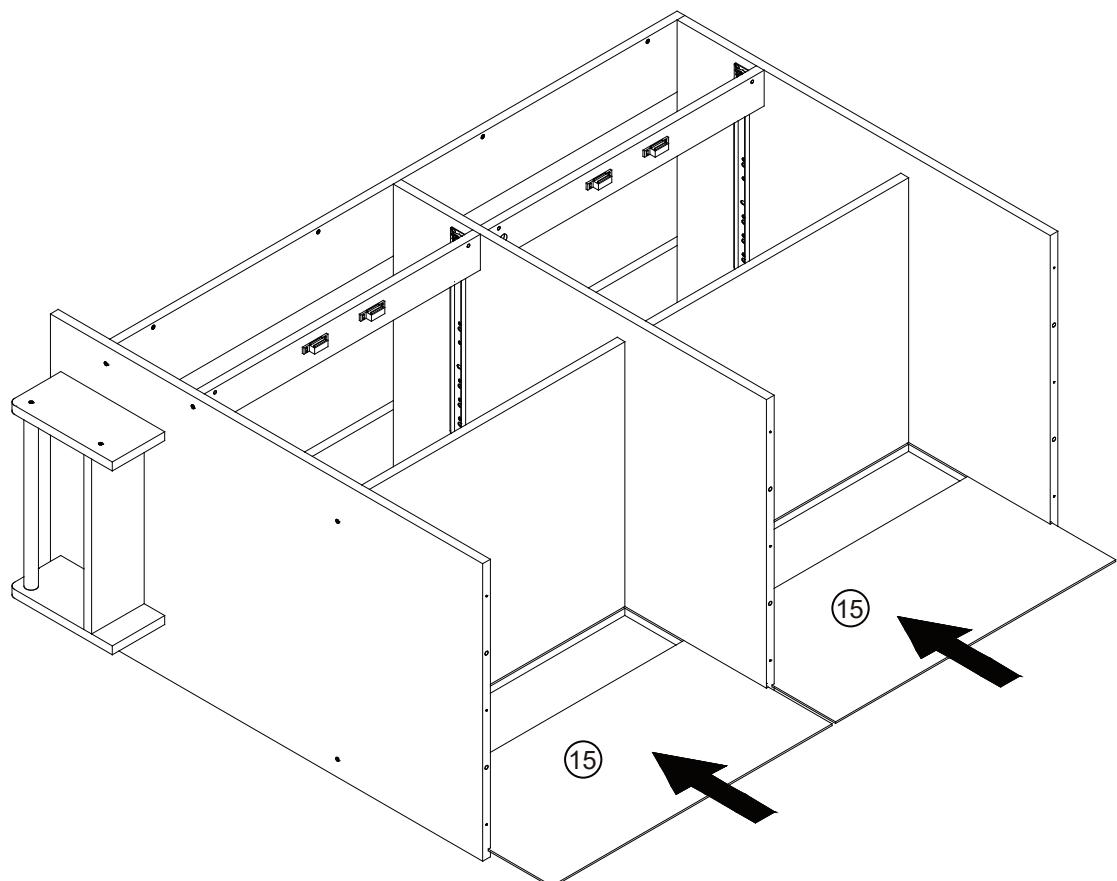


# Assembly Instructions

## Step 15

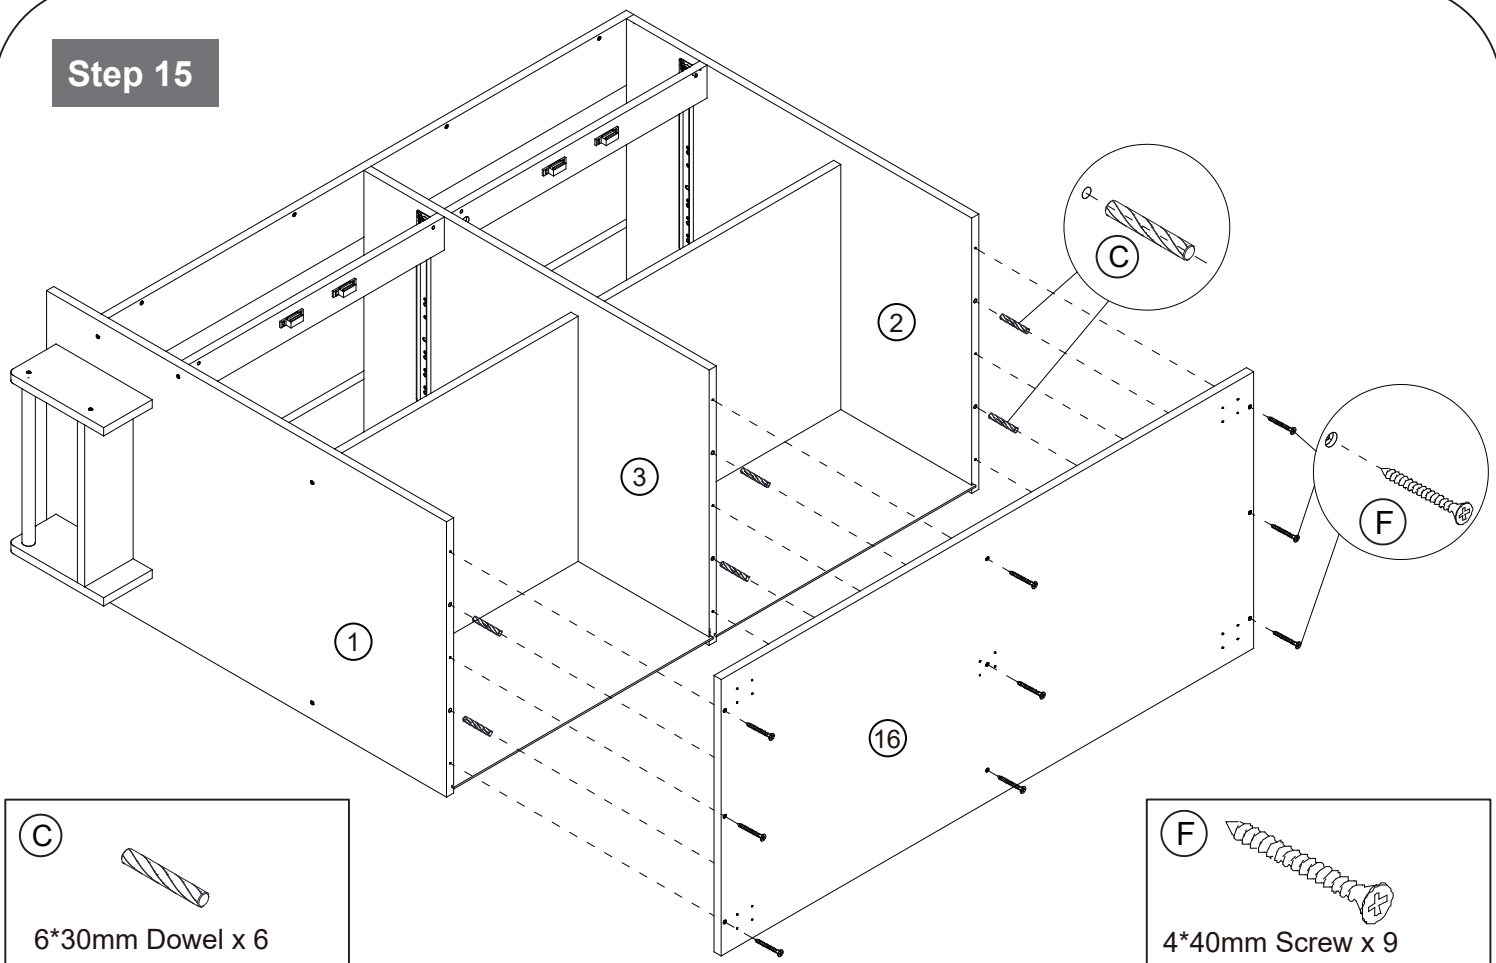


## Step 16

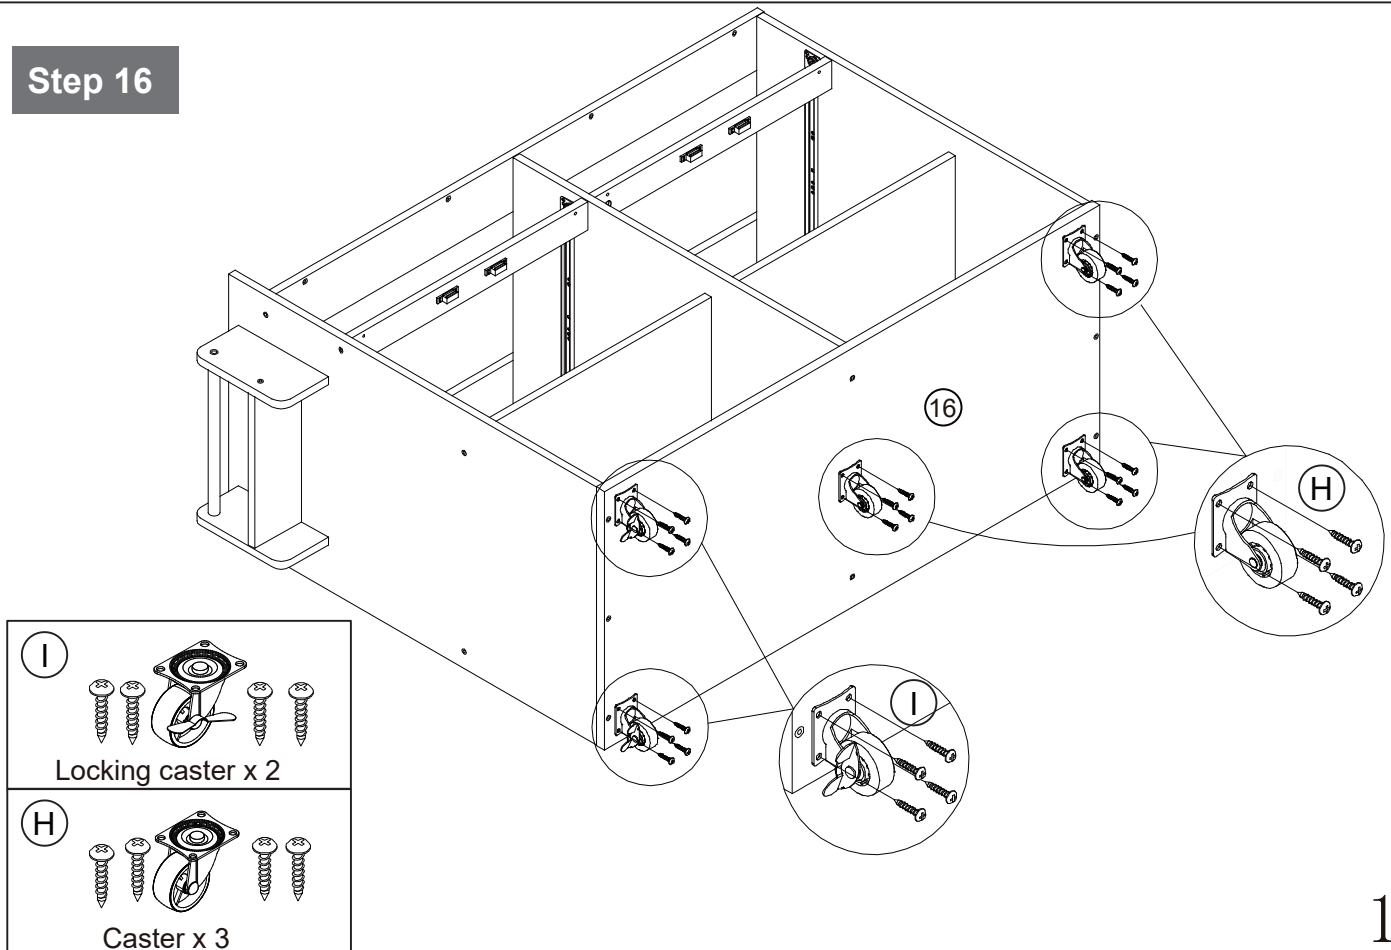


# Assembly Instructions

## Step 17

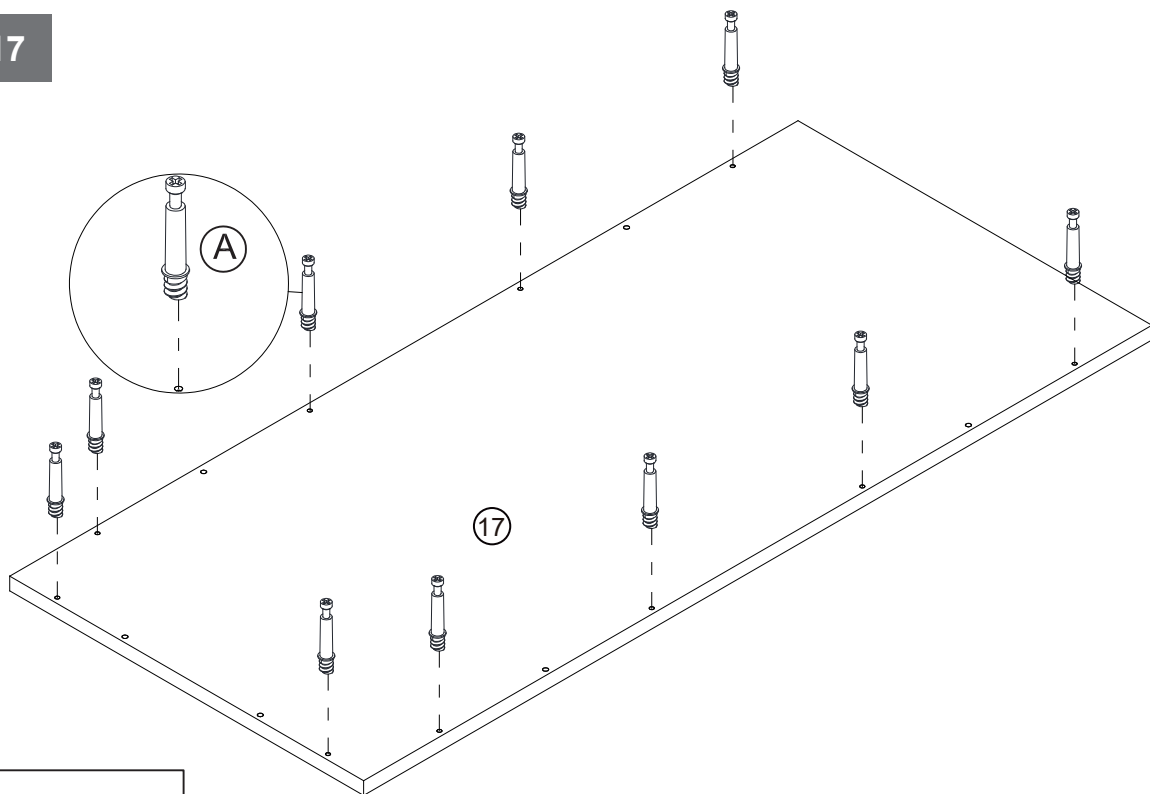


(A)



Cam Bolt x 10

## Step 18

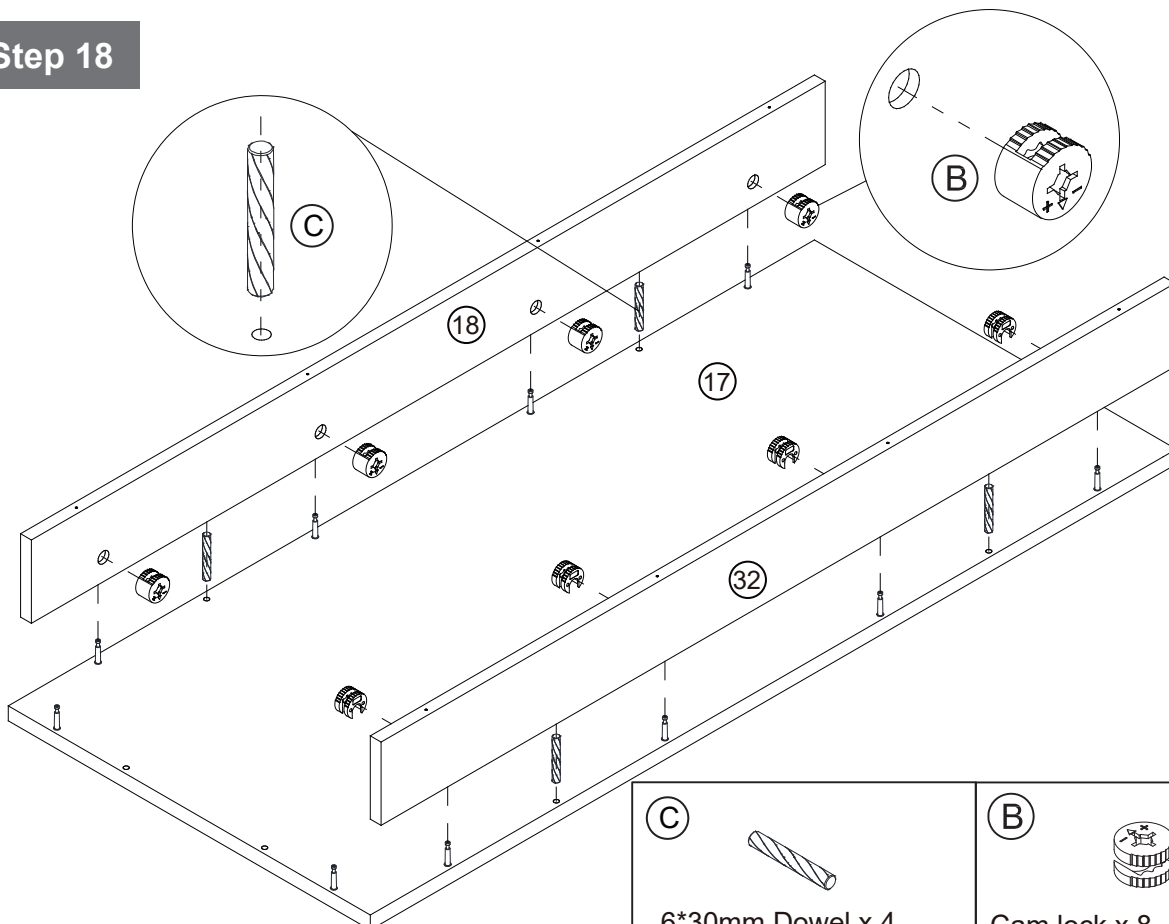

(C)



6\*30mm Dowel x 4


(B)




Cam lock x 8

# Assembly Instructions

## Step 19

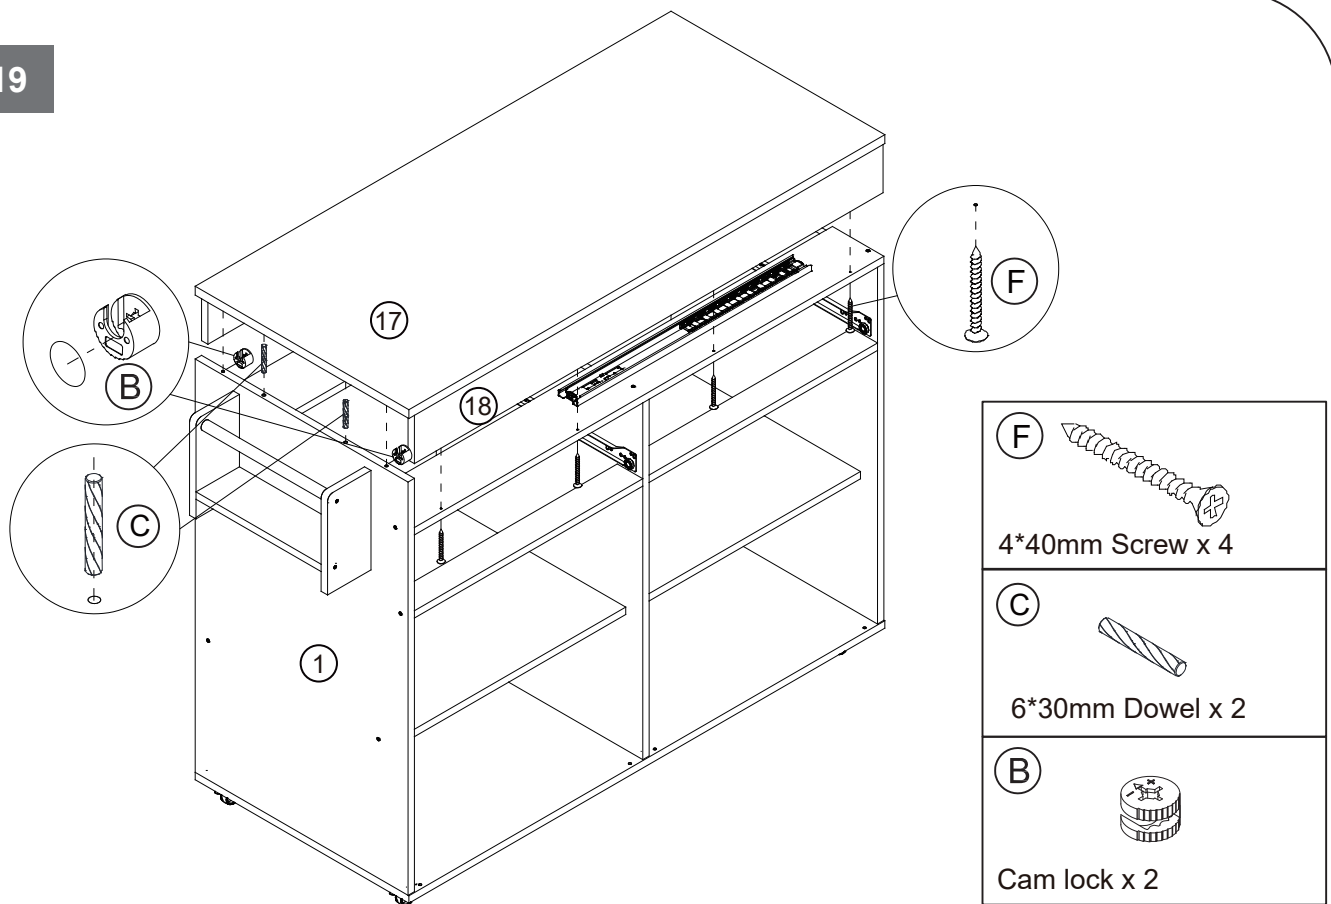


## Step 20

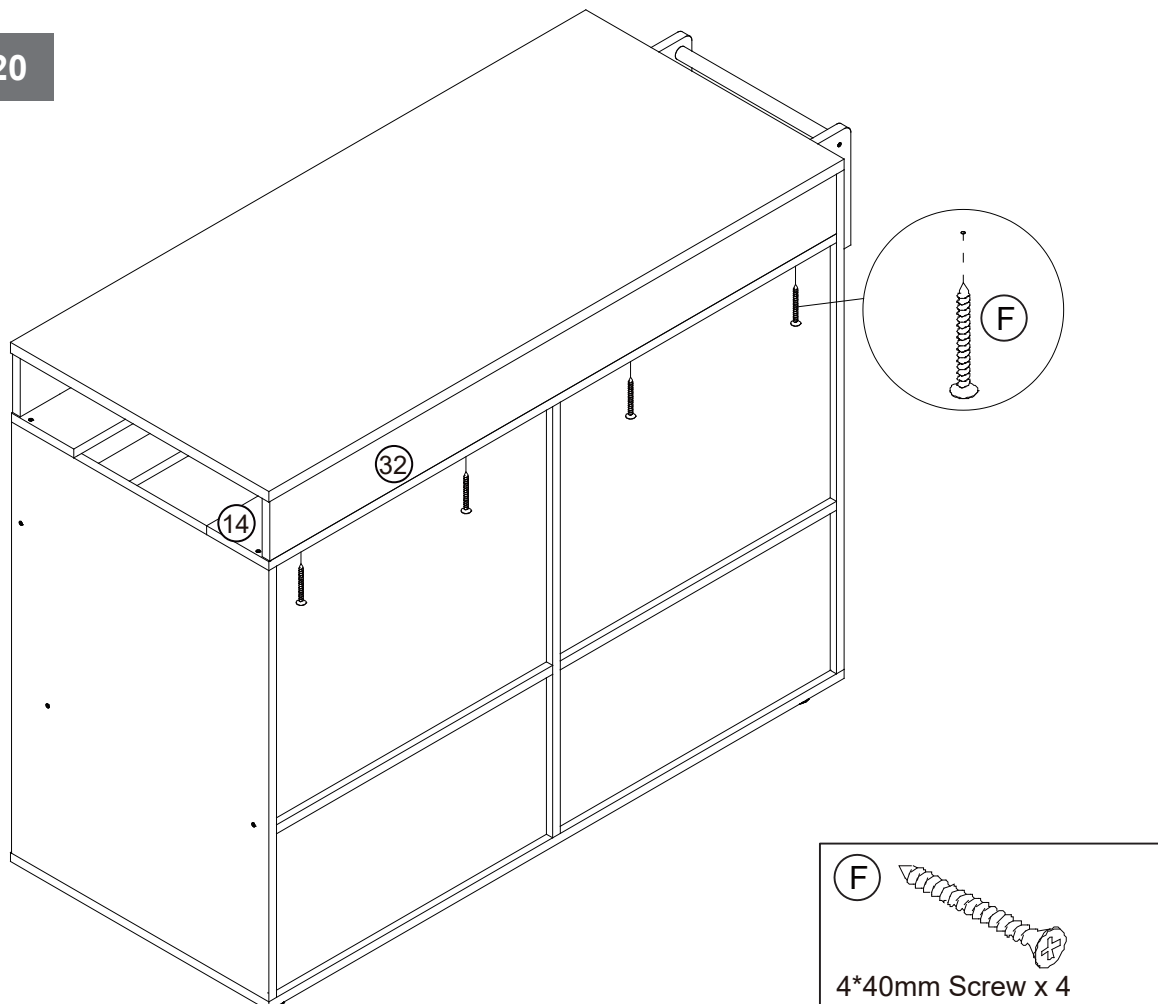


# Assembly Instructions

## Step 21

x2

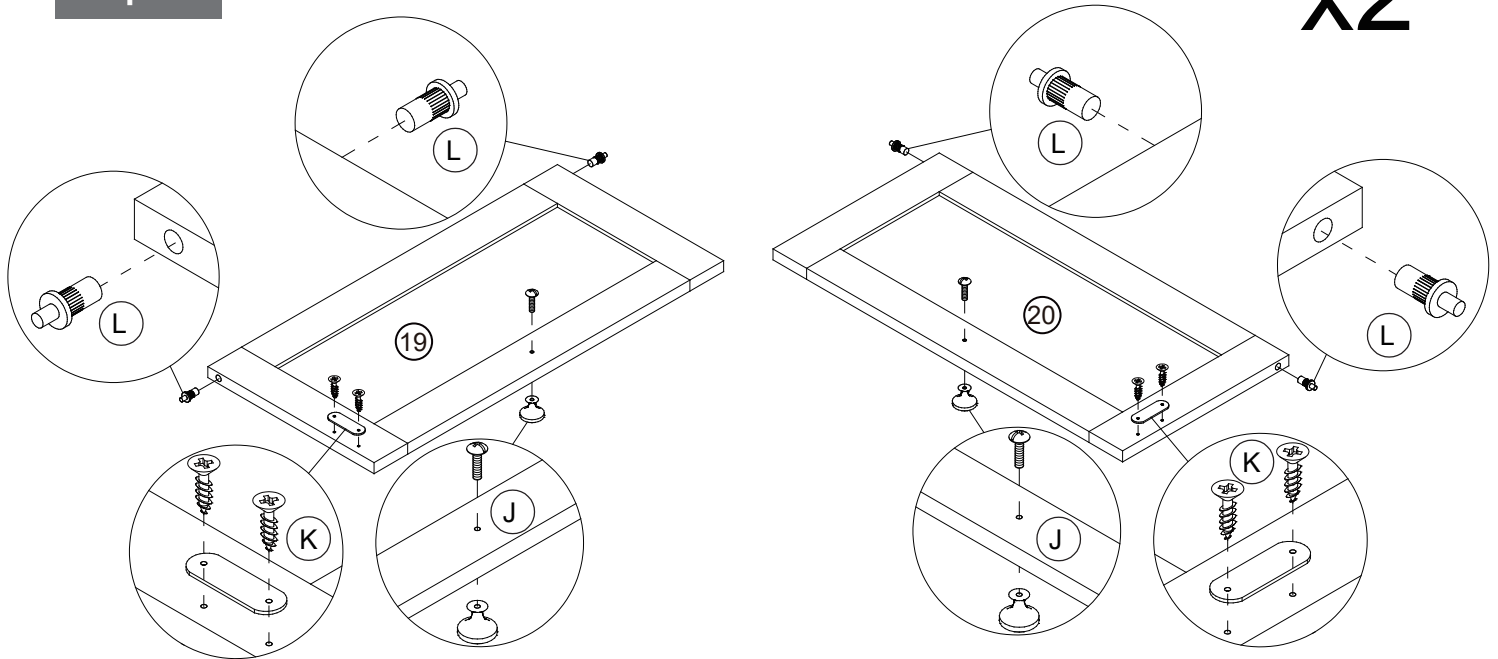


J



4\*20mm Handle x 4set

K



Suction sheet x 4

L




x 8


## Step 22

x2

x2

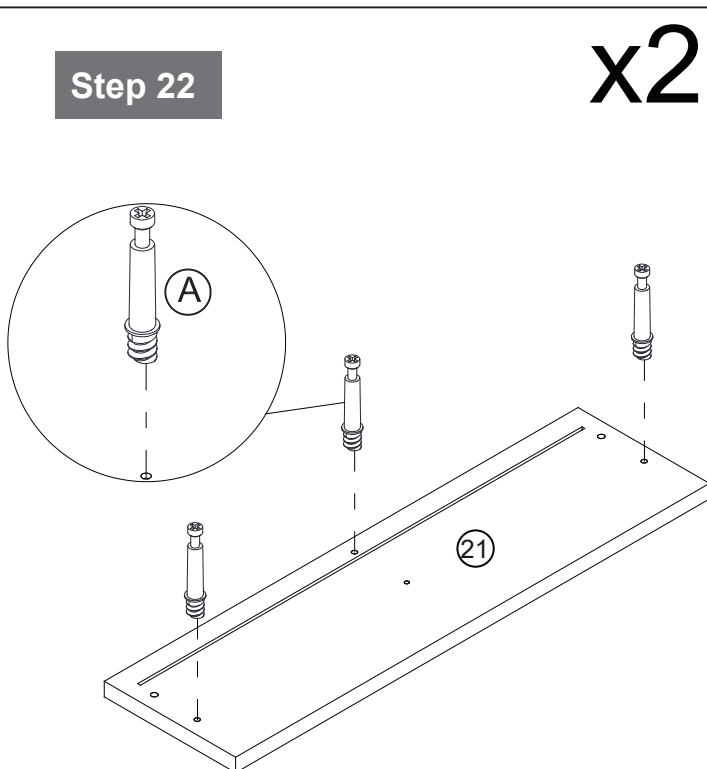

A




Cam Bolt x 6

B



Cam lock x 2

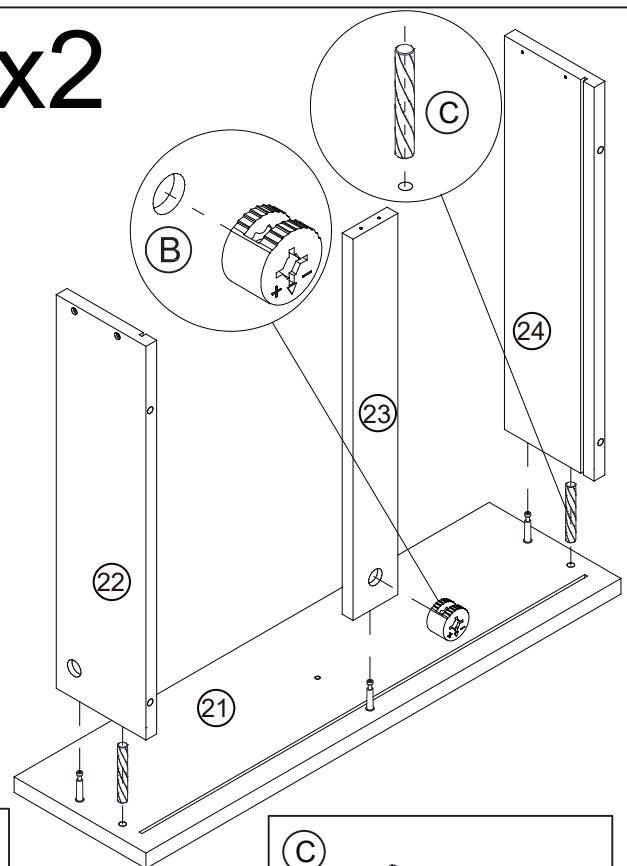

C




6\*30mm Dowel x 4

# Assembly Instructions

## Step 23

x2

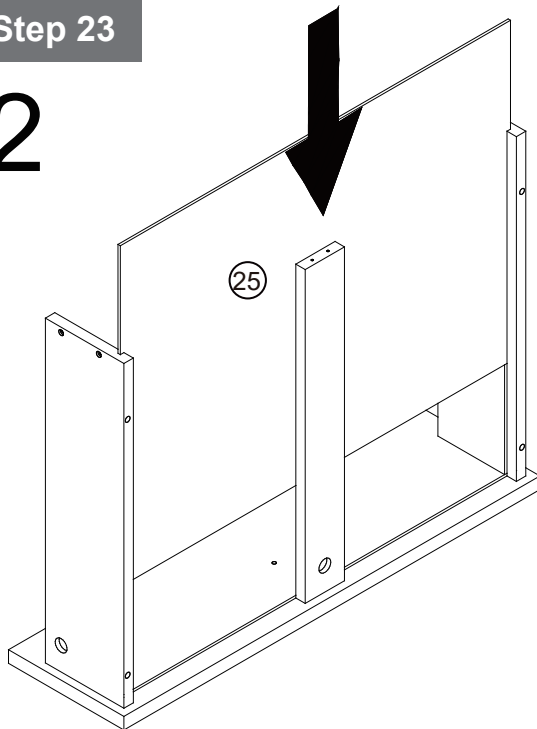

(B)




Cam lock x 4

(M)




4\*30mm Screw x 4

x2

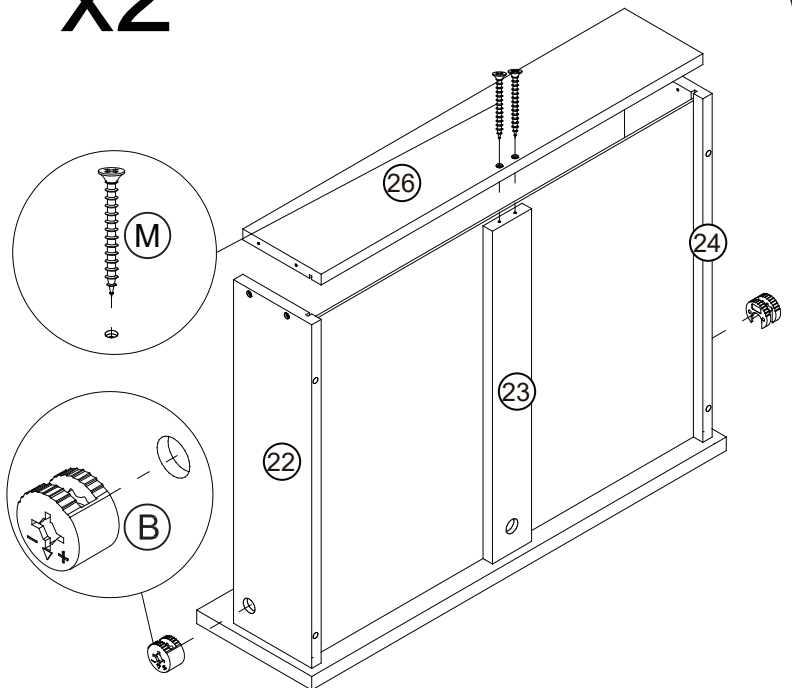


## Step 24

x2

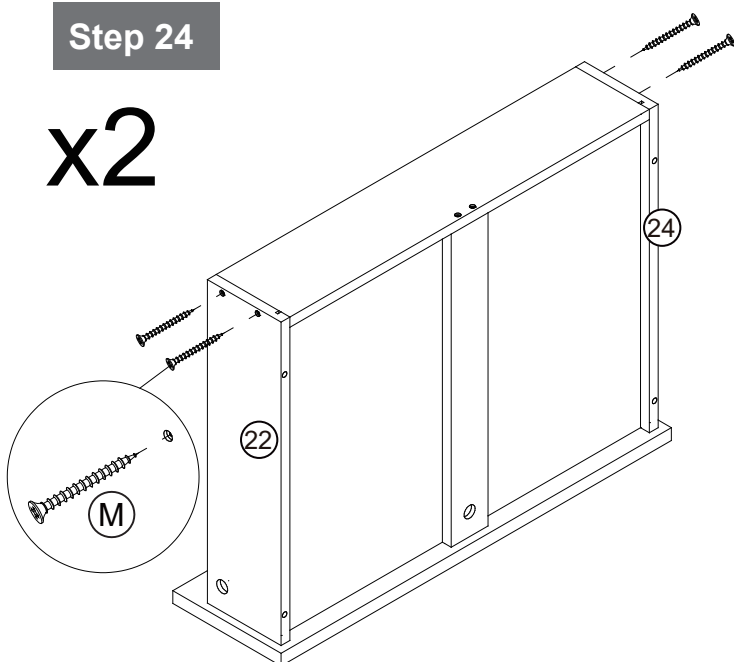

x2

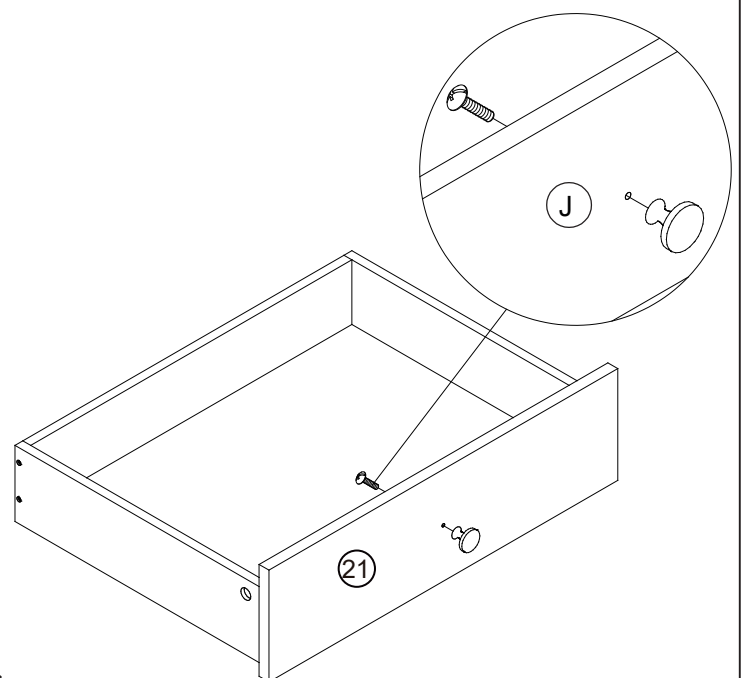


(M)



4\*30mm Screw x 8

(J)




4\*20mm Handle x 2set


# Assembly Instructions

## Step 25


x2

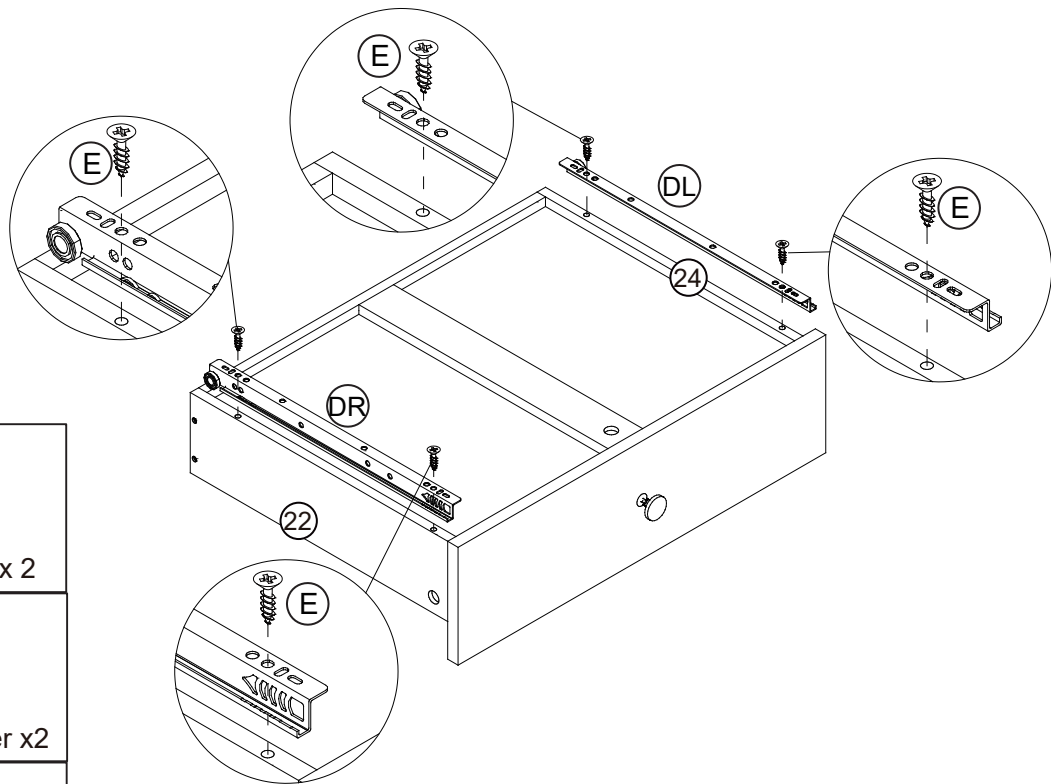

DR








DL

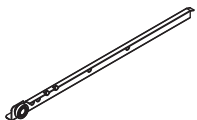

E





## Step 26

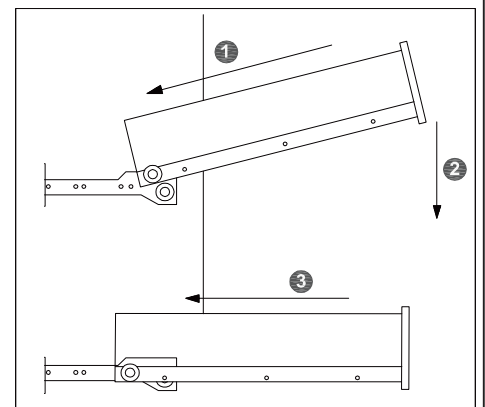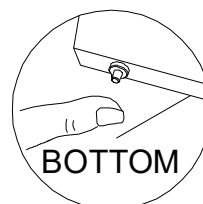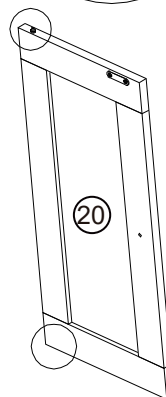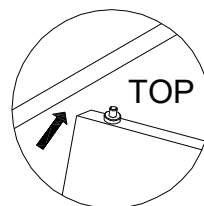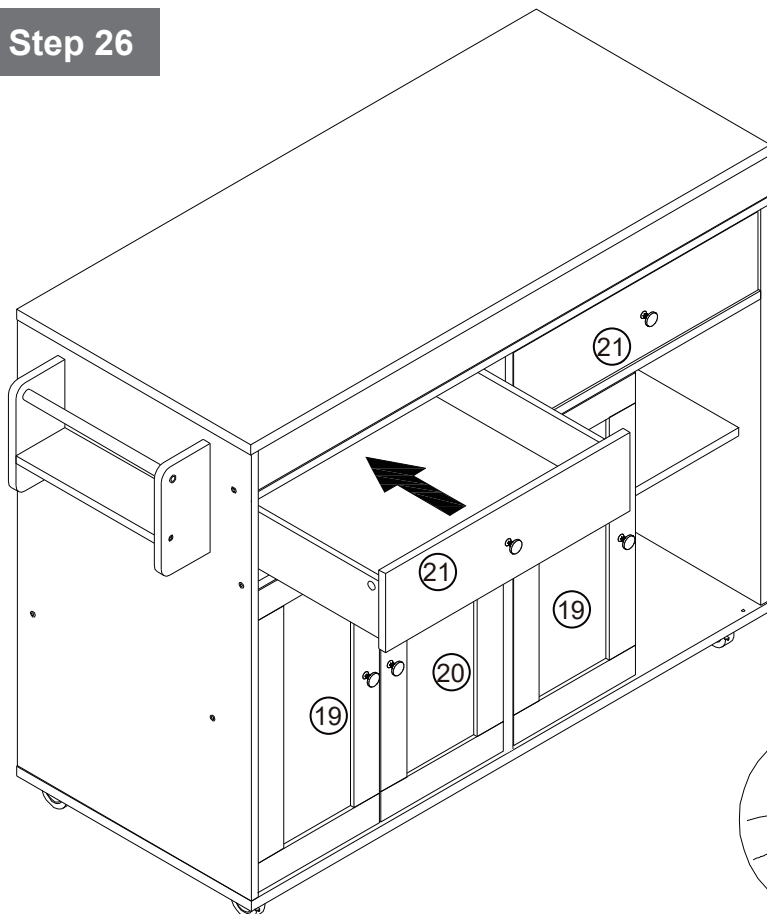




# Assembly Instructions

## Step 27

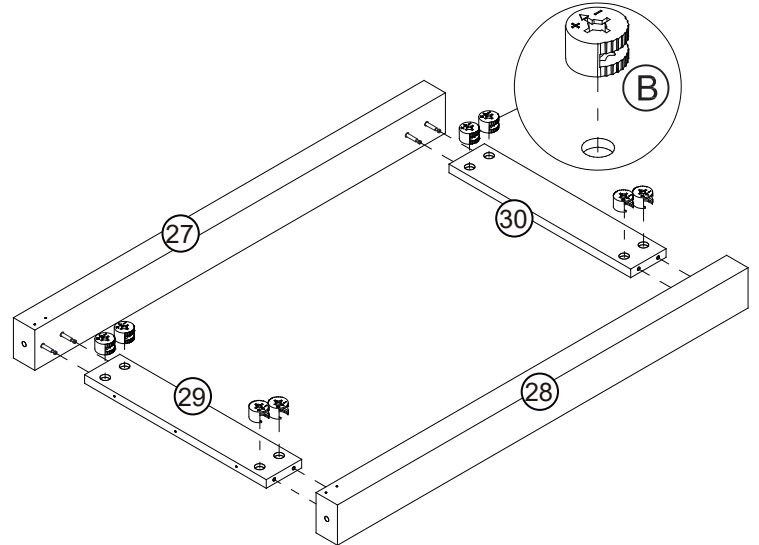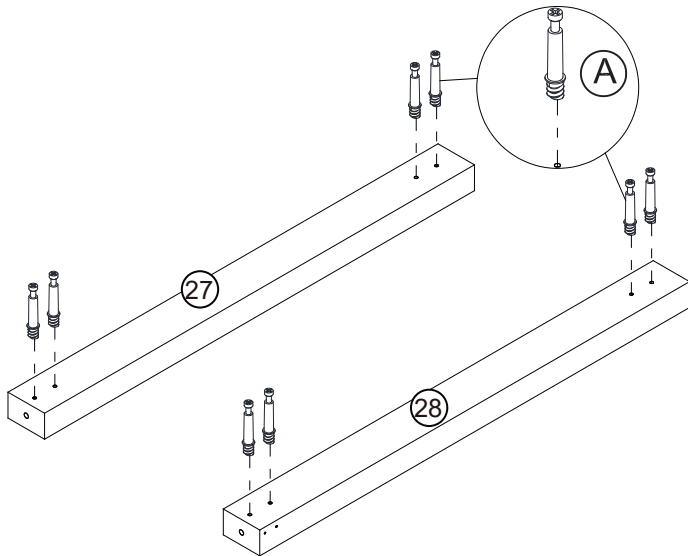

(A)




Cam Bolt x 8

(B)



Cam lock x 8

## Step 28

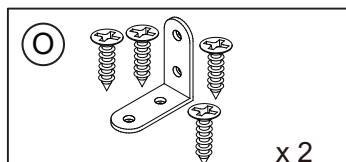


x 2

(N)




8\*30mm Dowel x 2

(F)





4\*40mm Screw x 3

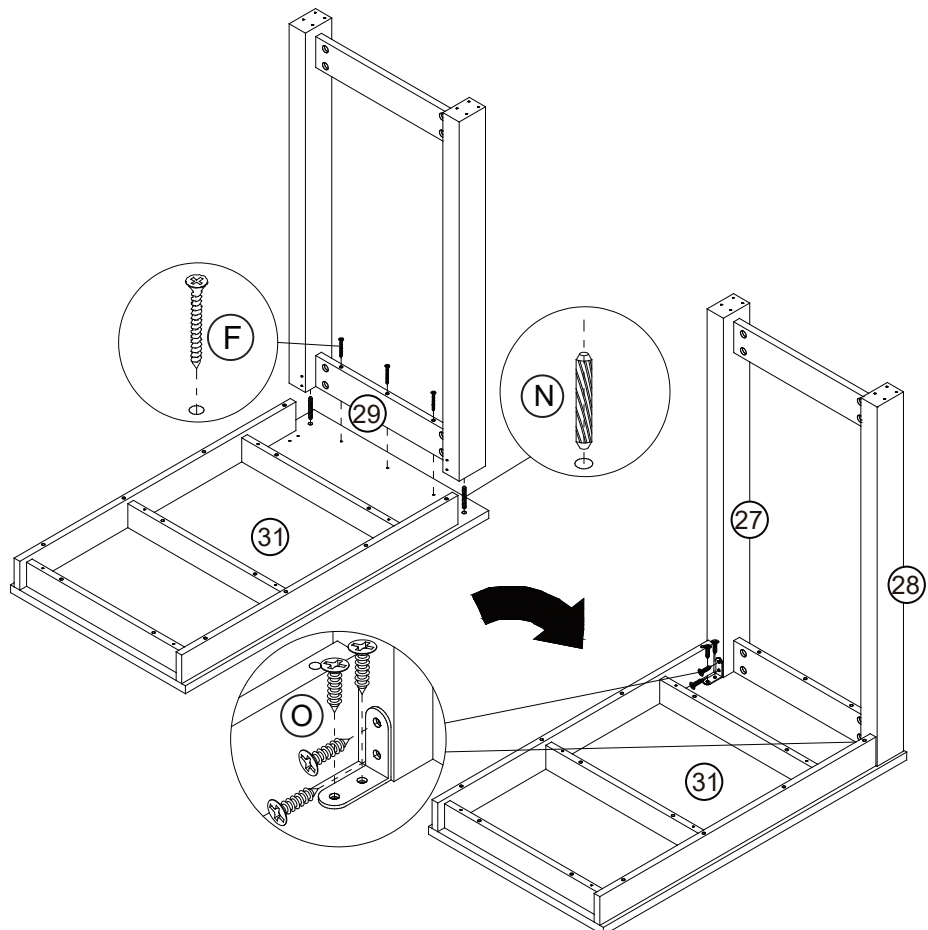


# Assembly Instructions

## Step 29

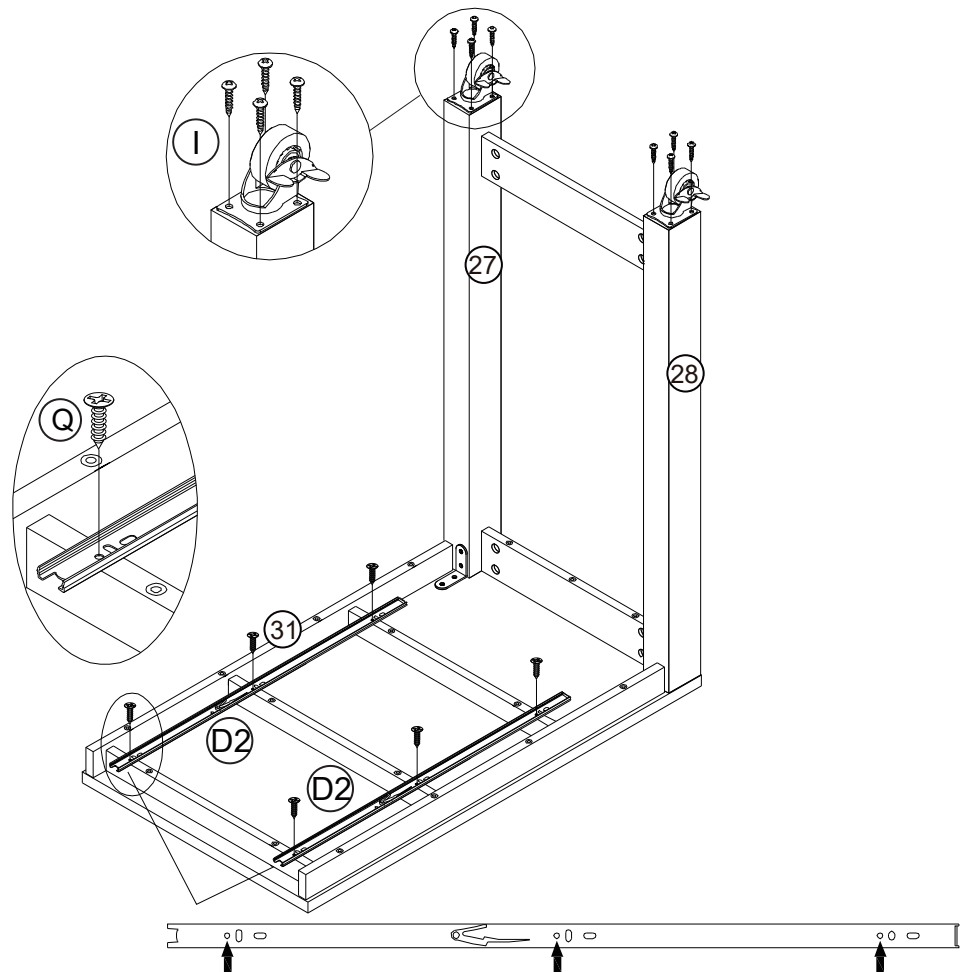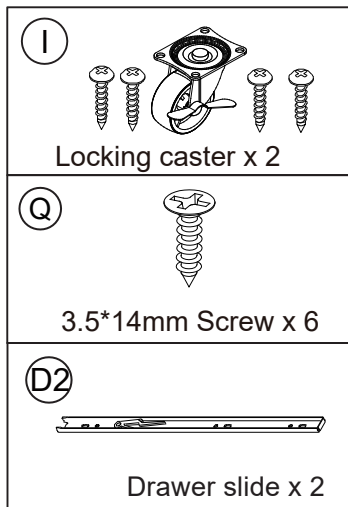



## Step 30

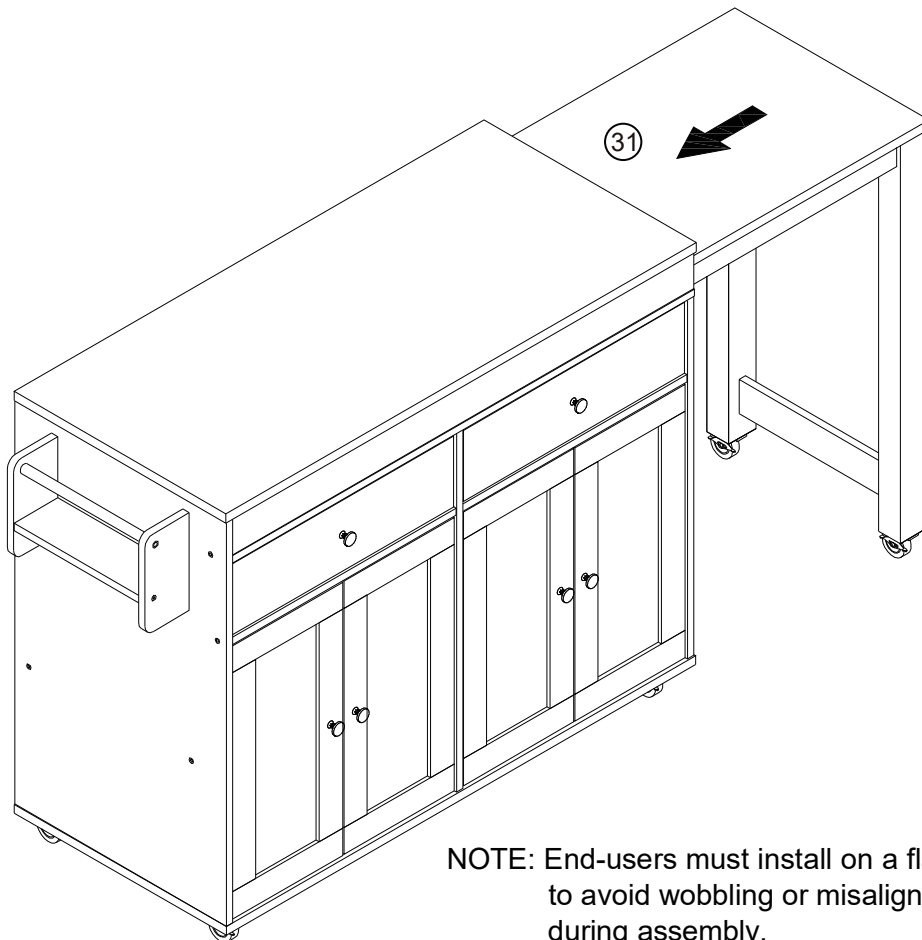

NOTE: End-users must install on a flat surface to avoid wobbling or misalignment during assembly.

# Assembly Instructions

## Step 31

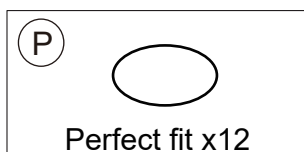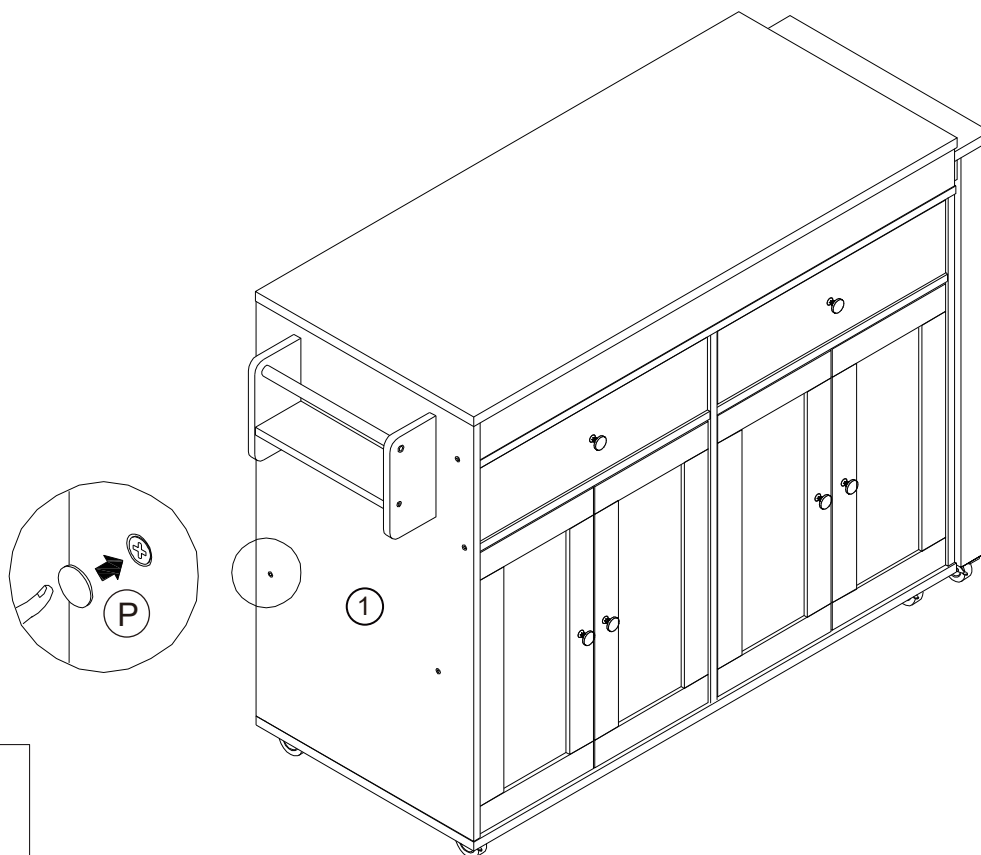

## Step 32

