



Instruction Manual

33006

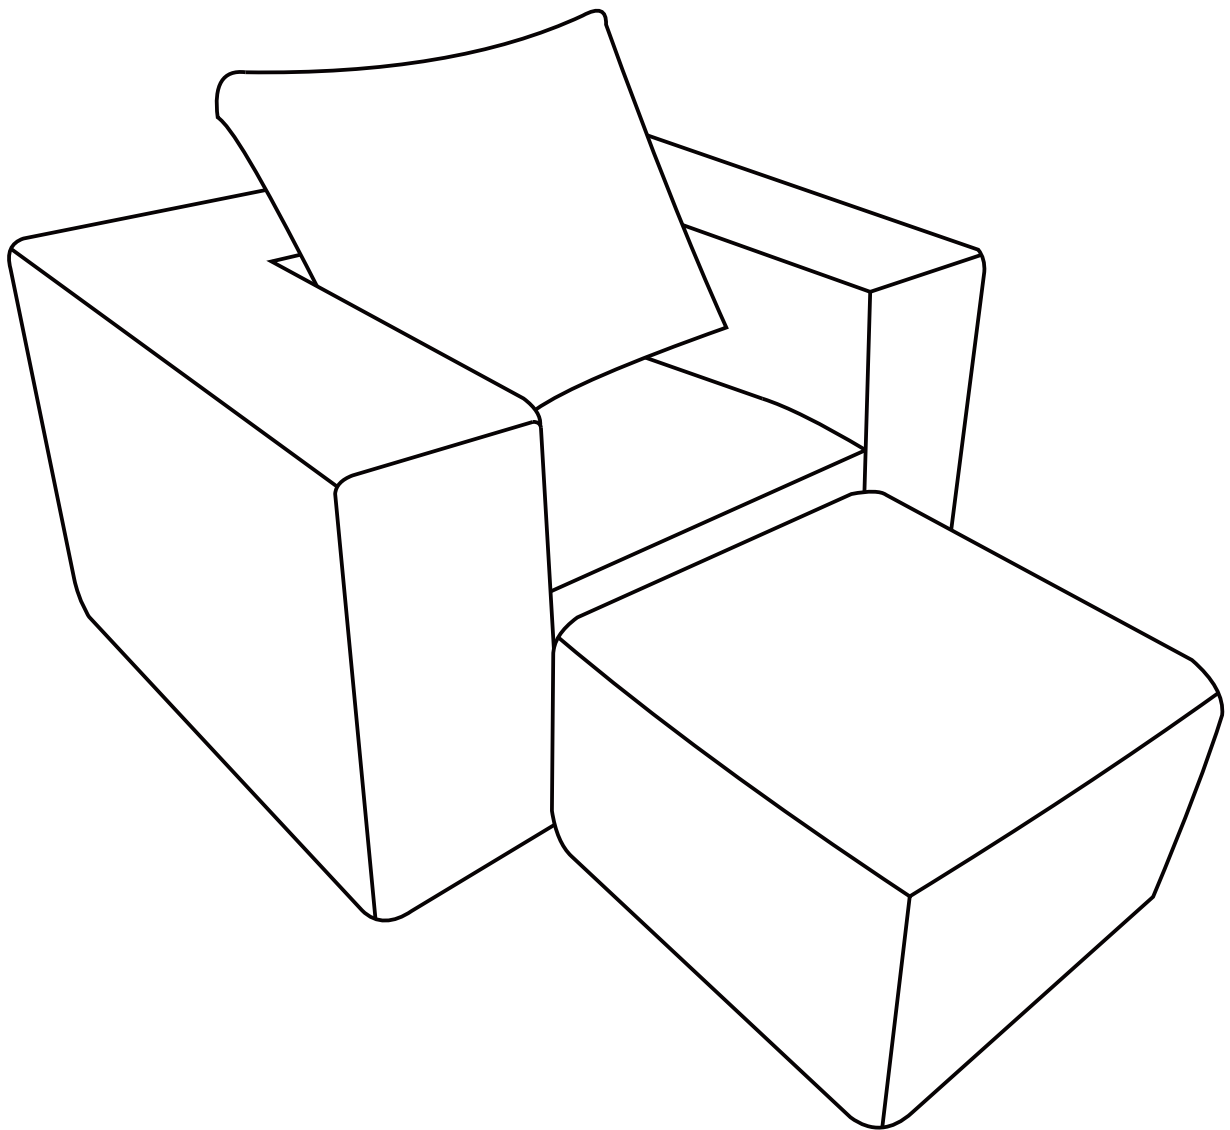

PART LIST:

①. Compact sofa

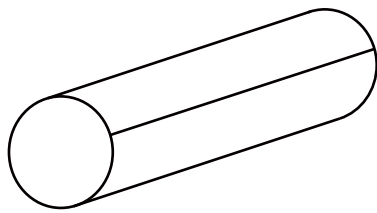


②. Membrane-cutting knife




INSTALLATION STEPS:


Step 1:
Use the membrane-cutting knife ② to cut through the first layer of the outer packaging film.

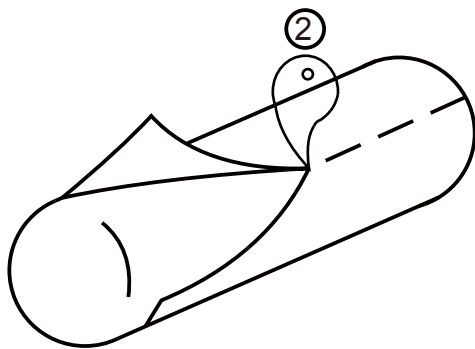

Step 2:
Lift the sofa flat and place it face up.

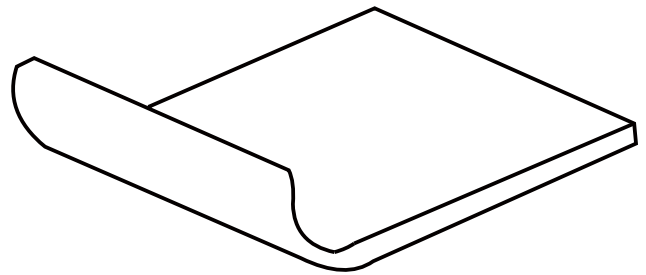

Step 3:
Use the membrane cutting knife ② to cut through the vacuum compression membrane

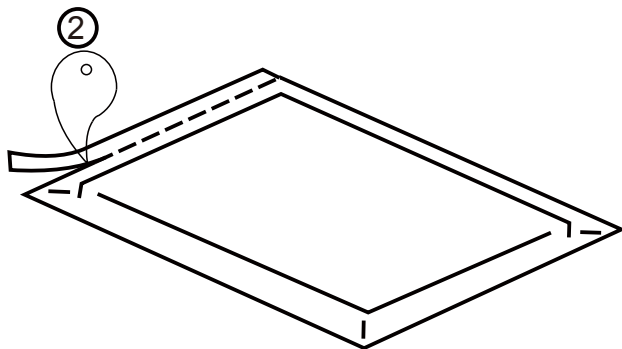

Step 4:
Wait for the sofa to fully rebound.

