


Bestier

ASSEMBLY INSTRUCTION


V001-060524-CY

63" TV Stand/Fireplace TV stand

A

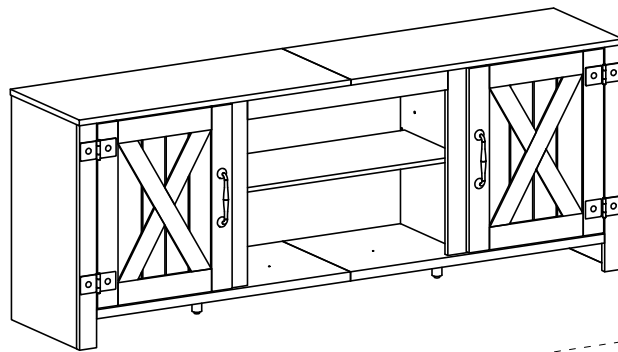

B

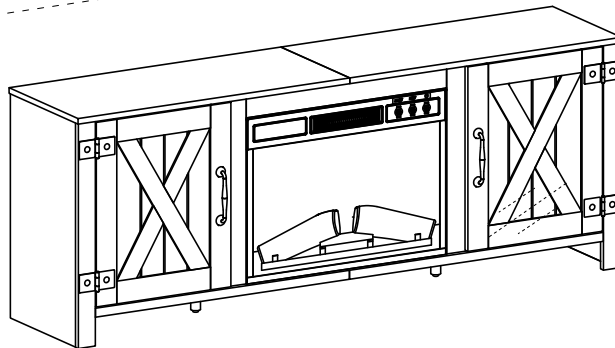

Know more about Bestier from



CUSTOMER SUPPORT

CONTACT US BY:

PHONE: 888-666-1086

EMAIL: Service@bestier.net

Thanks for choosing Bestier!
Feel free to contact us if you need any help.
Please kindly share your shopping experience
with us on the platform if you are satisfied with it.

HELPFUL HINTS

⚠️ BEFORE YOU START

- Inspect product packaging to ensure the appearance is good.
- Read the assembly instruction carefully and follow it step by step.
- To avoid any scratching, putting a soft blanket on the floor is suggested.
- Identify, sort and count all the parts with tags.
- Find out installation position according to the drawing and install it in correct steps.



OTHER

- People needed for assembly: 1-2.
- Estimated assembly time: 0.5-1h.


⚠️ CAUTION

- Be cautious when using a power drill or power screwdriver.
- Please be aware to slow down and stop when screw is nearly tight.
- Do Not use any harsh chemicals or abrasive cleaners for this item.
- Push, pull or drag this item carefully.


DETAILS

A



UNIT: INCH/CM

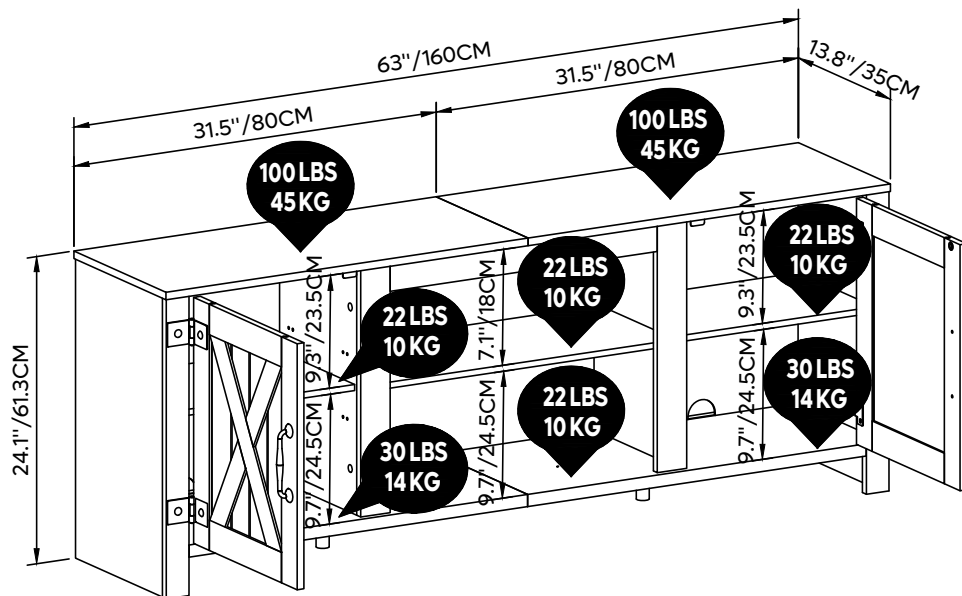





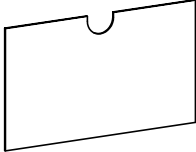






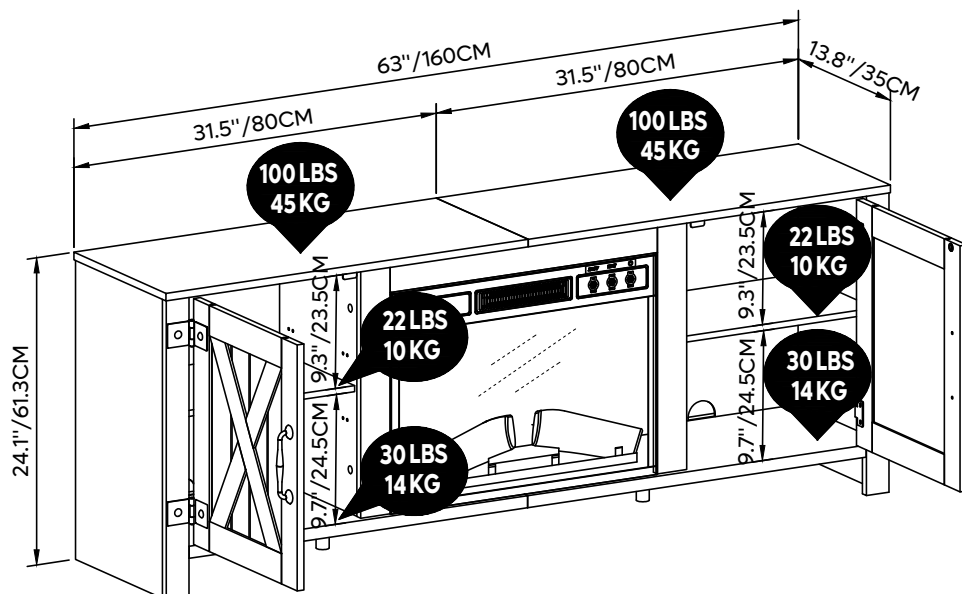


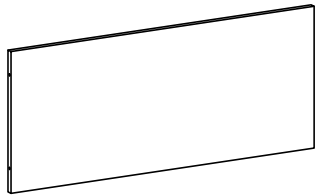
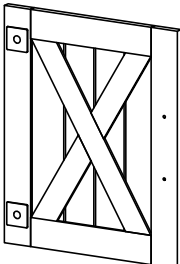
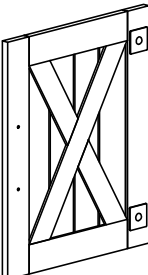

B

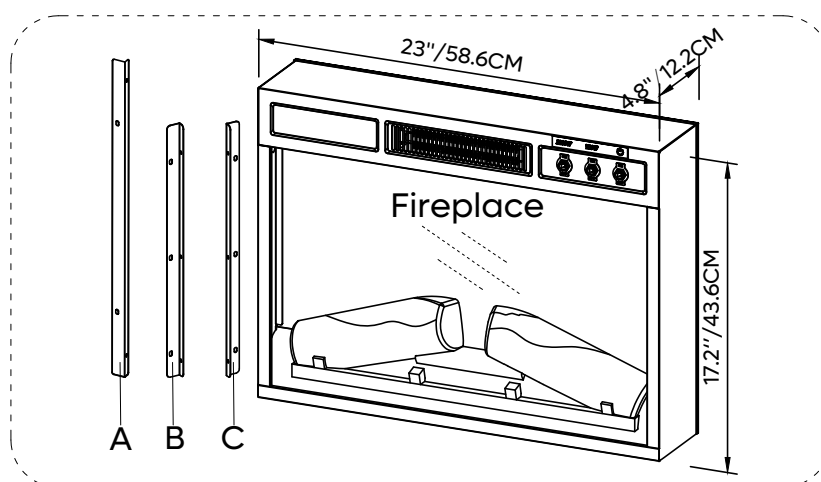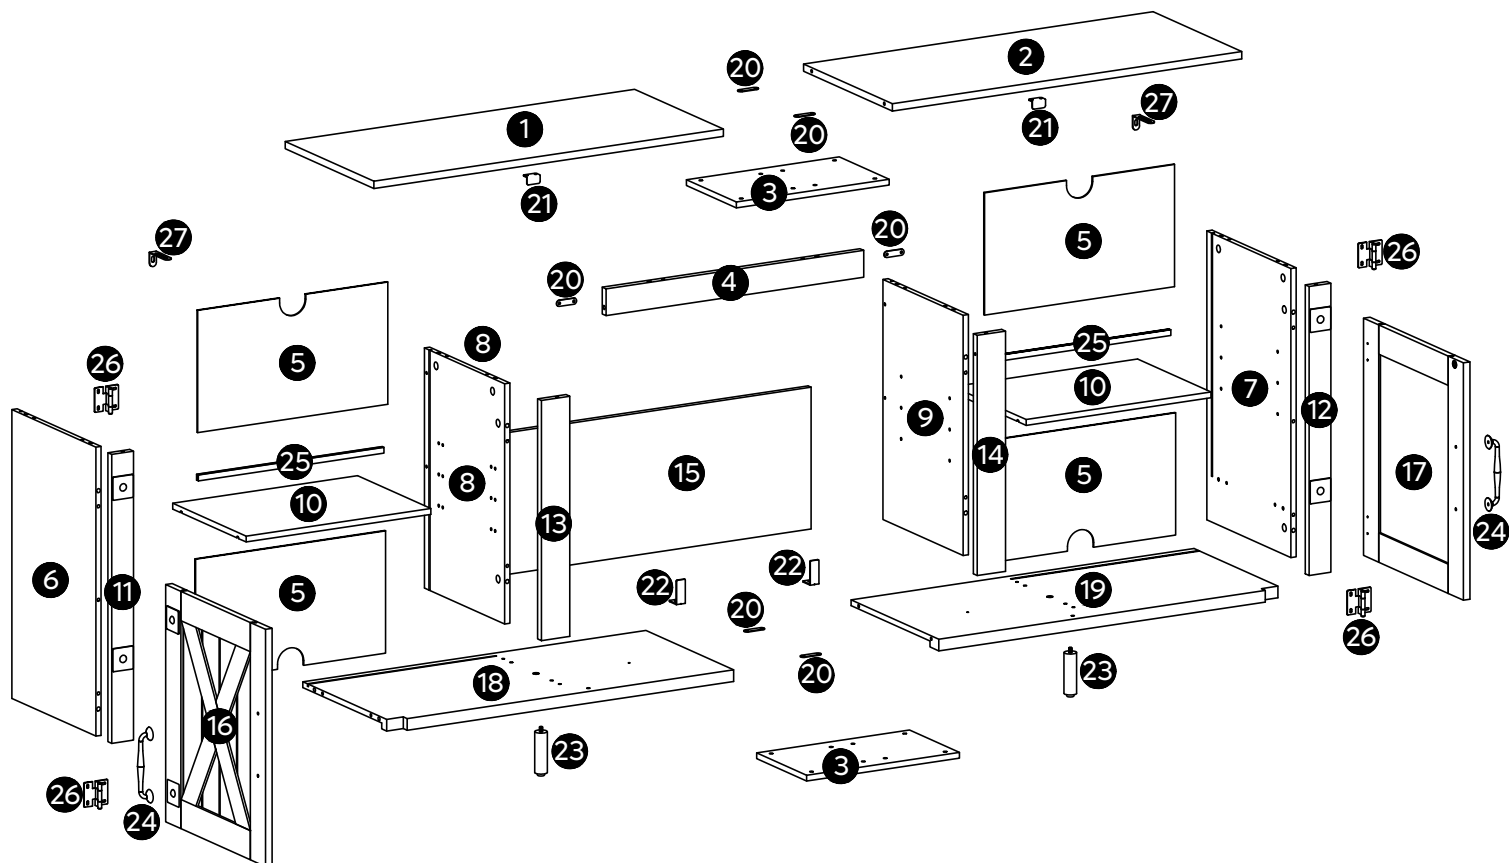








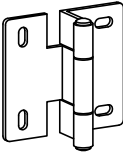

DETAILS

















PART LIST

<p>1</p>  <p>X1</p>	<p>2</p>  <p>X1</p>	<p>3</p>  <p>X2</p>
<p>4</p>  <p>X1</p>	<p>5</p>  <p>X4</p>	<p>6</p>  <p>X1</p>
<p>7</p>  <p>X1</p>	<p>8</p>  <p>X1</p>	<p>9</p>  <p>X1</p>
<p>10</p>  <p>X2</p>	<p>11</p>  <p>X1</p>	<p>12</p>  <p>X1</p>
<p>13</p>  <p>X1</p>	<p>14</p>  <p>X1</p>	<p>15</p>  <p>X1</p>
<p>16</p>  <p>X1</p>	<p>17</p>  <p>X1</p>	<p>18</p>  <p>X1</p>

PART LIST


<p>19</p>  <p>X1</p>	<p>20</p>  <p>X6</p>	<p>21</p>  <p>X2</p>
<p>22</p>  <p>X2</p>	<p>23</p>  <p>X2</p>	<p>24</p>  <p>X2</p>
<p>25</p>  <p>X2</p>	<p>26</p>  <p>X4</p>	<p>27</p>  <p>X2</p>

ACCESSORY LIST


A	ST6x33mm	24+2	
B	Ø15mm	24+2	
C	Ø6x30mm	38+4	
D	ST3.5x12mm	32+2	
E	ST4x12mm	12+2	
F	M6x20mm	16+2	
G	Ø5x19mm	8+1	
H	M4x20mm	4	
I	ST5x38mm	8+1	
J		16+2	
K	ST3x17mm	16+2	
L	Ø6mm	2	
M	ST4x38mm	2	
M3	M3	1	
M4	M4	1	
		1	

Important



Insert Dowels **ABOUT 2/3** into the Edges of the panels.**IF NECESSARY** tap Dowels Lightly with a rubber mallet.

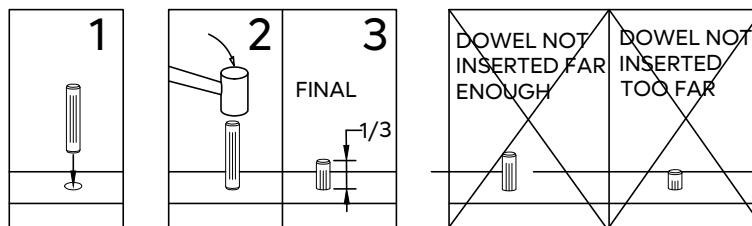

Cam Lock/Dowel Placement Supplement

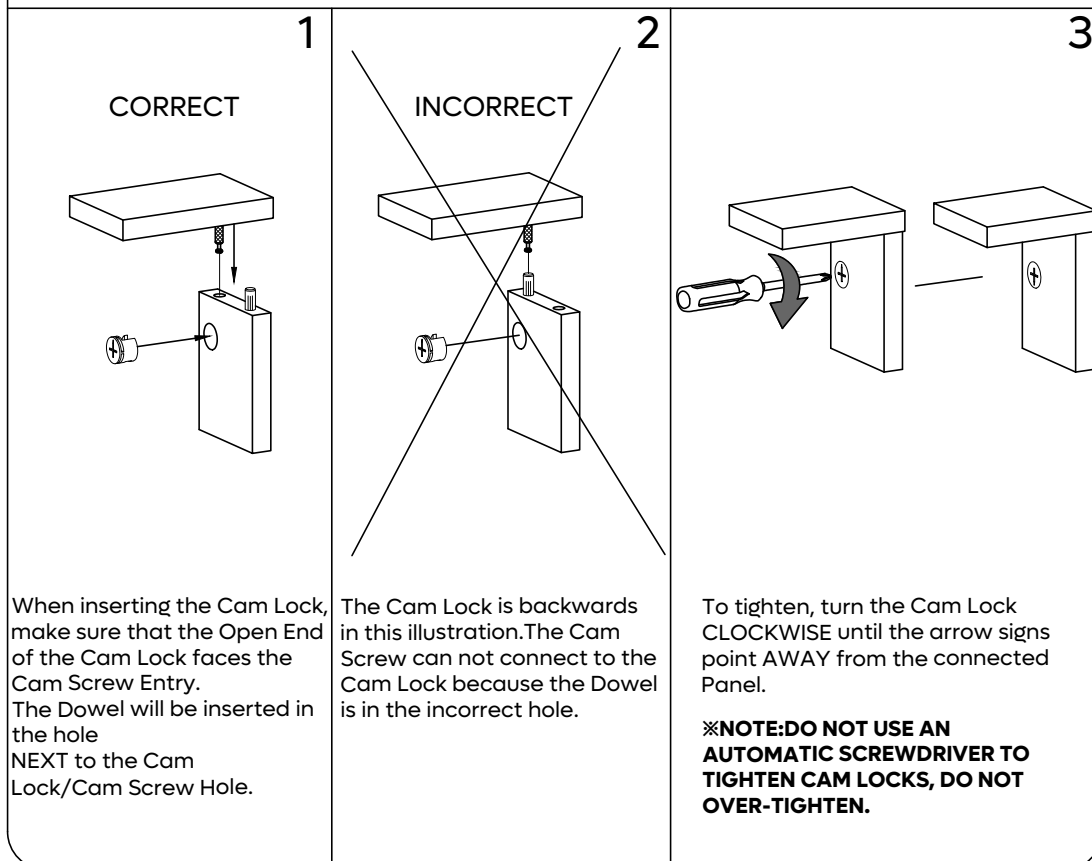



1

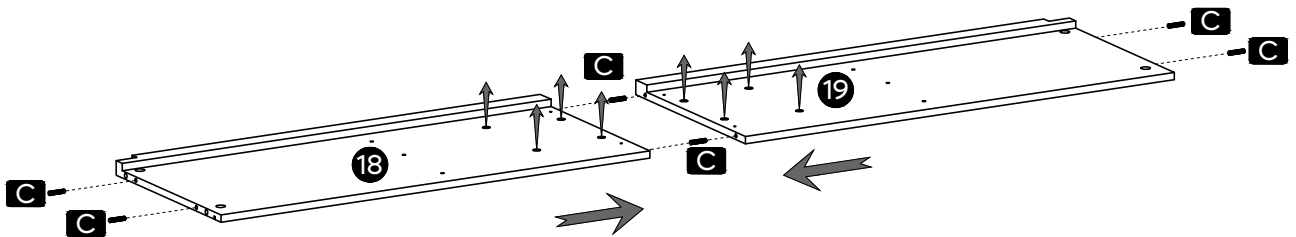

x6

C Ø6x30mm

2

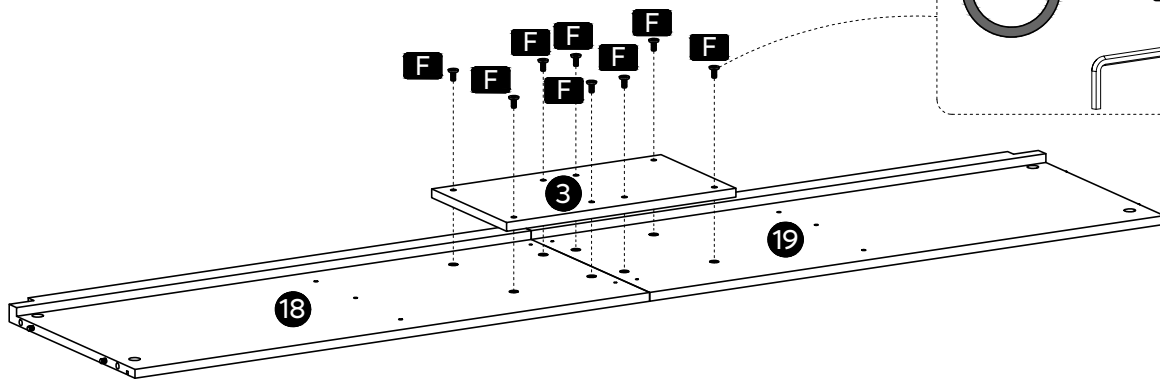



x8

F M6x20mm



M4


3

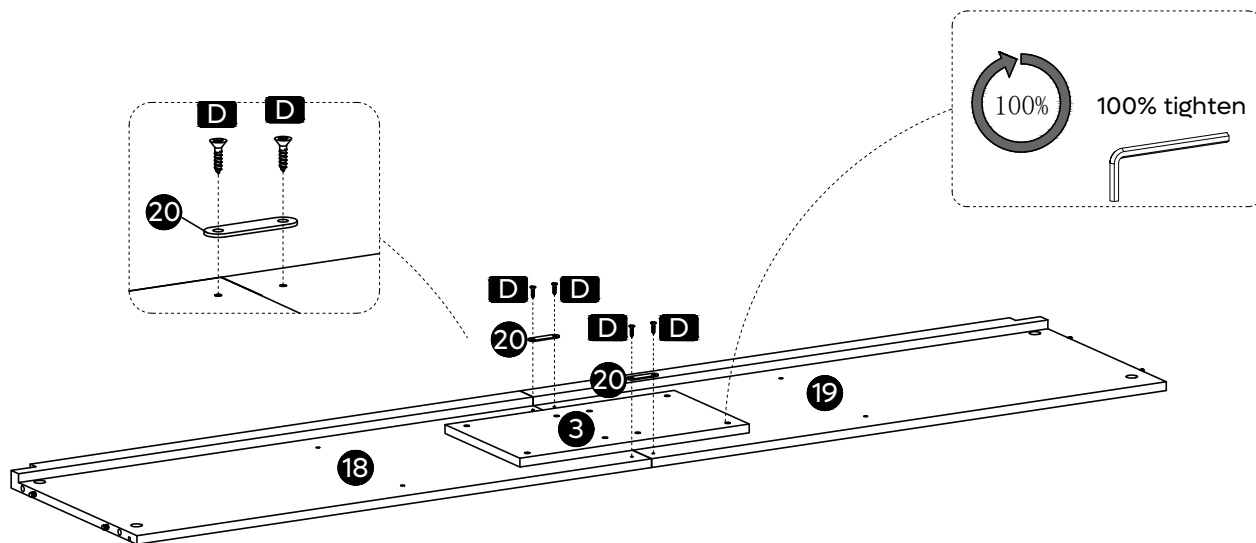


x 4

D

ST3.5x12mm




4

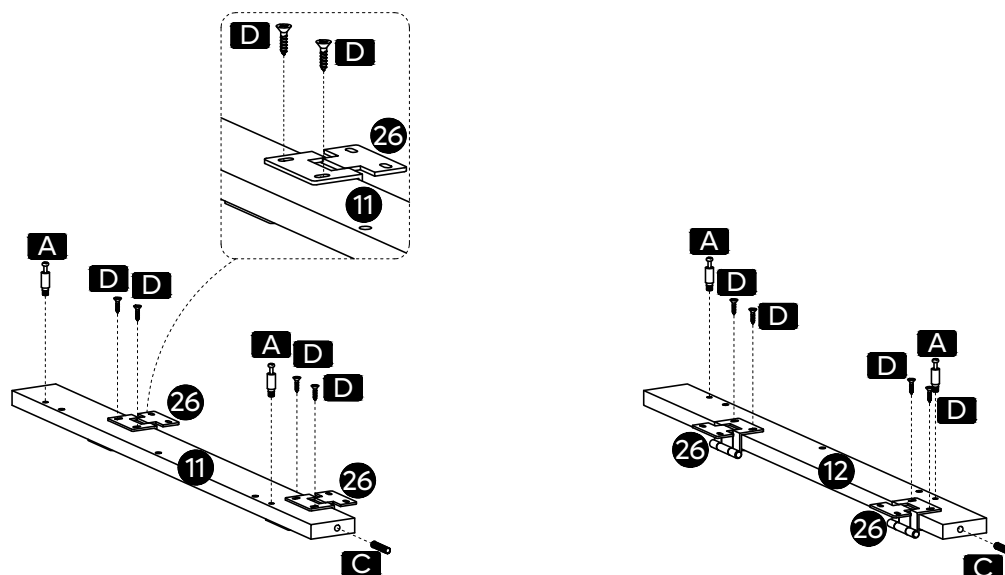

x 4

A

ST6x33mm



x 2

C


Ø6x30mm



x 8

D



ST3.5x12mm




L103416FP

9


5

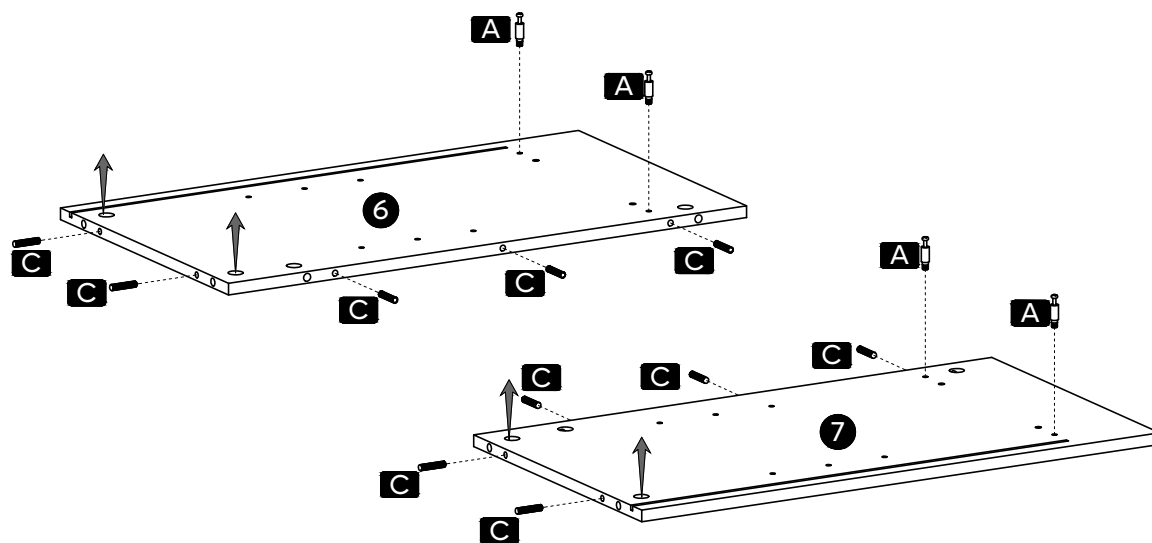

x 4




x10




A ST6x33mm

C Ø6x30mm

6

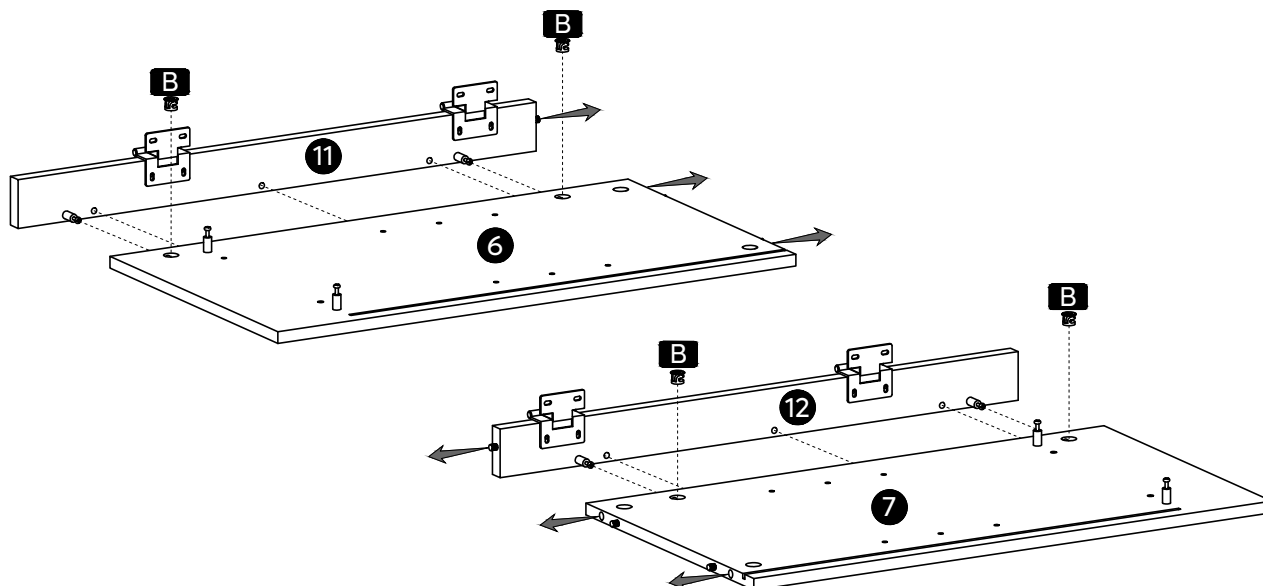


x 4




B Ø15mm

7

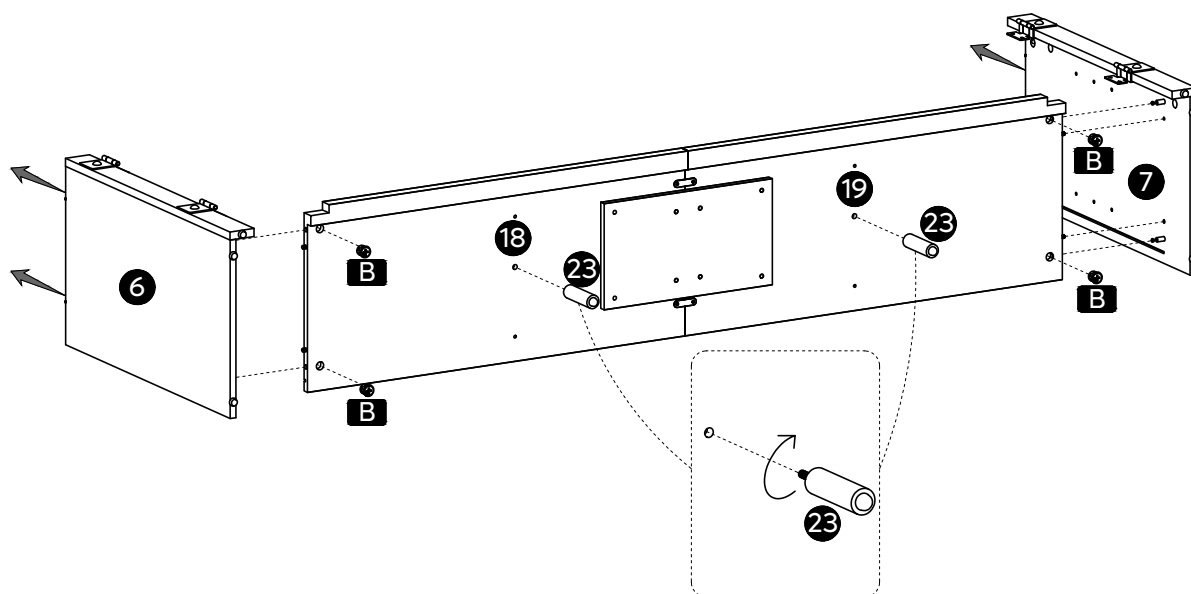


x 4




B Ø15mm


8

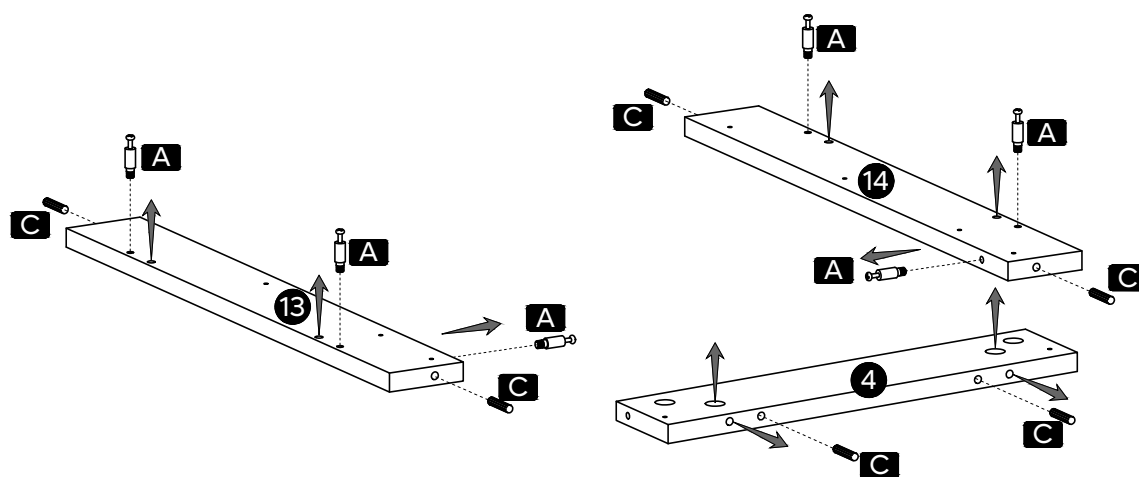

x 6



x 6




A ST6x33mm

C Ø6x30mm

L103416FP


11

9

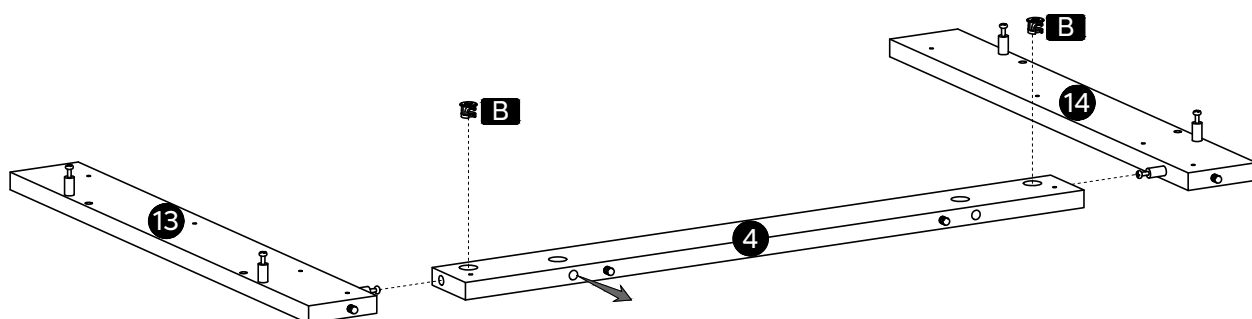


x 2

B Ø15mm




10


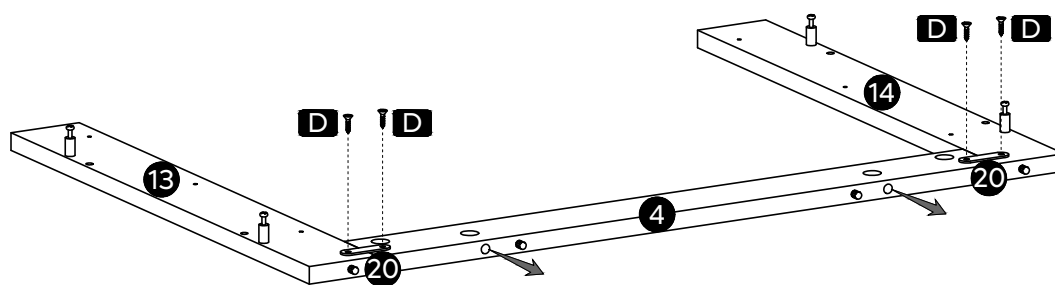


x 4

D ST3.5x12mm




11

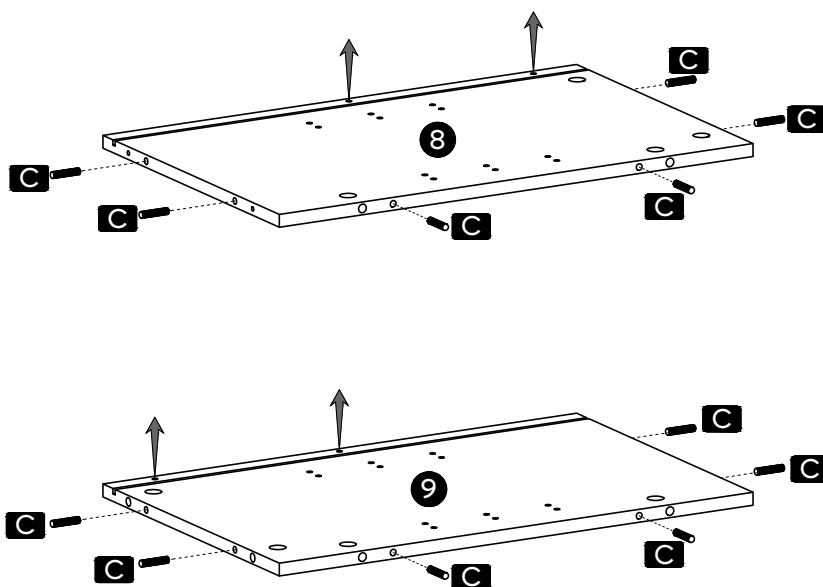

x12


C Ø6x30mm

12

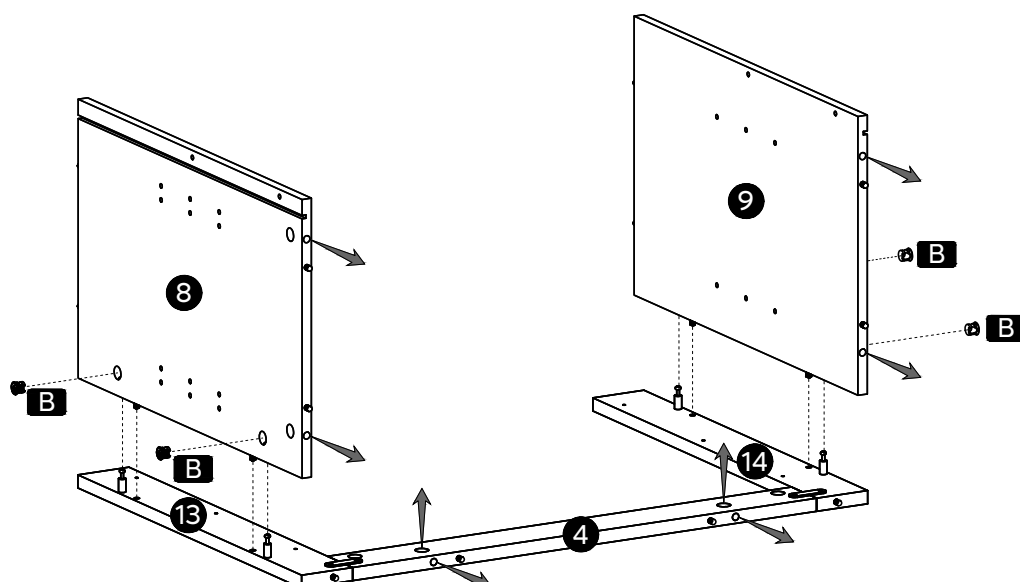

x 4

B Ø15mm





L103416FP


13

13



※ Two persons are needed : one person for holding;Then another person move the bottom ,And tighten the screw "I".

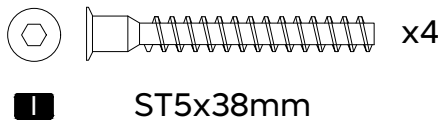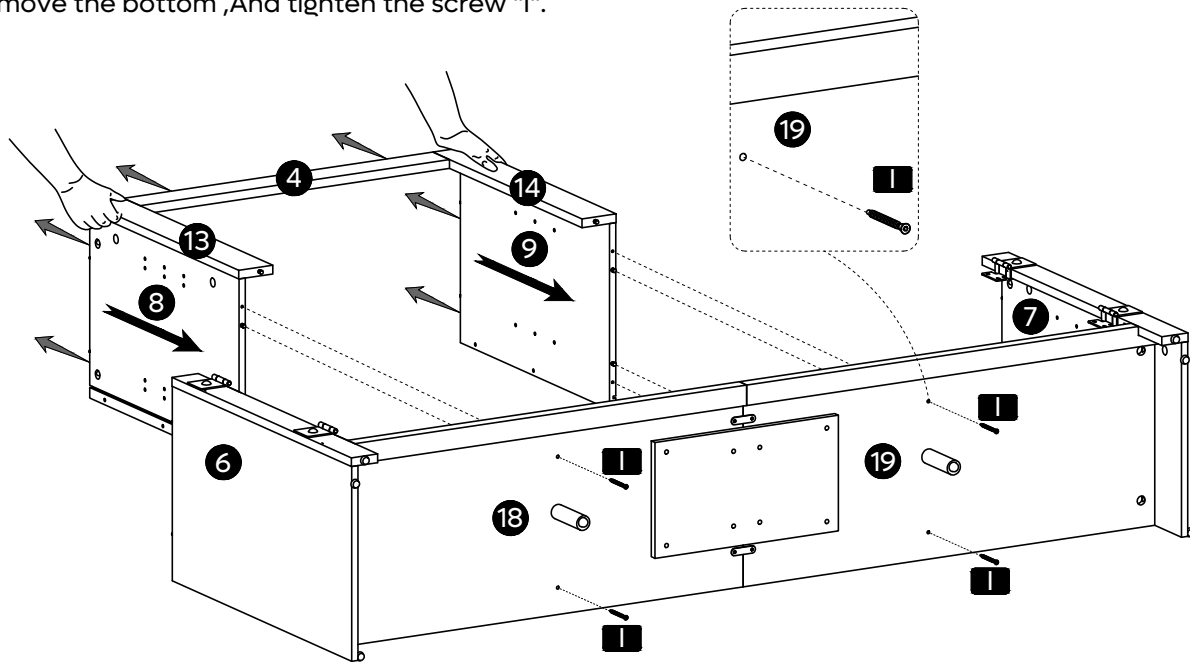


14

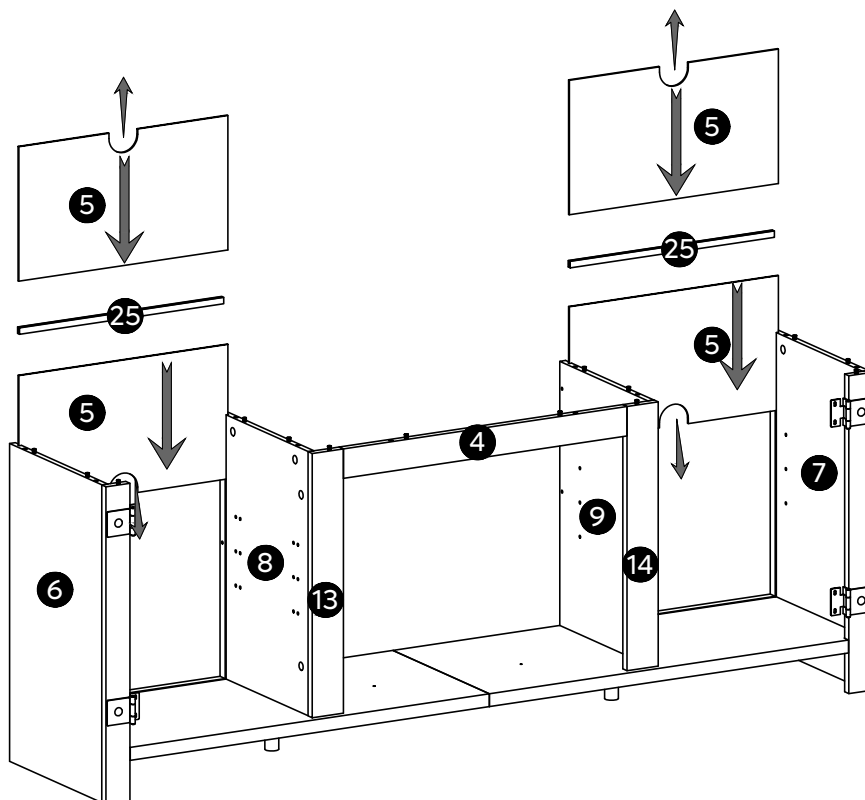

15

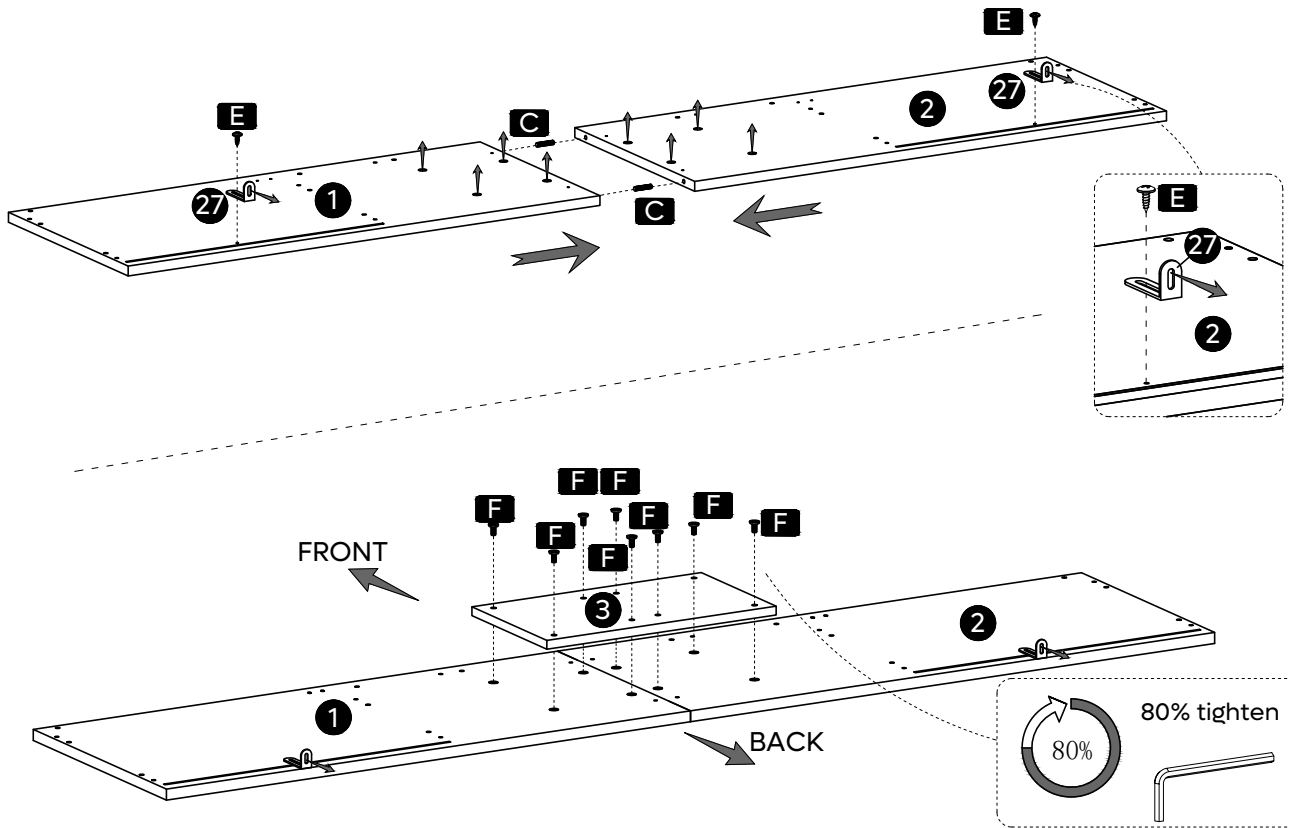

x2



x 2



x8



M4



80% tighten





C Ø6x30mm

E ST4x12mm


F M6x20mm

16

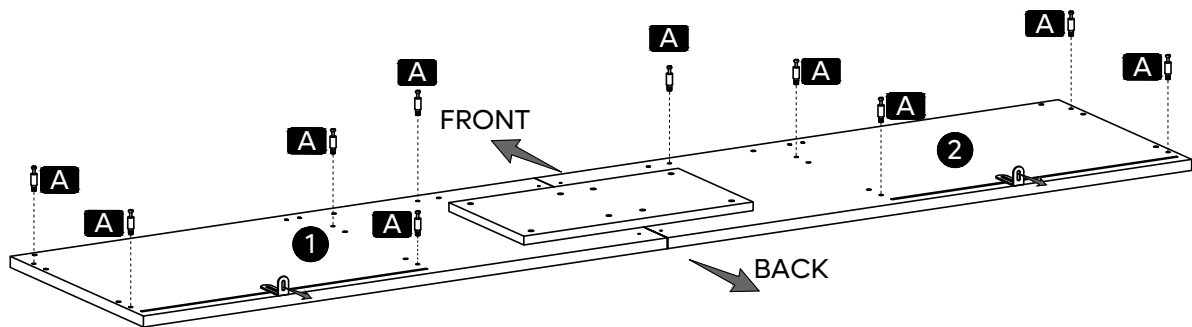

x 10




A ST6x33mm



L103416FP


15

17

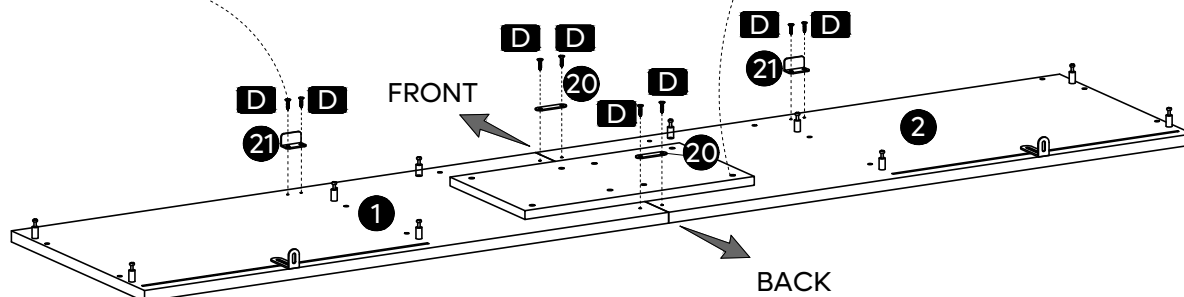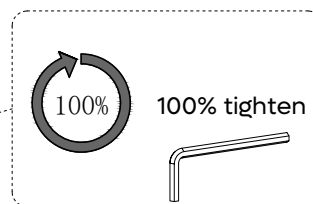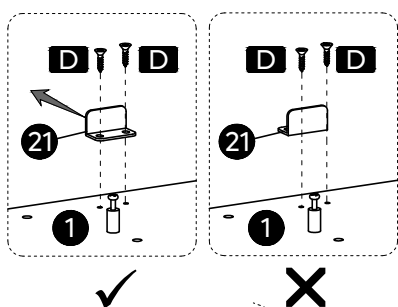




x 8

D ST3.5x12mm




18

※ Two persons are needed.

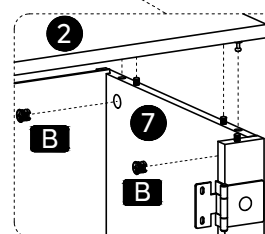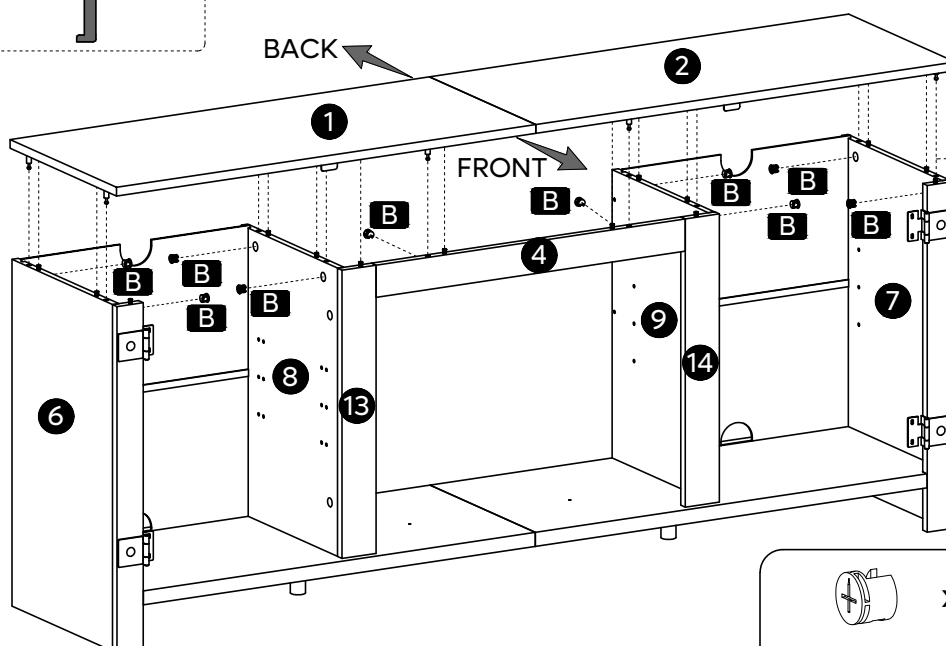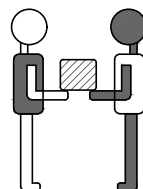

x 10


B Ø15mm




16

L103416FP

19

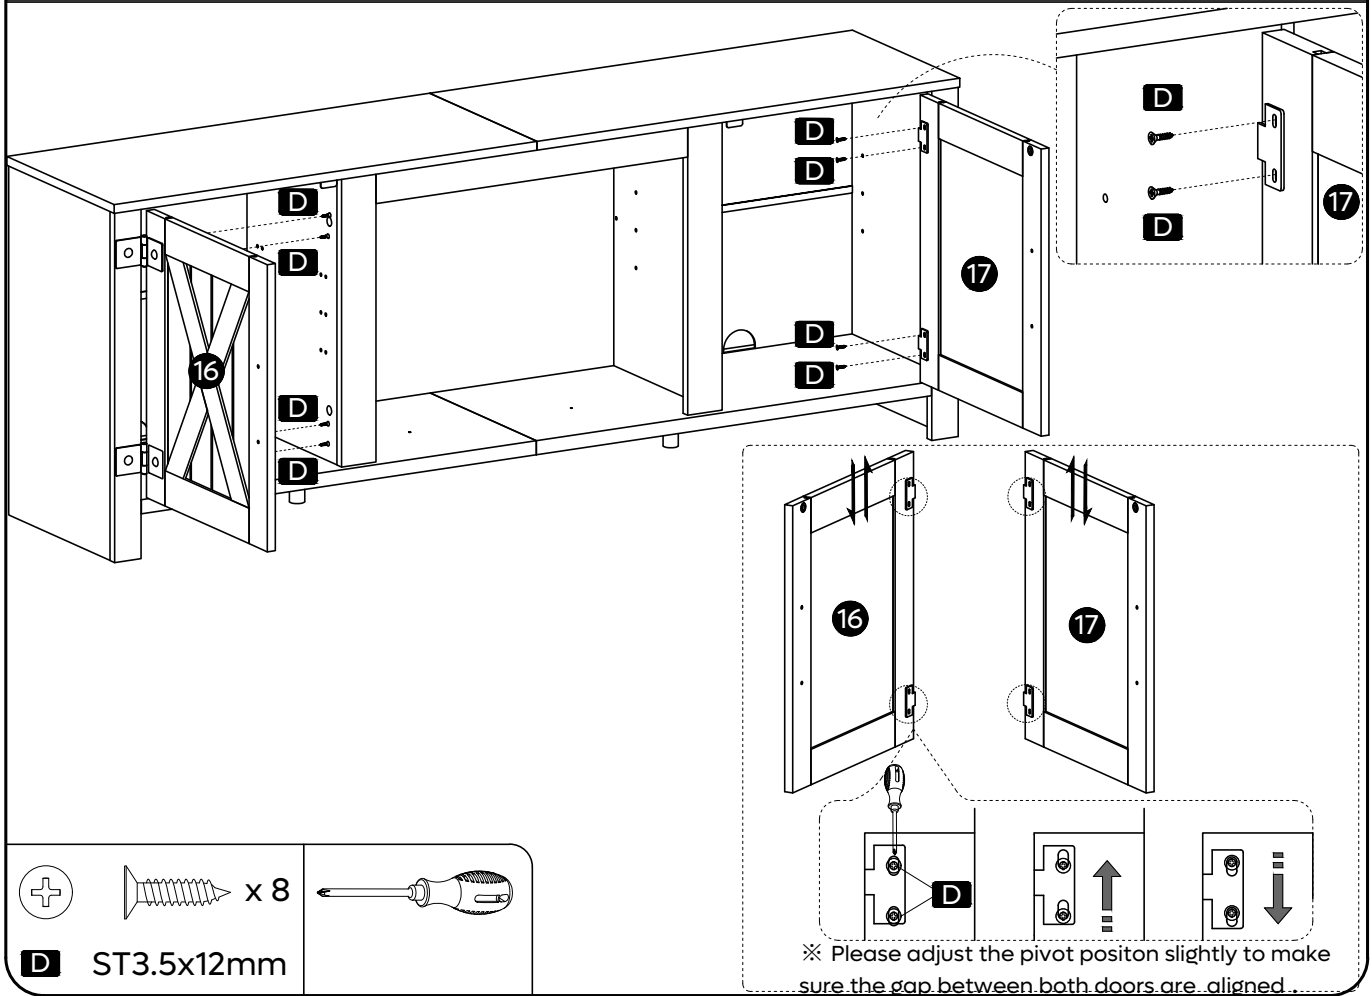

20

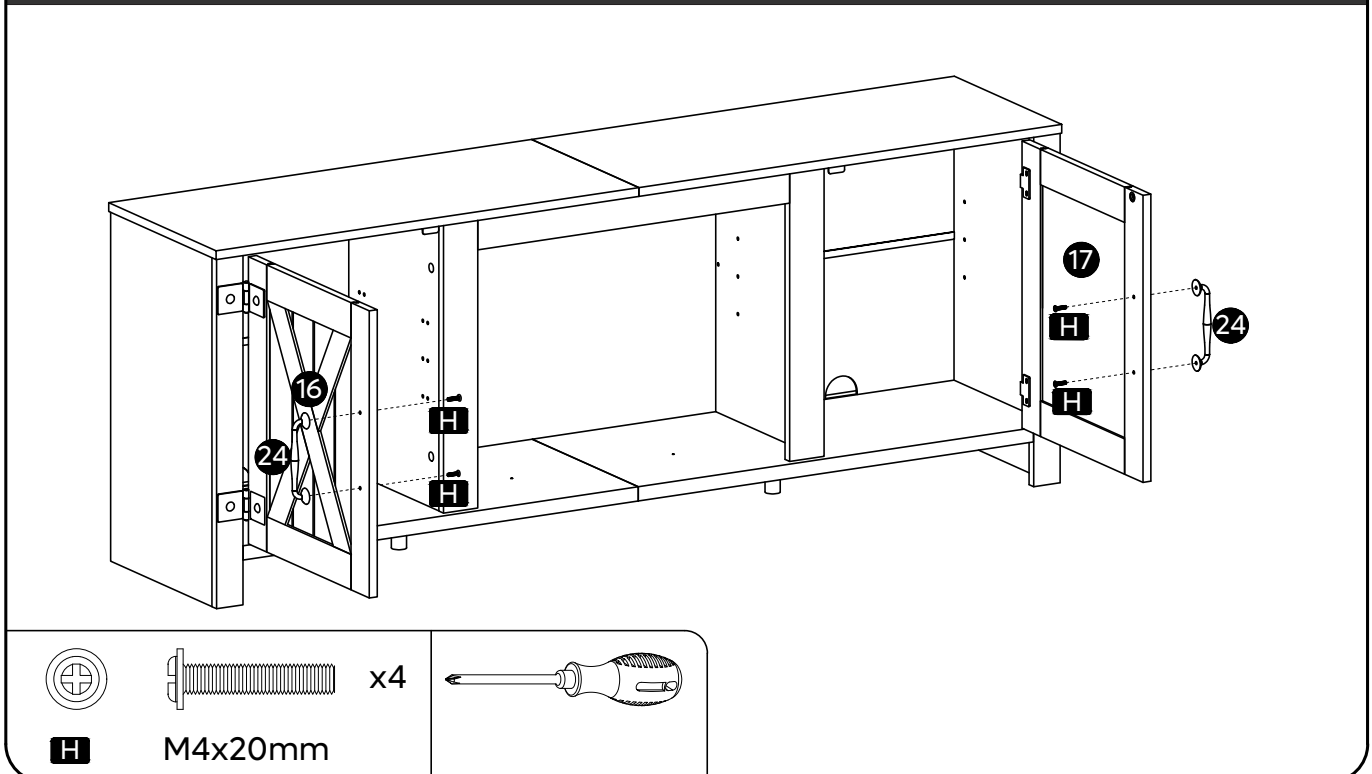


L103416FP

17


Style A: Step 1-20&21-26

Ⓐ

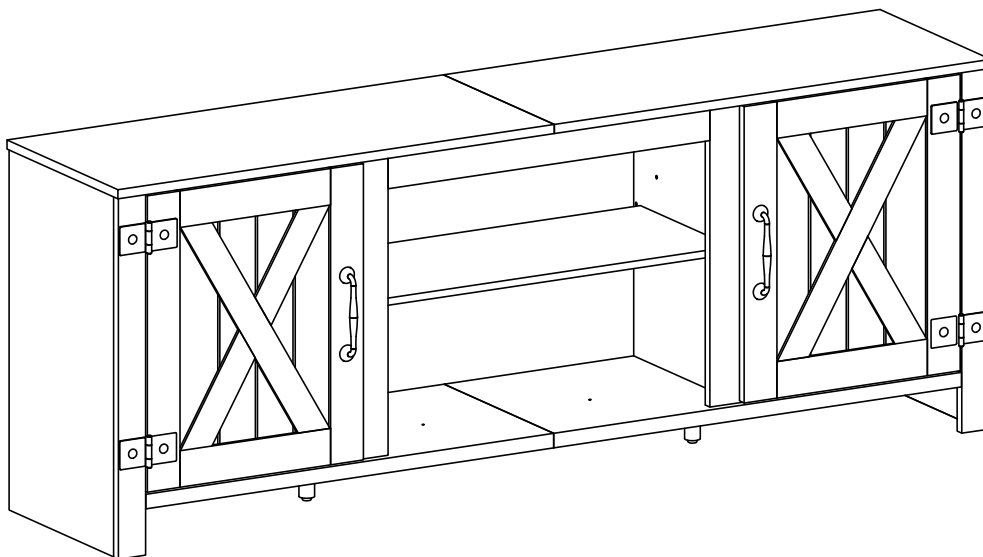



Style B: Step 1-20&27-36

Ⓑ

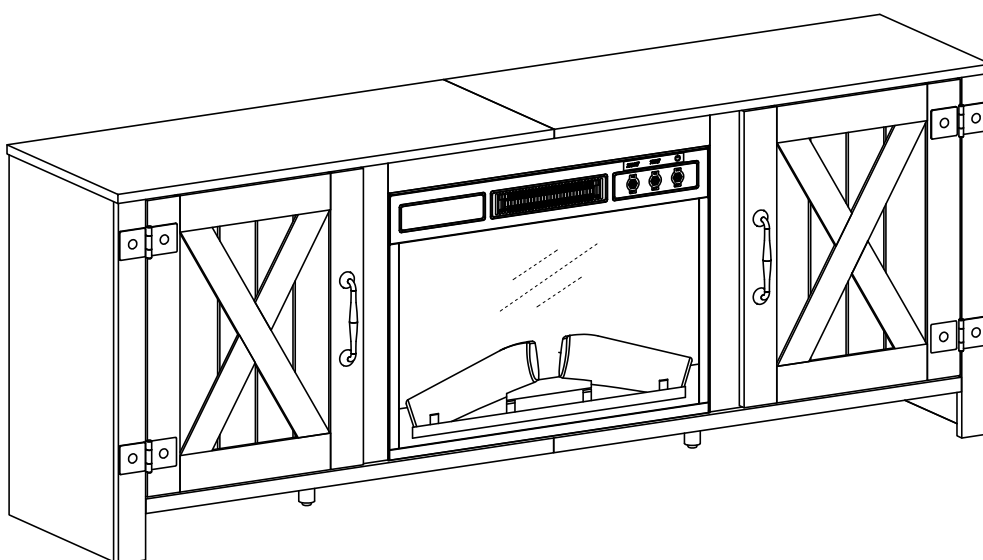

21

A

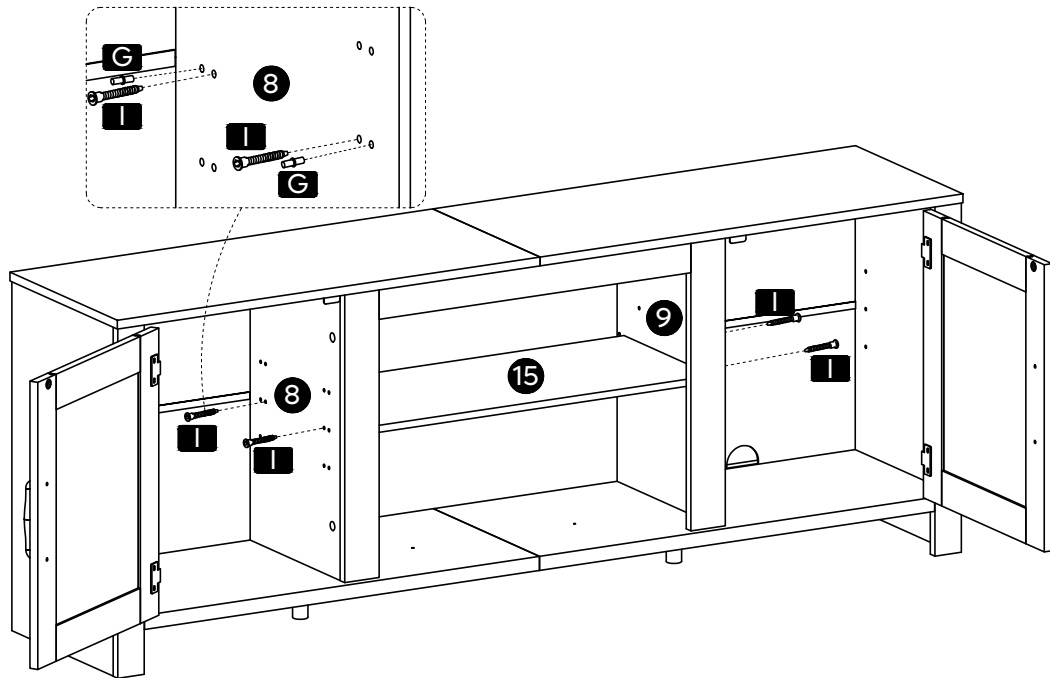

x4

L



ST5x38mm



M3

22

A

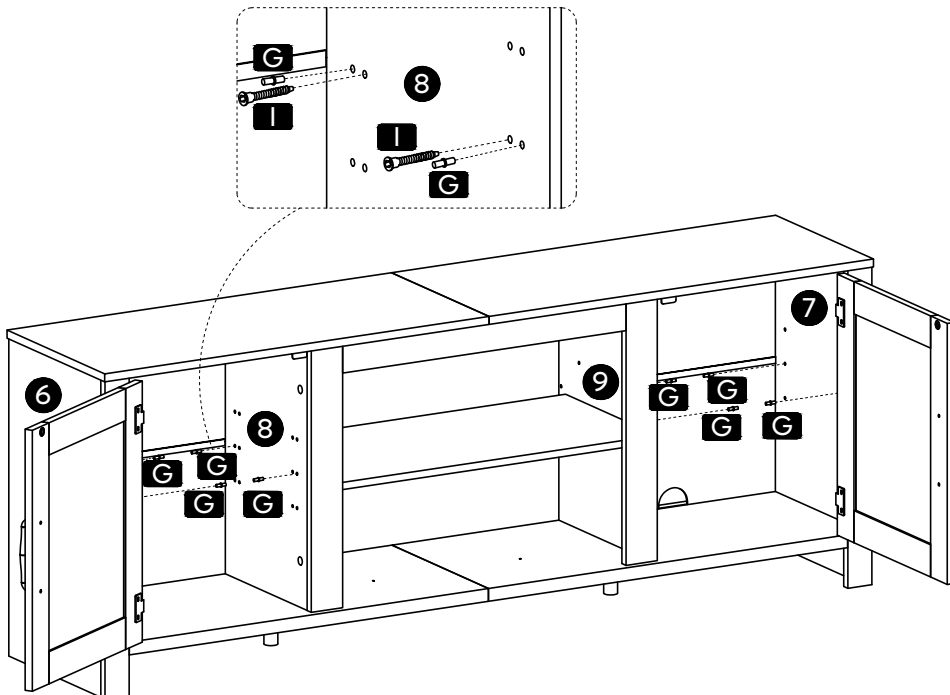

x 8

G


Ø5x19mm

L103416FP

19


23

A

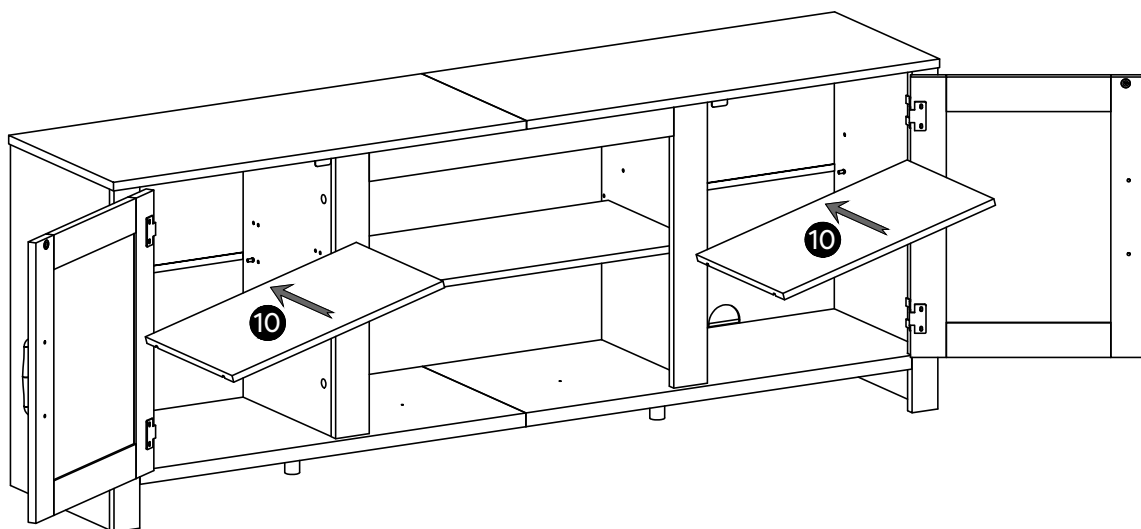


24


A

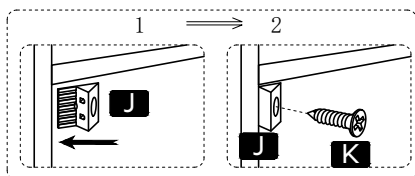


Back view

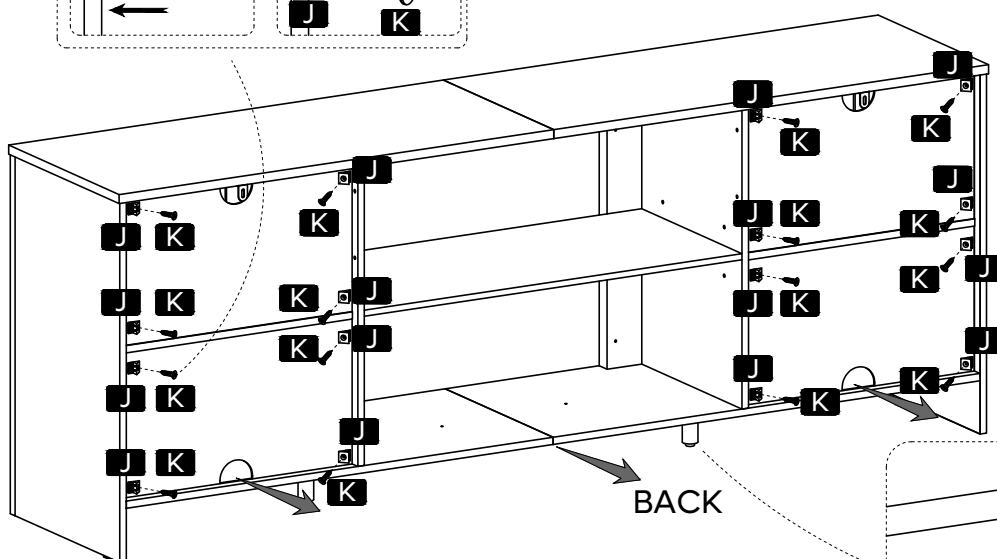

x16




x 16



K

ST3x17mm

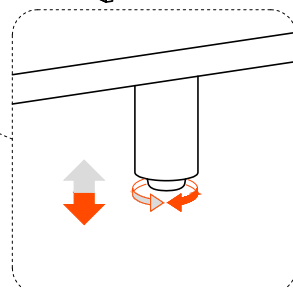

20


L103416FP

WALL SAFETY STRAP INSTALLATION

Ask for assistance to position the assembled unit at the desired location against a wall. Now, follow the instructions printed on the plastic bag containing the Tipping Restraint Hardware to attach two tipping restraints to the unit and the wall. As shown in the illustration.




※NOTE: Young children can be seriously injured by tipping furniture. You must install the Tipping Restraint Hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent, they are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

A

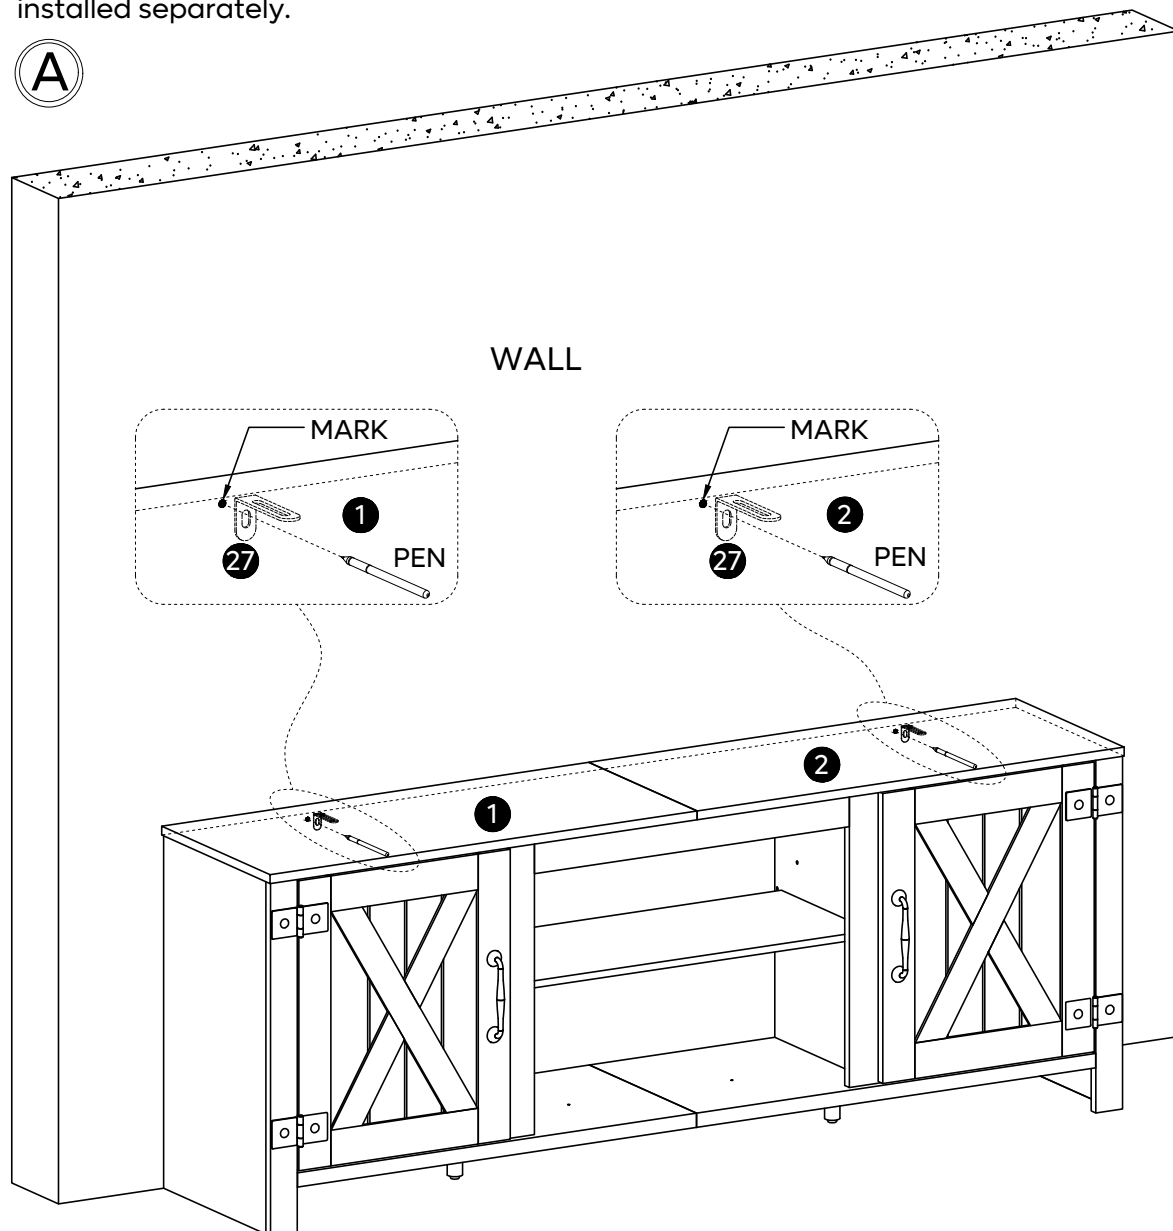




Tools required: Phillips screwdriver, power Drill, 3/8" Drill Bit and Rubber Mallet

(A)

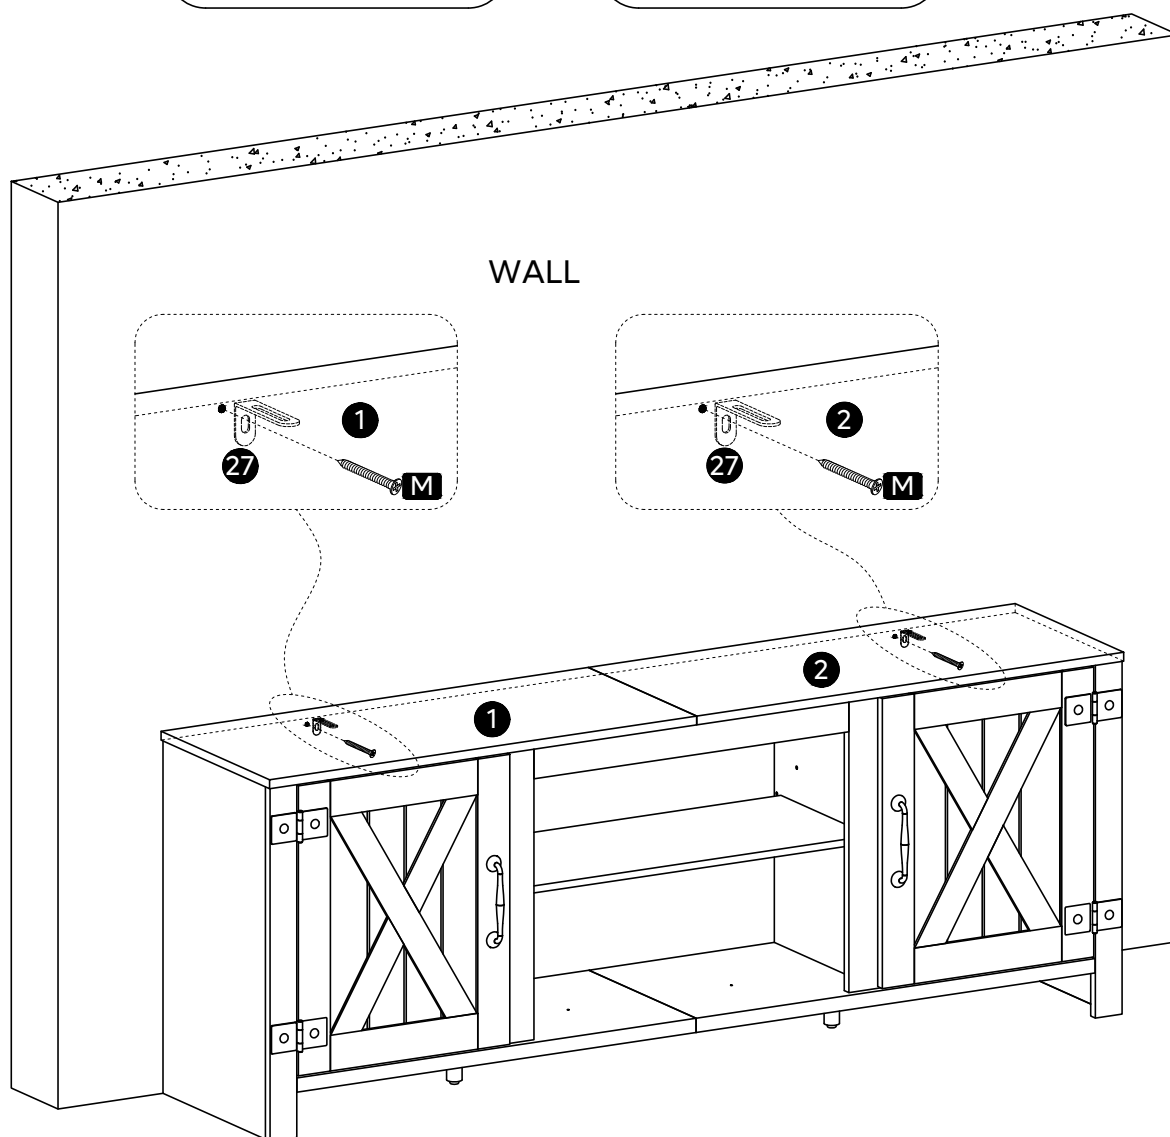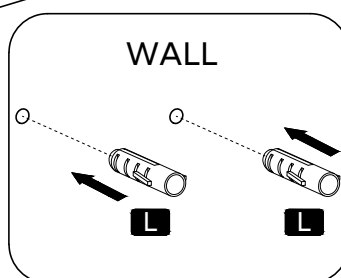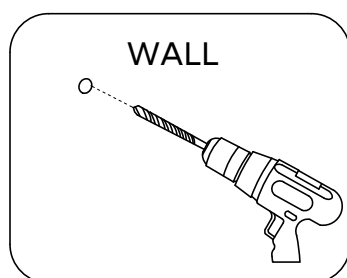

※ **Please fasten this item to wall for protection and safety.**



1. Drill 2 holes in the wall and insert "L" into holes.
- ※ You may need to use rubber mallet for tapping "L".
2. Use "M" to attach "L" with "27".



27

※ If you chose fireplace TV stand , Please continue with the following steps.


(B)

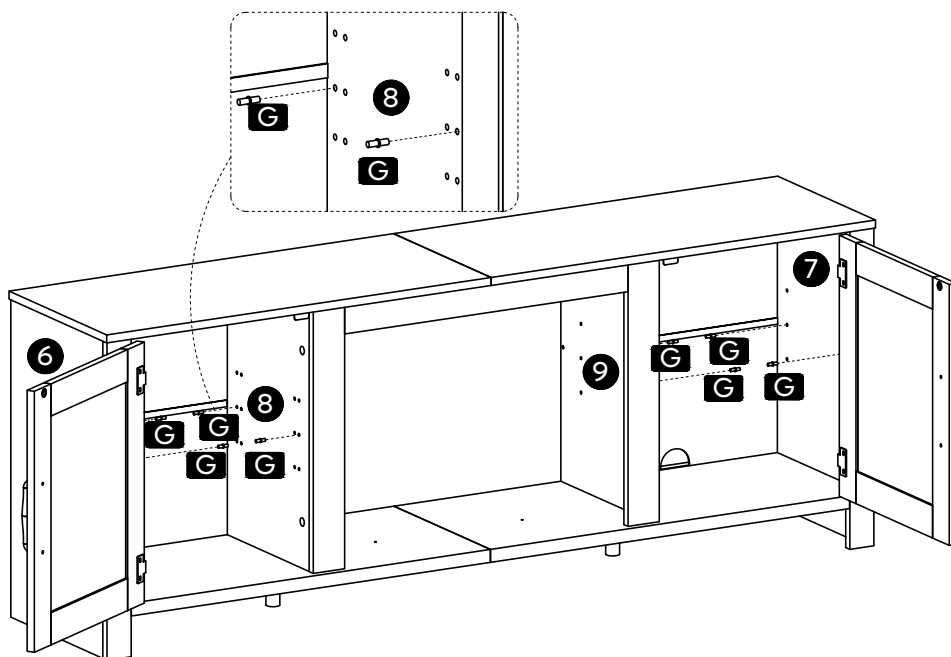


G Ø5x19mm

28


(B)

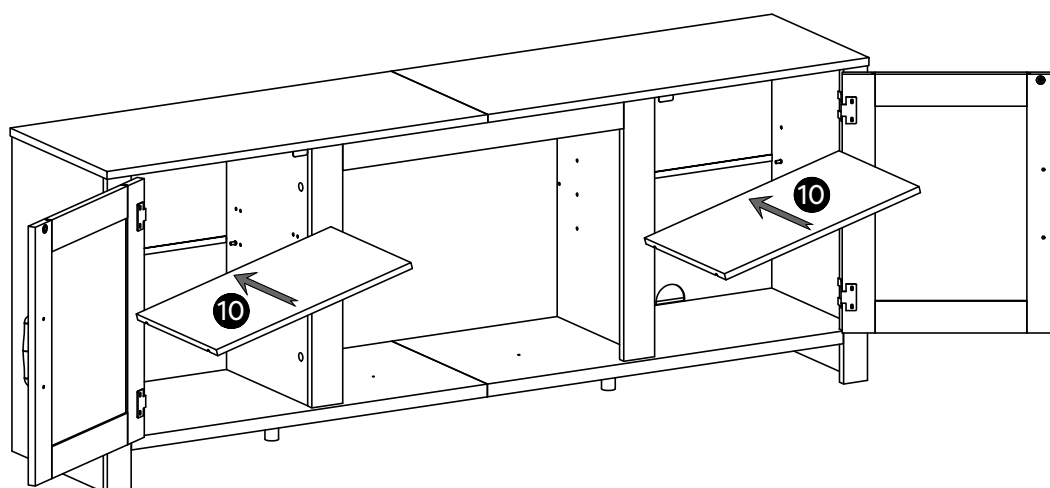

※please refer to the fireplace assembly installation

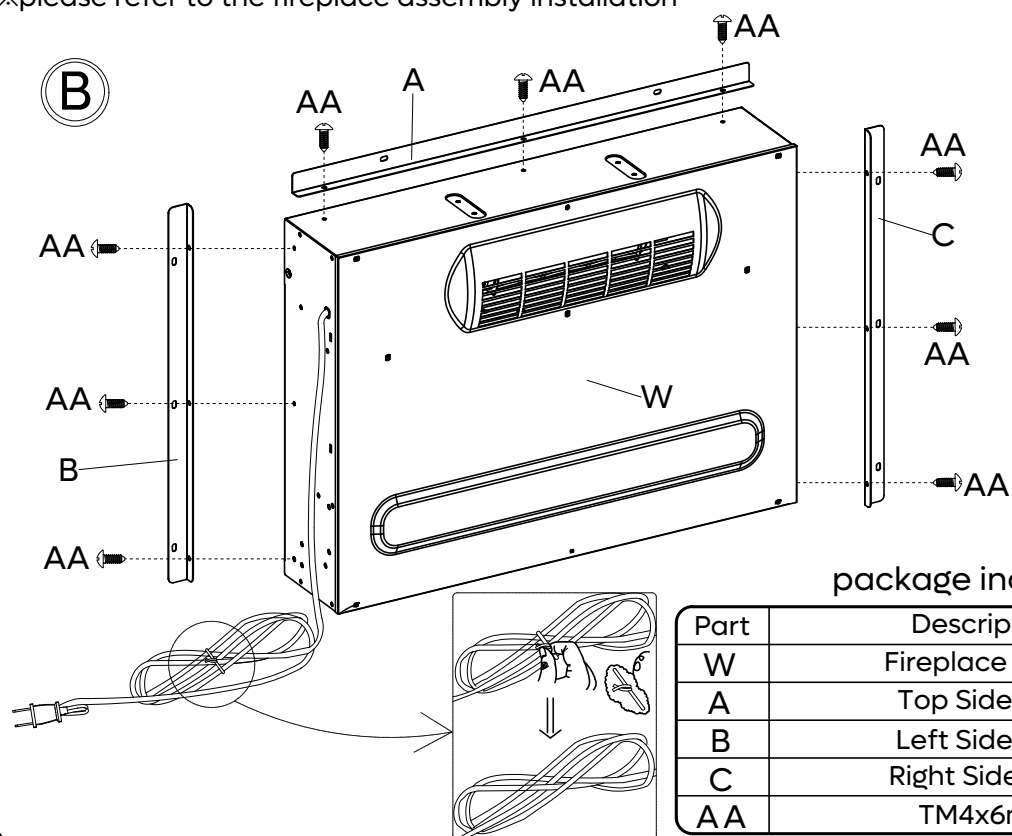


Back view

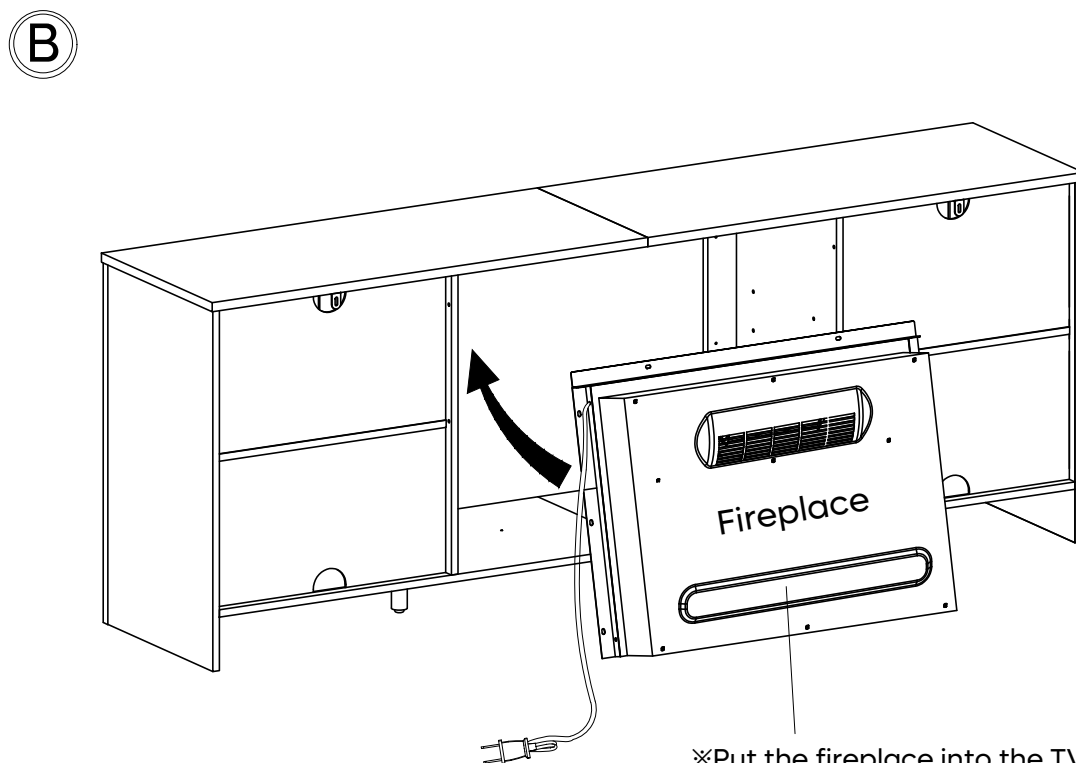

31

B


Back view

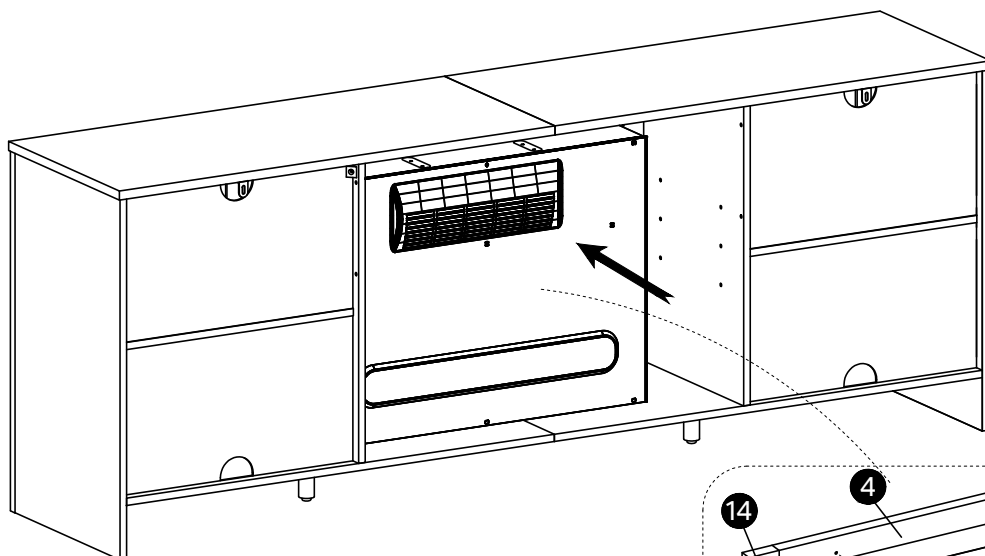


Use Screwdriver to tighten the round head screw "E".



x 8




E ST4x12mm

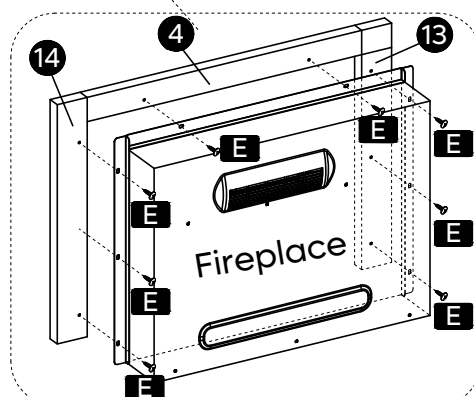


32

B


Back view

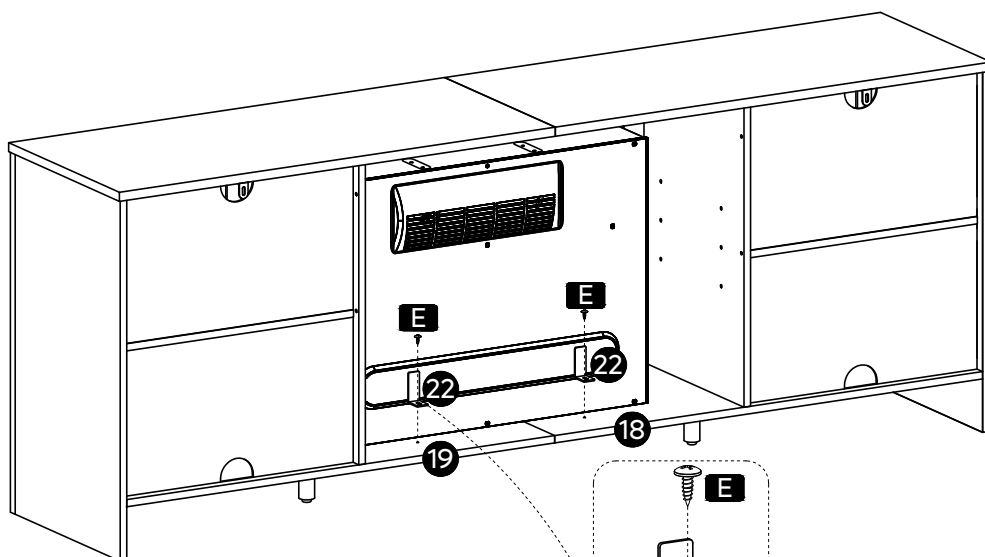

x 2



E ST4x12mm

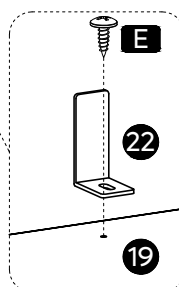



L103416FP

25

33

B

Back view

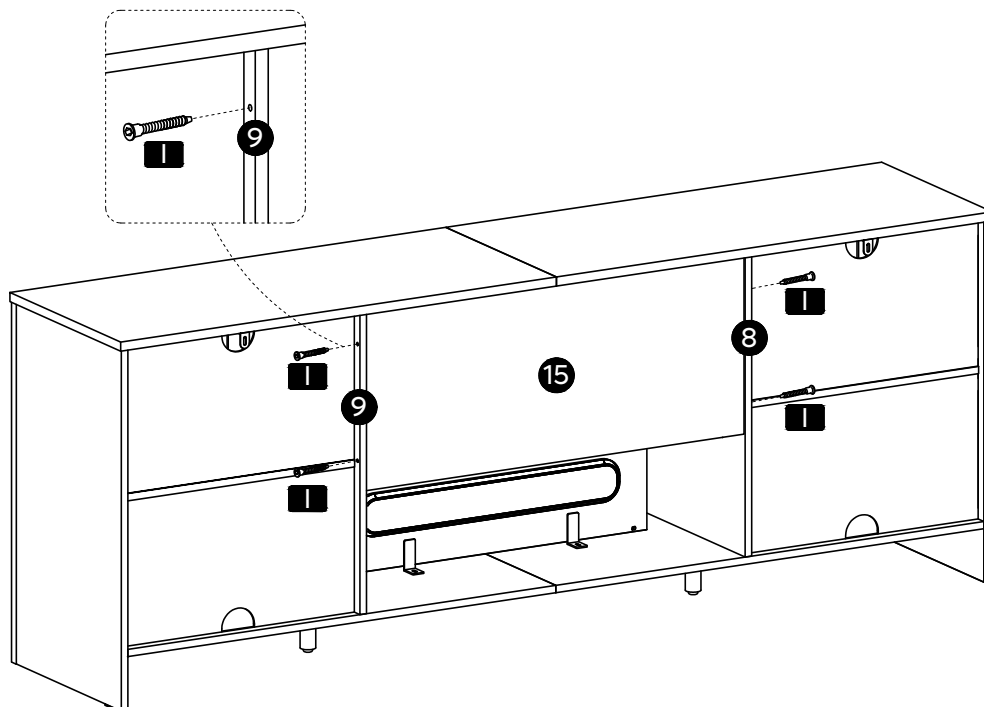

I

ST5x38mm





M3

34

B


Back view

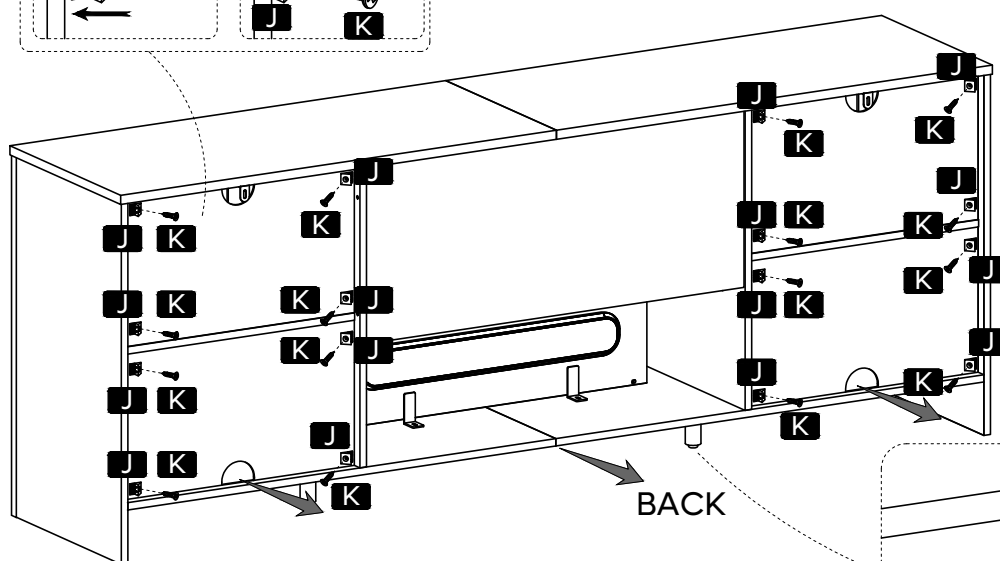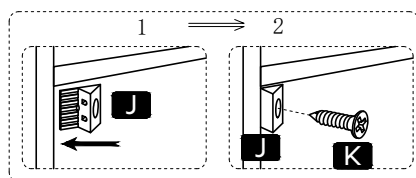

x16



x 16



J

K

ST3x17mm




WALL SAFETY STRAP INSTALLATION

Ask for assistance to position the assembled unit at the desired location against a wall. Now, follow the instructions printed on the plastic bag containing the Tipping Restraint Hardware to attach two tipping restraints to the unit and the wall. As shown in the illustration.




※NOTE: Young children can be seriously injured by tipping furniture. You must install the Tipping Restraint Hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent, they are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

(B)

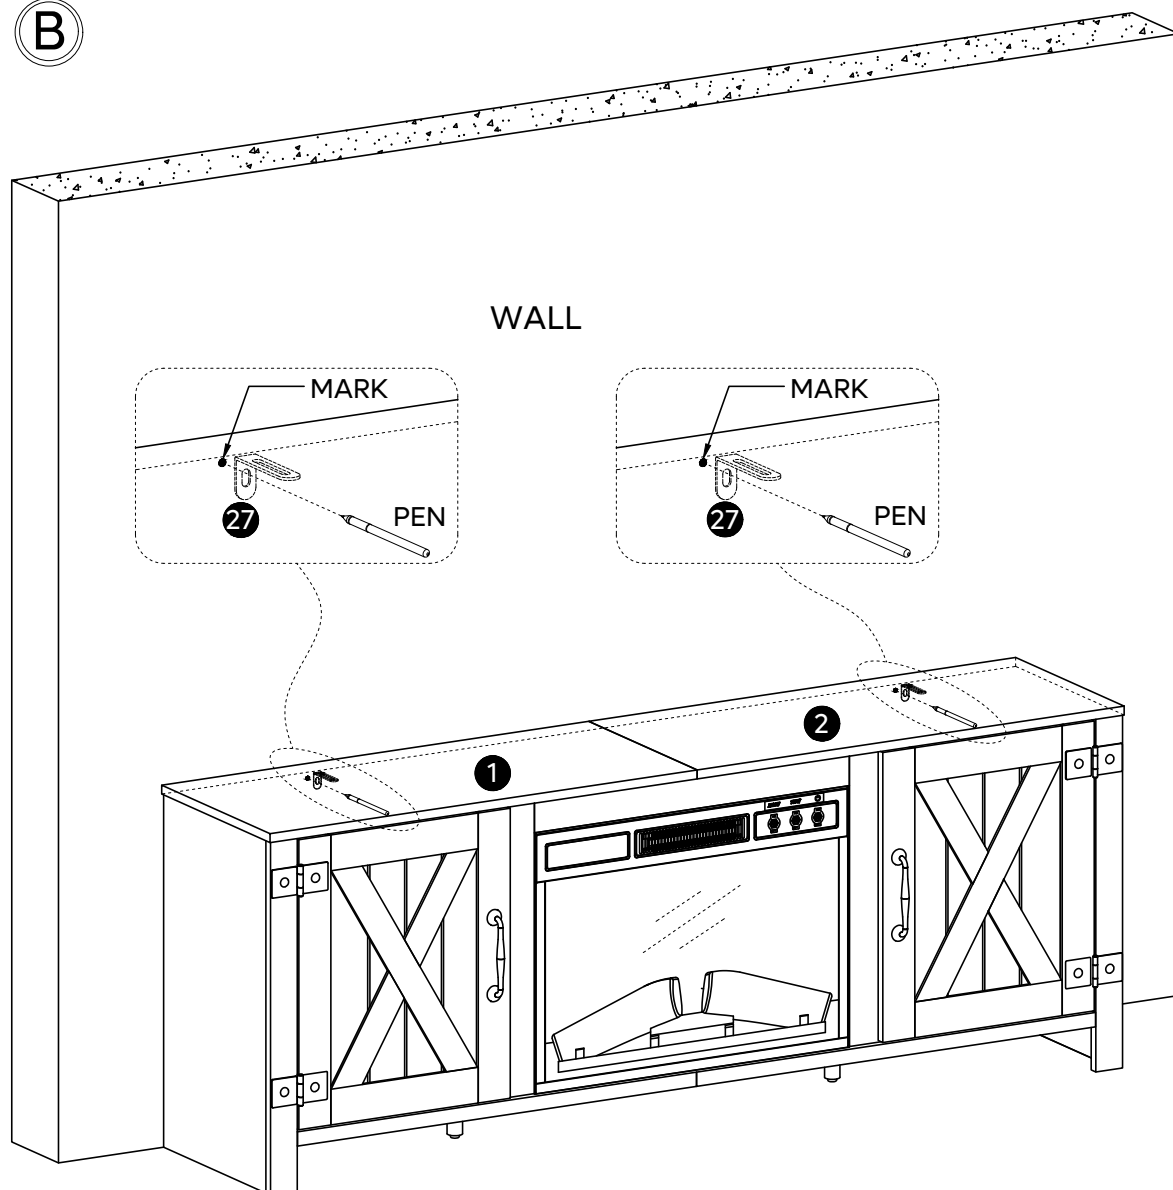

Tools required: Phillips screwdriver, power Drill, 3/8" Drill Bit and Rubber Mallet

(B)

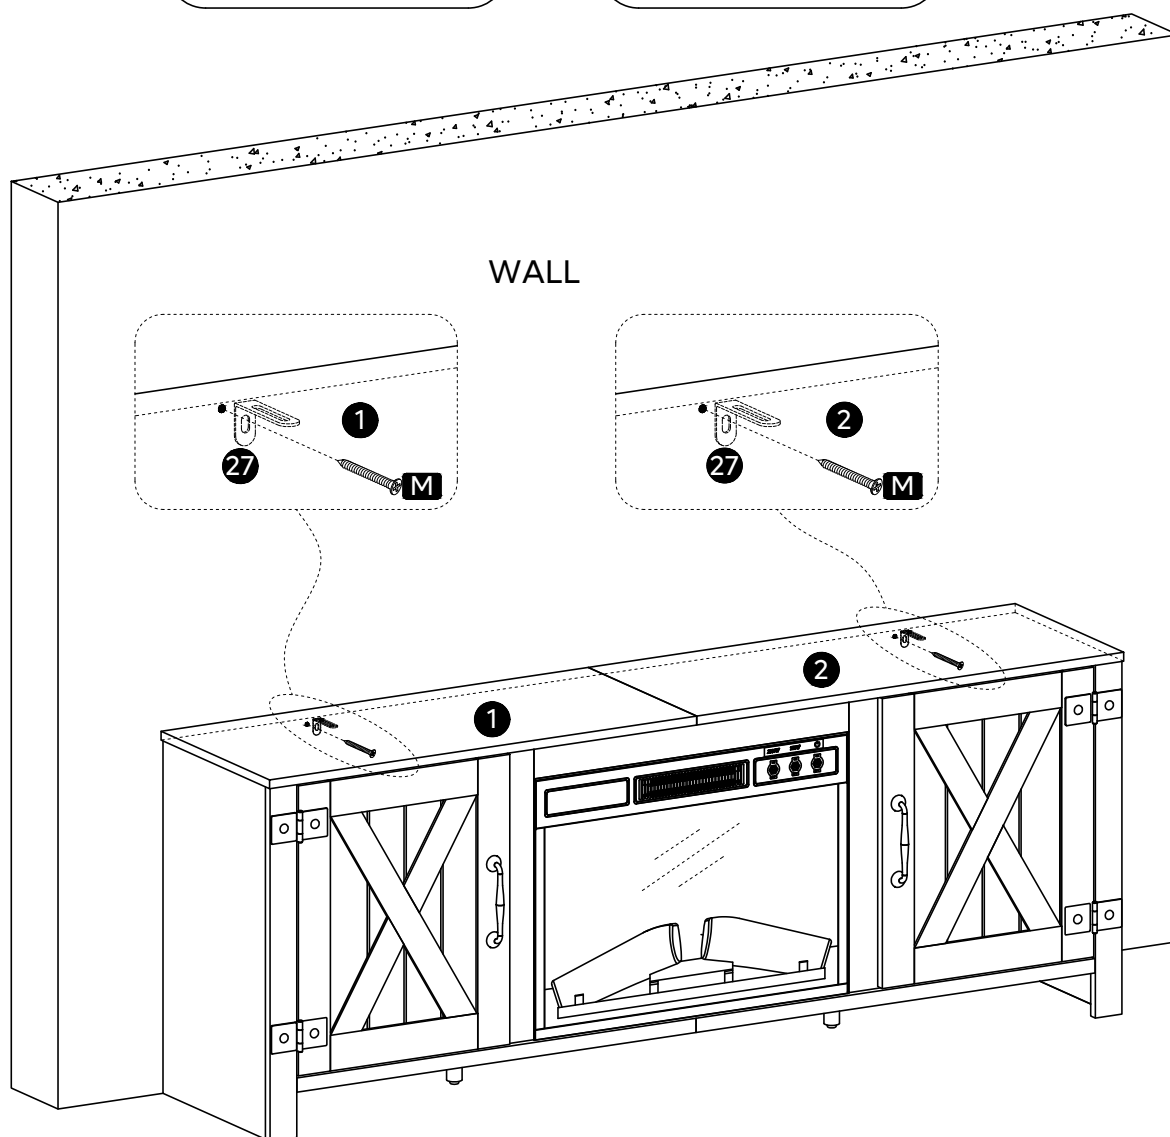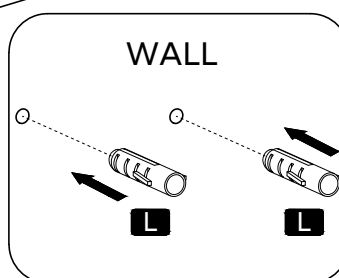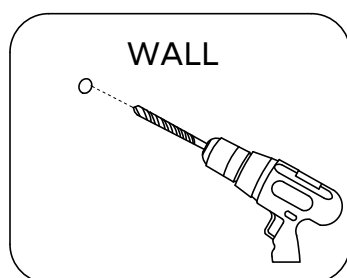

※ **Please fasten this item to wall for protection and safety.**

1. Drill 2 holes in the wall and insert "L" into holes.
- ※ You may need to use rubber mallet for tapping "L".
2. Use "M" to attach "L" with "27".

