



breuerchaircompany.com



support@breuerchaircompany.com



(855) 789-0501



BREUER

—CHAIR COMPANY—

by FURNISH
THEORY



THANK YOU FOR YOUR PURCHASE!

The **REREKE** chair is a masterpiece of Italian craftsmanship. This elegant side chair features a striking cane back and a cushioned seat upholstered in premium fabric, providing both comfort and style. Its sleek, contemporary design and robust construction make it a perfect addition to any modern living space.

SPECIFICATIONS

		Overall Dimensions (W x D x H): 18.9" x 21.7" x 31.5"
		Seat Height: 18.3" Seat Depth: 15.7"
		Weight: 16.5 lbs.
		Weight Capacity: 250 lbs.
		Seat Cover: Grisù 100 Fire Retardant Fabric by Abitex

ASSEMBLY INSTRUCTIONS

1 UNPACK AND ORGANIZE: Lay out all components and hardware. Identify the 8 (eight) hex socket screws **(A)**, 2 (two) Phillips wood screws **(B)**, and Allen wrench **(C)**



A






B



C

2 ATTACH THE LEGS:


- Place the chair seat upside down on a flat surface (such as a table or counter)
- Place either of the two leg frames on the seat so the legs will point up and the frame's brackets with holes will face inwards
- Align the backrest with the corresponding holes in the frame's brackets
- Insert 8 (eight) hex socket screws **(A)** into the holes in the frame brackets
- Use the Allen key **(C)** to loosely attach the screws. Make sure **NOT** to fully tighten the screws yet (we'll tighten them later below)
- Repeat this step for the other frame

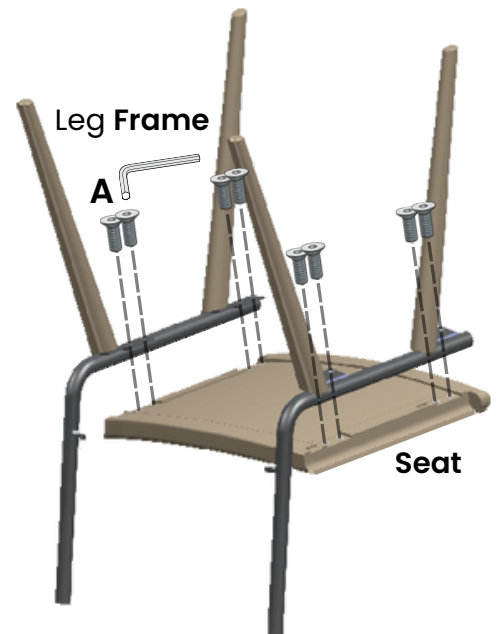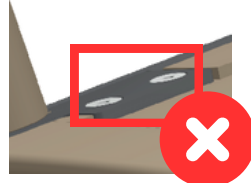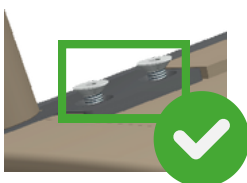

Make sure **NOT** to fully tighten the screws **(A)** yet at this step (we'll tighten them later below)

Assembly Instructions
continue on the next page



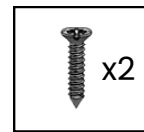

B

ASSEMBLY INSTRUCTIONS – CONTINUED


This is the **continuation** of the the Assembly Instructions.

↶ Flip the page for **Step 1** and **Step 2**.


3 ATTACH THE BACKREST:

- Vertically align the backrest with the frame
- Slide the backrest along the frame's metal bars to the direction of the seat until the screw holes in the backrest meet the screw holes in the frame's brackets
- Insert the 2 (two) Phillips wood screws (**B**) through the holes in the brackets and then into the holes in the backrest
- Use a Phillips screwdriver to tighten the screws

4 FINAL ADJUSTMENTS: Place the chair on a leveled surface, ensure stability, and tighten all the 8 (eight) hex socket screws (**A**) with the Allen key (**C**). Enjoy your newly assembled **REREKE** chair!

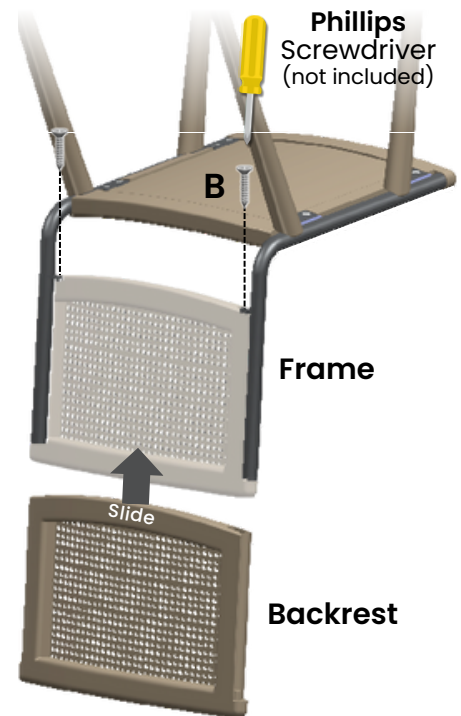

C

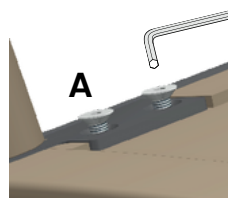

Enjoy your newly assembled **REREKE** chair!

CARE INSTRUCTIONS

Regularly dust the cane back and gently vacuum the seat to keep it clean.
 For fabric stains, use a mild detergent and a damp cloth. Avoid using abrasive chemicals.

Follow **@breuerchaircompany** on social media:

