

WARNING!!

Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping. If you have any questions about this product or the tip restraint, please send us an email at tip_restraint_help@Noblehousefurniture.com

Never allow children to climb or hang on furniture, including Drawers or Cabinet Doors

In addition to installing the restraints, to help prevent Tip-over.


1. Never put a TV or other heavy objects on top of this product.
2. Do not stand on this furniture.



Assembly Instructions

Caution : You must read this before you proceed

Bed Side

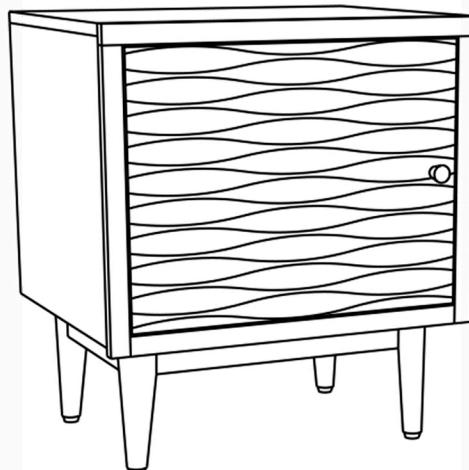


Parts List

Label	Picture	Description	QTY
A	A line drawing of the top panel of the cabinet, showing the wavy pattern and a small circular knob.	Top	1
B1	A line drawing of a single cabinet leg with a pre-installed buffer at the bottom.	Leg (Pre-installed Buffer)	1
B2	A line drawing of a single cabinet leg with a pre-installed buffer at the bottom.	Leg (Pre-installed Buffer)	1
B3	A line drawing of a single cabinet leg with a pre-installed buffer at the bottom.	Leg (Pre-installed Buffer)	1
B4	A line drawing of a single cabinet leg with a pre-installed buffer at the bottom.	Leg (Pre-installed Buffer)	1
C	A line drawing of a circular knob.	Knob	1

Hardware

Label	Picture	Description	QTY
①	A line drawing of an Allen bolt with a hexagonal head and a threaded shank.	Allen Bolt (6x35 mm)	9
②	A line drawing of a plain metal washer.	Washer (25 mm)	11
③	A line drawing of an Allen wrench (hex key).	Allen Wrench	1
④	A line drawing of a Phillips screwdriver.	Screwdriver (not provided)	1
⑤	A line drawing of a claw hammer.	Hammer (not provided)	1
⑥	A line drawing of a power drill with a chuck and a bit.	Power Drill (not provided)	1
⑦	A line drawing of two L-shaped metal brackets used for wall mounting.	Metal Brackets	2
⑧	A line drawing of a screw with a threaded shank and a flat head, designed for wall plugs.	Wall Plug Screw (M4x30 mm)	3
⑨	A line drawing of a threaded wall plug used for drywall.	Wall Plug (6x30 mm)	3
⑩	A line drawing of a screw with a flat head and a slotted slot.	Product Screw (M4x20 mm)	3

Assembly Preparation

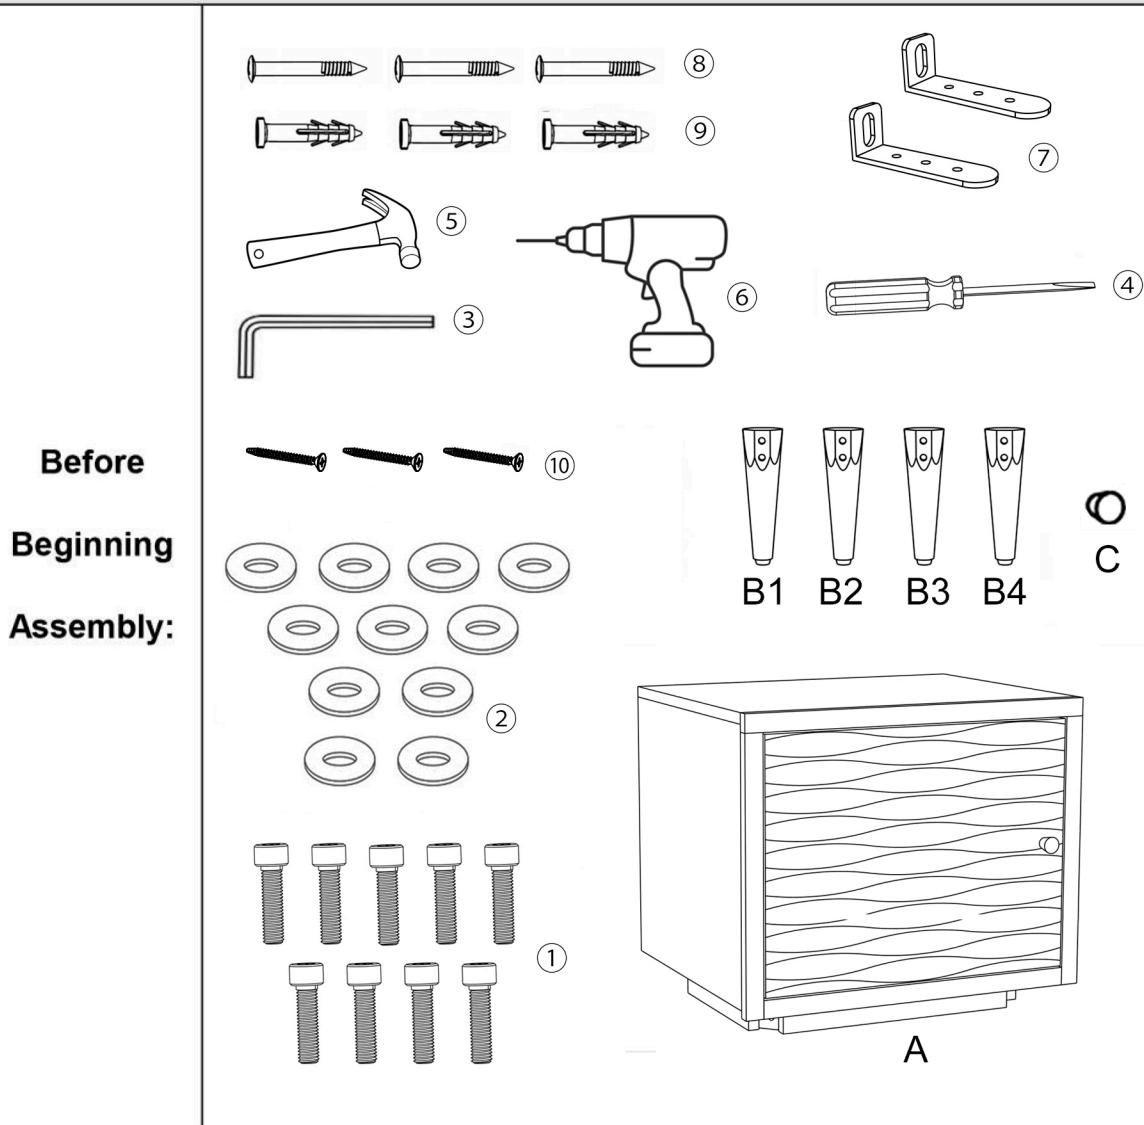

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

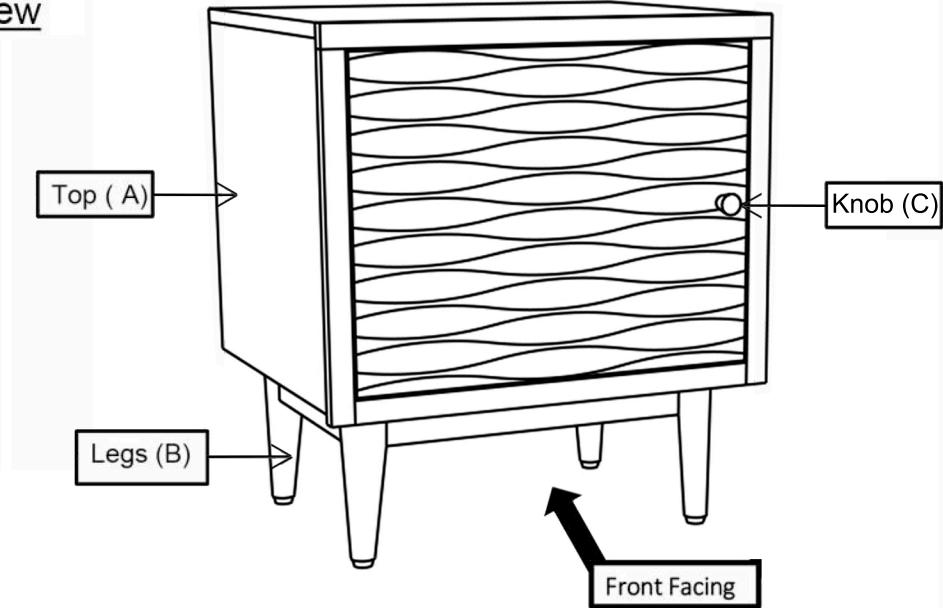

This Bedside has multiple parts and may require up to some 30 minutes to assemble. To give you an overview of the Bedside parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


Step 1

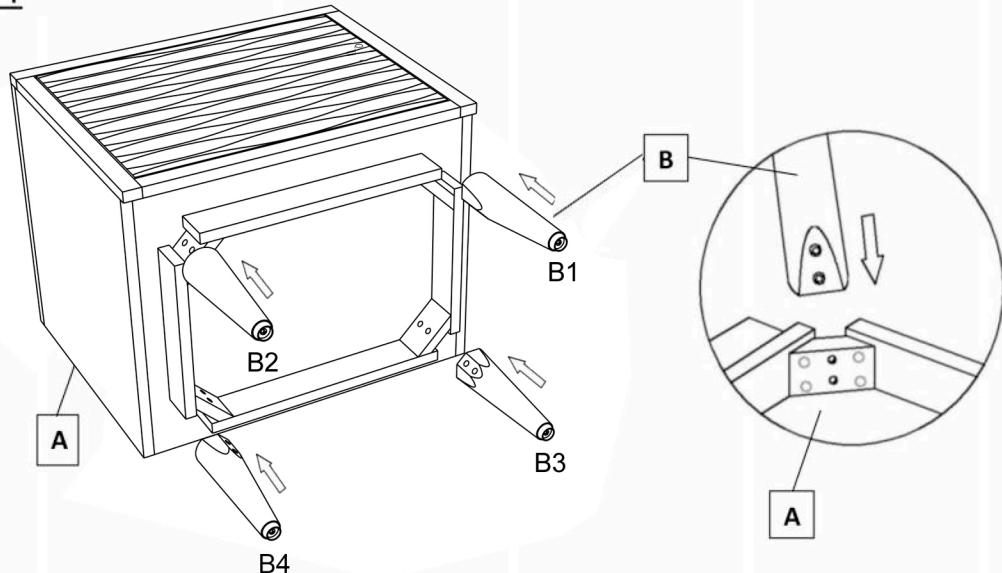

With assistance from your adult partner, place the Bedside Top (A) face down as picture, on clean non-marring surface.

As shown in "Step 1" picture affix the Leg (B1,B2,B3 & B4) into the Top (A).


Step 2


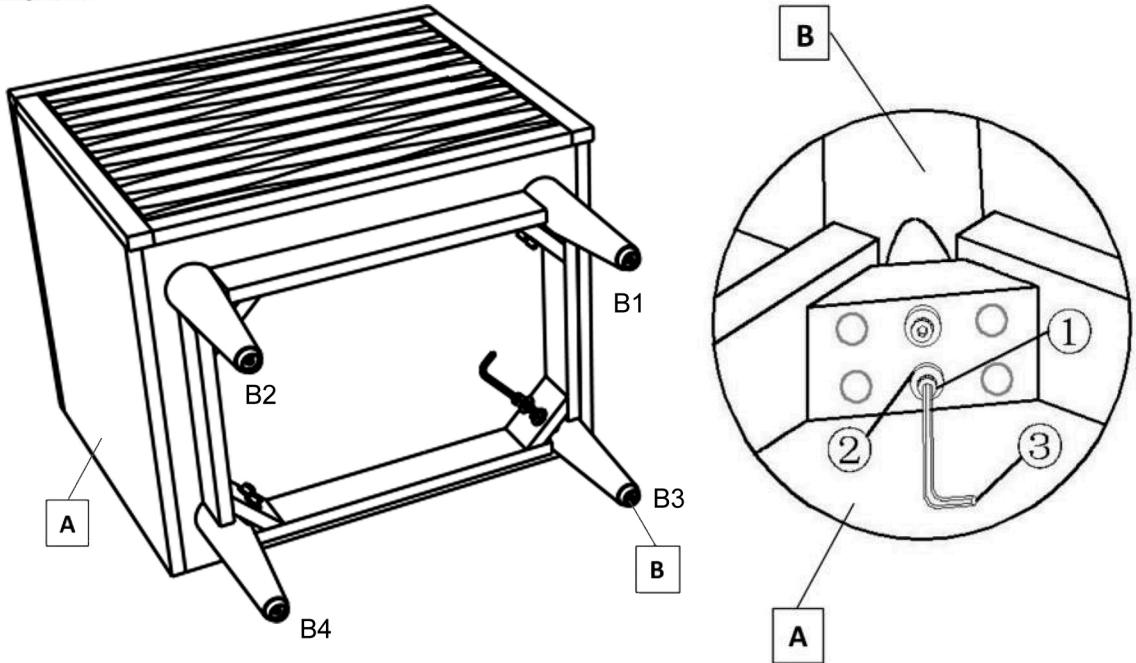


As shown in "Step 2" picture attach the Leg (B1,B2,B3 & B4) into the Top (A) by using Allen Bolt (①), Washer (②) and Allen Wrench (③).

DO NOT FULLY TIGHTEN THE BOLTS.

Step 3

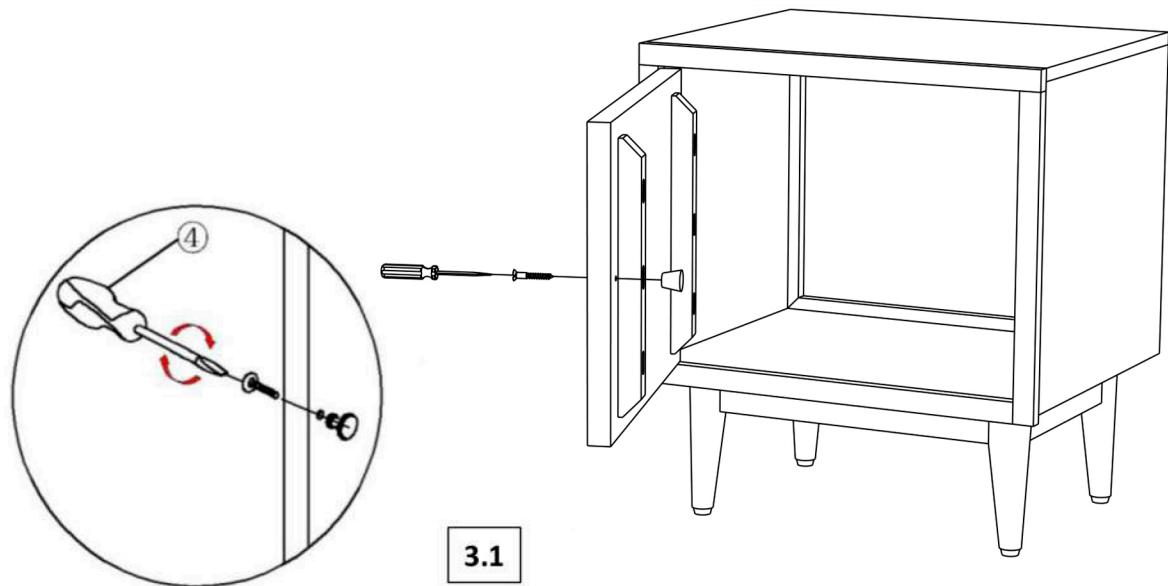

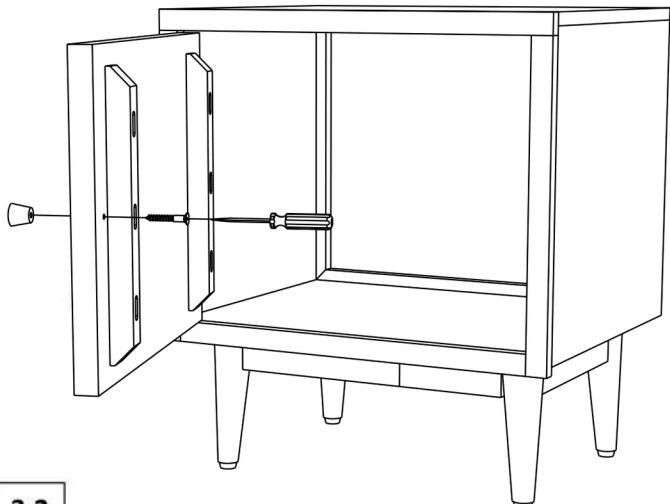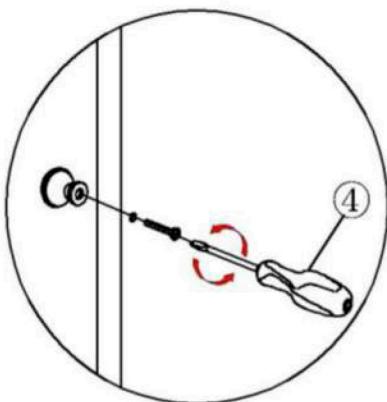


3.2

With help of your adult partner, carefully stand the Bedside.

- 3.1) Open the Door and de-attach the knob (C) which is attached inside the Door in Anti-clockwise using Screwdriver (4).
- 3.2) Install the knob(C) with the help of Screwdriver (4) clockwise as picture above.

Step 4

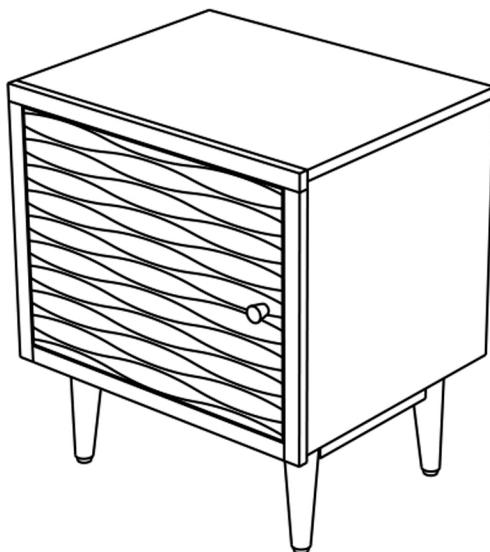

Check the product if stable and not wobbling. Once done, tighten all the legs to secure the Bedside.


This Bedside is now ready to use.

Caution: This Bedside can only be used on flat, level surface.

Tipover Restraint Device Installation Instructions





Serious or fatal crushing injuries can occur from tipping furniture.
To help prevent tip-over: ALWAYS secure this furniture to the wall using
Tipover Restraint Device.
See product instructions for more ways to help prevent furniture tip-over.

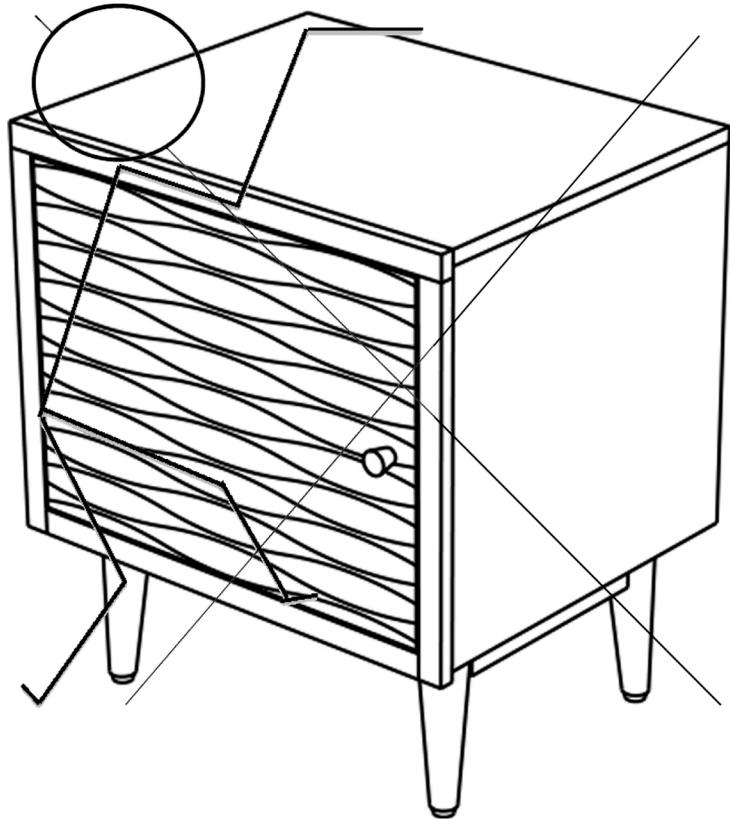

Usage For Tipover Restraint Device:

To secure Bedside against attach two Metal Brackets (⑦) on wall.

Step 5

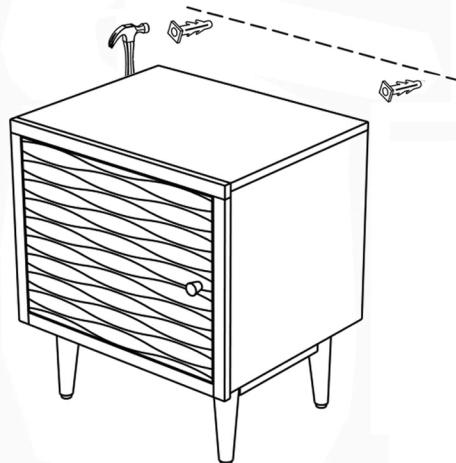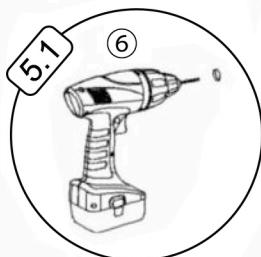

5.1) Drill two holes on wall at 5 cm below from the height of Bedside as Metal Brackets (7) on Bedside with Power Drill (6).

You can mark these points in two ways as below:



1) Move the Bedside back to the wall. Mark two points same width as Cabinet on the wall.

Note: The Metal Brackets need to be secured to solid, Load bearing surface. Please use a stud finder (not supplied) if needed to locate the wall frame.

2) Measure the Height of Metal Brackets (7) with ruler/measuring tape and mark on wall to keep them accurate and same height and width of the Bedside.


5.2) Insert Wall Plugs (9) into drilled holes on wall with Hammer (5).

Step 6

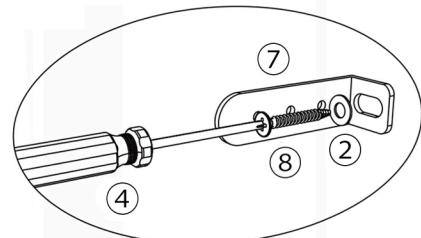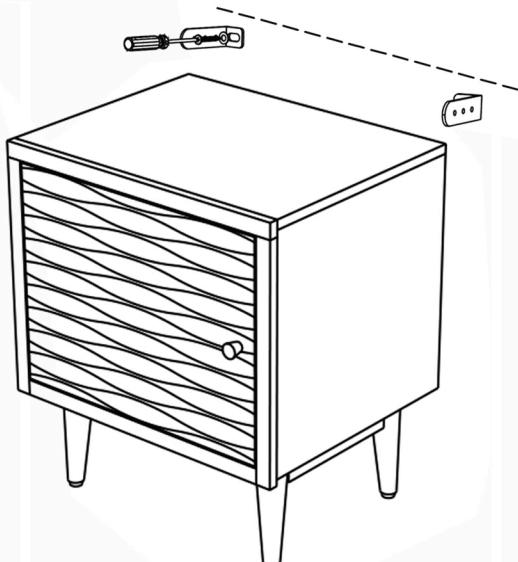

Attach Metal Brackets (7) to Wall Plugs (9) using Wall Plug Screws (8) and Washer (2) with Screwdriver (4).

Step 7

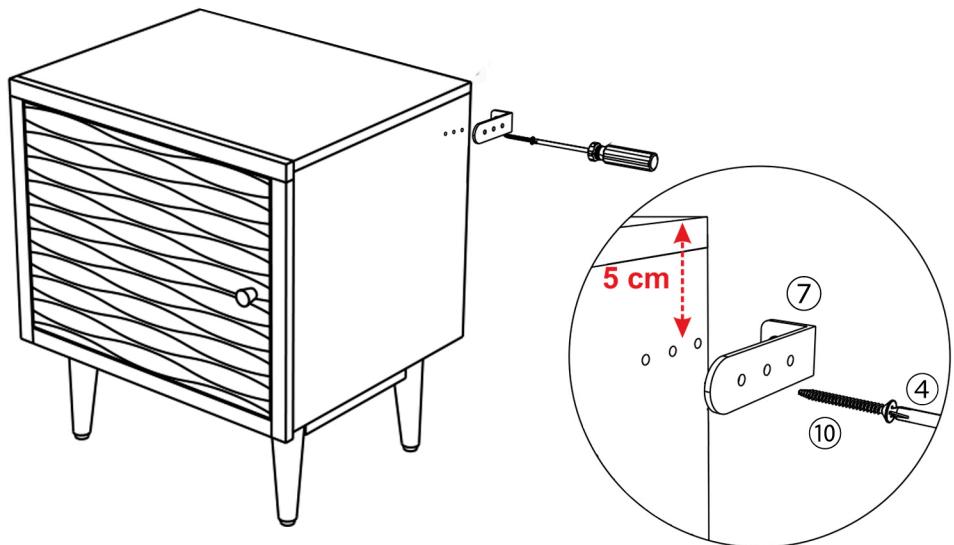

Move Bedside to the wall, Customer can choose one of 3 hole for assembly same as other side.

Connects the Metal Brackets (7) to Cabinet with help of Product Screw (10) and Screwdriver (4) same as other side.

This Bedside is now ready to use.

Caution: This Cabinet can be used on flat, level surface.

Care & Maintenance

- ✓  
 - Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- 🚫  
 - Do not put hot items directly on furniture surface.
- 🚫  
 - Do not clean furniture with harsh cleansers or polish.
- 🚫  
 - Do not place furniture under direct sunlight.
- 🚫  
 - Do not place furniture near heating or cooling vents.
- 🚫  
 - Do not write on furniture without a padded barrier to protect the surface.
- 🚫  
 - Do not place furniture outside . For indoor use only.
- 🚫  
 - Not for commercial use. For residential use only.
- 🚫  
 - Stains may be removed with mild soap solution and damp cloth.
- 🚫  
 - Children should not climb or jump on the furniture.
- ✓  
 - Dust and pick-up spills using a clean, non-colored, lint-free cloth.