












Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance

-  Not for commercial use. For residential use only.
-  Furniture may scratch floors. We recommend using furniture pads to protect your floors.
-  Do not put hot items directly on furniture surface.
-  Do not clean furniture with harsh cleansers or polish.
-  Do not place furniture under direct sunlight.
-  Do not place furniture near heating or cooling vents.
-  Do not write on furniture without a padded barrier to protect the surface.
-  Do not place furniture outside . For indoor use only.
-  Stains may be removed with mild soap solution and damp cloth.
-  Children should not climb or jump on the furniture.


-  Dust and pick-up spills using a clean, non-colored, lint-free cloth.











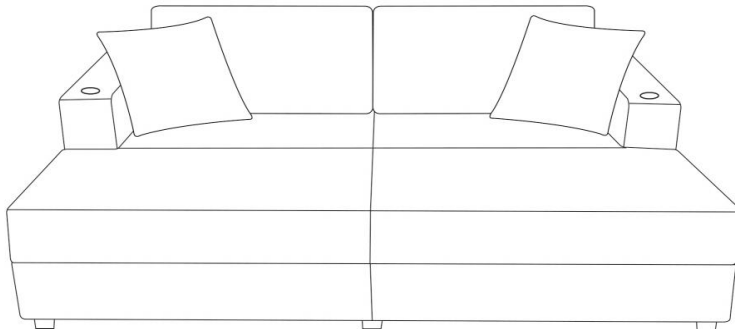







Please look in the magic tape pouch for hardware packs and legs.

Sets often ship in multiple boxes and may arrive a day or two apart.













SOFA

N719P329127 & N719P329128




Part List : N719P329127			
Label	Picture	Description	QTY
A		Backrest	1
D		Front Rail	2
E		Left Rail	1
F		Right Rail	1
G		Middle Leg Connecting Wooden Batten (Left)	1
H		Middle Leg Connecting Wooden Batten (Right)	1
I		Back Middle Leg Connecting Wooden Batten	1
J		Bed Slat	1
K		Seat Cushion Package	1
M		Pillow	1
Part List : N719P329128			
Label	Picture	Description	QTY
B		Left Armrest	1
C		Right Armrest	1
L		Back Cushion	2
M		Pillow	1
N		Middle Leg	1
O		Back Middle Leg	1
P		Leg	7
Q		Power Cord	1






Hardware List : N719P329128

Label	Picture	Description	QTY
①		Plastic Washer	8
②		Allen Wrench	1
③		Bolt (M8*60)	6
④		Bolt (M8*20)	14
⑤		Screw (M4*30)	30
⑥		Flat Washer	22
⑦		Spring Washer	20
⑧		Iron Connecting Plate	1
⑨		Iron Connecting Plate	2
⑩		Nut (M8)	2
⑪		Screwdriver	1
⑫		Spanner	1

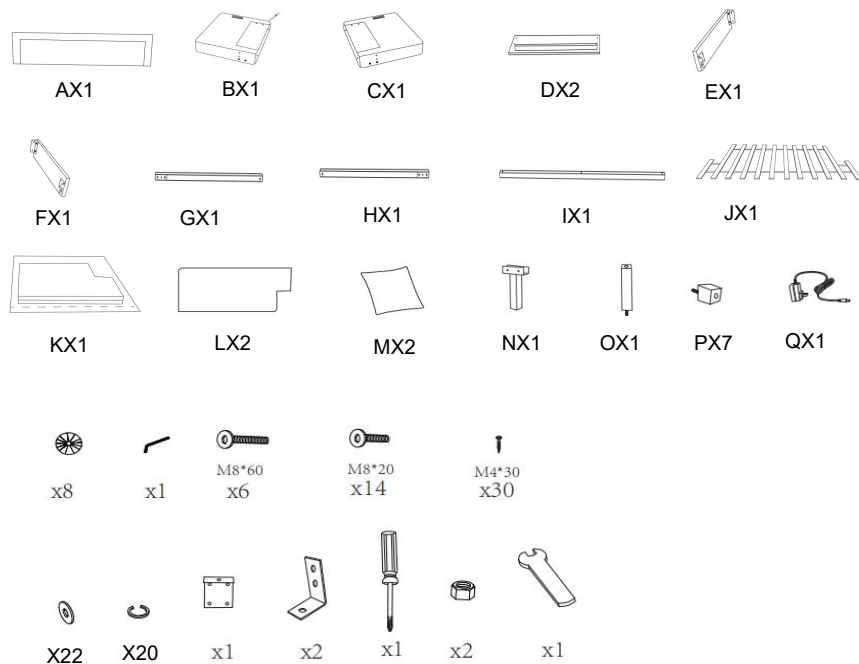Assembly Preparation


Before
Beginning
Assembly:



-  • Read instructions, cover to cover-
-  • Have 2 adults on hand for assembly-
-  • Do not assemble on flooring or carpet-
-  • Assemble on a clean non-marring surface (packing foam)-
-  • Save all packaging until finished-


Assembly Steps:

OVERVIEW

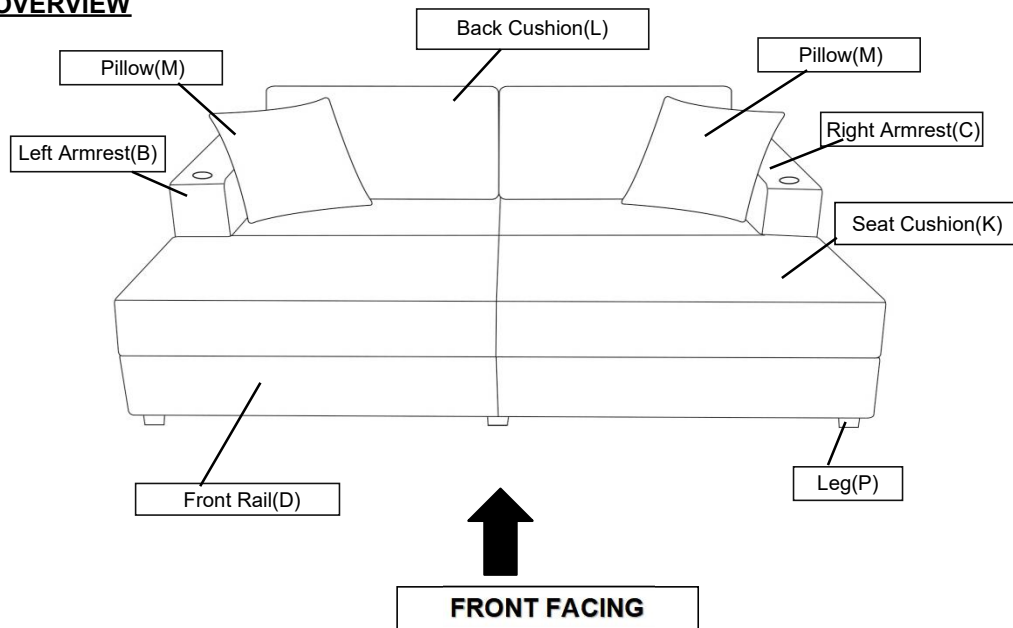


This Sofa has multiple parts and may require up to 60 minutes to assemble. To give you an overview of the Sofa parts, the above picture is to help you put the various Sofa parts into perspective. Please read through the instructions to familiarise yourself with the parts and steps before assembly.

Step 1

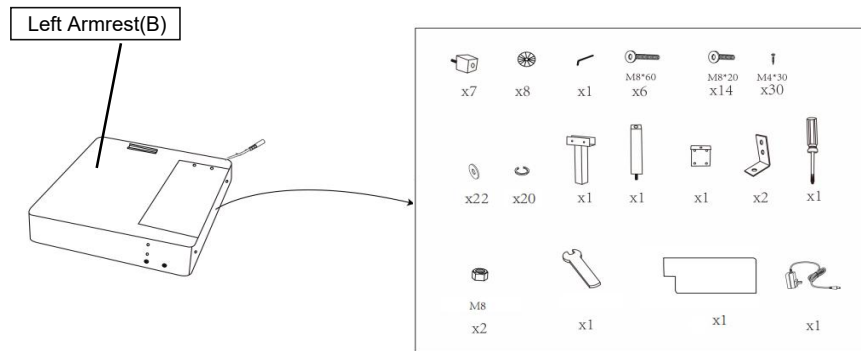


Remove the hardware and Legs and 1 pc Back Cushion(L) from the bottom of Left Armrest(B).

Step 2

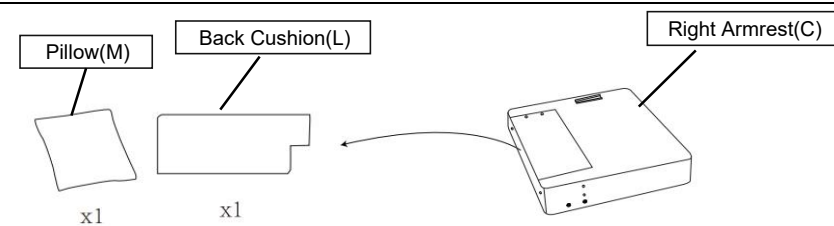


Remove 1 pc Back Cushion(L) and 1 pc Pillow from the bottom of Right Armrest(C).

Step 3

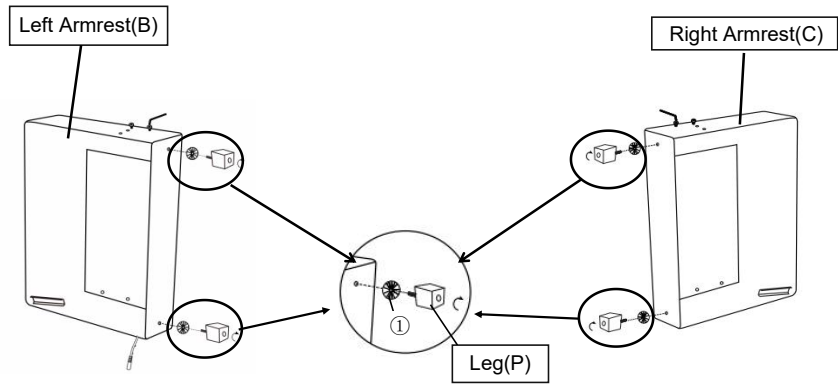


Install the Leg(P) at the bottom of Left Armrest(B) and Right Armrest(C) by placing Plastic Washer(1) on the threaded stem. Tighten by turning the Leg clockwise.

Step 4

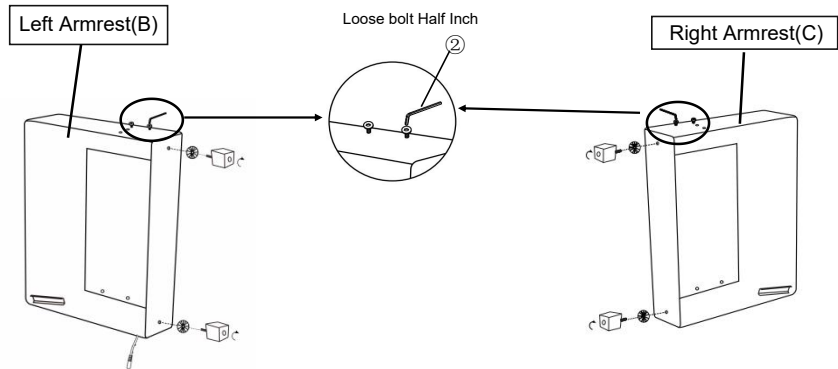


Loose the bolts around half Inch by Allen Wrench(2).

Step 5


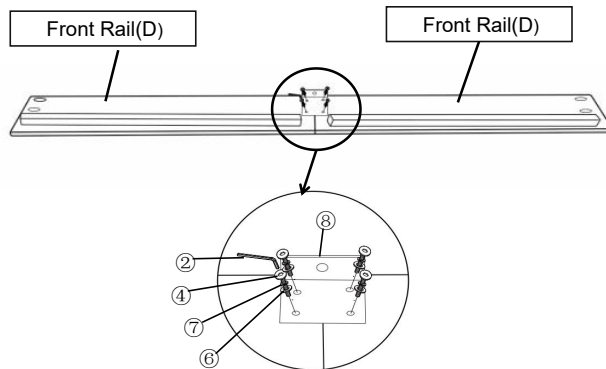



Connect 2 pcs Front Rails(D) by using Iron Connecting Plate(8) ,Bolts(4),Spring Washer(7),Flat Washer(6) with Allen Wrench(2) turning clockwise until tight.

Step 6

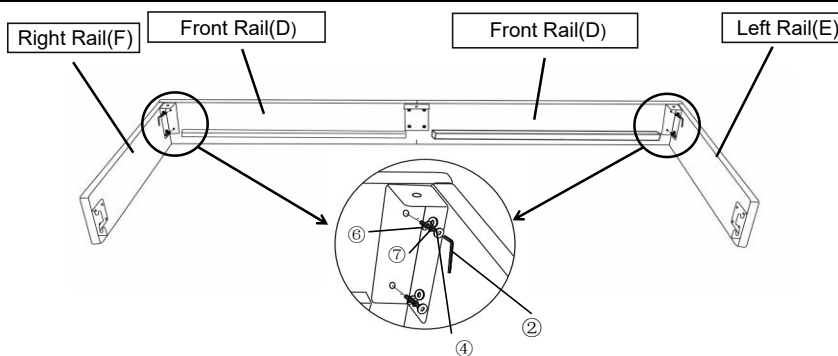

Attach the Left Rail(E) to the Front Rail(D),using Bolt(4) , Spring Washer(7),Flat Wsher(6) with Allen Wrench (2) turning clockwise until tight.
Repeat the same step with Right Rail(F).Tighten the Bolts fully in a sequential manner.

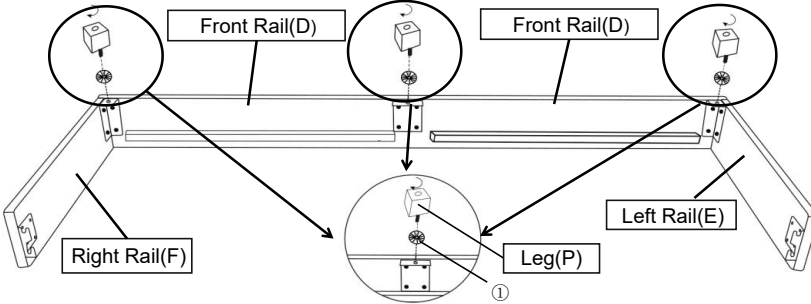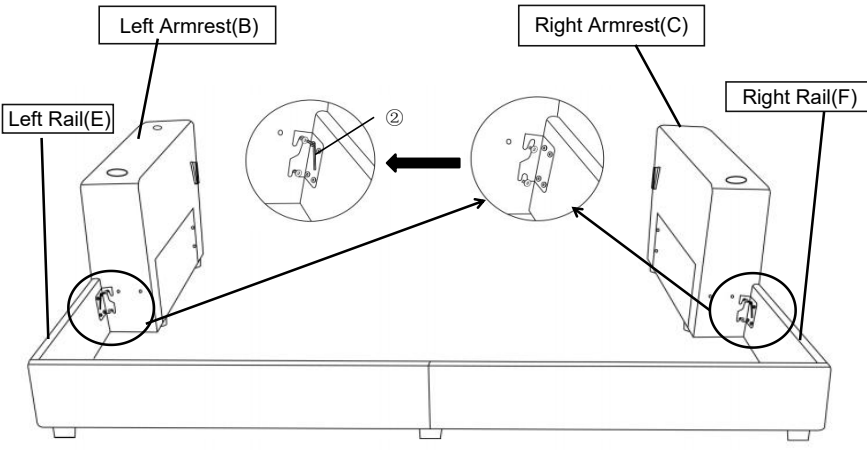
<p>Step 7</p>	
<p>Install the Leg(P) on Front Rail(D) and Right Rail(F) and Left Rail(E) by placing Plastic Washer(①) on the threaded stem. Tighten by turning the Leg clockwise.</p>	
<p>Step 8</p>	
<p>With the assistance of your adult partner, slide the hooks of Left Rail(E) and Right Rail(F) into the bolts of Left Armrest(B) and Right Armrest(C) and tighten the Bolts with Allen Wrench(②) as shown above.</p>	

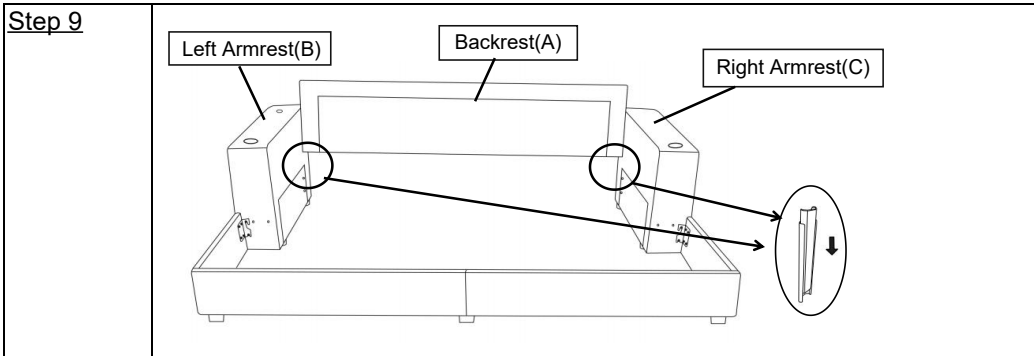


Slide the Tapered Connectors on the Backrest(A) into the Tapered Connectors on the Left Armrest(B) as shown in the picture. Repeat the same steps with the Right Armrest(C).

Note: Make sure the Tapered Connectors on Backrest(A) lock into the Tapered Connectors on the Left Armrest(B) and Right Armrest(C). Assistance from an adult partner is necessary for this assembly process. During this assembly process - do exercise caution. You may need to use your hand to press down or pave away the padded surface to facilitate the 'slip and slide' assembly.




Caution: Ensure that your fingers do not get caught or pinched in the assembly process.

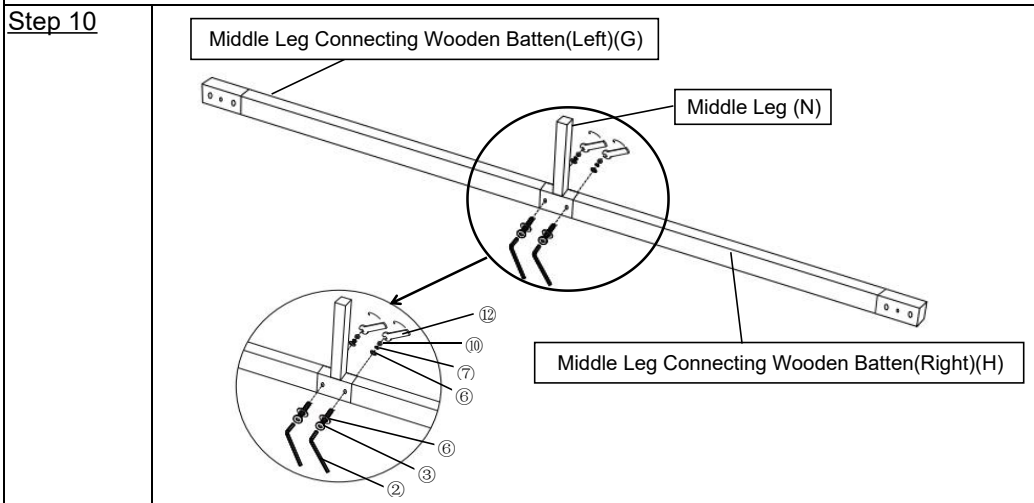


Assemble the Middle Leg(N) on two Middle Leg Connecting Wooden Batten(G) and Batten(H) by using Bolt(③), Flat Washer(⑥) and Allen Wrench(②), Nut(⑩), Spring Washer(⑦), Flat Washer(⑥), with Spanner(⑫) turning clockwise until tight.

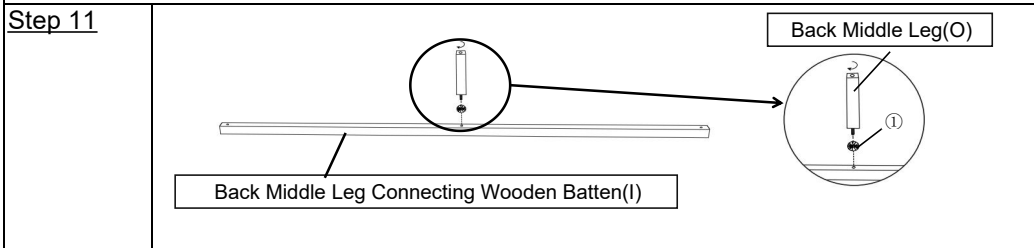

Install the Back Middle Leg(O) on Back Middle Leg Connecting Wooden Batten(I) by placing Plastic Washer (①) on the threaded stem. Tighten by turning the Leg clockwise.

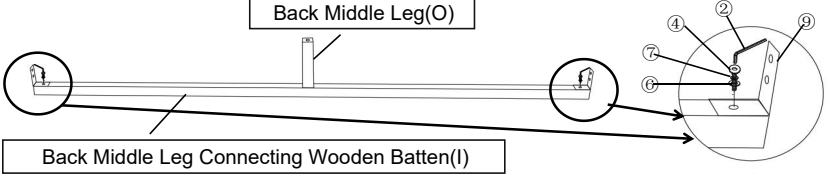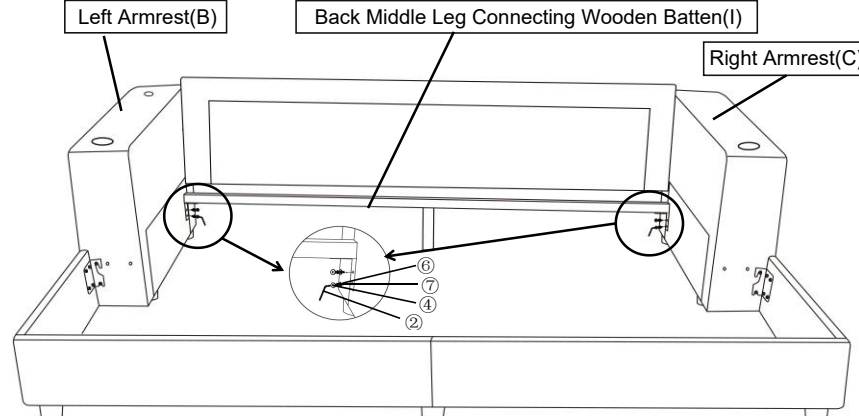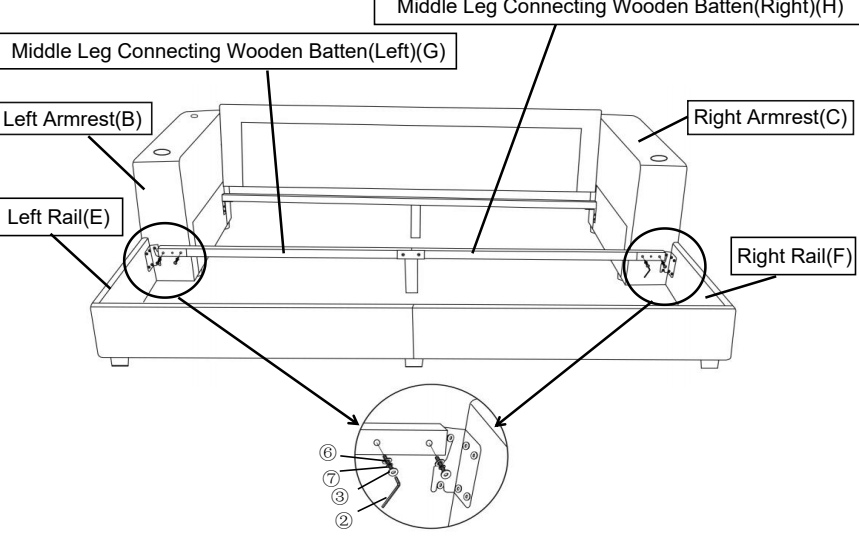
<p>Step 12</p>	
<p>Install the Iron Connecting plate(9) on two sides of Back Middle Leg Connecting Wooden Batten (I) by using Bolt(4), Spring Washer(7) ,Flat Washer(6) and Allen Wrench(2),turning clockwise until tight.</p>	
<p>Step 13</p>	
<p>Install the Back Middle Leg Connecting Wooden Batten (I) on the Left Armrest(B) and Right Armrest(C) by using Bolt(4), Spring Washer(7) ,Flat Washer(6) and Allen Wrench(2),turning clockwise until tight.</p>	
<p>Step 14</p>	
<p>Install the Middle Leg Connecting Wooden Batten(G) and(H) on the Left Rail(E) and Right Rail(F) by using Bolt (3), Spring Washer(7) ,Flat Washer(6) and Allen Wrench(2),turning clockwise until tight.</p>	

Step 15

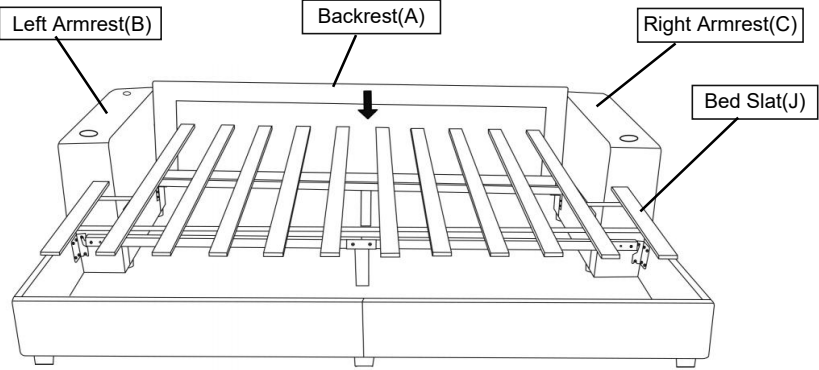


Put the Bed Slat(J) on the SOFA.

Step 16

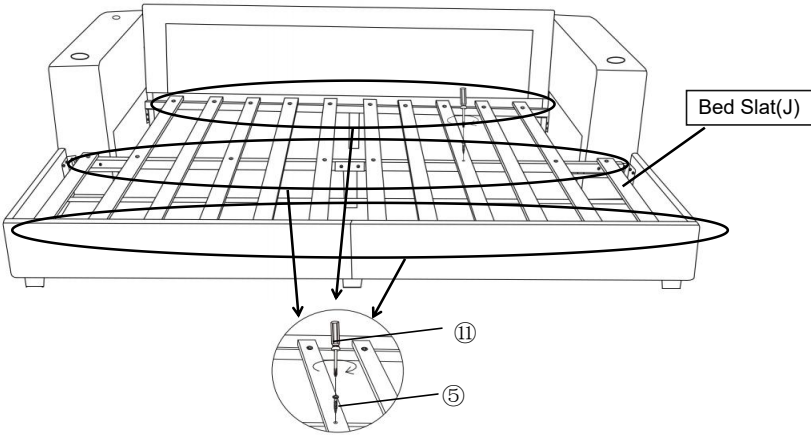


Use a screwdriver(⑪) to fix the screw(⑤) and the bed slat(J) to the slat.A total of 30 screws are needed.

Step 17

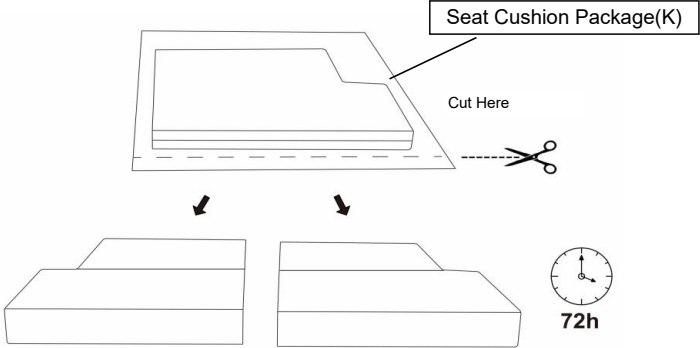


Cut the Seat Cushion Package(K) , then take out two Seat Cushions.Full decompression may take up to 72 hours.

Step 18

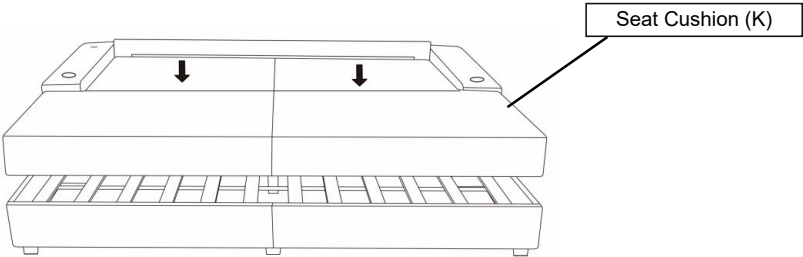


Put the Seat Cushion on the SOFA.

Step 19

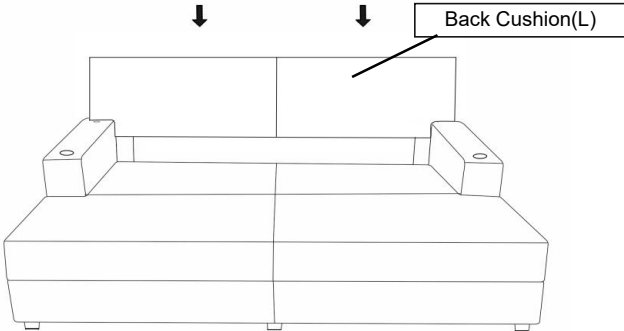


Put the Back Cushion(L) on the SOFA.

Step 20

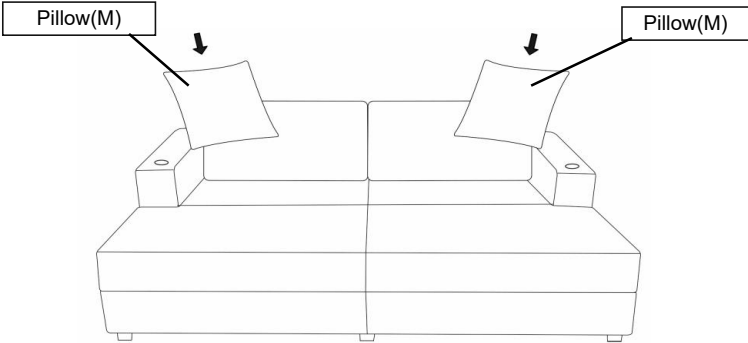


Put the Pillow(M) on the SOFA.

Step 21

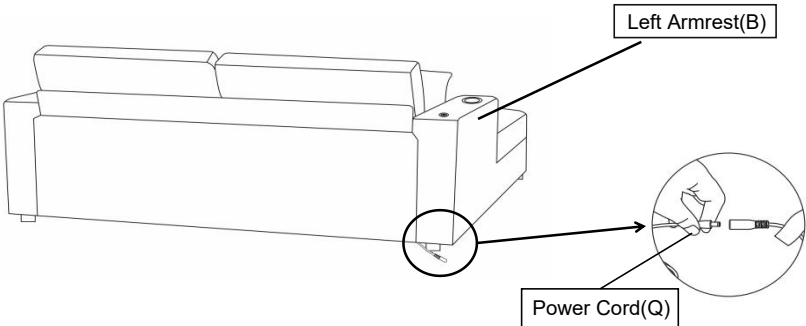

As shown in the picture, the power cord can be used normally.

Step 22

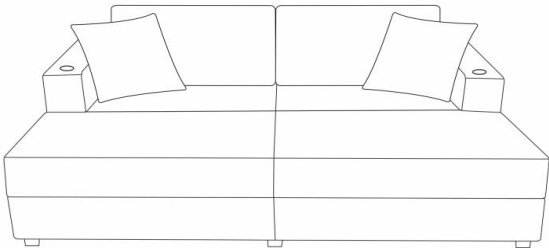

Your SOFA is ready to use.
This SOFA can only be used on a flat, level surface.