











Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance


	● Not for commercial use. For residential use only.
	● Do not put hot items directly on furniture surface.
	● Do not clean furniture with harsh cleansers or polish.
	● Do not place furniture under direct sunlight.
	● Do not place furniture near heating or cooling vents.
	● Do not write on furniture without a padded barrier to protect the surface.
	● Do not place furniture outside . For indoor use only.
	● Stains may be removed with mild soap solution and damp cloth.
	● Children should not climb or jump on the furniture.
	● Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in Corner of Carton for hardware packs .

Sets often ship in multiple boxes and may arrive a day or two apart.

ASSEMBLY INSTRUCTION
ITEM NO. N780P330603


SIDEBOARD

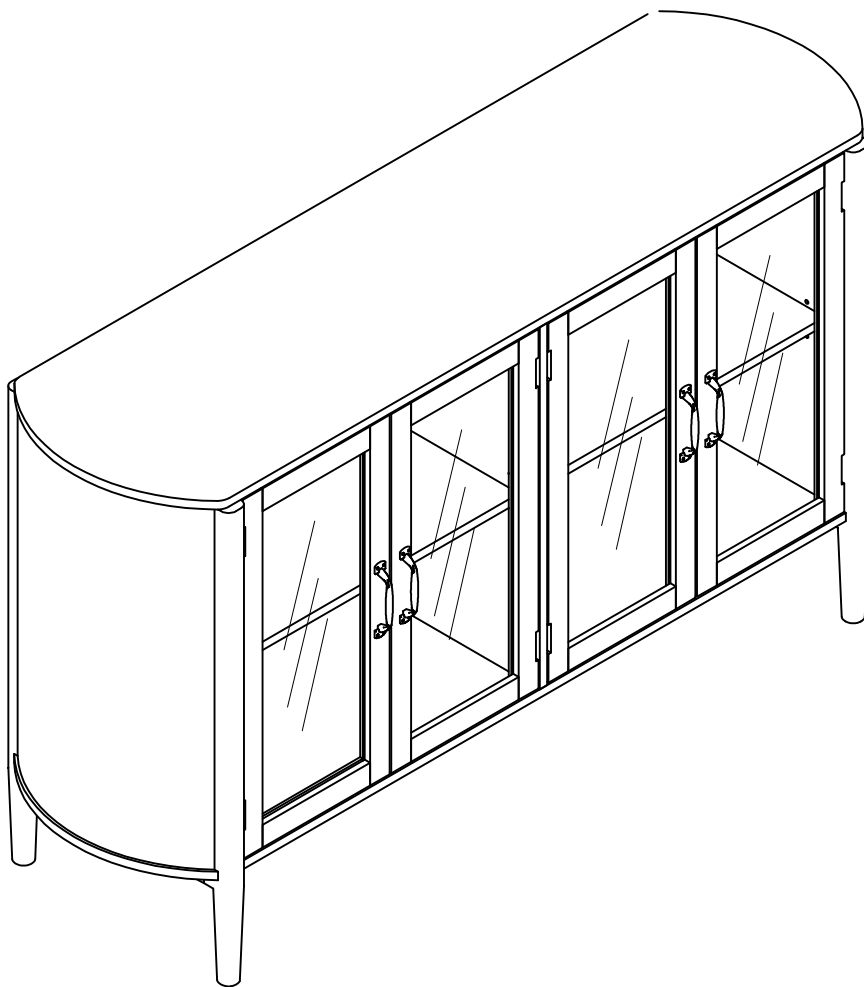

2 - People






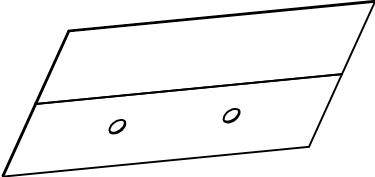

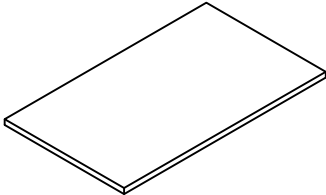
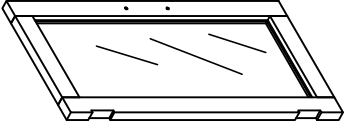
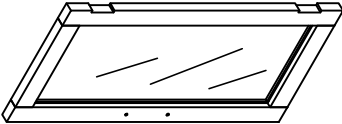
ASSEMBLY INSTRUCTION

ITEM NO. N780P330603

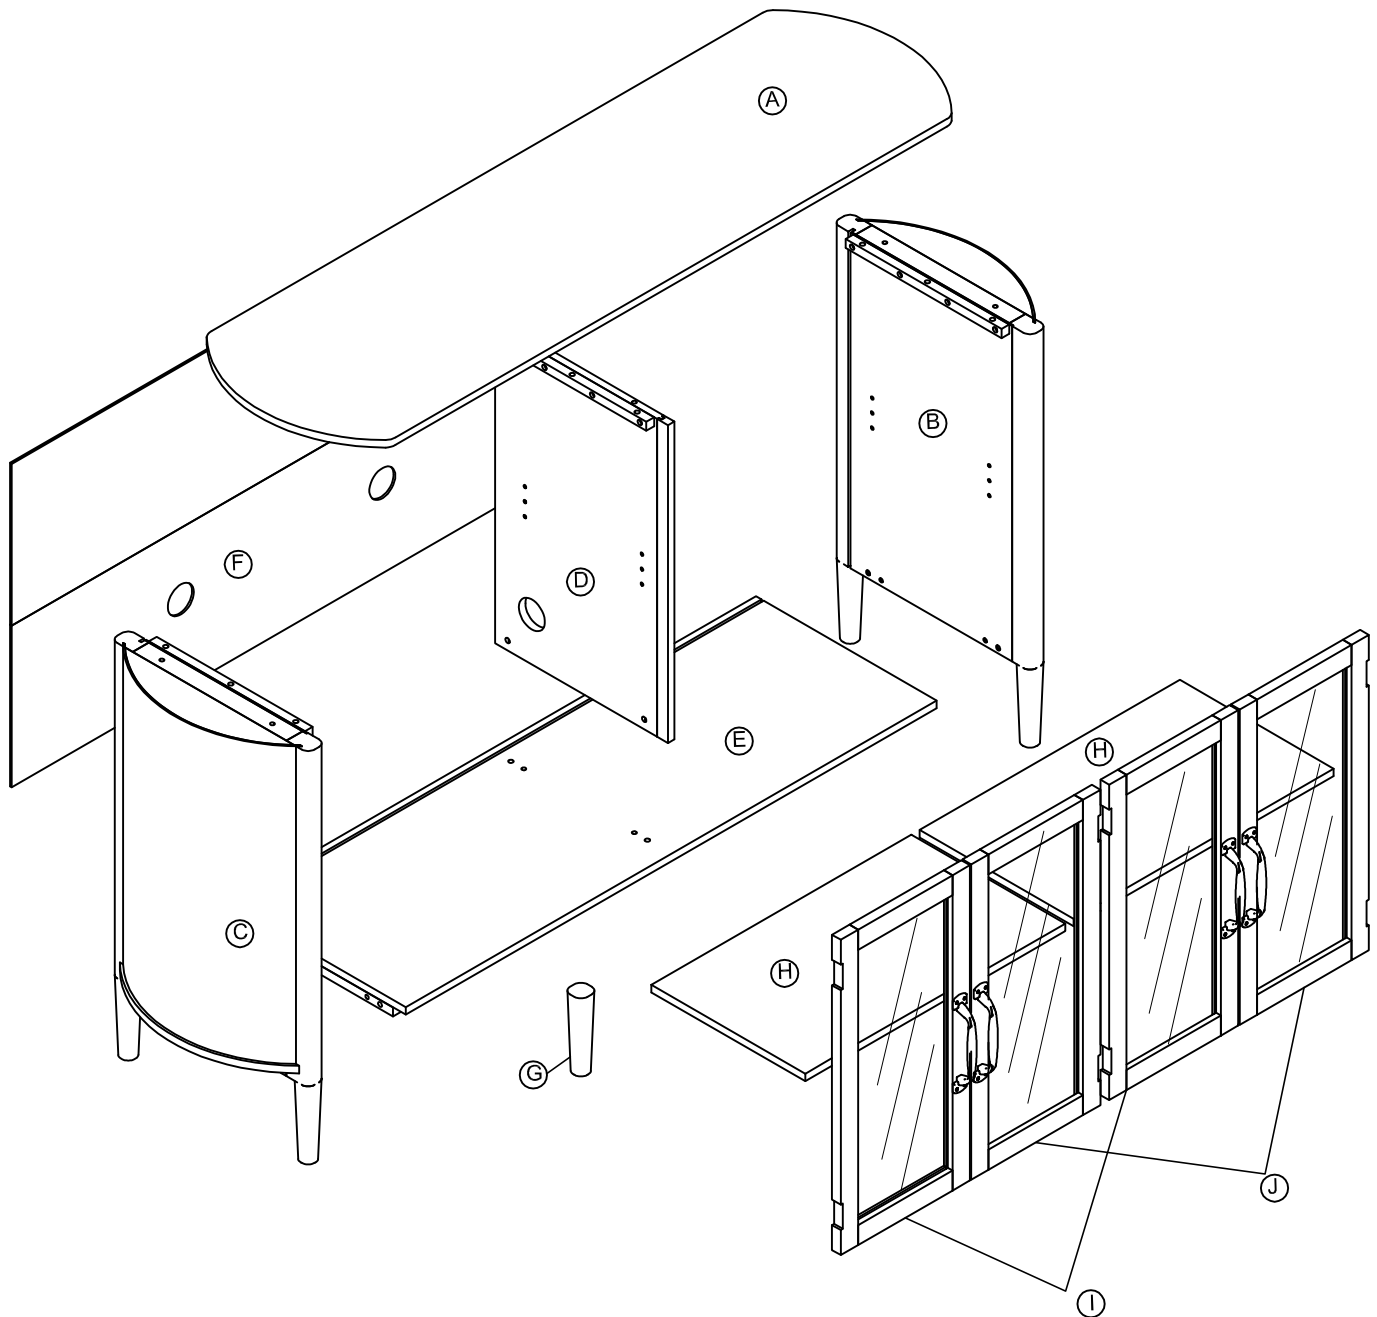

ASSEMBLY INSTRUCTION
ITEM NO. N780P330603








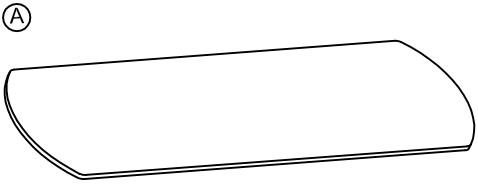
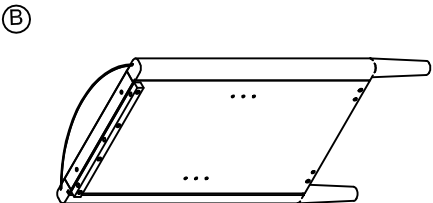
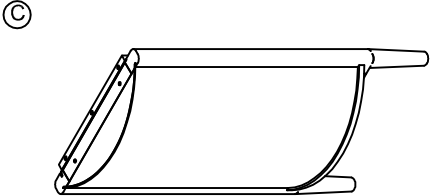



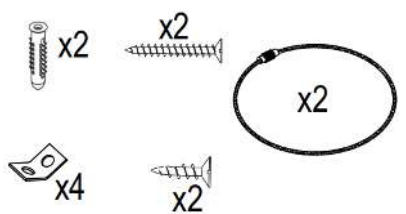
Pack List

		
Table Top =1pc	Right Side=1pc	Left Side=1pc
		
Middle=1pc	Bottom=1pc	Back =1pc
		
Support Leg =1pc	Shelf =2pcs	Left Doors =2pcs
		
Right Doors =2pcs		

ASSEMBLY INSTRUCTION

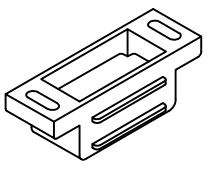ITEM NO. N780P330603

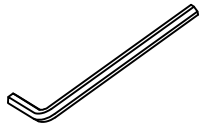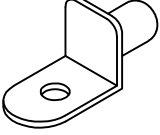
Pack List

① 	② 	③ 
Magnetic Door Catch =4PCS +Extra 1pc	Mushroom screw M3 x 15=12pcs +Extra 2pcs	Wooden Dowel Ø8 x 30mm =12pcs +Extra 1pc
④ 	⑤ 	⑥ 
Short Bulong 1/4" x 25mm= 13pcs +Extra 1pc	Long Bulong 1/4" x 38mm = 2pcs +Extra 1pc	T Nut 10 x 12 =2pcs +Extra 1pc
⑦ 	⑧ 	⑨ 
Spring Washer =15pcs +Extra 1pc	Flat Washer =15pcs +Extra 1pc	Allen Key K4 x 80 =1pc +Extra 1pc
⑩ 	⑪ 	⑫ 
Support Shelf =8PCS +Extra 1pc	Bolt of Handle M4 x 25 =8pcs +Extra 1pc	Handle 20 x 22 x 130mm =4pcs
⑬ 		
Leverler =4pcs +Extra 1pc		
⑮ 		
ANTITIP KIT =2SETS		


Assembly Preparation Before Beginning Assembly:




A x 1

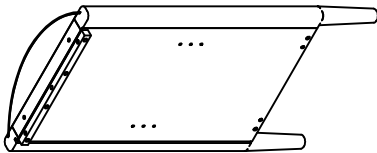


B x 1

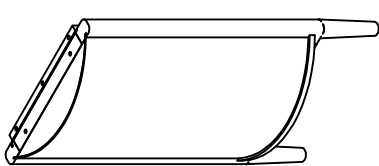


C x 1

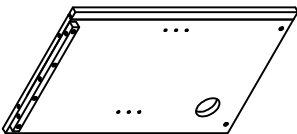

D x 1

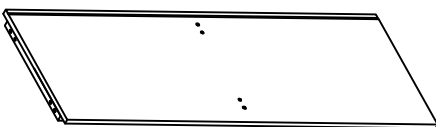


E x 1

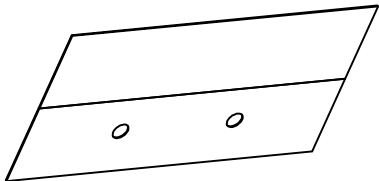


F x 1




G x 1

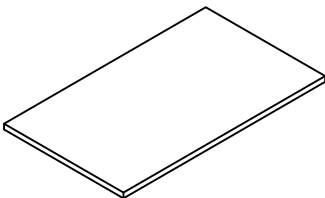








H x 2

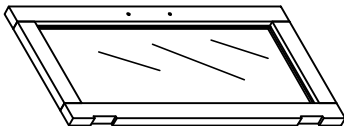

I x 2

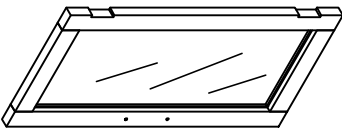

J x 2

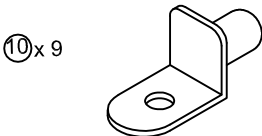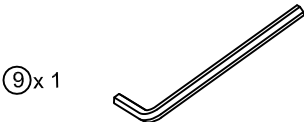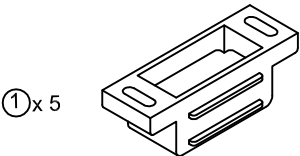

⑭ x 2



Assembly Preparation

Before Beginning Assembly:



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-

Assembly Steps

Overview

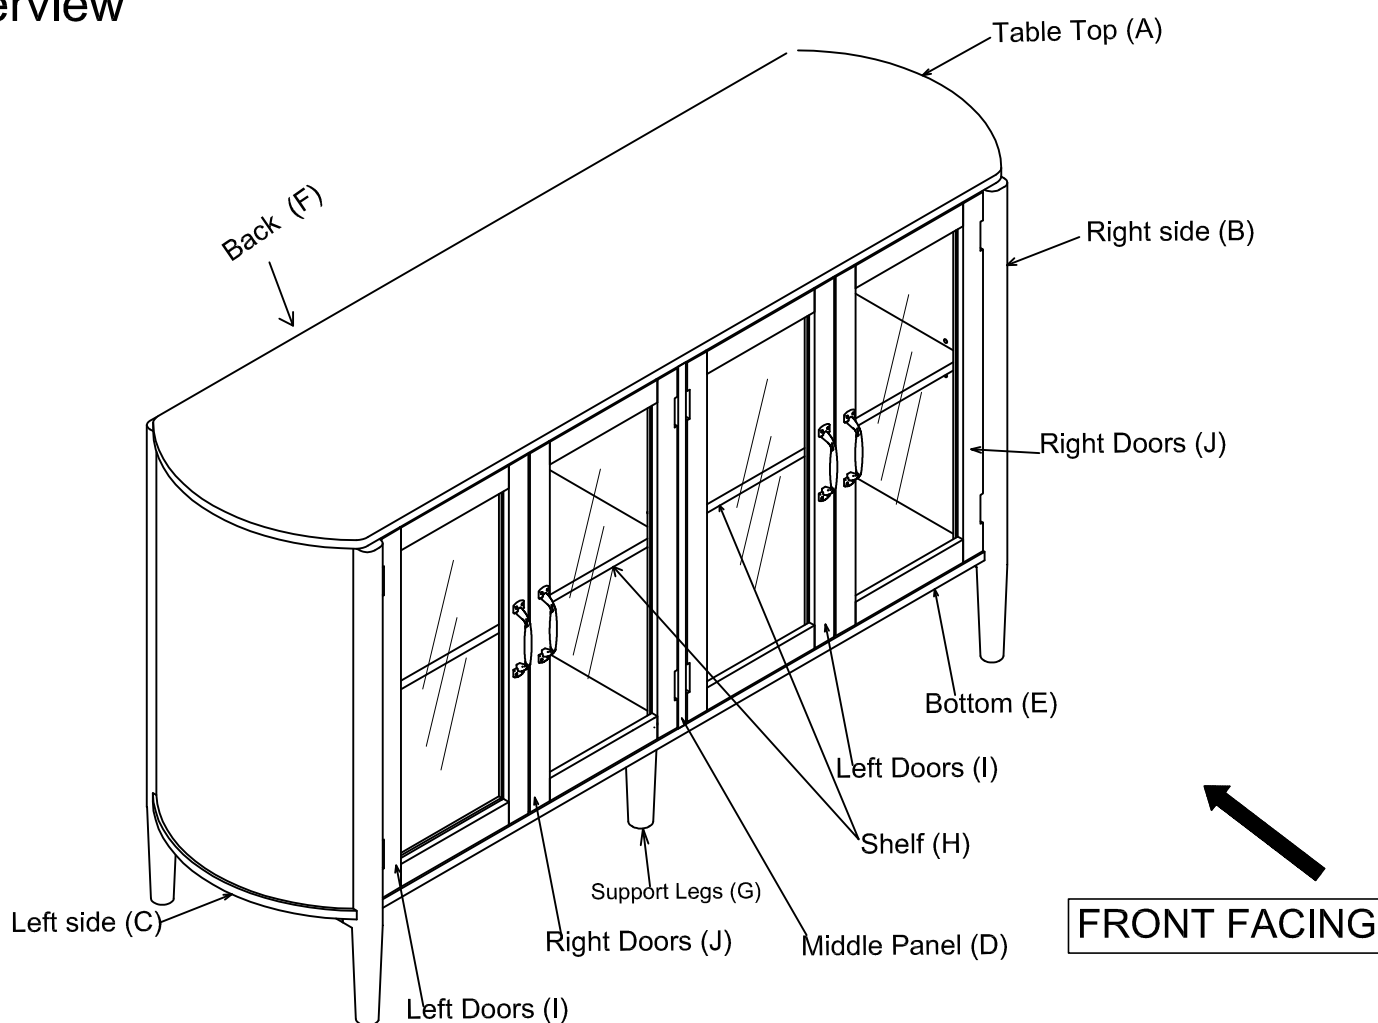


This Sideboard has multiple parts and may require up to some 35 minutes to assemble. To give you an overview of the Sideboard parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

ASSEMBLY INSTRUCTION


ITEM NO. N780P330603

Step 1:

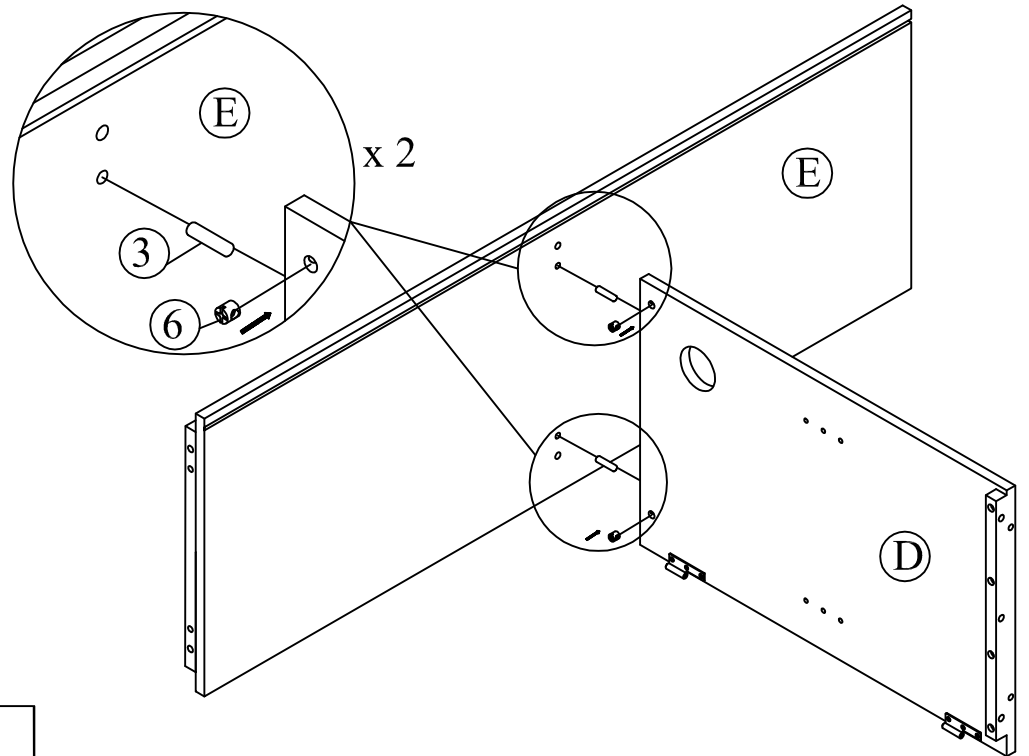

Wooden Dowel Ø 8 x 30mm	T Nut 10 x 12
(3) x 2	(6) x 2

Step 2

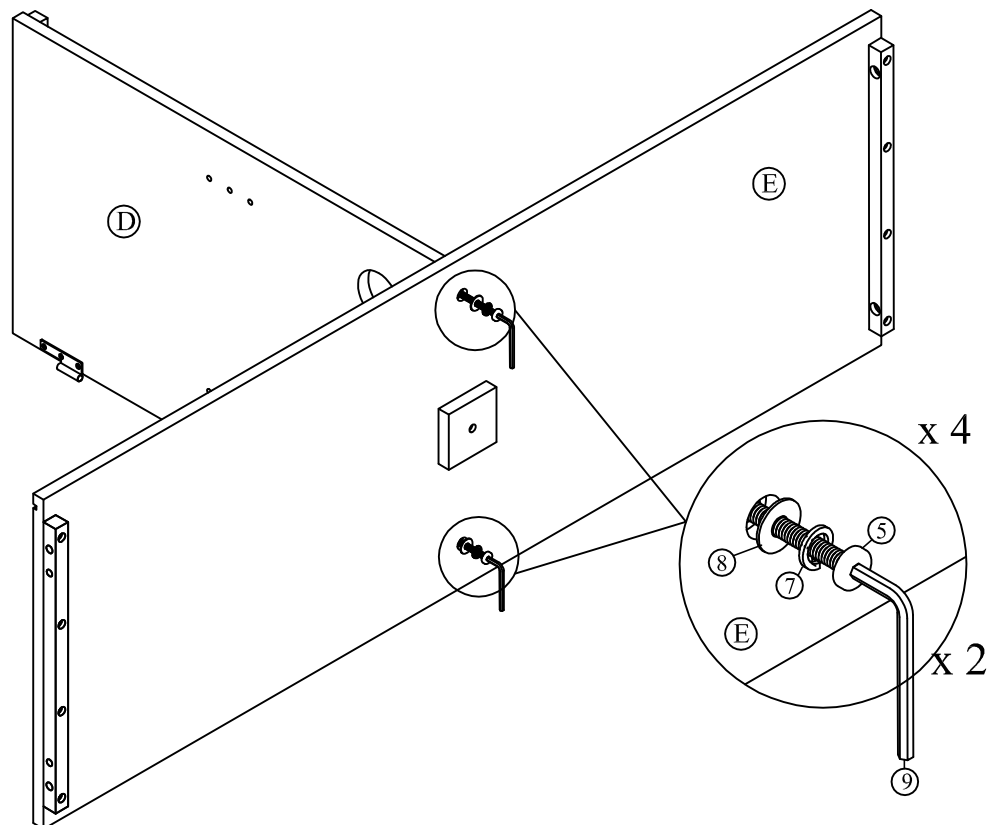



Long Bolt 1/4" x 38	Spring washer Ø10 x Ø6	Flat Washer Ø12 x Ø6	Allen Key K4 x 80
(5) x 2	(7) x 2	(8) x 2	(9) x 1

ASSEMBLY INSTRUCTION


ITEM NO. N780P330603



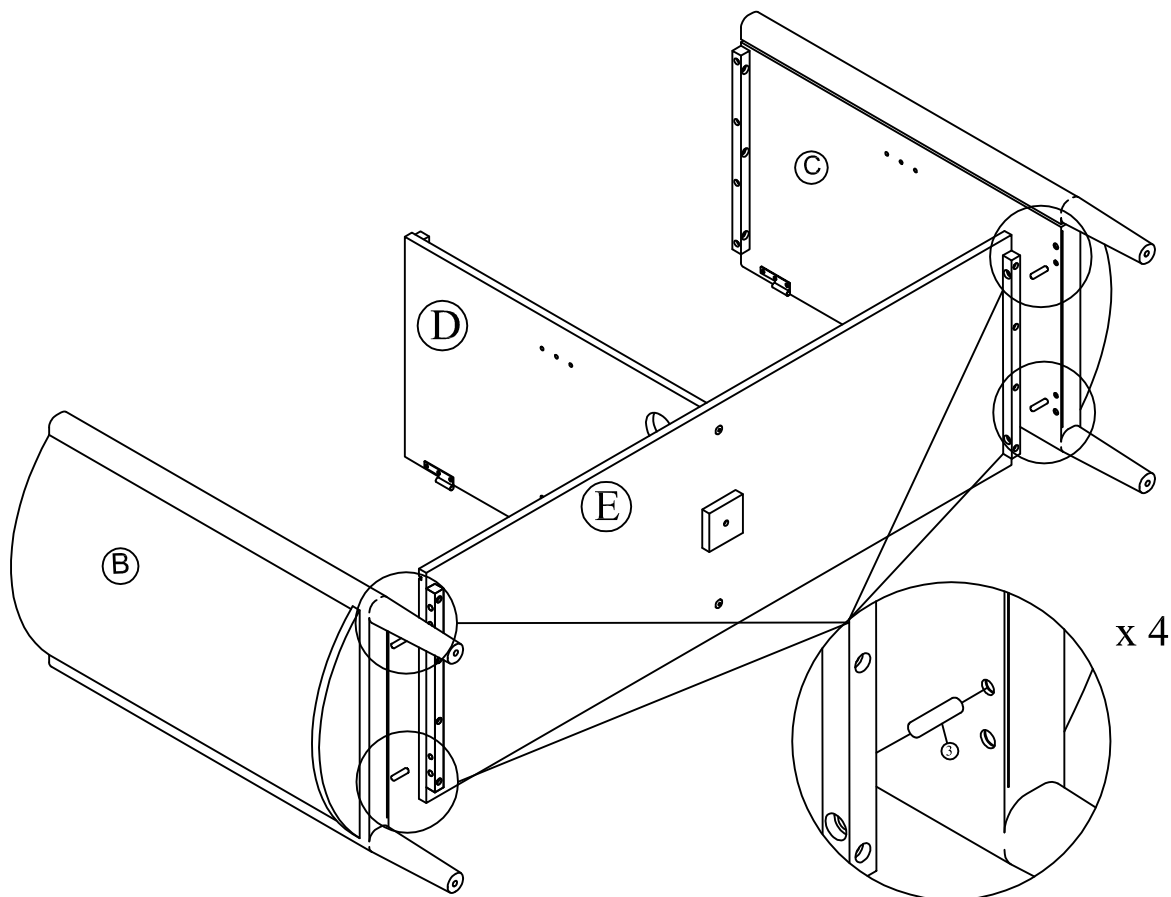

Step 3:

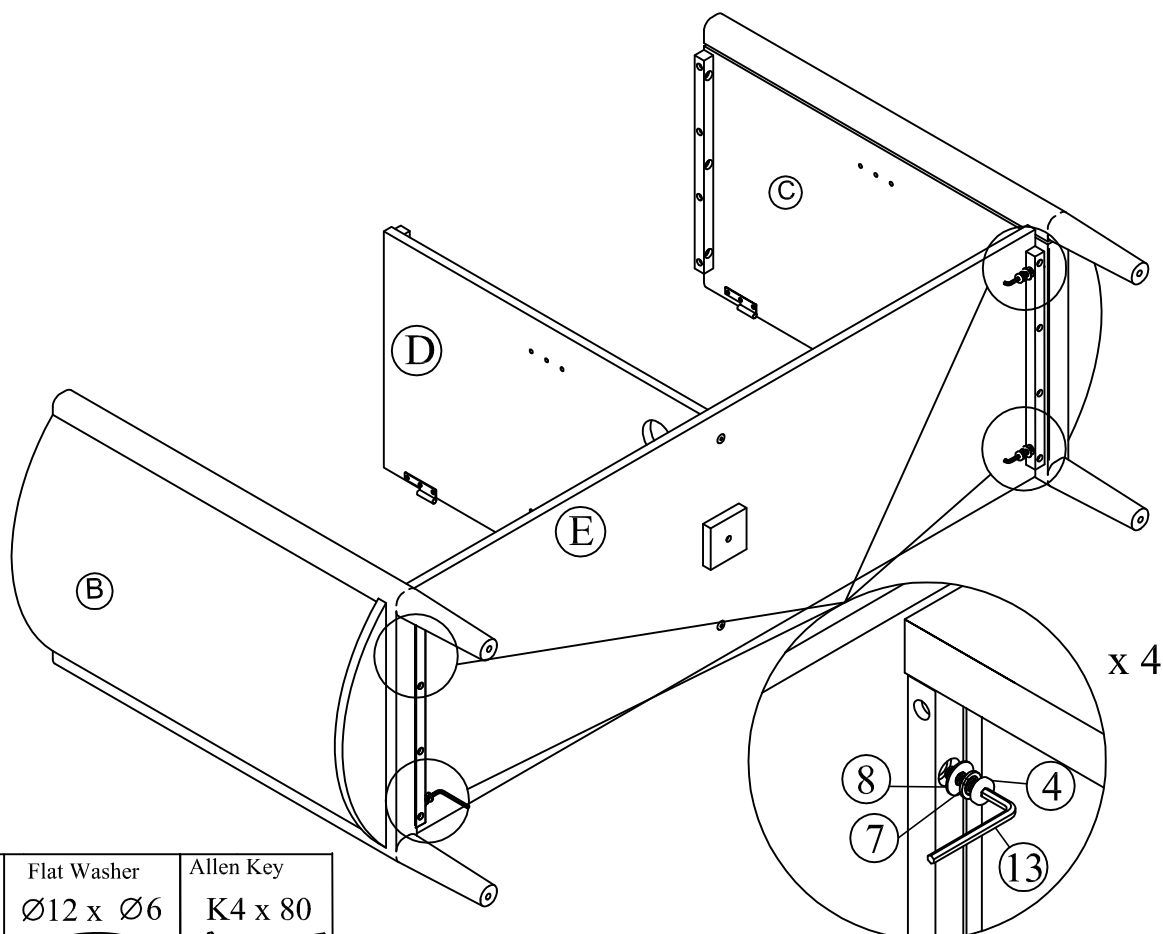

Wooden Dowel
Ø 8 x 30mm

③ x 4

Step 4




Short Bolt	Spring washer	Flat Washer	Allen Key
1/4" x 25	Ø10 x Ø6	Ø12 x Ø6	K4 x 80
			
④ x 4	⑦ x 4	⑧ x 4	⑨ x 1


ASSEMBLY INSTRUCTION

ITEM NO. N780P330603

Step 5:

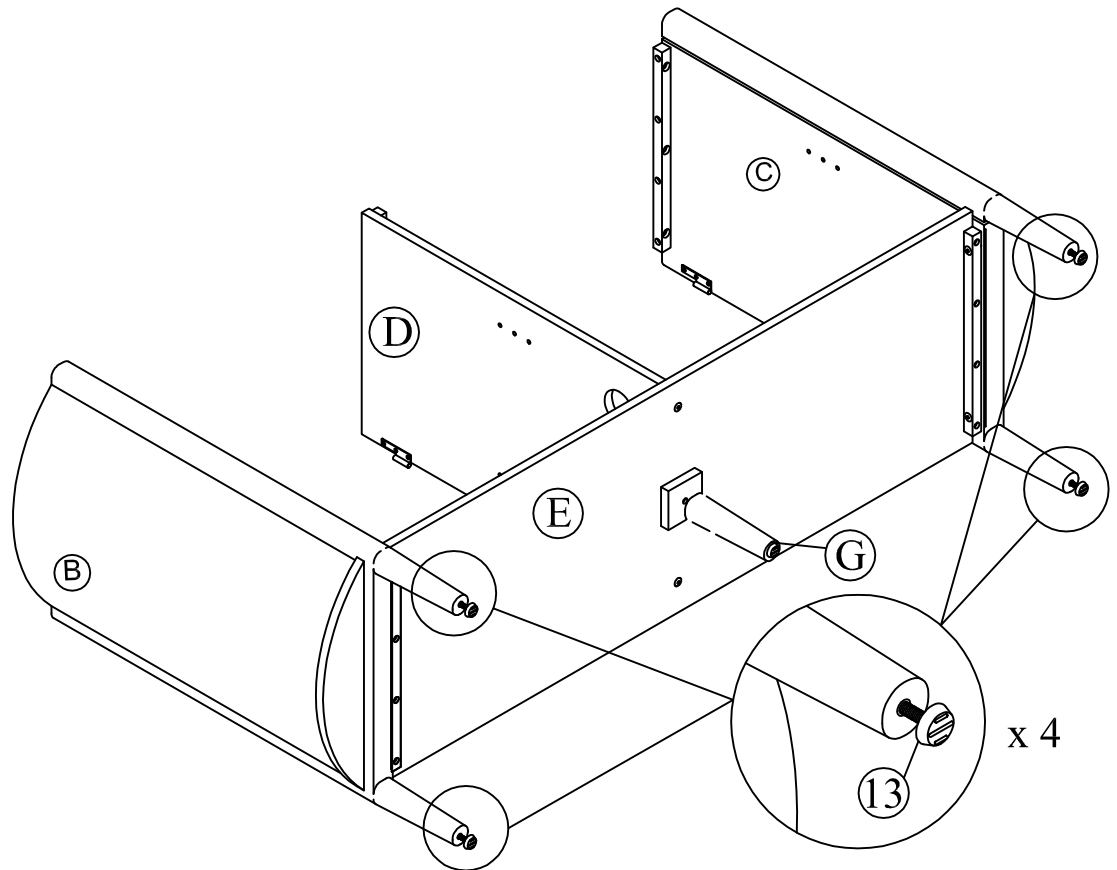


Leverler



(13) x 4


Step 6

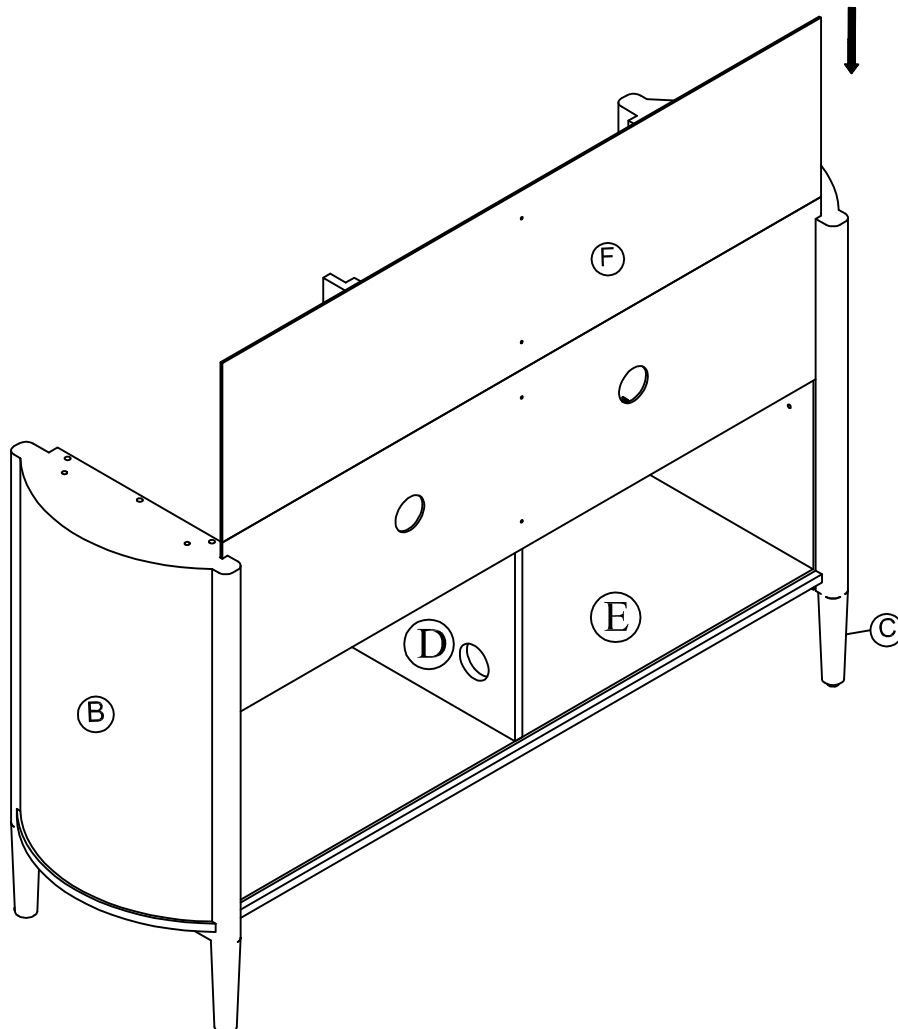

ASSEMBLY INSTRUCTION

ITEM NO. N780P330603

Step 7:

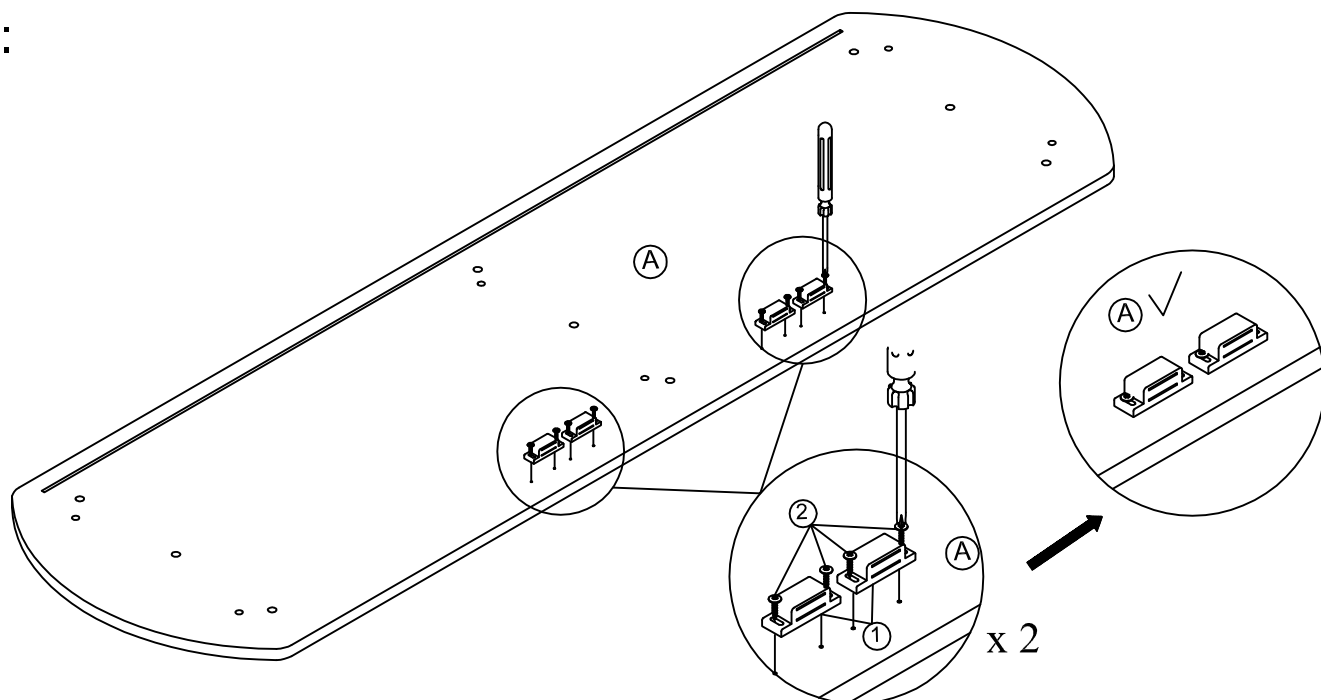

Magnetic Door Catch
16 x 14 x 44




① x 4

Mushroom Screw
M3 x 15



② x 8

Step 8

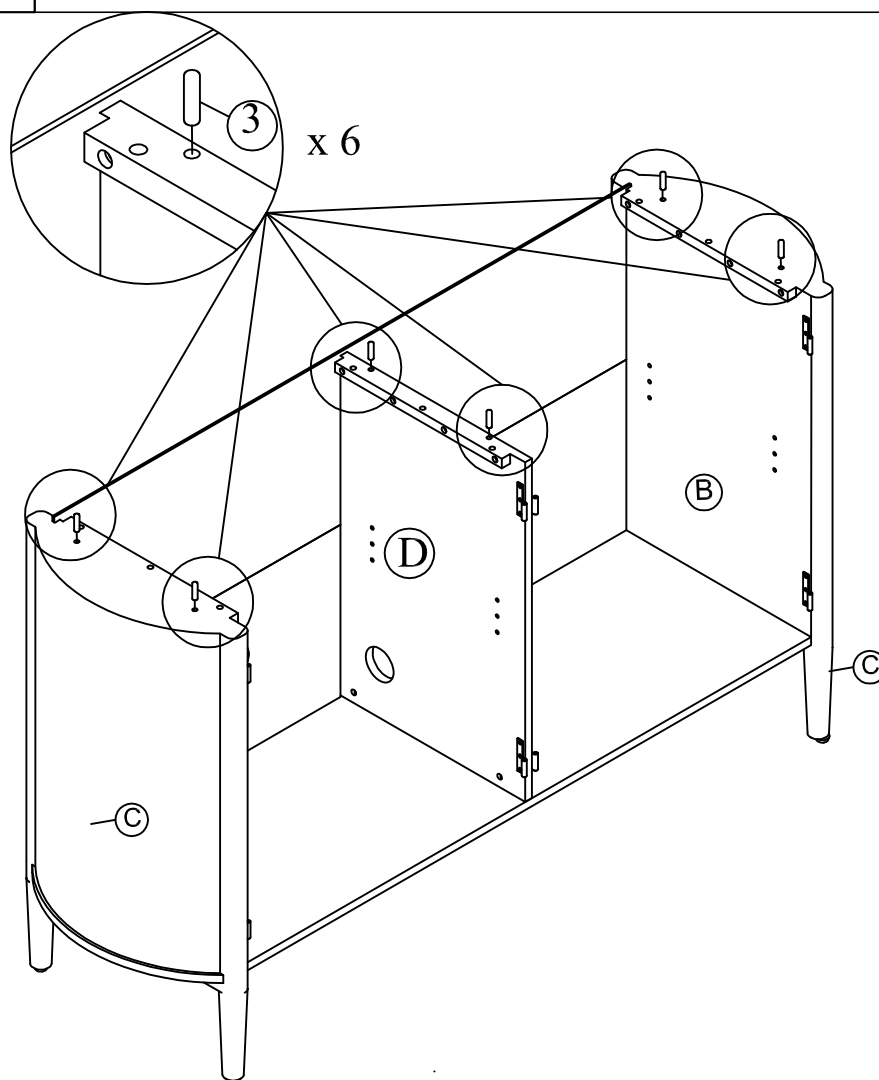

Wooden Dowel
Ø 8 x 30mm




③ x 6


ASSEMBLY INSTRUCTION



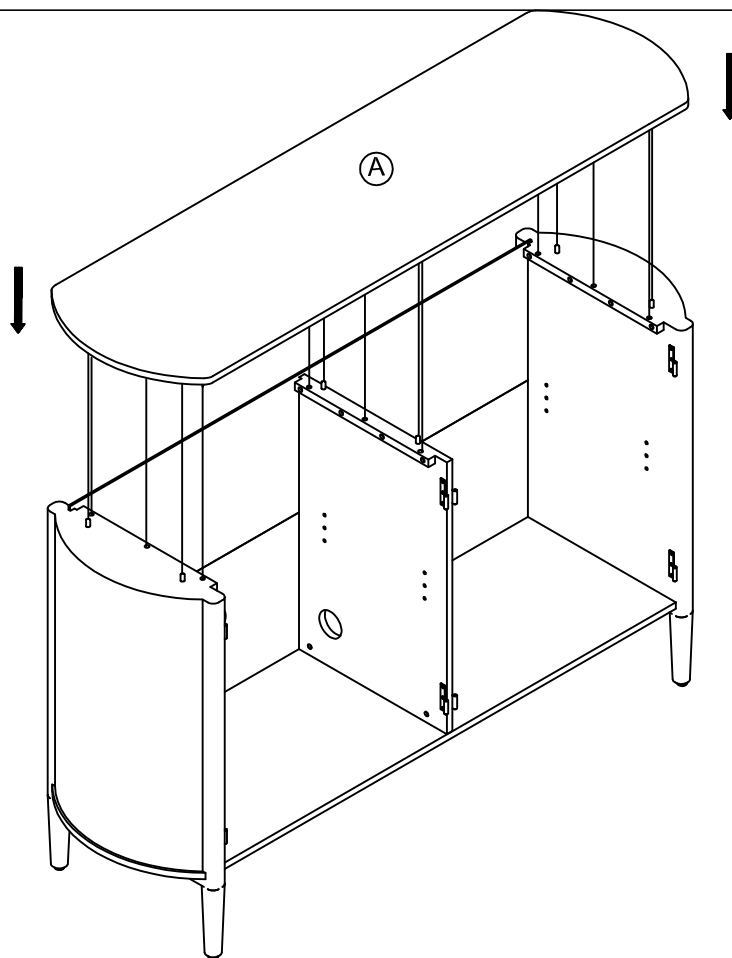

ITEM NO. N780P330603

Step 9:

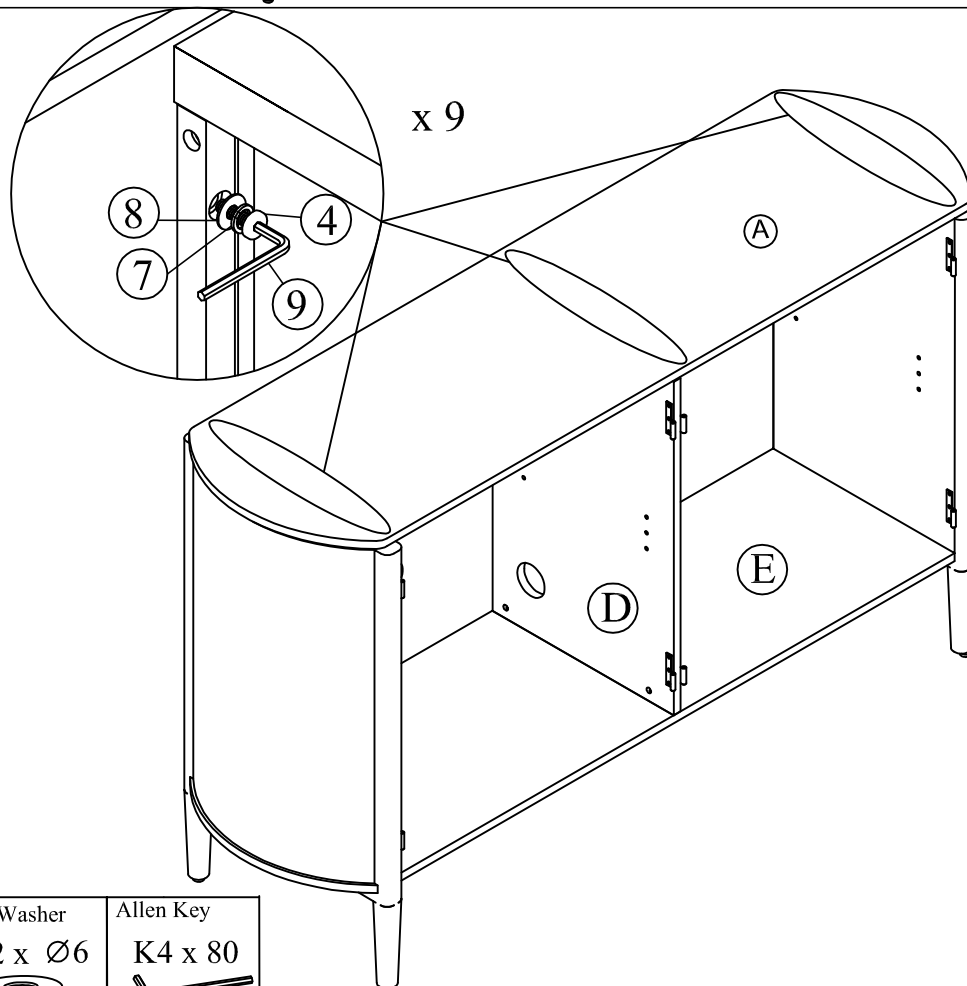

Step 10




Short Bolt	Spring washer	Flat Washer	Allen Key
1/4" x 25	Ø10 x Ø6	Ø12 x Ø6	K4 x 80
			
④ x 9	⑦ x 9	⑧ x 9	⑨ x 1


ASSEMBLY INSTRUCTION

ITEM NO. N780P330603


Step 11

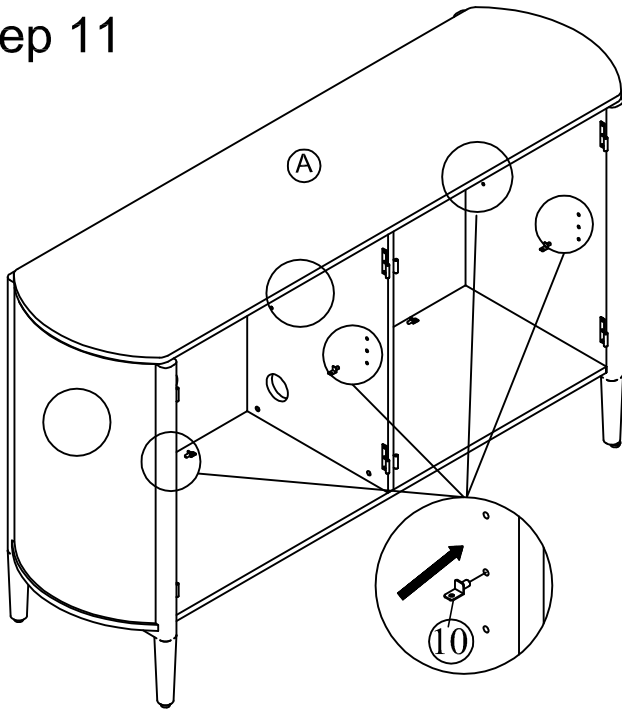


Support Shelf



⑩x 8

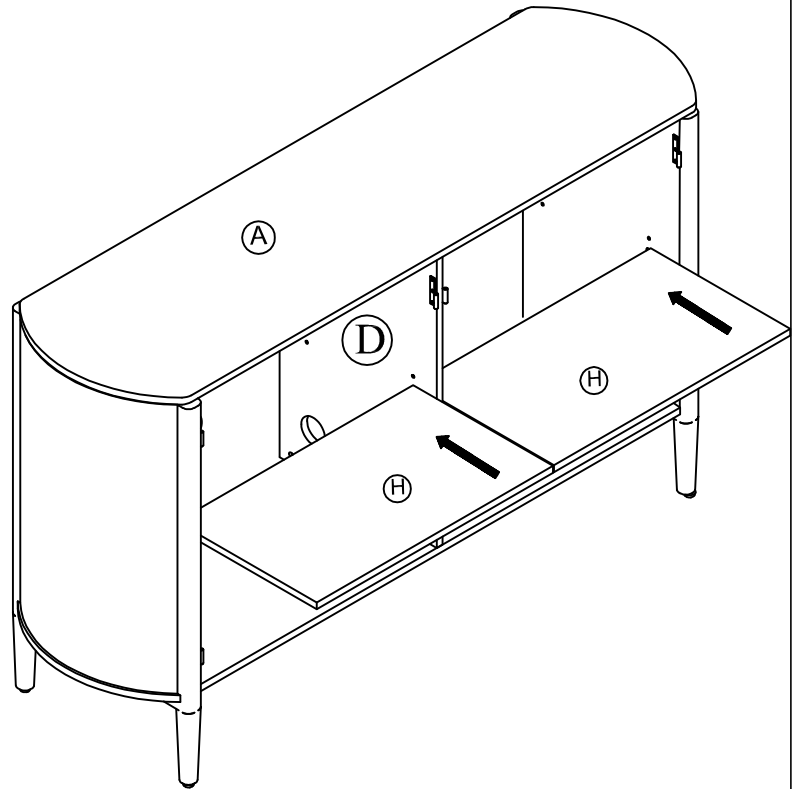


Step 12

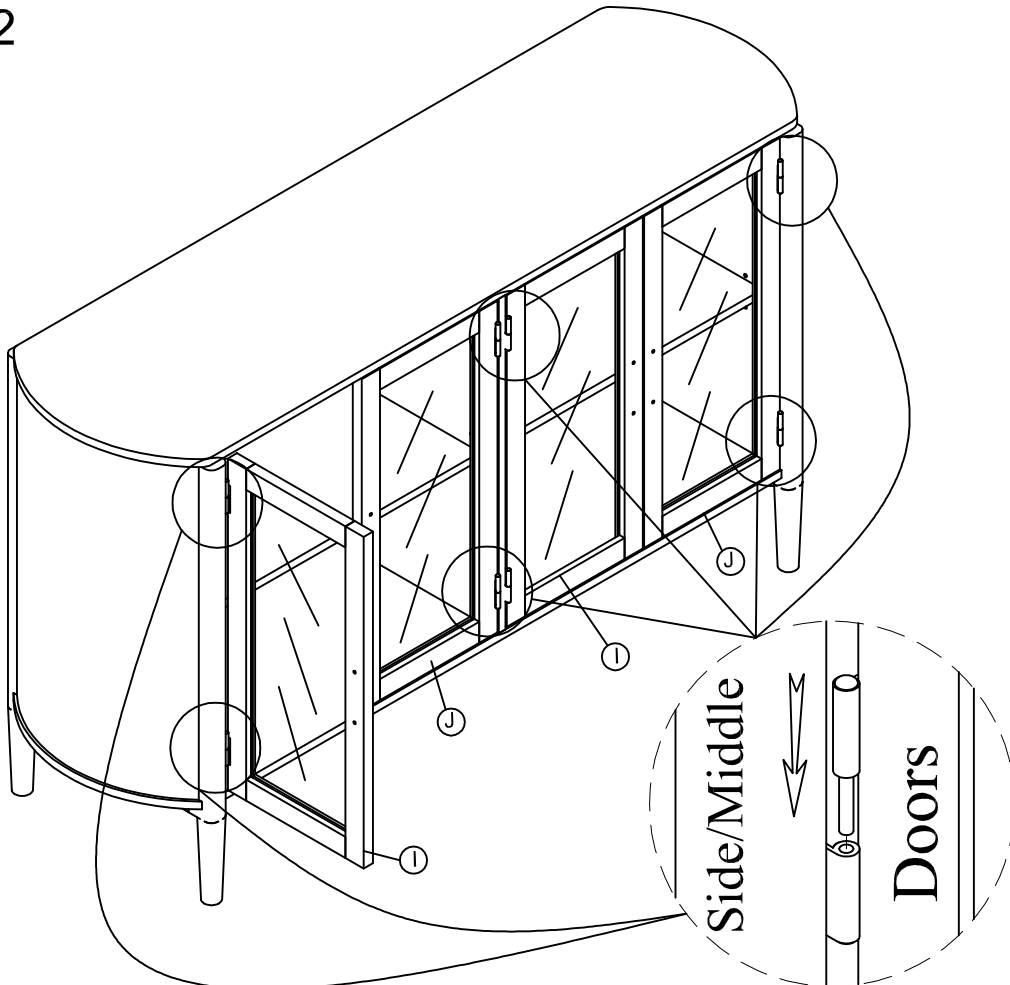

ASSEMBLY INSTRUCTION

ITEM NO. N780P330603

Step 13

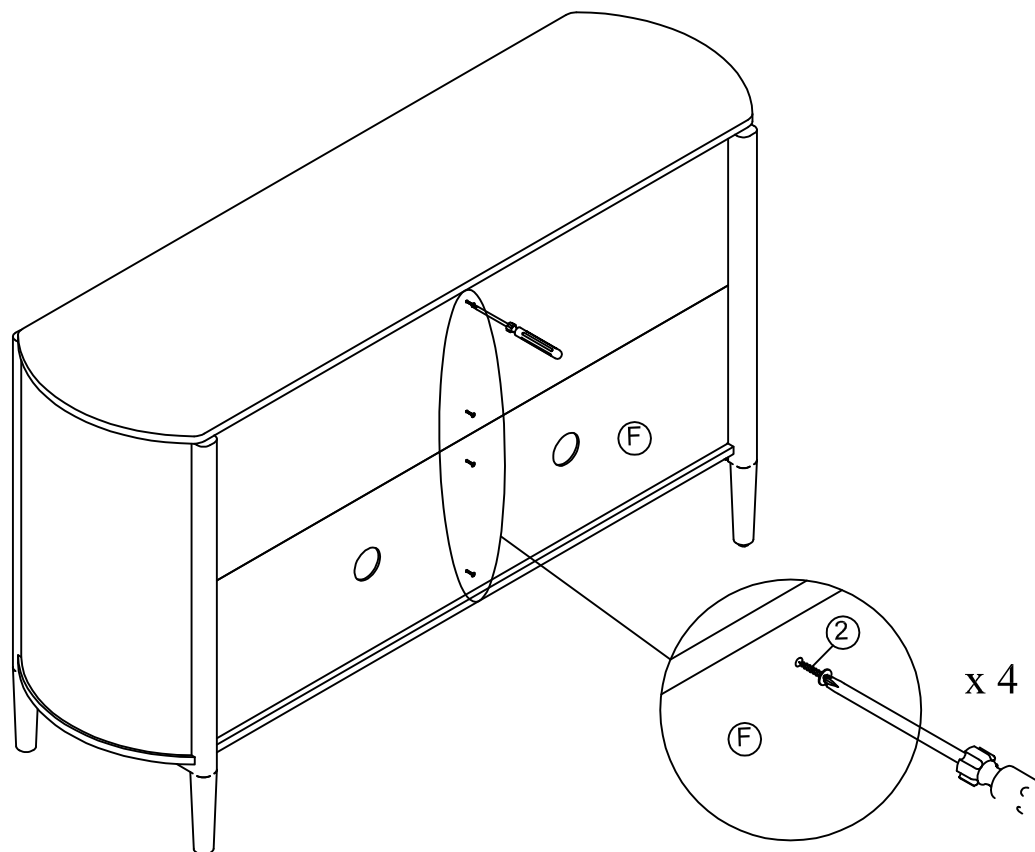


Mushroom Screw
M3 x 15



② x 4

Step 14

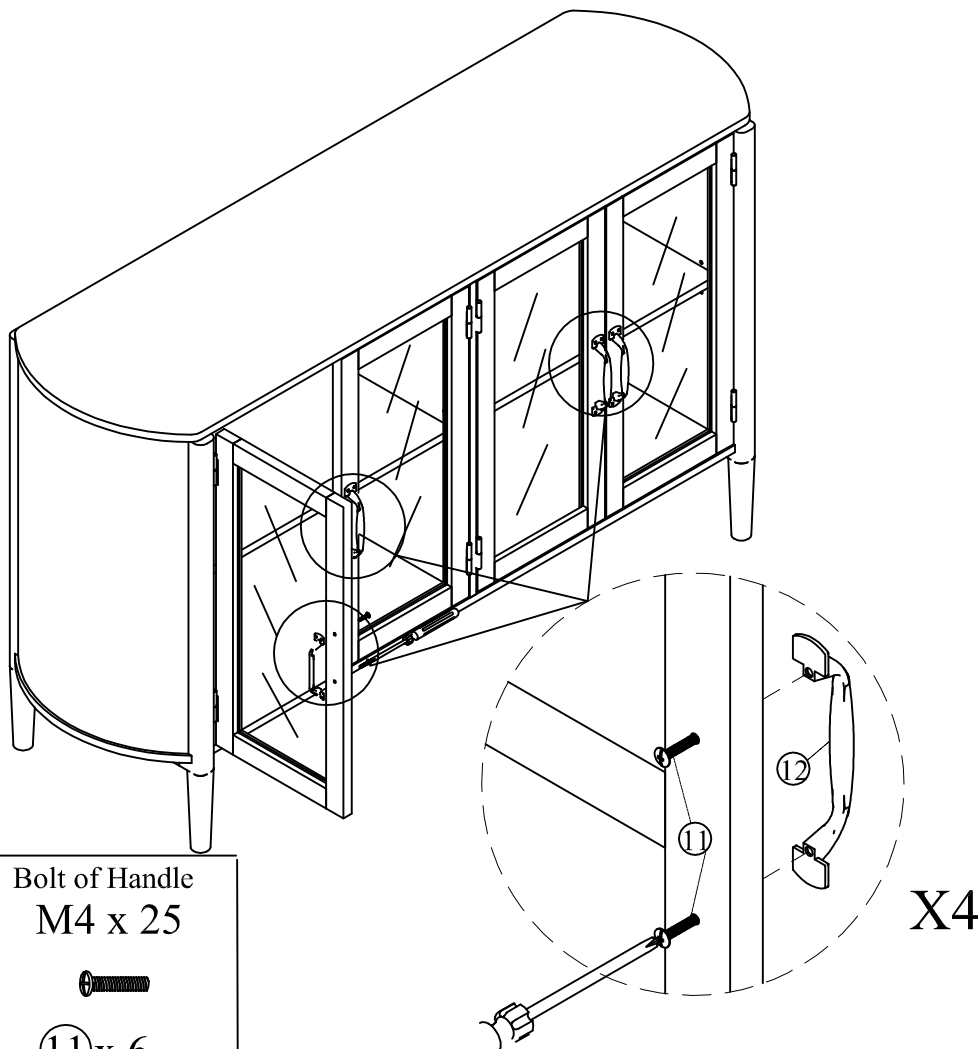

Handle

Bolt of Handle
M4 x 25




⑫ x 3








⑪ x 6

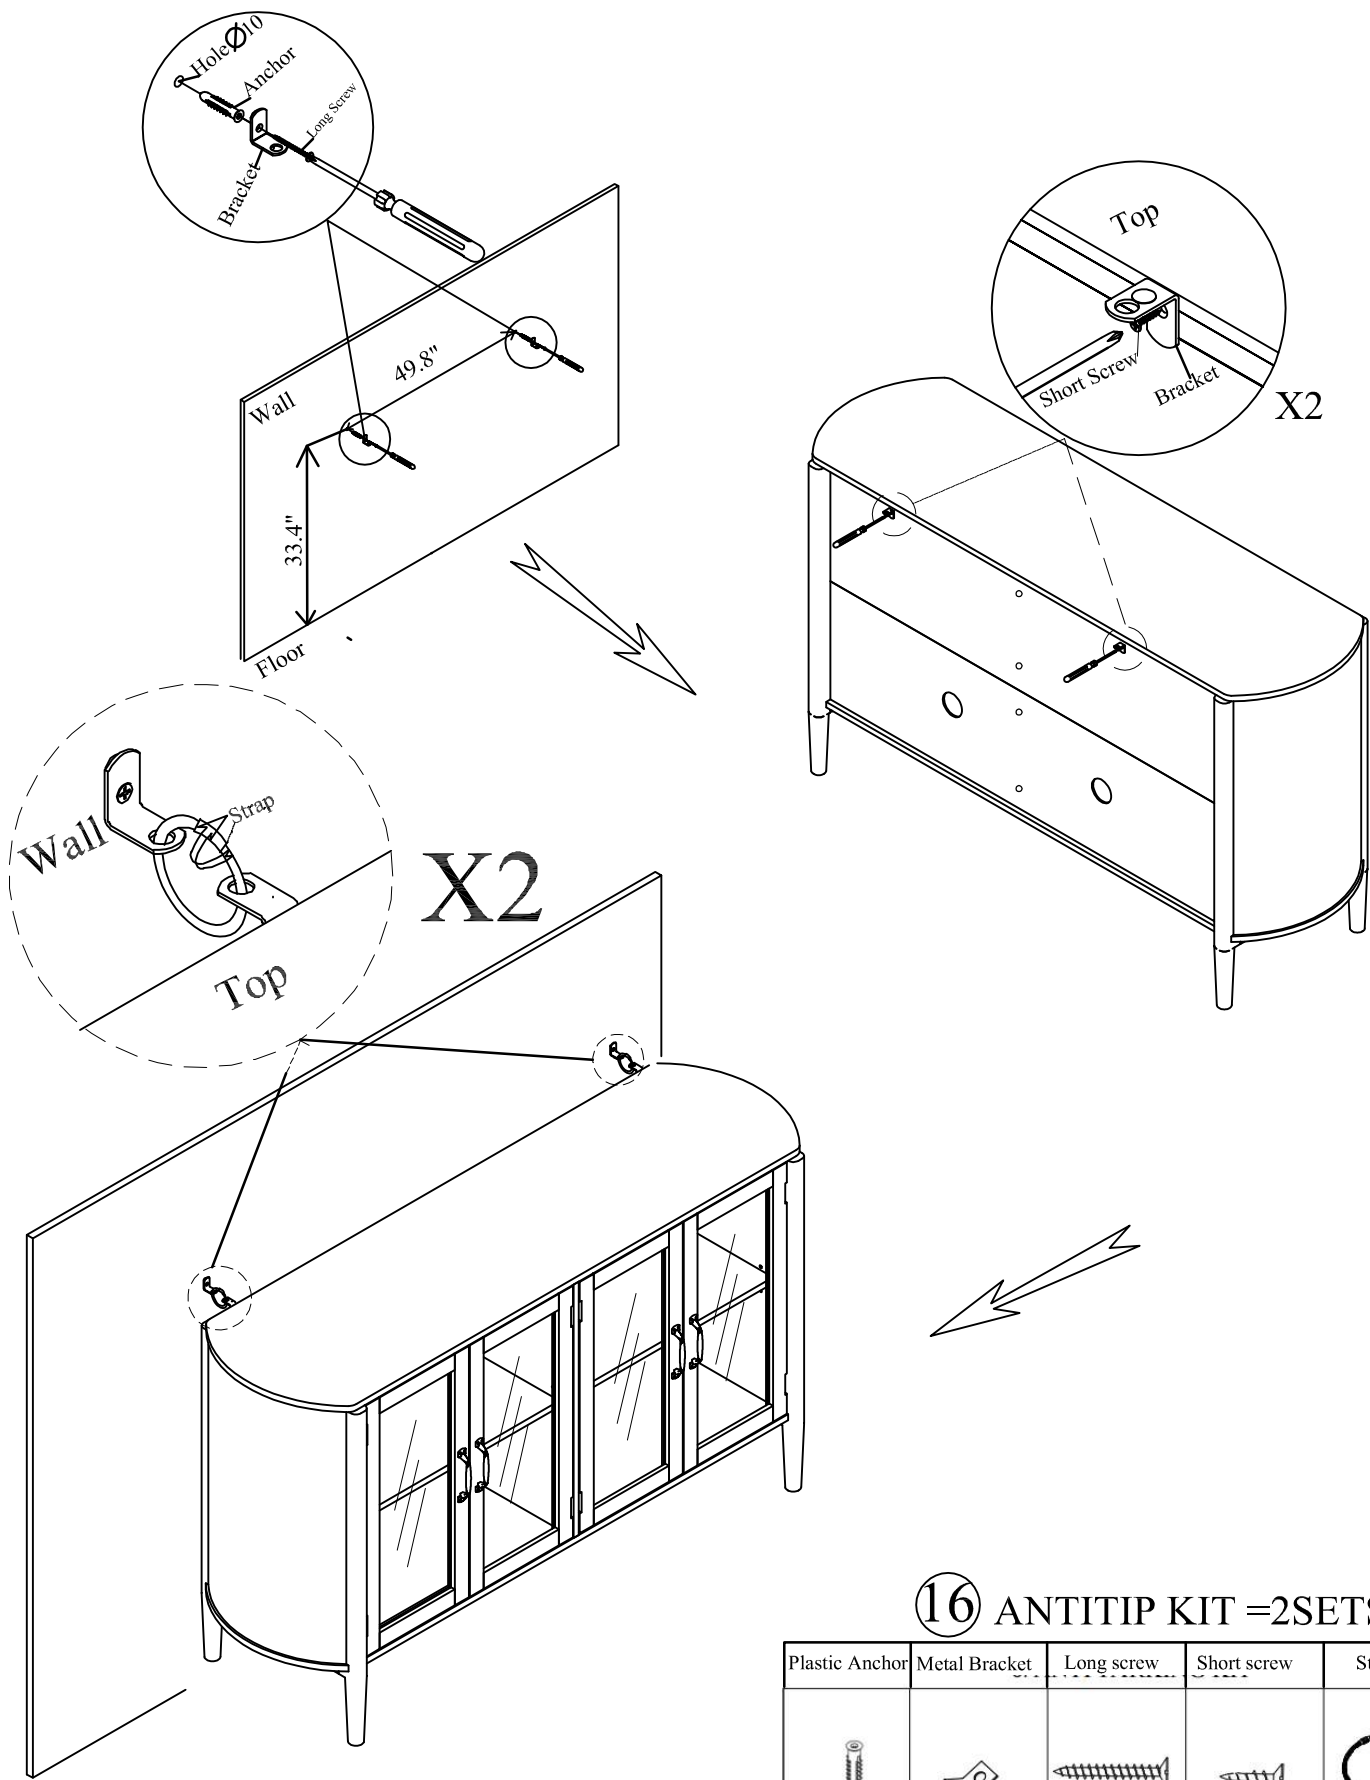ASSEMBLY INSTRUCTION
ITEM NO. N780P330603

Step 19



16 ANTITIP KIT = 2SETS

Plastic Anchor	Metal Bracket	Long screw	Short screw	Steel Wire
				
2 pcs	4 pcs	2 pcs	2 pcs	2 pcs


ASSEMBLY INSTRUCTION

ITEM NO. N780P330603

Is your cabinet door looking crooked or unevenly spaced?

If you're still having trouble lining everything up, your next step should be to try to adjust the feet slightly to square up the cabinet and doors. Follow the instructions below:

If the right door appears to be hanging low, you can adjust the adjustable leveler on the front right until the door is better aligned.

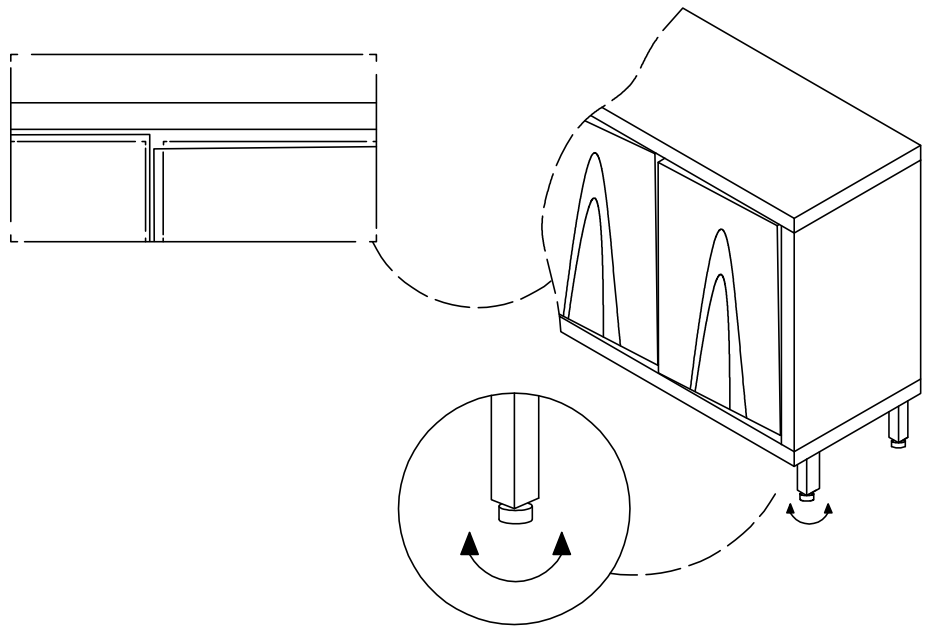

If the left door appears to be hanging low, you can adjust the adjustable leveler on the front left until the door is better aligned.

