

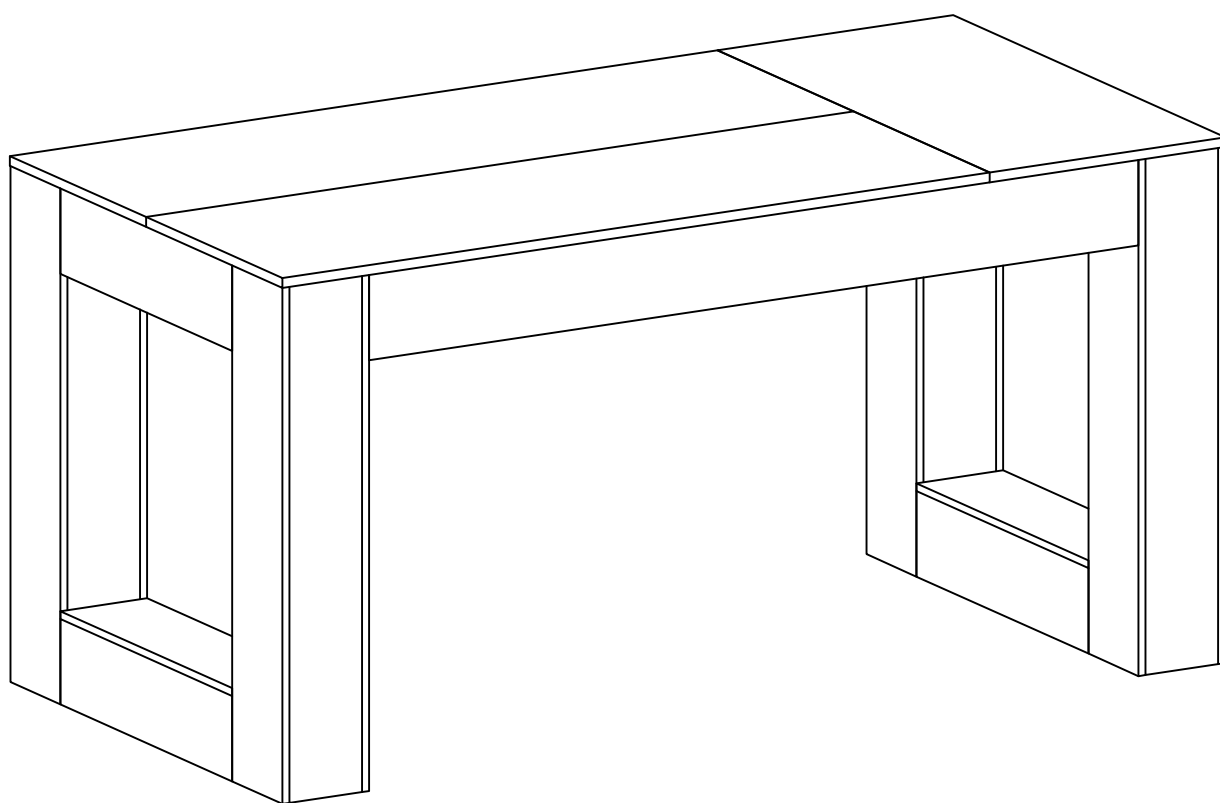


Heavy table


we recommend using the included manual installation tool for assembly.
If you choose to use a power drill, please set it to the lowest torque setting to prevent over-tightening, which may damage the wooden panels.

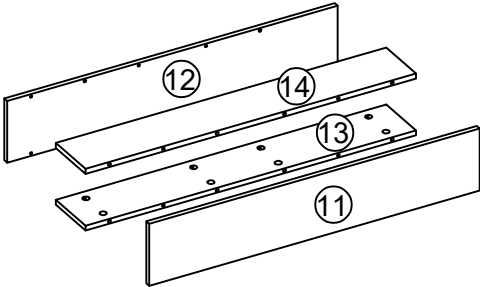

Parts List

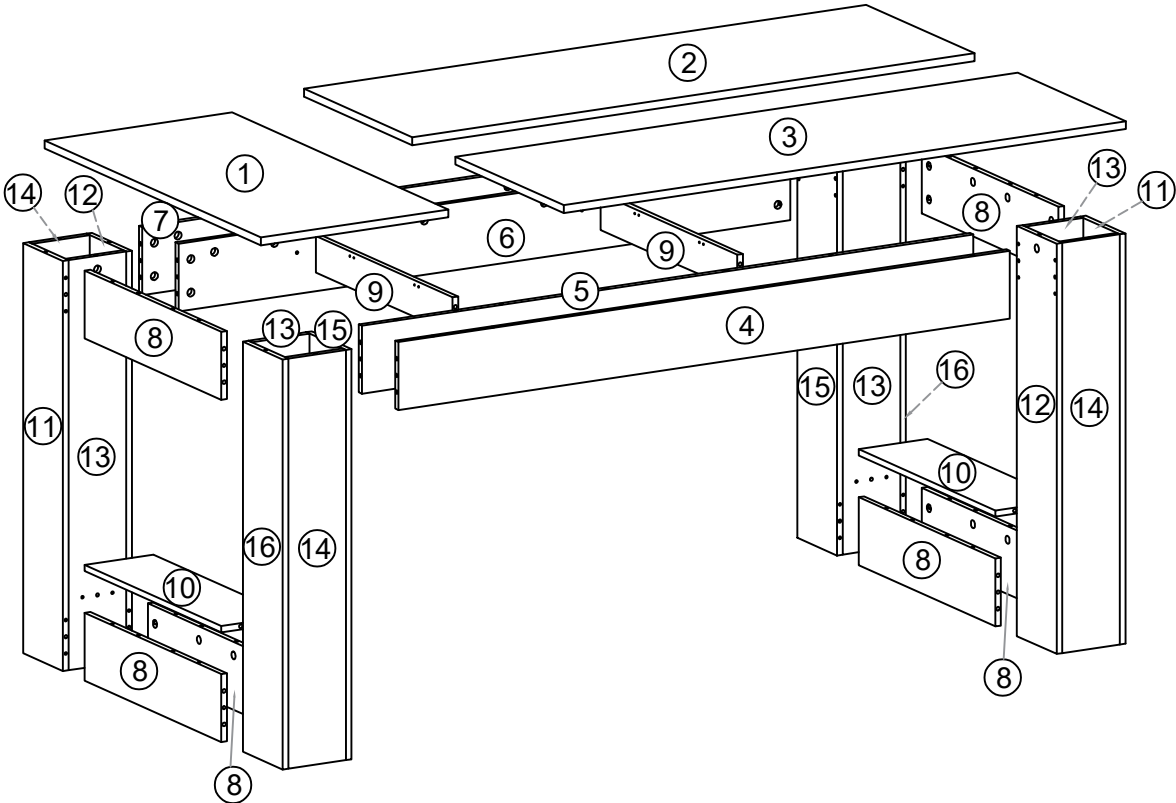


X2

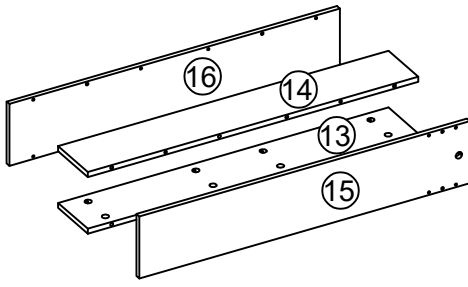


X2

Hardware

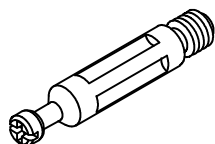


A x 172sets




Ø15X9.5MM

B x 188sets

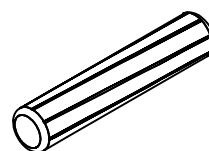


Ø6 x 30MM

C x 78pcs

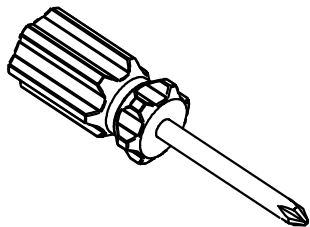


D x 1sets




3.5 x 12MM


E x 34pcs

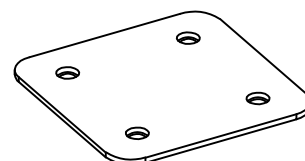

F x 2pcs

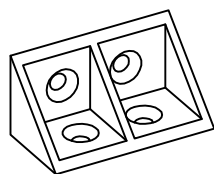


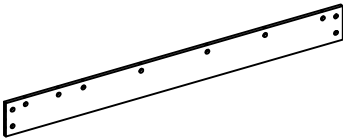
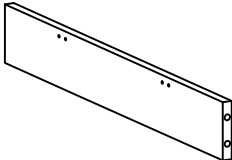
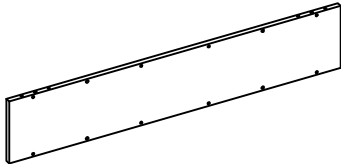
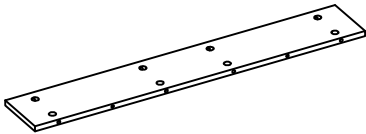
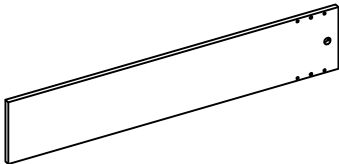


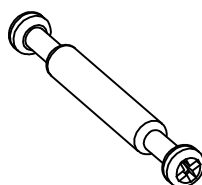







G x 6sets








H x 8sets

ASSEMBLY MATERIAL



Item no.	Reference Image	Qty.
①		X1
③		X1
⑤		X1
⑦		X1
⑨		X2
⑪		X2
⑬		X4
⑮		X2

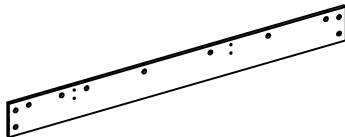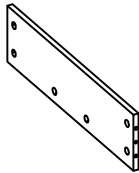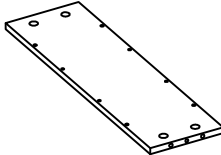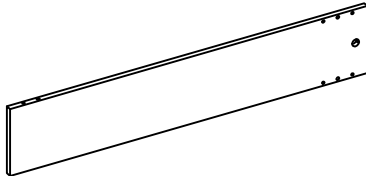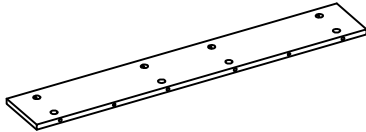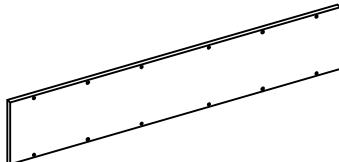Item no.	Reference Image	Qty.
②		X1
④		X1
⑥		X1
⑧		X6
⑩		X2
⑫		X2
⑭		X4
⑯		X2


Step 1

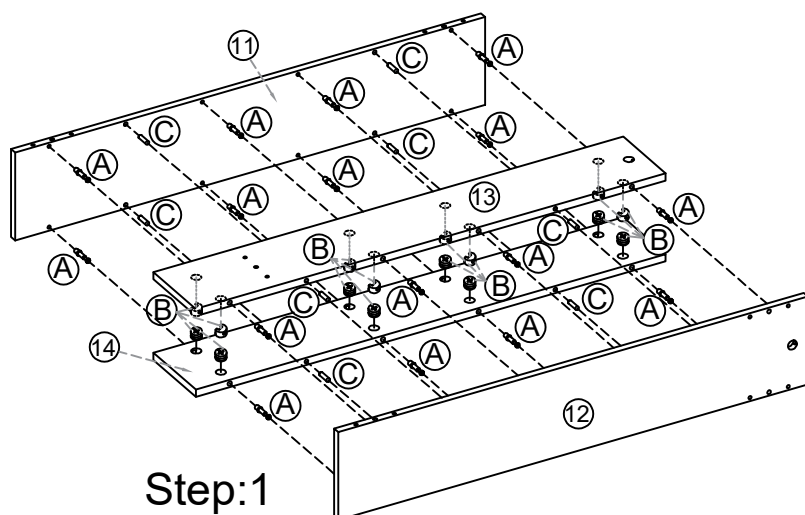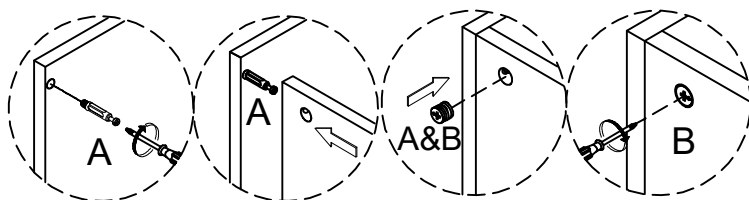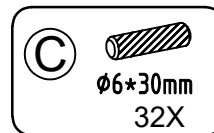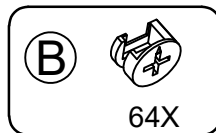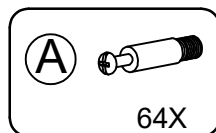

Step:2





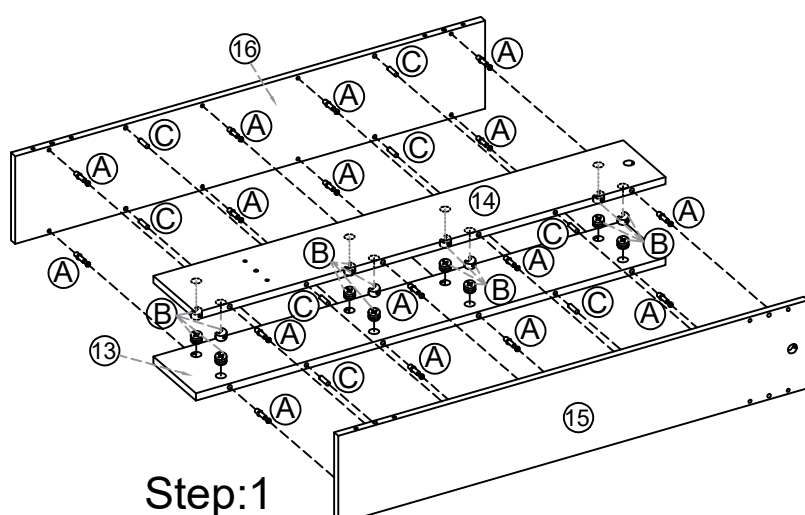
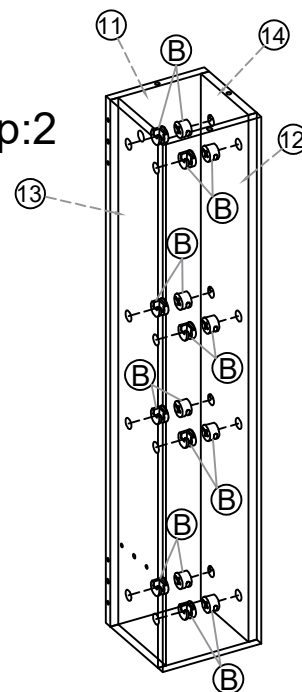


Step:2






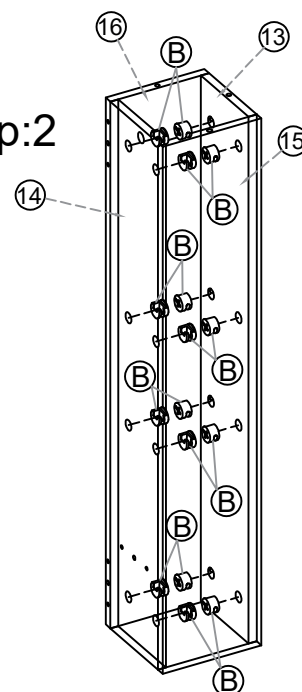


Note: When tightening with a screwdriver, you need to insert your hand into the foot to tighten






Step 2

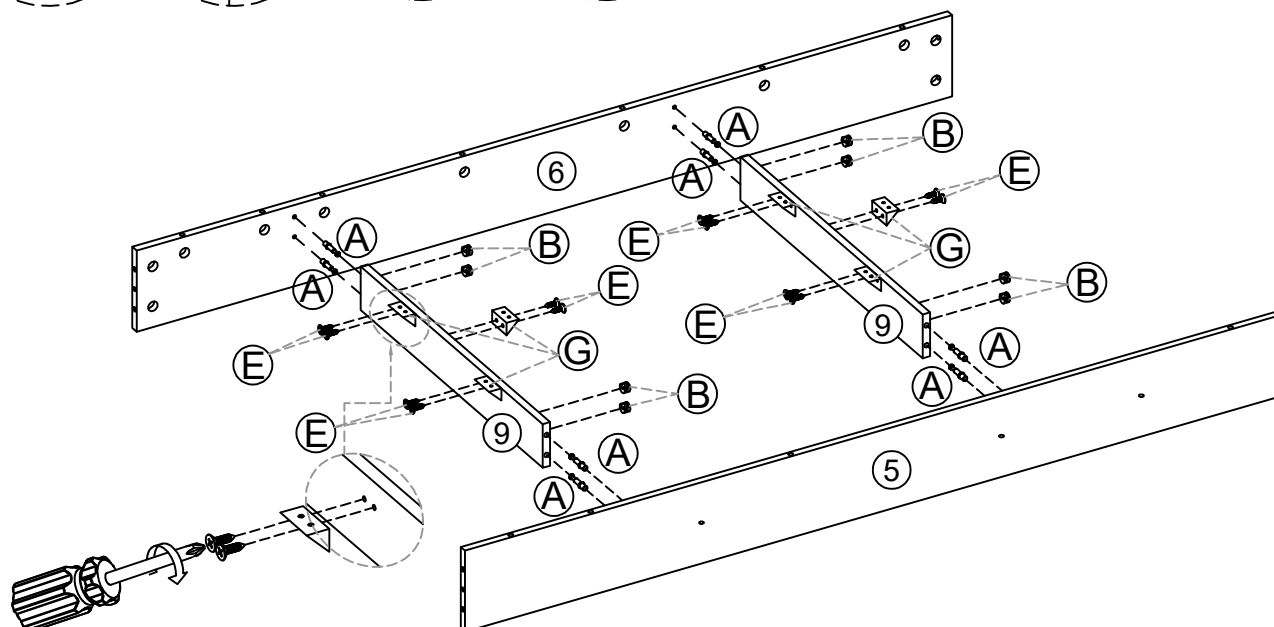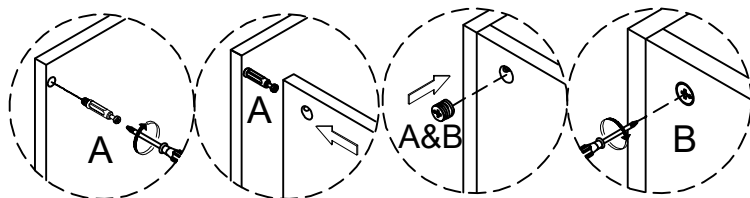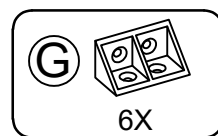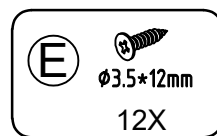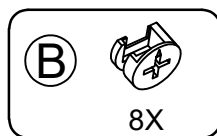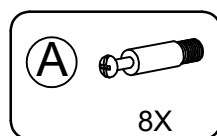





Step 3

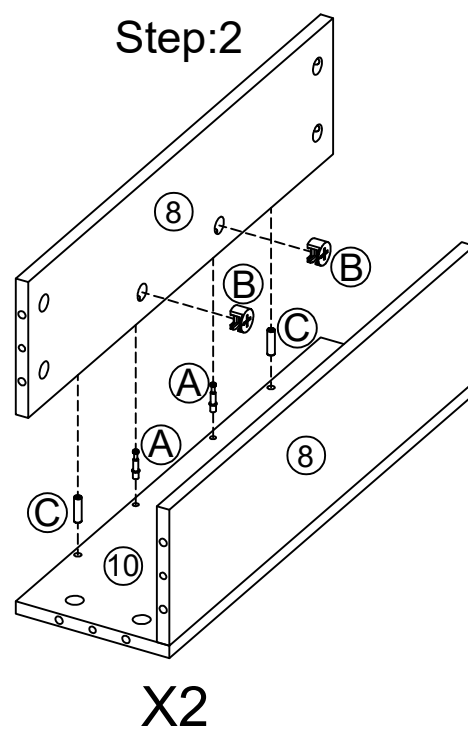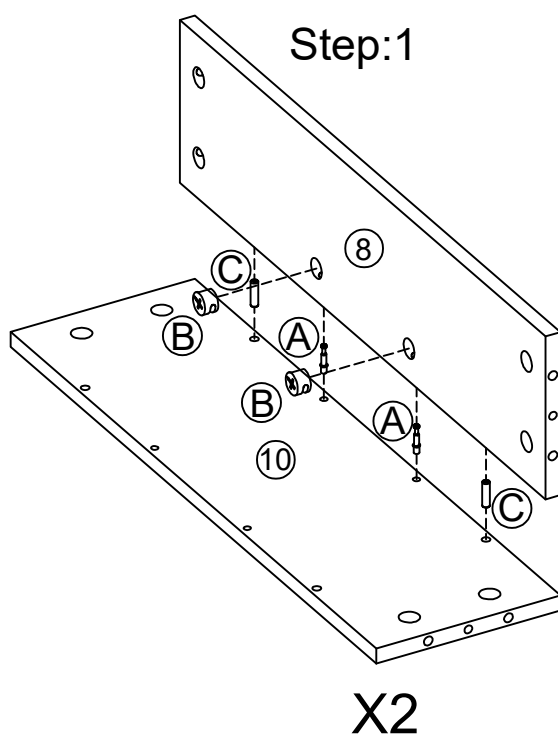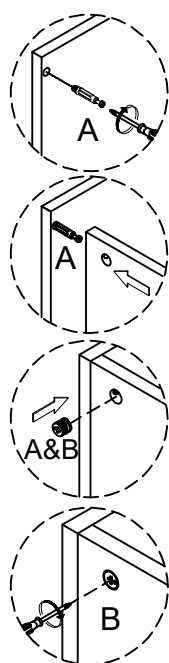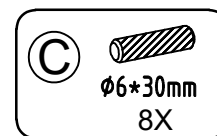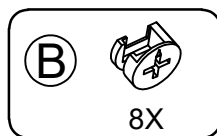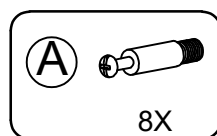





Step 4

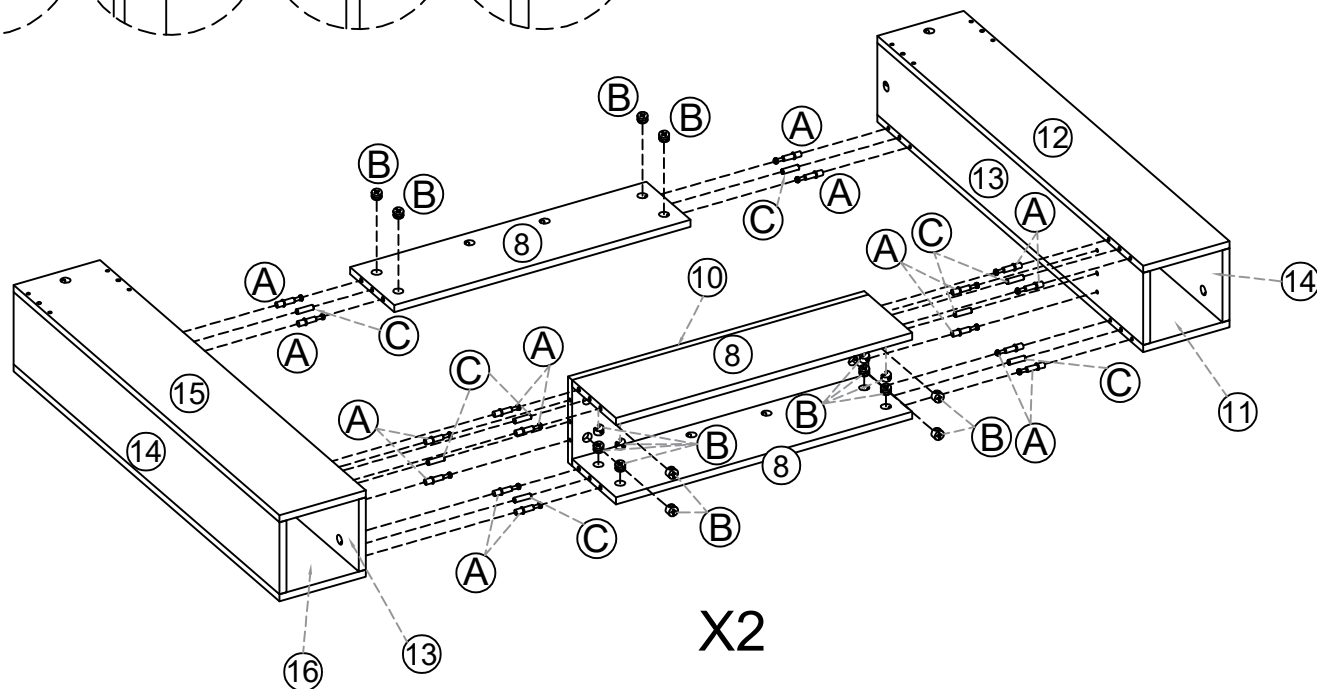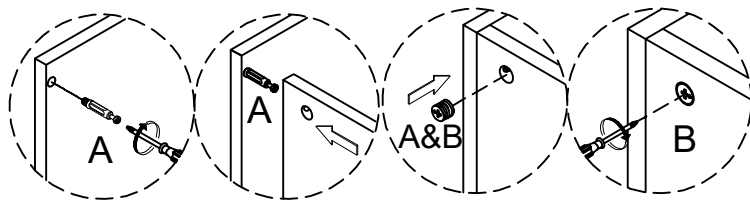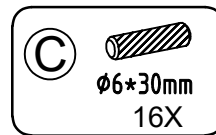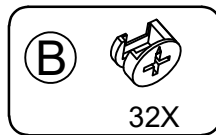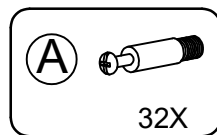





Step 5

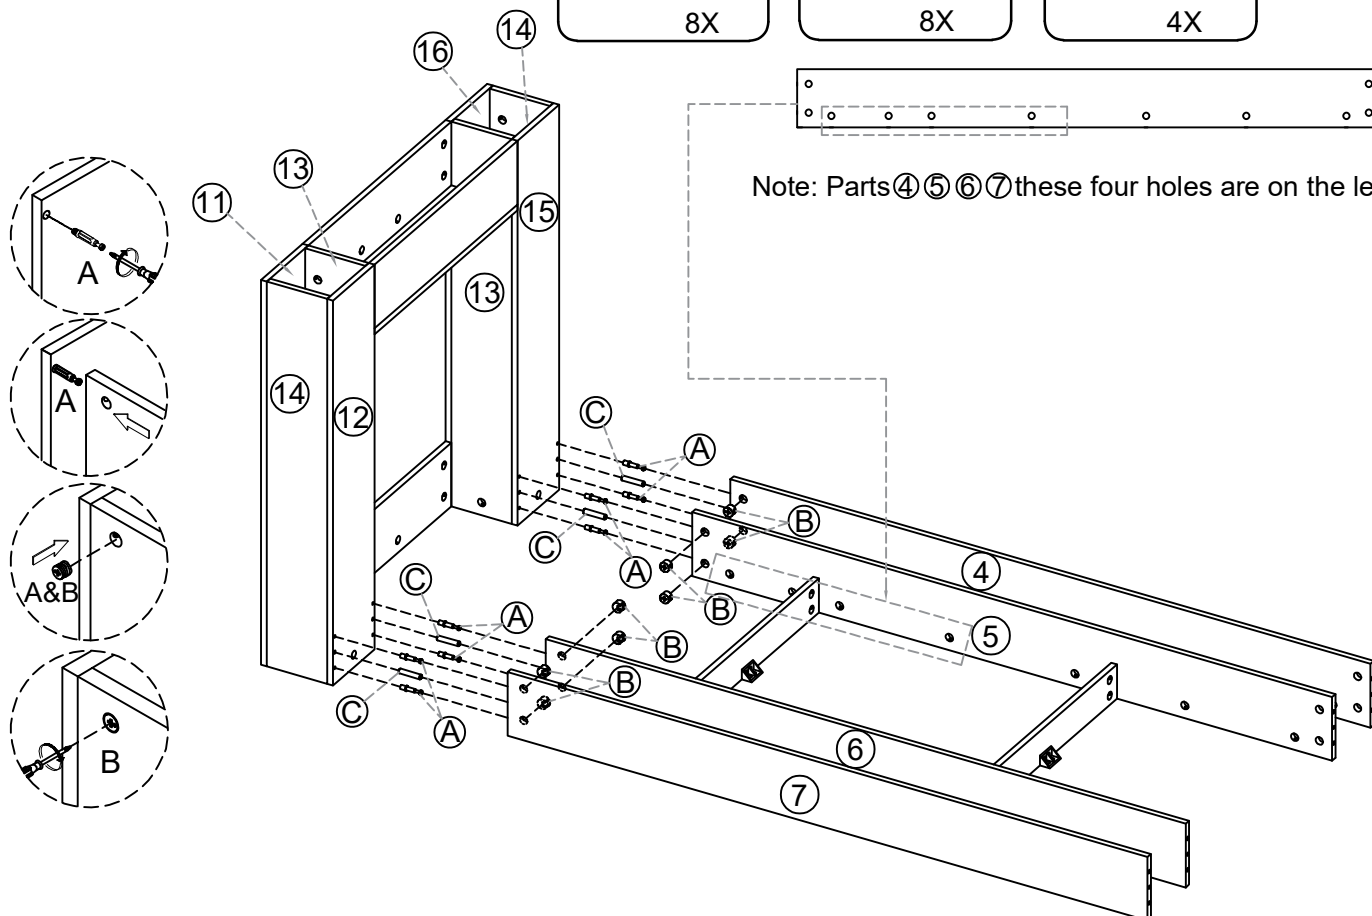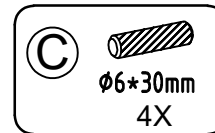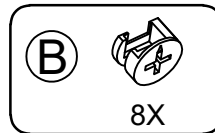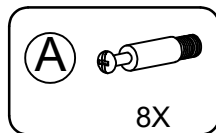




6Step 6

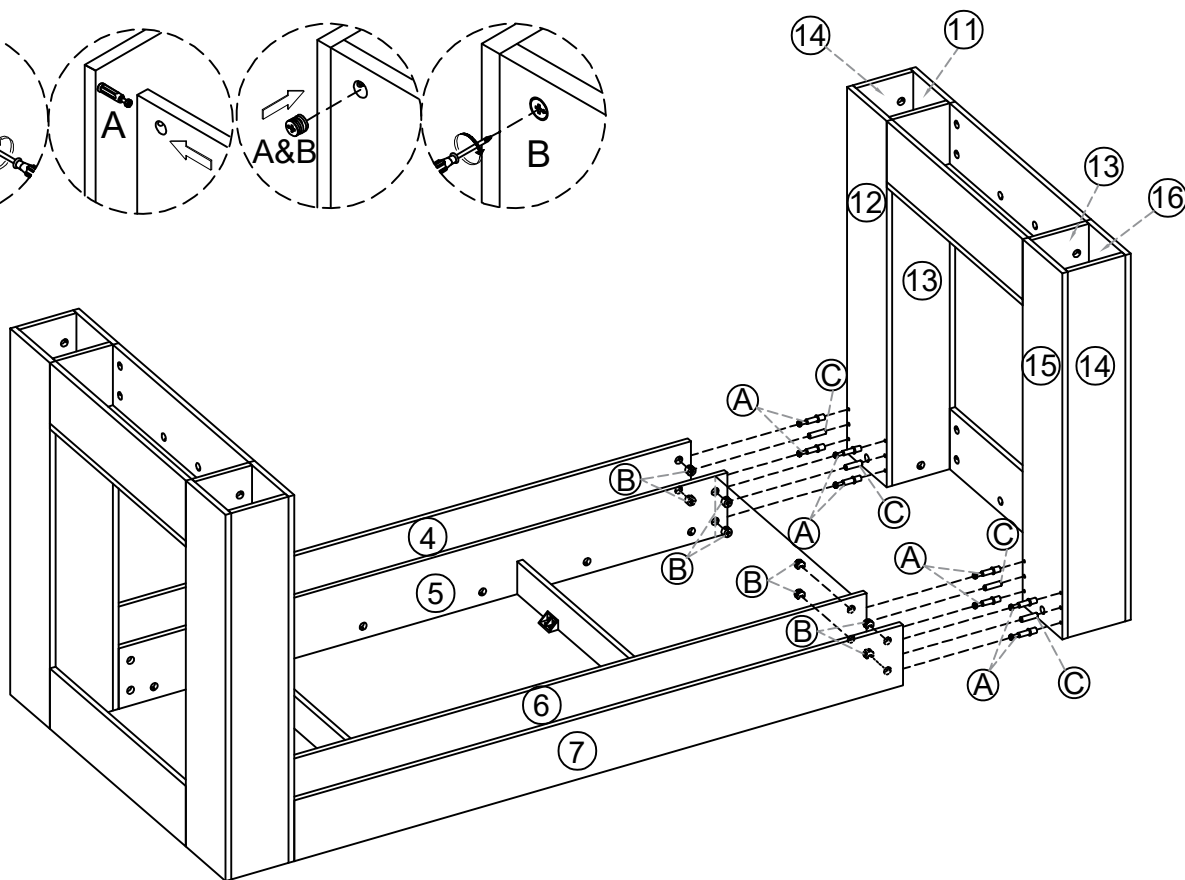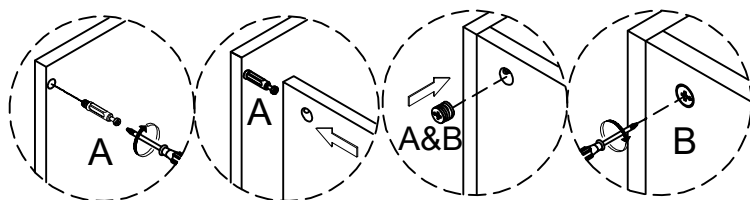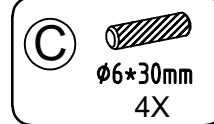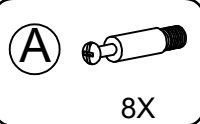







Step 7

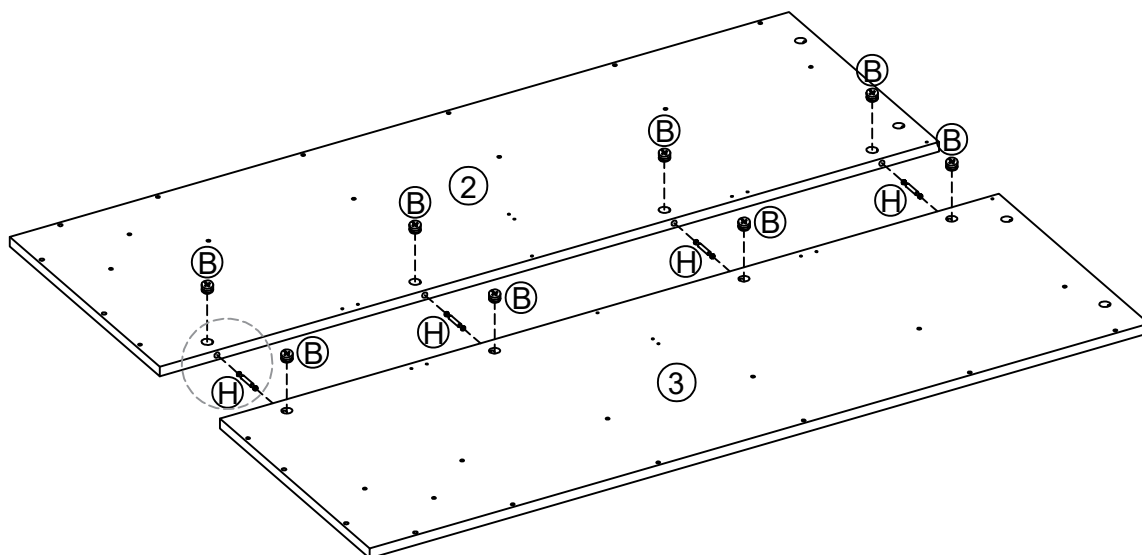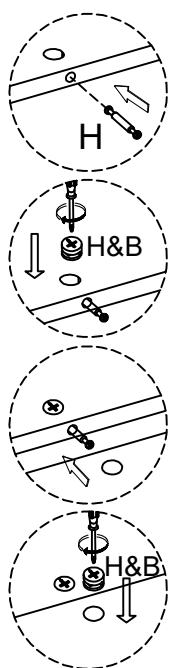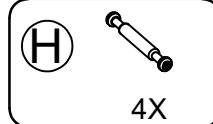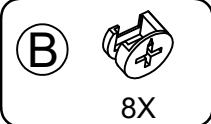






Step 8

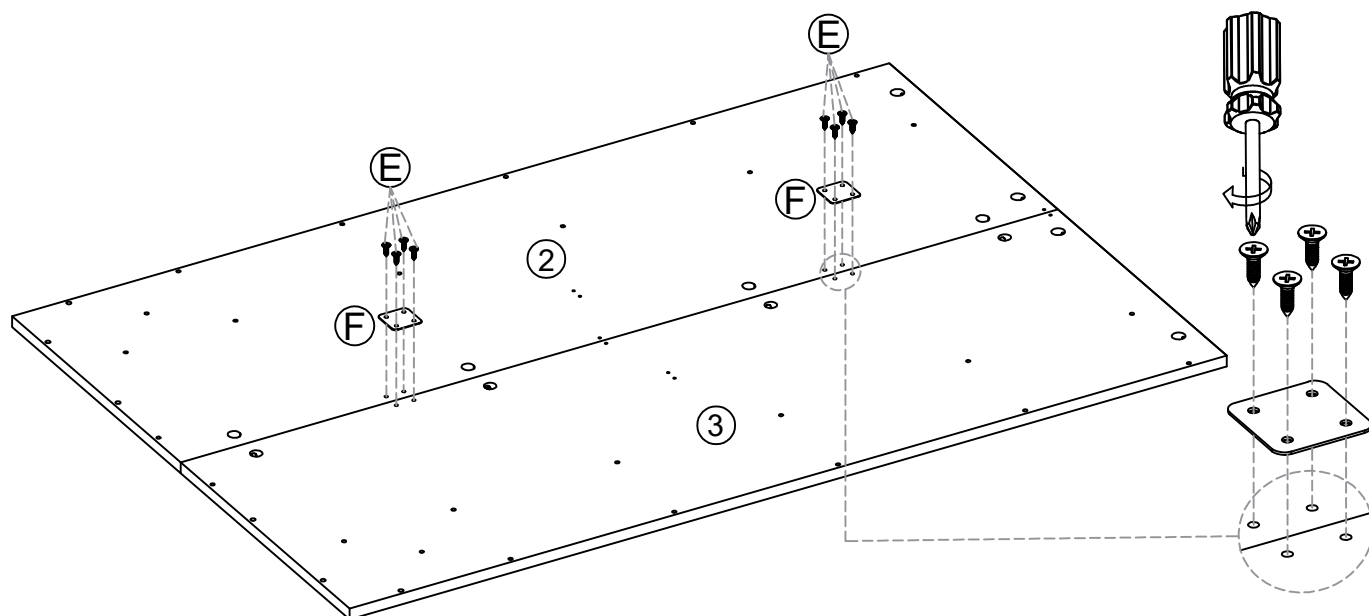

Step 9

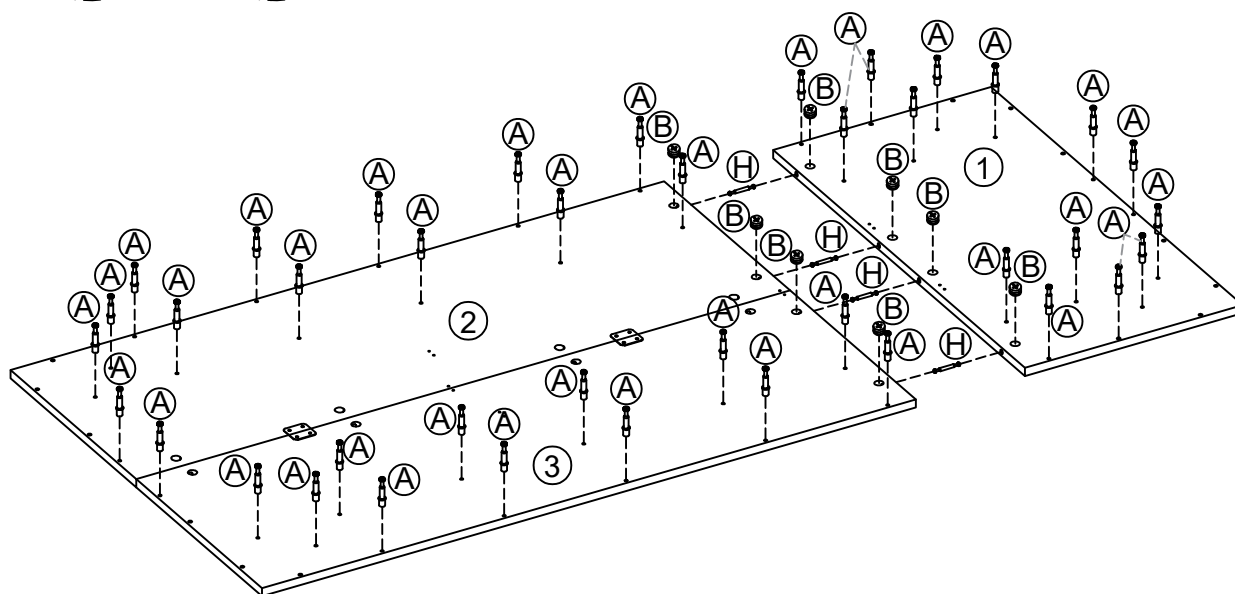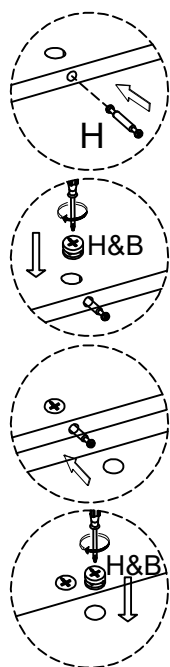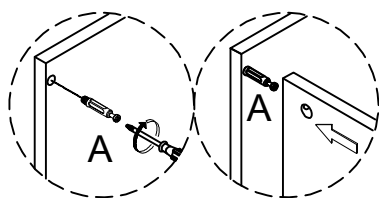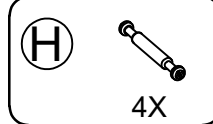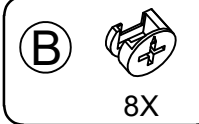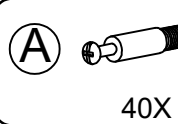

Step 10

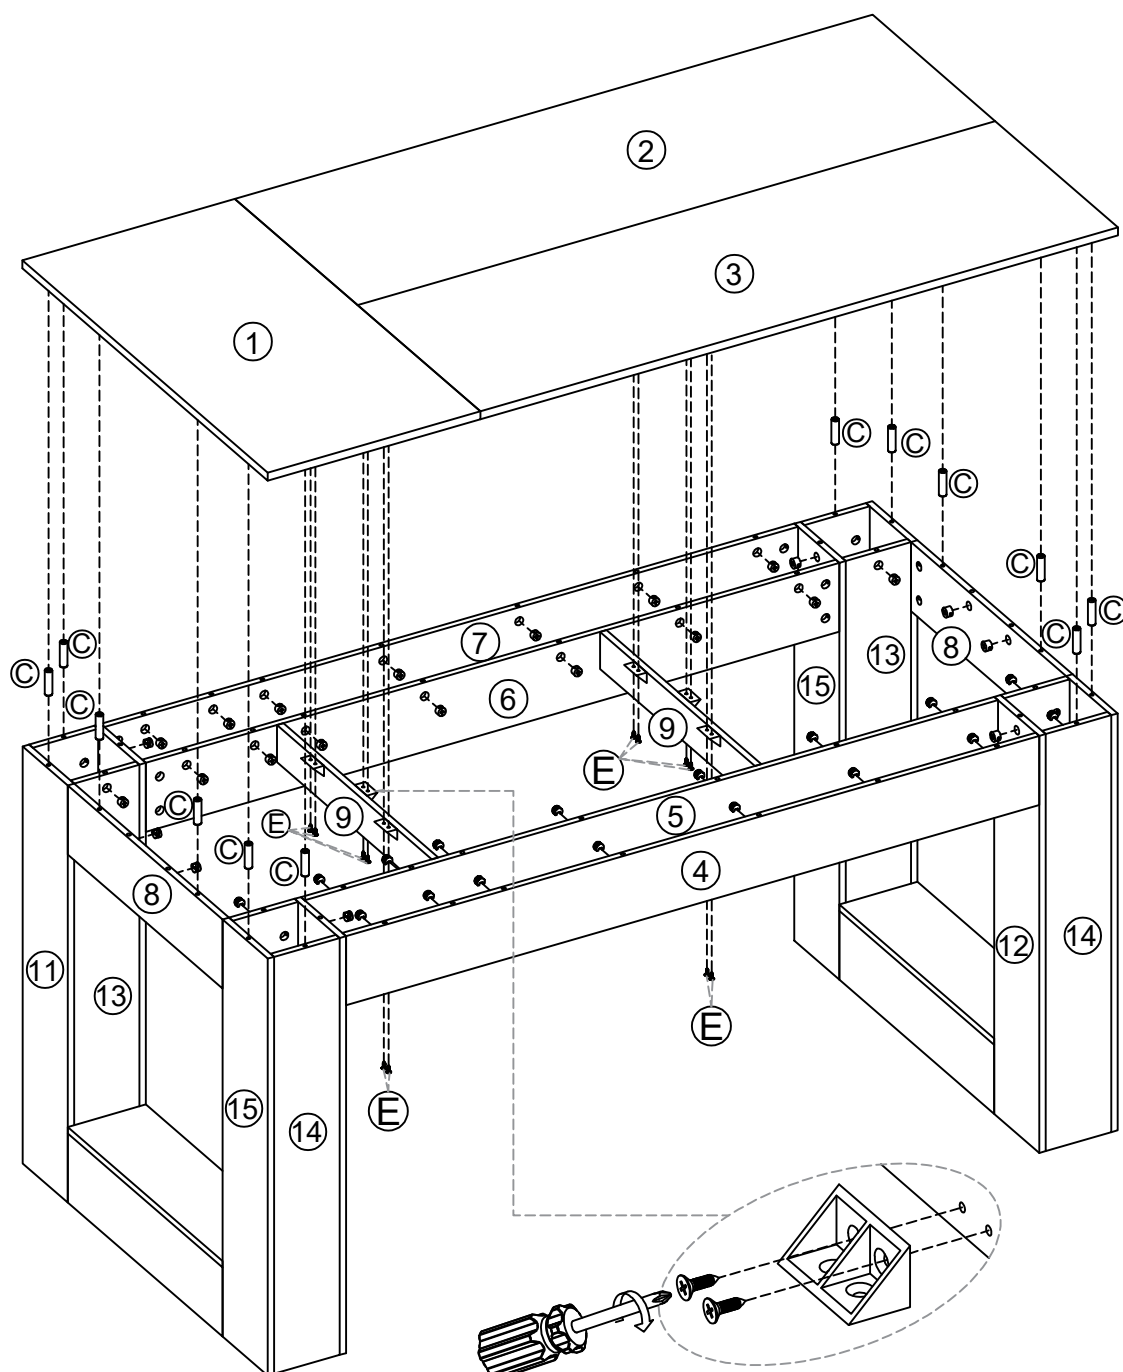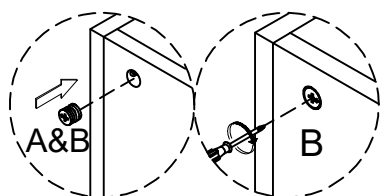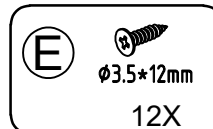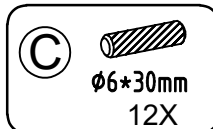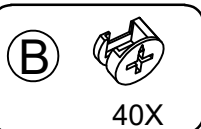

④ A is already locked in the panels ① ② ③ in advance, simply lower the panel to place ④ A into the corresponding holes, as shown: hole corresponding to the lock plate ④ B

Step 11

