







INSTRUCTION

N719P185194

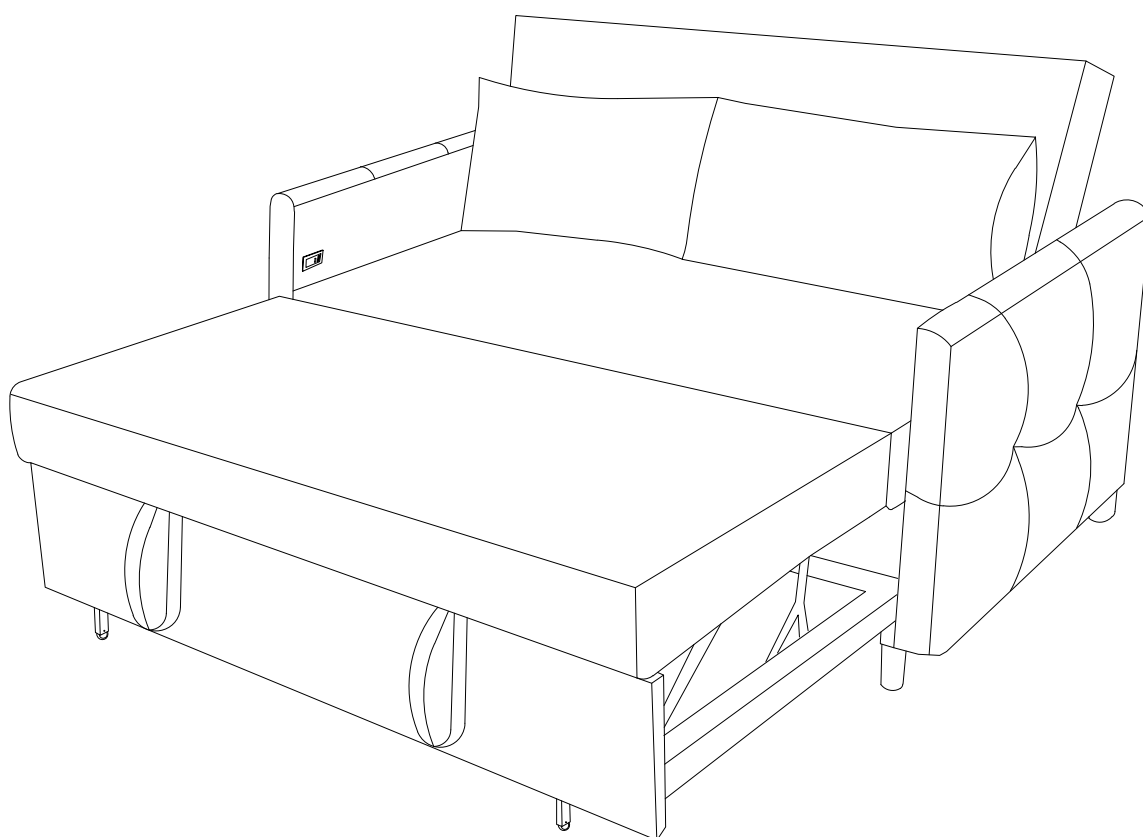


SOFA BED



PARTS LIST

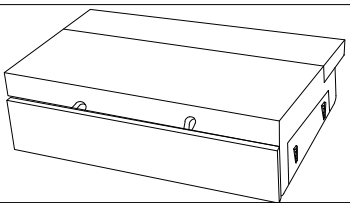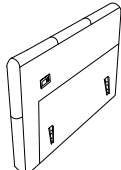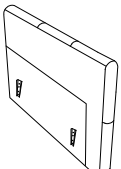NO	PART	DECS	QTY
(A)		SEAT BODY	1pc
(B)		L-SHAPED WRENCH	1pc
(C)		LEFT ARM	1pc
(D)		RIGHT ARM	1pc
(E)		PILLOW	2pcs
(F)		LEGS	4pcs
(G)		WHEELS	4pcs
(H)	 (M8*20MM)	SHORT SCREW	8pcs


STEP 1

Ship by 1 box

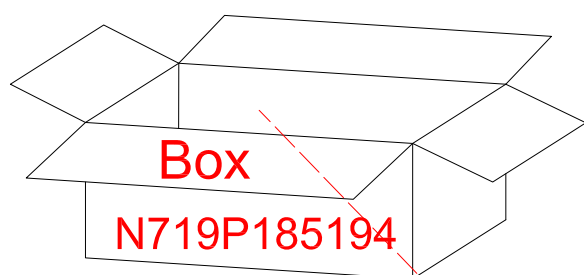


NO	PART	DECS	QTY
(A)		SEAT BODY	1pc
(B)		L-SHAPED WRENCH	1pc
(C)		LEFT ARM	1pc
(D)		RIGHT ARM	1pc
(E)		PILLOW	2pcs
(F)		LEGS	4pcs
(G)		WHEELS	4pcs
(H)	 (M6*20MM)	SHORT SCREW	8pcs

STEP 2

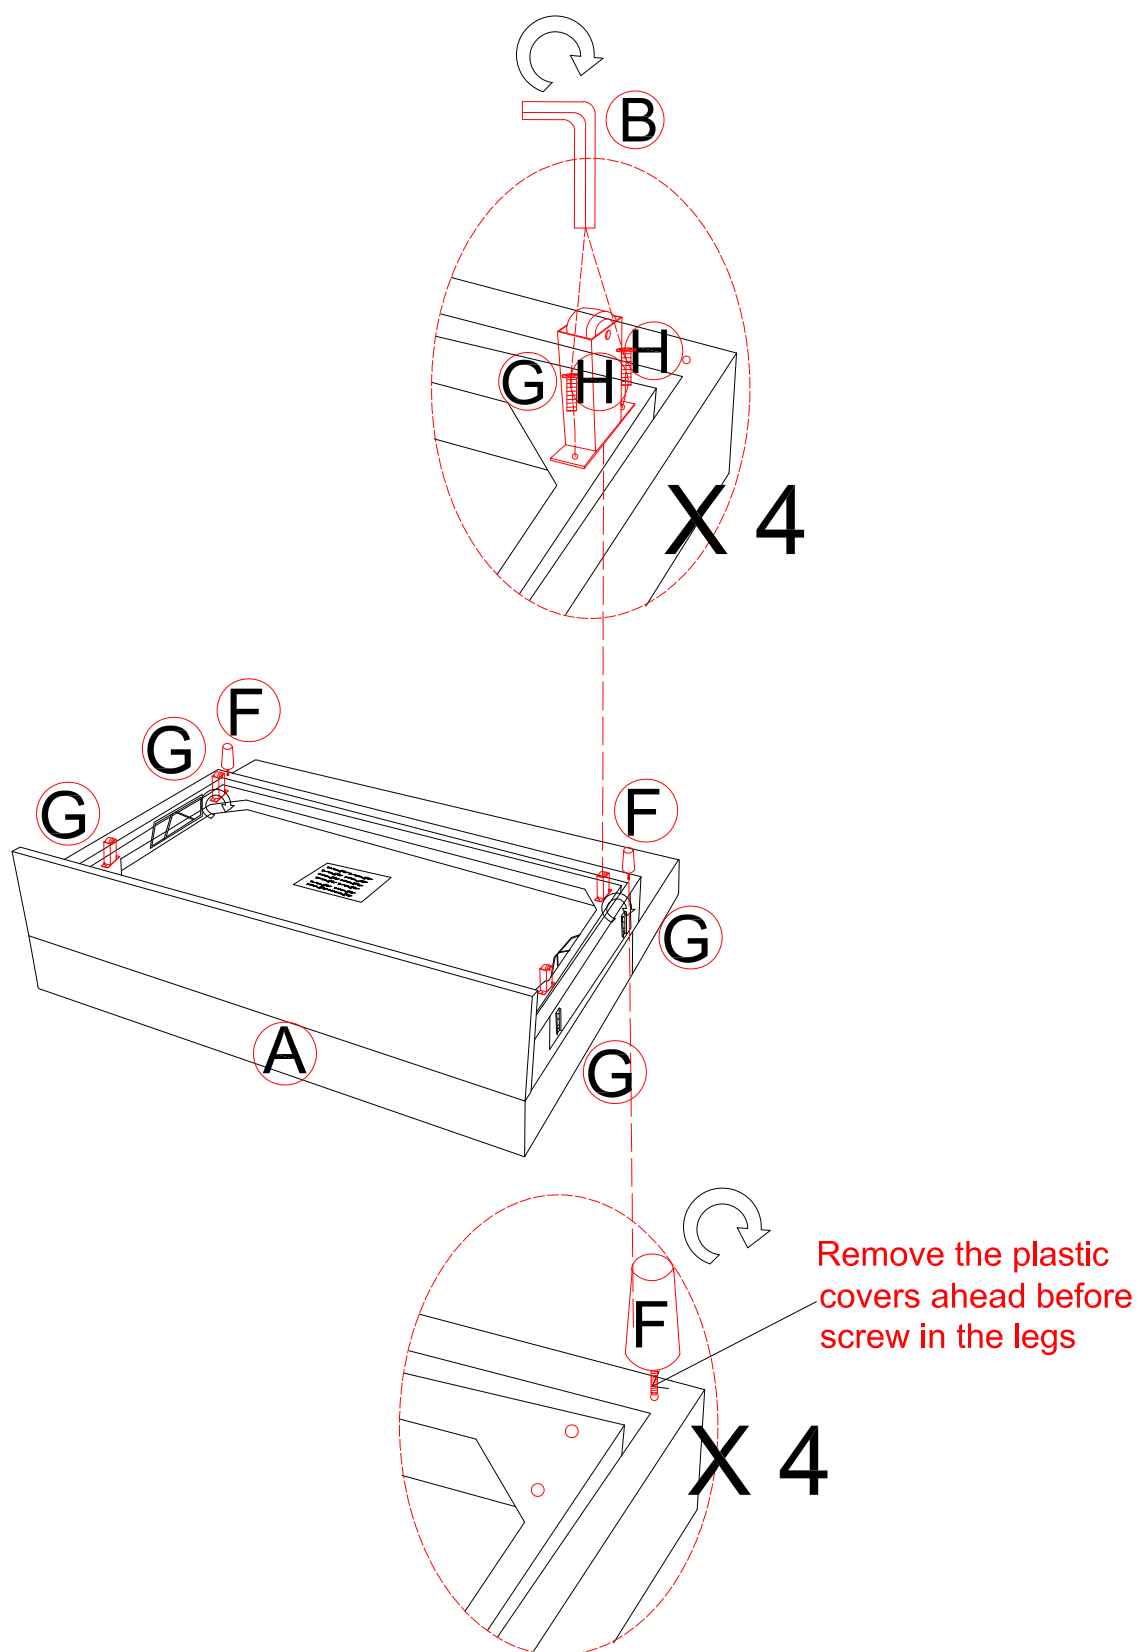


STEP 3

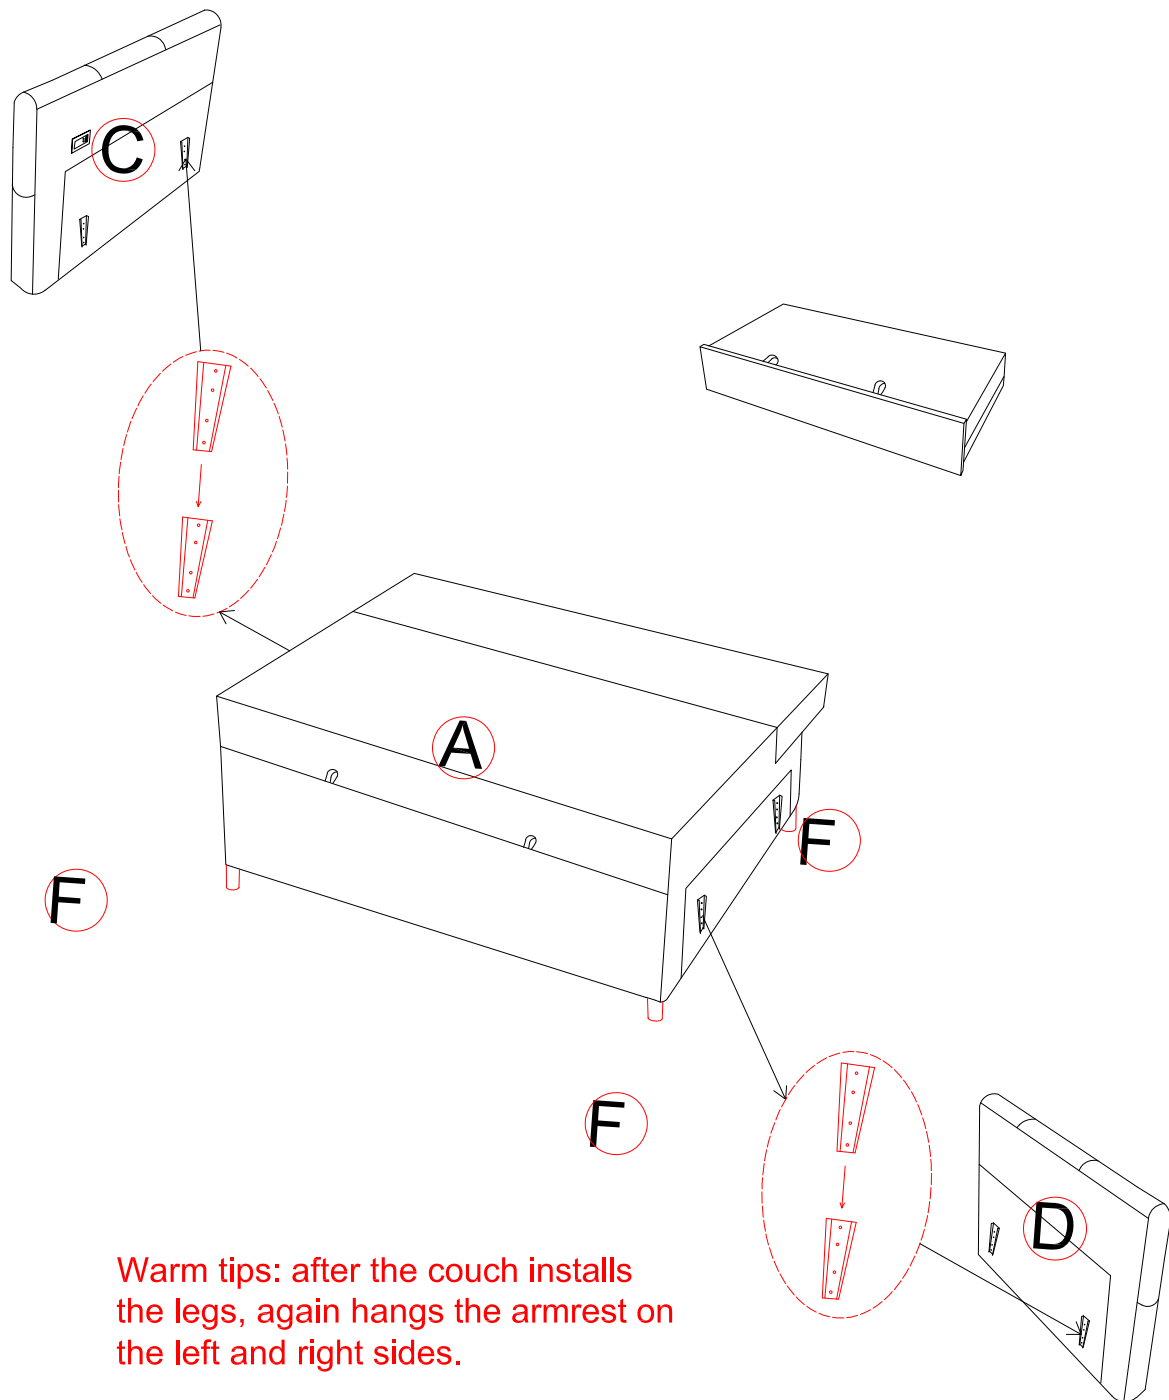


Warm tips: after the couch installs the legs, again hangs the armrest on the left and right sides.

STEP 4

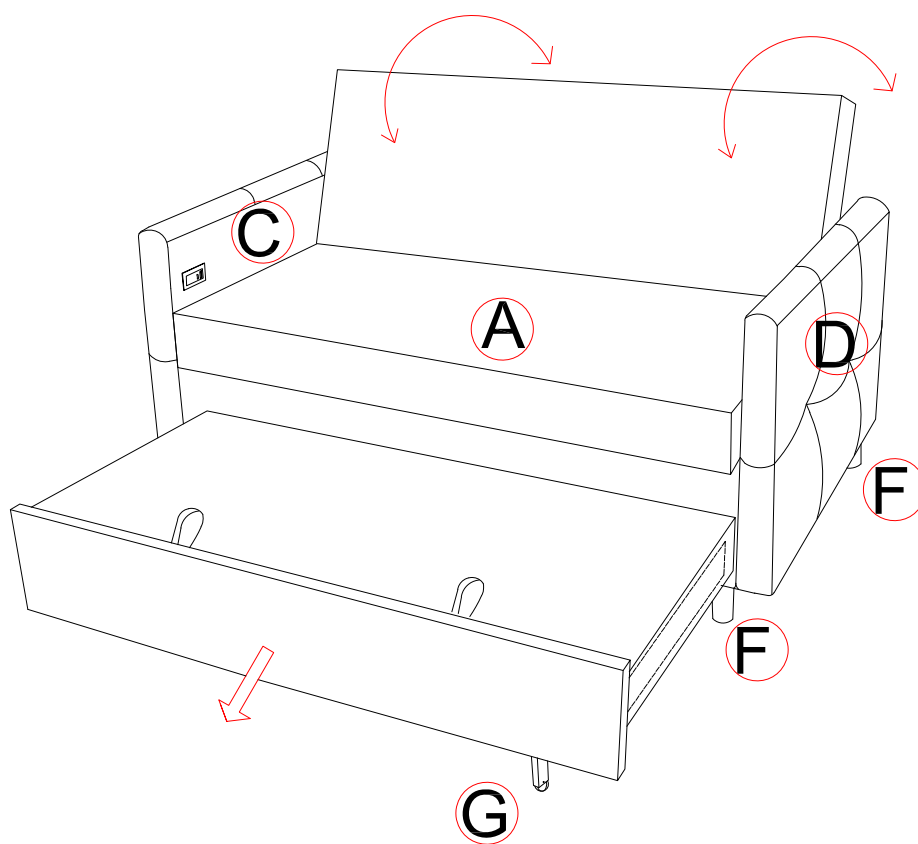


The trundle bed can be pulled out.

STEP 5

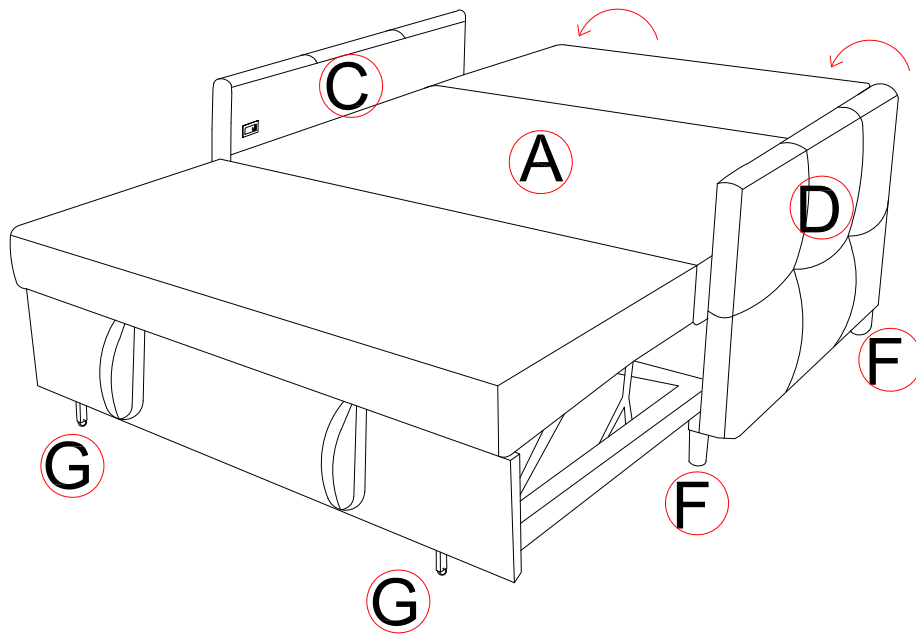

The backrest can be flat.

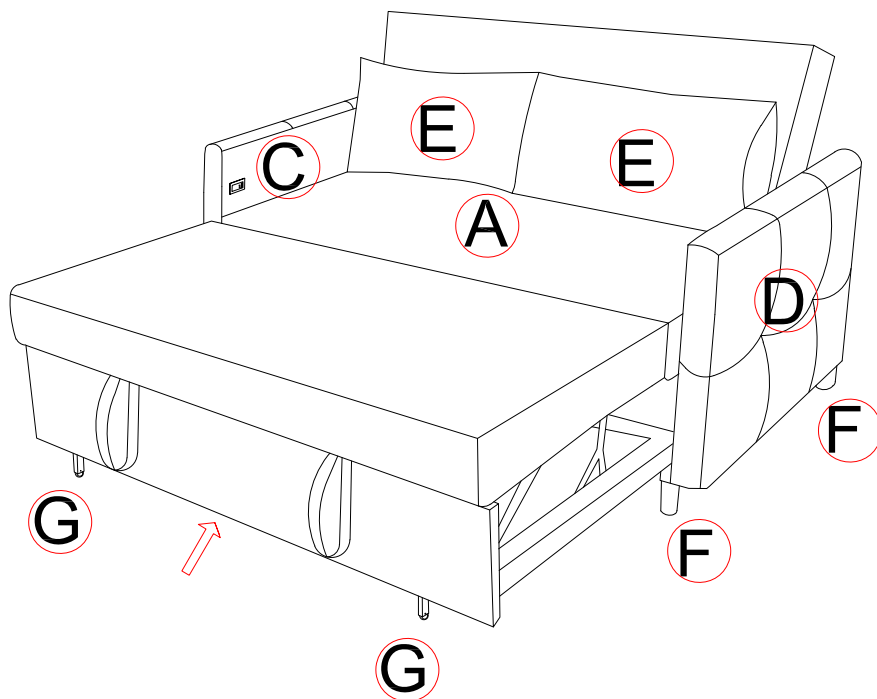

STEP 6

