


NFJ010





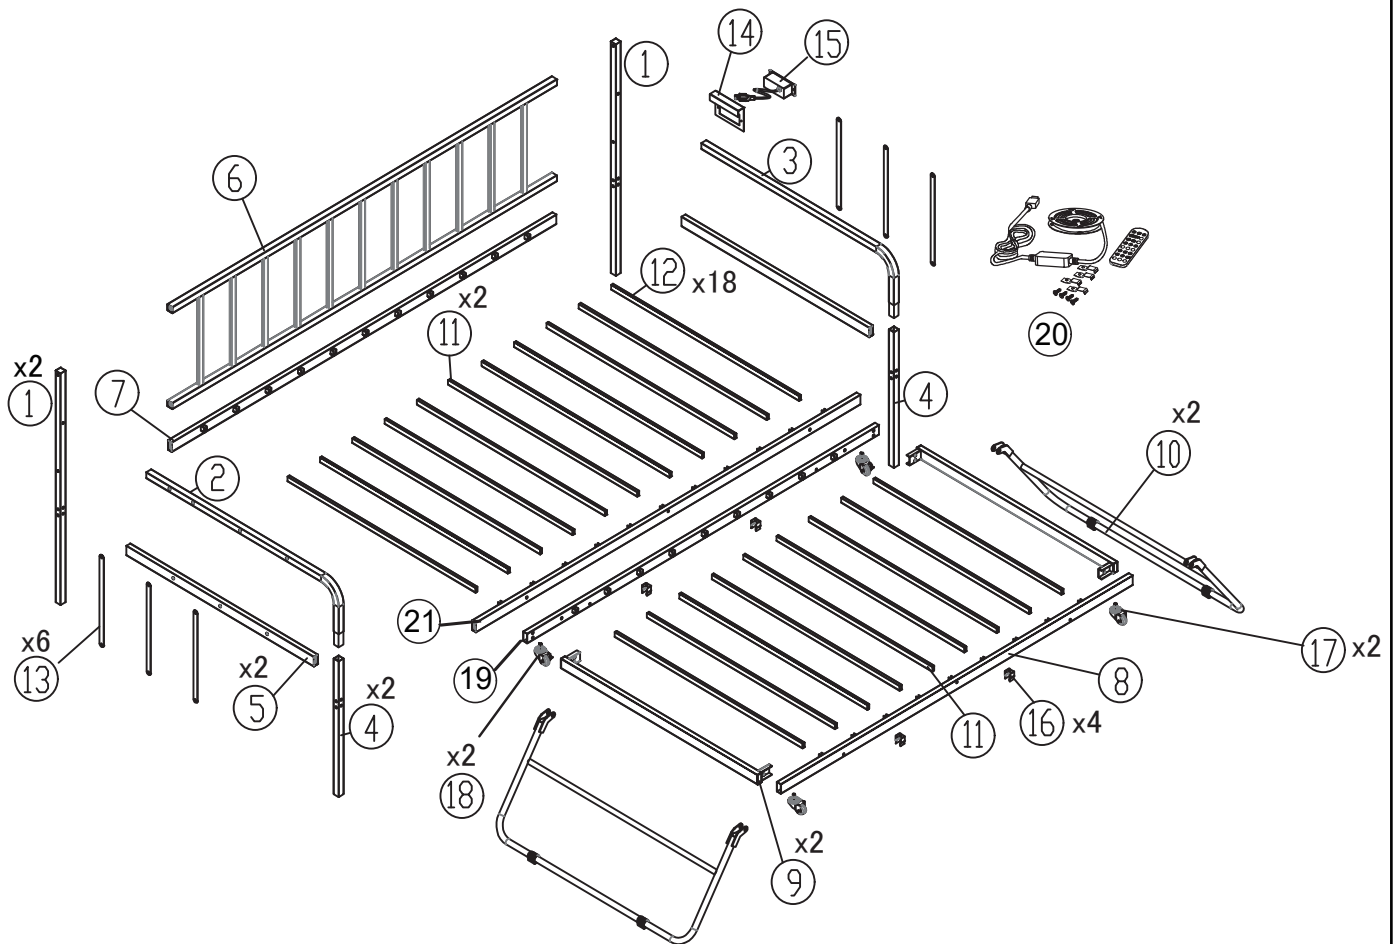





Any questions please contact us
lubedcy@163.com

EXPLODED DRAWING:



















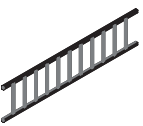




1. To ensure smooth assembly, we kindly advise that you read the entire manual and carefully adhere to the instructions provided.
2. The installation of this bed frame necessitates a minimum of two individuals to ensure a successful setup.
3. It is recommended that the assembly take place on a level ground in order to maintain optimal balance.
4. Please refrain from tightening the screws until the installation is fully completed.

HARDWARE


A	 M4X8	2
B	 M6x12mm	29
C	 M6x40mm	30
D	 M6x60mm	2
E	 M6	6
F	 4#	1
G	 4#	1
H	 4#	1

Accessory List




	①	2pcs
	②	1 pc
	③	1 pc
	④	2 pcs
	⑤	2 pcs
	⑥	1 pc
	⑦	1 pc
	⑧	1pc
	⑨	2 pcs
	⑩	2 pcs
	⑪	2 pcs
	⑫	18 pcs
	⑬	6 pcs
	⑭	1 pc
	⑮	1 pc
	⑯	4 pcs
	⑰	2 pcs
	⑱	2 pcs
	⑲	1pc
	⑳	1 pc
	㉑	1pc


Step:1

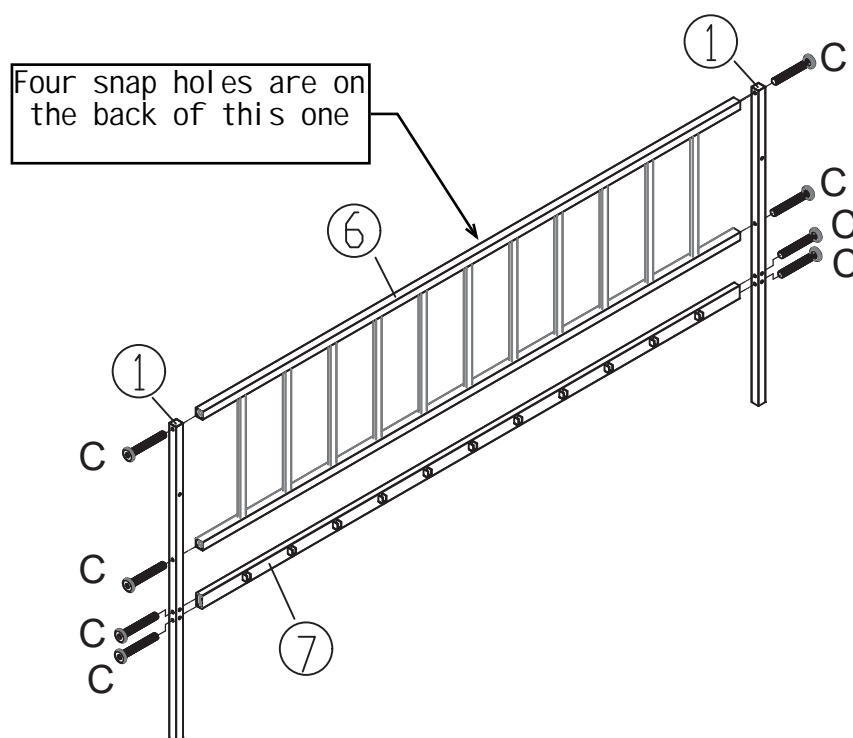C	 M6x40mm	8
G	 4#	1





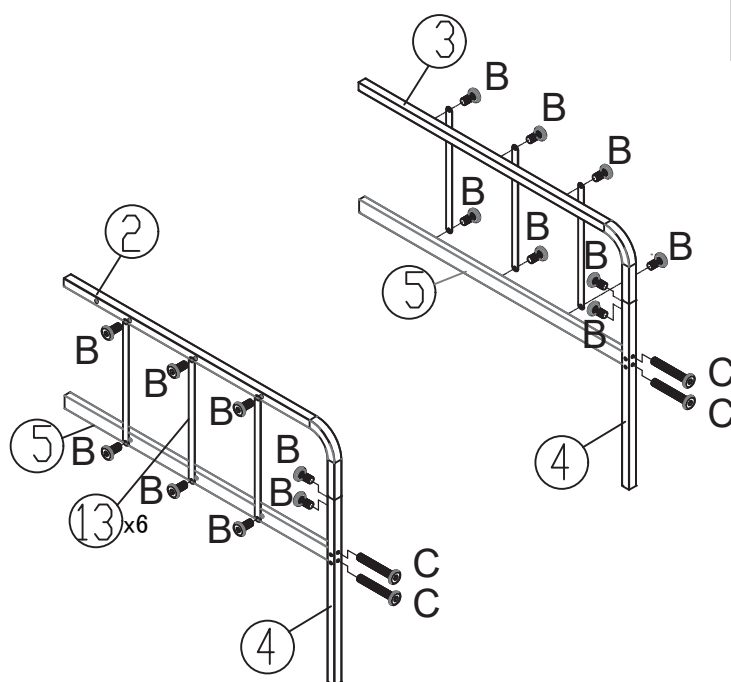

Step:2


C	 M6x40mm	4
B	 M6x12mm	16
G	 4#	1





Step:3


⚠ Note: Do not fully tighten screws(Cx6)
on one side before installing the other side.

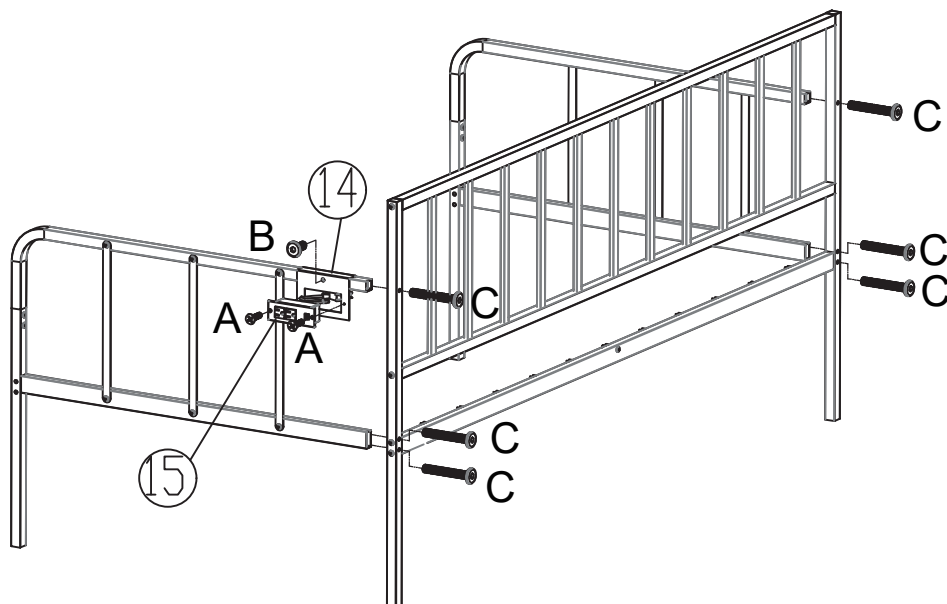C	 M6x40mm	6
B	 M6x12mm	1
A	 M4x12mm	2
H	 4#	1






Step:4

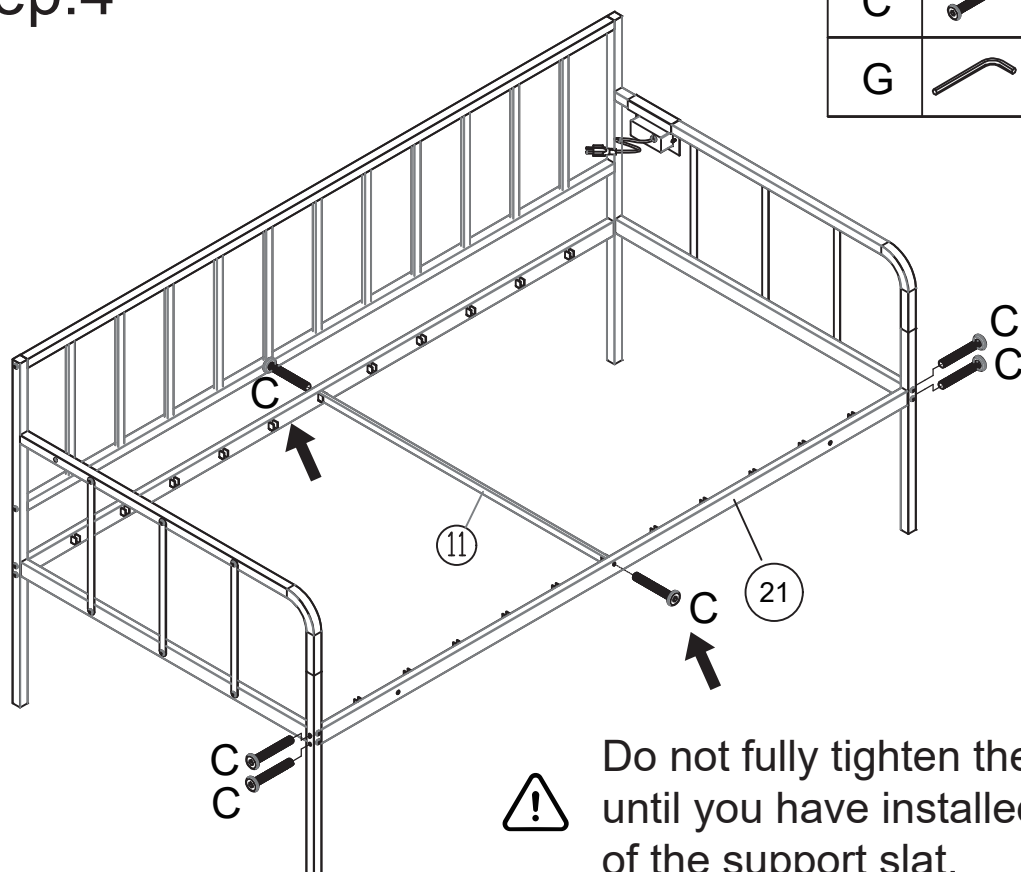
C	 M6x40mm	6
G	 4#	1



Do not fully tighten the screws(Cx2)
until you have installed the rest
of the support slat.



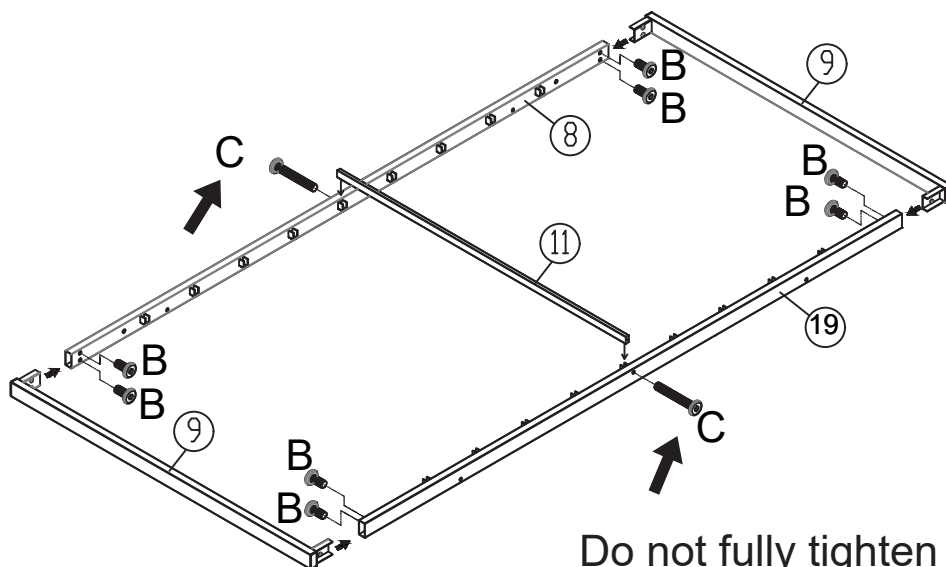

Step:5


C	 M6x40mm	2
B	 M6x12mm	8
G	 4#	1



Do not fully tighten the screws(Cx2) until you have installed the rest of the support slat.


Step:6

C	 M6x40mm	4
E	 M6	4
G	 4#	1
F	 4#	1

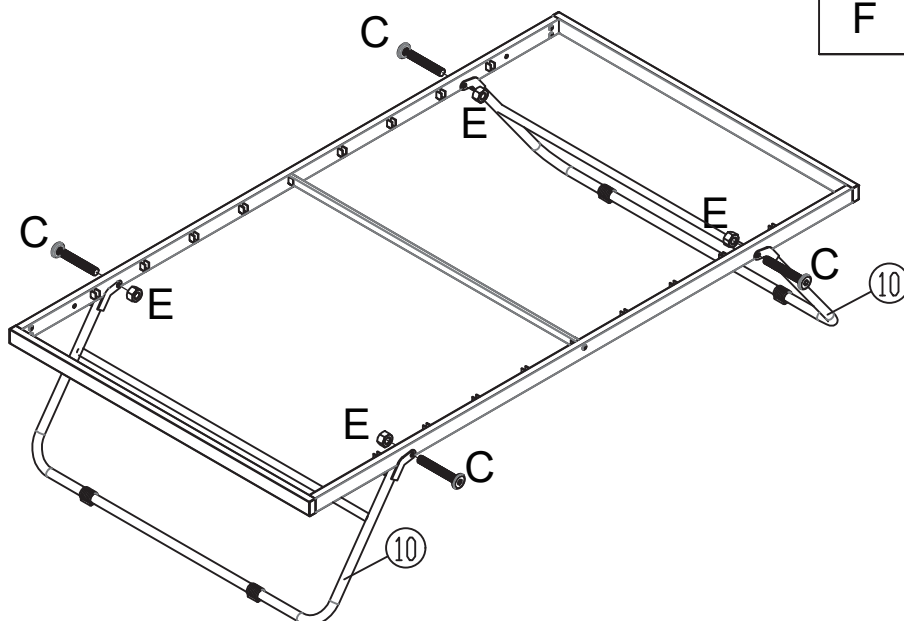



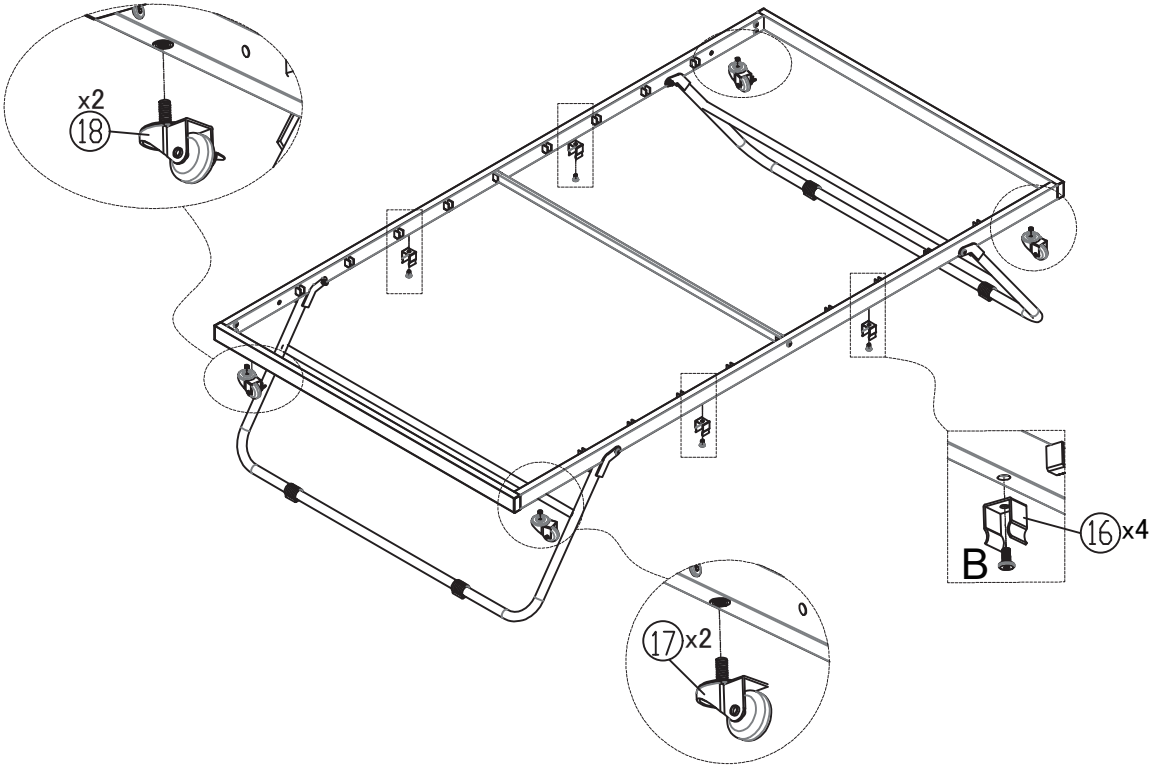


Step:7

B	 M6x12mm	4
G	 4#	1




Step:8


D	 M6x60mm	2
E	 M6	2
G	 4#	1
F	 4#	1

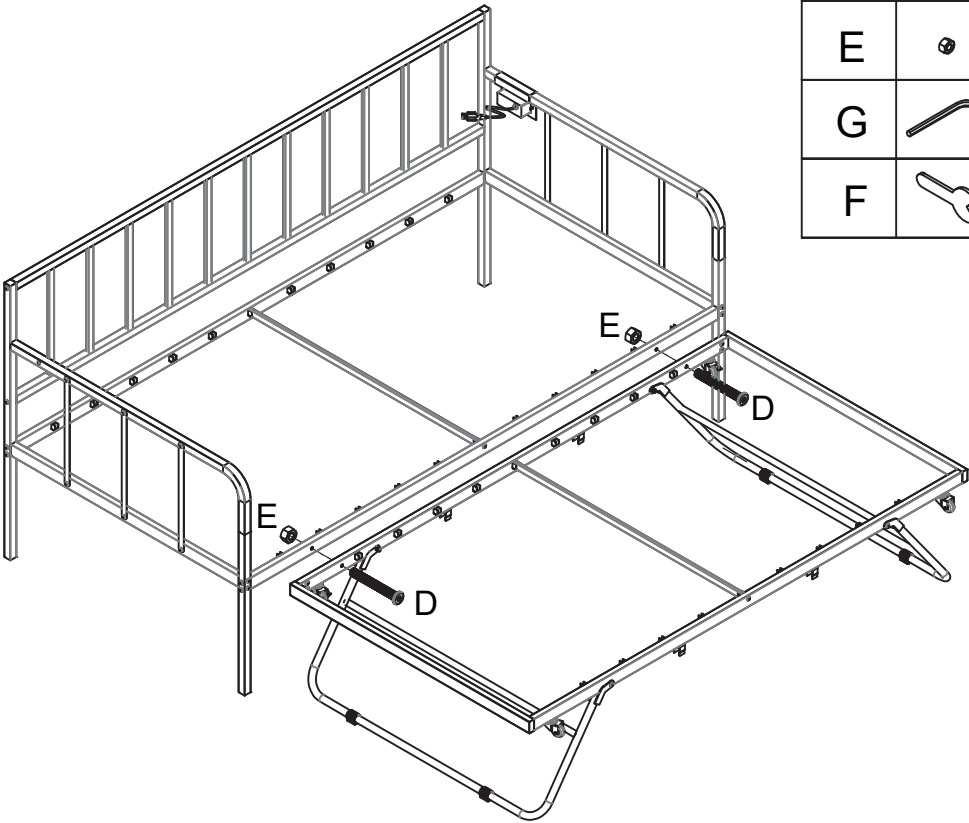

Step:9

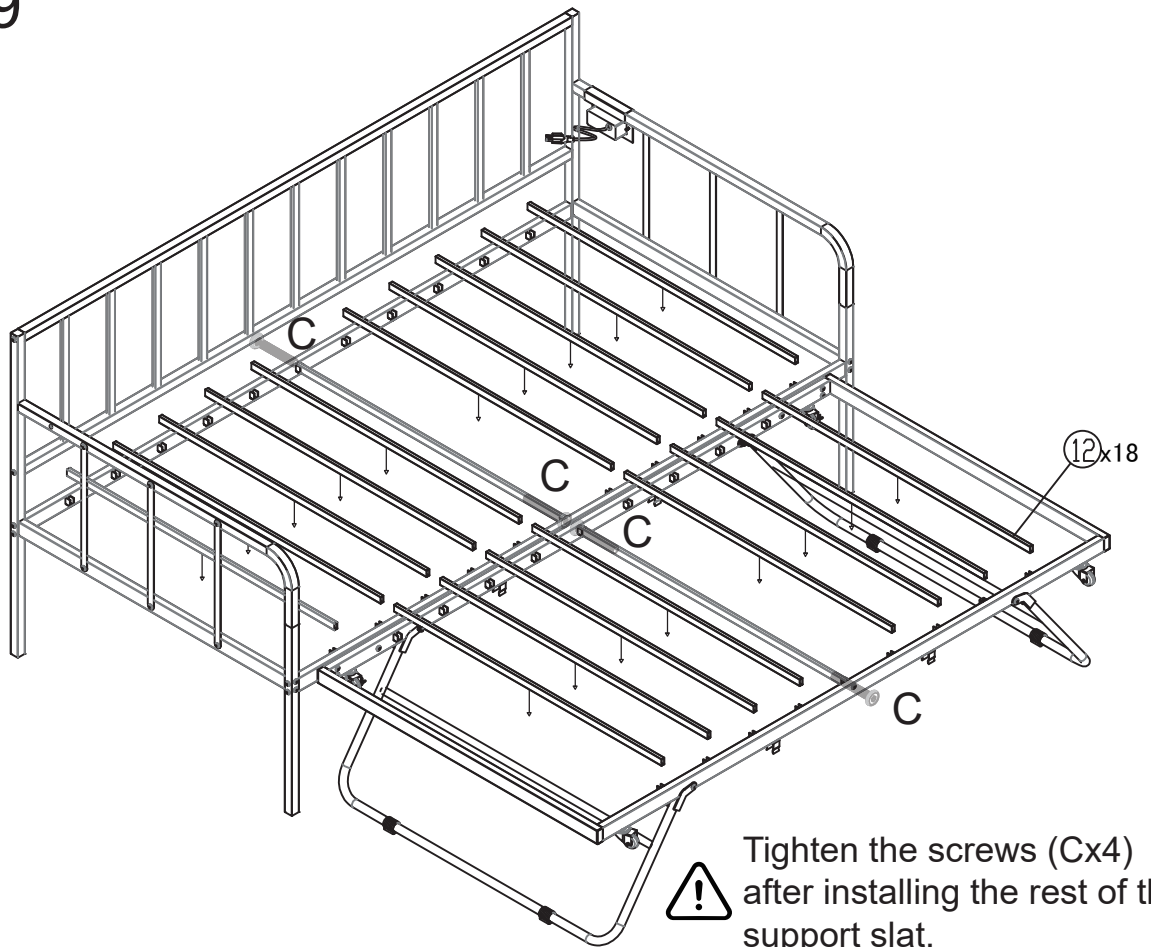

Step:10

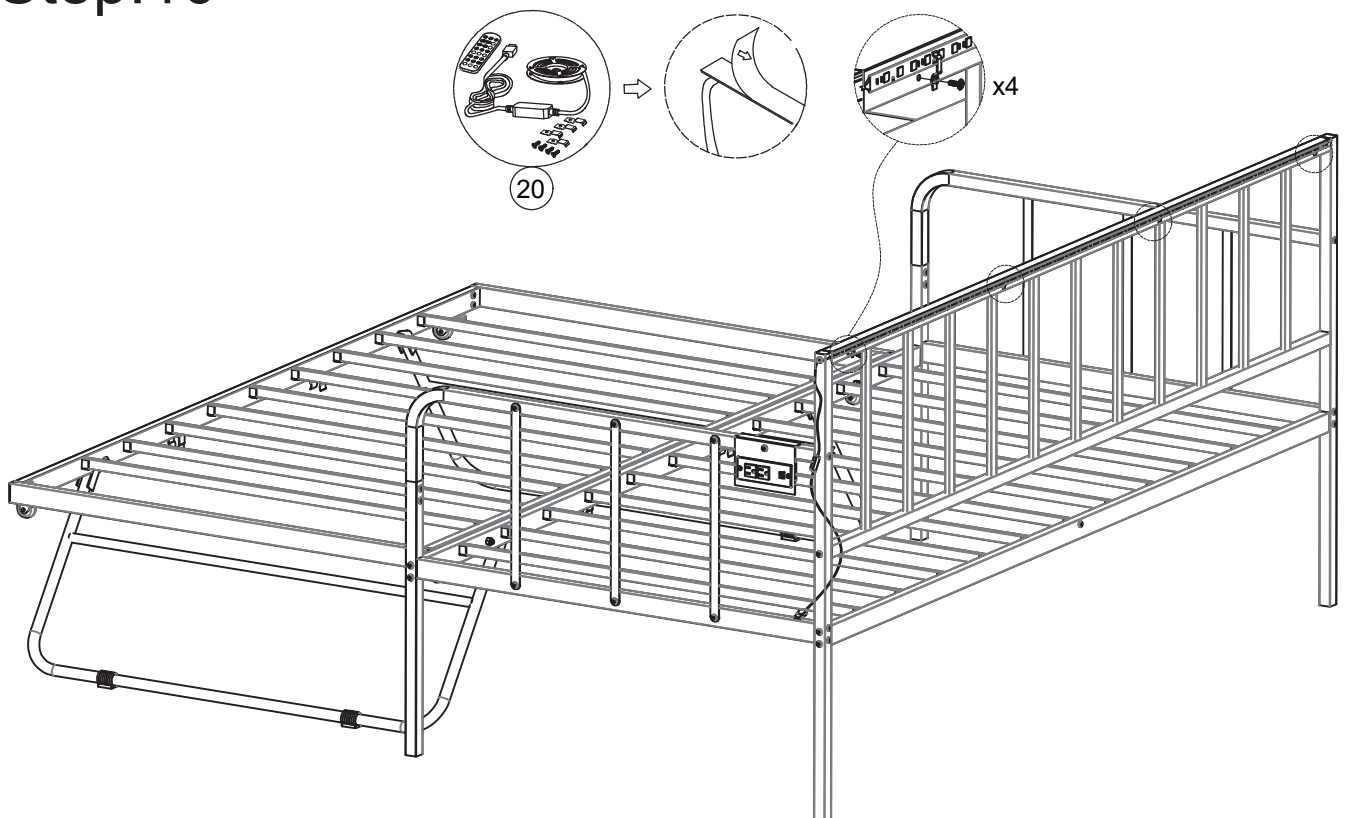

AFTER-SALE SERVICE

If you have any suggestions for our products or find that the products have quality problems, please contact us first, our after-sales team will reply you within 24 hours, and we will do our best to give you solutions until you are satisfied.

Guaranteed Customer Service

Your shopping experience is very important to us!
Feel unsatisfied? **Contact us!**
Have any questions? **Contact us!**

Wanna share your experience with our products?
Share your pictures with us.

Any suggestions? **Contact us!**
We gotcha back!



E-mail: lubedcy@163.com