



Ⓐ x58 ⓐ x58



Ⓑ x48 Ⓒ x24




Ⓓ x2


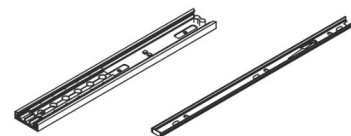


Ⓔ x12 Ⓕ x12


### SAFETY RELEASE TAB

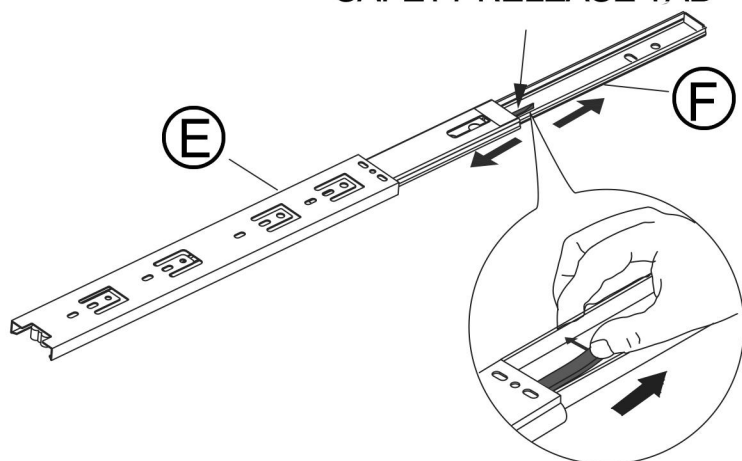


E and F are shipped together to maintain the oil for the ball bearings. Note that you need to tip up the safety release tab to take out the F part prior to assembly

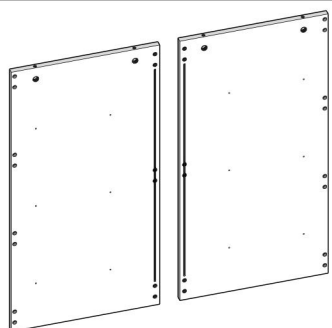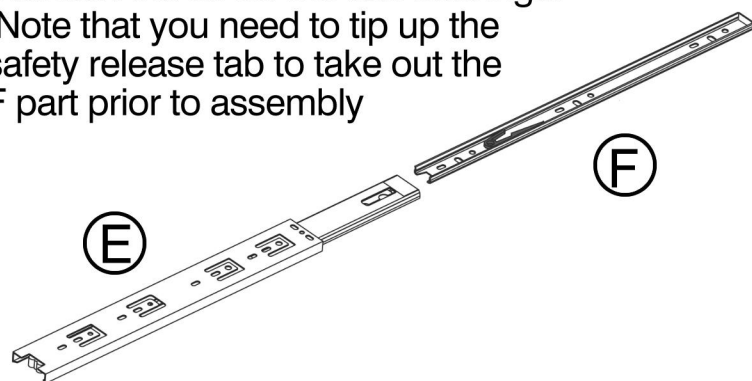


1-left 1-right

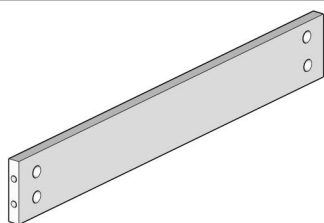


2 X8  
22.71in-L

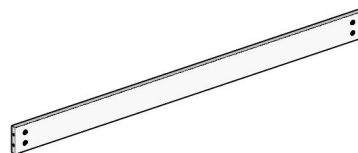


3 X3  
46.06in-L

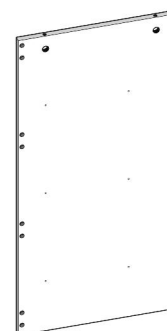


4 X1  
holes on  
both sides

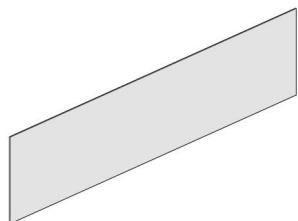


5 X2  
thin board

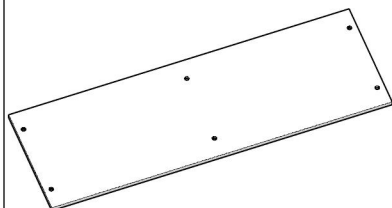


6 X1  
top board 47.24in-L

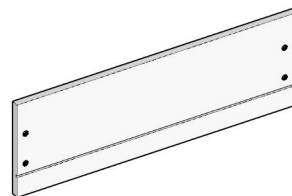


7 X6  
drawer front

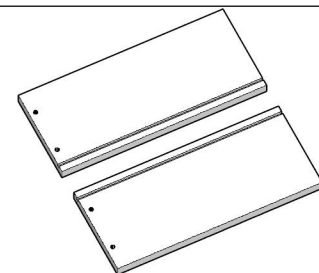



8 X6  
drawer side

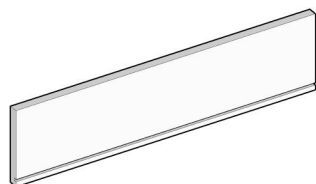


9 X6  
drawer back

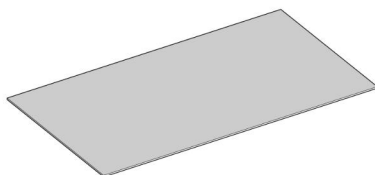


10 X6  
drawer bottom

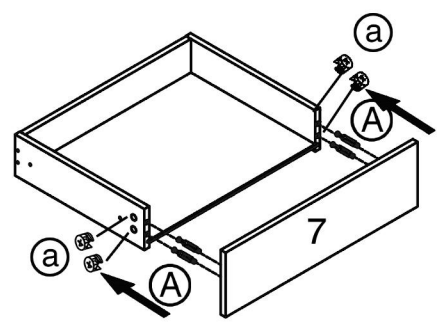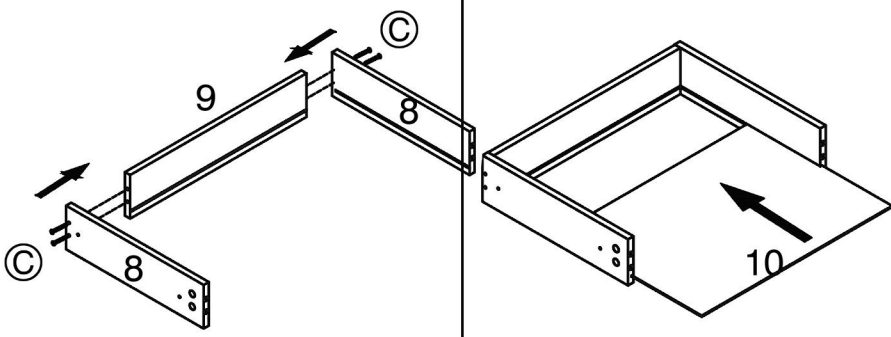


Install 6 drawers using the same method

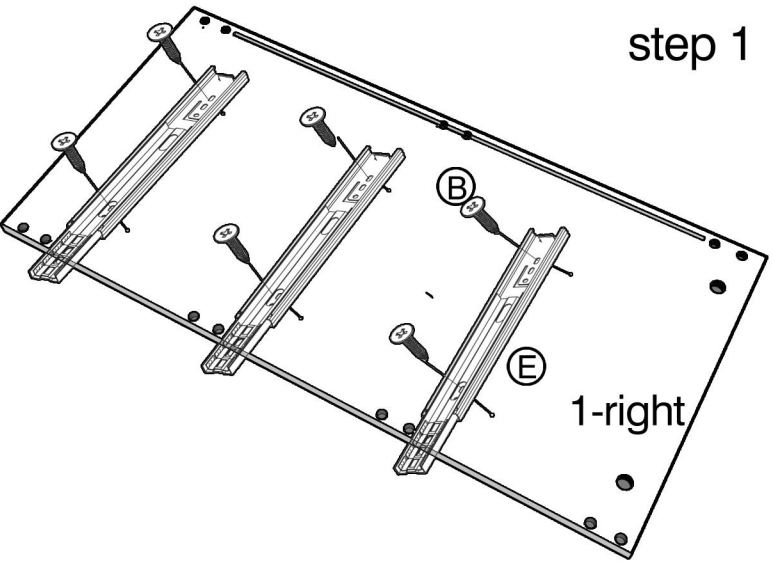


step 1

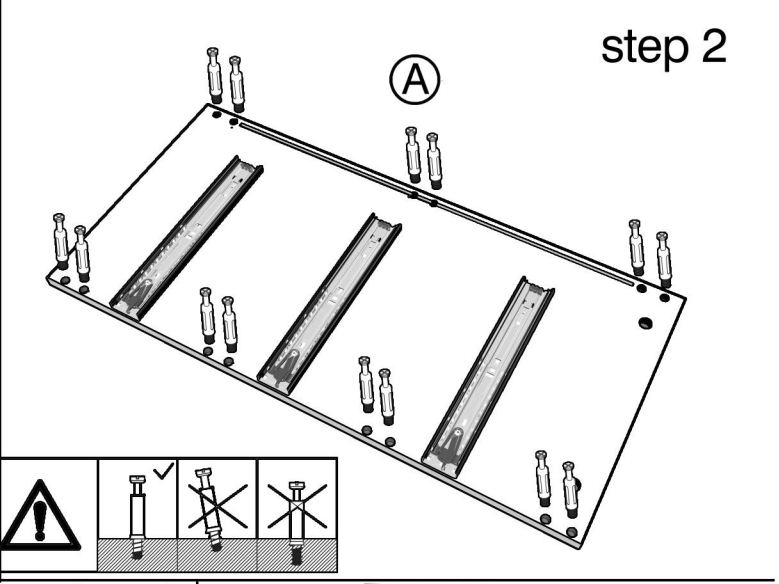


step 2

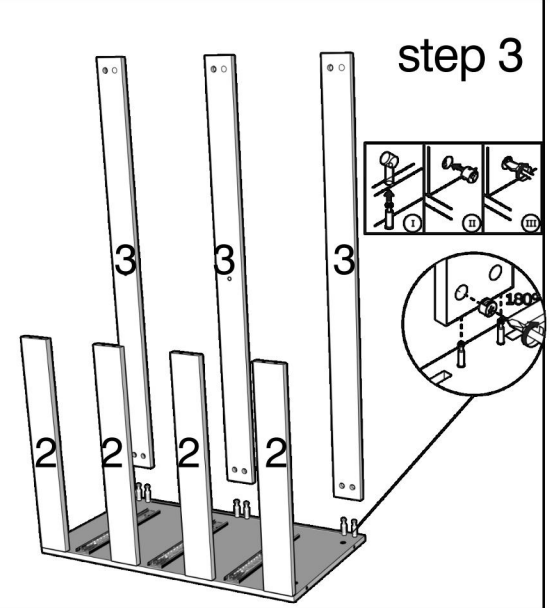


step 3

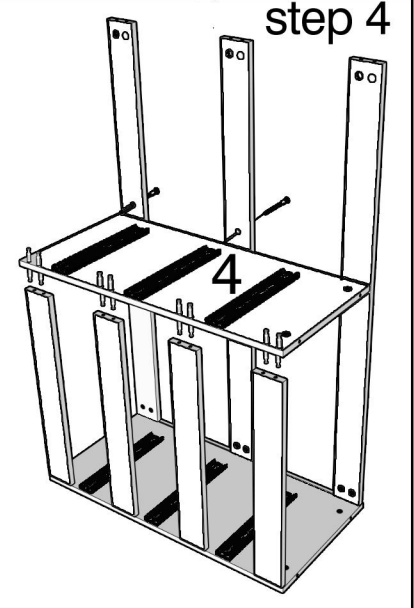


step 4

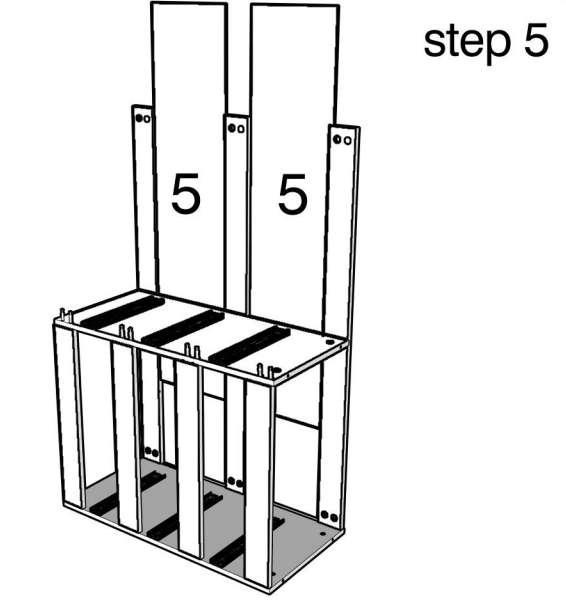


step 5

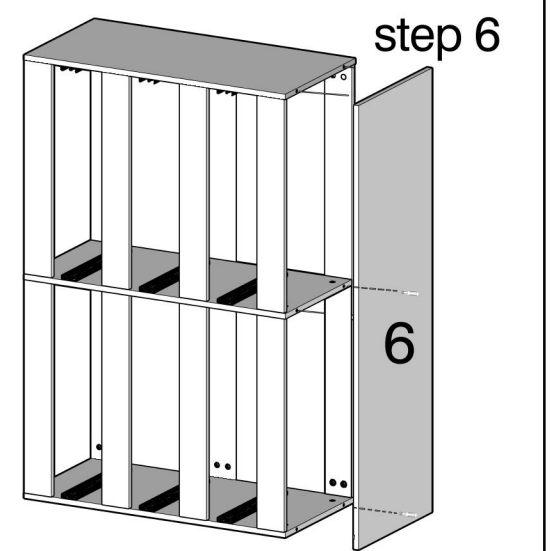

step 6

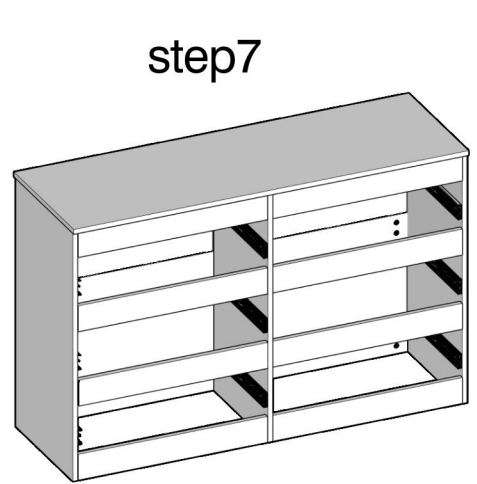

step 7

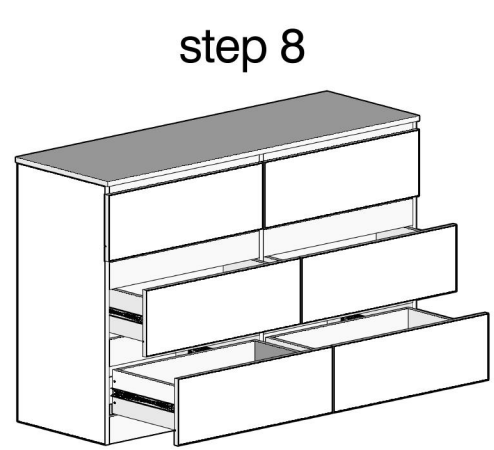

step 8

Drawers need to be distinguished from left and right