
Pet cage

assembly instructions


Product code: BW00188AAB



Component distribution preview

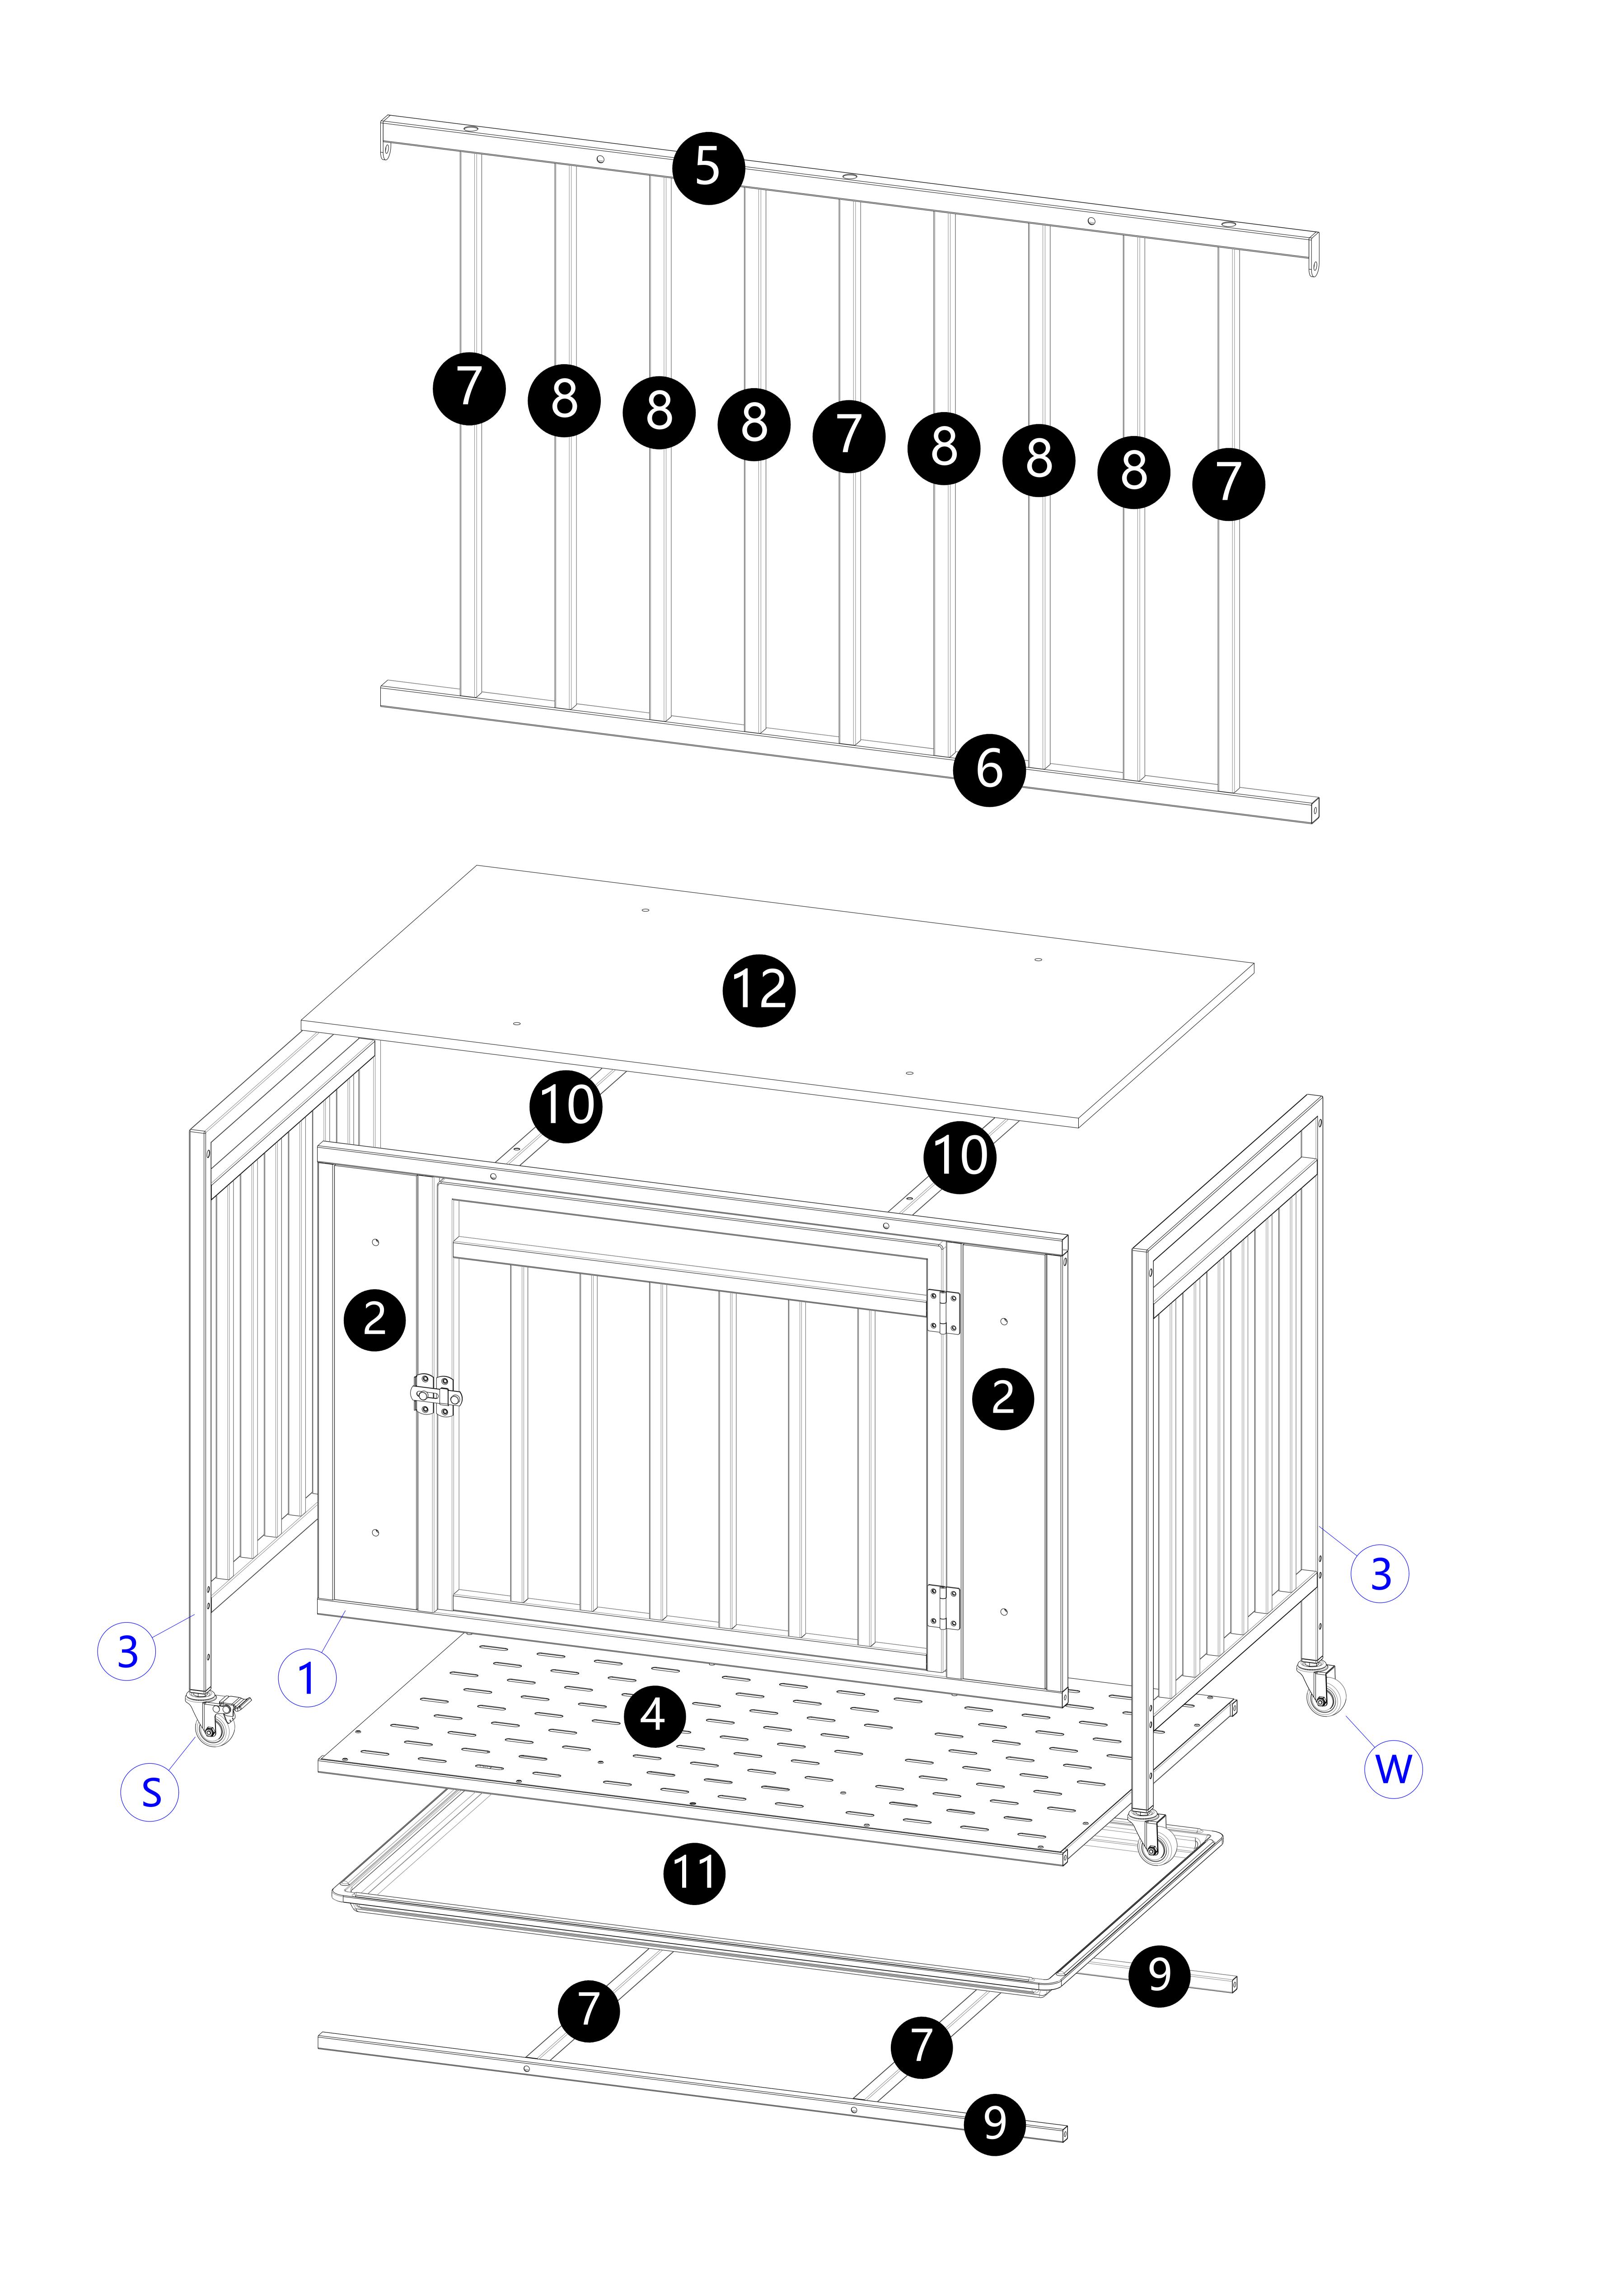


PARTLIT

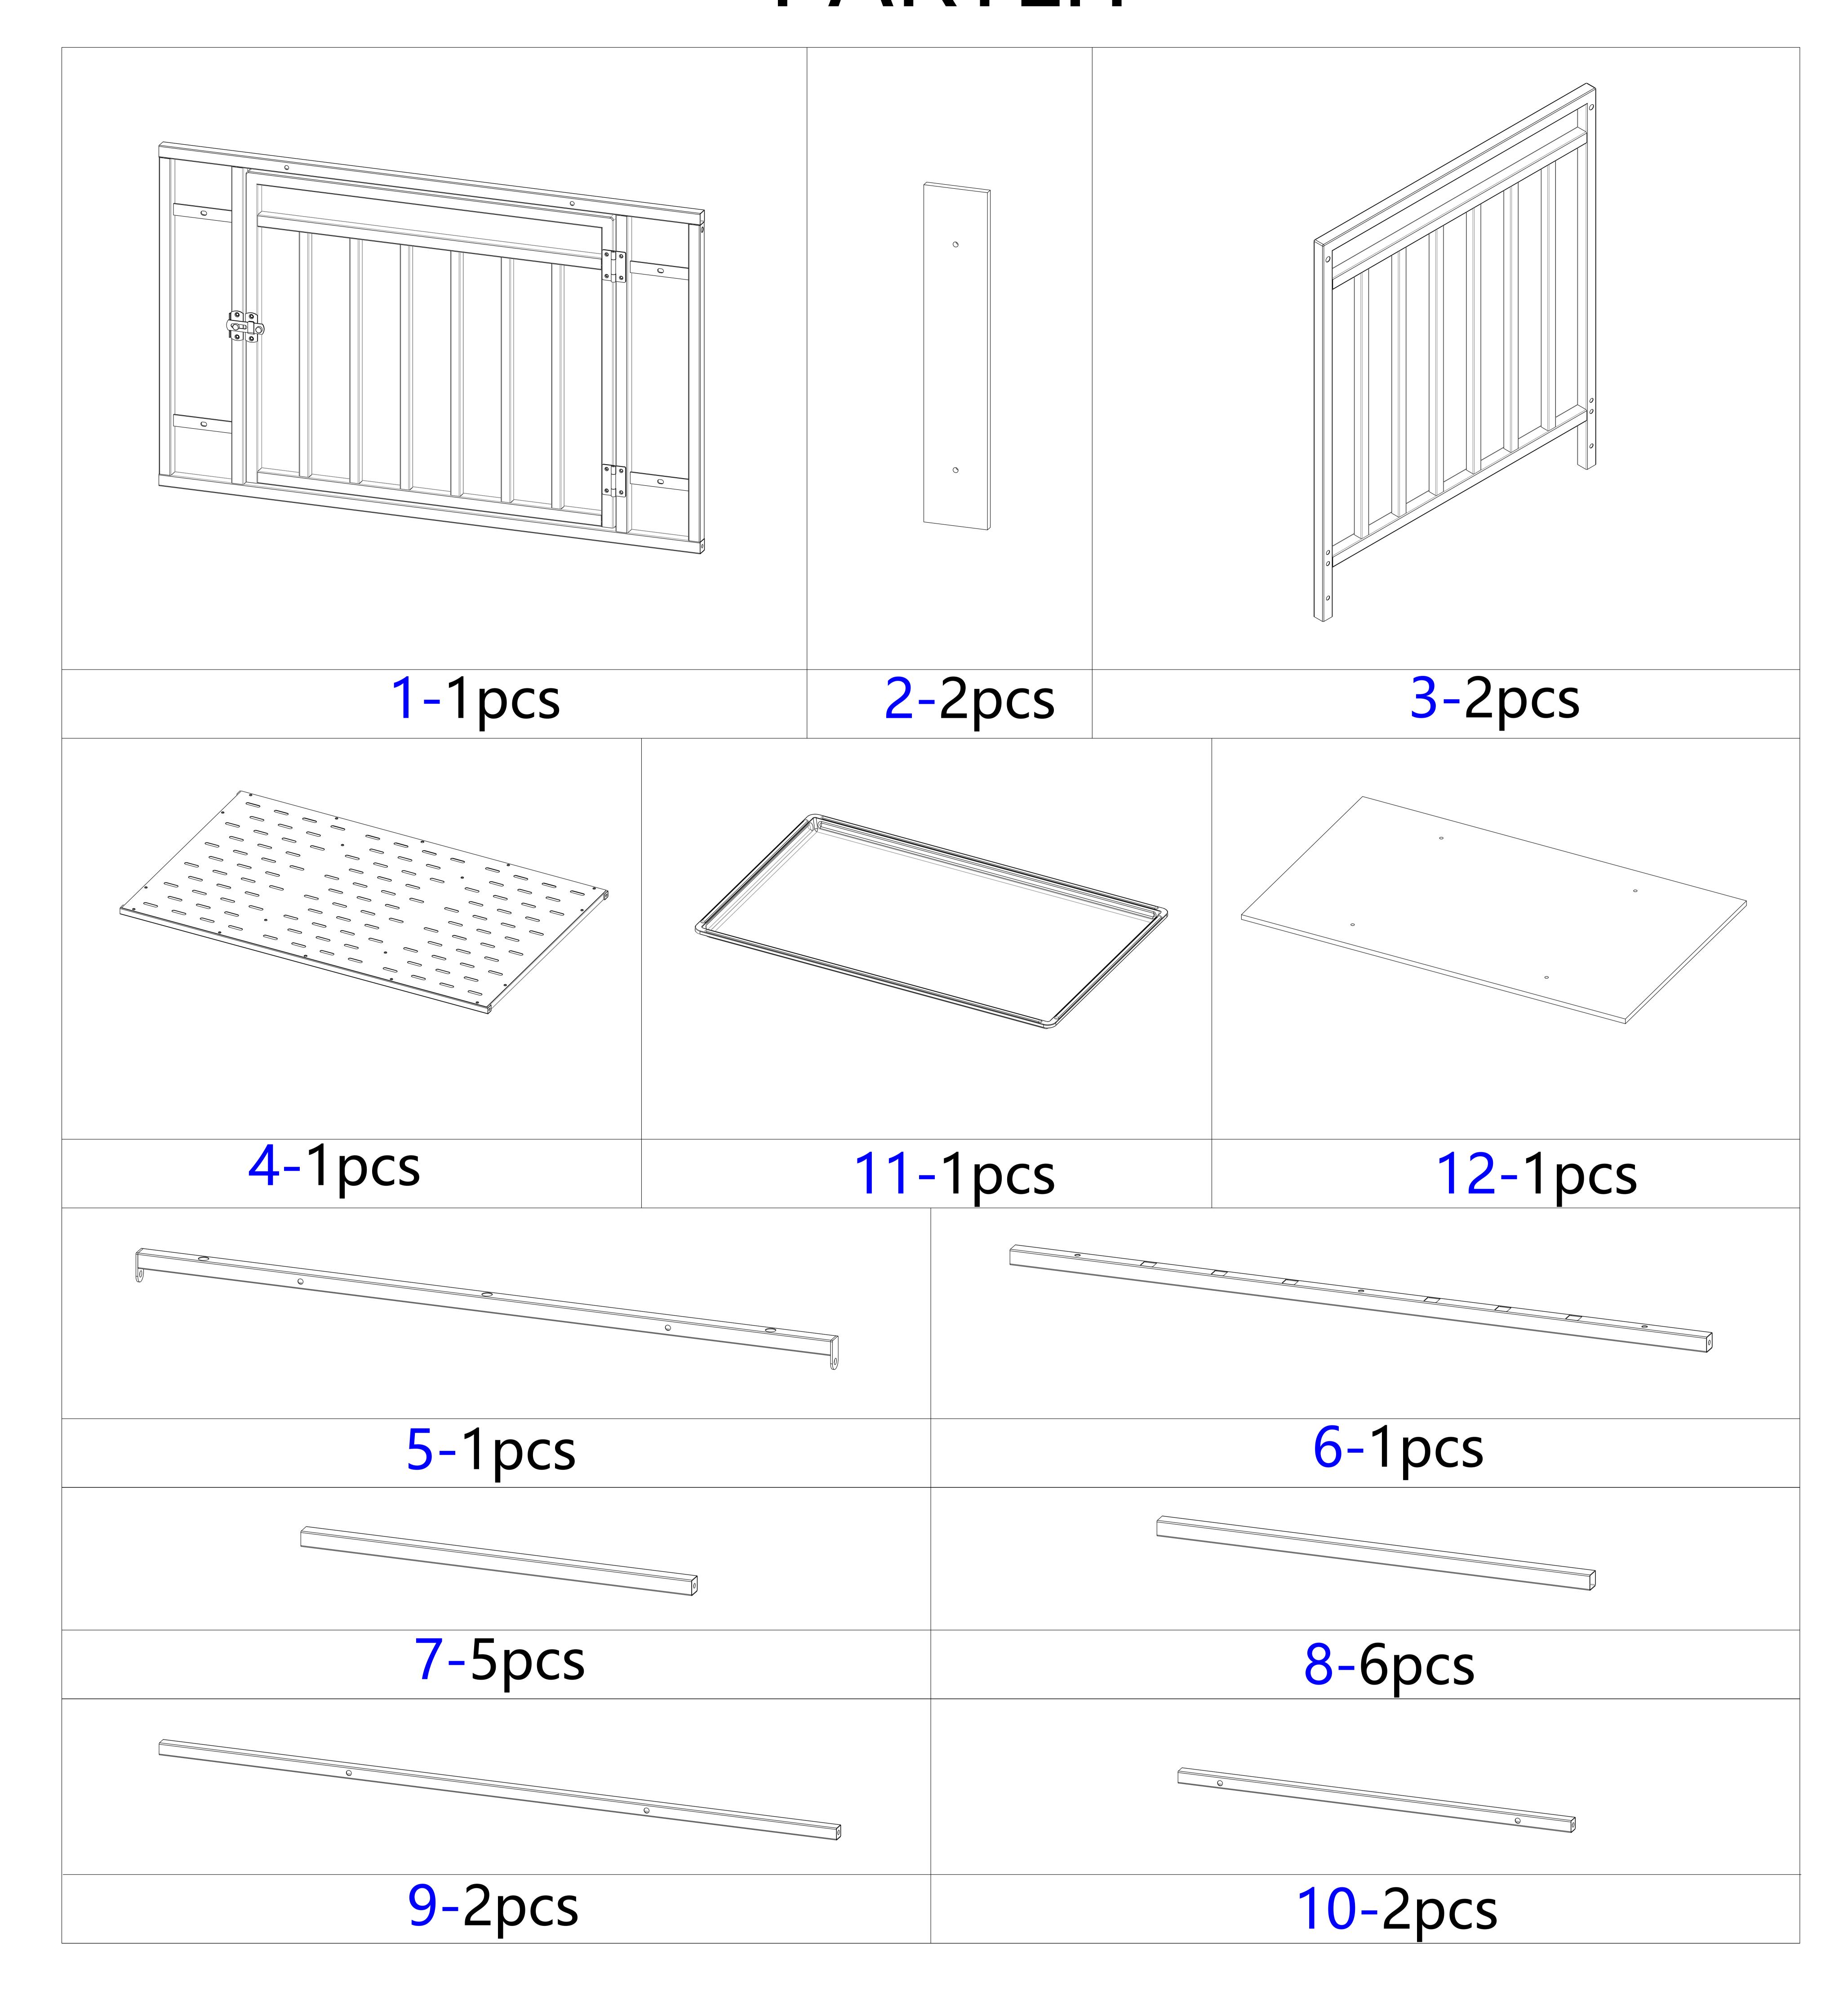


HARDWARE LIST


		G		S
M6*10-6pcs M6*35-15p	осs ФM6*10-8pcs	20F*34-4pcs		
	F			
M6*25-17pcs M6*55-1p	OCS	M4*25-2pcs	M8*1.5in-2pcs	M8*1.5in-2pcs


Step 1: Use hardware A, E, H to connect #1,#2 together.

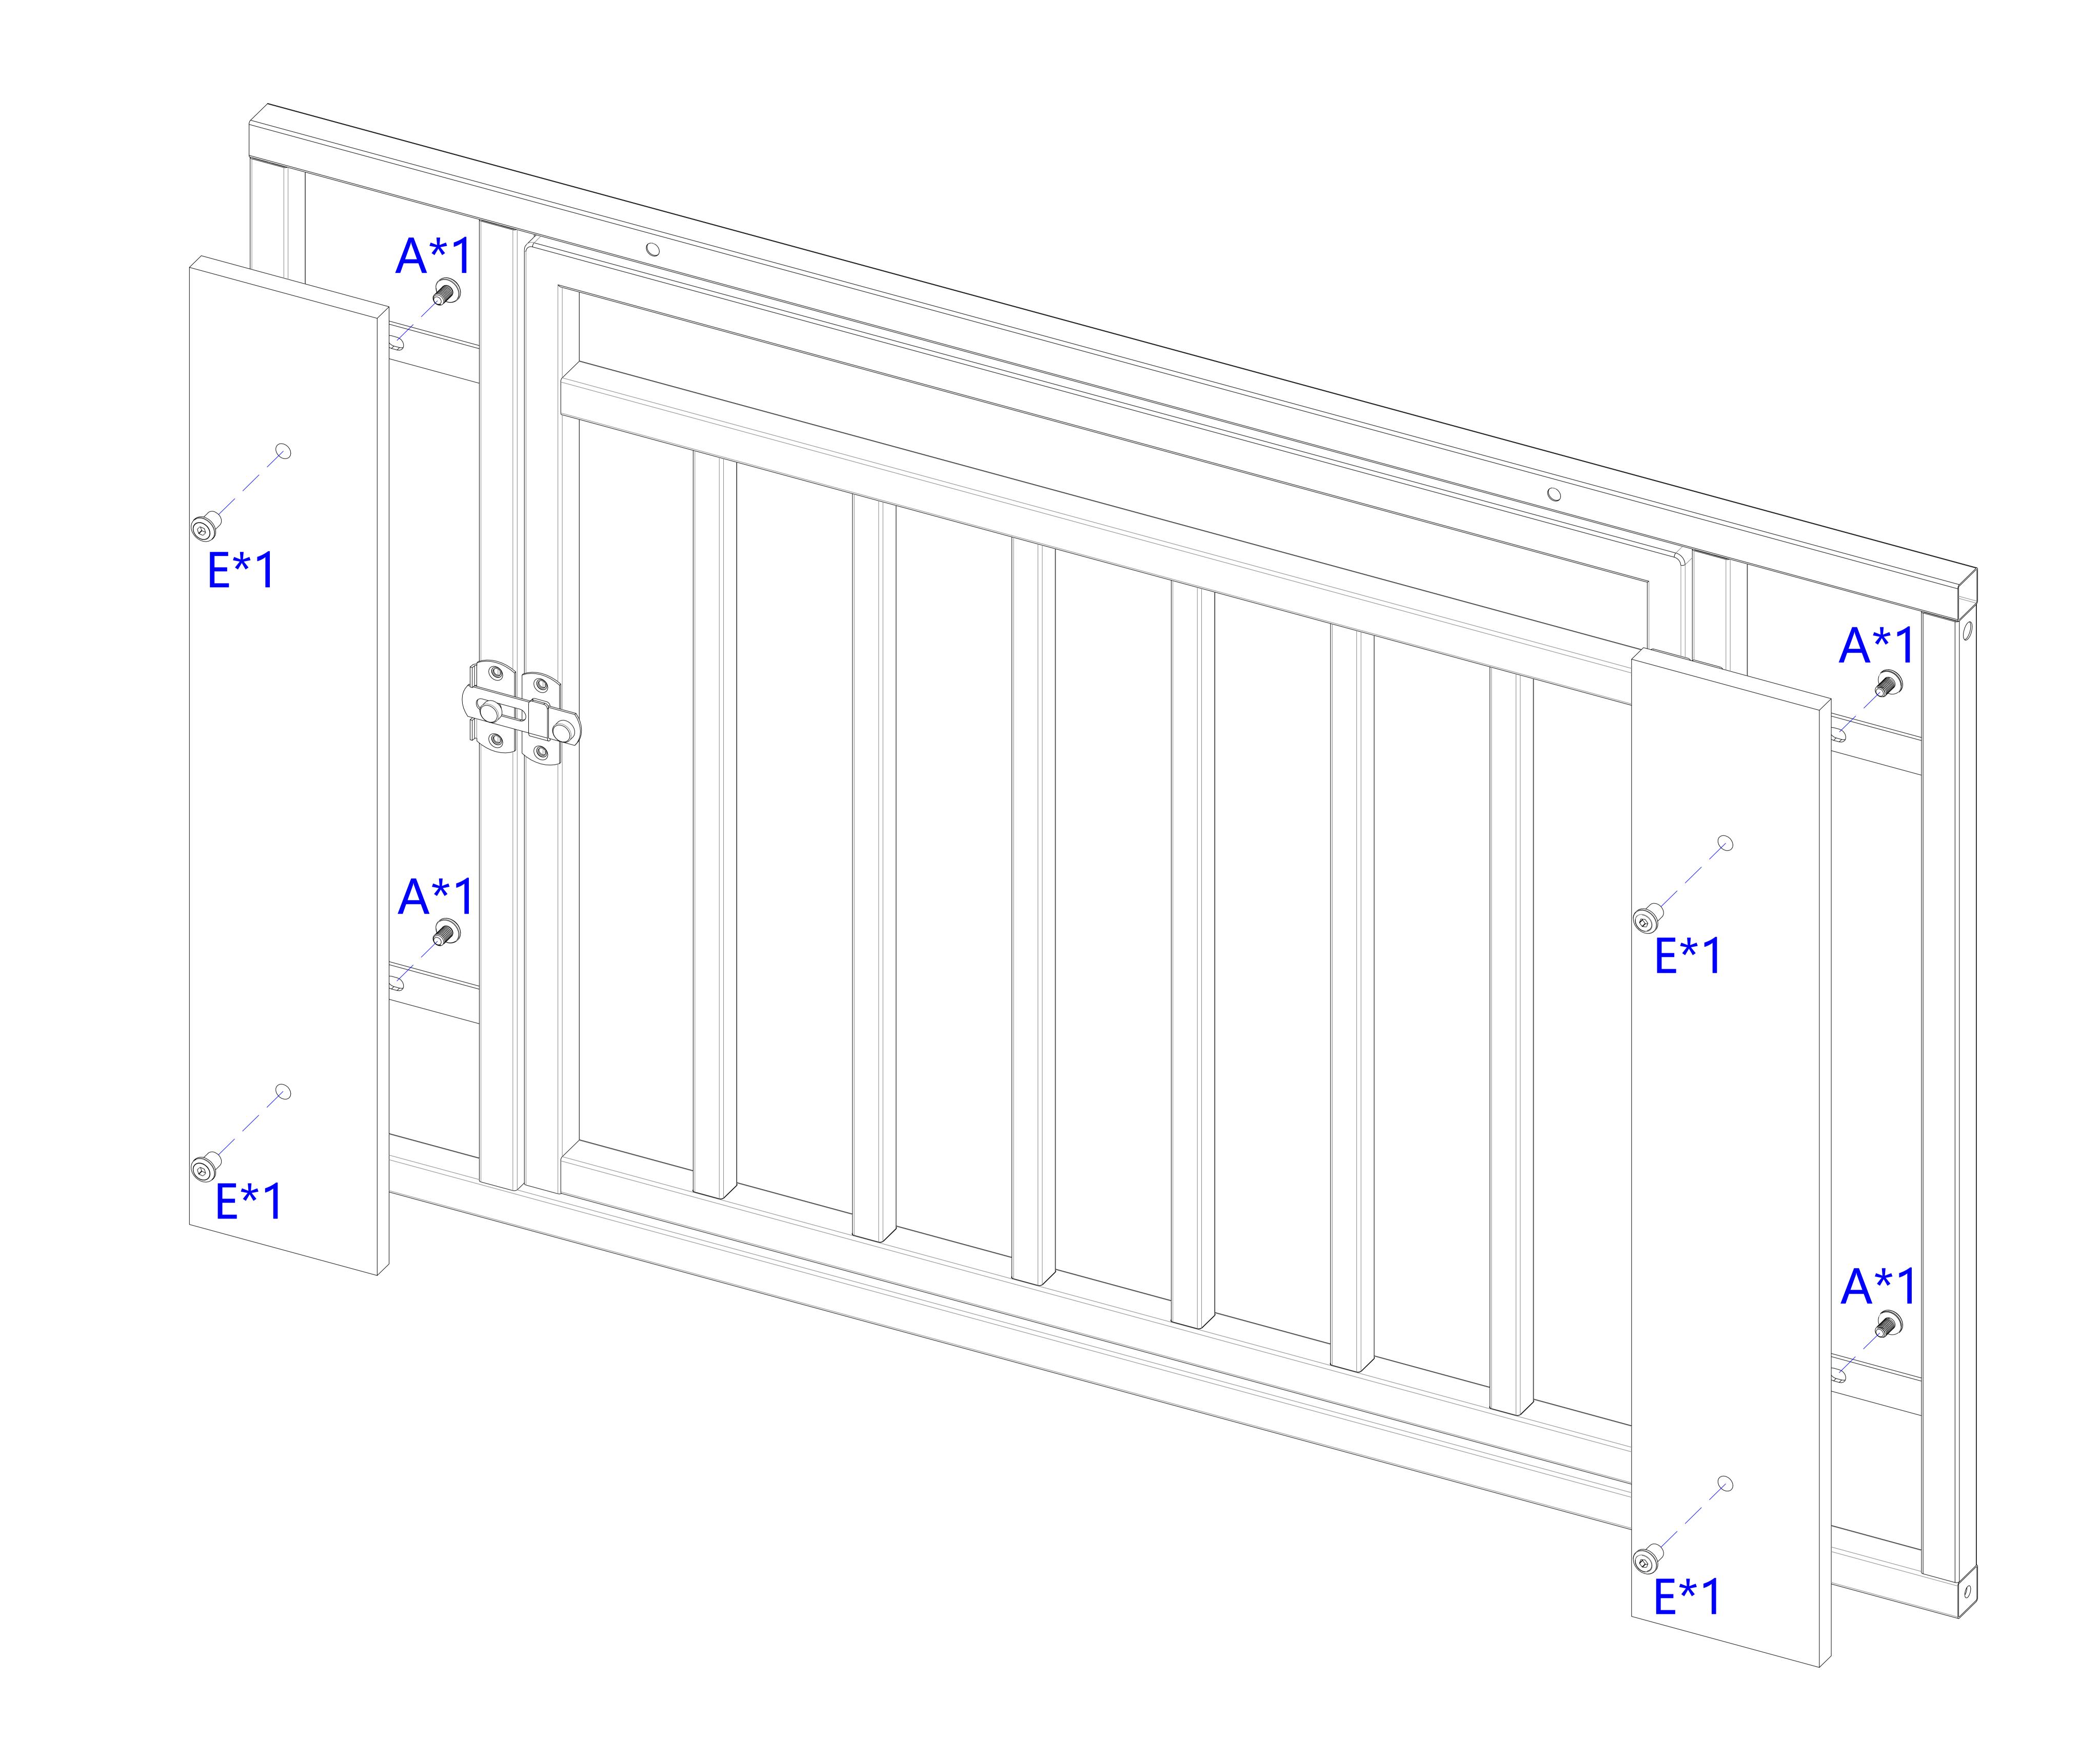

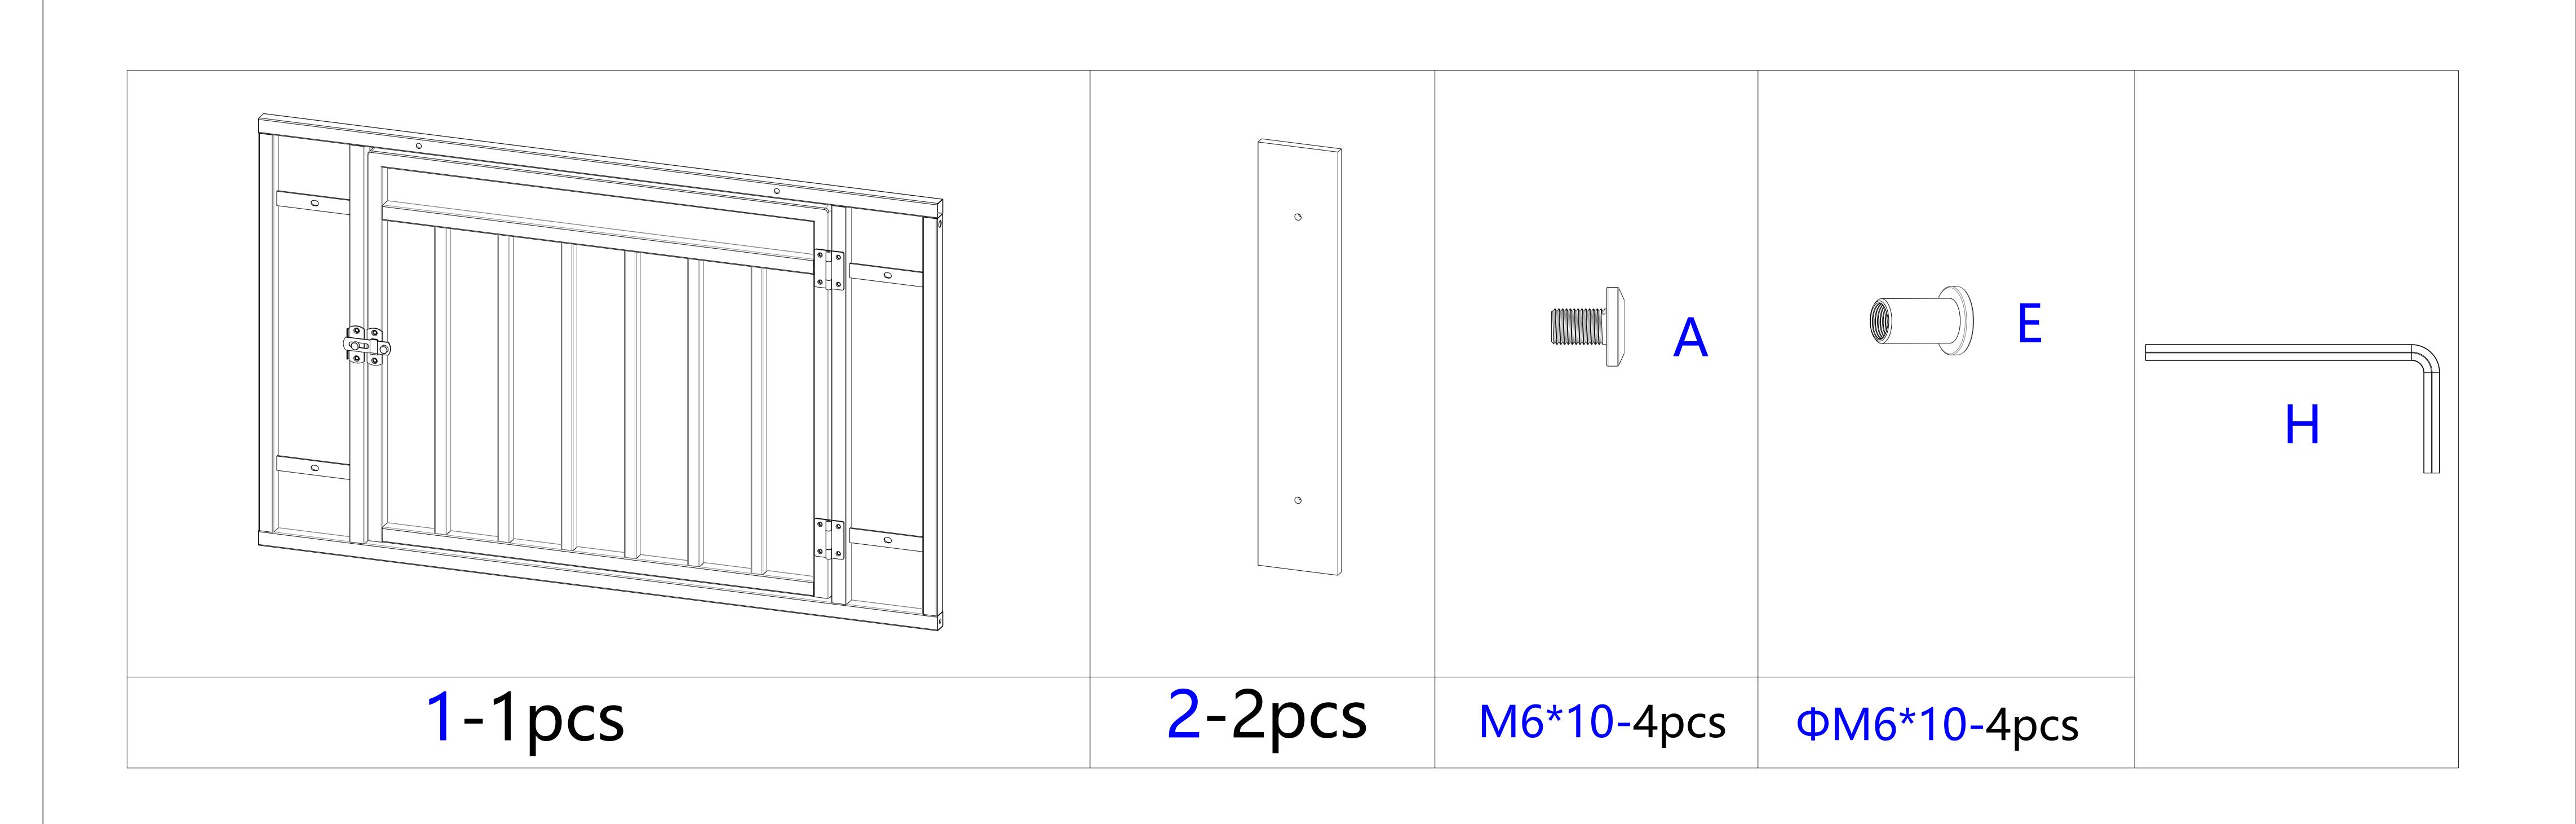



Step 2: Use hardware B, H to connect #5,#7,#6,#8 together.

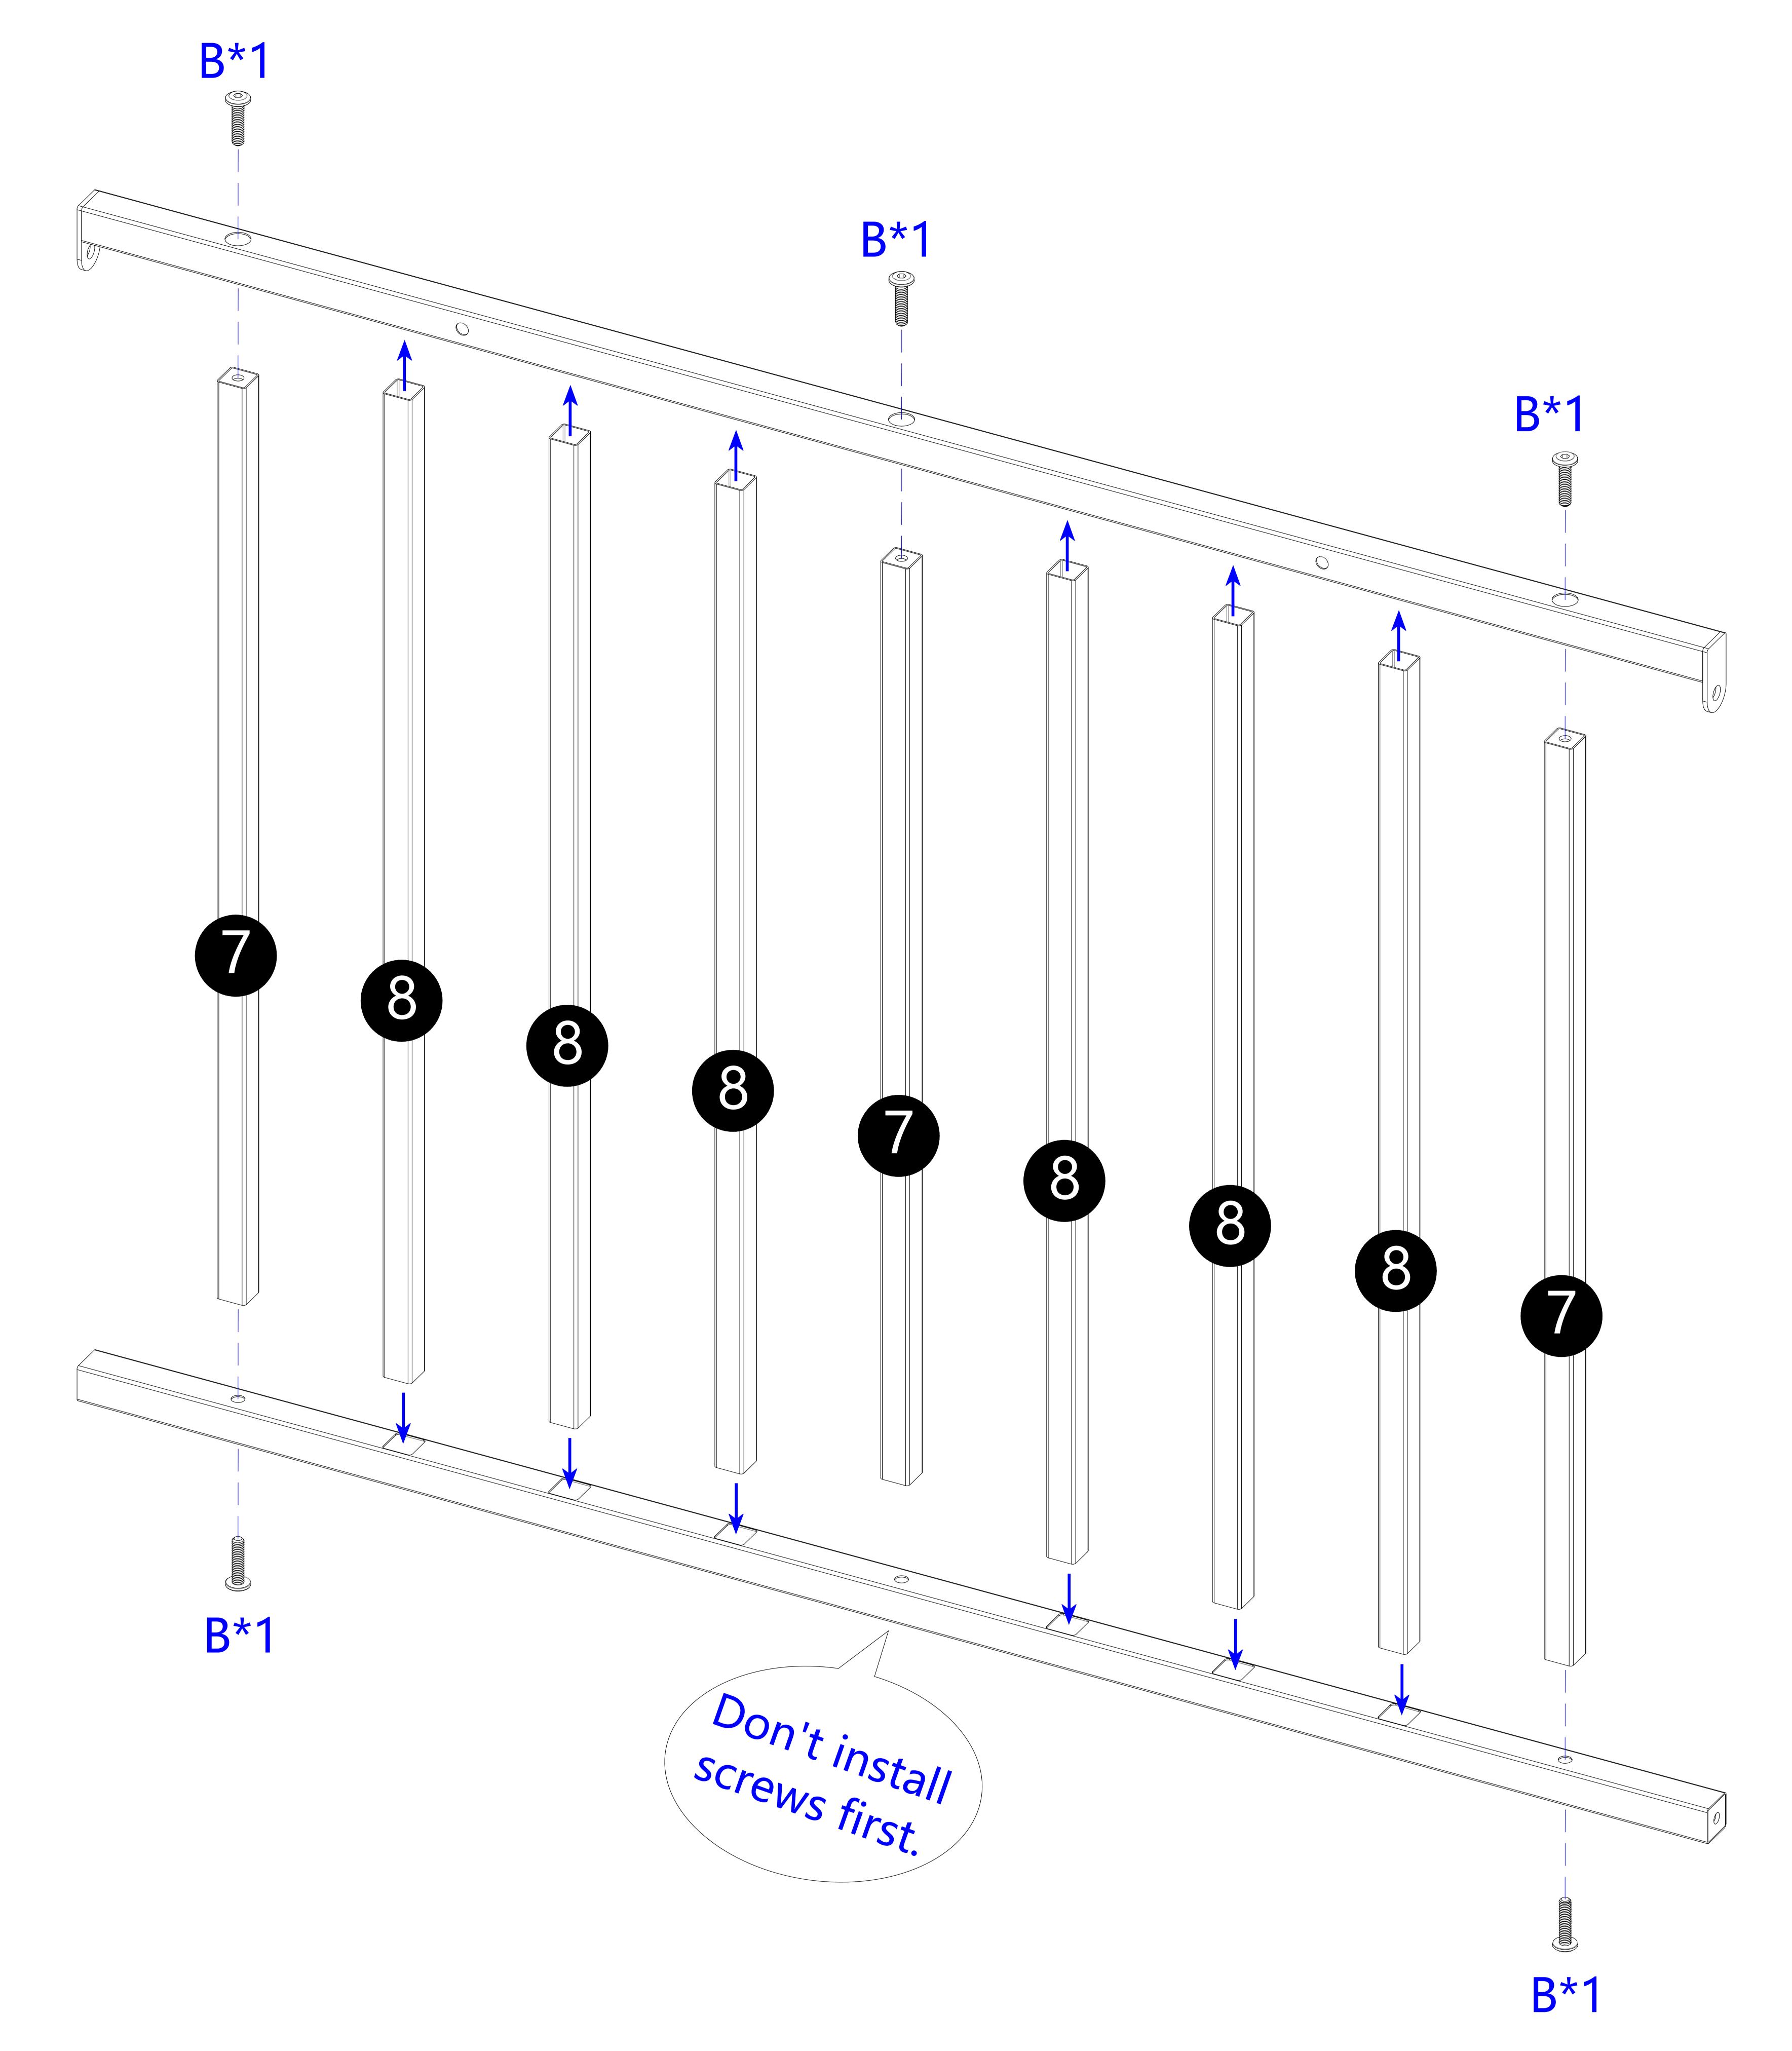

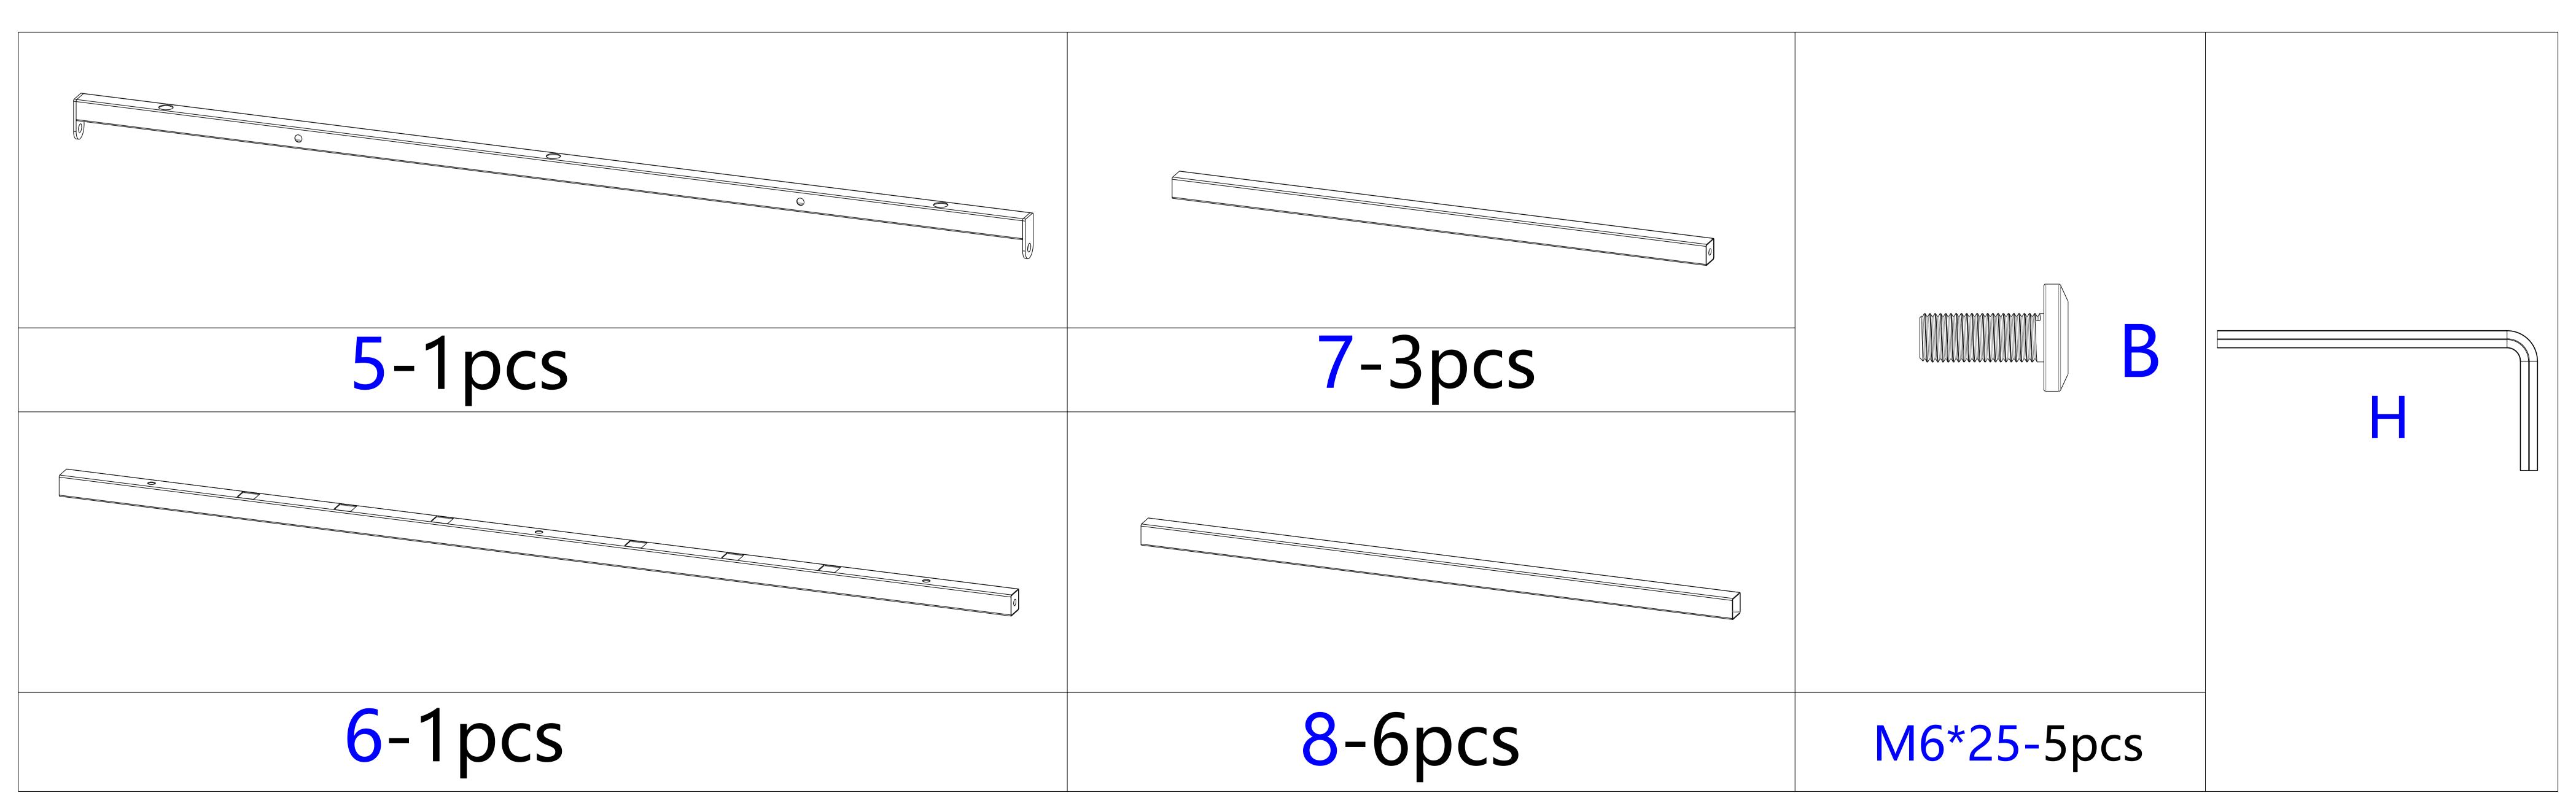



Step 3: Use hardware A, C, F and H to connect #3 with component 1 and component 2

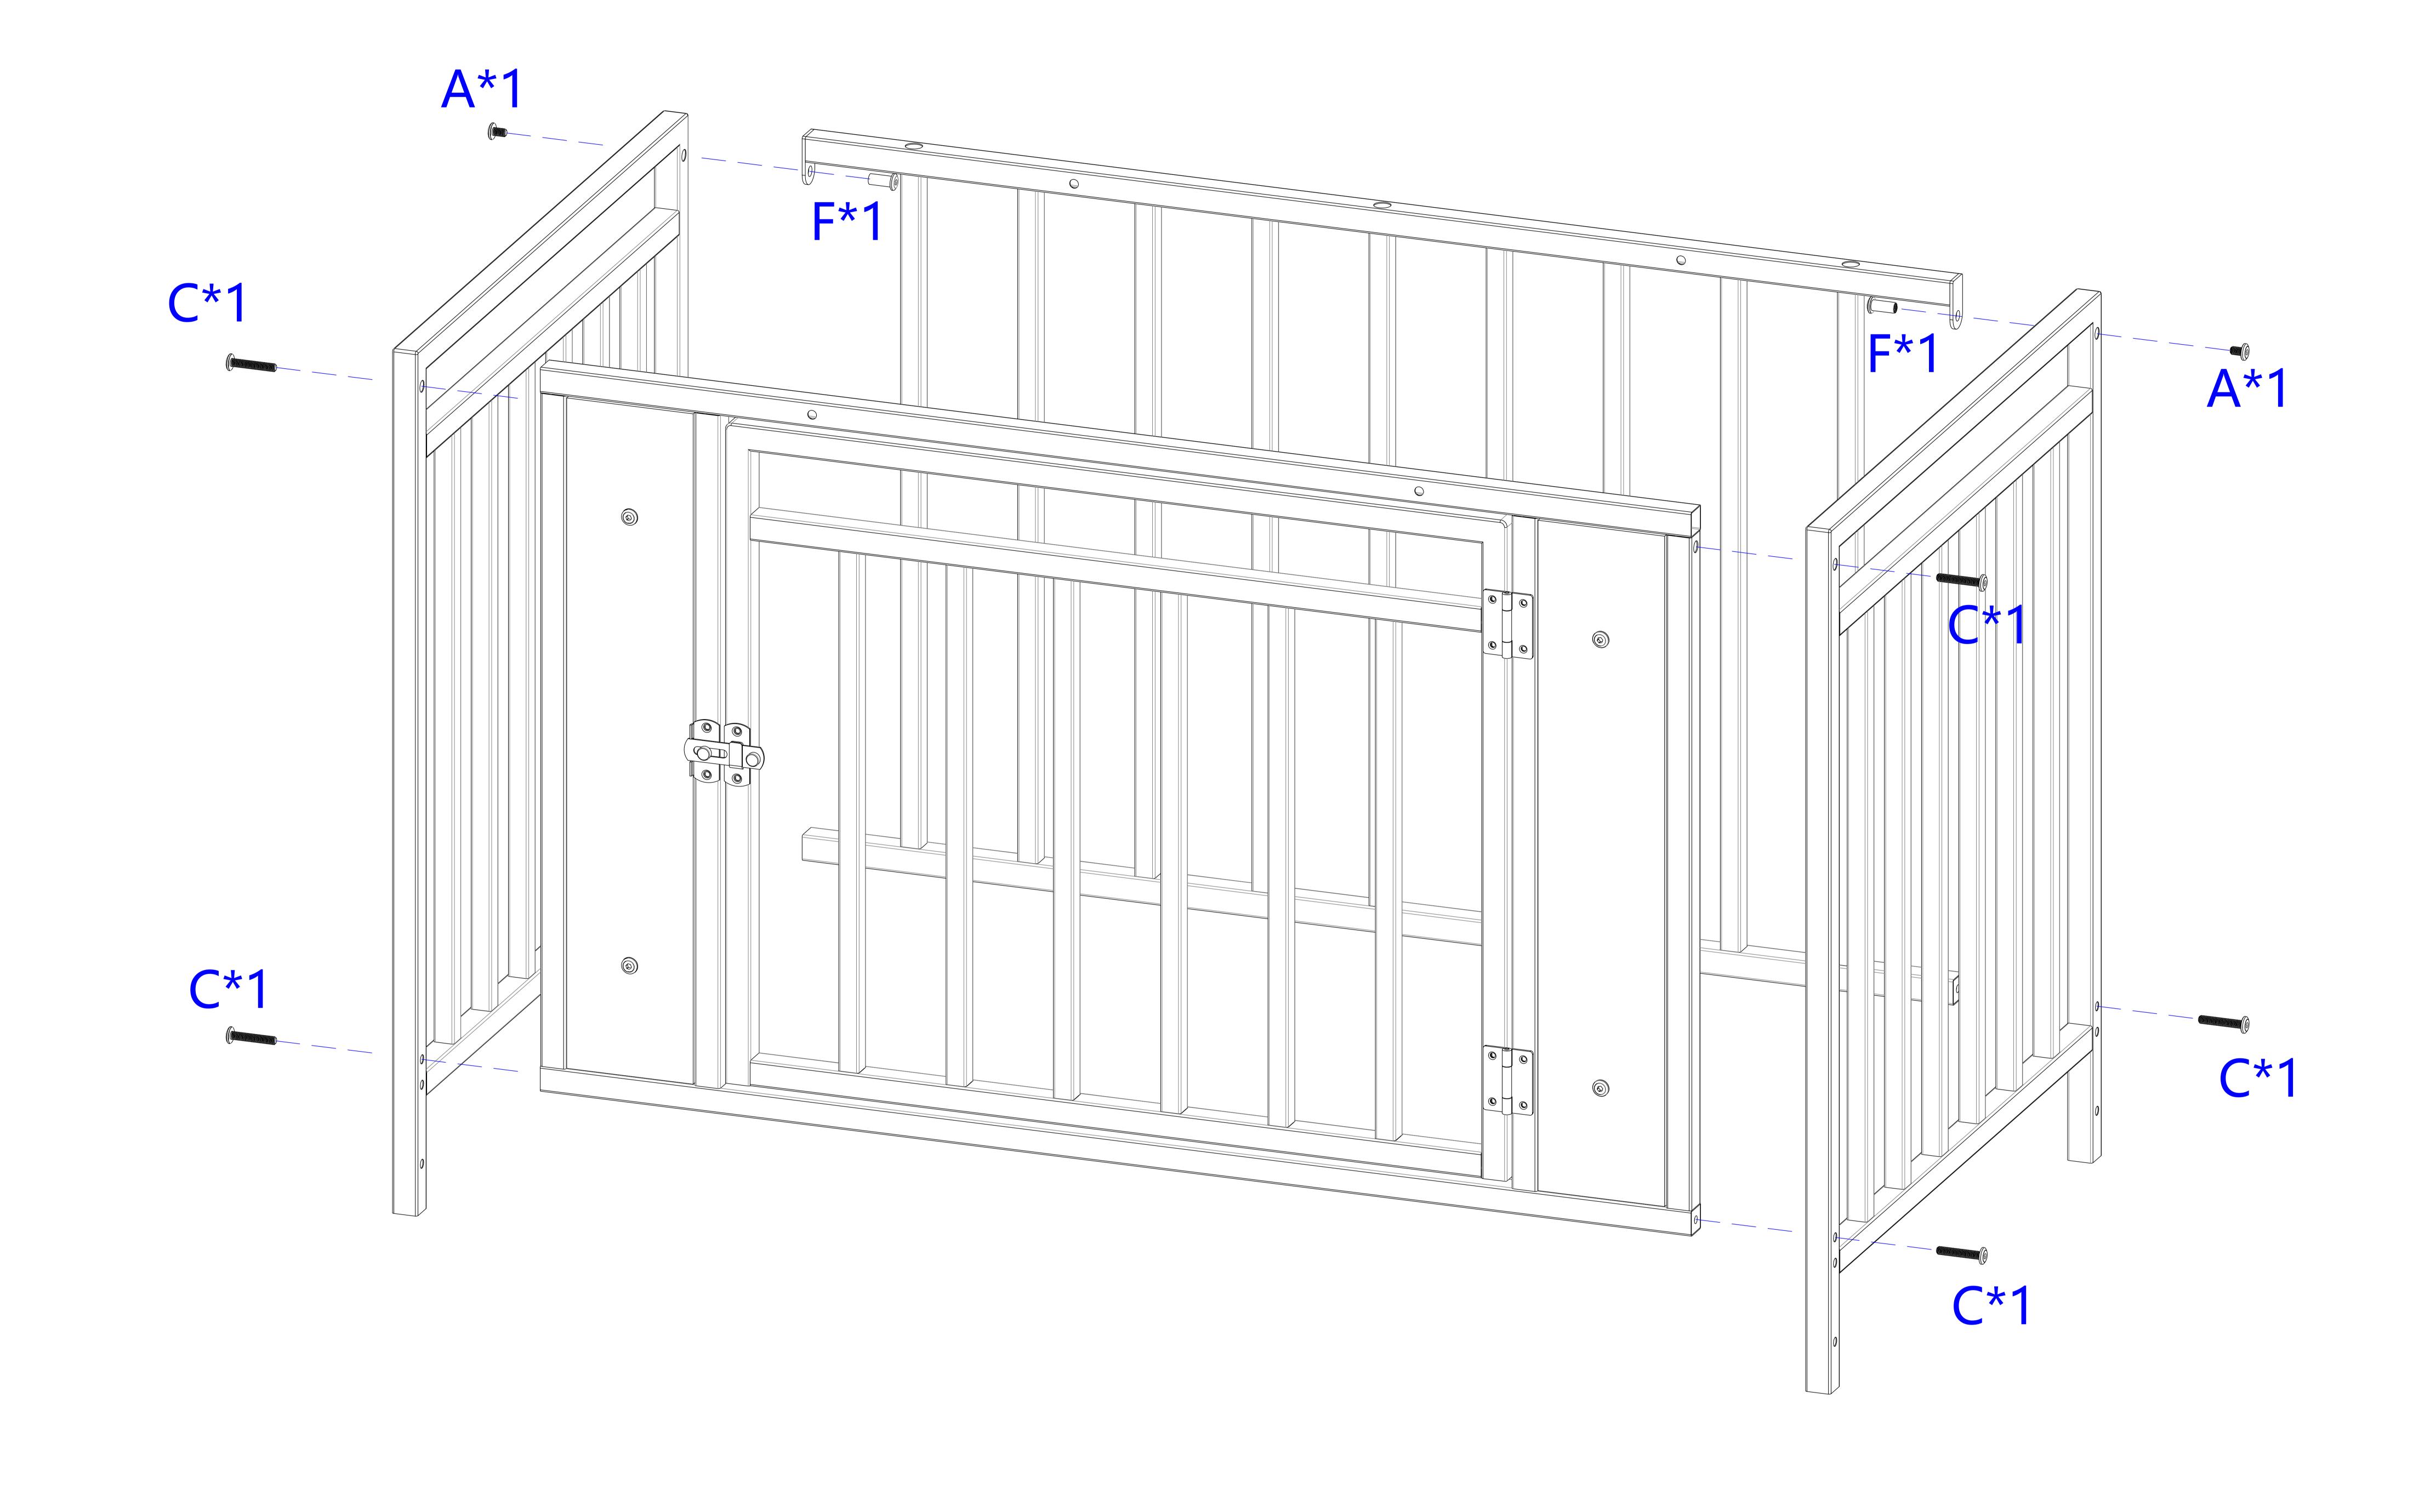

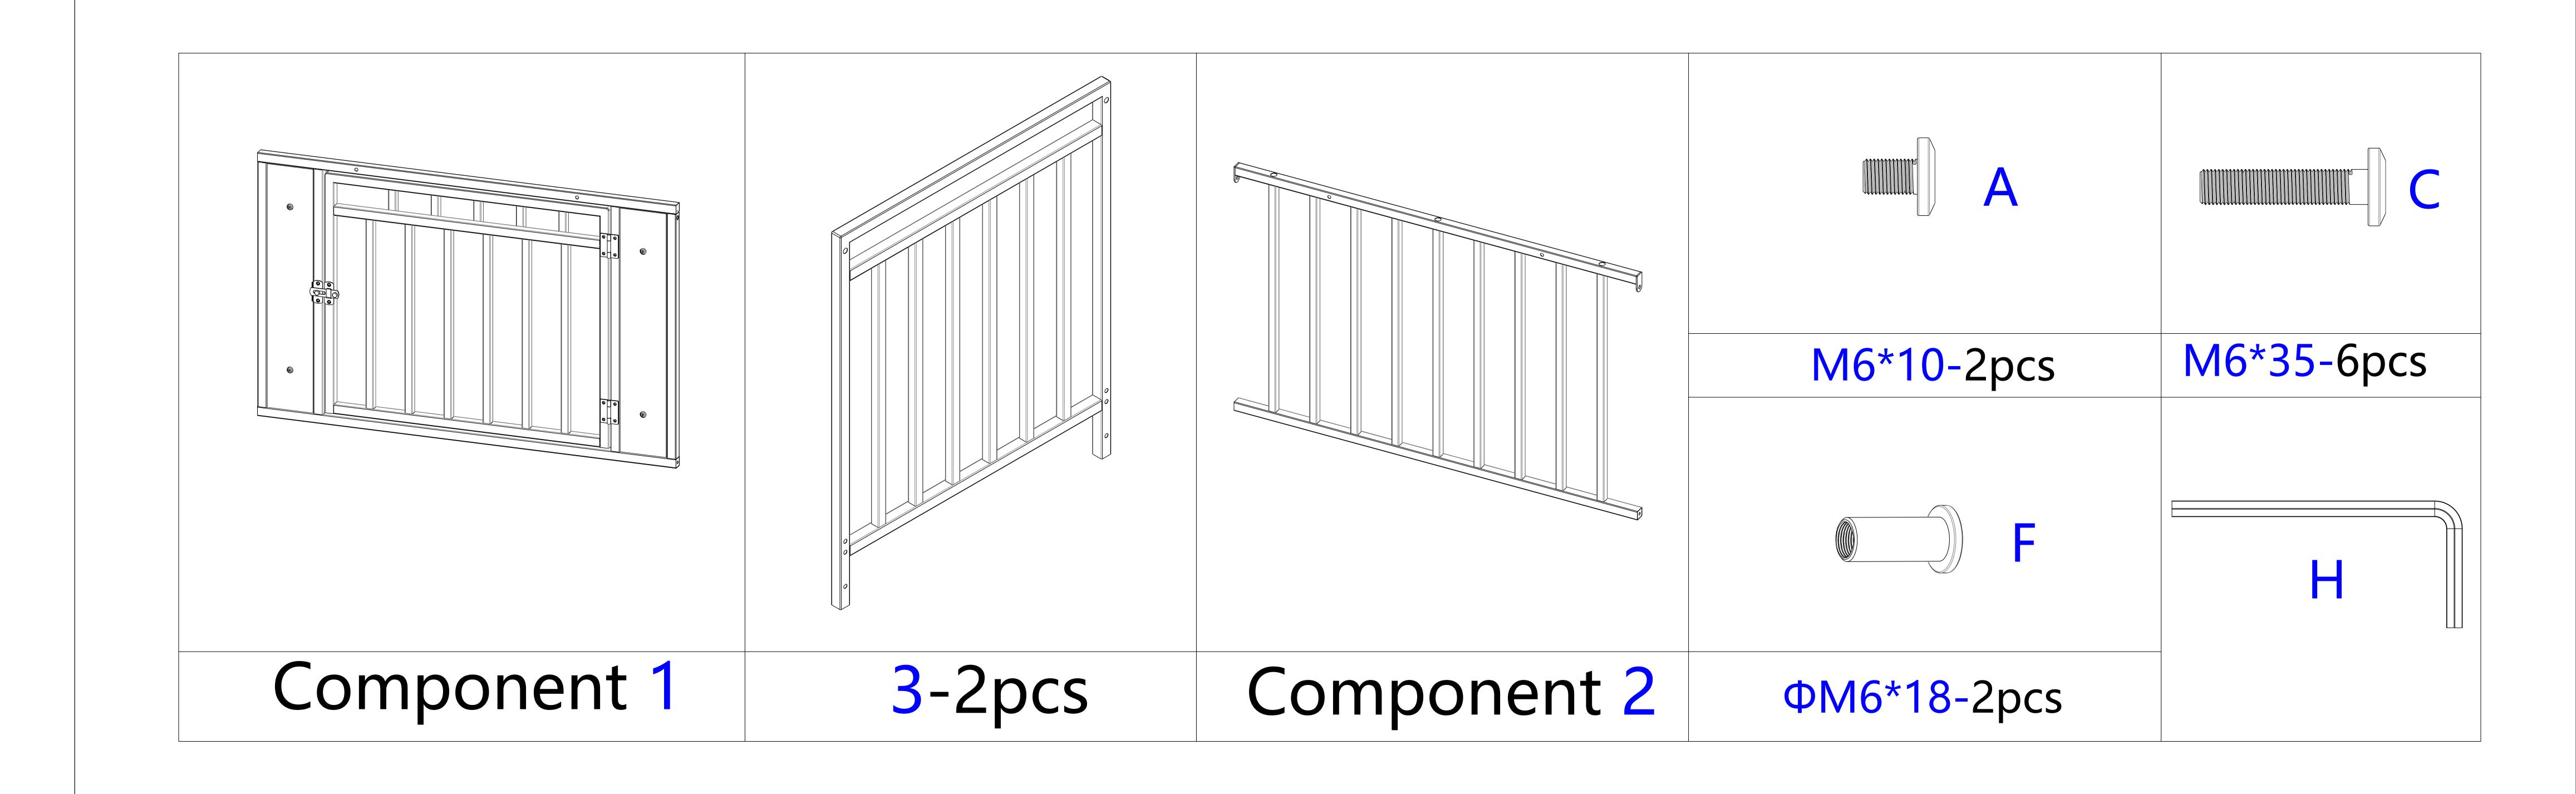



Step 4: Use hardware B,E, H to connect #10,#12 together.

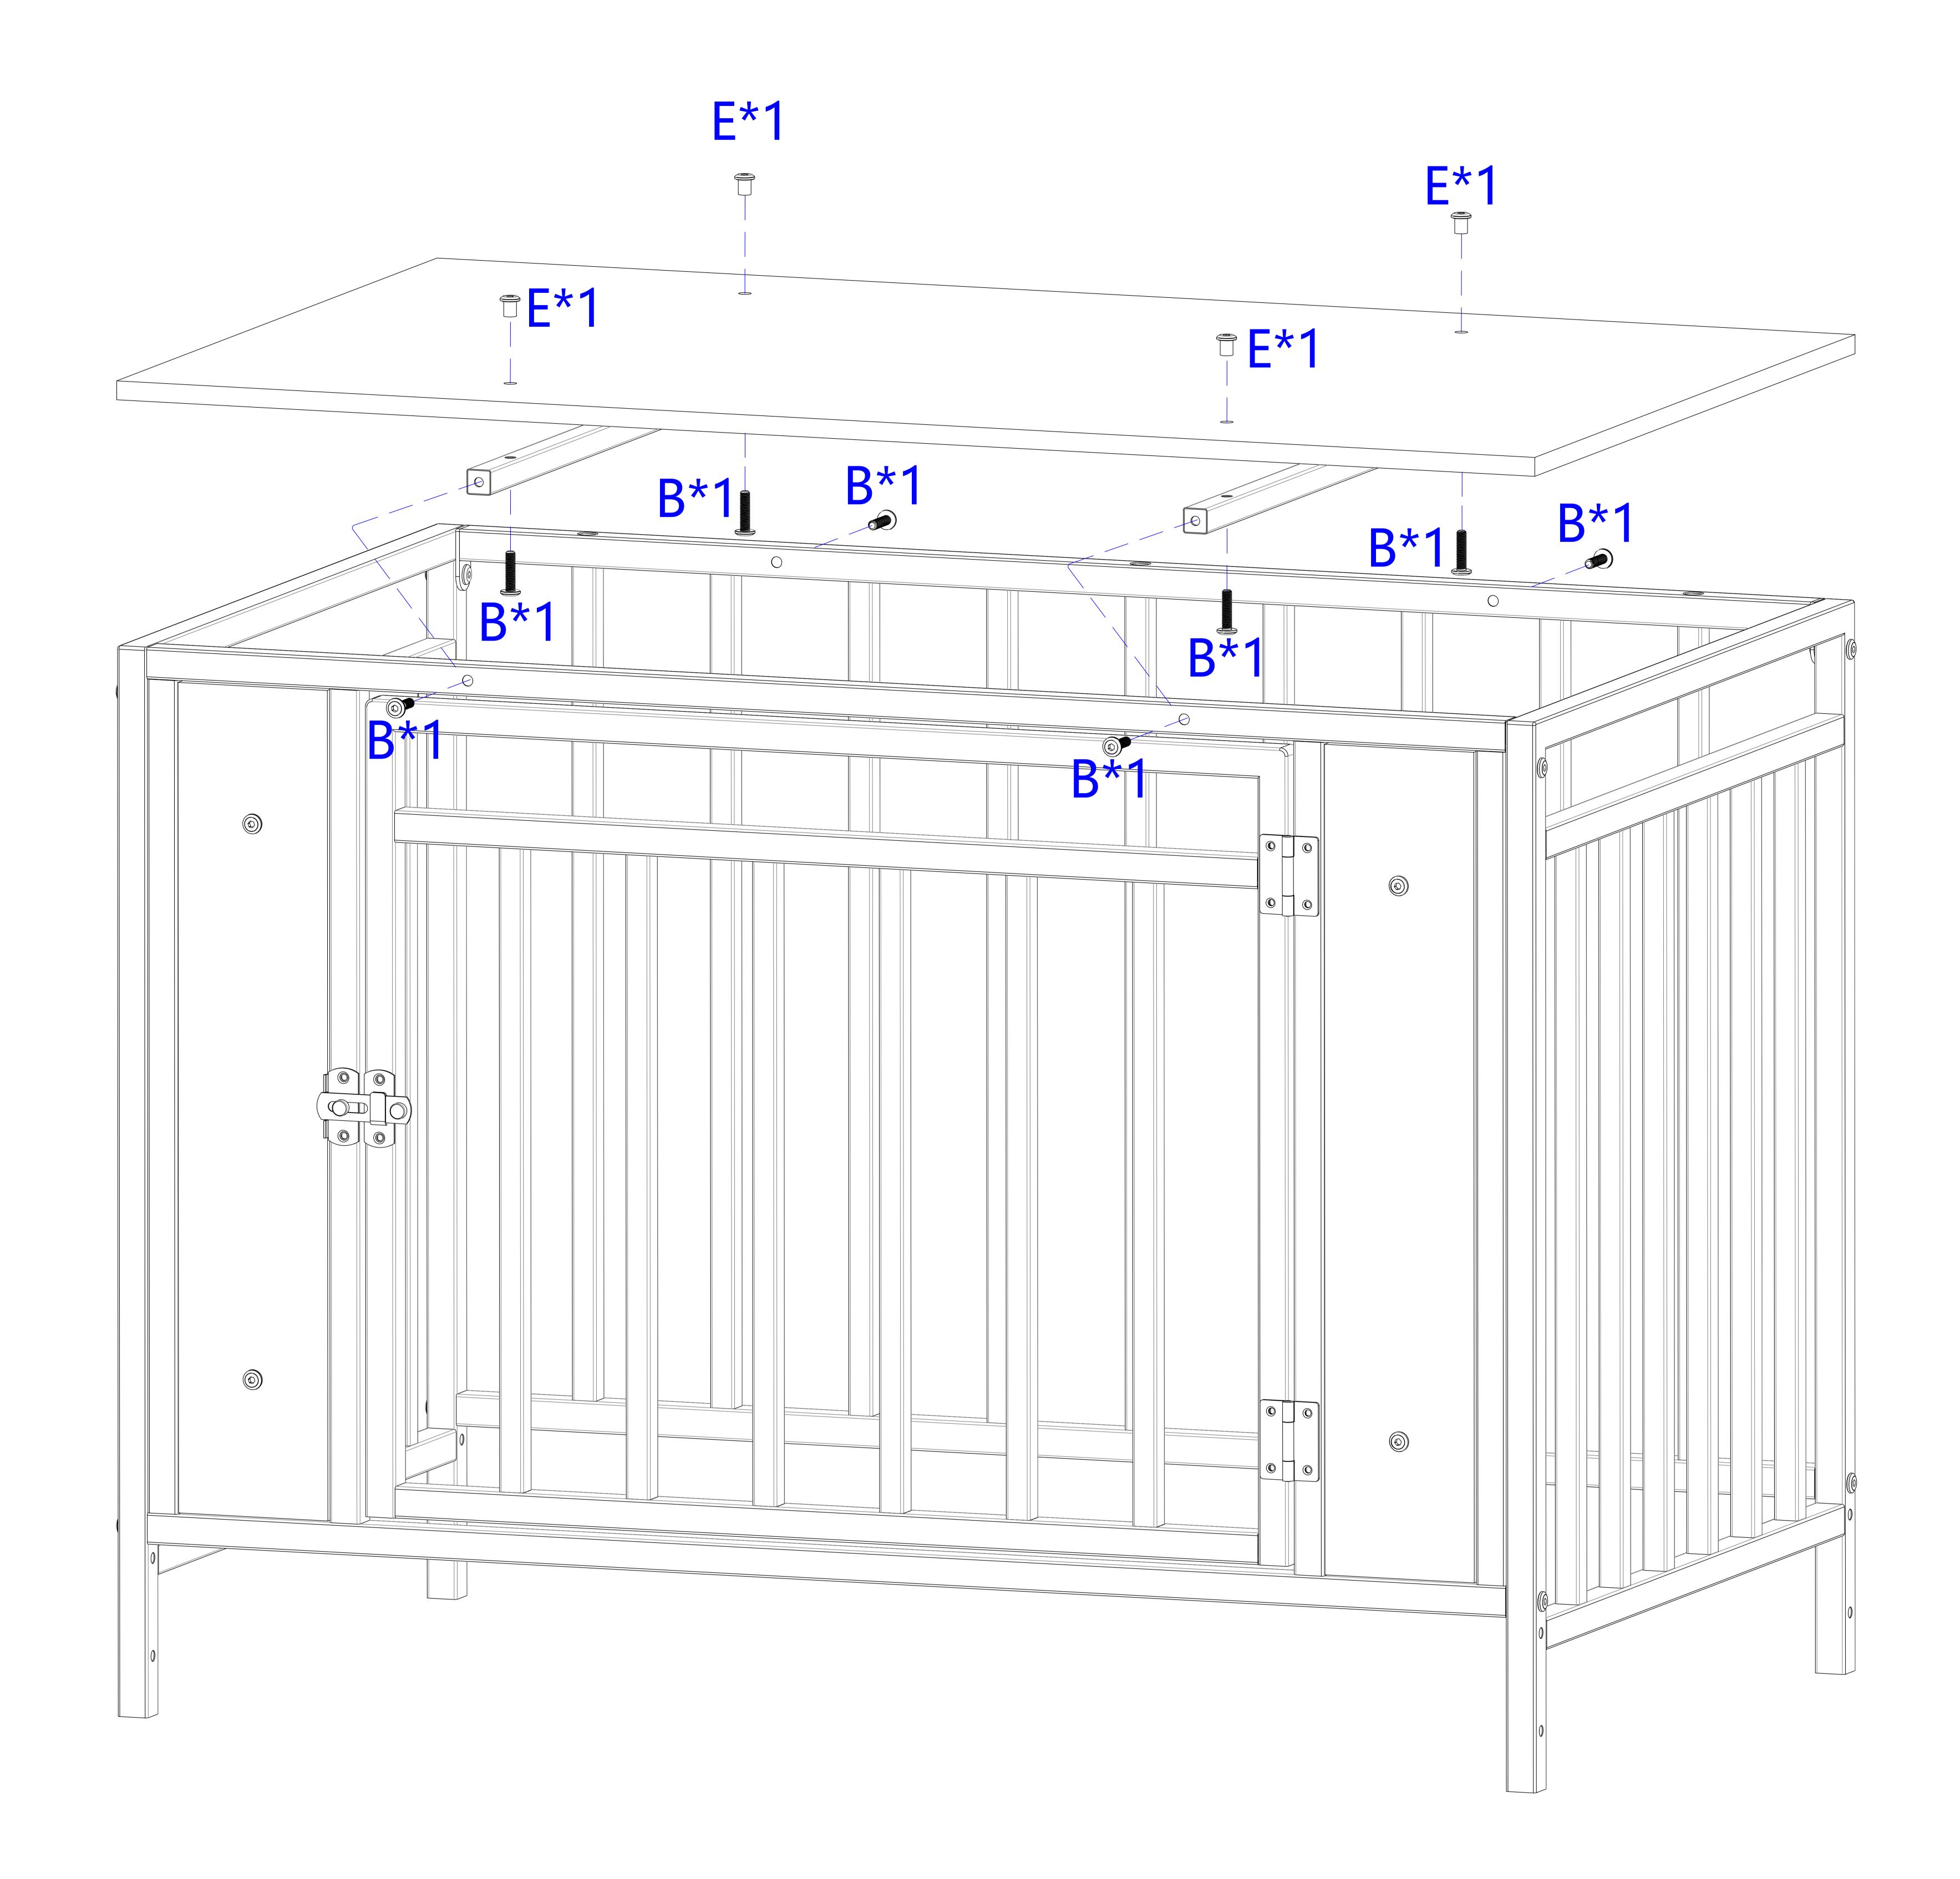

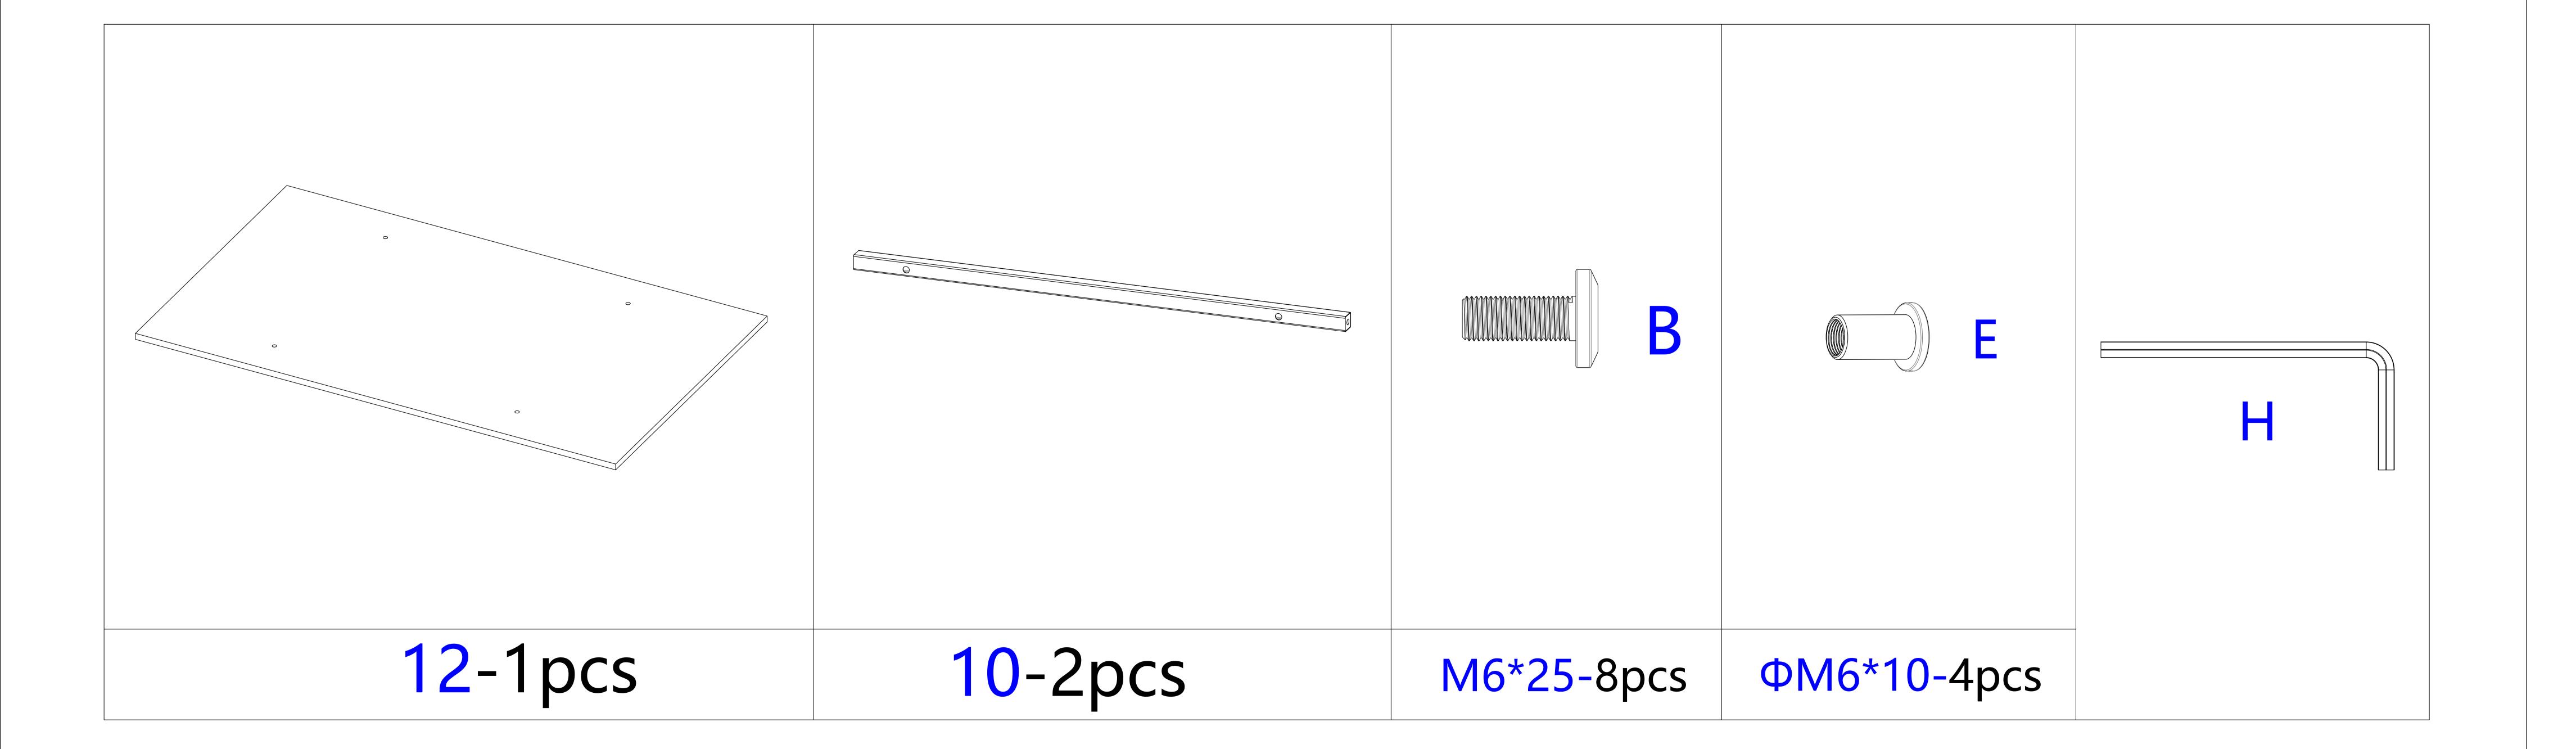



Step5: Use hardware C,D,H to connect #4 together.

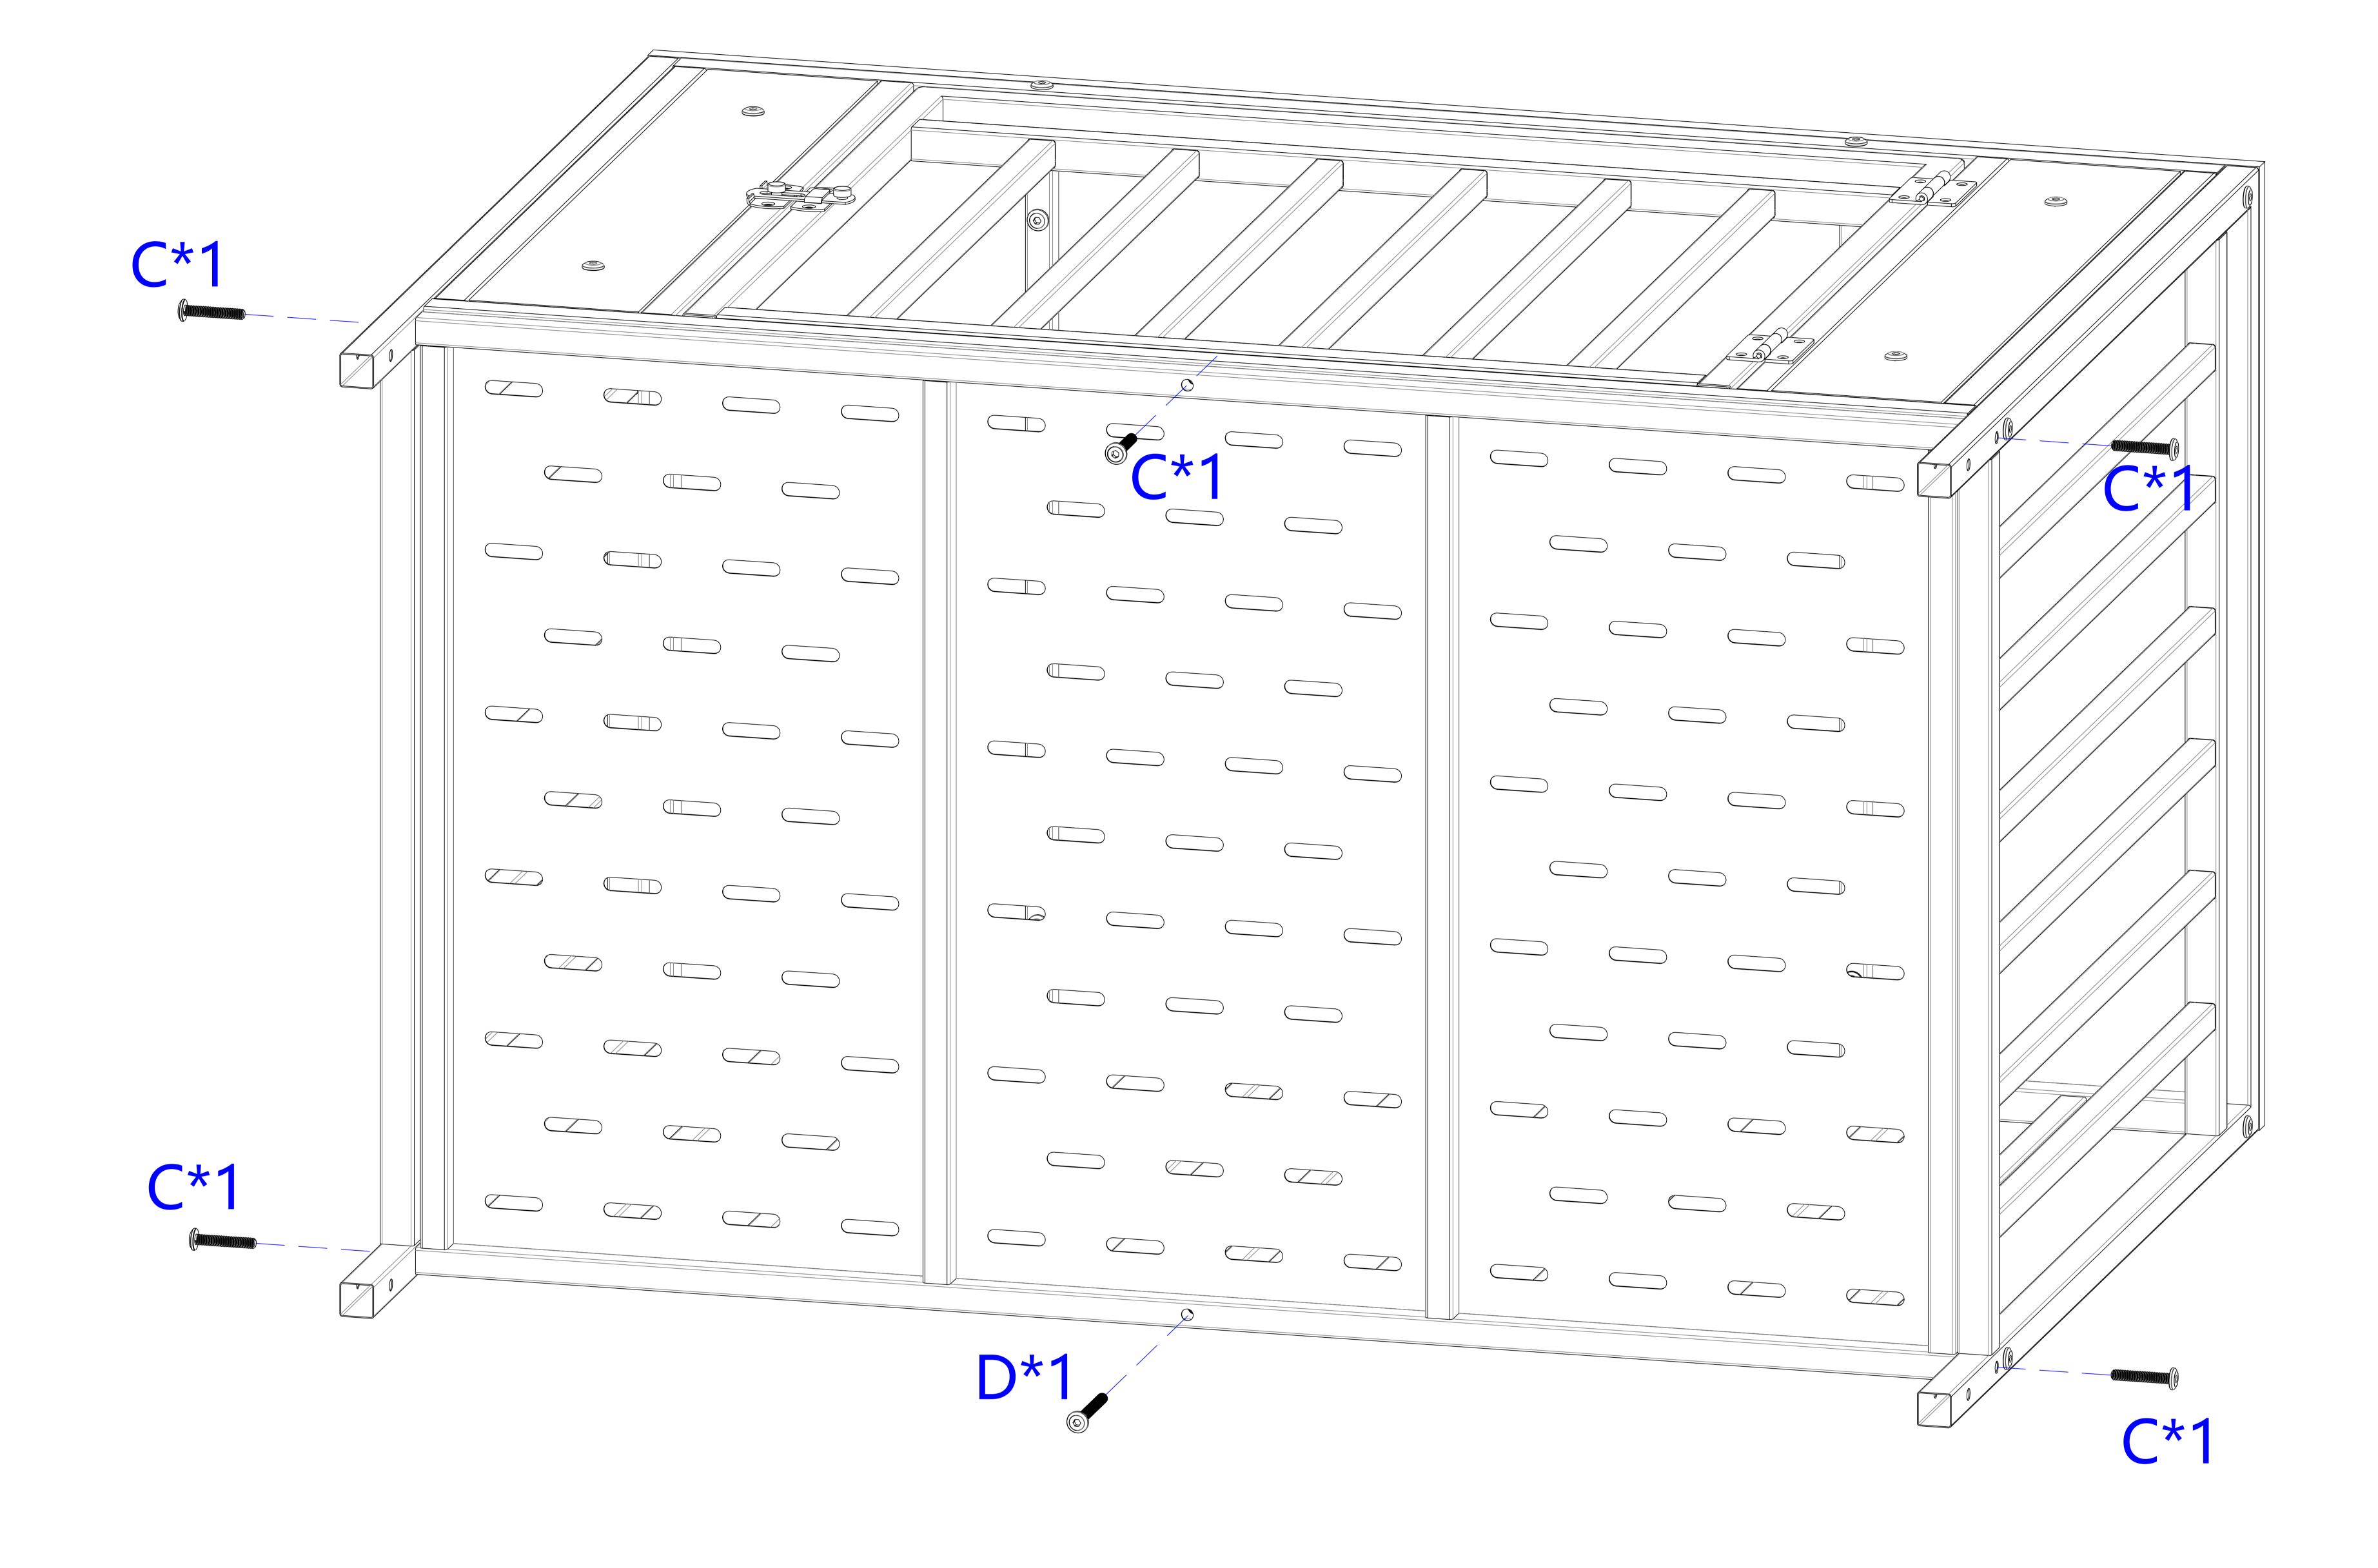

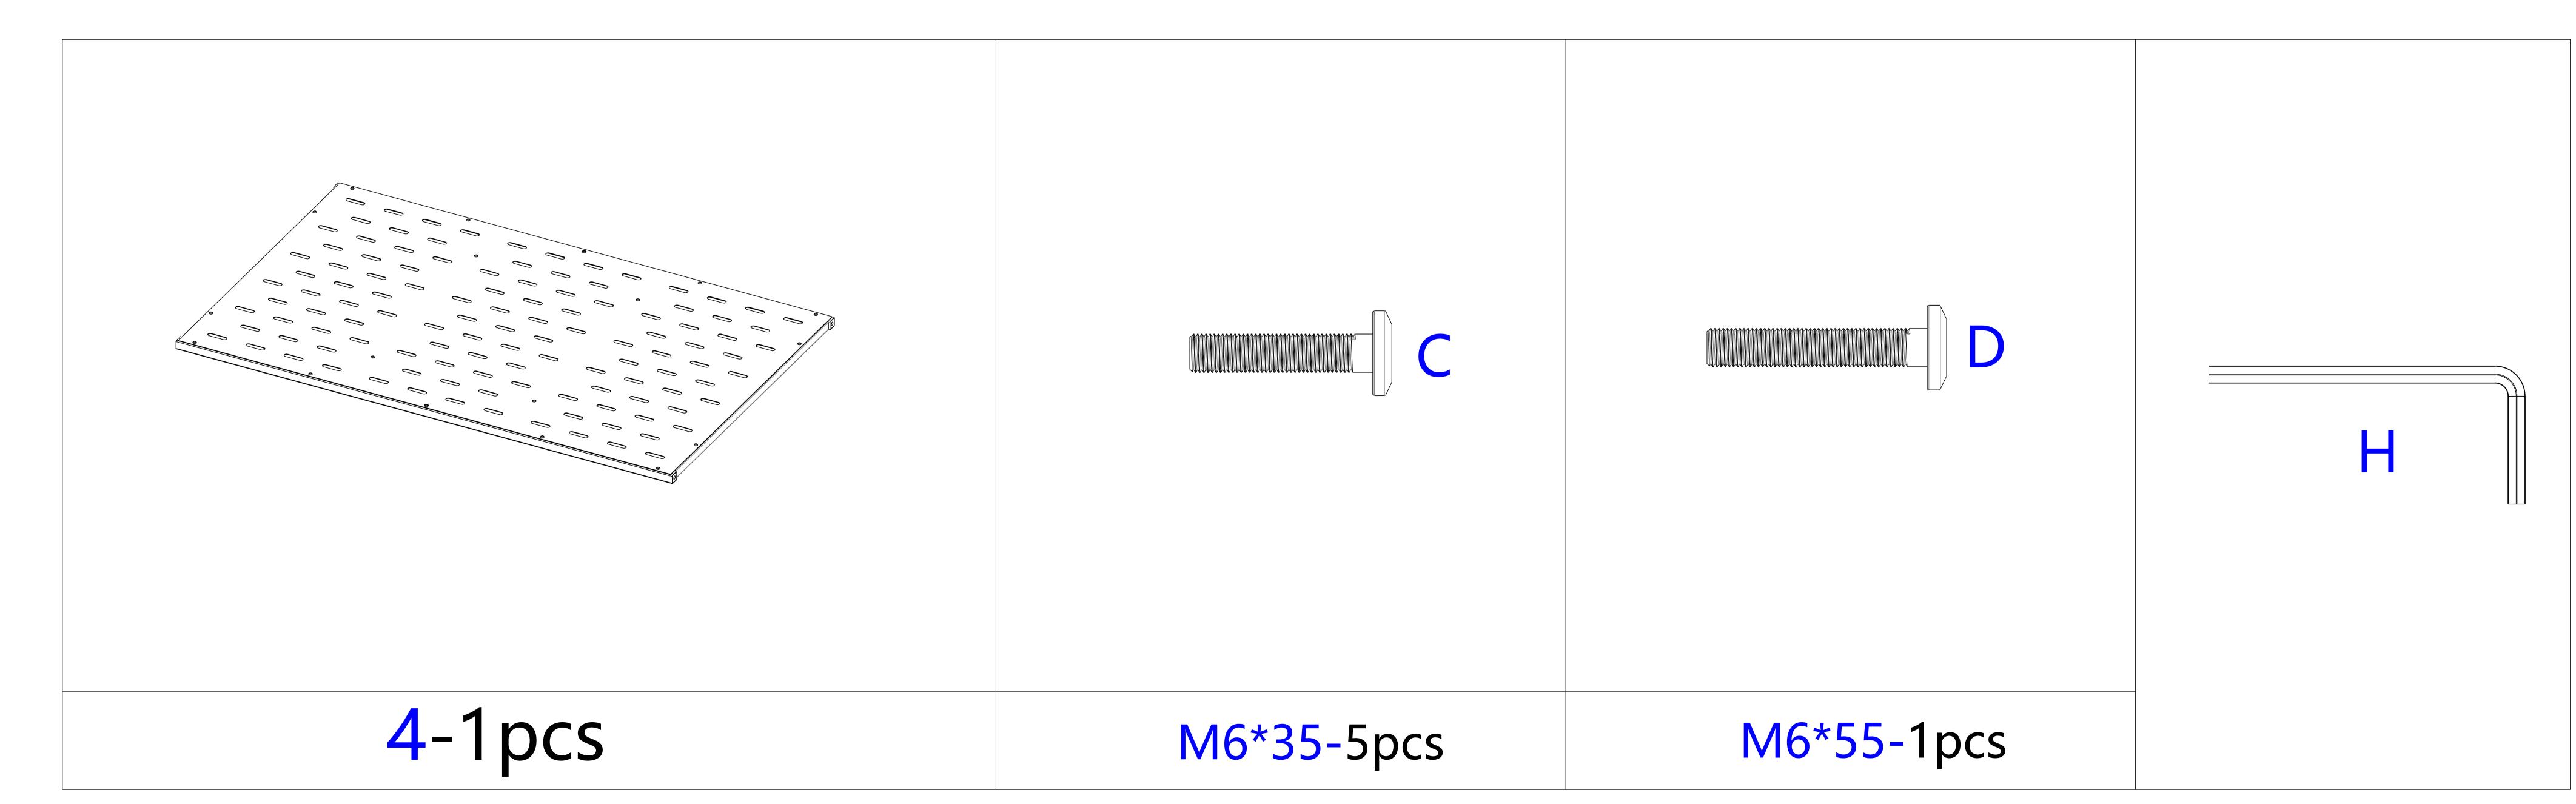


Step 6: Use hardware B,C,H to connect #7,#9 together.

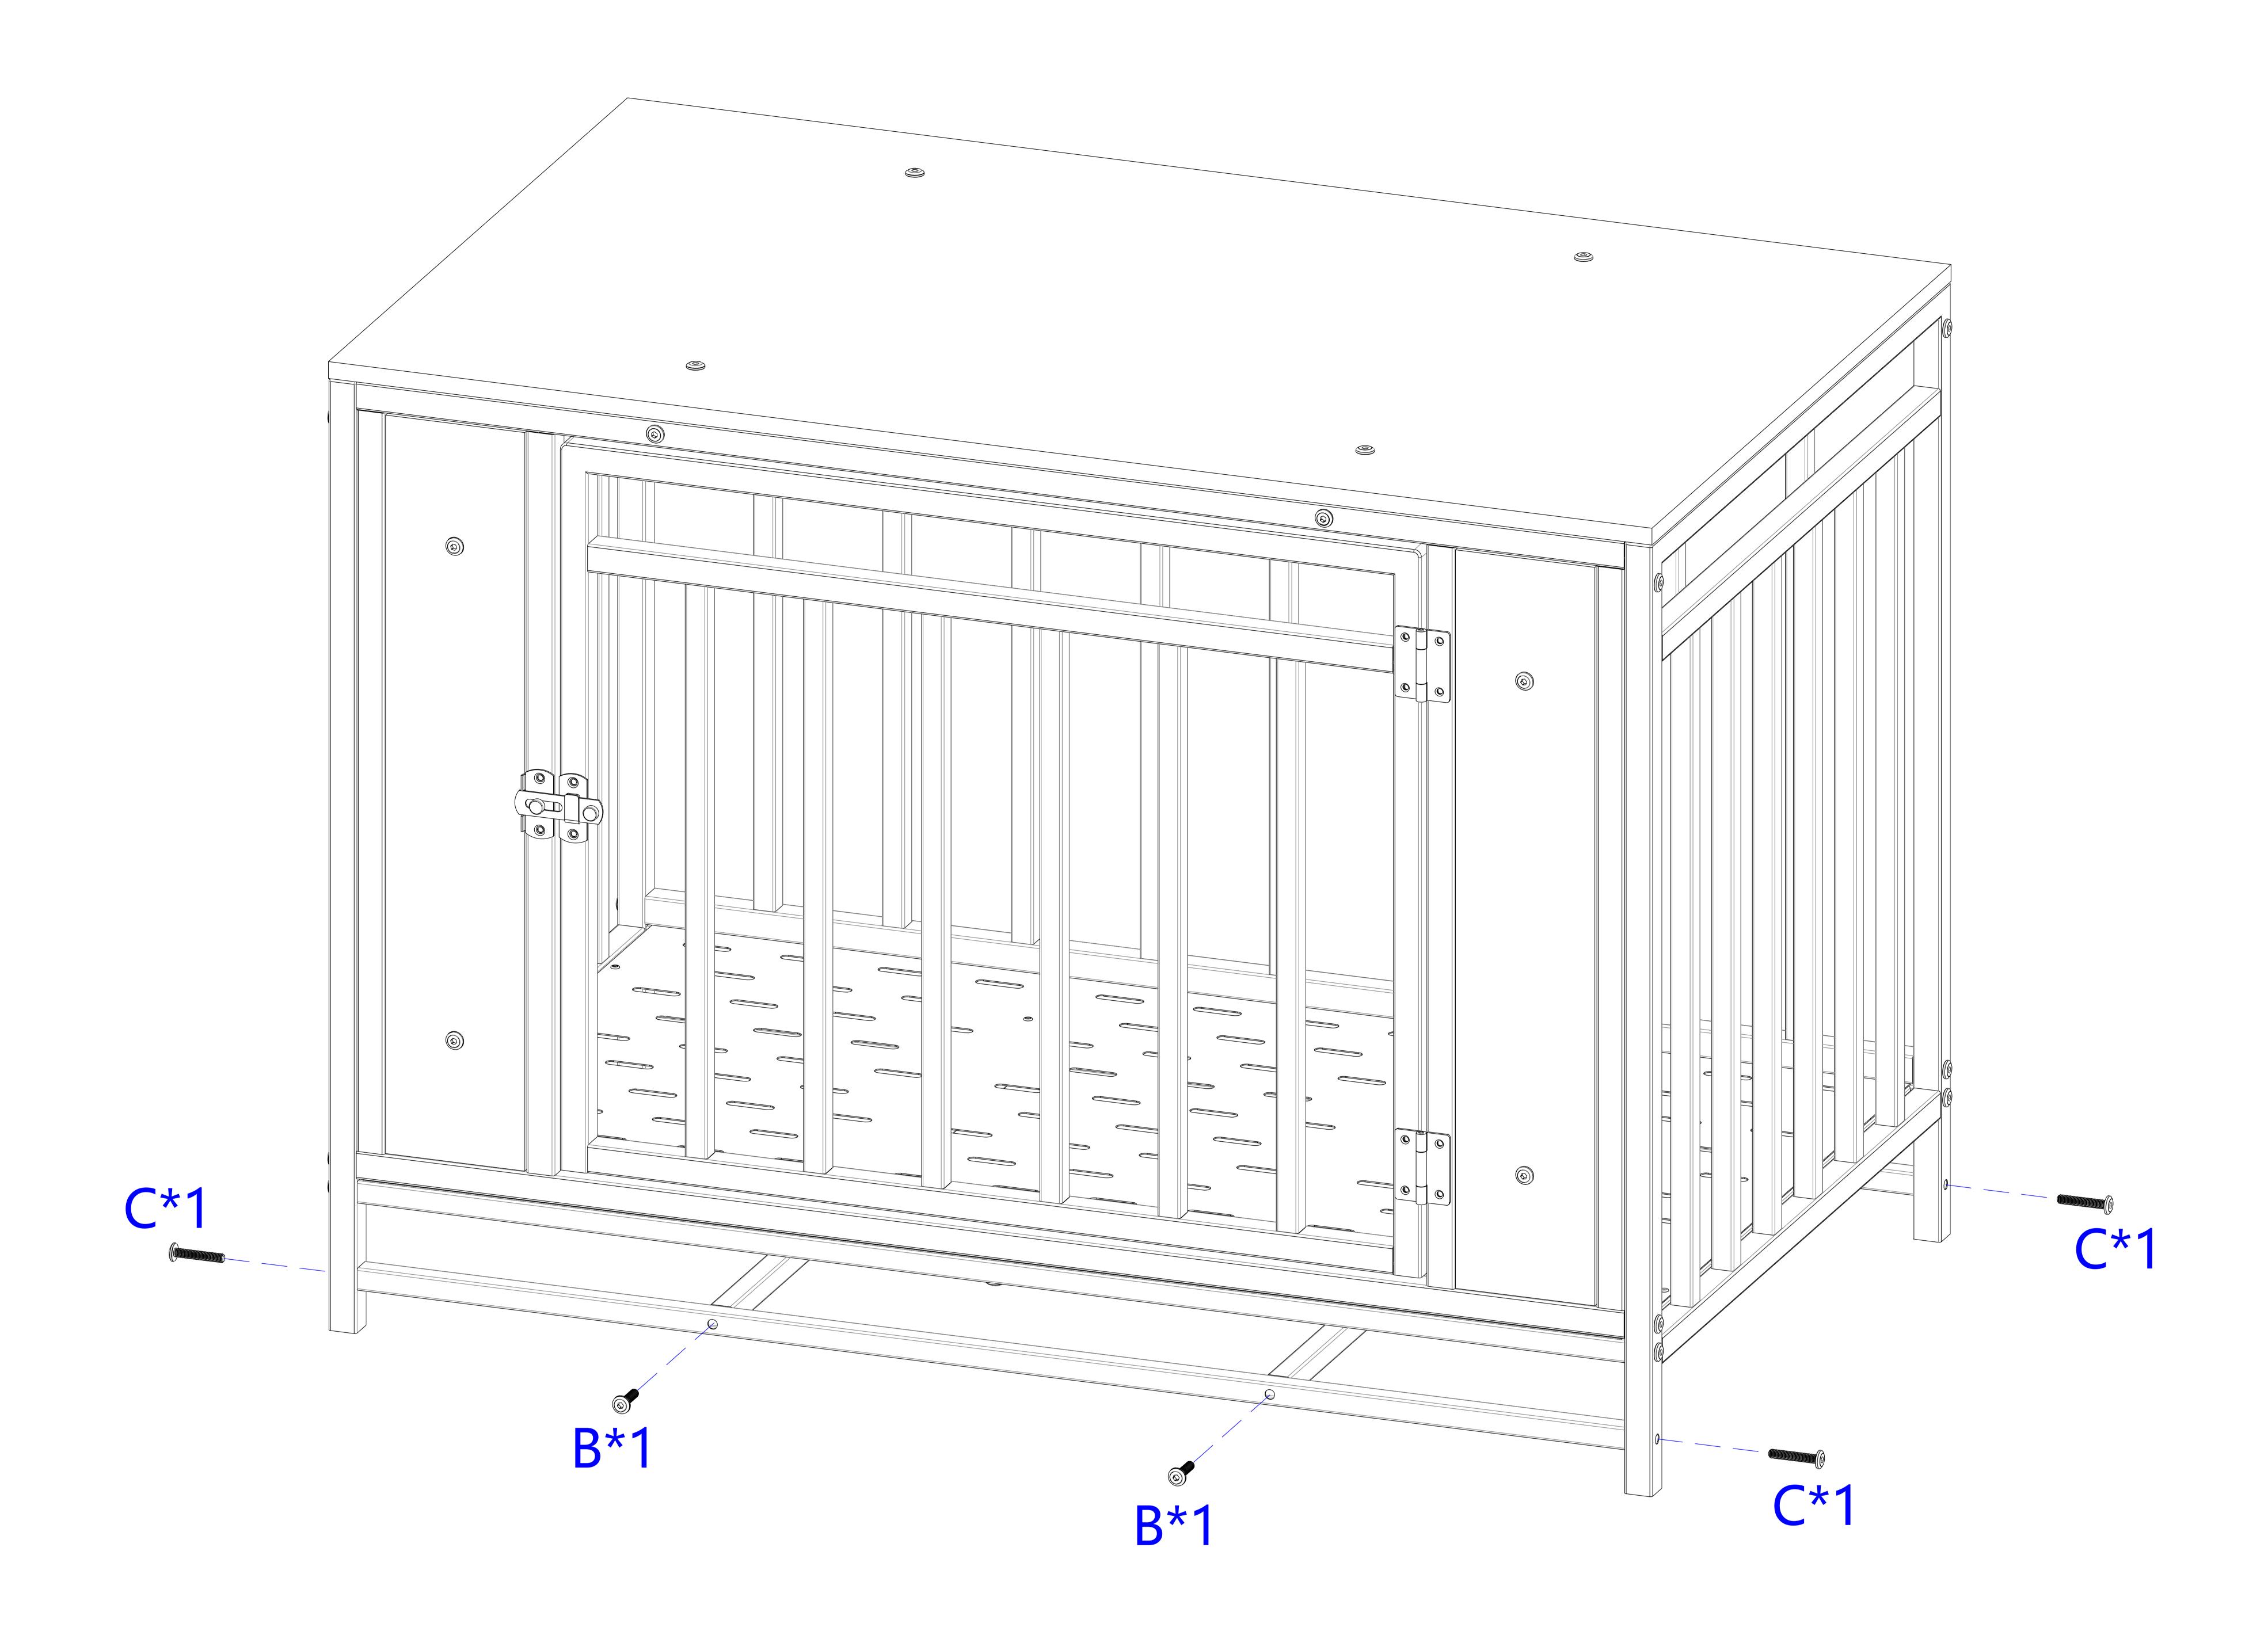

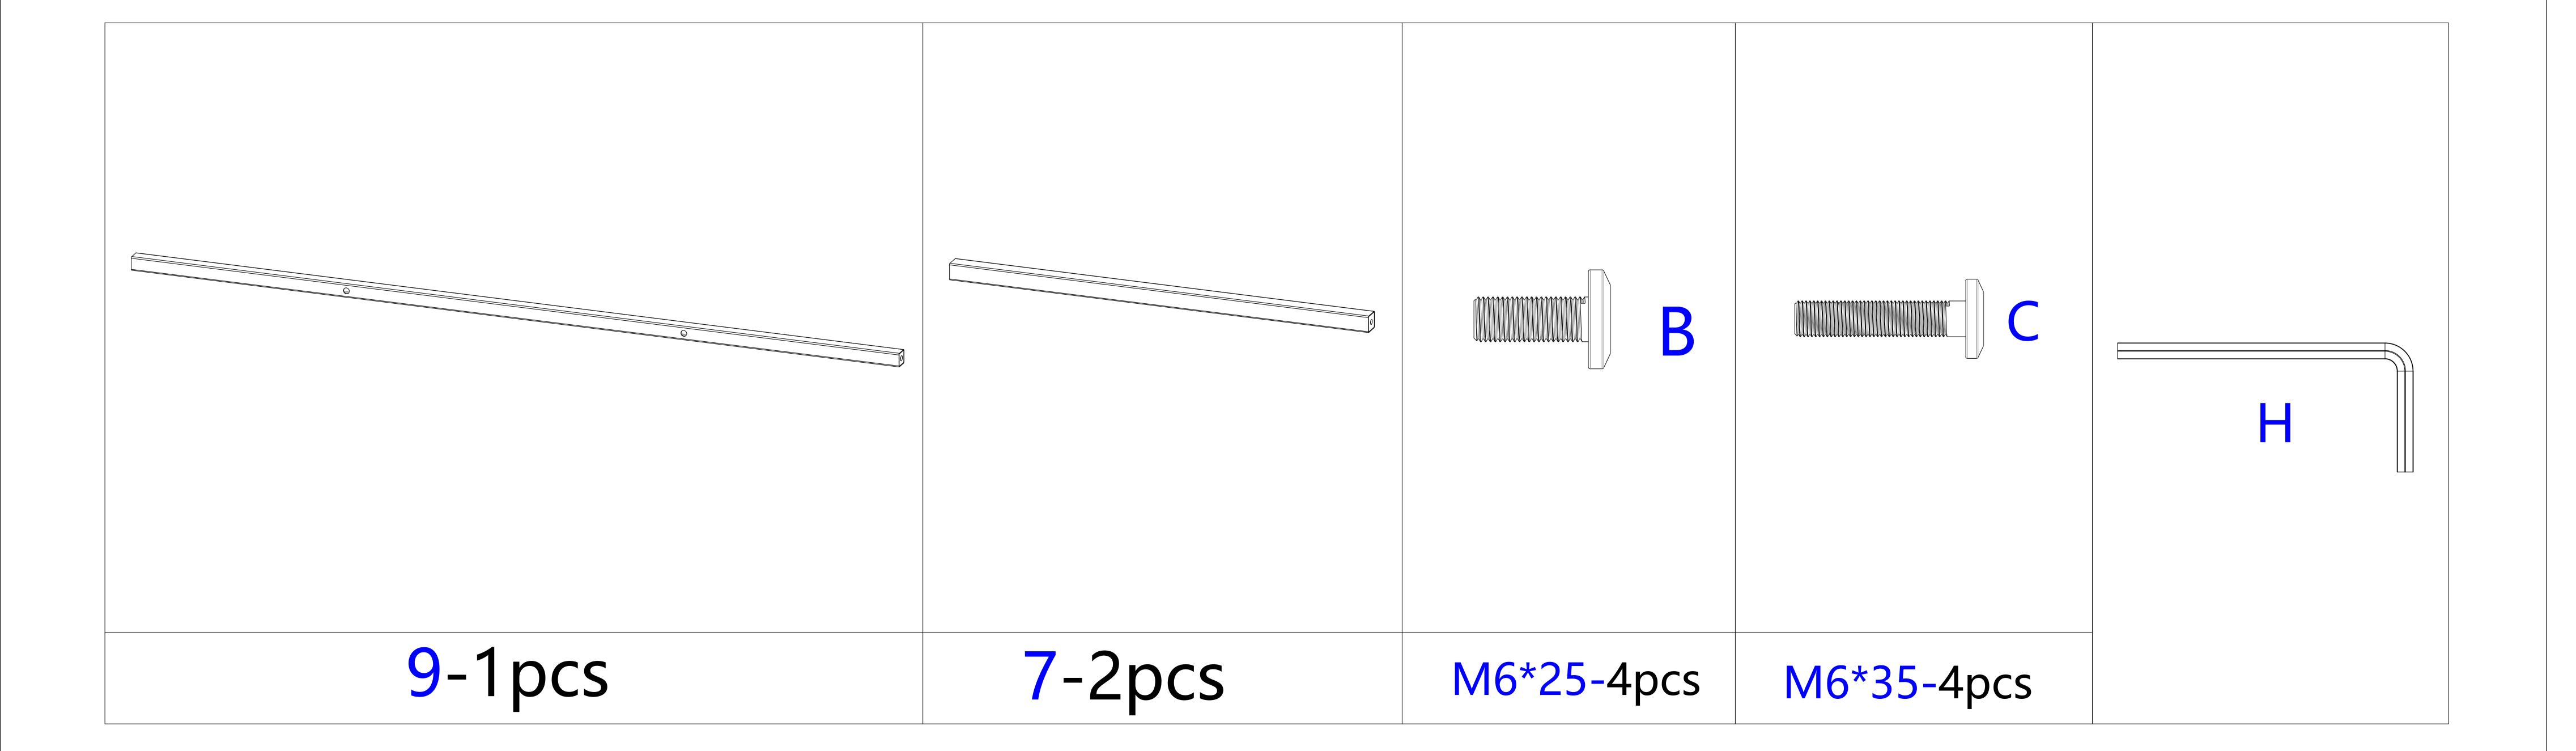



Step 7: Use hardware G, W and S to connect #3 together.



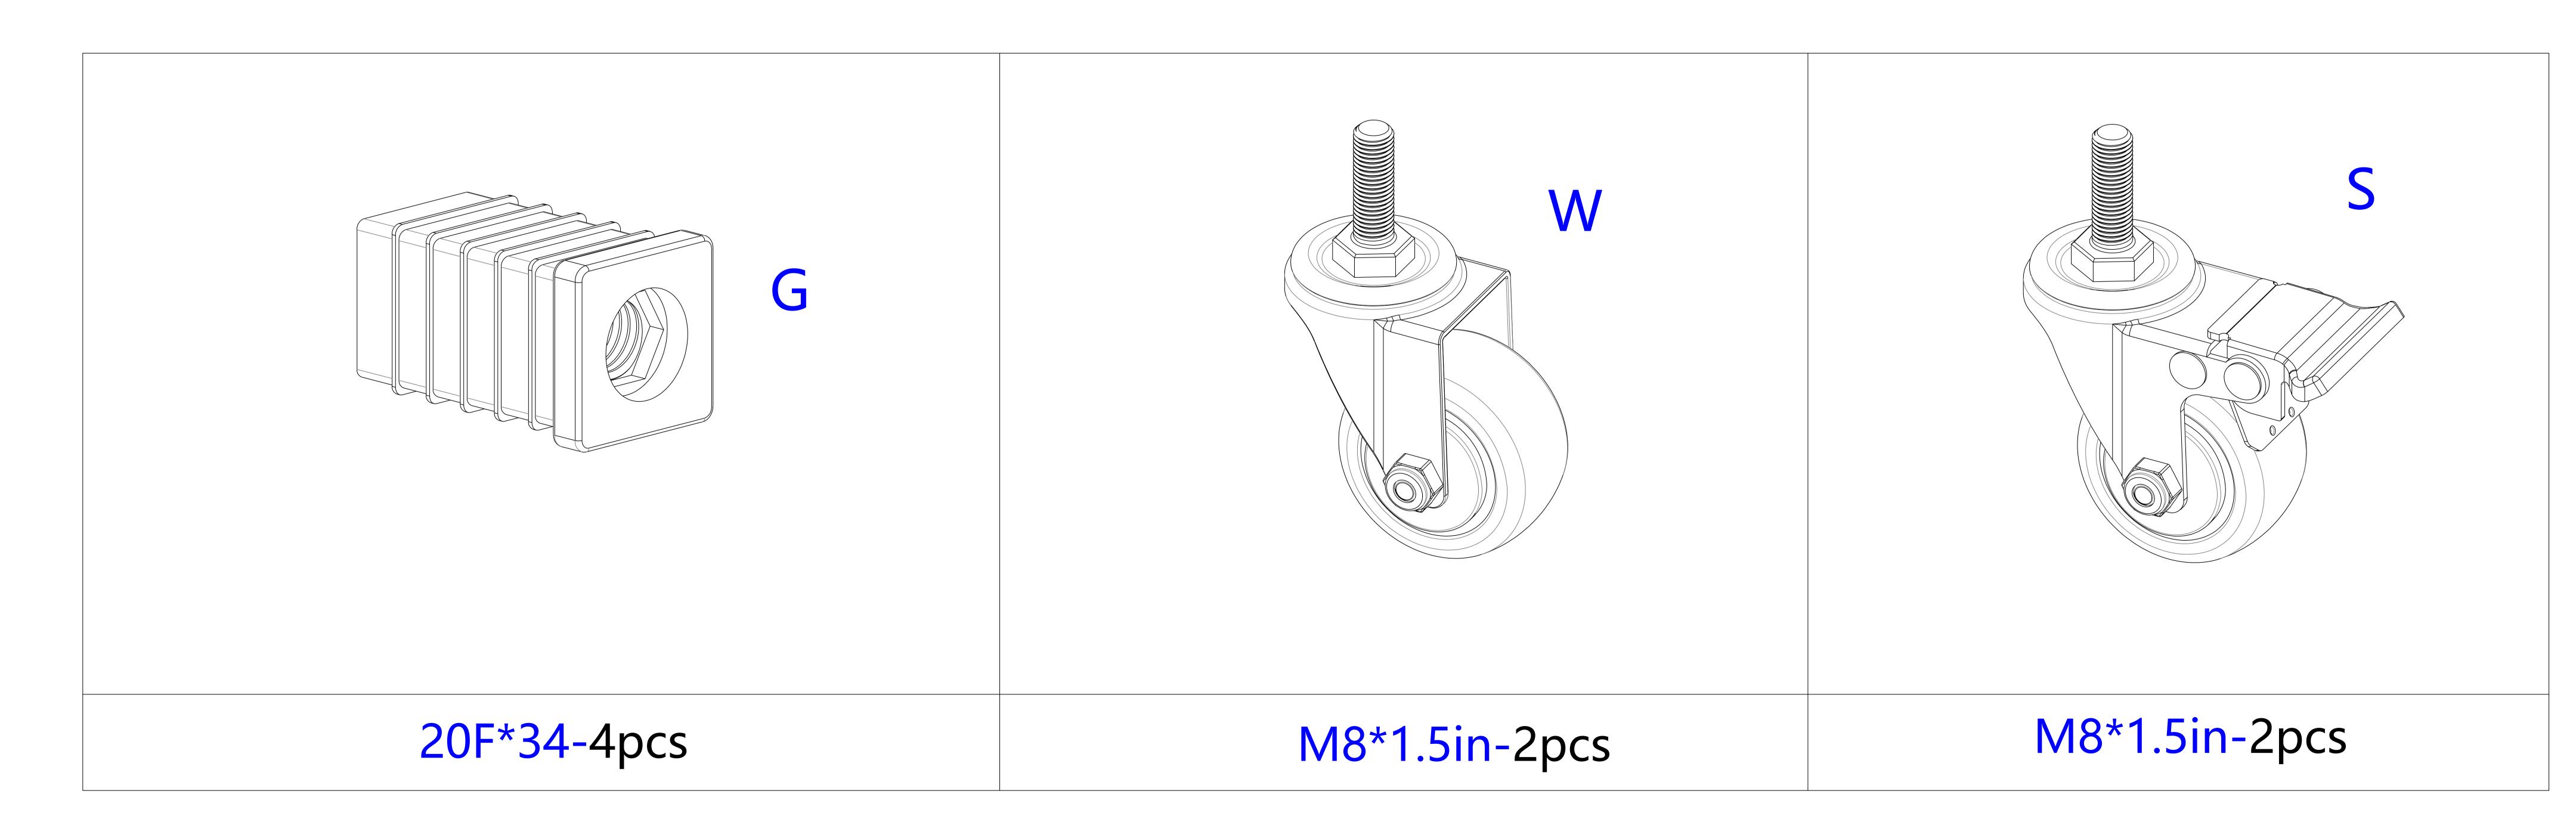

Step 8: Place #11 at the bottom of the cage

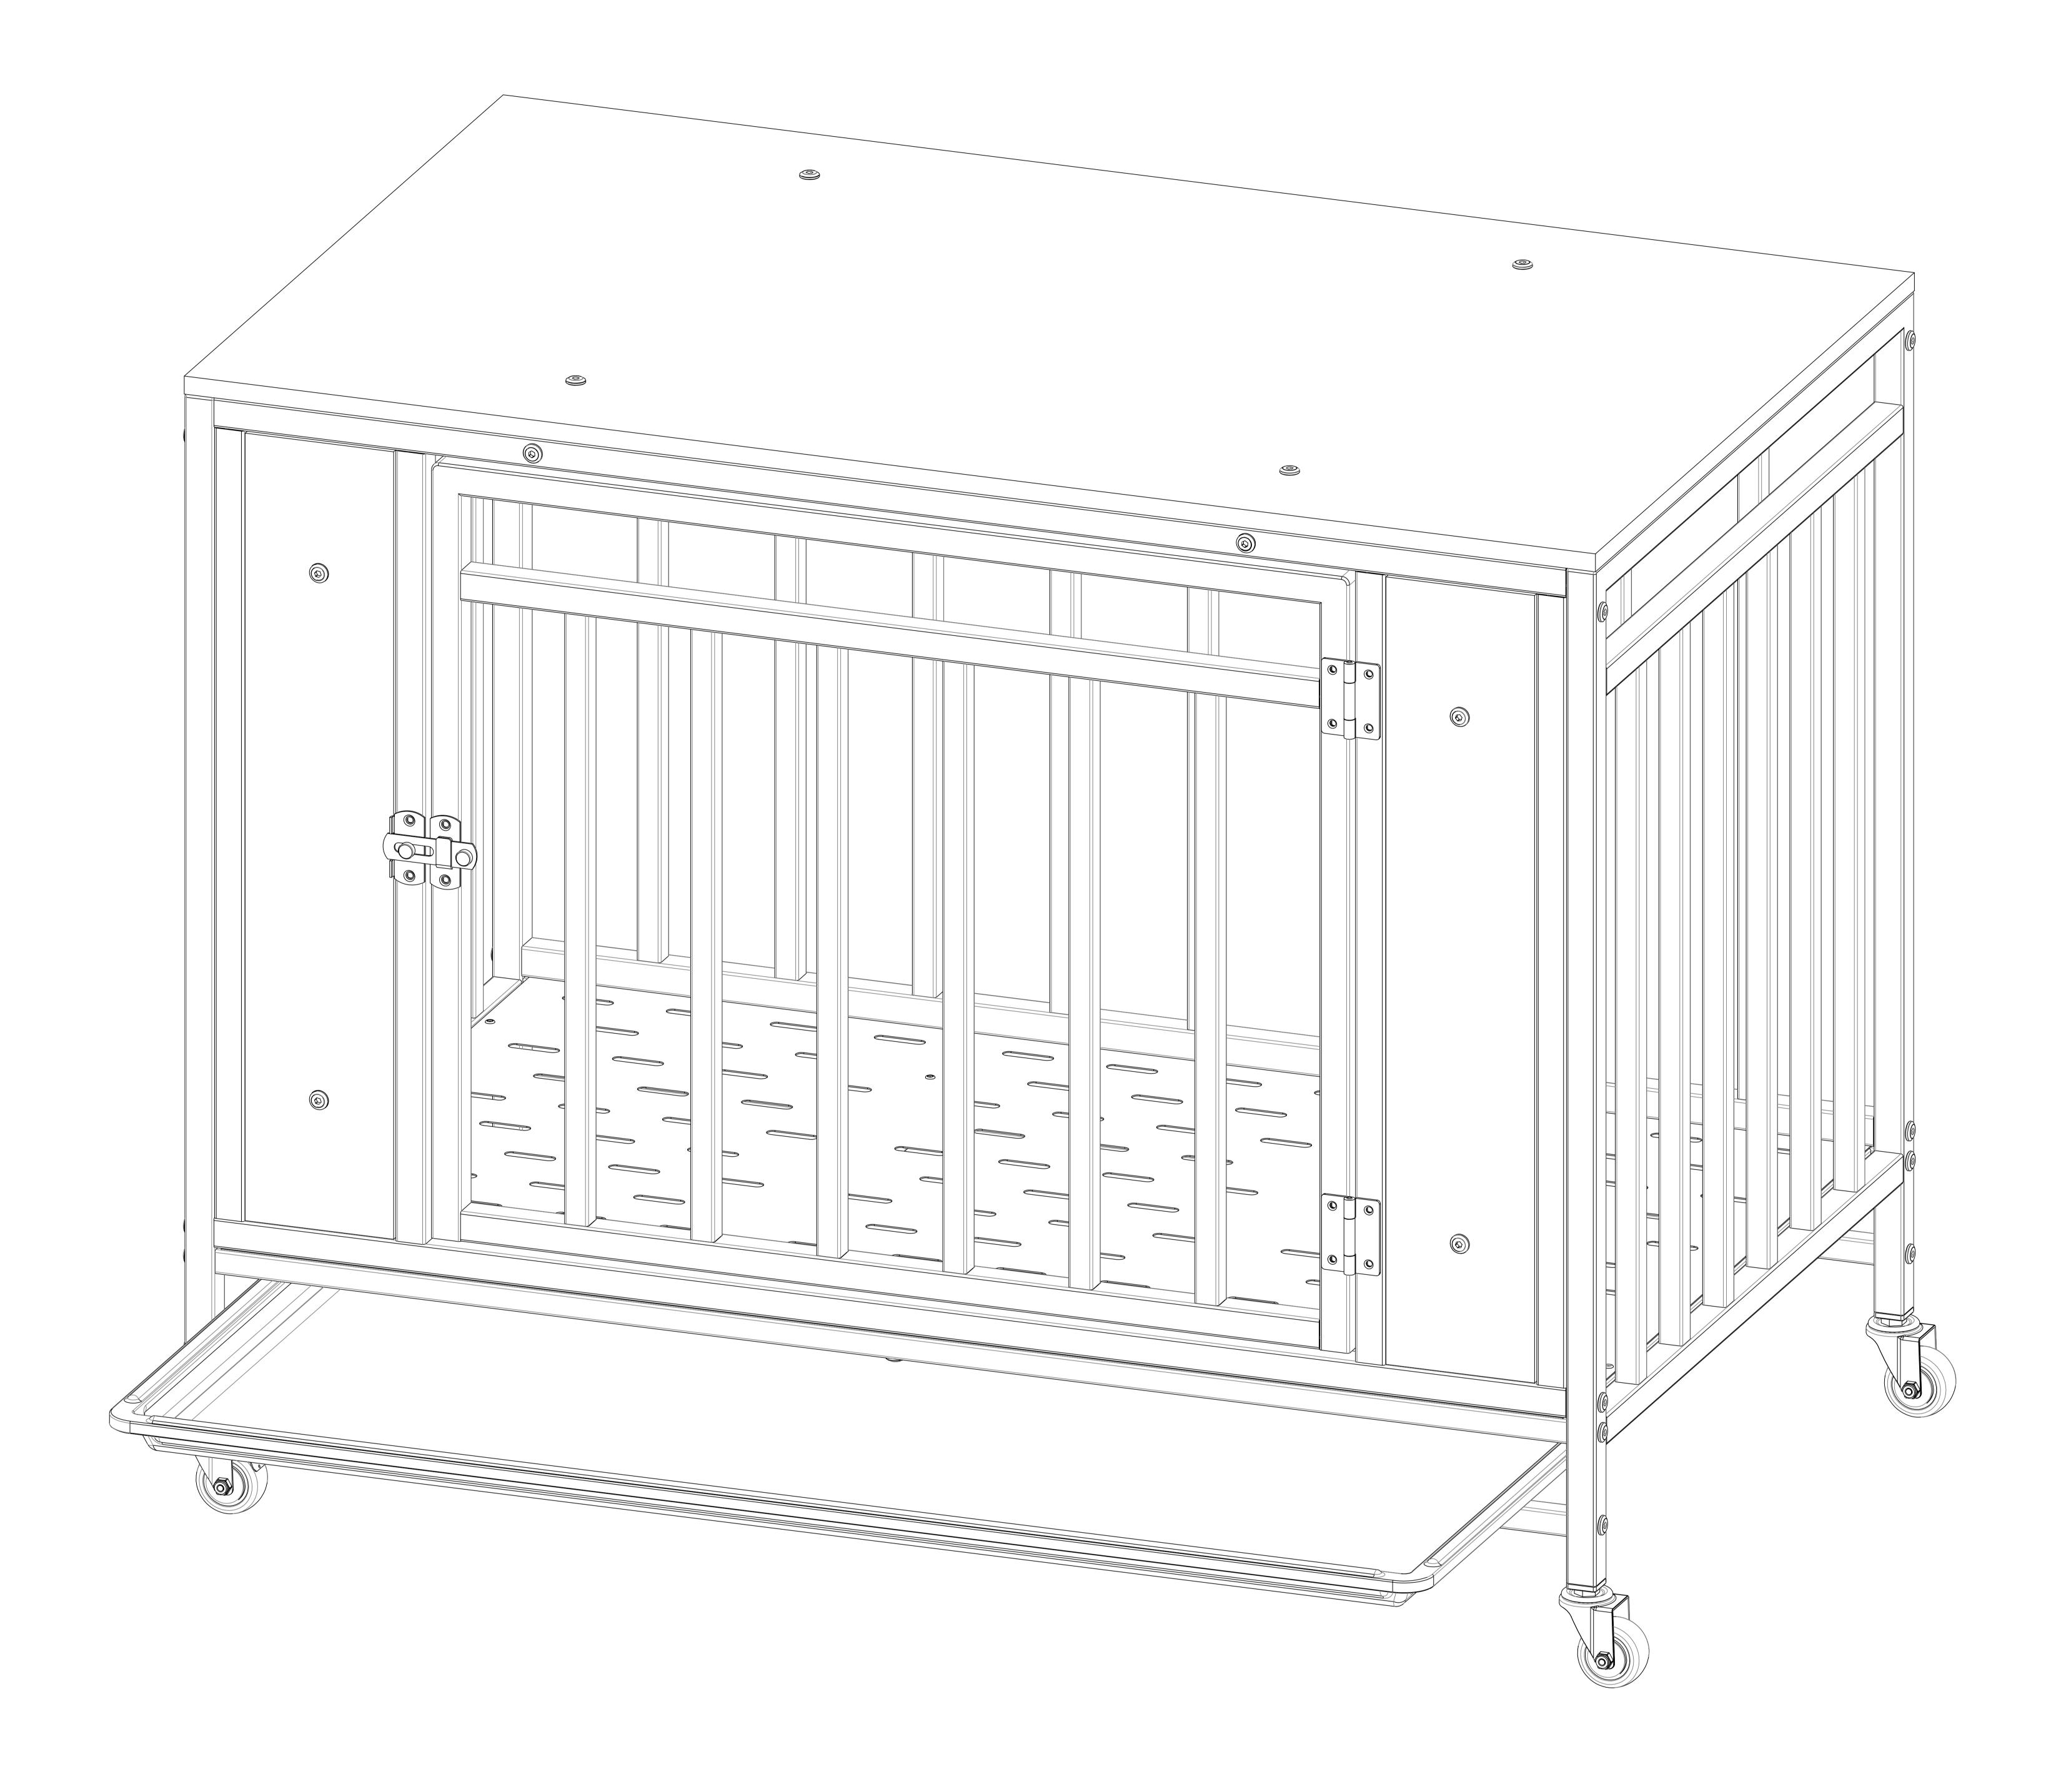

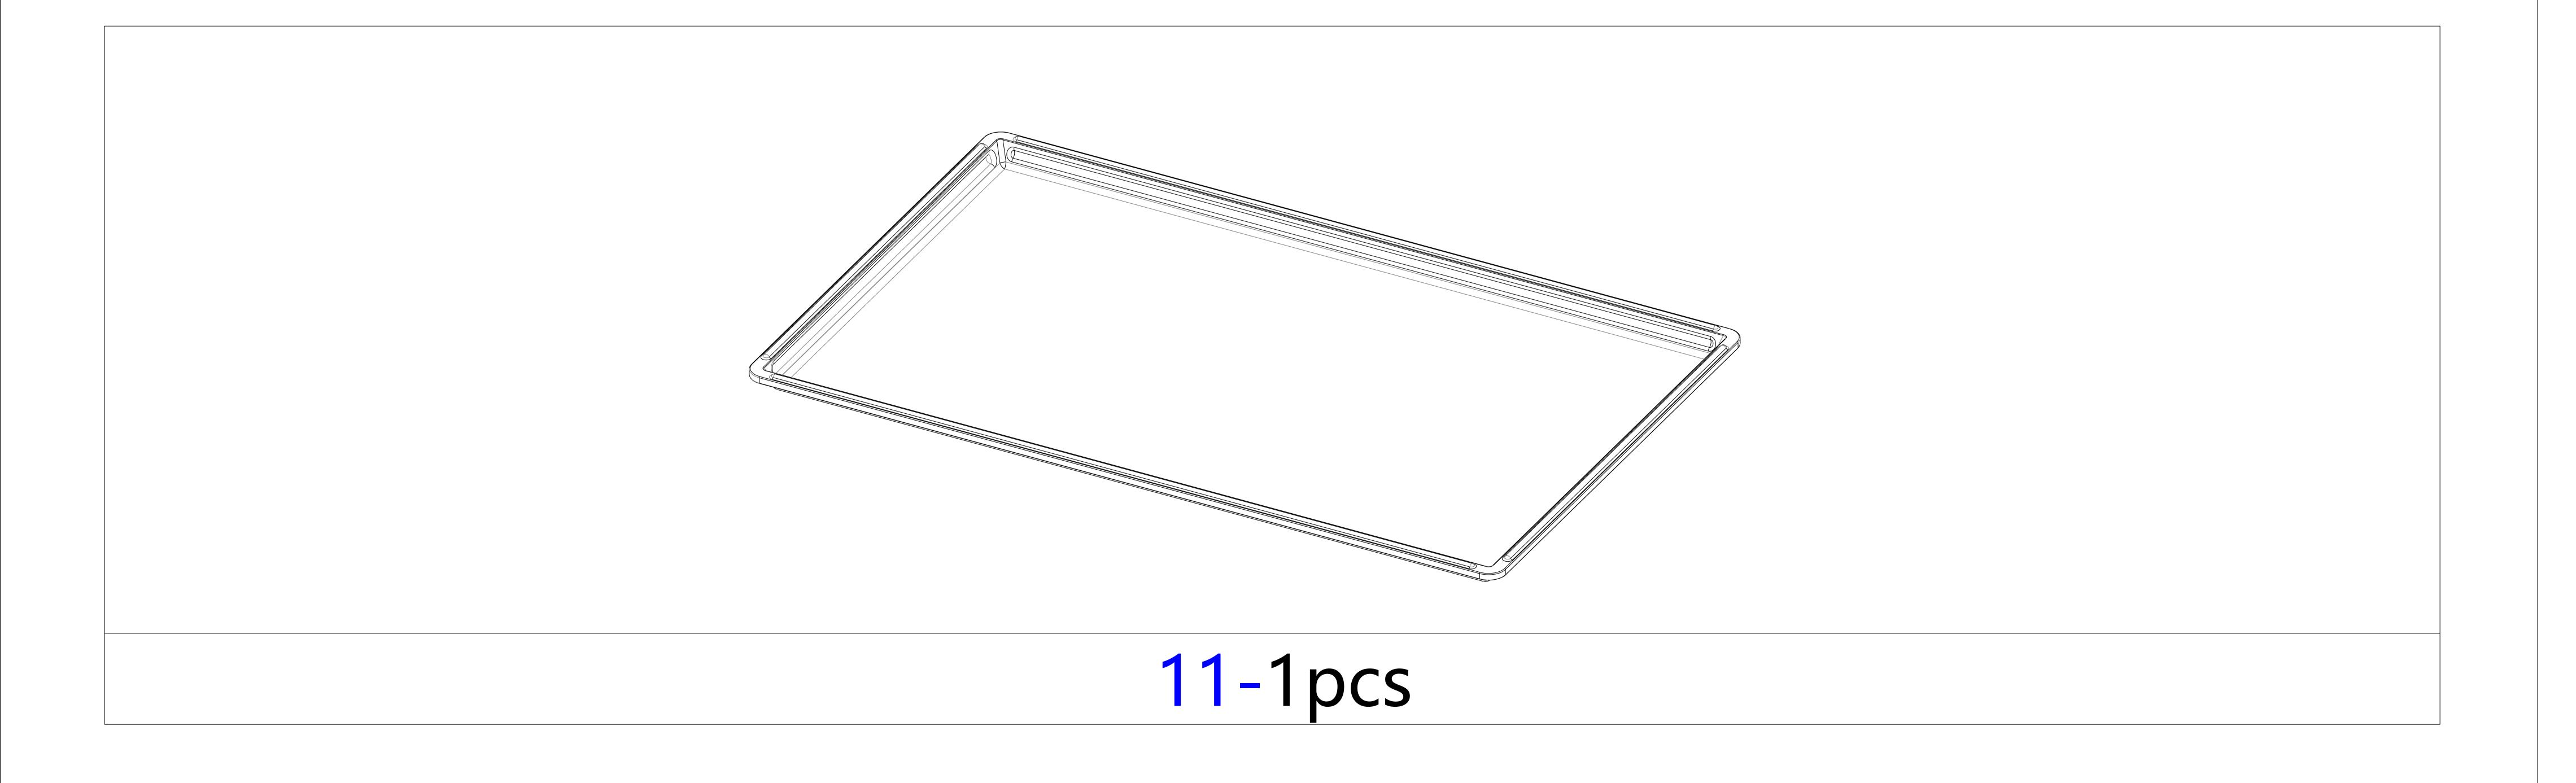

Step 9: Tighten all the hardware and complete the installation

