


Hall tree

Assembly Instructions - Please keep for future reference

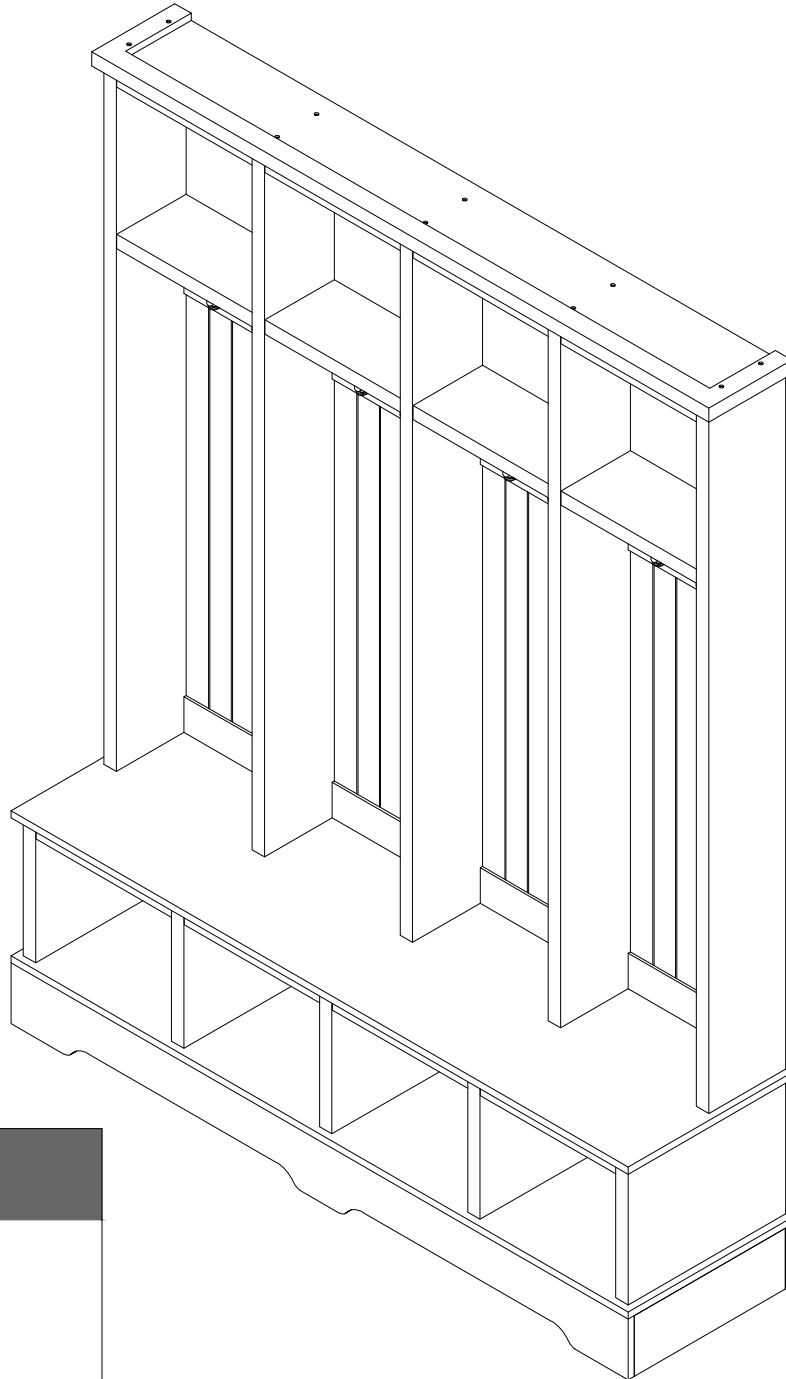

Dimensions

Width-59inch

Depth-15.7inch

Height-76.8inch

Important-Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.









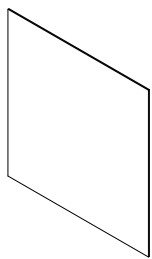


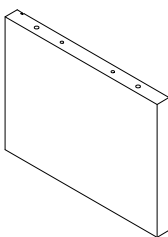
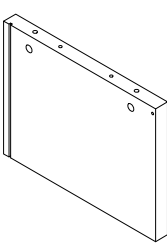
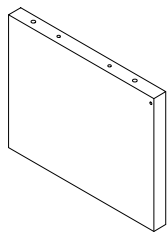





WARNING
In order to help prevent overturning –
please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Components - Fittinas



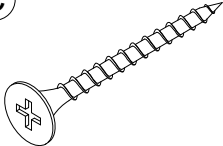










Please check you have all the panels listed below

<p>① x1</p>  <p>1500x202x30mm</p>	<p>② x1</p>  <p>1470x187x30mm</p>	<p>③ x1</p>  <p>1470x187x30mm</p>	<p>④ x3</p>  <p>1470x187x30mm</p>	<p>⑤ x8</p>  <p>330x30x15mm</p>
<p>⑥ x4</p>  <p>330x186x30mm</p>	<p>⑦ x4</p>  <p>330x176x15mm</p>	<p>⑧ x4</p>  <p>330x75x15mm</p>	<p>⑨ x4</p>  <p>347x337x2.5mm</p>	<p>⑩ x4</p>  <p>855x337x2.5mm</p>
<p>⑪ x1</p>  <p>1500x398x15mm</p>	<p>⑫ x1</p>  <p>290x385x30mm</p>	<p>⑬ x1</p>  <p>290x385x30mm</p>	<p>⑭ x3</p>  <p>290x367x30mm</p>	<p>⑮ x1</p>  <p>1500x398x15mm</p>
<p>⑯ x1</p>  <p>1417x29.7x2.5mm</p>	<p>⑰ x2</p>  <p>368x128x15mm</p>	<p>⑱ x1</p>  <p>1498x128x15mm</p>	<p>⑲ x1</p>  <p>1498x128x15mm</p>	


Components - Fittinas

Please check you have all the panels listed below

Note : The quantitie below are the correct amount to complete the assembly . In some cases more fittings may be supplied than are required.

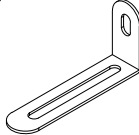(A)  Ø6*35mm Cam Bolt x 76+1	(B)  Ø15*9mm Cam lock x 76+1	(C)  5*50mm Screw x 30+1	(D)  6*30mm Dowel x 92+2	(E)  3*14mm Screw x 16+1
(F)  Clothes-Hook x 8	(G)  30*15mm Non-Slip mat x 10	(H)  3*14mm Screw x 40+2	(I)  Plastic Nail x 40+2	(J)  4*40mm Screw x 2
(K)  4*12mm Screw x 4	(L)  6*30mm Wall Anchor x 2	(M)  Iron sheet x 2		

Tools required

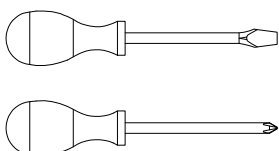

Phillips screwdriver
(medium large)


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

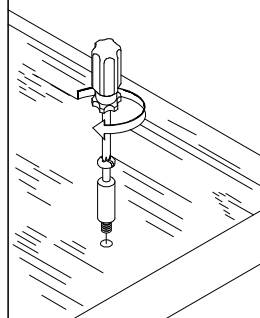

Step 2

Push the male camlock into the entry hole.

2

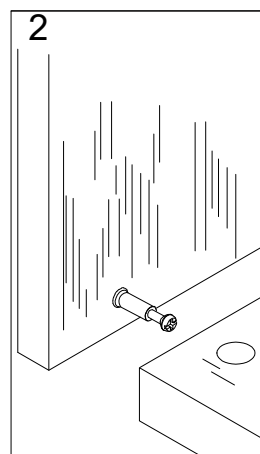


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

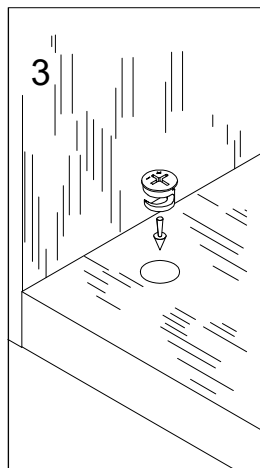


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

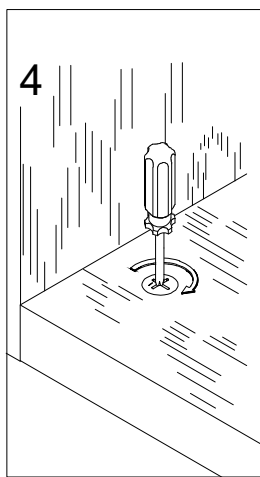


Assembly Instructions

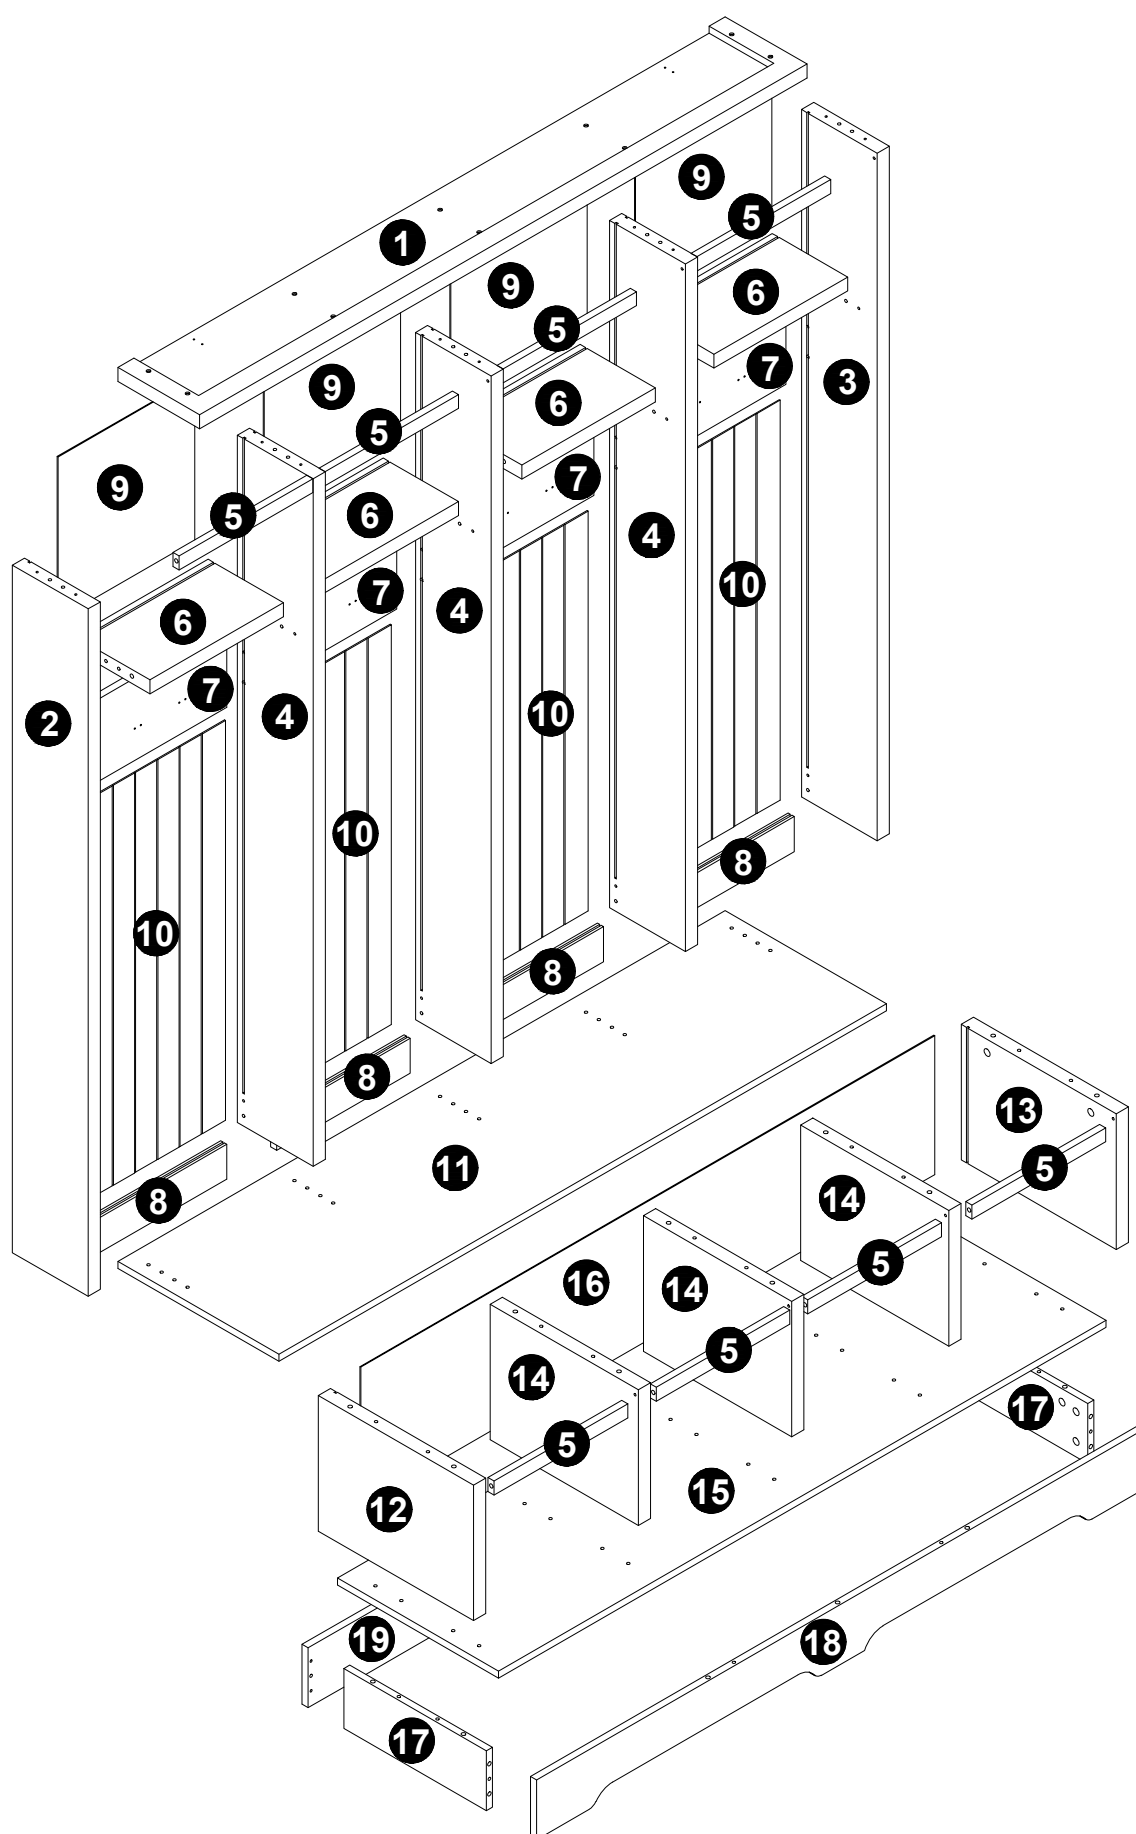


Assembly Instructions

step 1

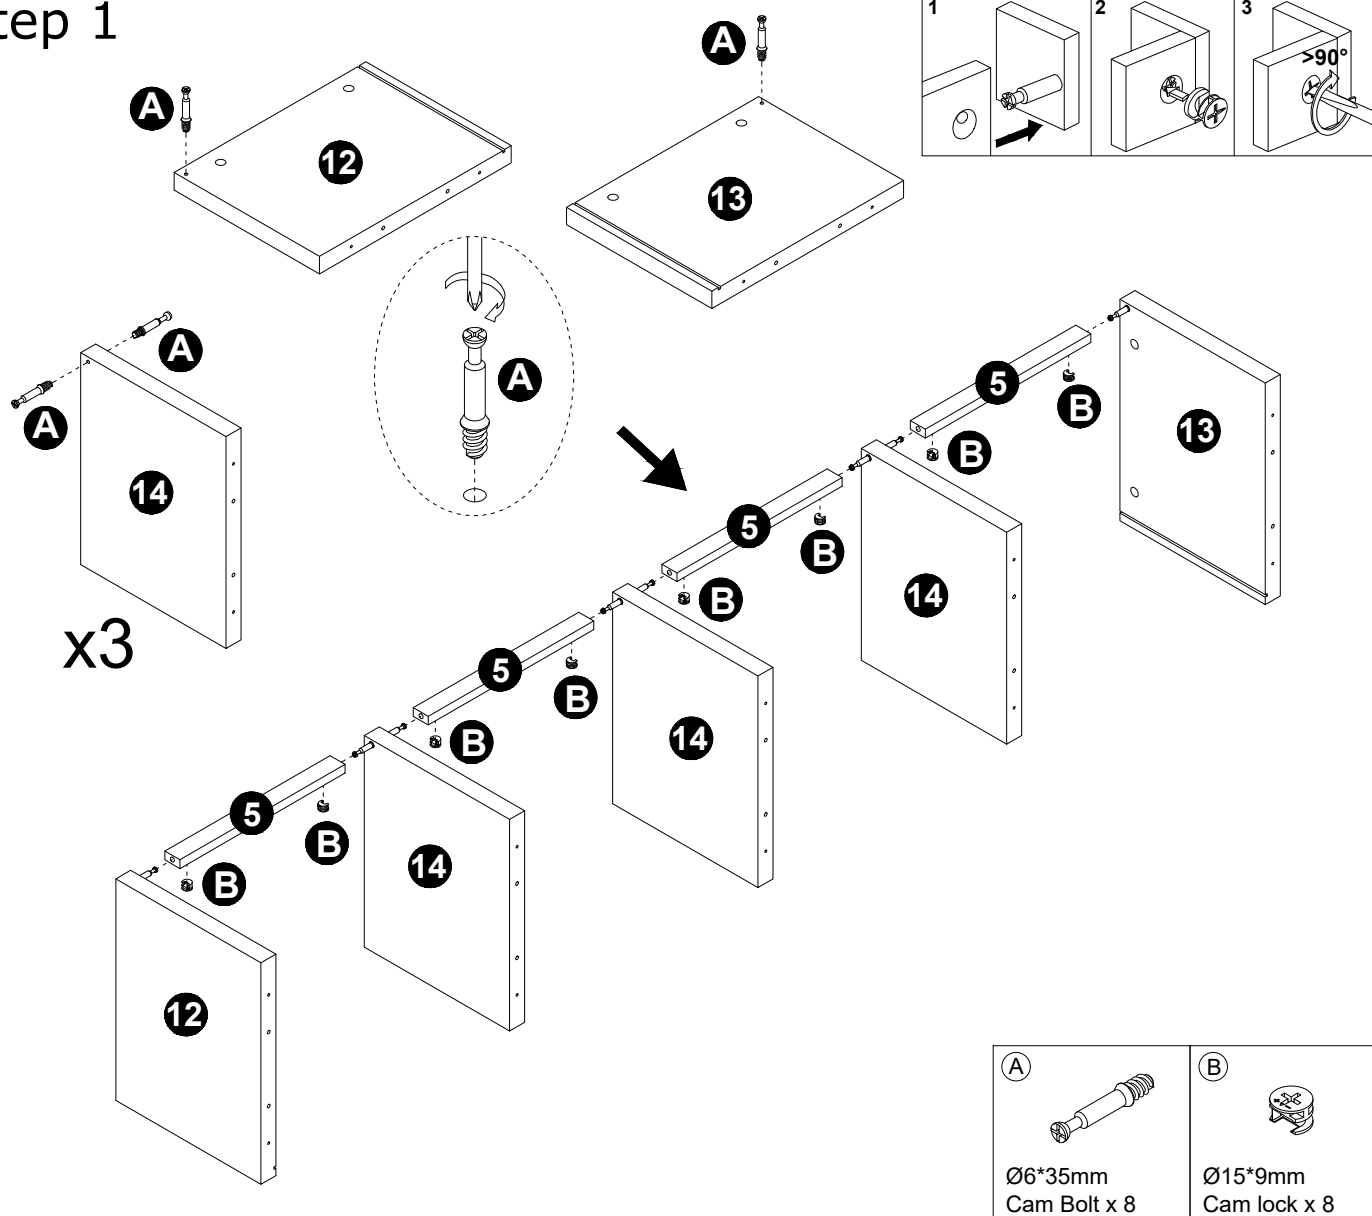


step 2

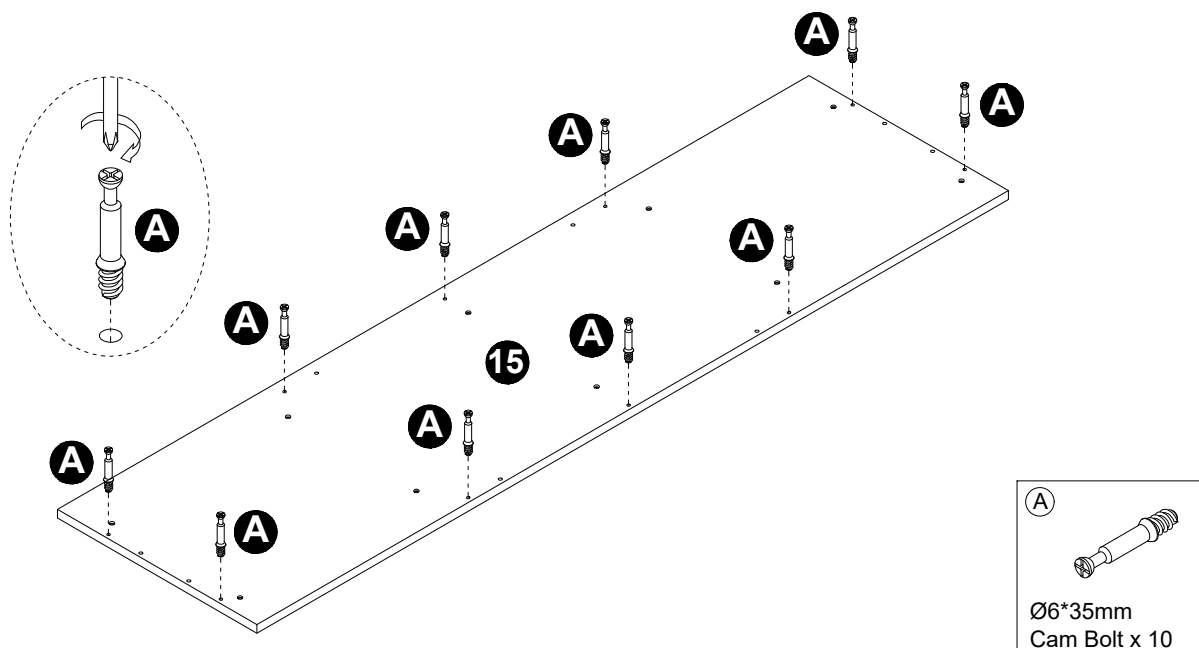


Assembly Instructions



step 3

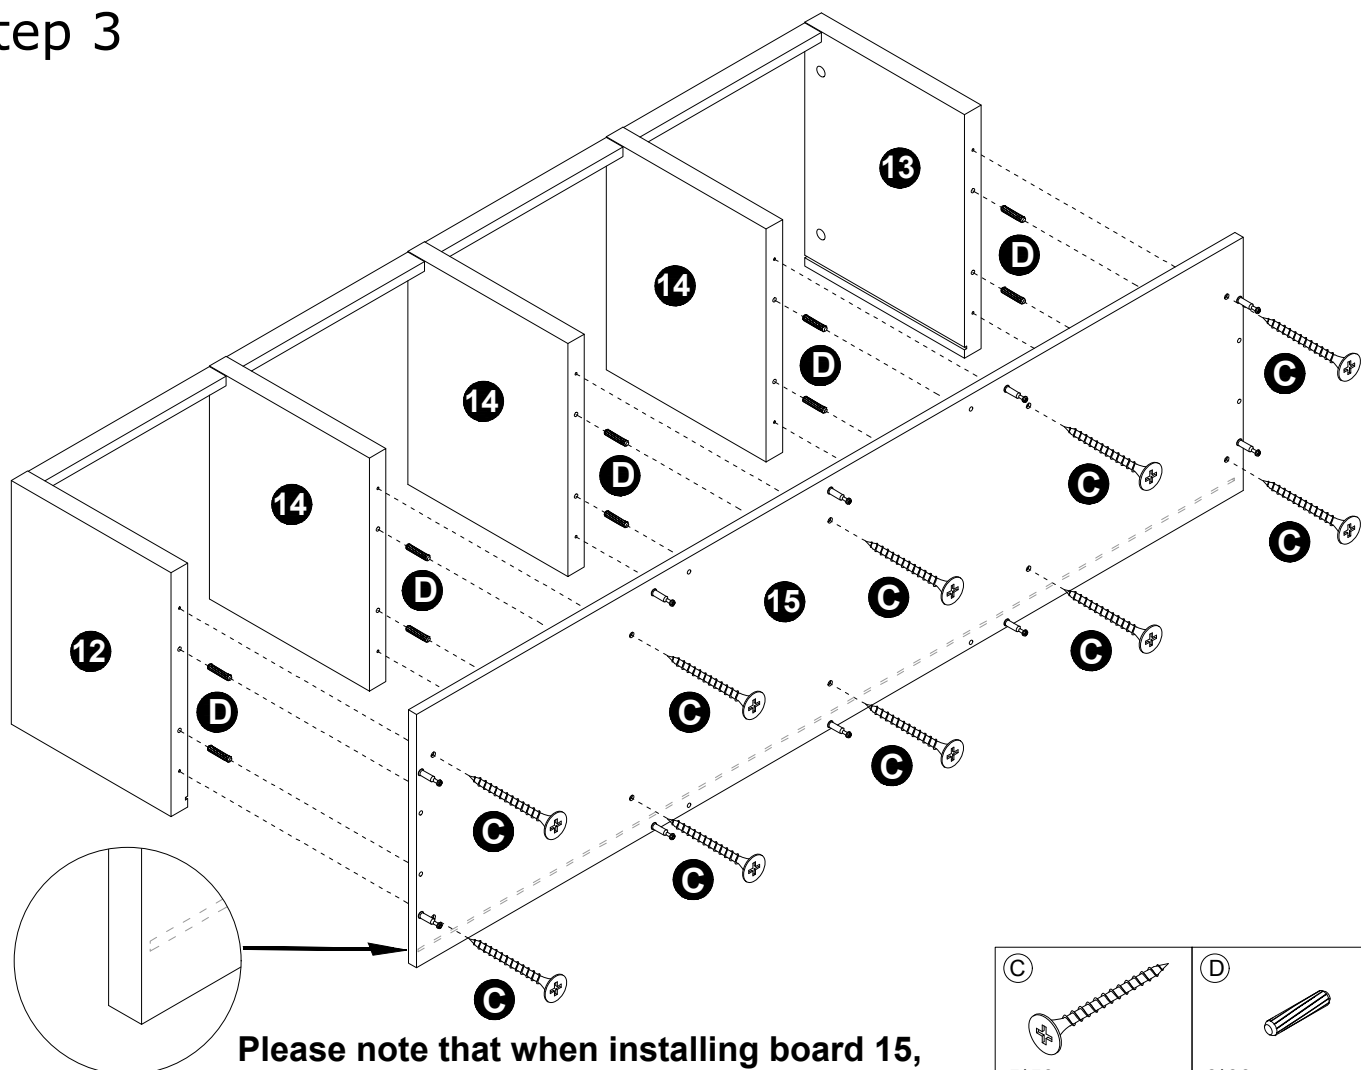

Please note that when installing board 15, the slot on the board is at the bottom.



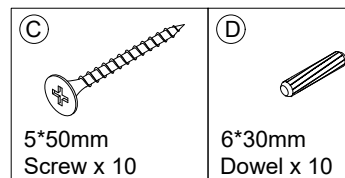


step 4


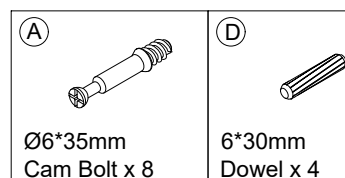
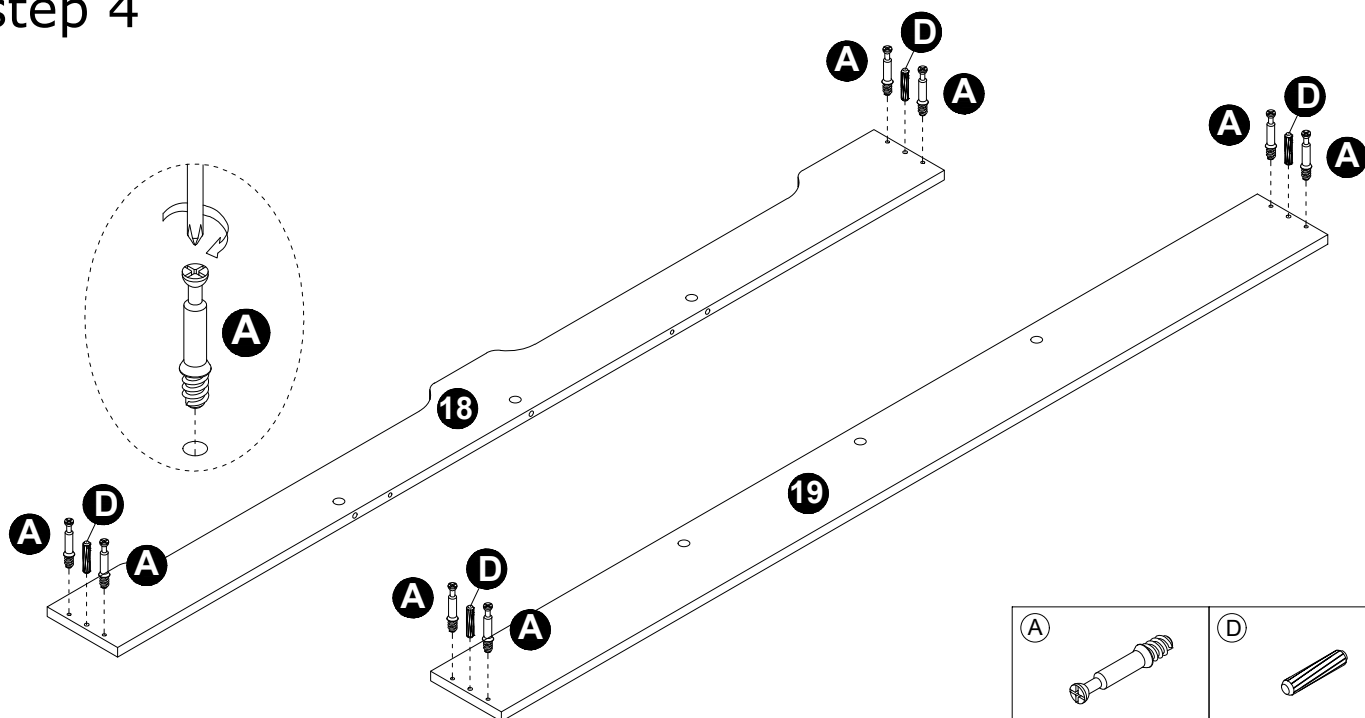


Assembly Instructions

step 5

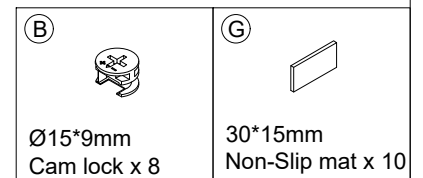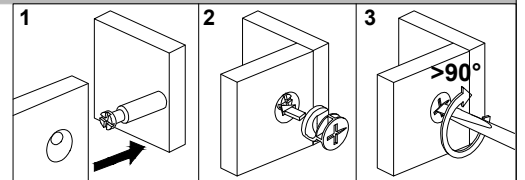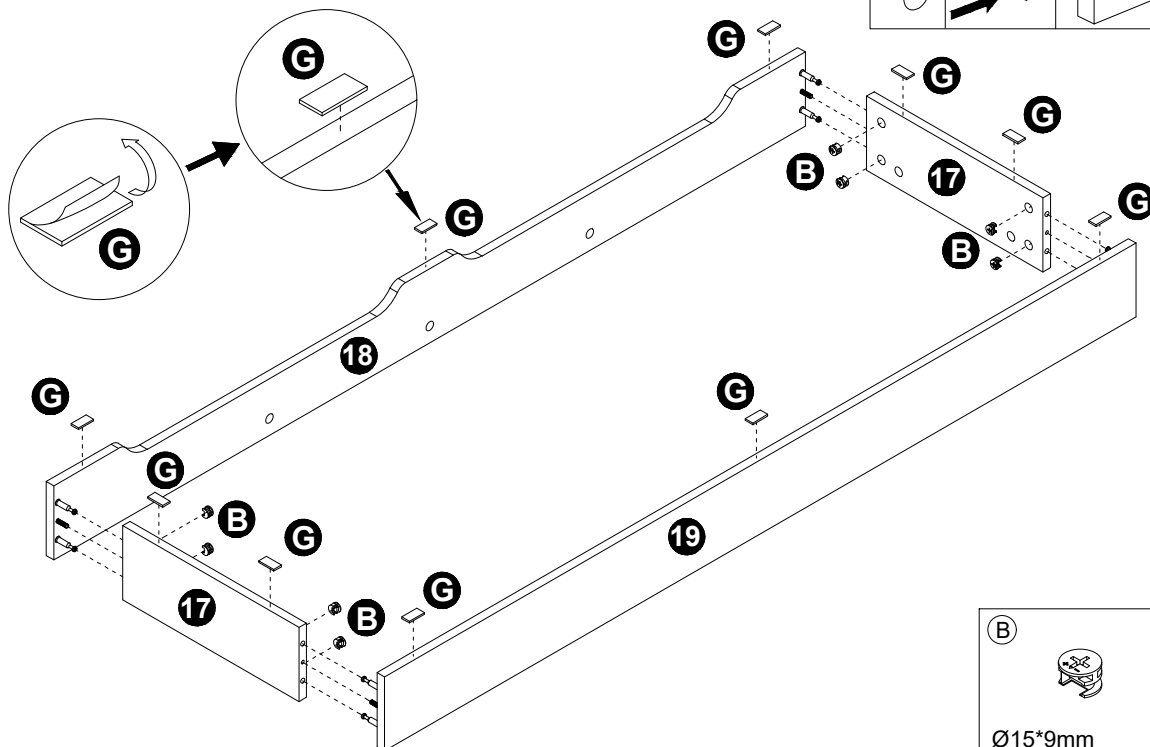


step 6

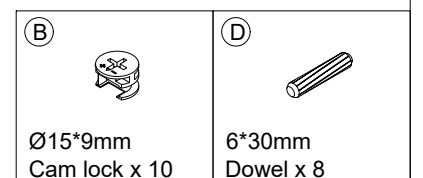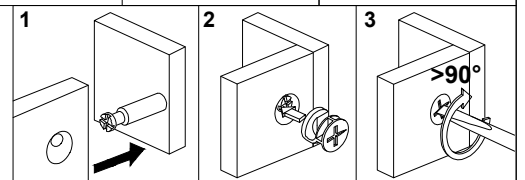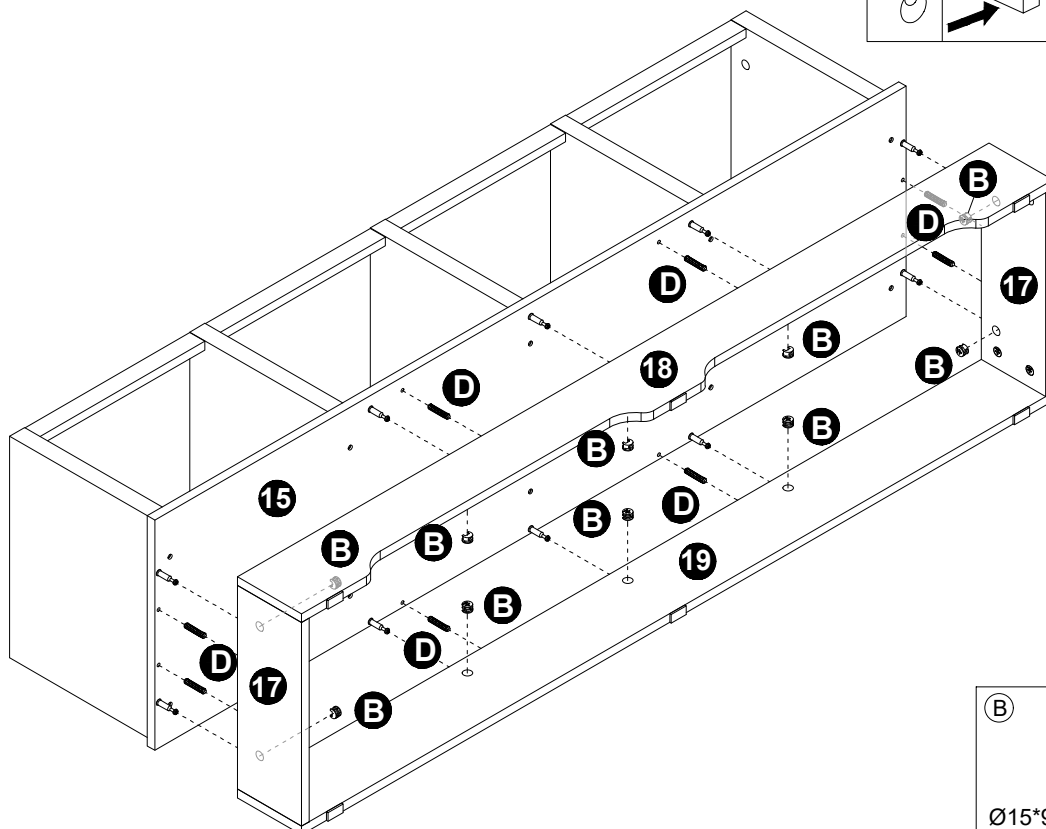

Assembly Instructions

step 7

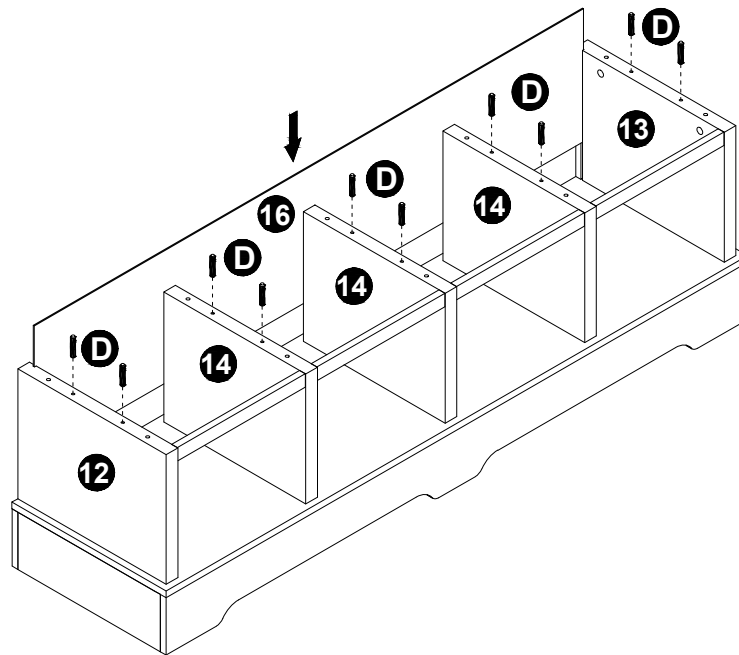


(D)




6*30mm
Dowel x 10

step 8

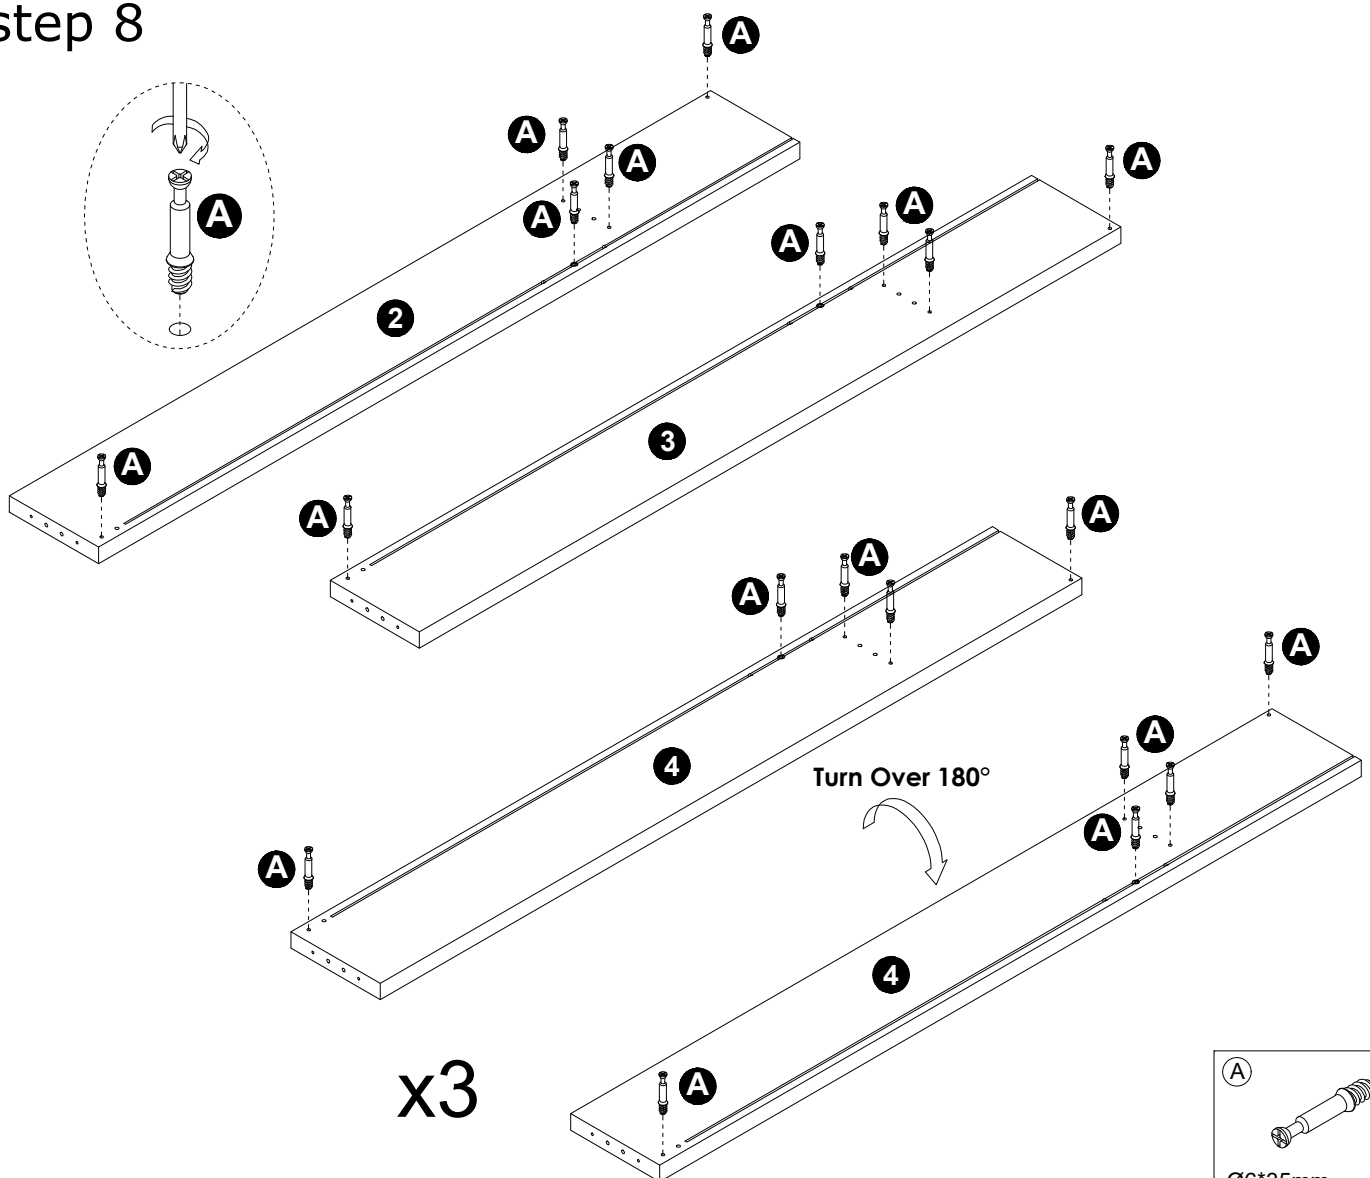



(A)




Ø6*35mm
Cam Bolt x 40

Assembly Instructions




step 9

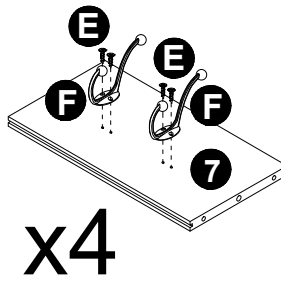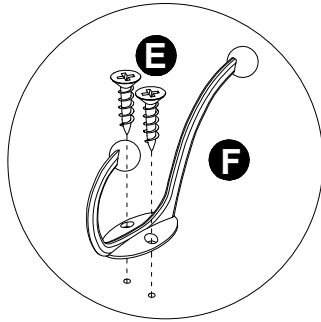



x4

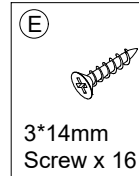

step 10

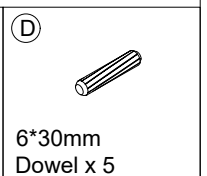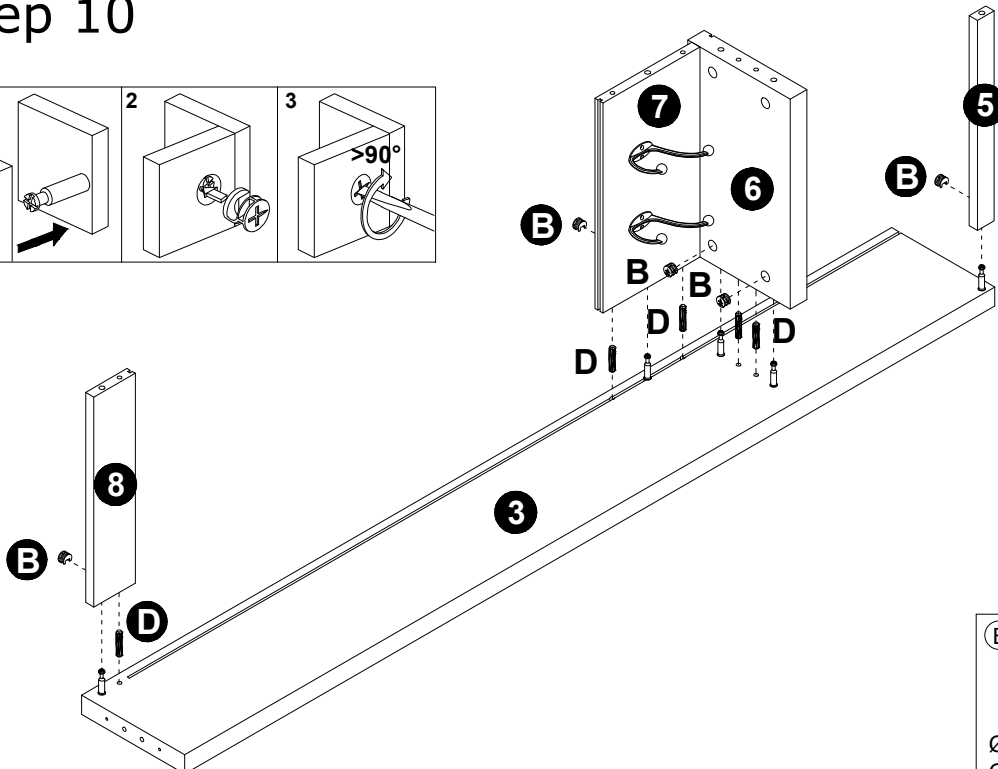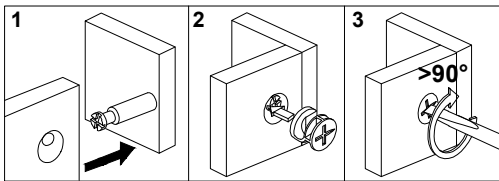


step 11

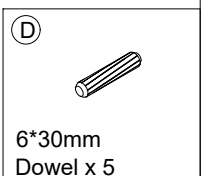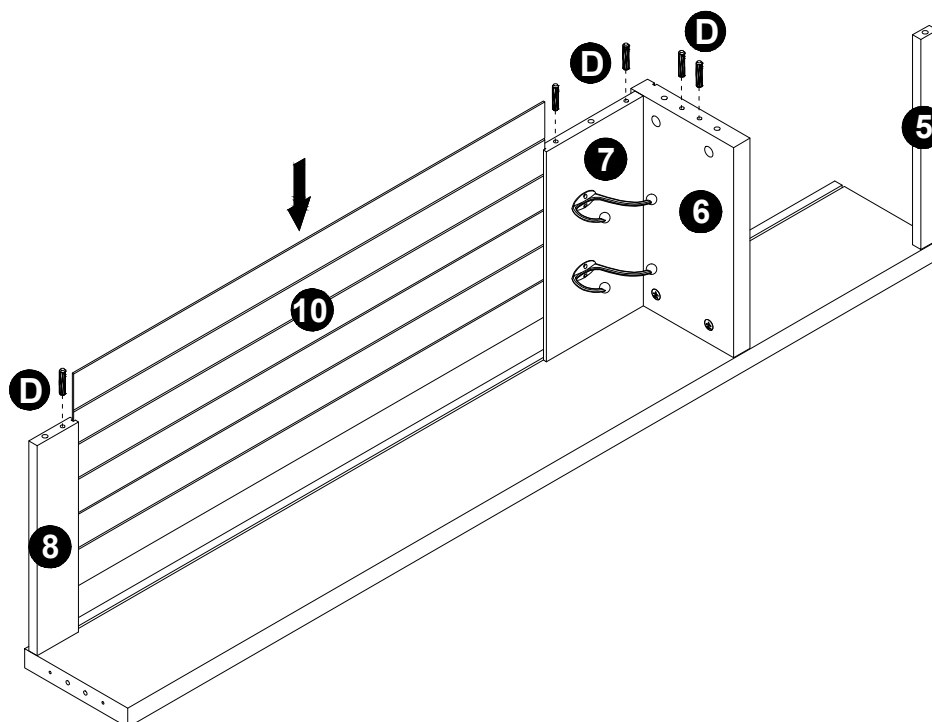

Assembly Instructions


step 12

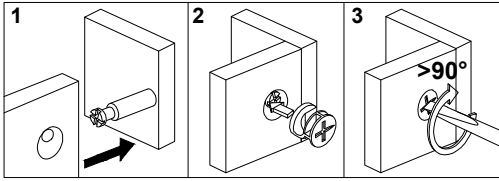


(B)



Ø15*9mm
Cam lock x 5

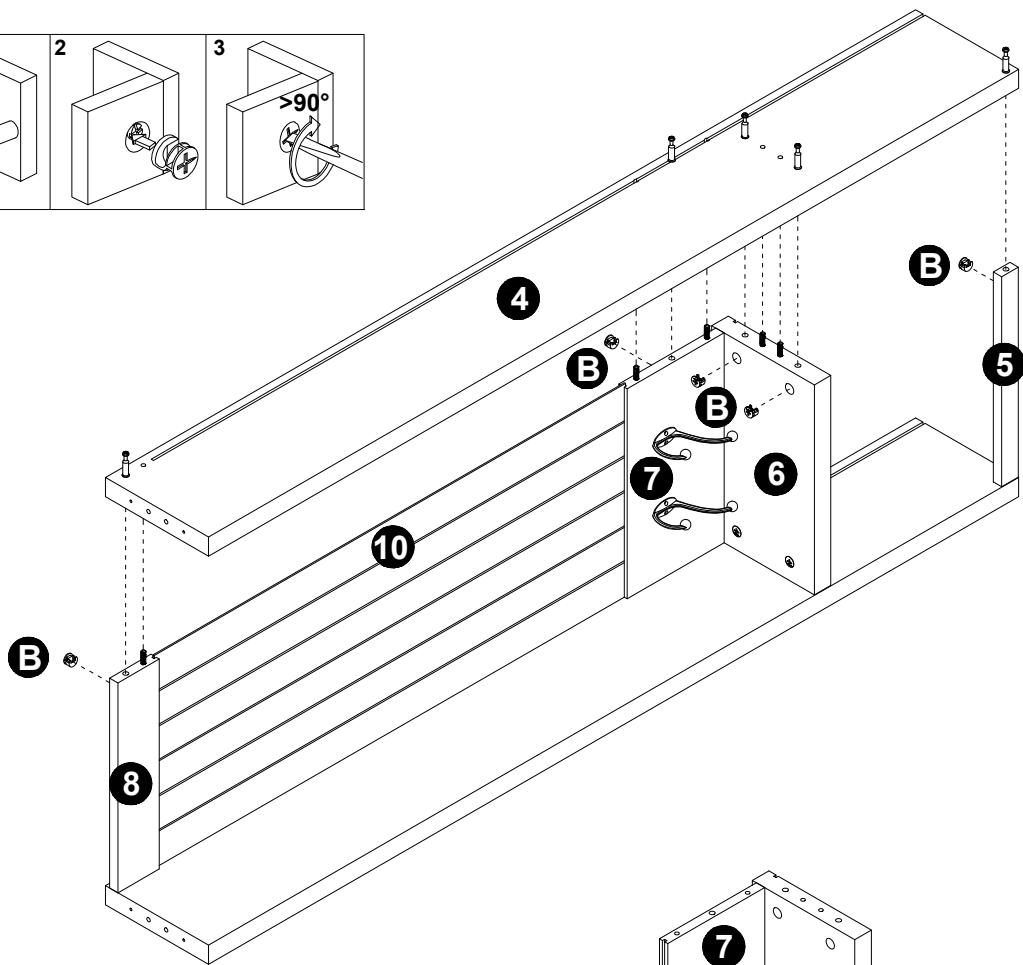

step 13

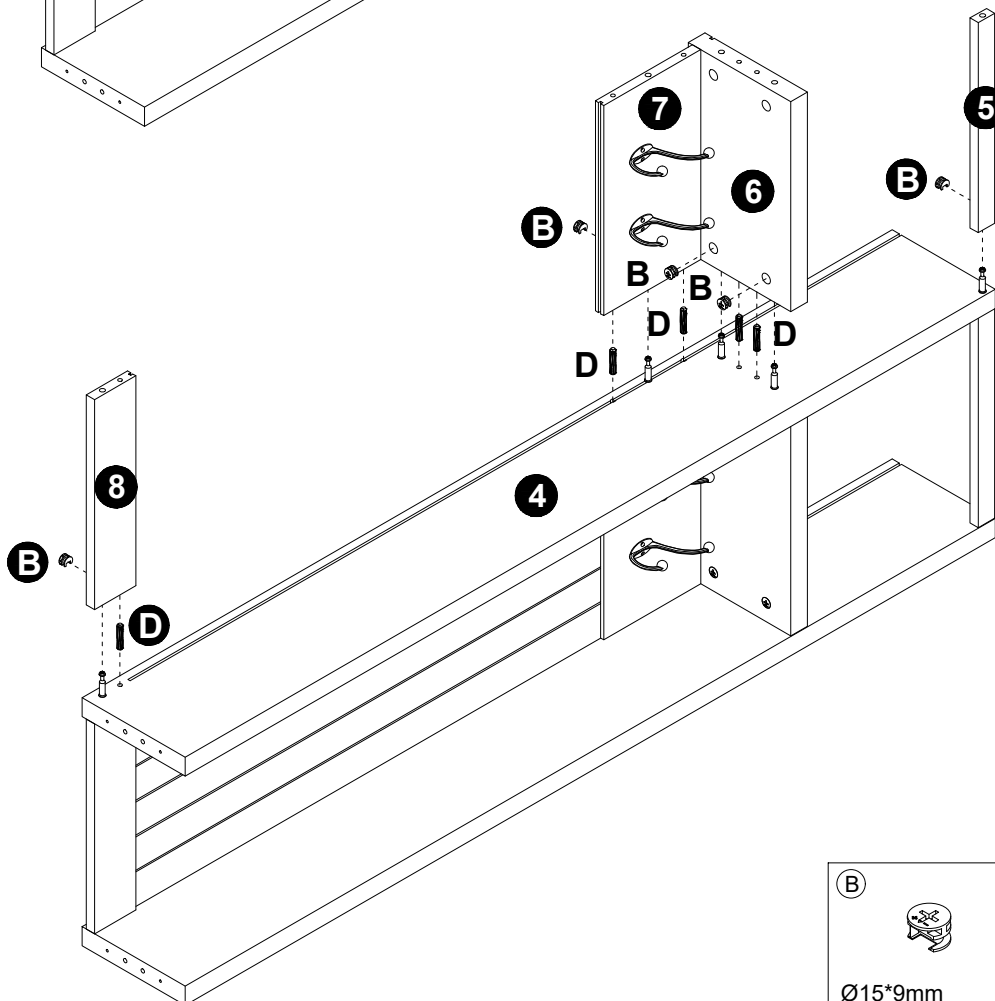

(B)



Ø15*9mm
Cam lock x 5



(D)





6*30mm
Dowel x 5

Assembly Instructions

step 14

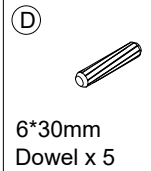
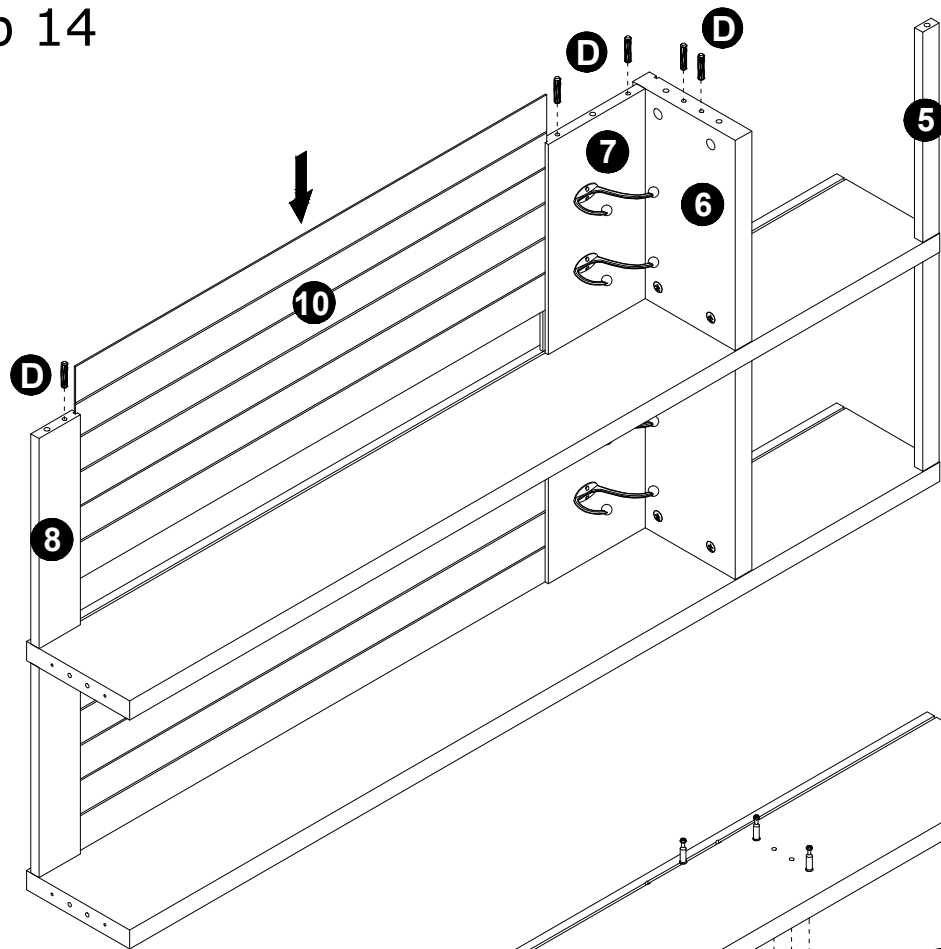


step 15

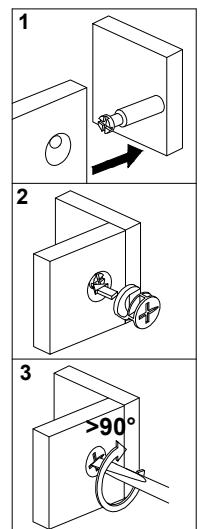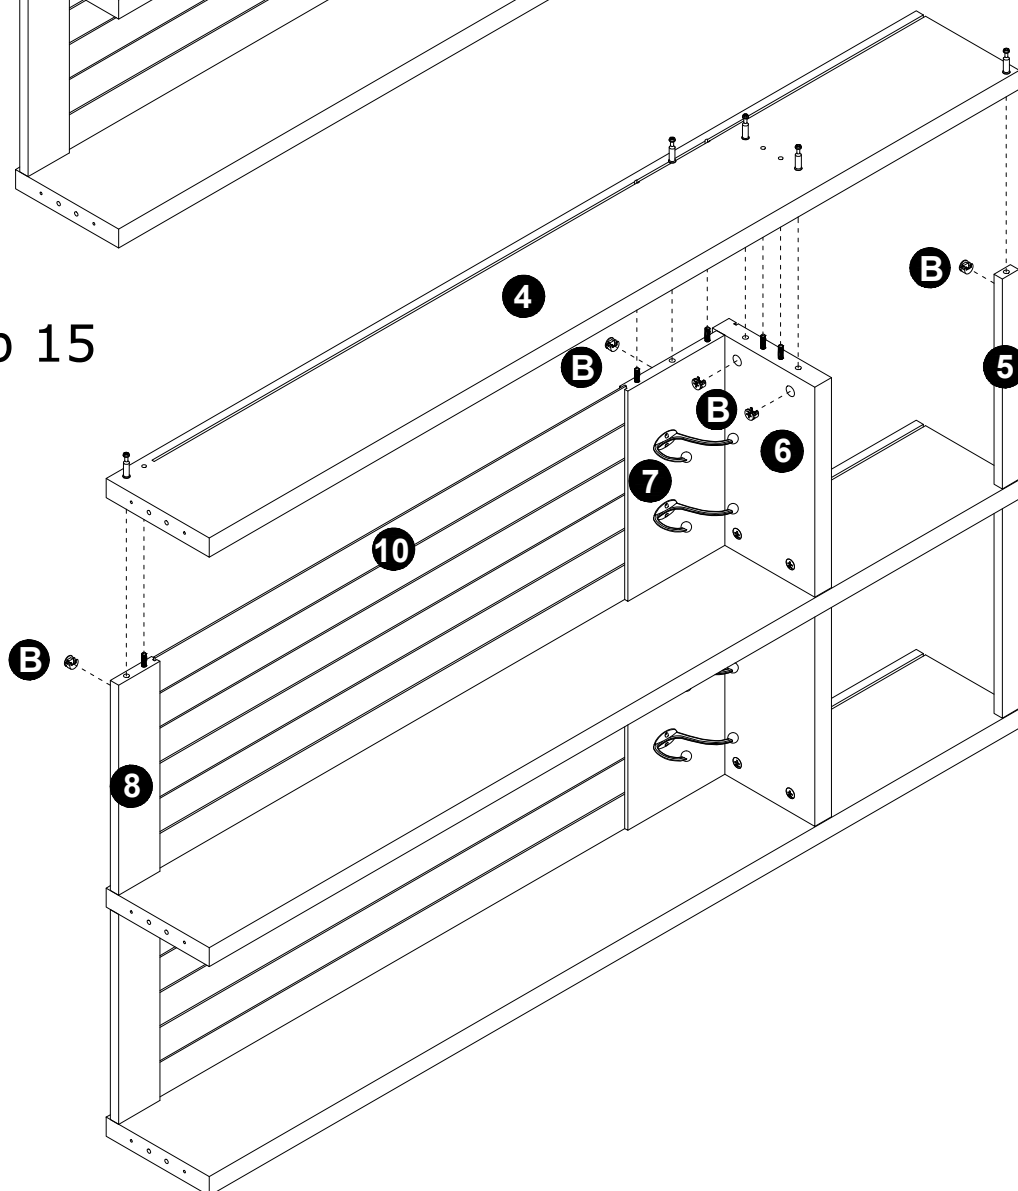


Assembly Instructions

step 16

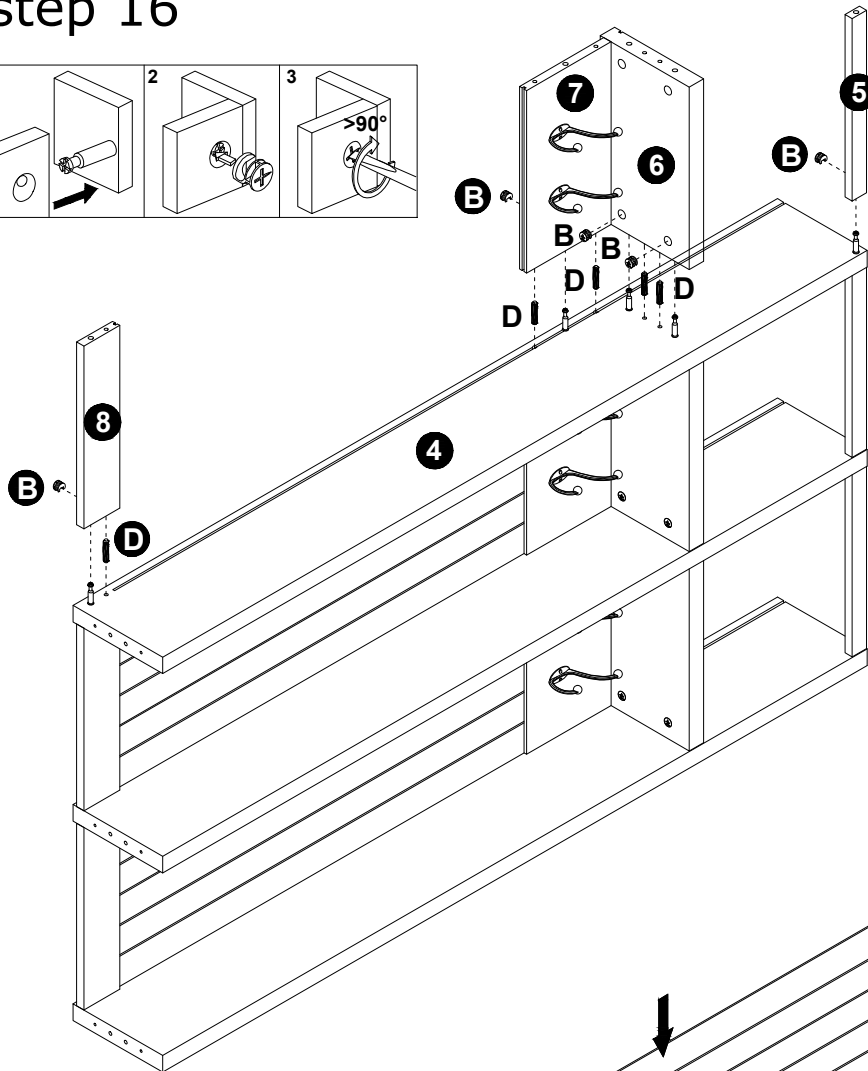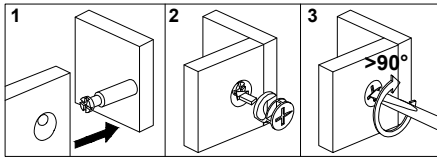


(B)

Ø15*9mm
Cam lock x 5

(D)

6*30mm
Dowel x 5

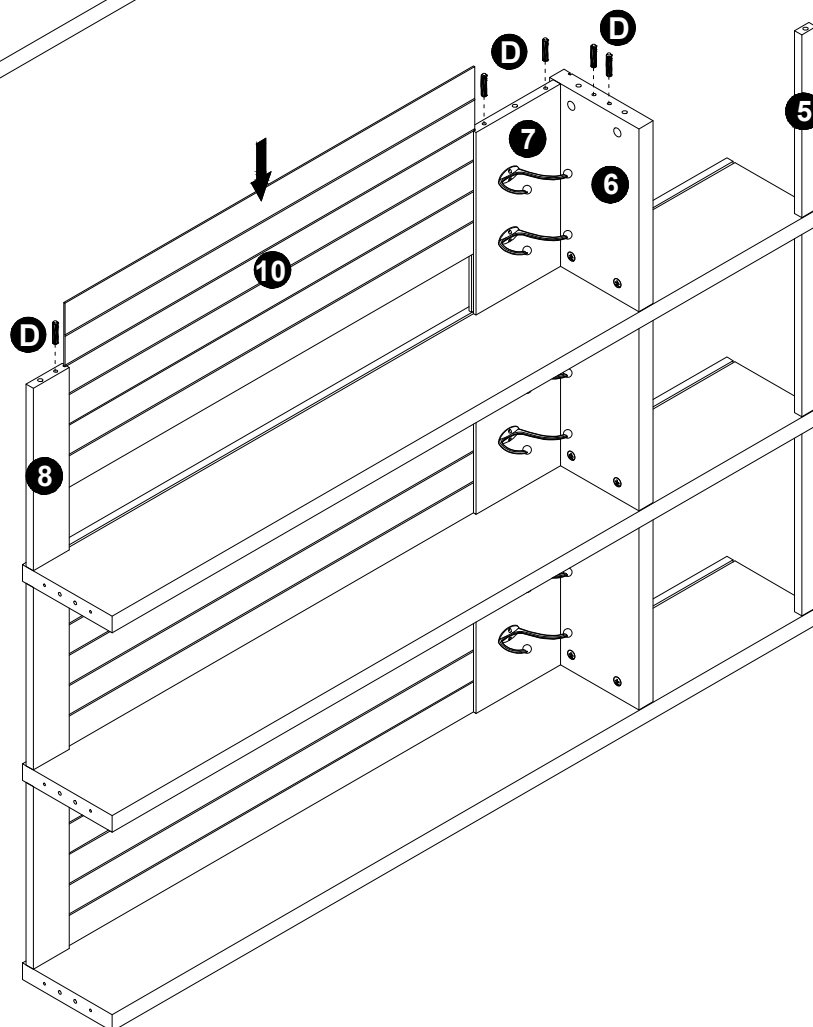step 17




(D)

6*30mm
Dowel x 5

Assembly Instructions

step 18

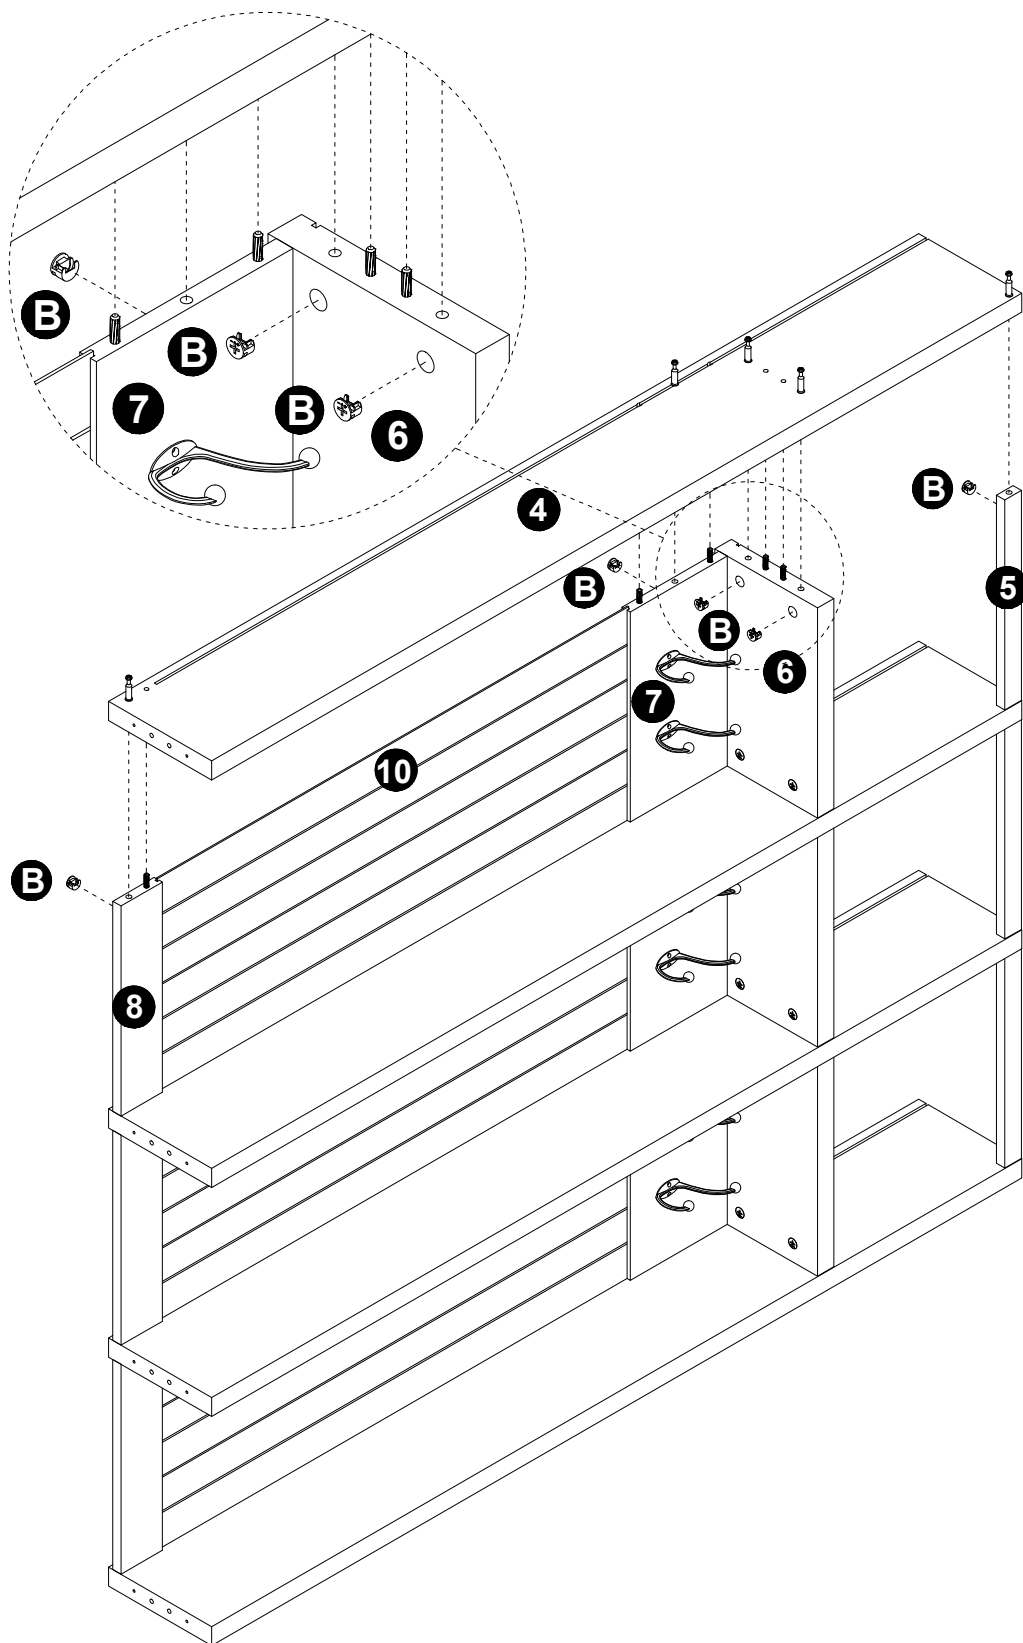



(B)





Ø15*9mm
Cam lock x 5

Assembly Instructions

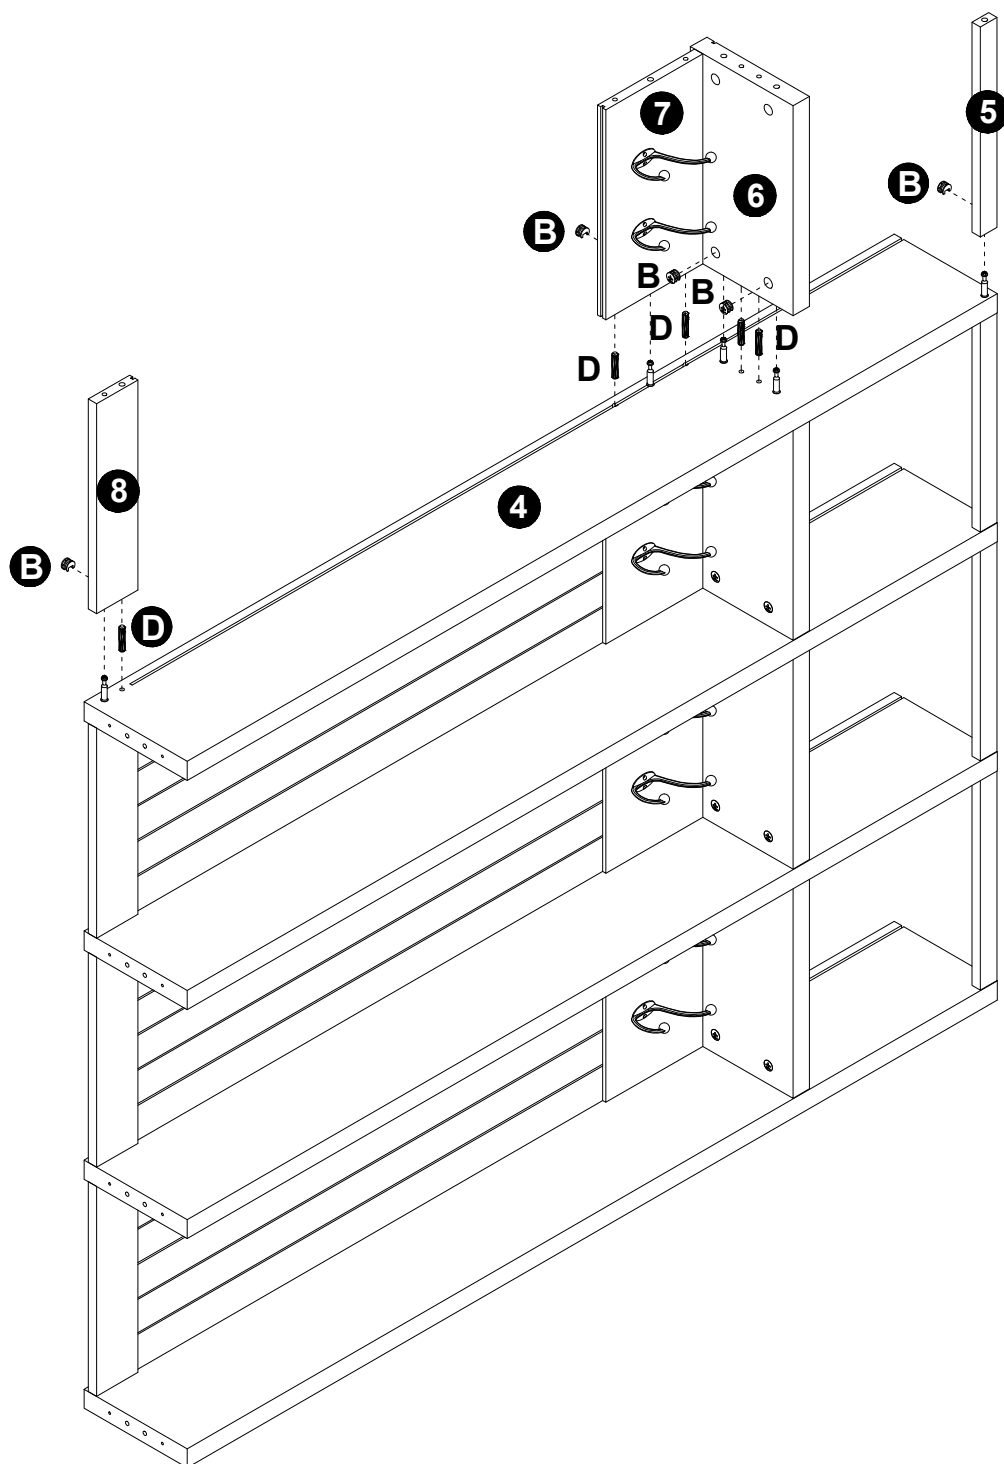
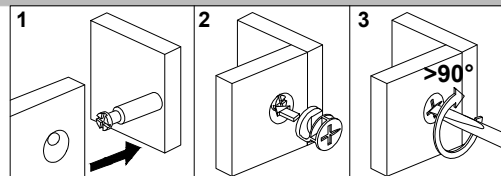
step 19



 Ø15*9mm Cam lock x 5	 6*30mm Dowel x 5
--	--


Assembly Instructions

step 20

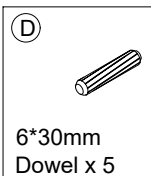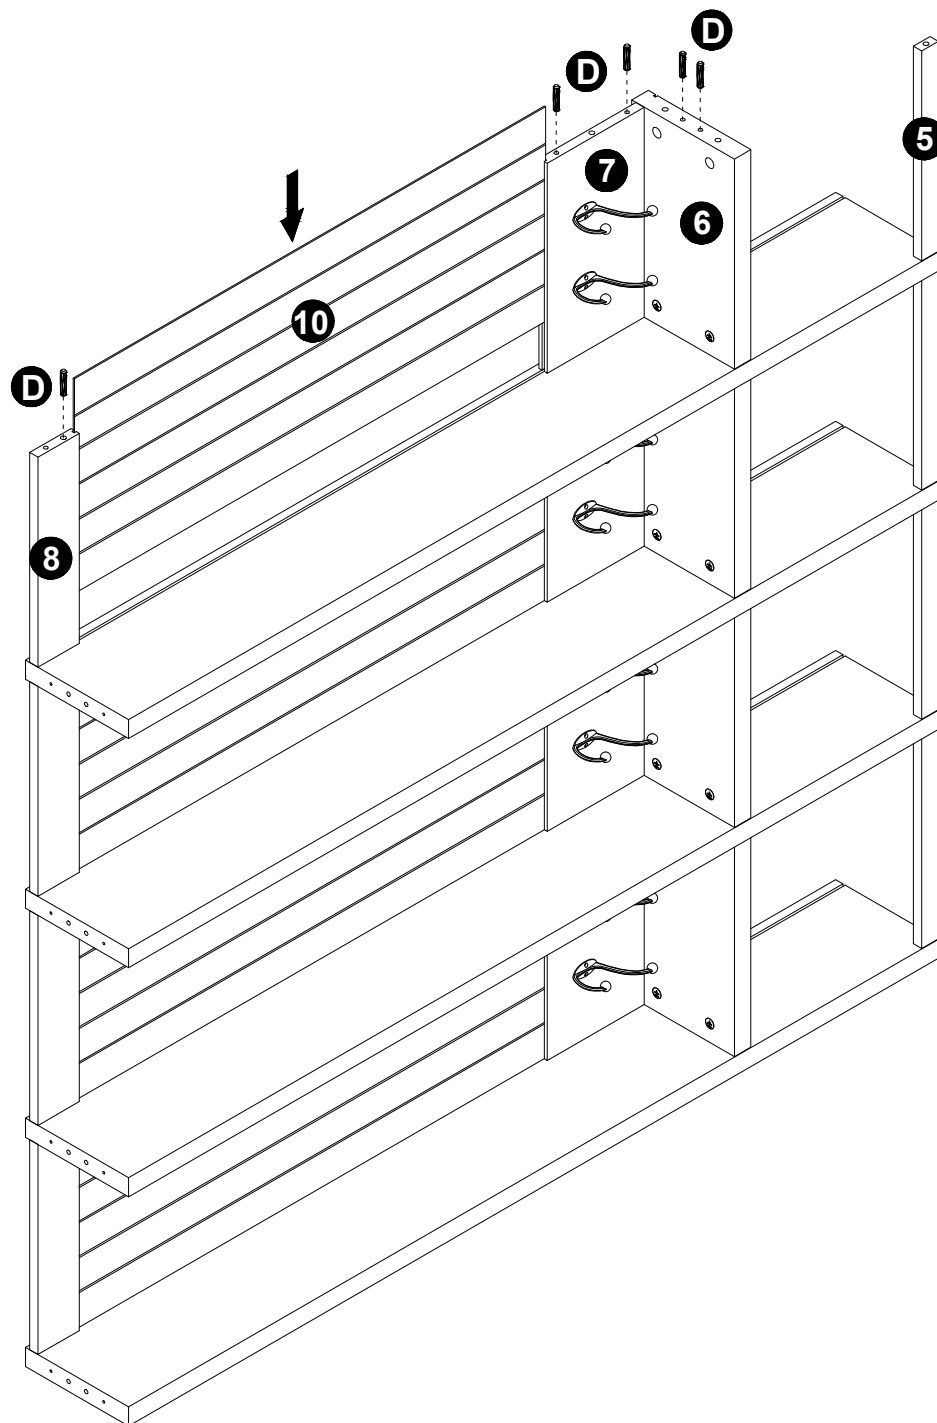

Assembly Instructions

step 21

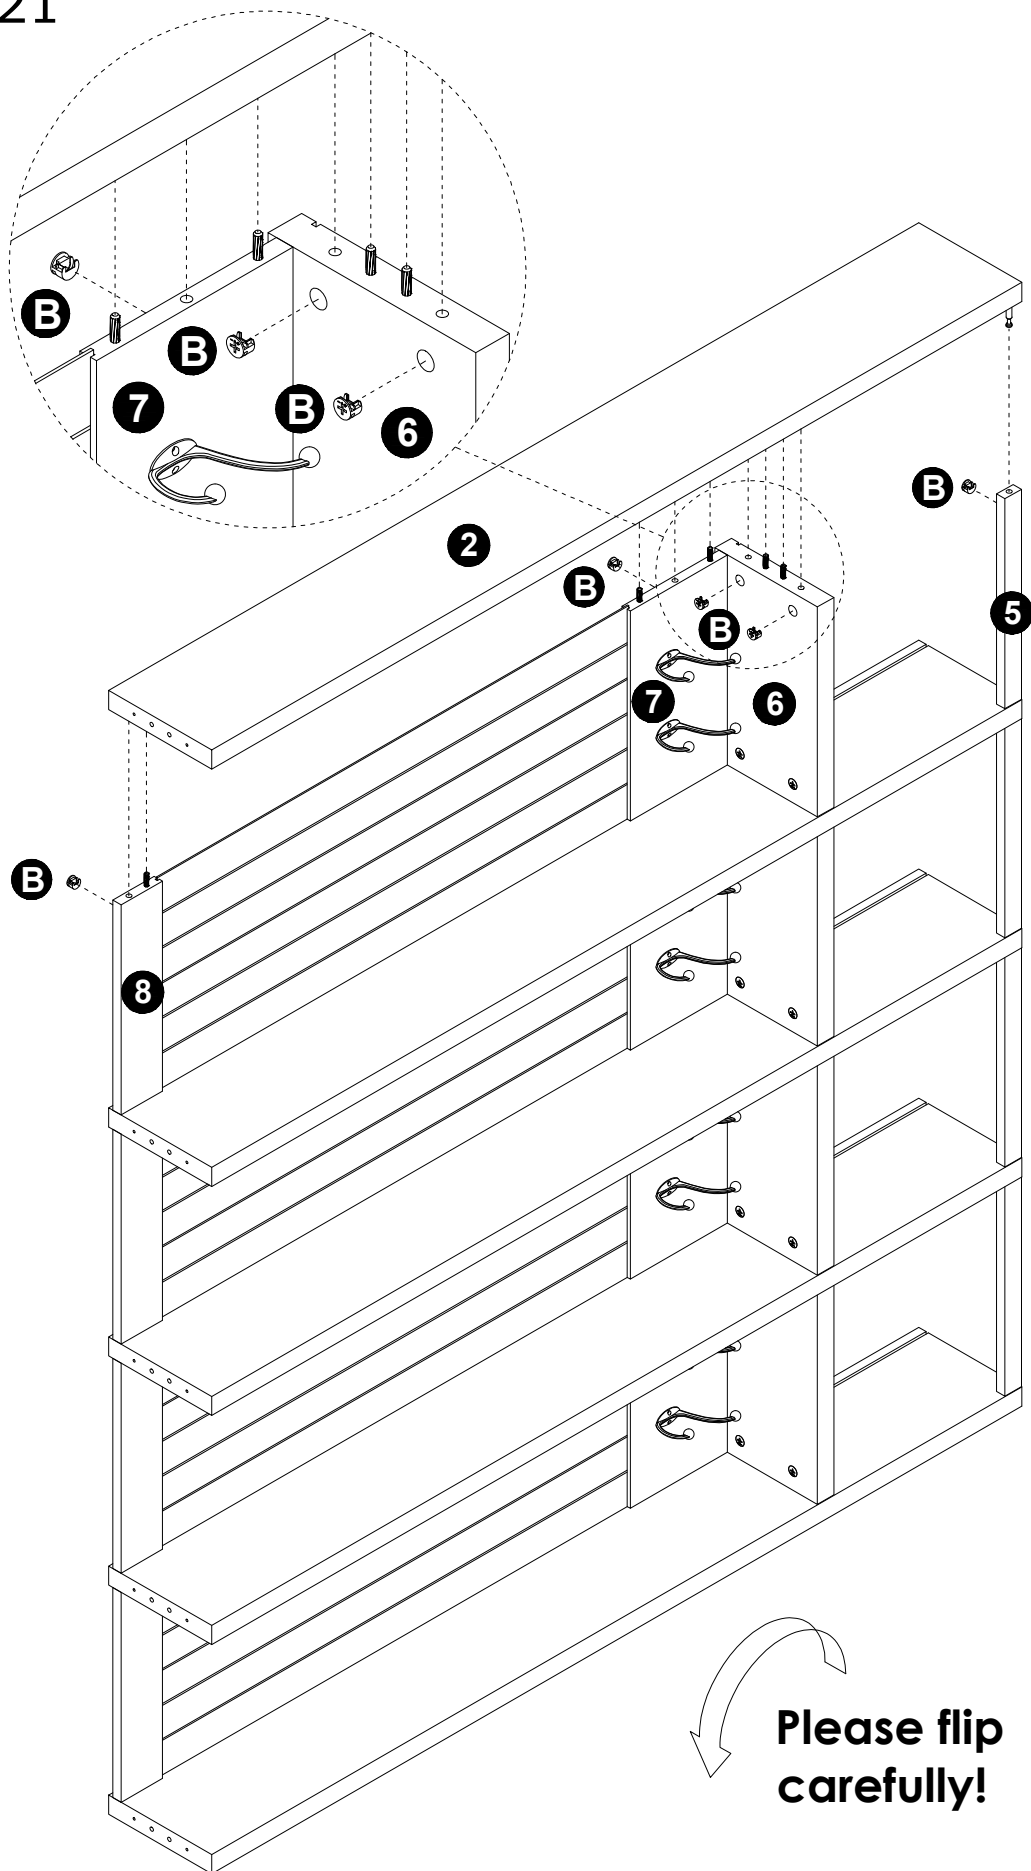

Please flip
carefully!


(B)




Ø15*9mm
Cam lock x 5


Assembly Instructions


step 22

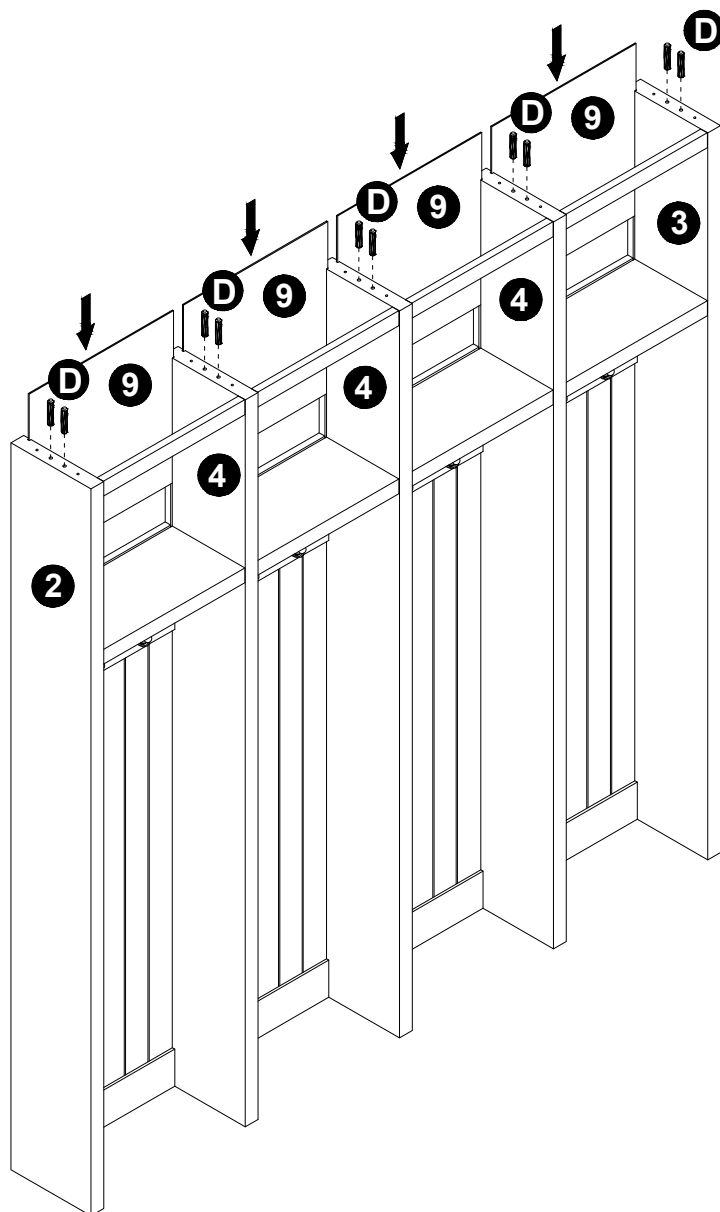


(D)

6*30mm
Dowel x 10

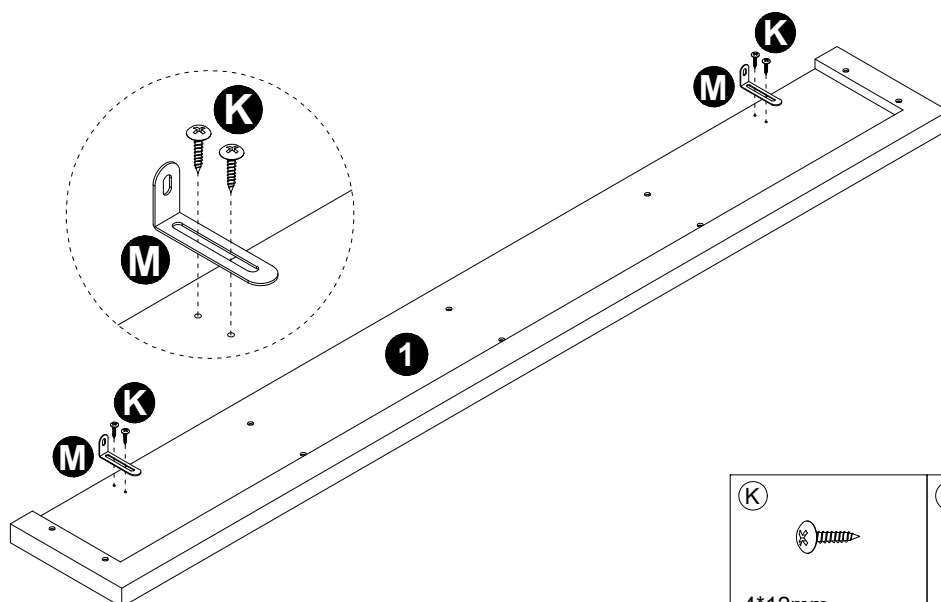step 23





(K)

4*12mm
Screw x 4

(M)

Iron sheet x 2

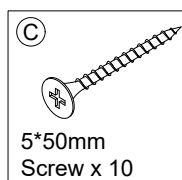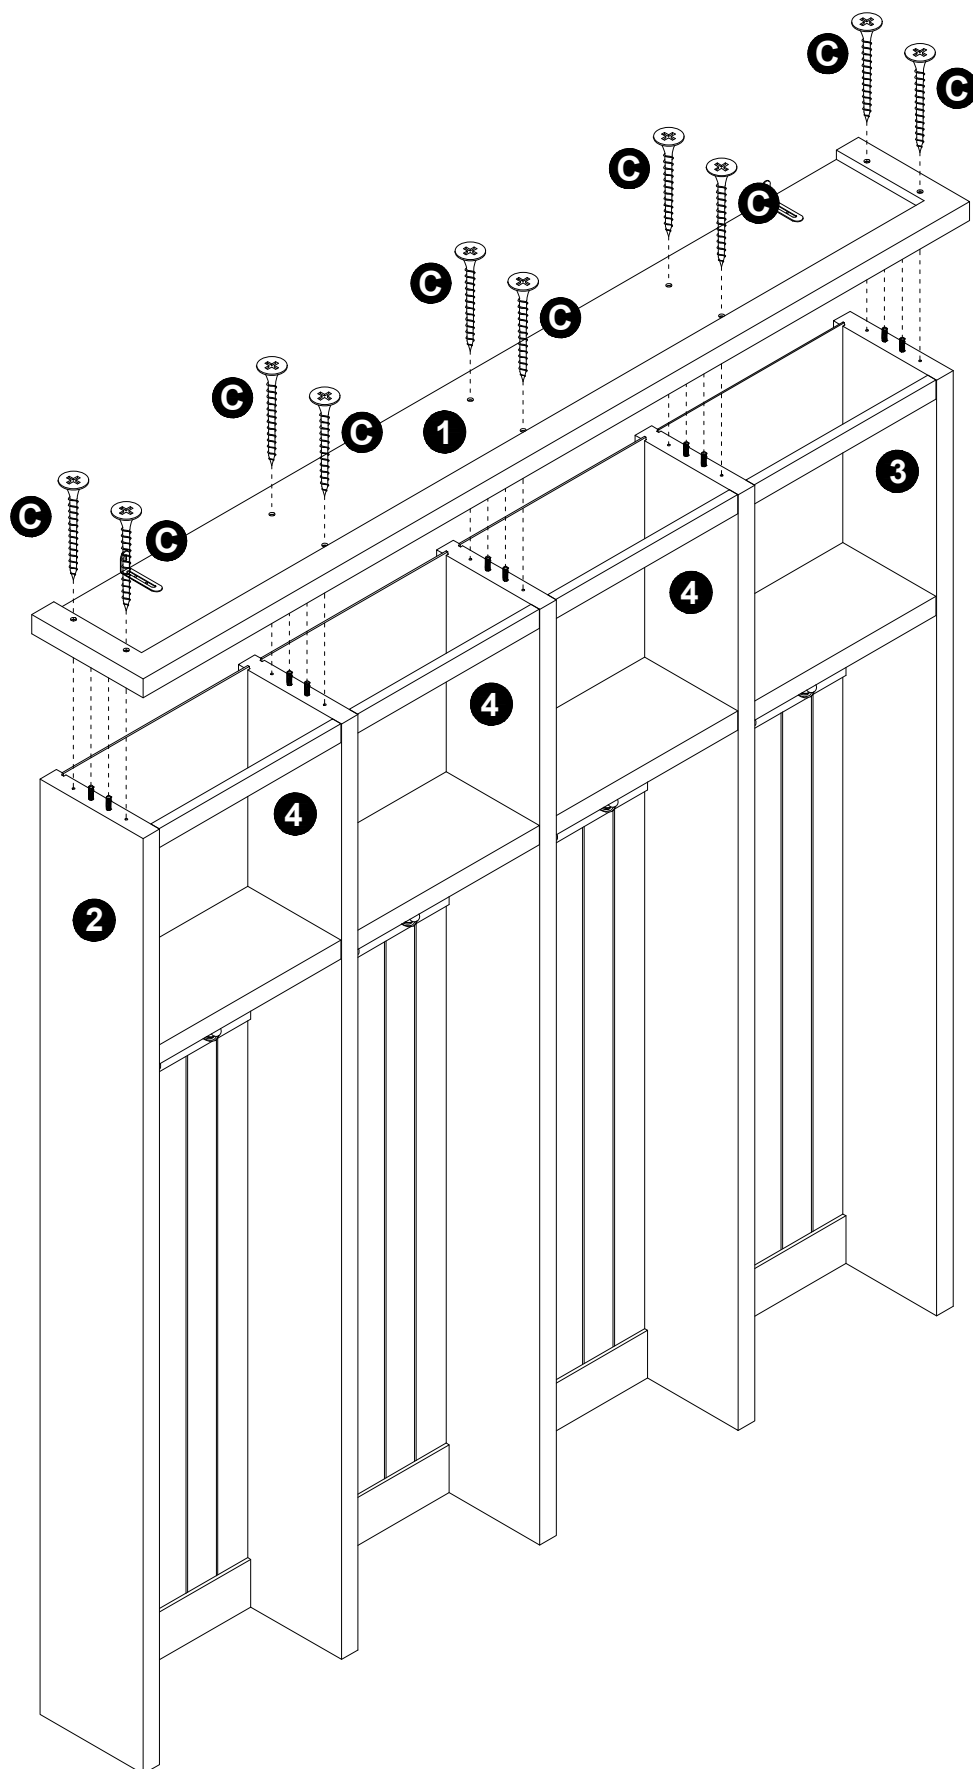
Assembly Instructions

step 24




Assembly Instructions

step 25

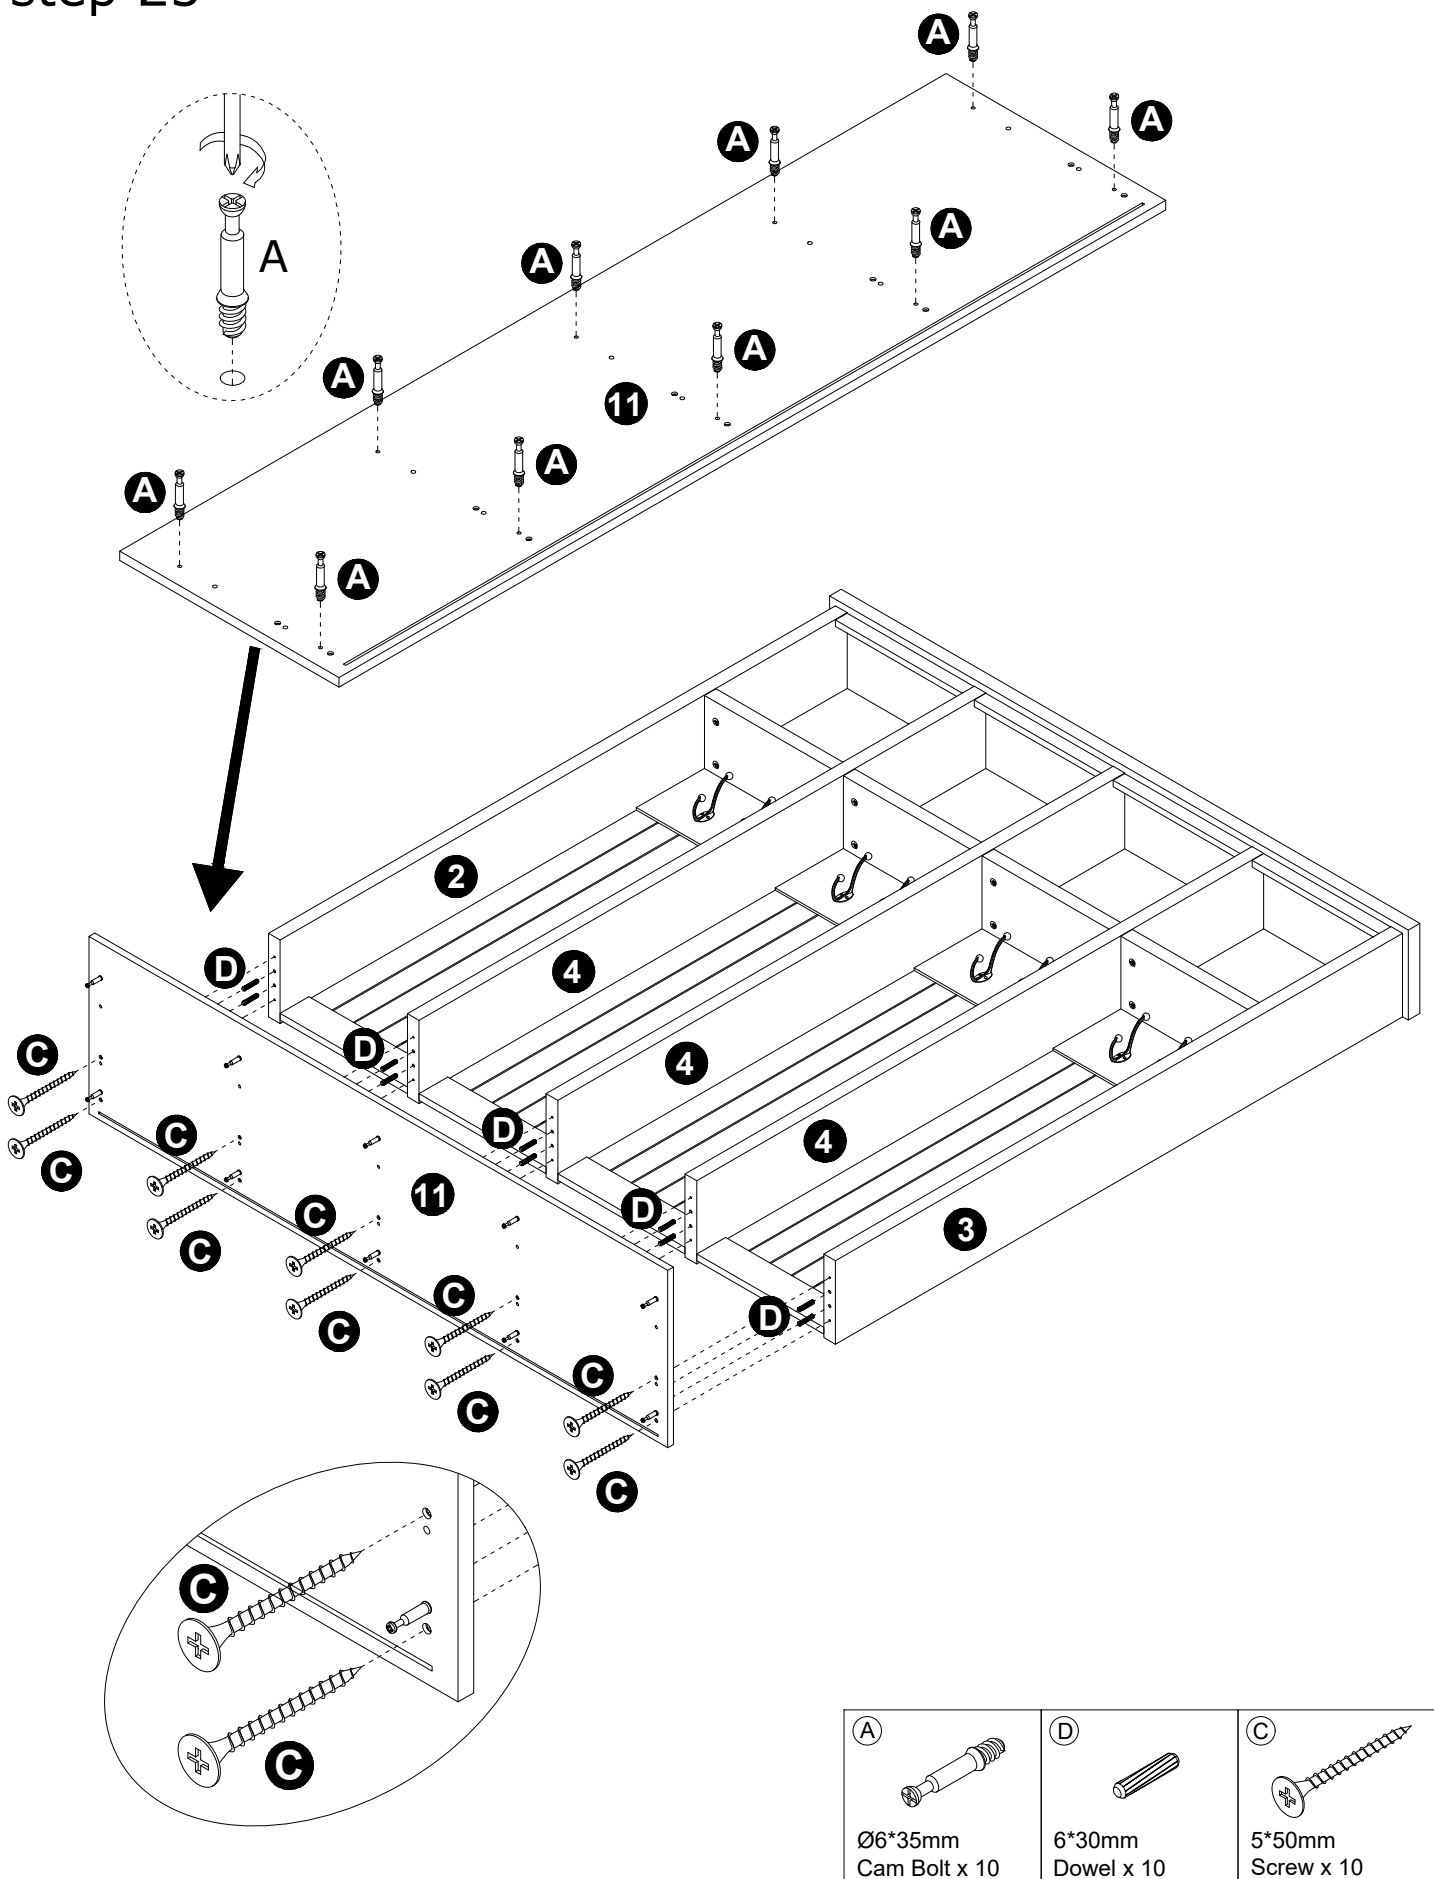


Assembly Instructions

step 26

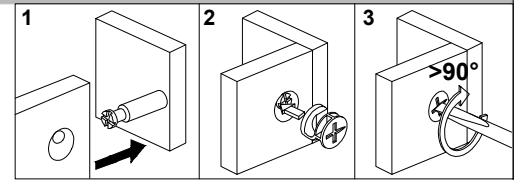

**This step is best done
with two or more people.**

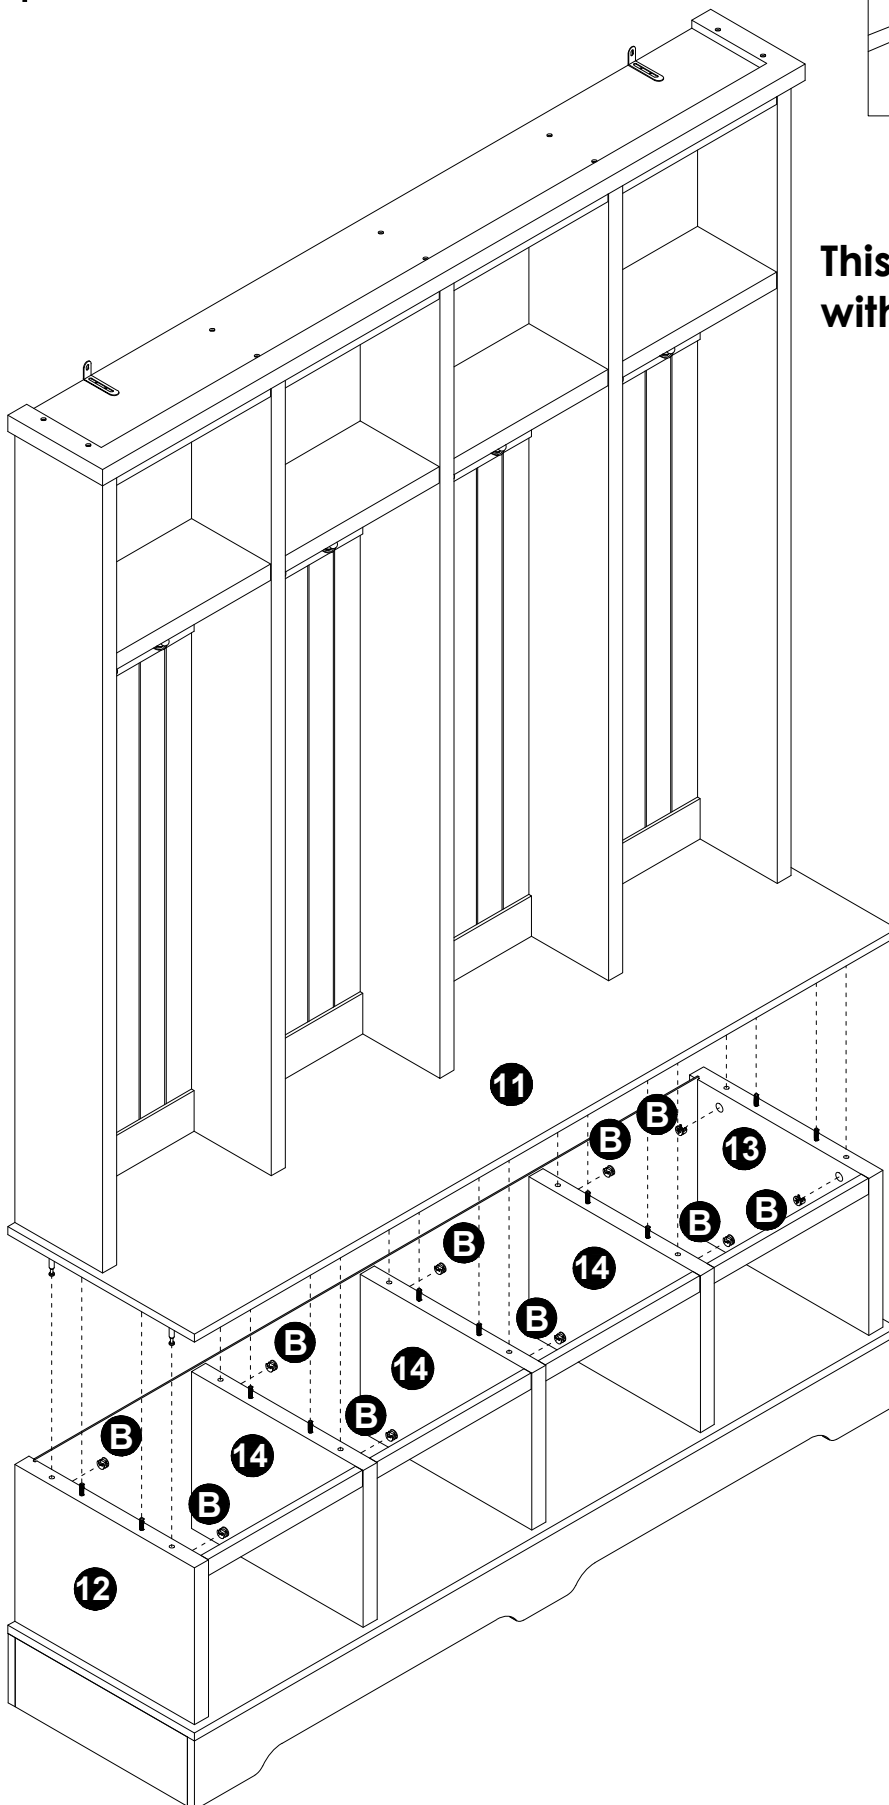




(B)



Ø15*9mm
Cam lock x 10





Assembly Instructions

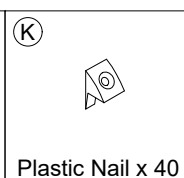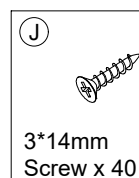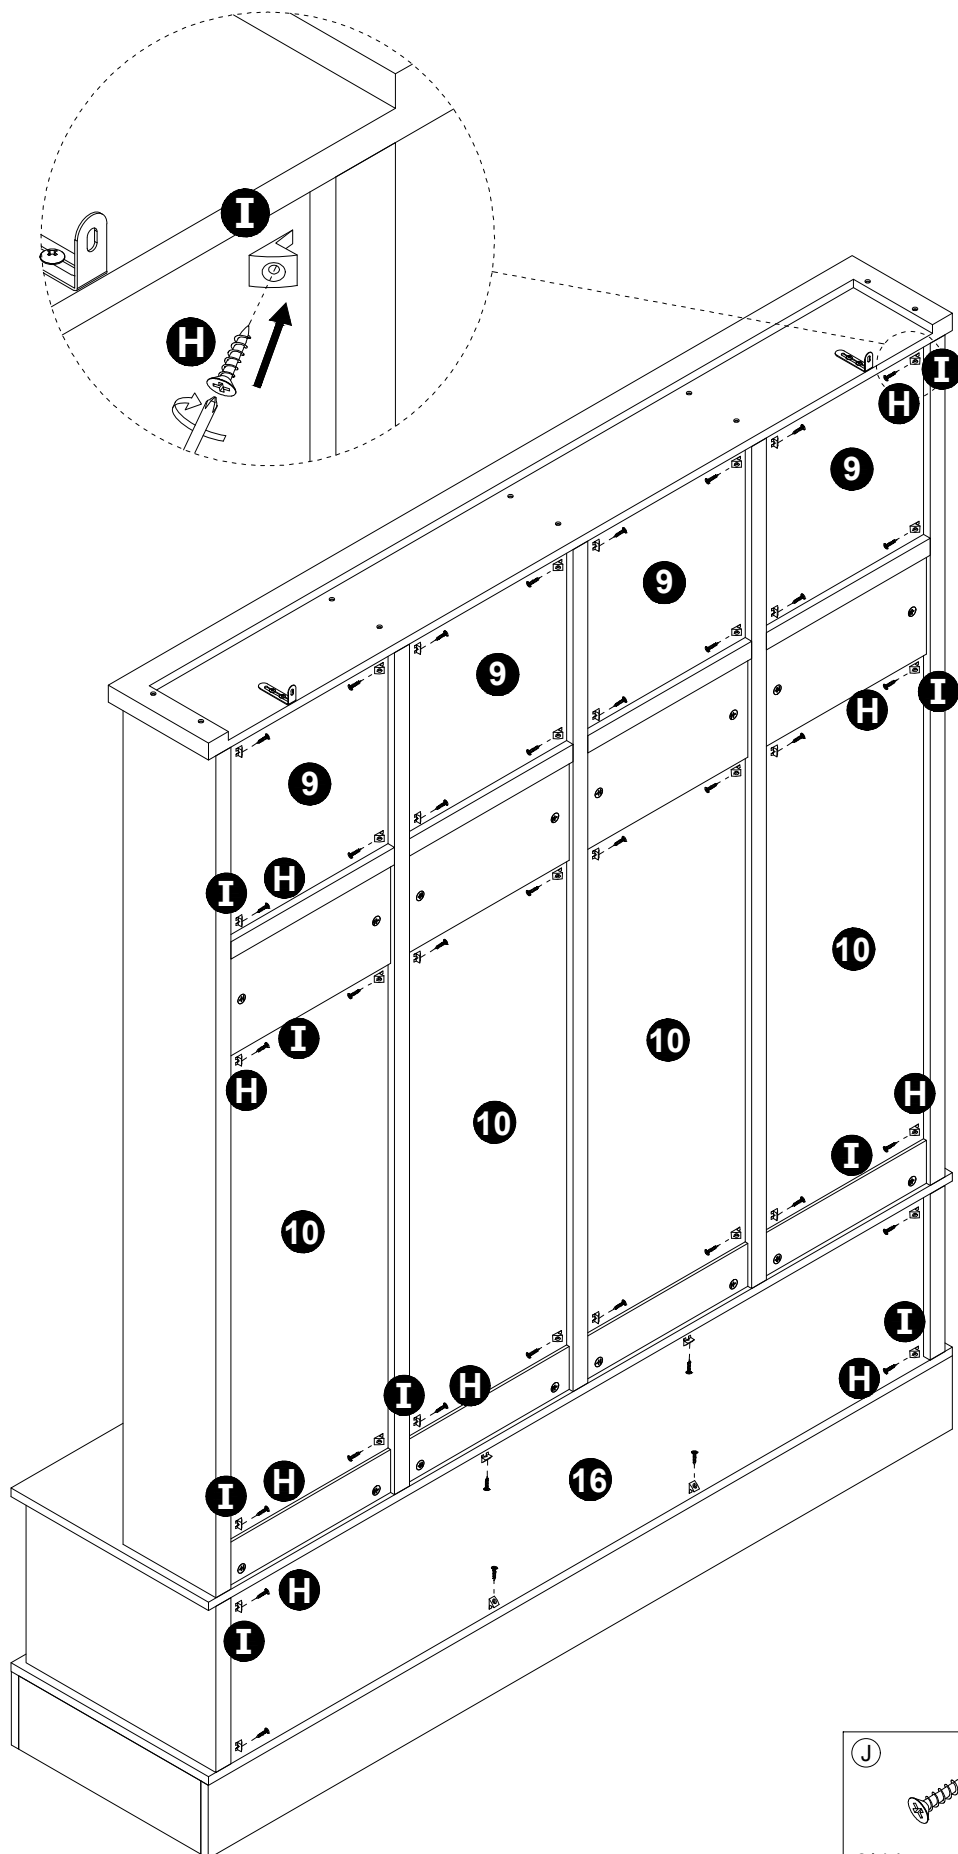

step 27



Assembly Instructions

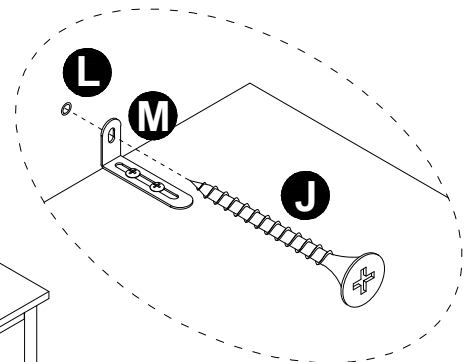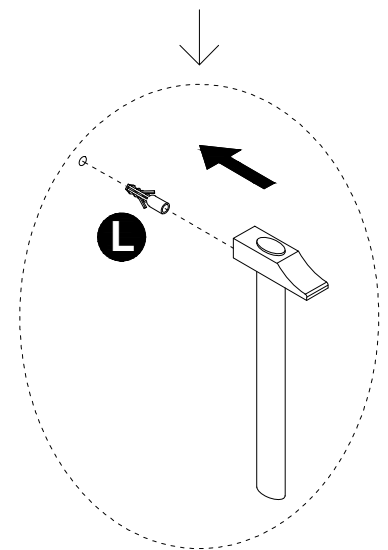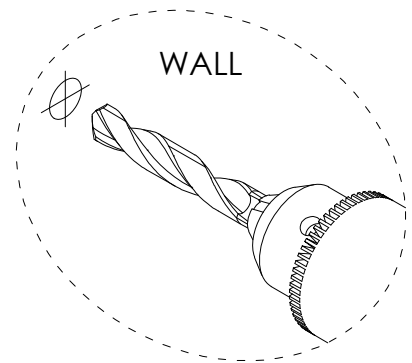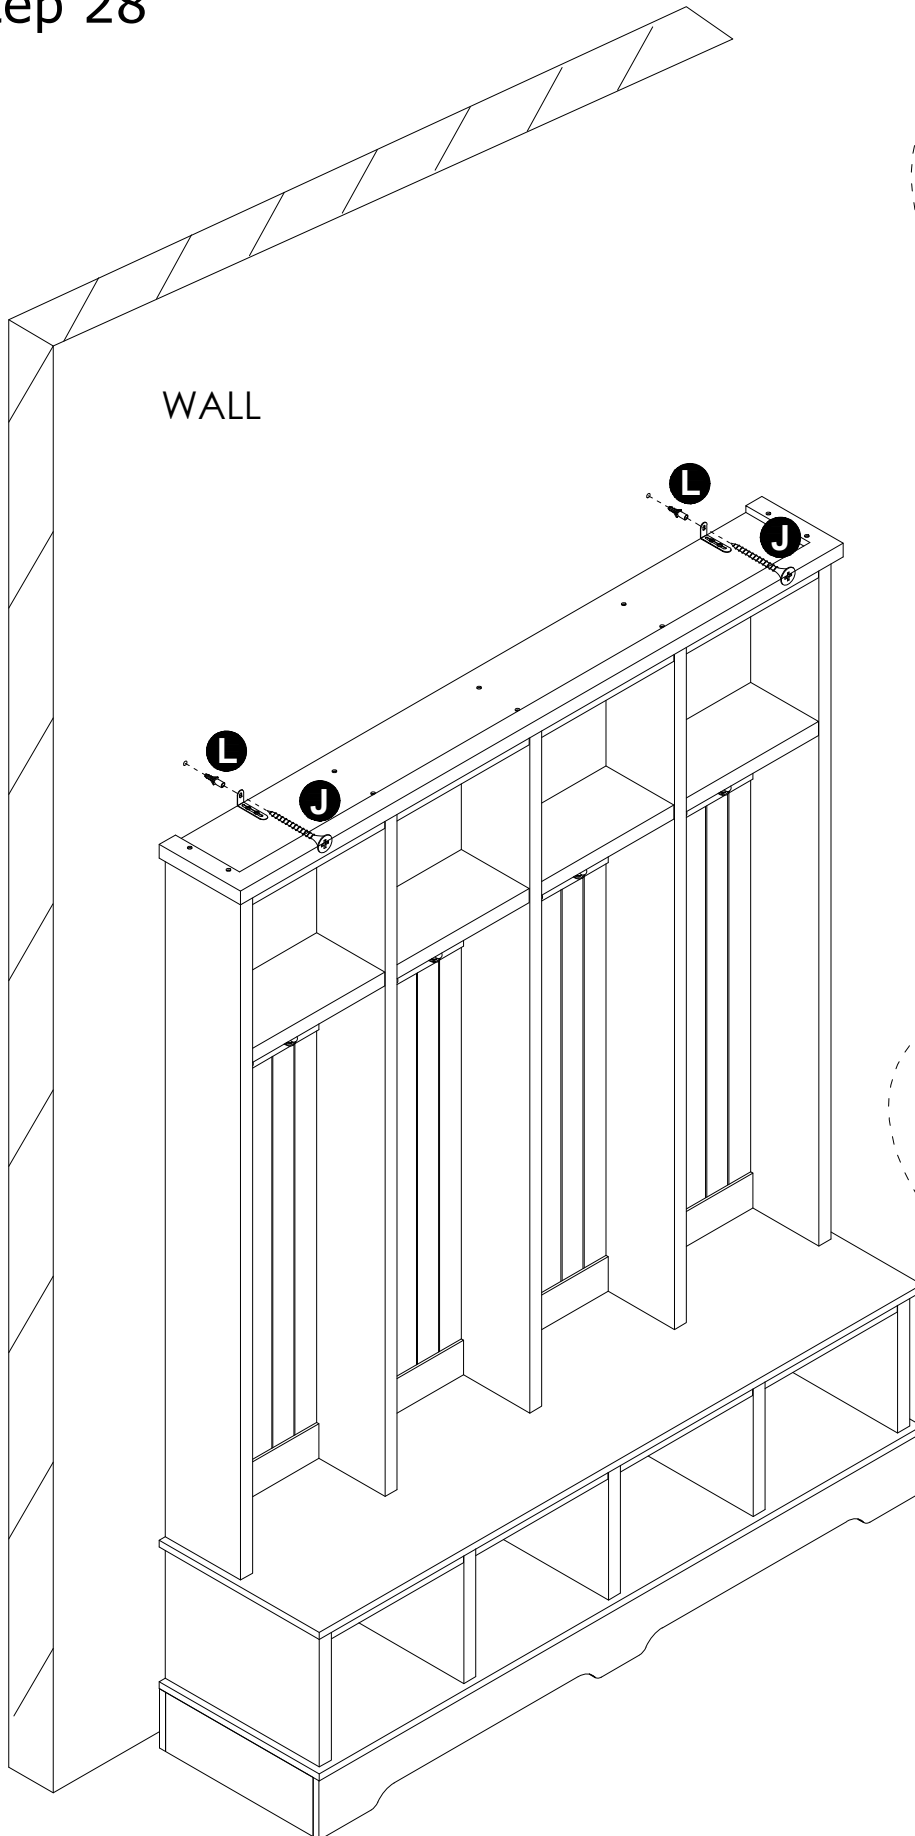step 28



 4*40mm Screw x 2	 6*30mm Wall Anchor x 2
--	--