



N843P254861W

Product manual

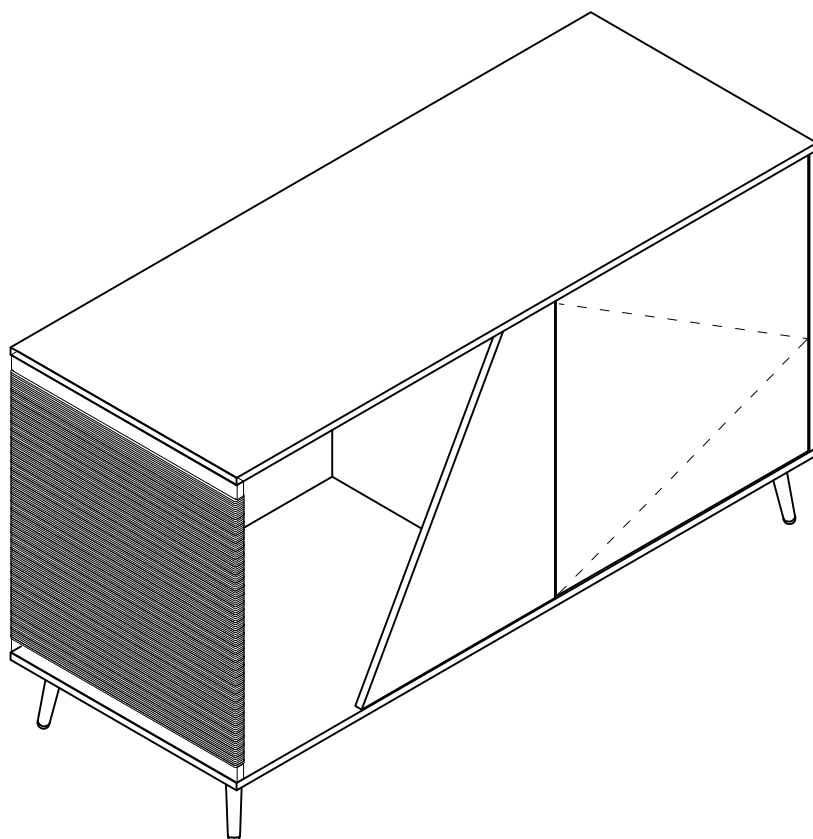

Importeur	Decobus Handel GmbH
Adresse	Innungsstraße 9, 21244 Buchholz, Deutschland
URL	https://www.decobusgroup.de
Hersteller	Sichuan Subel E-commerce Co., Ltd
Adresse	Floor 3, Room 301, Building B1, Minghu Science and Technology Park, No. 99, Chenke Street, in the middle of Chenxi Avenue, Chongzhou City, Chengdu
Email/URL	ivanwang2010@126.com
EC REP	Decobus Handel GmbH Innungsstraße 9, 21244 Buchholz, Deutschland https://www.decobusgroup.de

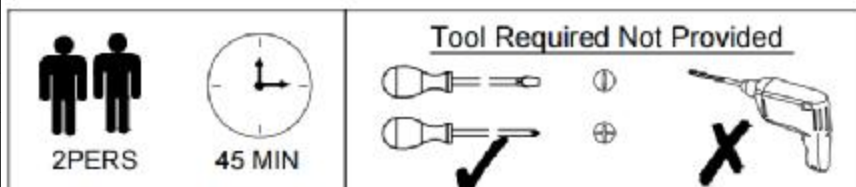



Warning: Please read these instructions fully before starting assembly. Check you have all the components and tools listed on pages. Keep the instructions for later reference. Parts of the assembly will be easier with 2 people. Seek professional assistance if necessary.


Warning: Please place all parts on a flat surface. Place a soft blanket or similar underneath to protect against scratches or stains. Avoid dragging or sliding components across the floor.

Warning: Regularly check all fittings and fastenings to ensure they are secure and to prevent accidents. If any parts are missing, broken, damaged, or worn, discontinue use of the product until repairs have been made using factory authorized parts.









Warning: Do not allow children to climb on the furniture as this may result in tipping and serious personal injury. Assemble the furniture away from the reach of children.

Warning: Do not place furniture close to fire sources or high-temperature objects to avoid the risk of fire. Do not place furniture in damp environments to prevent material damage.






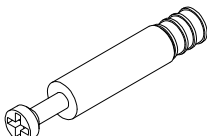



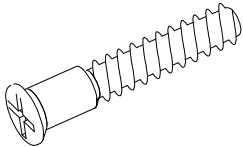


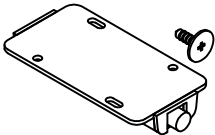
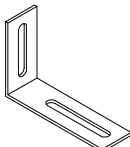

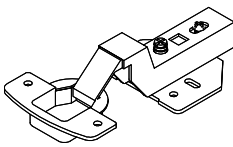


Warning: Clean furniture with a damp cloth or alcohol, avoid using cleaning agents containing corrosive chemicals.


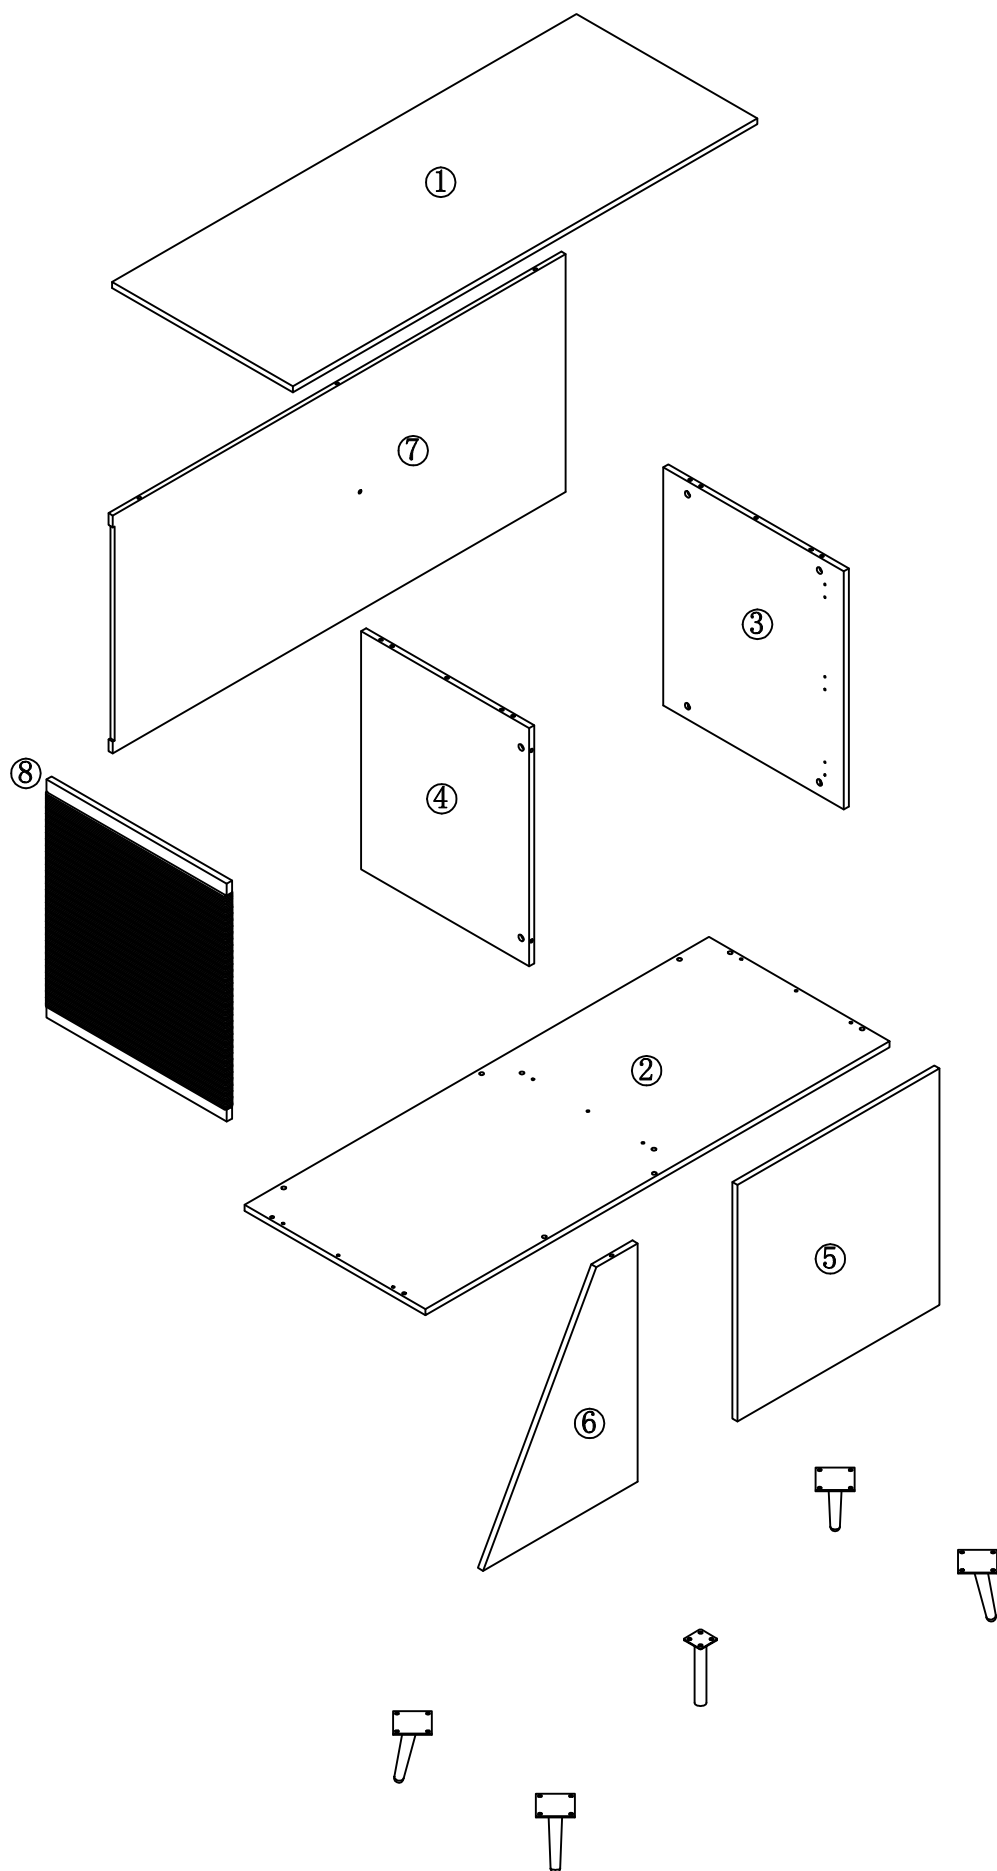


Parts List for
N843P254861W



			
① x1pc	② x1pc	③ x1pc	④ x1pc
			
⑤ x1pc	⑥ x1pc	⑦ x1pc	⑧ x1pc

**Hardware List for
N843P254861W**


				
M3. 5*14mm	M4*30mm	M6*24mm	φ12*10mm	φ6*30mm
Ⓐ x26pcs	Ⓑ x2pcs	Ⓒ x12pcs	Ⓓ x12pcs	Ⓔ x18pcs
				
M6*40mm	φ15*12mm		M6*10mm	φ7*38mm
Ⓕ x9pcs	Ⓖ x9pcs	Ⓗ x21pcs	Ⓘ x16pcs	Ⓙ x3pcs
				
H160	H155			30mm
Ⓚ x4pcs	Ⓛ x1pc	Ⓜ x1pc	Ⓝ x2pcs	Ⓞ x2pcs
				
Ⓟ x3pcs	Ⓠ x1pc	Ⓡ x1pc		

	
M3. 5*14mm	M4*30mm
Ⓐ x26pcs	Ⓑ x2pcs

NOTE-1: Please note that the shapes of screws A and B are similar. Please install according to the instructions and distinguish them!

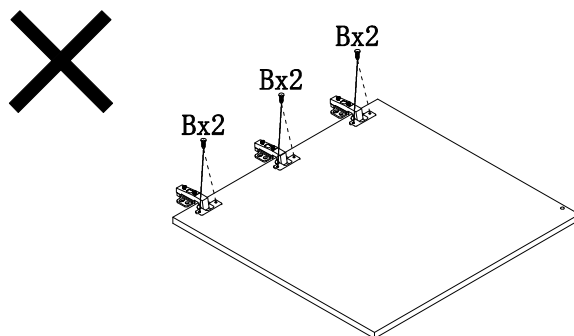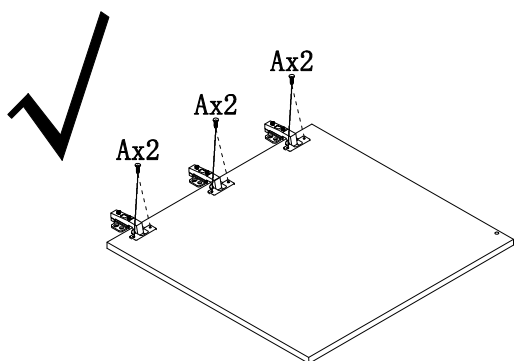


NOTE-2: Please note that this product contains multiple screws. When connecting the door panel and the side panel, be sure to use the shortest screw, type A. Using the wrong screw may cause damage to the plate parts.

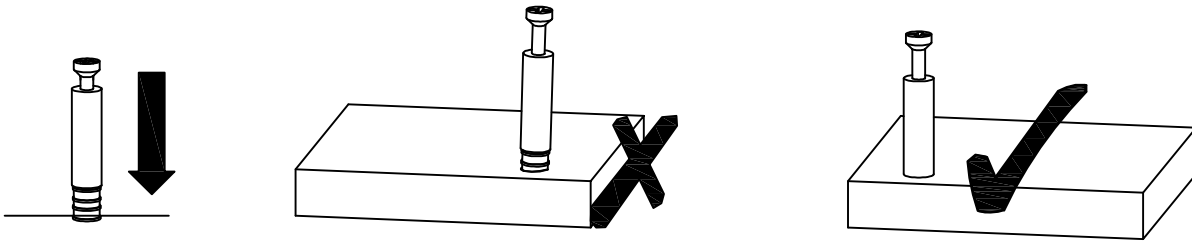

NOTE-3:

QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten

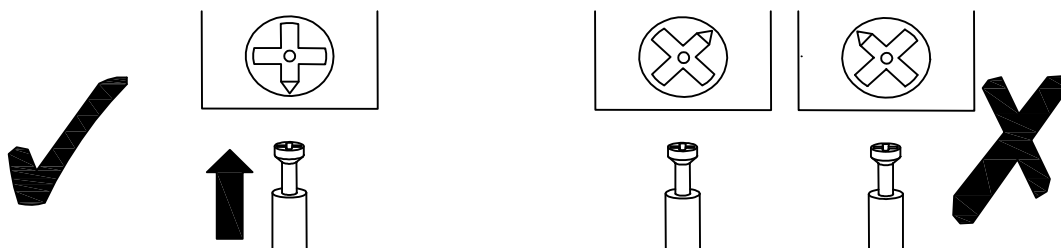


NOTE-4:


CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.



NOTE-5:



Quickfit head should be in the centre of the cam lock when the two panels are joined.
Camlock should be inserted before quickfit.


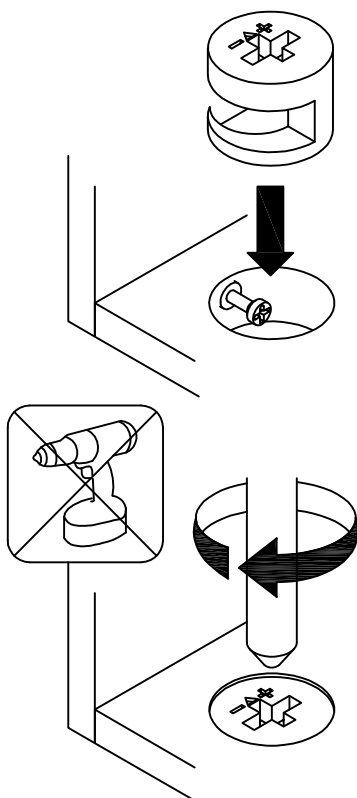


Step 1

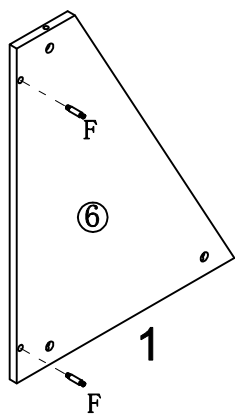


	
Ø15*12mm	M6*40mm
Ⓔ x2pcs	Ⓕ x2pcs

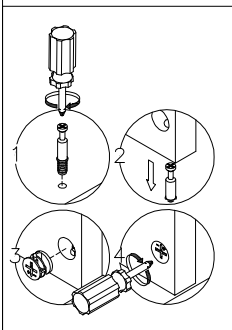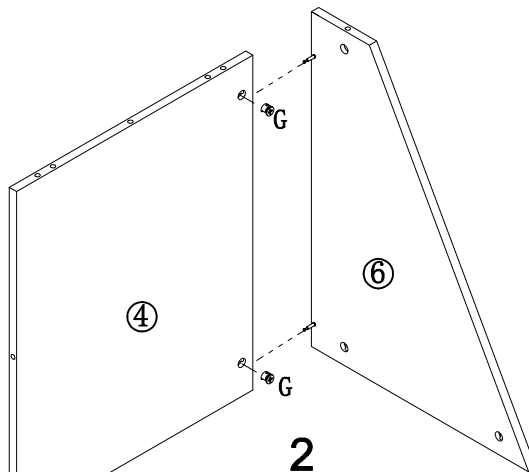




	
M6*24mm	M6*40mm
Ⓒ x12pcs	Ⓕ x9pcs



Step 2

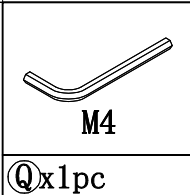


Ⓔ x1pc

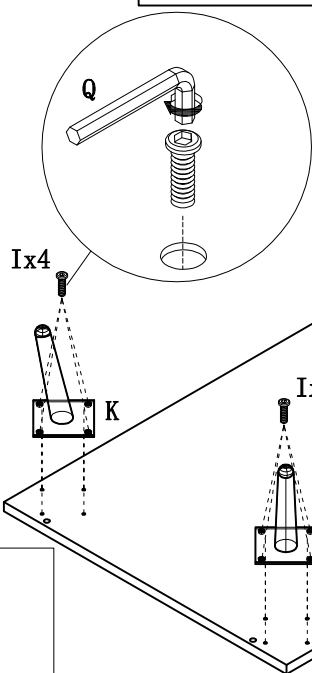

	
M6*10mm	M3.5*14mm
Ⓘ x16pcs	Ⓐ x4pcs

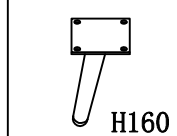
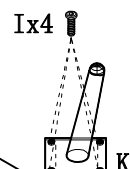


Ⓔ x4pcs


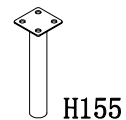




Ⓘ x1pc





	
M3.5*14mm	M4*30mm
Ⓐ x26pcs	Ⓑ x2pcs



Step 3

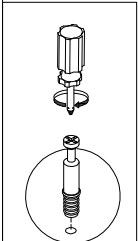
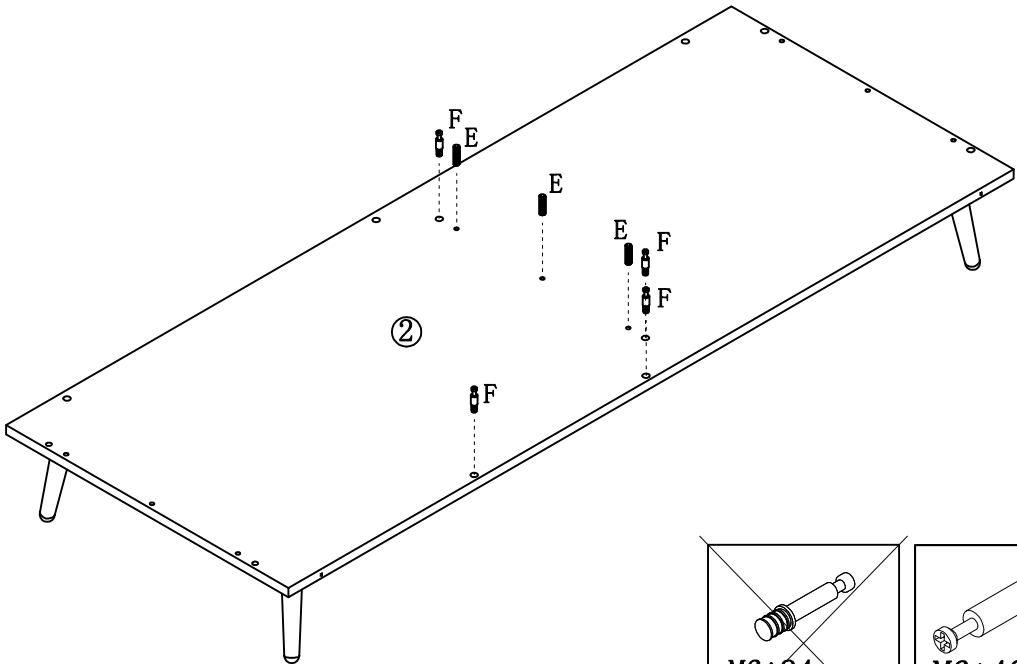
	
φ6*30mm	M6*40mm
Ⓔ x3pcs	Ⓕ x4pcs





	
M6*24mm	M6*40mm
Ⓒ x12pcs	Ⓕ x9pcs


Step 4

	
φ6*30mm	M6*24mm
Ⓔ x6pcs	Ⓒ x5pcs

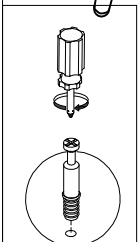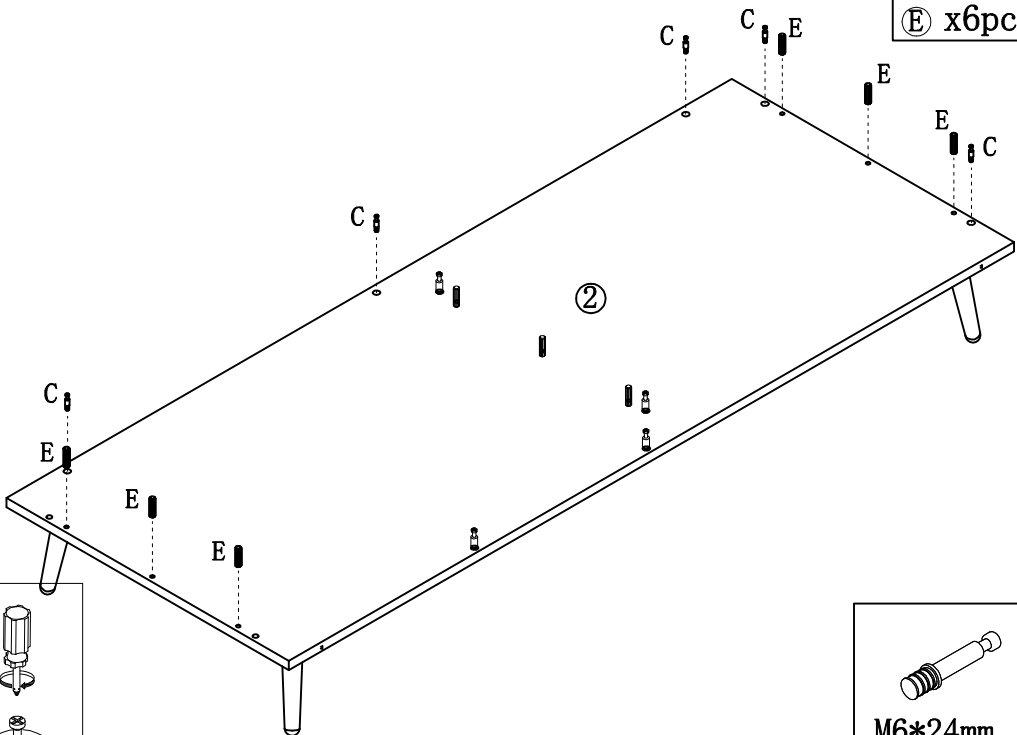


	
M6*24mm	M6*40mm
Ⓒ x12pcs	Ⓕ x9pcs




Step 5

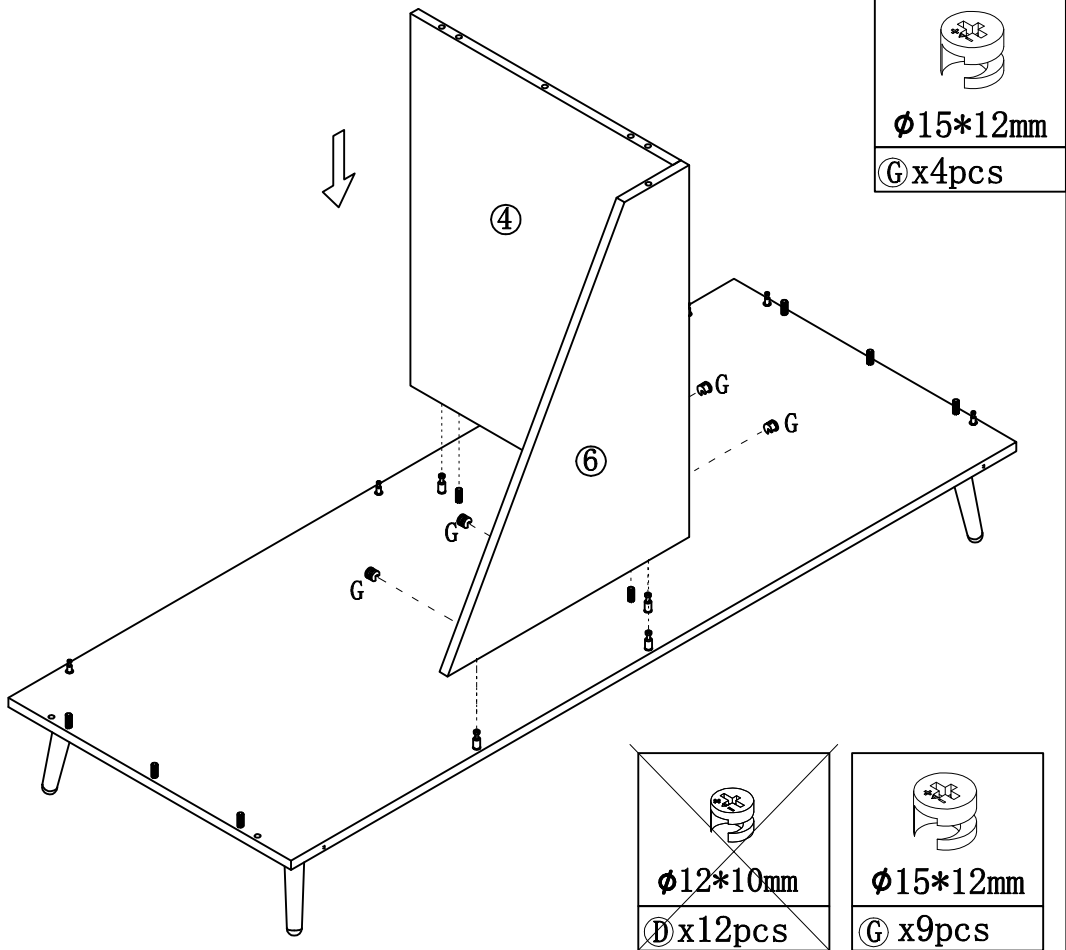







Step 6

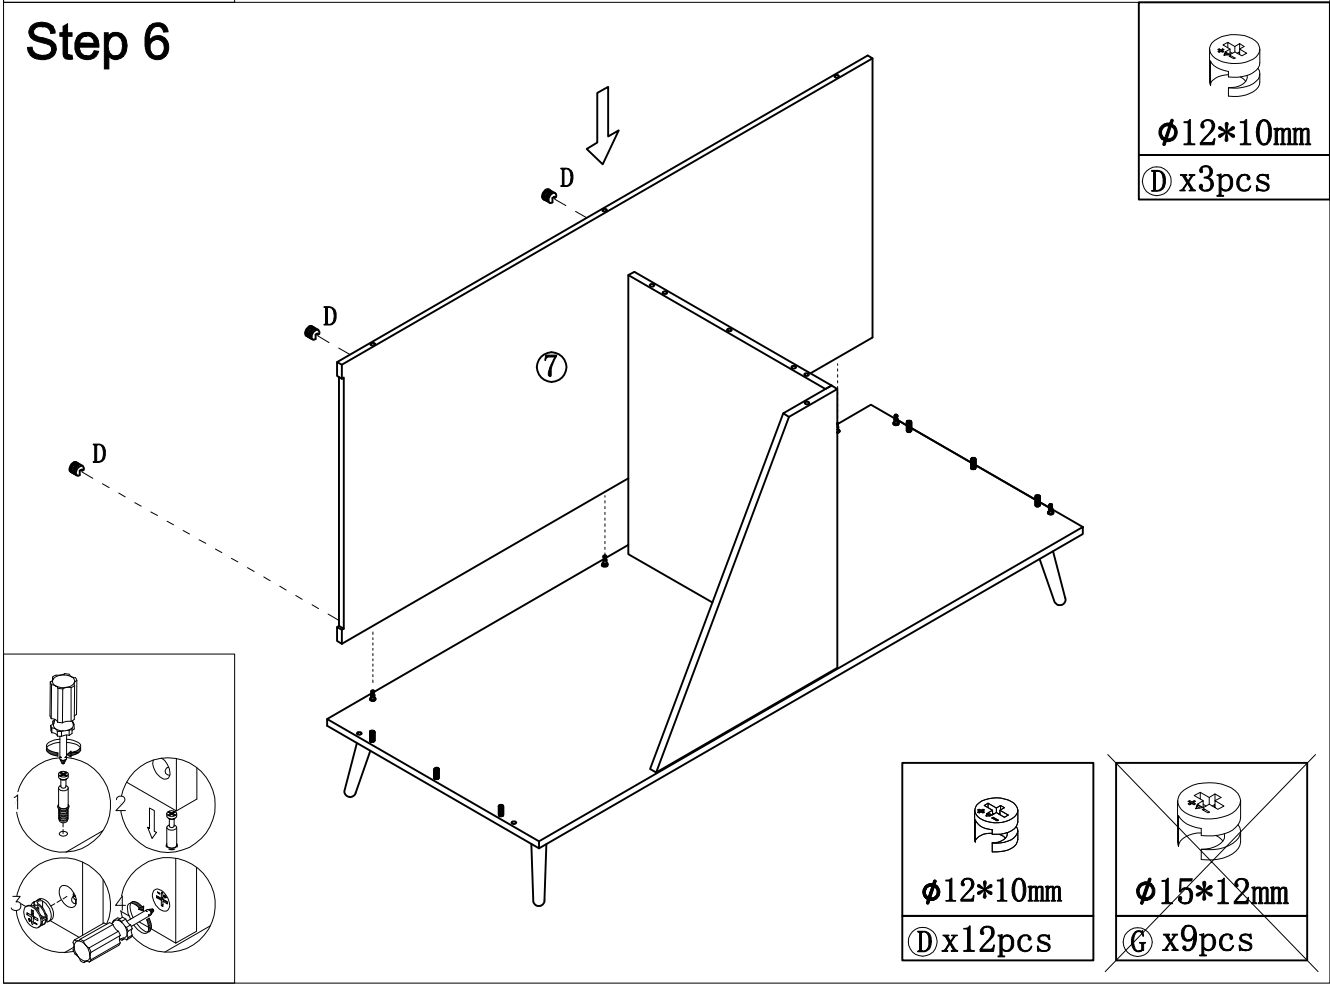



Step 7

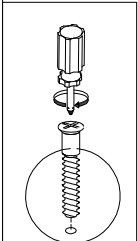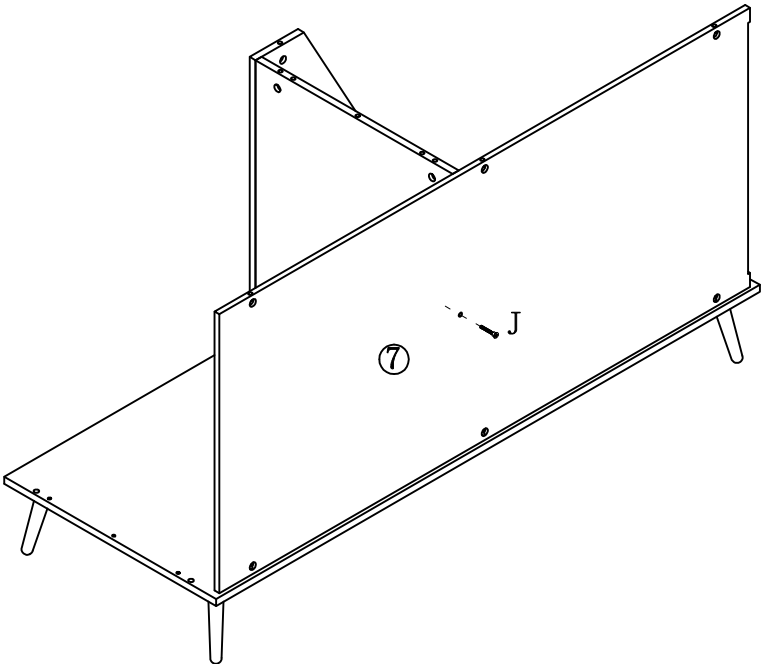
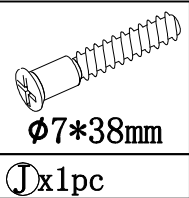




Step 8

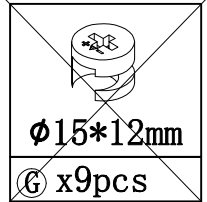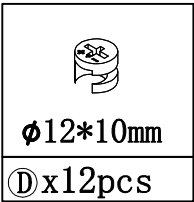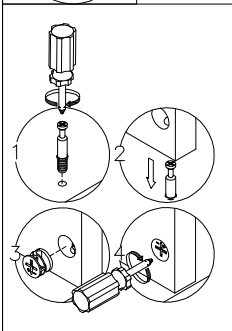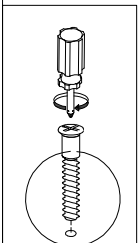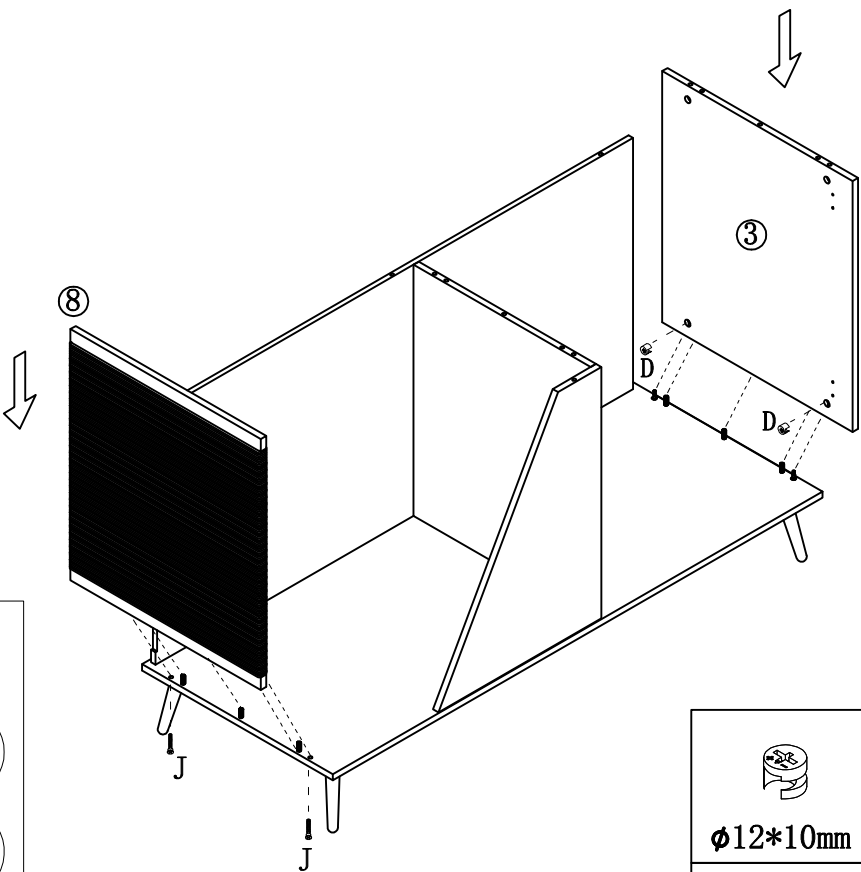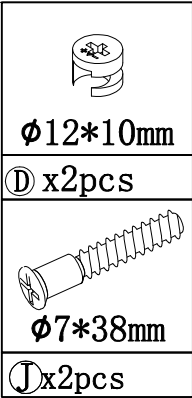



Step9



	
Φ6*30mm	M6*40mm
Ⓔ x3pcs	Ⓕ x3pcs

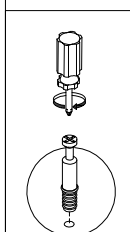
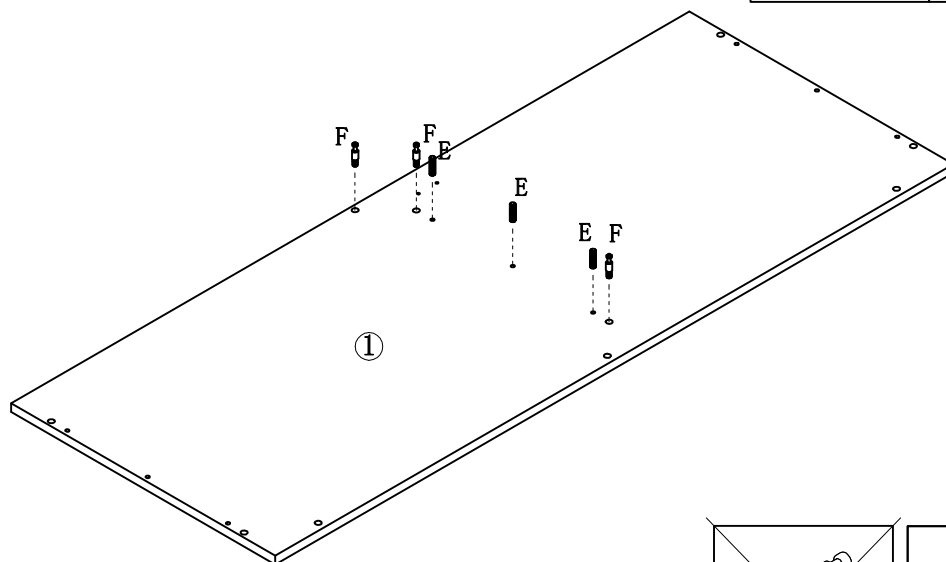


	
M6*24mm	M6*40mm
Ⓒ x12pcs	Ⓕ x9pcs


Step10

	
Φ6*30mm	M6*24mm
Ⓔ x6pcs	Ⓒ x7pcs

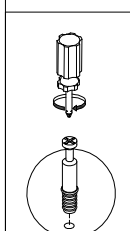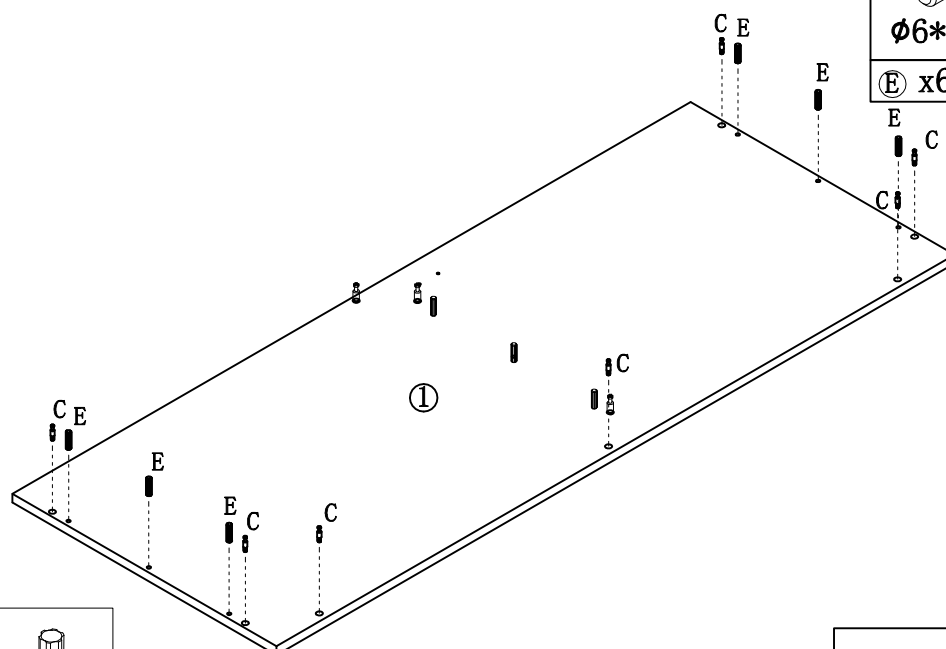


	
M6*24mm	M6*40mm
Ⓒ x12pcs	Ⓕ x9pcs


Step11

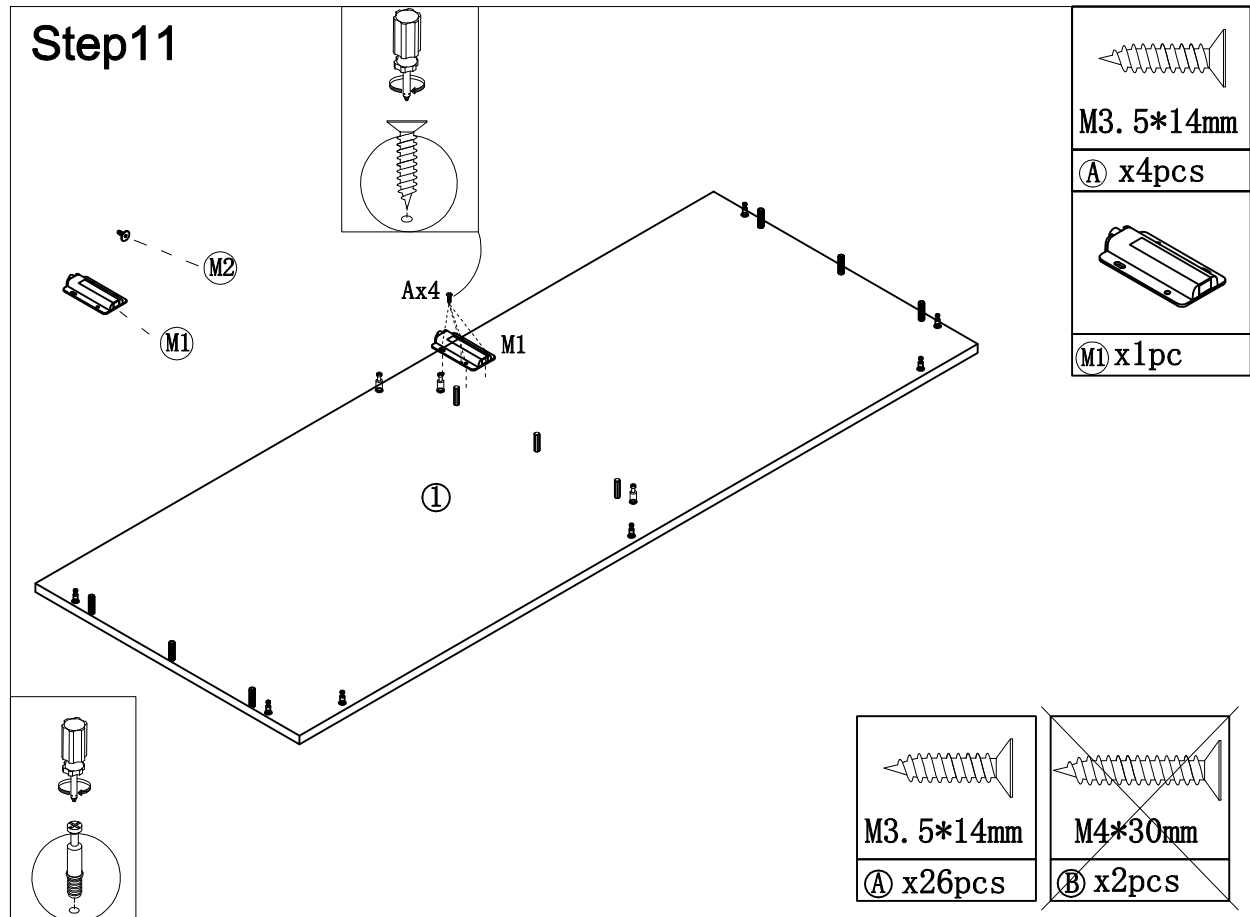


Step 12

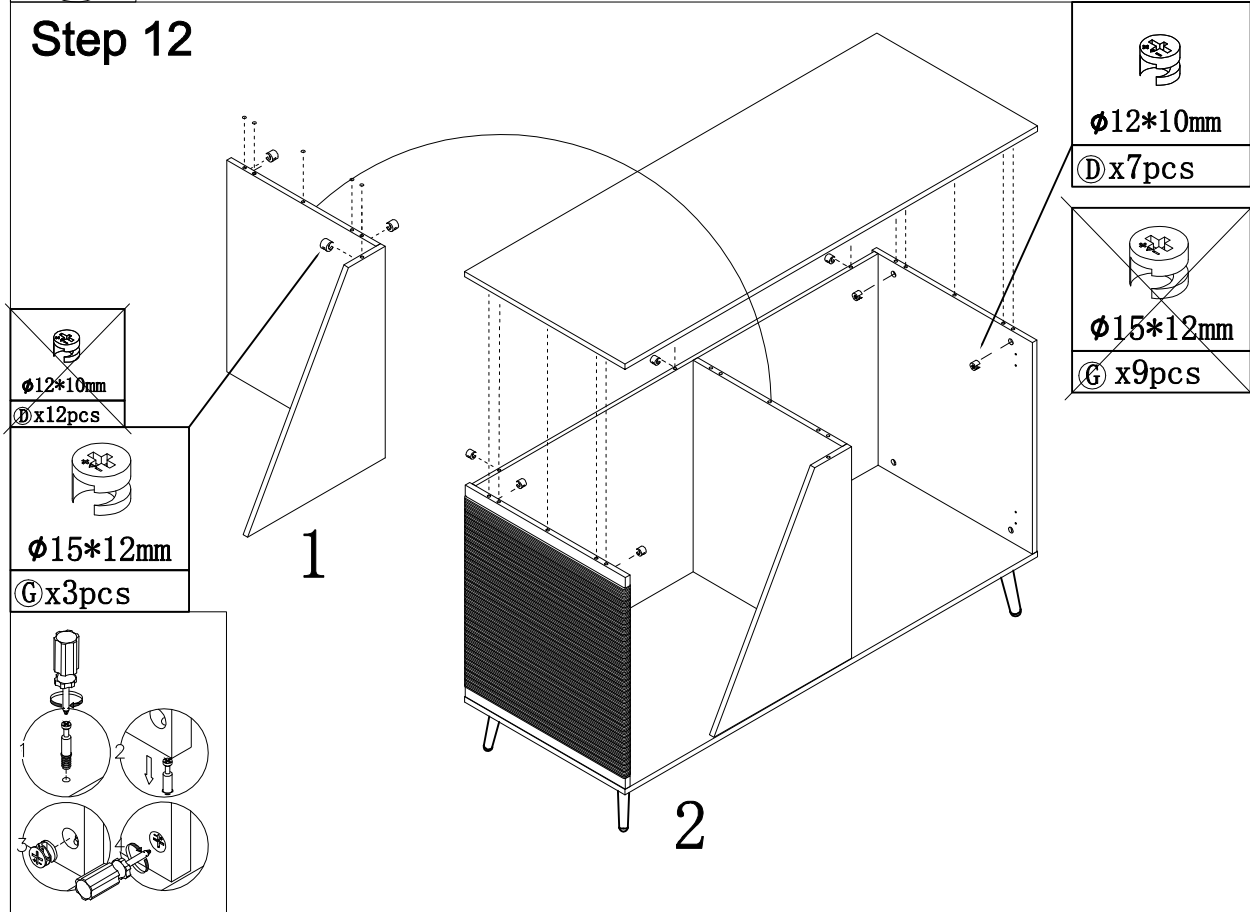


Step13

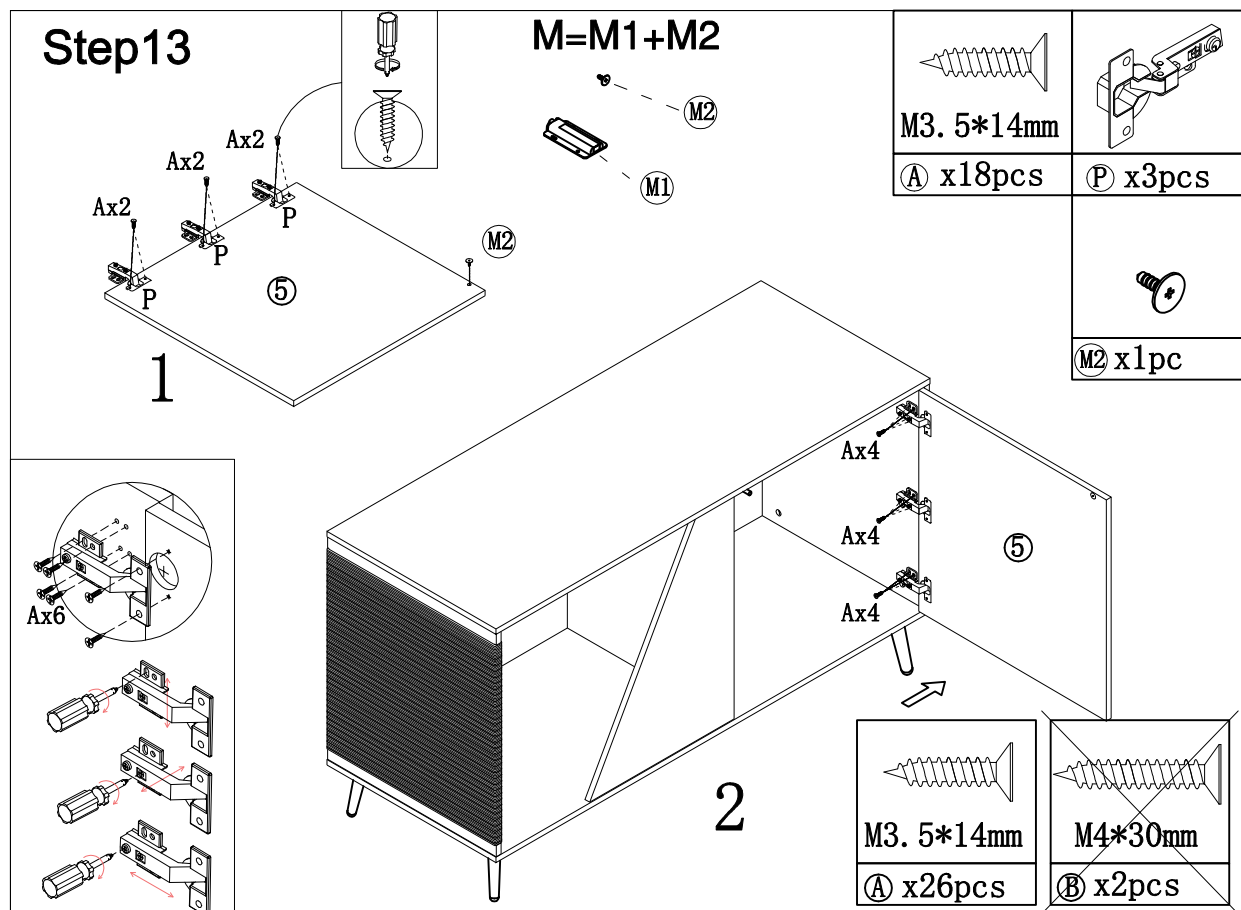


Step 14

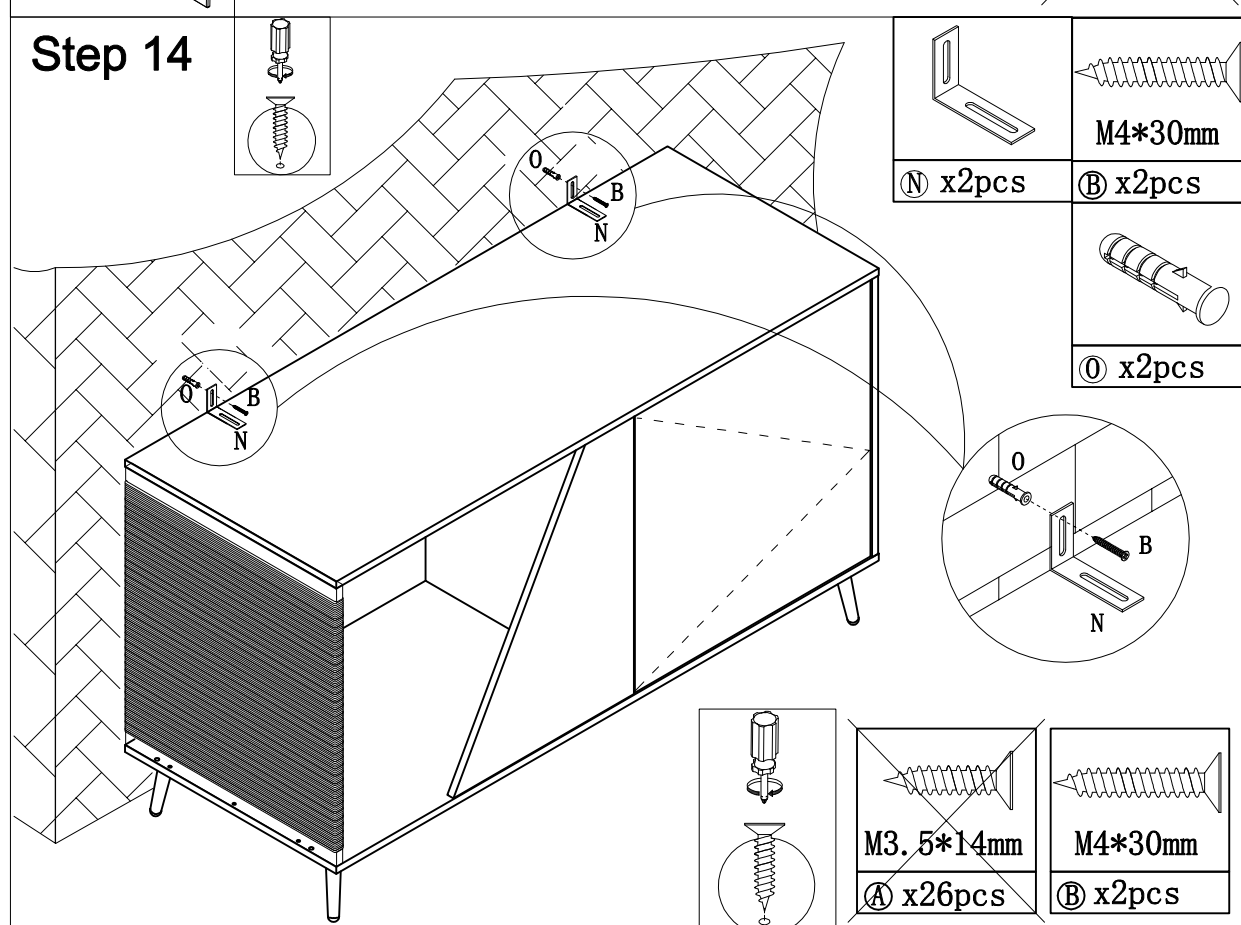

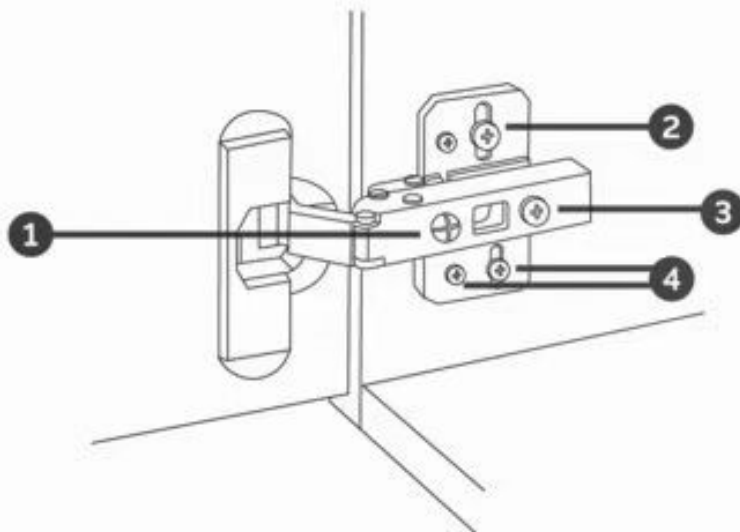


① Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet

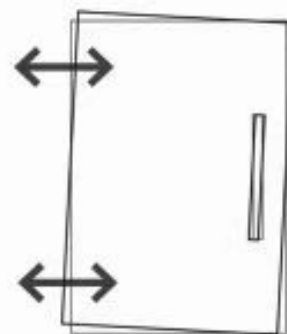


② ④ Height adjustment

While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down

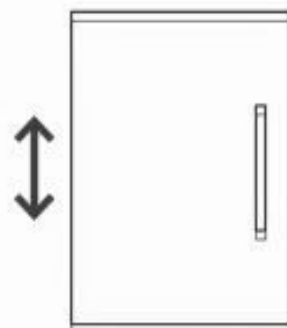



③ Forward and back adjustment



If the gap between the back of the door and the
cabinet is too small, and the door may not close
fully. Turn the screw
clockwise to decrease the gap between the
door and the cabinet
anticlockwise to increase the gap between the
door and the cabinet


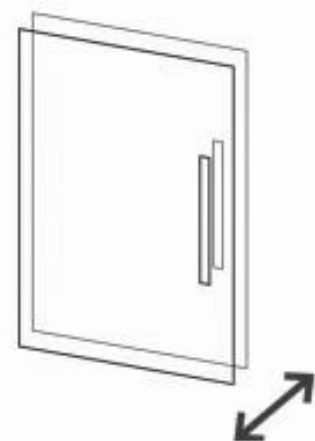


Attention: For safety and stability, we suggest securing the anti-tip accessories to the wall to prevent tipping, injury, and property damage.

Step 15

	
M3. 5*14mm	
Ⓐ x2pcs	Ⓔ x21pcs

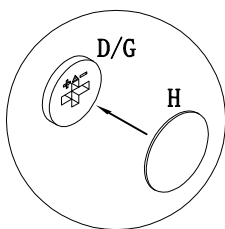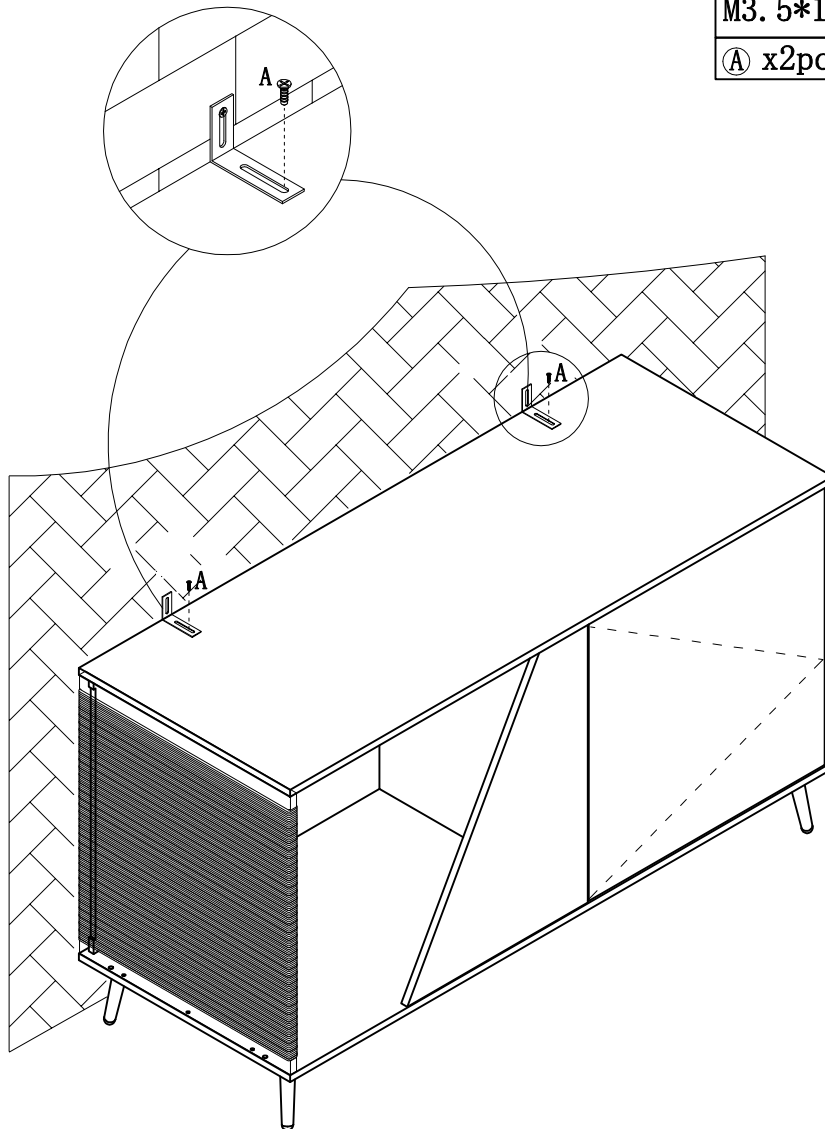

	
M3. 5*14mm	M4*30mm
Ⓐ x26pcs	Ⓑ x2pcs

After installing the product, stick the number H on the perforated position