


# ASSEMBLY INSTRUCTIONS

## 24 INCH BATH VANITY (COMBO)



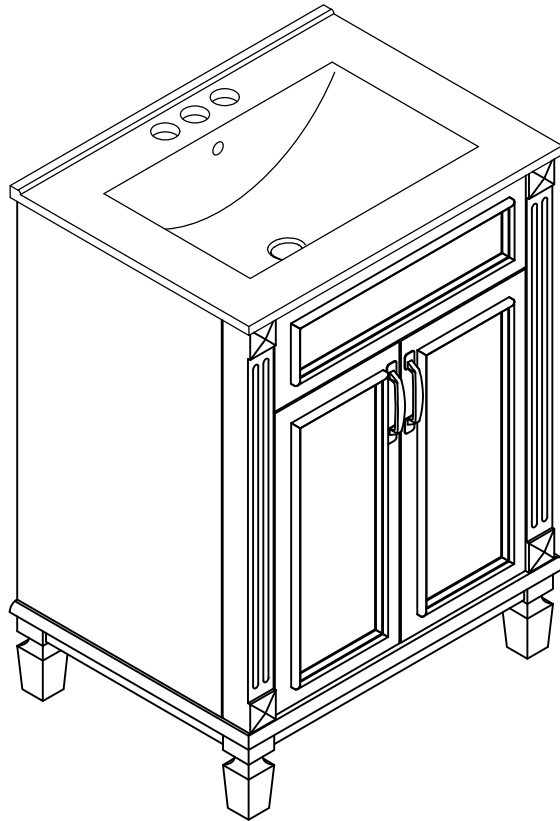


Thank you for purchasing this quality product. Be sure to check all pack material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

**"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"**


**\*Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**  
**\*Please assemble on a clean soft surface to avoid damage.**

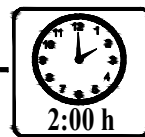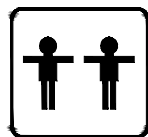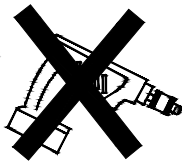

Tools Required



(Not included)



(Not included)

**IMPORTANT:**  
**PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY**

# PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!  
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

1. Note: This is not a clothing storage cabinet and it is not recommended to use it as a clothing storage cabinet.
2. All cabinets come with TRD, stainless steel or our "L-Bracket "when shipped.







# Before Installation

**Important – Please read these instructions fully before starting assembly**


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

## Cam Lock Assembly Instructions

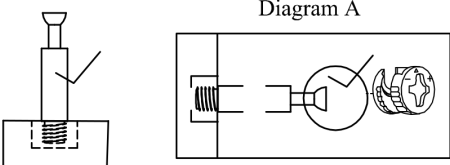
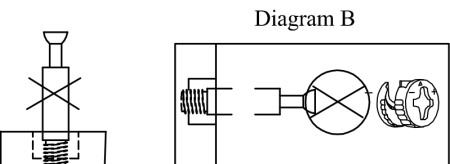
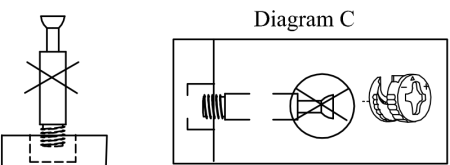

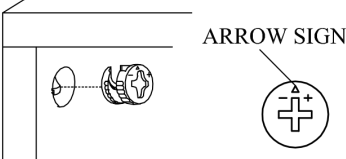
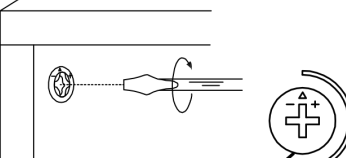


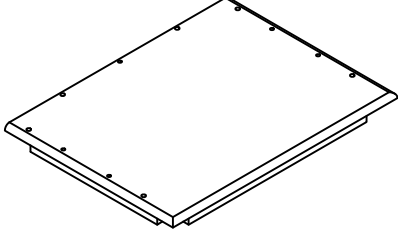

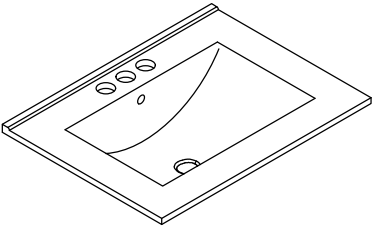
	<p>Diagram A</p> <p>Insert Cam Bolt into hole as shown in diagram A.</p>
	<p>Diagram B</p> <p>Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.</p>
	<p>Diagram C</p> <p>Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.</p>
	<p>Connect the panels together.</p>
	<p>Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.</p>
	<p>To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i></p>

**Detail View - CABINET**

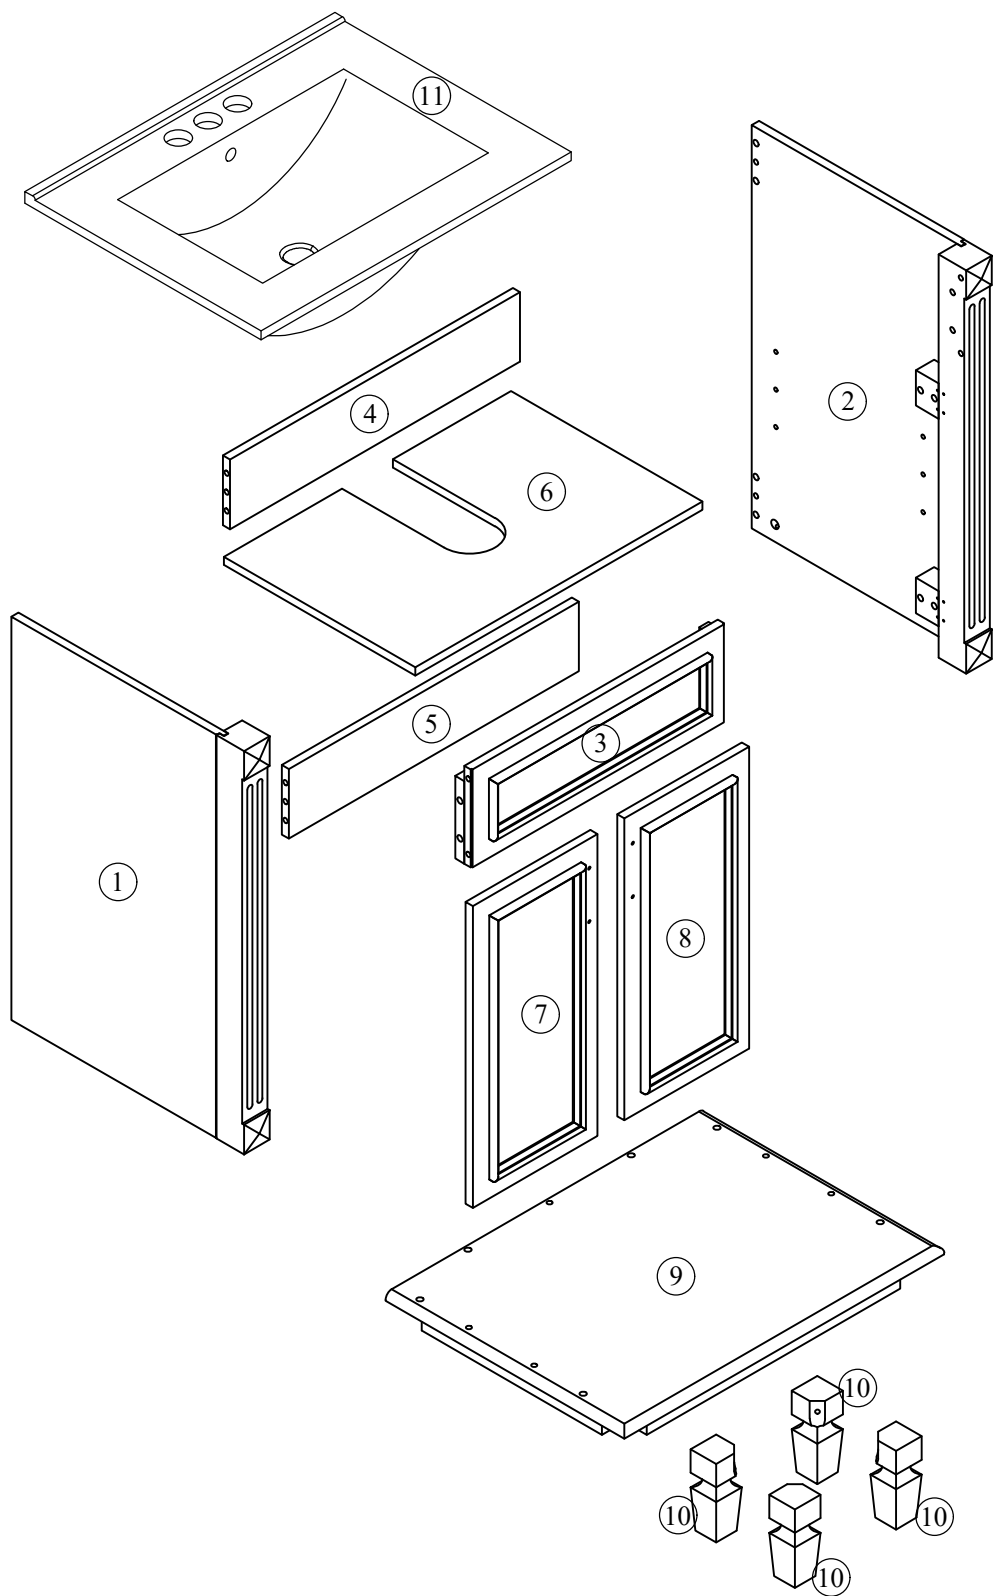




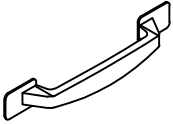







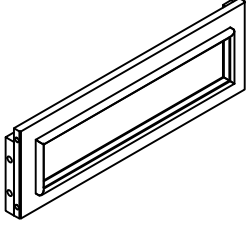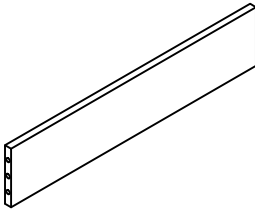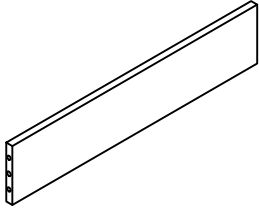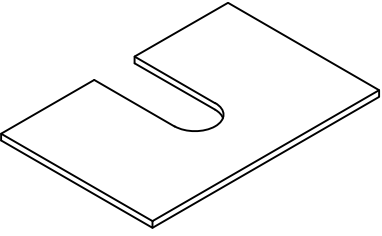

**Identifying the Hardware -Identify the hardware using the illustrations below.**

# Part List-N710P317675


<p>1</p>	 <p>Side Panel (L) - 1pc</p>	<p>2</p>	 <p>Side Panel (R) - 1pc</p>
<p>3</p>	 <p>Front Panel - 1pc</p>	<p>4</p>	 <p>Top Rear Panel - 1pc</p>
<p>5</p>	 <p>Bottom Rear Panel - 1pc</p>	<p>6</p>	 <p>Adjustable Shelf - 1pc</p>
<p>7</p>	 <p>Cabinet Door (L) - 1pc</p>	<p>8</p>	 <p>Cabinet Door (R) - 1pc</p>
<p>9</p>	 <p>Base Frame-1pc</p>	<p>10</p>	 <p>Foot Cabinet - 4pcs</p>
<p>11</p>	 <p>Sink - 1pc</p>		

## Hardware List-N710P317675


<b>A</b>  $\varnothing 13 \times 1/4" \times 40 \text{mm}$ Hex-Head bolts(8pcs)	<b>B</b>  $\varnothing 1/4" \times 16 \times 1 \text{mm}$ Washer(8pcs)	<b>C</b>  $\varnothing 1/4" \times 10 \times 1.2 \text{mm}$ Lock Washer - 8pcs
<b>D</b>  $\varnothing 6 \times 35 \text{mm}$ Three in one bolts - 14pcs	<b>E</b>  $\varnothing 14.5 \times 12 \text{mm}$ Three in one lock - 14pcs	<b>F</b>  Handle - 2pcs
<b>G</b>  $\varnothing 5/32" \times 20 \text{mm}$ Handle screw - 4pcs	<b>H</b>  Damping hinge - 4pcs	<b>I</b>  $\varnothing 7 \times \varnothing 3.5 \times 12 \text{mm}$ Flat head screw - 24pcs
<b>J</b>  Laminate pad - 4pcs	<b>K</b>  $\varnothing 8 \times 30 \text{mm}$ Wood dowel - 13pcs	<b>L</b>  4mm Allen key - 1pc
<b>M</b>  Anti fall hardware (2sets)		

**STEP: 1**

**D**



**4PCS**

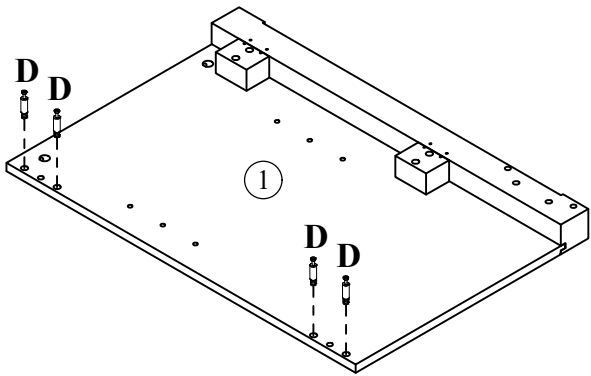

**STEP: 2**

**E**



**4PCS**

**L**



**1PC**

**C**



**2PCS**

**B**




**2PCS**

**A**




**2PCS**

**K**




**4PCS**

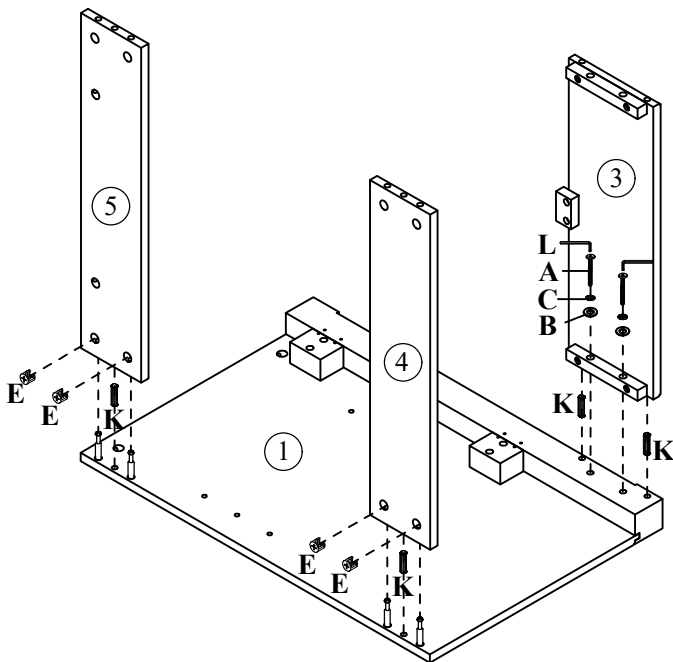


**STEP: 3**

**D**



**4PCS**

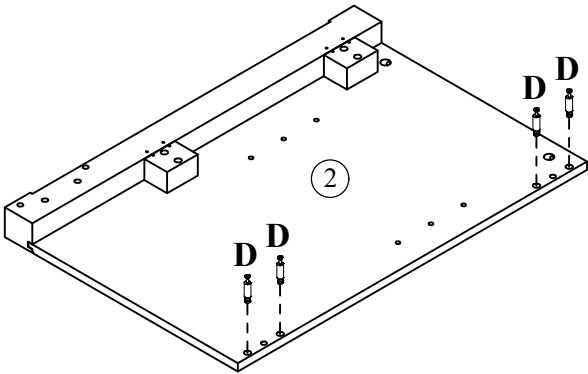

**STEP: 4**

**E**



**4PCS**

**L**



**1PC**

**C**



**2PCS**

**B**




**2PCS**

**A**




**2PCS**


**K**





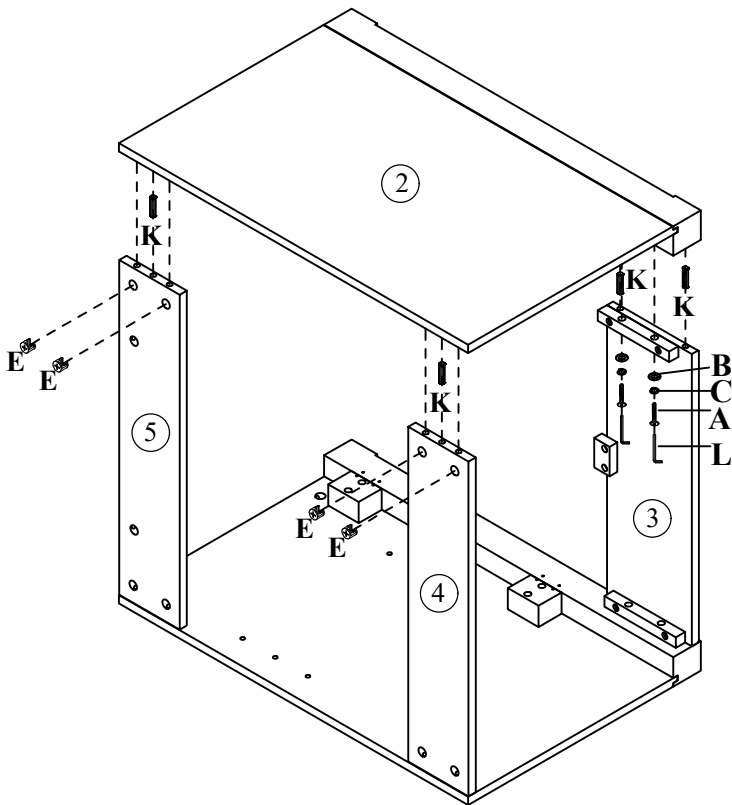

**4PCS**

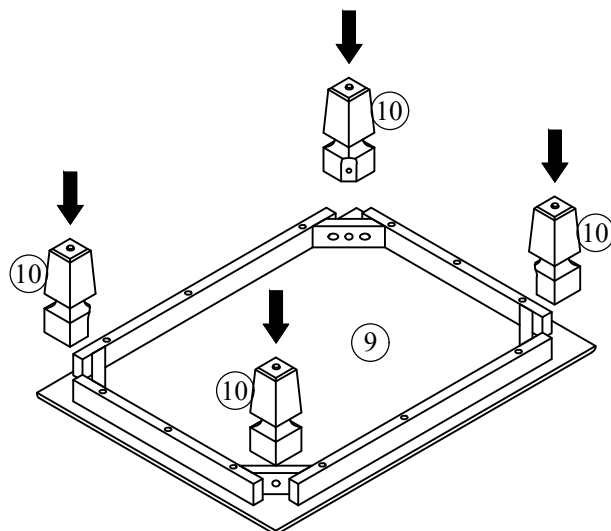


## **STEP: 5**



## **STEP: 6**

L	C	B	A
			
1PC	4PCS	4PCS	4PCS

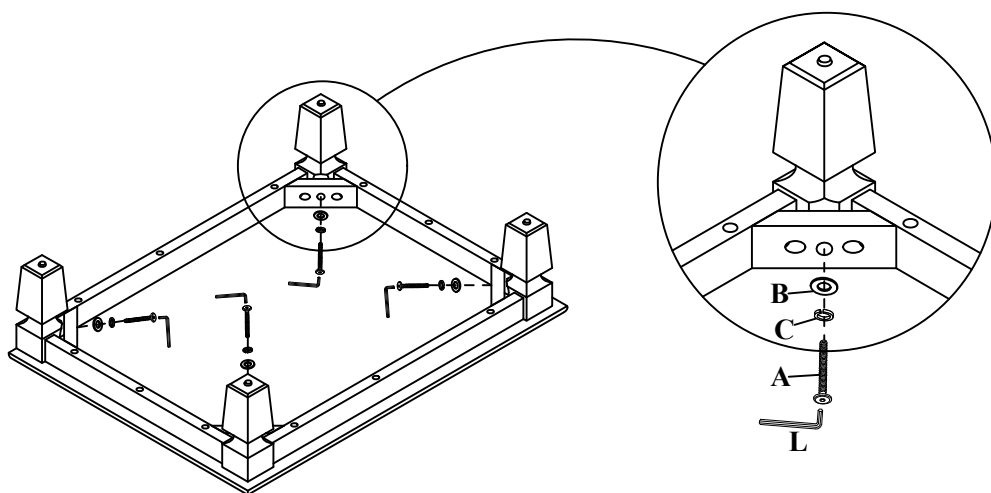


## STEP: 7

**D**



**6PCS**

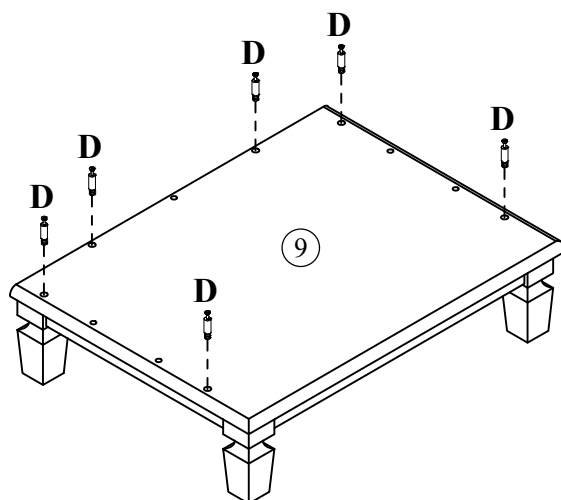

## STEP: 8

**E**






**6PCS**




**K**







**5PCS**

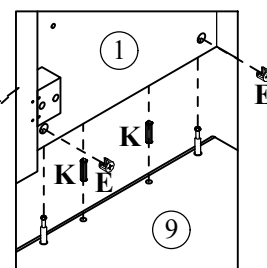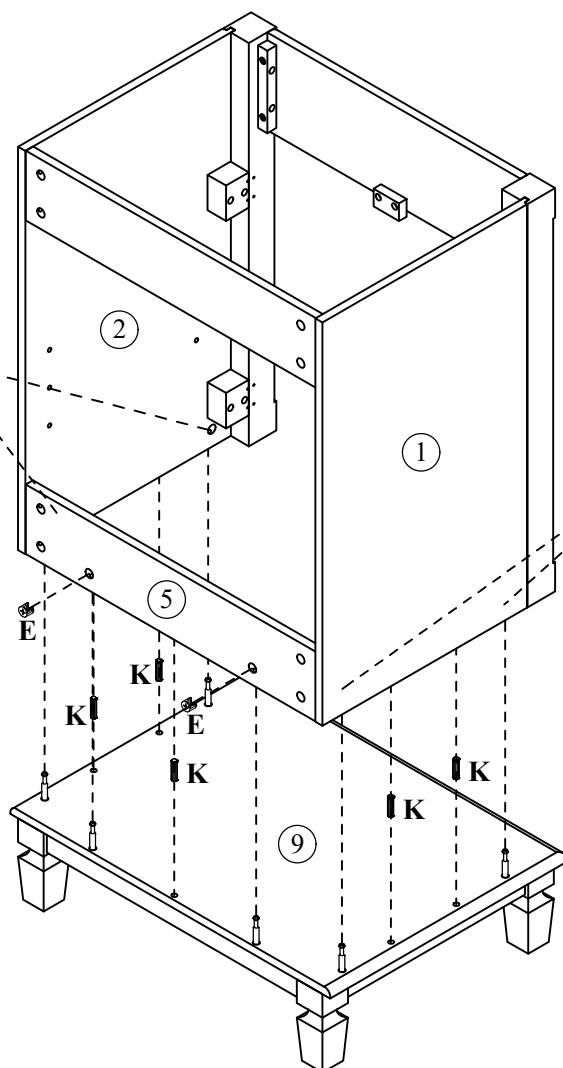
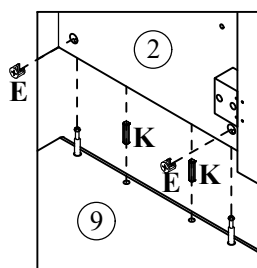


**STEP: 9**

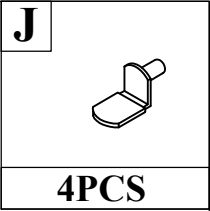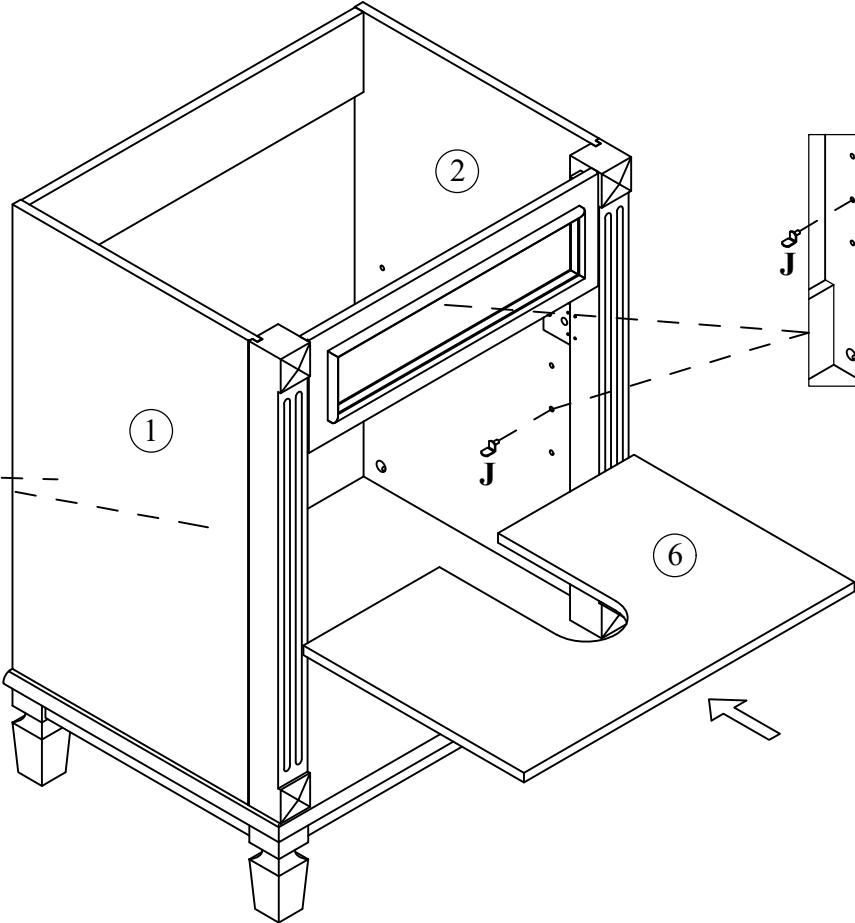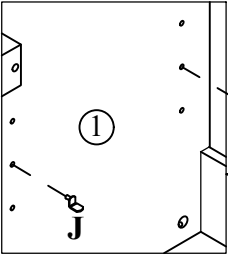


**STEP: 10**
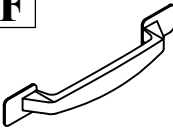
<b>G</b>	<b>F</b>	<b>H</b>	<b>I</b>
			
4PCS	2PCS	4PCS	8PCS

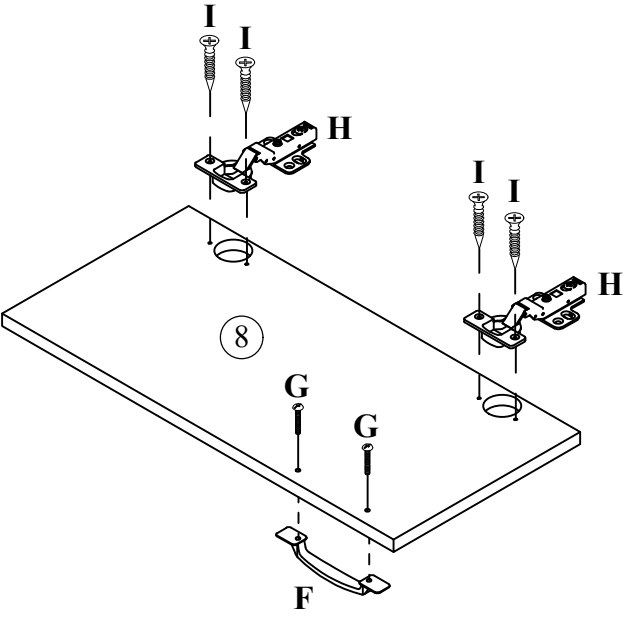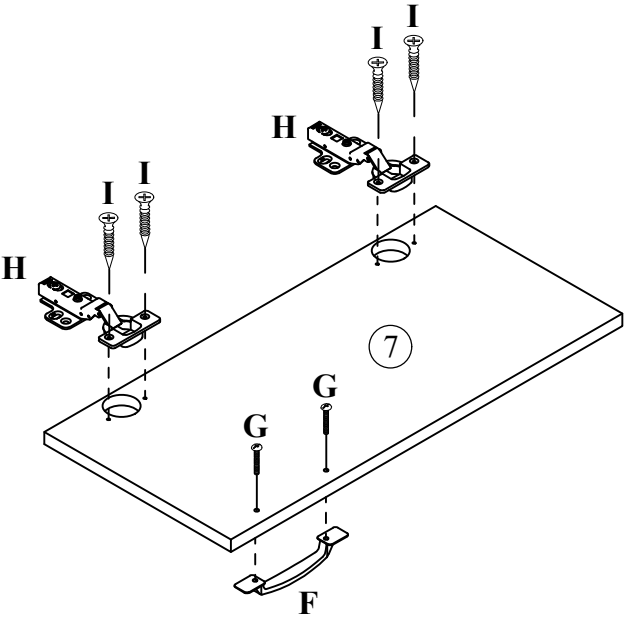


## STEP: 11


I




16PCS

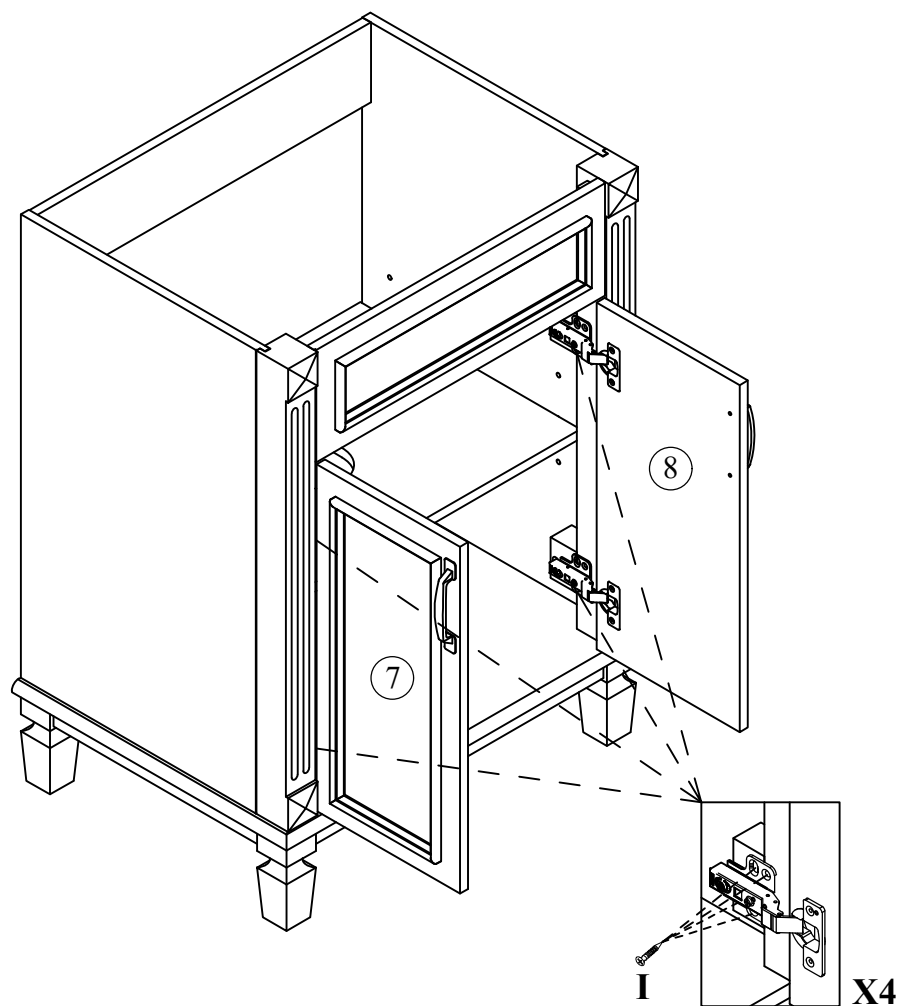


Use the screws to adjust up or down

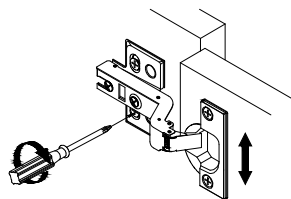


Use the screws to permanent

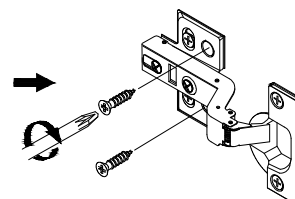



Use the screws to adjust left or right

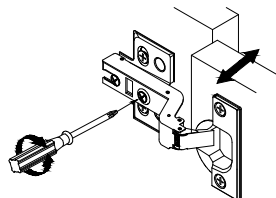

Use the screws to adjust in or out

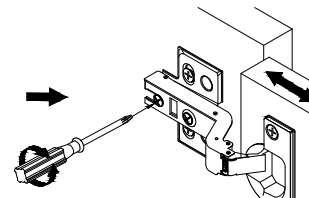


## **STEP: 12**

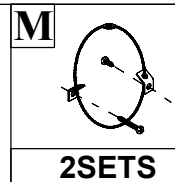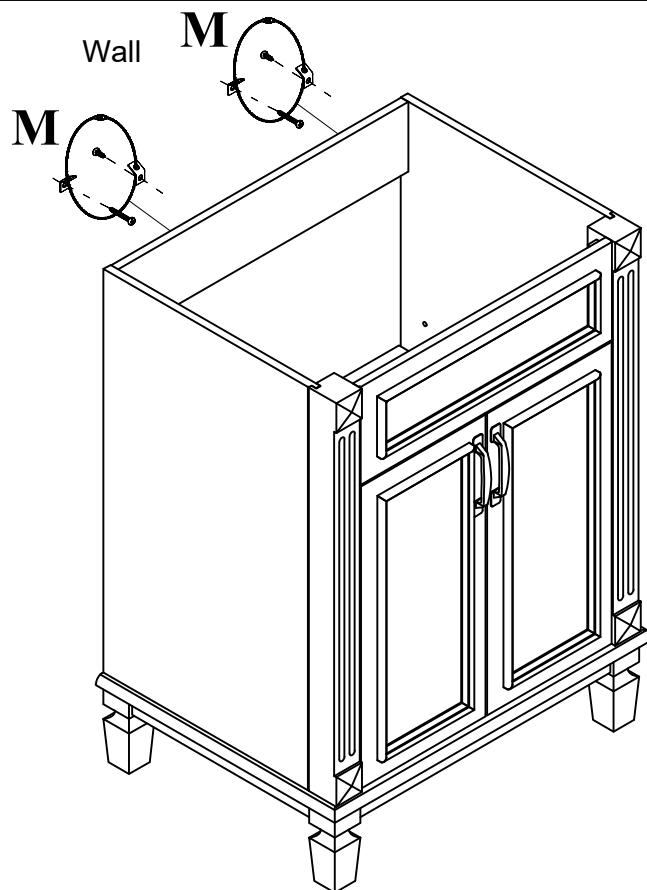



## **STEP: 13**

Install the sink on the cabinet with glue.  
Let stand for 24 hours

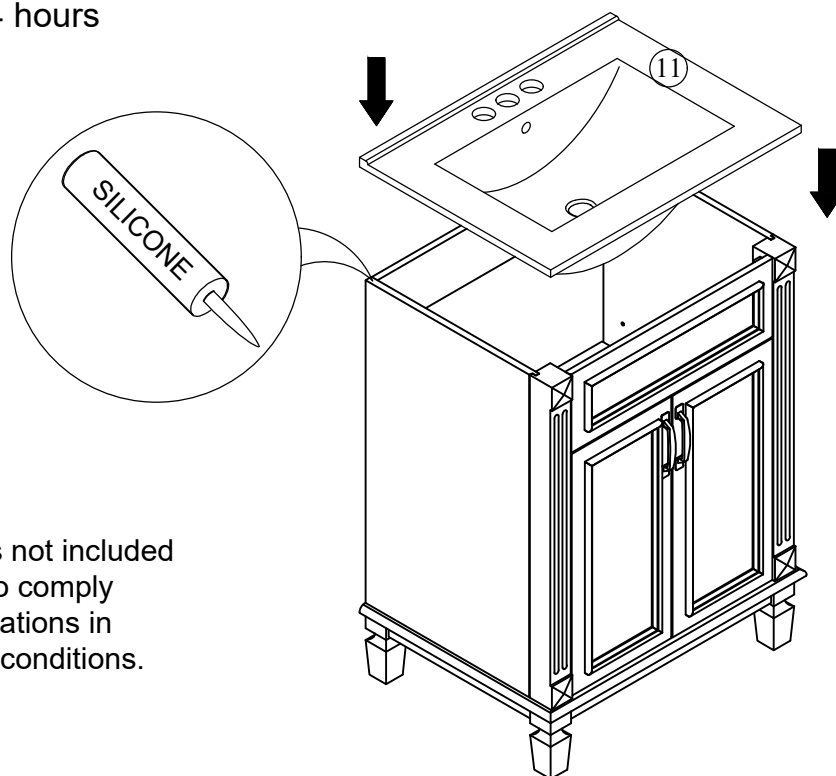


\*Silicone glue is not included  
in the package to comply  
with safety regulations in  
certain shipping conditions.

## **STEP: 14**

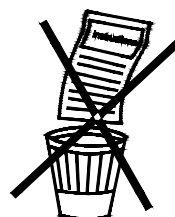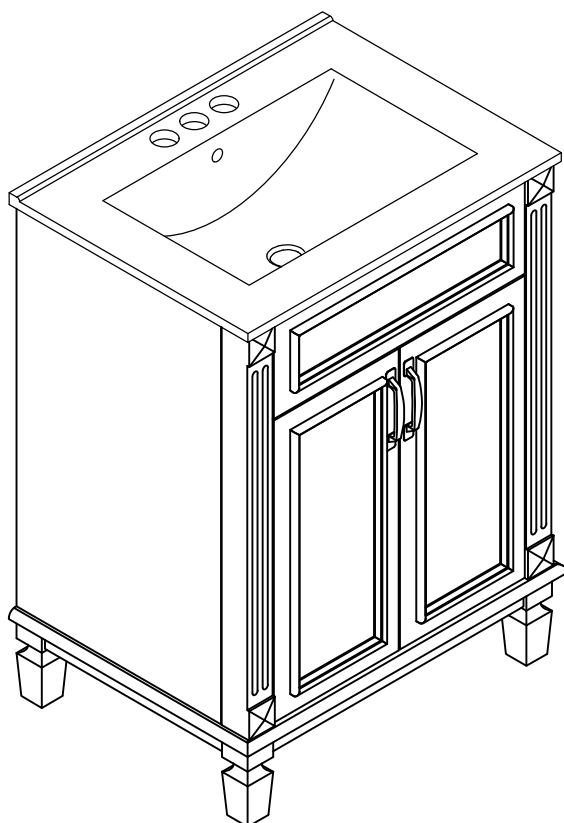


# HINGE ADJUSTMENTS

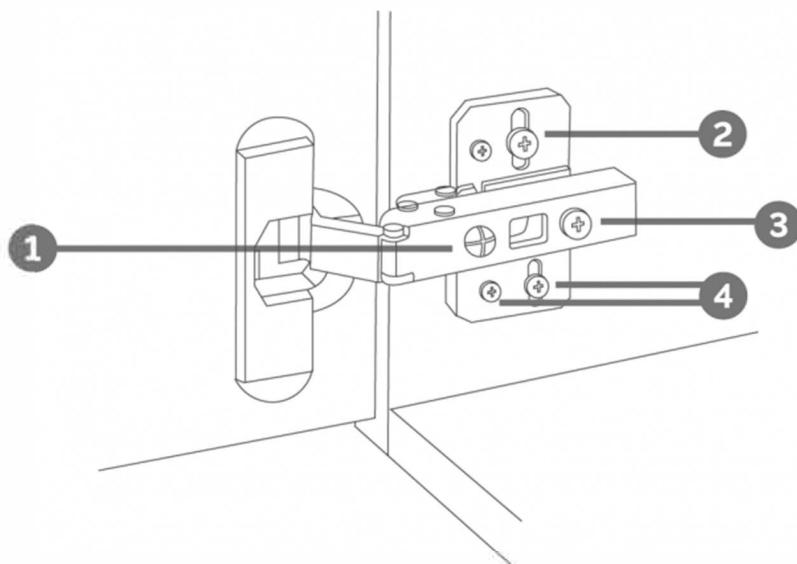


## ① Sideways / Tilt adjustment

Turn the screw  
**clockwise** to move the door further away from the side of the cabinet  
**anticlockwise** to move the door closer to the side of the cabinet

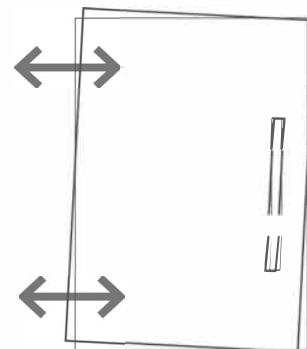

## ② ④ Height adjustment

While supporting the weight of the door, turn the screws  
**clockwise** to move the door up  
**anticlockwise** to move the door down

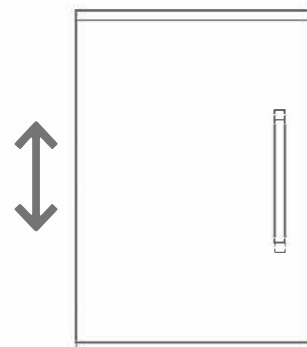

## ③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw  
**clockwise** to decrease the gap between the door and the cabinet  
**anticlockwise** to increase the gap between the door and the cabinet

