




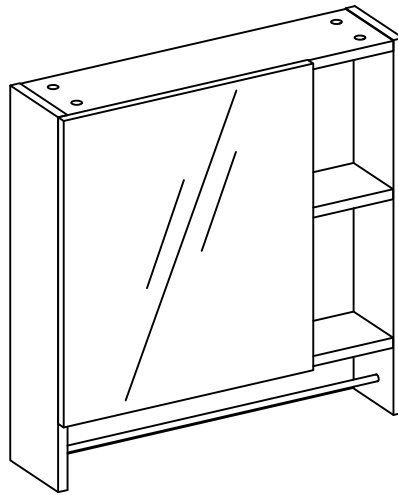
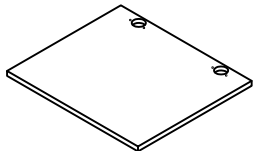
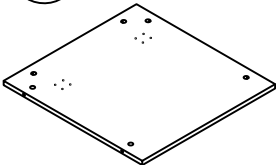

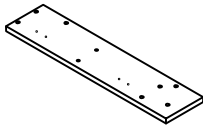


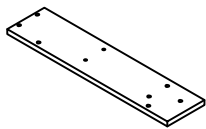











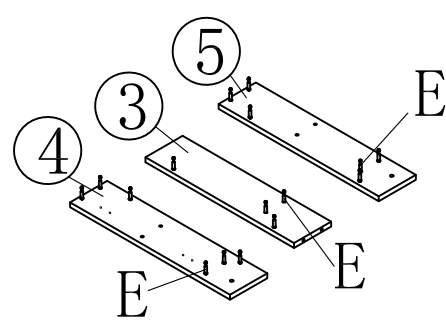
ASSEMBLY INSTRUCTION




JG01

<div>①</div> <div></div> <div>1pcs</div>	<div>②</div> <div></div> <div>1pcs</div>	<div>③</div> <div></div> <div>1pcs</div>	<div>④</div> <div></div> <div>1pcs</div>	<div>⑤</div> <div></div> <div>1pcs</div>	
<div>⑥</div> <div></div> <div>1pcs</div>	<div>⑦</div> <div></div> <div>1pcs</div>	<div>⑧</div> <div></div> <div>1pcs</div>	<div>⑨</div> <div></div> <div>1pcs</div>	<div>⑩</div> <div></div> <div>1pcs</div>	
<div>A</div> <div></div> <div>26pcs</div>	<div>B</div> <div></div> <div>2pcs</div>	<div>C</div> <div></div> <div>8pcs</div>	<div>D</div> <div></div> <div>8*50 2pcs</div>	<div>E</div> <div></div> <div>16pcs</div>	
<div>F</div> <div></div> <div>16pcs</div>	<div>G</div> <div></div> <div>2pcs</div>	<div>H</div> <div></div> <div>2pcs</div>	<div>I</div> <div></div> <div>8pcs</div>	<div>J</div> <div></div> <div>1pcs</div>	<div>K</div> <div></div> <div>8*30 8pcs</div>

STEP1




STEP2

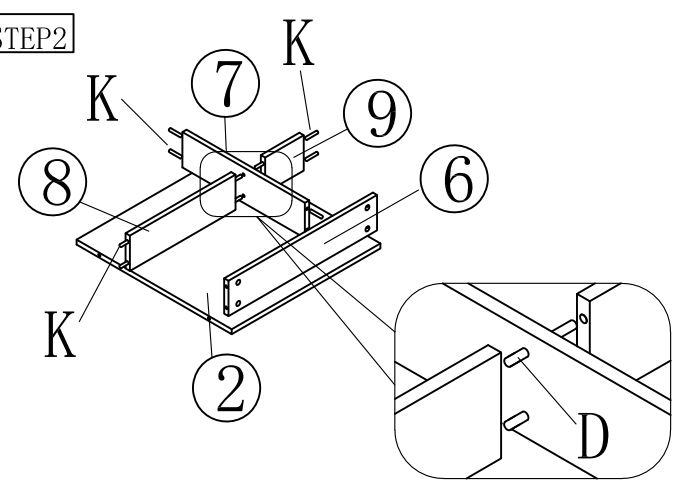


ASSEMBLY INSTRUCTION


STEP3

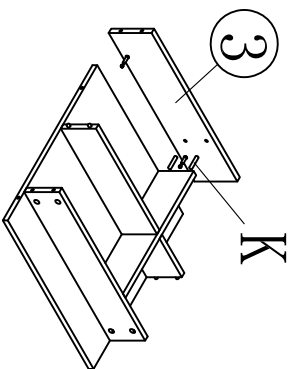


STEP4

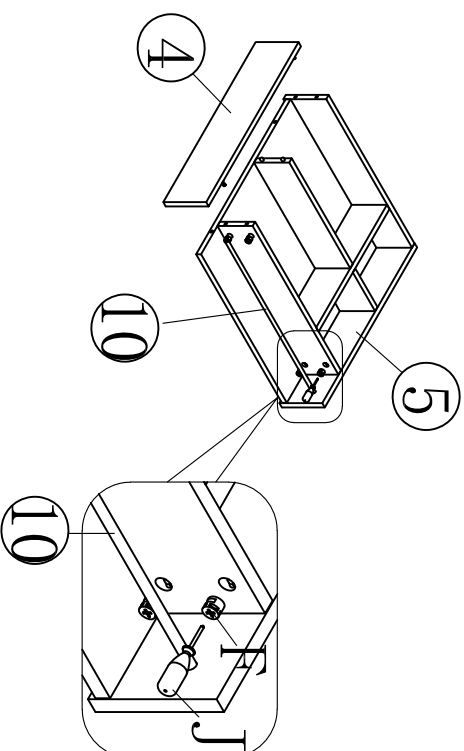


STEP5

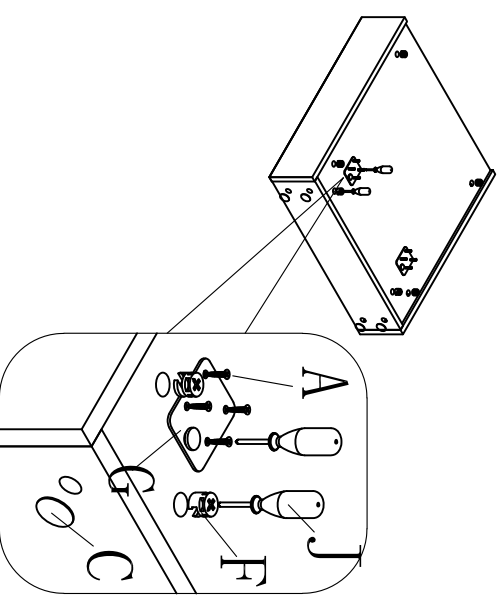

STEP6

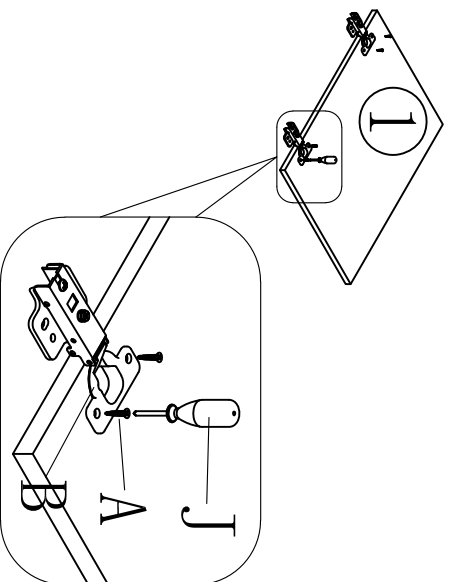


STEP7

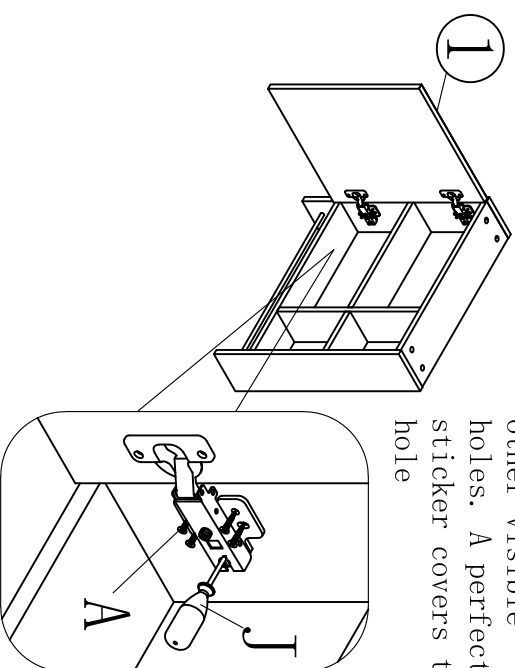

The backplate does not need a perfect sticker to cover other visible holes. A perfect sticker covers the hole

STEP8

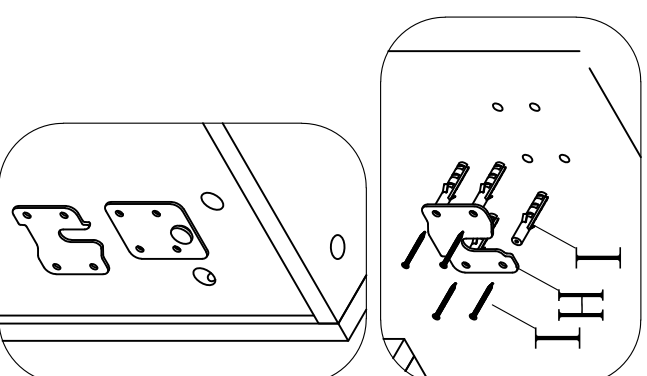

Note that the wall is perforated into the expansion rod and the mounting mount is secured. You can install the rear bracket of the cabinet against the wall bracket slot down.

