

# Assembly Instructions

**Caution : You must read this before you proceed**

## Care & Maintenance



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.




- Children should not climb or jump on the furniture.










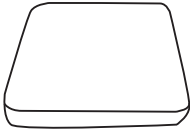


- Dust and pick-up spills using a clean, non-colored, lint-free cloth.
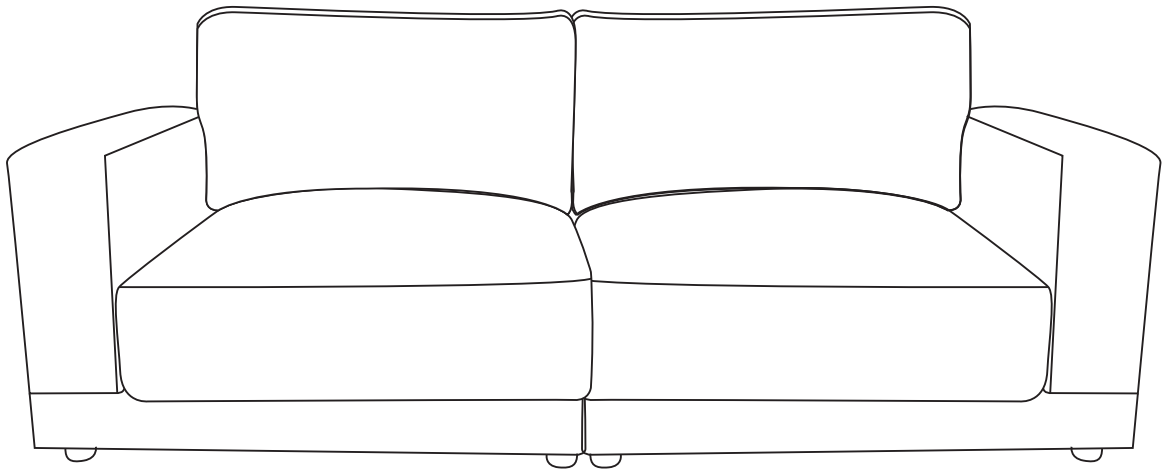
# SOFA












## Parts List

| Label | Picture   | Description      | QTY |
|-------|---|------------------|-----|
| A     |  | Seat Frame Left  | 1   |
| B     |  | Seat Frame Right | 1   |
| C     |  | Armrest Left     | 1   |


|   |   |                |   |
|---|---|----------------|---|
| D |    | Armrest Right  | 1 |
| E |    | Backrest Left  | 1 |
| F |    | Backrest Right | 1 |
| G |   | Back Rest      | 2 |
| H |  | Cushion Seat   | 2 |
| I |  | Back Cover     | 2 |
| J |  | Seat Cover     | 2 |
|   |   |                |   |

## Hardware


| Label | Picture   | Description      | QTY |
|-------|---|------------------|-----|
| ①     |    | Bolt(M6*16mm)    | 24  |
| ②     |    | Bolt(M6*25mm)    | 8   |
| ③     |    | Bolt(M6*45mm)    | 4   |
| ④     |  | Flat Washer(M6)  | 4   |
| ⑤     |  | Plastic Spacer   | 8   |
| ⑥     |  | Plastic Feet     | 8   |
| ⑦     |  | Insert(small)    | 8   |
| ⑧     |  | Insert(big)      | 8   |
| ⑨     |  | Allen Wrench(M6) | 1   |

# Assembly Preparation

Before  
Beginning  
Assembly:



A




D




G




J




B




E

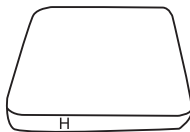


H



C



F



I

① \*24



② \*8



③ \*4



④ \*4



⑤ \*8



⑥ \*8



⑦ \*8



⑧ \*8



⑨ \*1



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


## Assembly Steps

### Overview

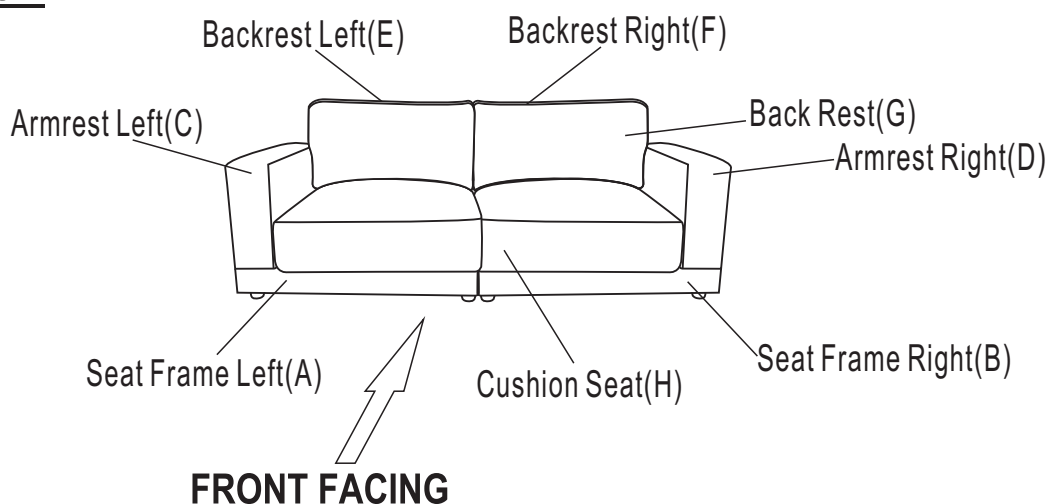


This sofa has multiple parts and may require up to some 15 minutes to assemble. To give you an overview of the sofa parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

### Step 1

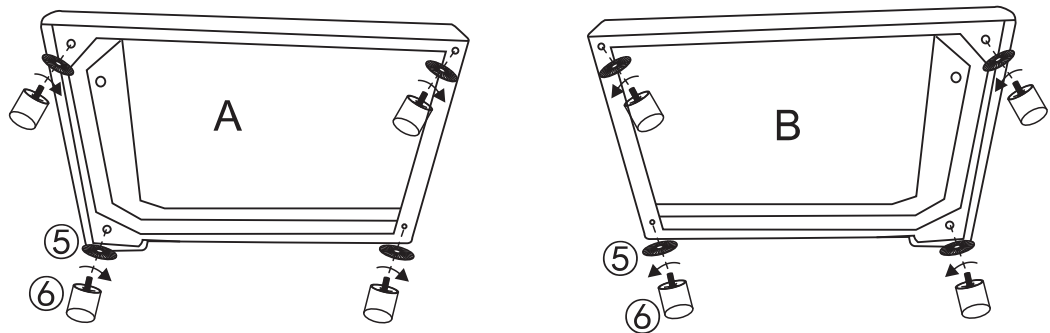


Place all the parts on a clean , non-marring surface. Attach the Plastic Feet(6) and the Plastic Spacers(5) to the Seat Frame Left(A) and the Seat Frame Right(B).

### Step 2

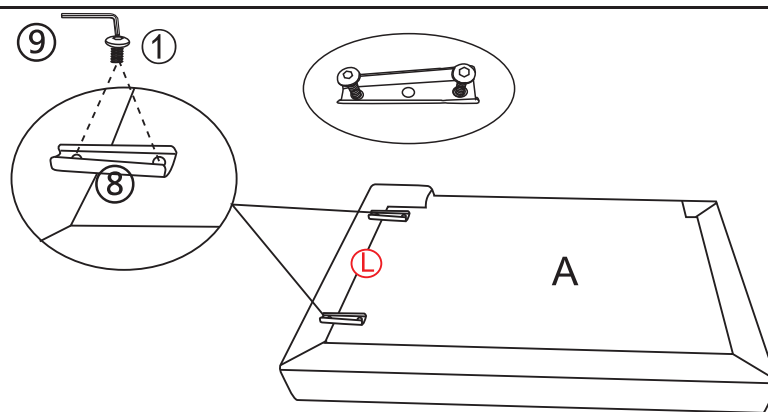


Attached Insert(big) (8) to Seat Frame Left ( A ) by using Bolt(1)and Allen Wrench(9).  
Friendly notice:Attention to the size and prientation of the insert.

### Step 3

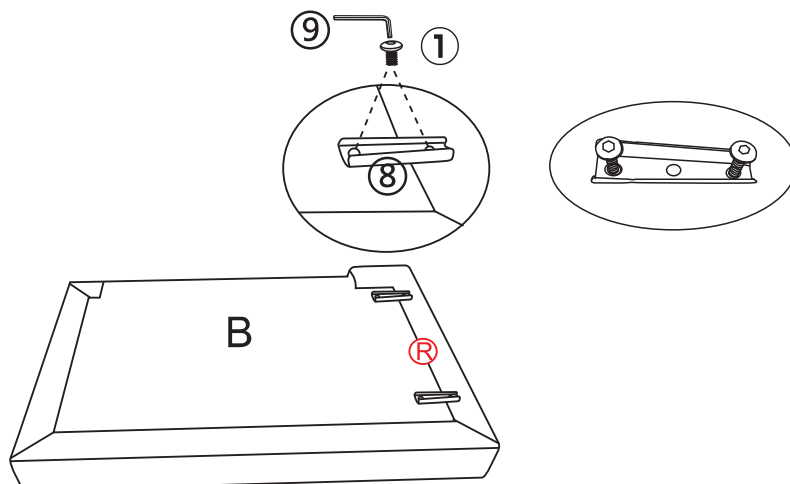


Attached Insert(big)(8) to Seat Frame Right ( B ) by using Bolt(1)and Allen Wrench(9).

#### Step 4

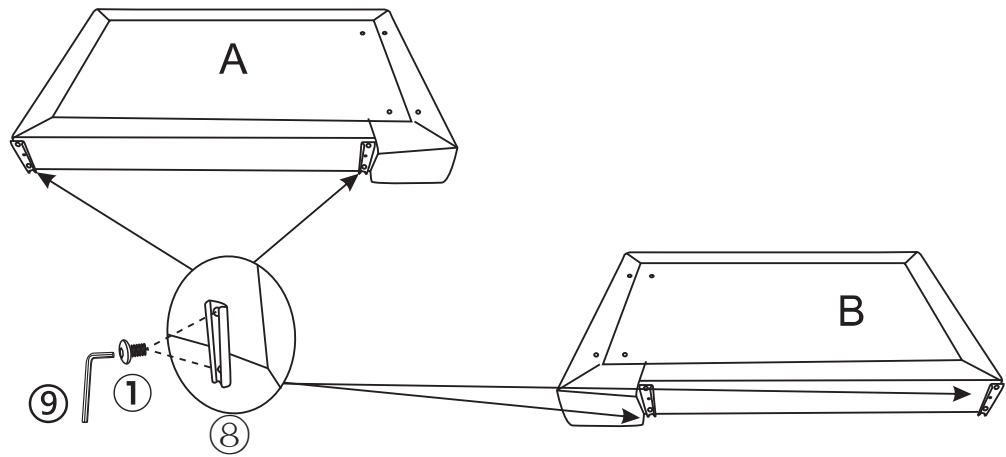


Attached Insert(big) (⑧) to Seat Frame Left ( A ) and Seat Frame Right(B) by using Bolt (①)and Allen Wrench (⑨).

#### Step 5

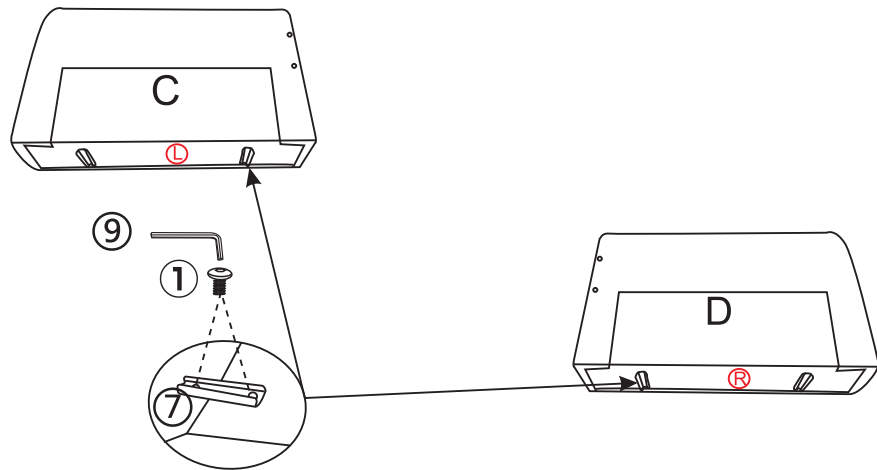


Attached Insert (small) (⑦) to Armrest Left (C)and Armrest Right (D) by using Bolt (①) and Allen Wrench (⑨).

#### Step 6

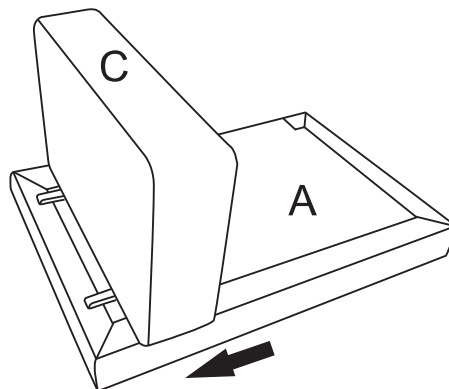


Insert the Armrest Left(C) into the Seat Frame Left(A).

Step 7

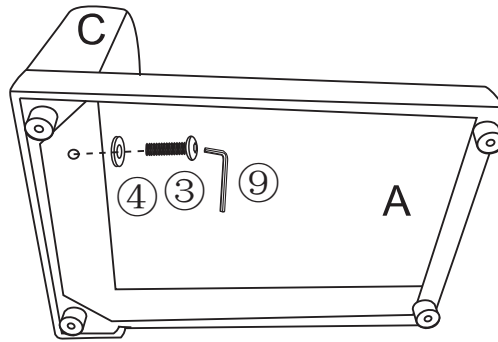


Attached Armrest Left (C) to Seat Frame Left (A) by using Bolt (3), Flat Washer (4) and Allen Wrench (9).

Step 8

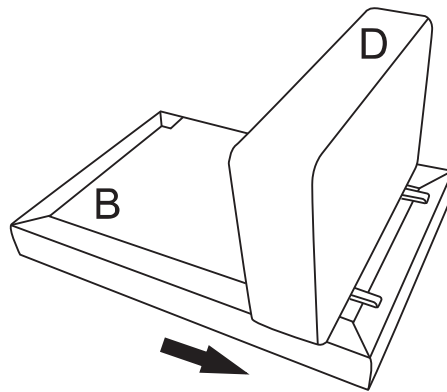

Insert the Armrest Right (D) into the Seat Frame Right (B).


Step 9

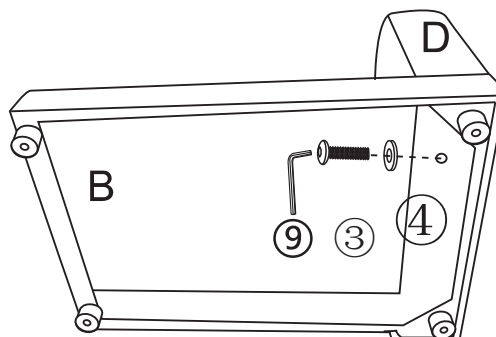

Attached Armrest Left (D) to Seat Frame Right (B) by using Bolt (3), Flat Washer (4) and Allen Wrench (9).




Step 10

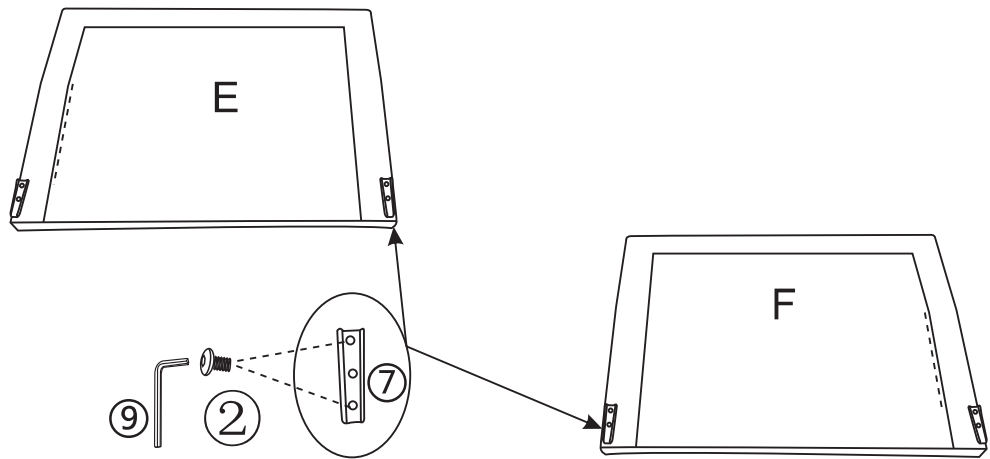


Attached Insert(small) (⑦) to Backrest Left ( E ) and Backrest Right(F) by using Bolt ( ②) and Allen Wrench (⑨).

Step 11

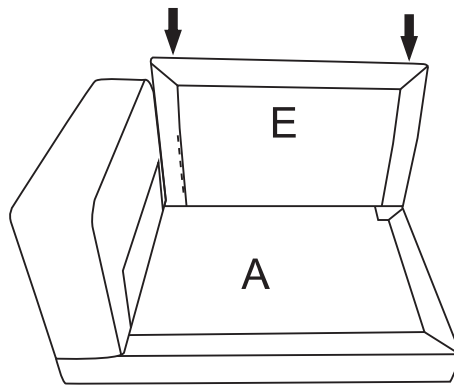


Insert the Backrest Left(E) into the Seat Frame Left(A) .

Step 12

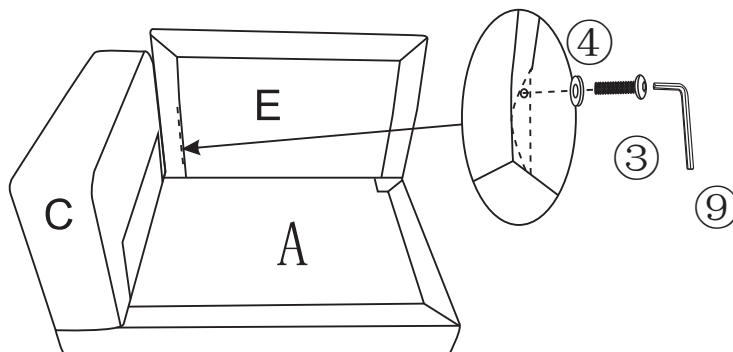


Attached Backrest Left(E) to Armrest Left(C) by using Bolt (③), Flat Washer (④) and Allen Wrench (⑨).

Step 13

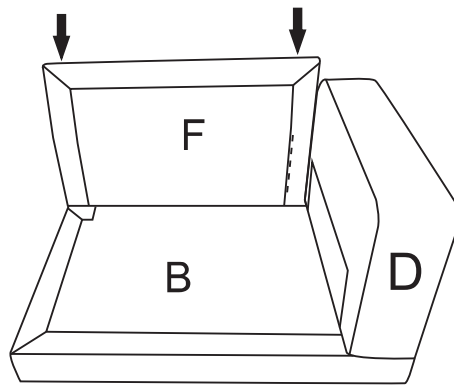


Insert The Backrest Right(F) into the Seat Frame Right(B).

Step 14

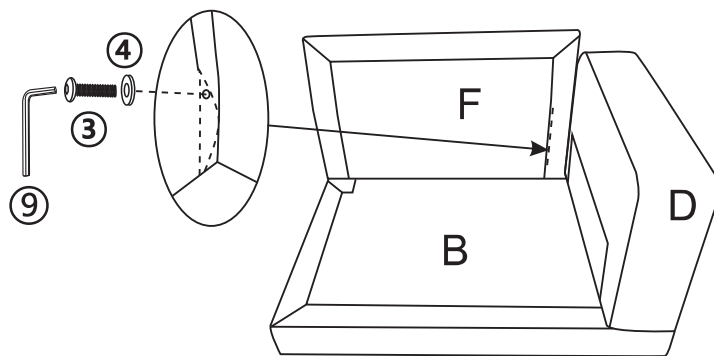





Attached Backrest Right(F) to Armrest Right(D) by using Bolt(③), Flat Washer(④) and Allen Wrench(⑨).

Step 15

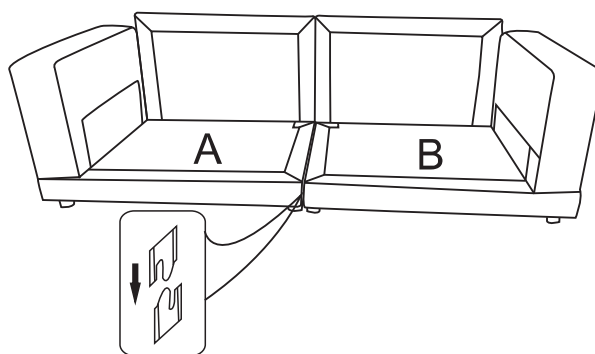


Insert the Seat Frame Left(A) into the Seat Frame Right(B) .

### Step 16

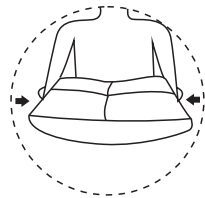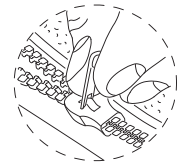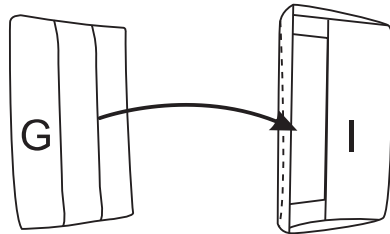


Take out the backpack and seat bag, and pat all four corners with your hand.

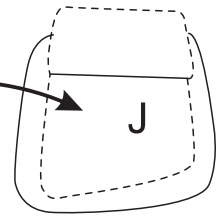


Take out the backpack and seat bag, and pat all four corners with your hand.

### Step 17

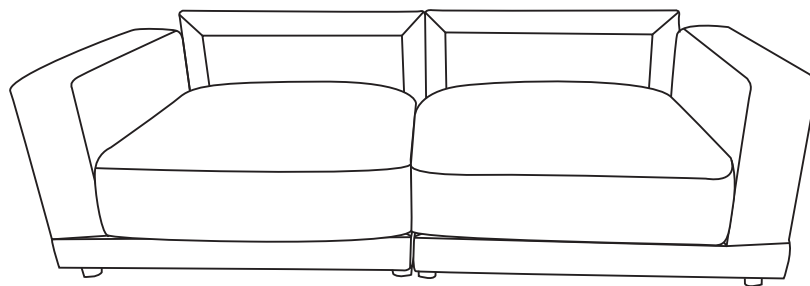

Put the seat bag on the seat frame.

### Step 18

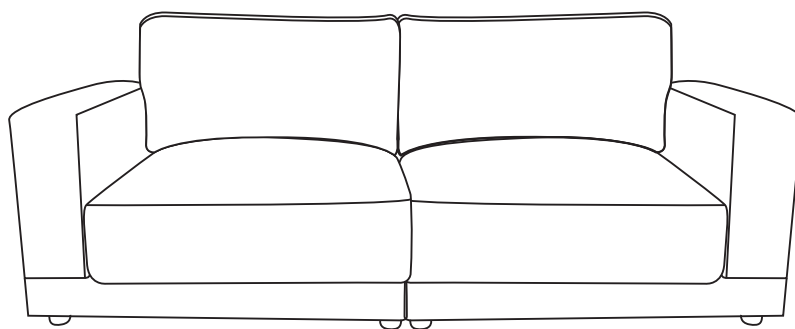

Put the backpack on the seat frame.  
Your sofa is ready for use. This Sofa can only be used on a flat, level surface.