Assembly Instructions


Care & Maintenance

Ø =	Not for commercial use. For residential use only.
✓ Ā	Furniture may scratch floors. We recommend using furniture pads to protect yourd floors.
Ø <u></u>	Do not put hot items directly on furniture surface.
Clean	Do not clean furniture with harsh cleansers or polish.
Ø 🔅	Do not place furniture under direct sunlight.
0	Do not place furniture near heating or cooling vents.
0 1	Do not write on furniture without a padded barrier to protect the surface.
Ø*	Do not place furniture outsideFor indoor use only.
Ø ⁷	Stains may be removed with mild soap solution and damp cloth.
Ø 🐕	Children should not climb or jump on the furniture.
✓	Dust and pick-upspills using a clean, non-colored, lint-free cloth.

Please look in the box for hardware packs and legs.

Sets often ship in multiple boxes and may arrive a day or two apart.

King Bed N757P327030W

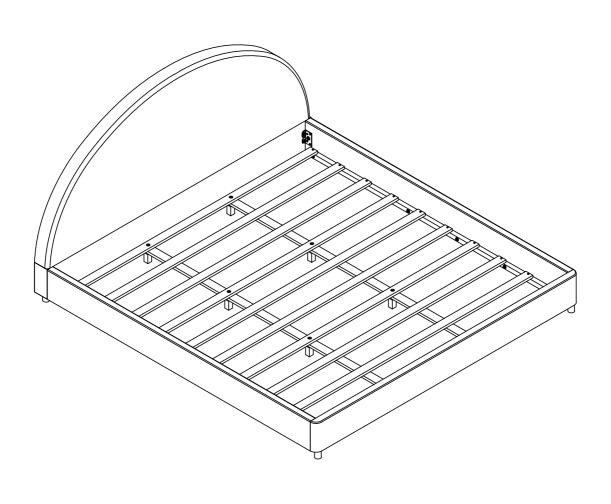

Part List				
Label	Picture	Description	QTY	
4		Headboard	1pc	
(11)	•	Bed leg	4pcs	

Part List	N757P327031W			
1		Side Rail(R)	1pc	
2		Side Rail(L)	1рс	
3		Footboard	1pc	
5		Slats with 4 pre-holes	4pcs	
6		Slats with 2 pre-holes	6pcs	
7		Middle Support bar	2pcs	
8		Center Support Leg	8pcs	
9		Support Rail 2		
10)		Headboard Storage 1p		




Noted: Slats with 4 pre-holes (5) Slats with 2pre-holes (6) and are packaged behind the Headboard Storage (10).

Hardware	N757P327030W			
Label	Picture	Description	QTY	
A		Screw(4x30mm)	36+1pcs	
B		Bolts(5/16x30mm)	12+1pcs	
C		Bolts(5/16x50mm)	16+1pcs	
D		Bolts(1/4x50mm)	8+1pcs	
E		Lock washer(5/16x20mm)	28+1pcs	
F		Flat washer(5/16x20mm)	28+1pcs	
G	(2)	Lock washer(1/4x18mm)	8+1pcs	
H	0	Flat washer(1/4x18mm)	8+1pcs	
T		Metal pad(L)	2pcs	
K	000	Metal pad(R)	2pcs	
M		Allen Key(M4)	1+1	
Page 4 Of 11				


Assembly Preparation

Before Beginning assembly:

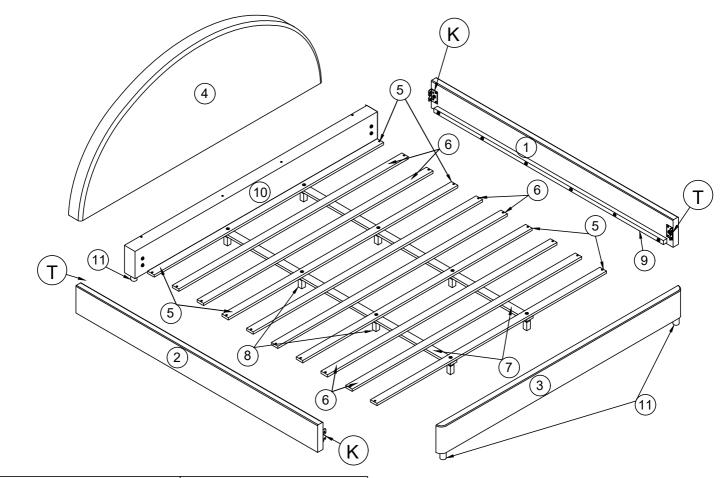


Α	x 36pcs+1	F		x 28pcs+1
В	x 12pcs+1	G		x 8pcs+1
С	x 16pcs+1	Н	0	x 8pcs+1
D	x 8pcs+1	M [©]		x 1pcs+1
Е	x 28pcs+1			


- Read the instructions cover to cover
- Have 2 adults on hand for assembly
- Do not assemble on flooring or carpet
- Assemble on a clean, non-marring surface (packing foam)
- Save all packaging until finished

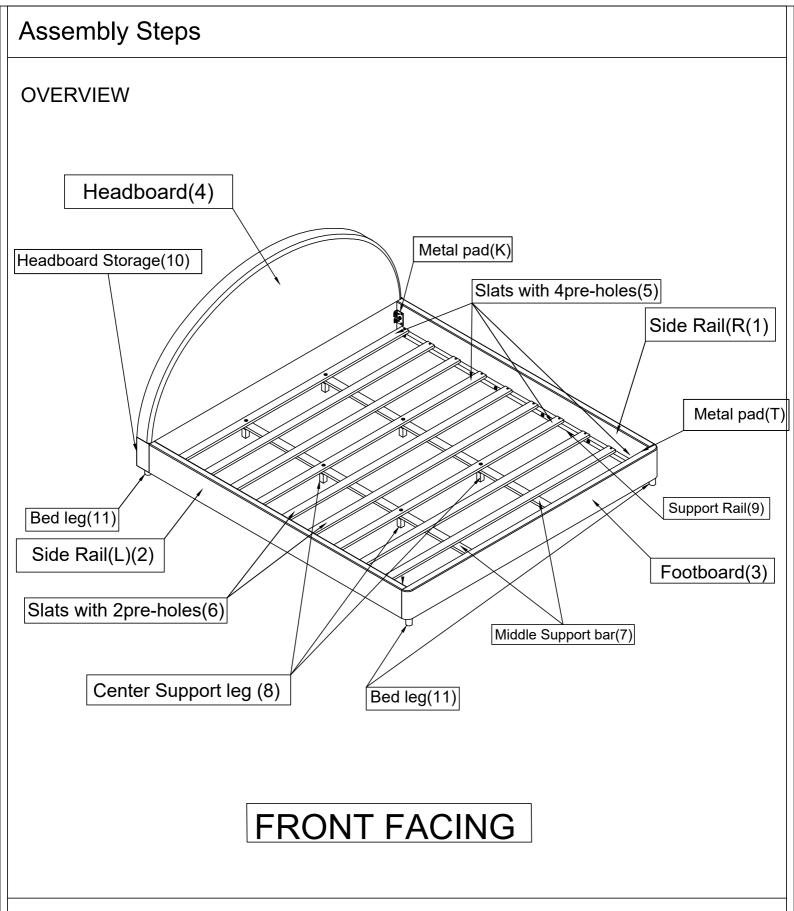


This Bed have multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Bed parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly. Note: It is recommended that you have an adult partner to assist during the entire assembly process.

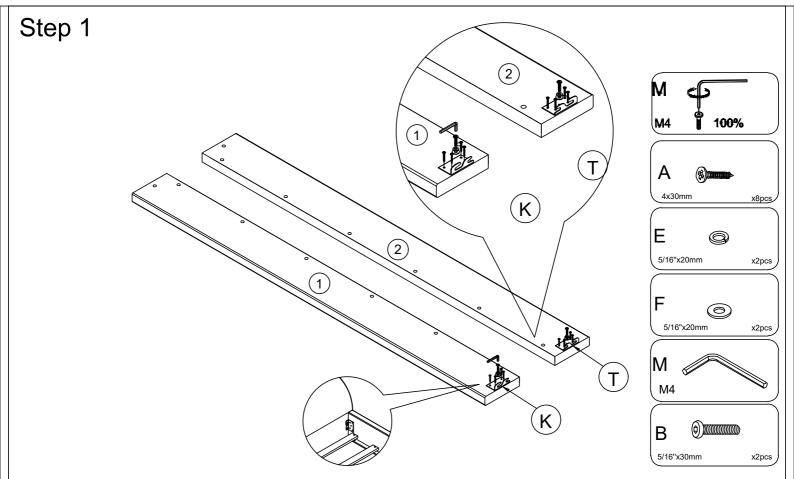


Attach the Metal pad (K) to the Side Rail (R) (1), attach the Metal pad (T) to the Side Rail (L) (2). By using the Bolts (B) and Flat Washer (F) with the Lock Washer (E) and Screw (A) to connect the Hinge and the Side Rail (Note: The hinge hook is facing down and this place is connected to the Headboard Storage (10)

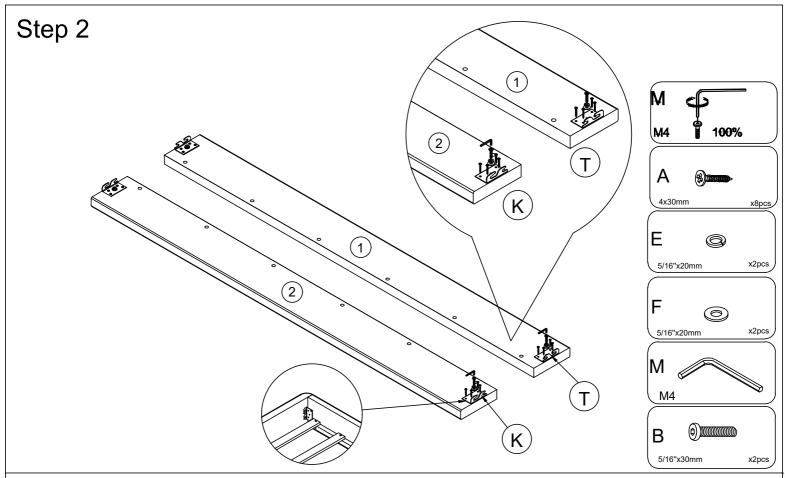


Use the Metal pad (T) to attach to the Side Rail (1), use the Metal pad (K) to attach the Side Rail (2). By using the Screw (A) and the Bolts (B) with M4 Allen Key (M) to connect the Hinge and the Side Rail (Note :The direction of the Hinge and this place is connected to the Footfoard (3).

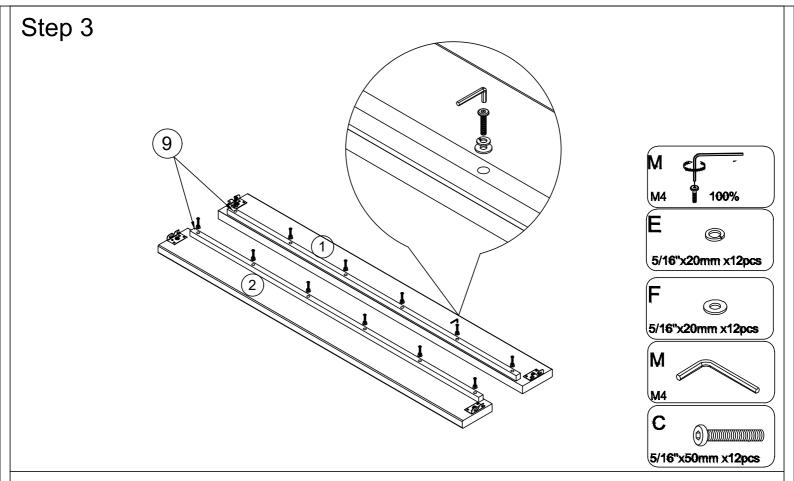


Attach the Support Rail (9) to the Side Rail (1) and the Side Rail (2). By using the Bolts (C), the Flat Washer(F) and the Lock Washer(E) with M4 Allen Key(M)

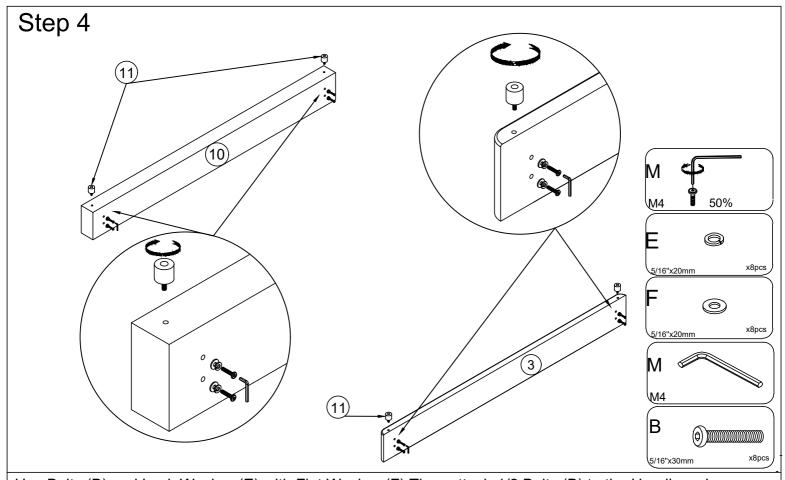


Use Bolts (B) and Lock Washer (E) with Flat Washer (F). Then attach 1/2 Bolts (B) to the Headboard Headboard Storage(10) and Footboard (3). Use 2 Bed Legs(11) attached to the Headboard Strorage (10) and 2 Bed legs(11) attached to the Footboard(3)

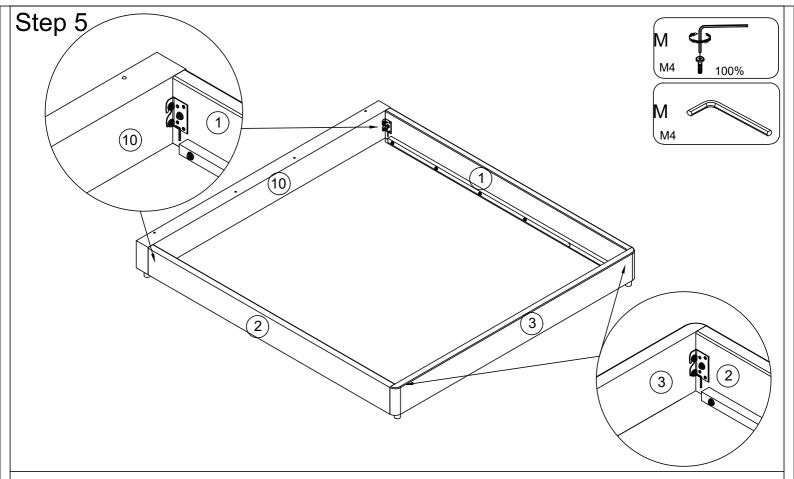


Attach the Side Rail (1) and the Side Rail (2) to the Headboard Storage (10) (Note: the direction of the Metal padis down), by using M4 Allen Key (M) to tighten the Bolts (B). Then attach the Footboard (3) to the Side Rail (1) and the Side Rail (2) (Note: the direction of the Metal pad is down), by using M4 Allen Key (M) to tighten the Bolts (B).

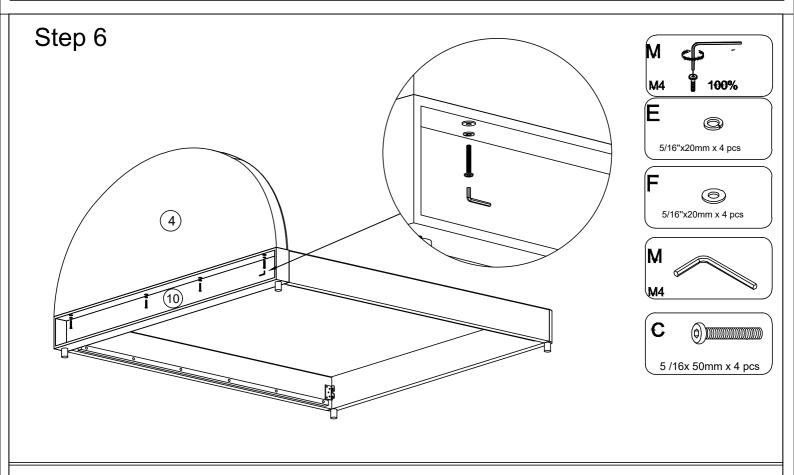


Use the Bolts (C), Lock washer (E) and Flat washer (F) to connect the Headboard (4) and the Headboard Storage (10) then tighten with Allen Key (M)

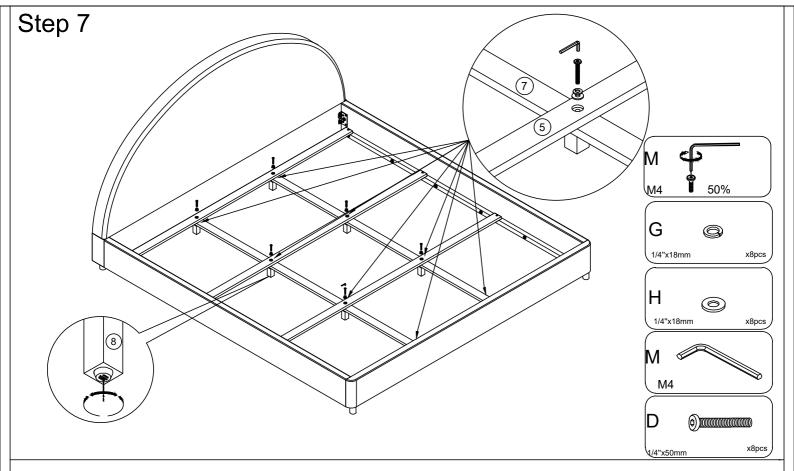

Align the assembly position on the Middle Support Bar (7) with the Center Support Leg (8) and the Slats with 4 pre-holes (5). Then attach the Slats with 4pre-holes (5) and the Middle Support Bar (7) to the Center Support Leg (8).By using the Bolts (D),Lock Washer (G) with Flat Washer (H) with M4 Allen Key (M).

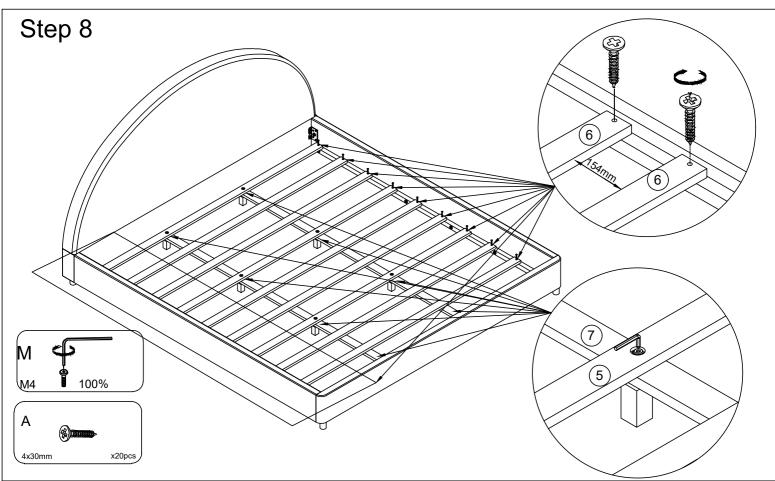

Assemble the Slats with 4pre-holes (5) and the Slats with 2pre-holes (6) to the bed Sides Rail (1) and (2). Use screw A (Note: The distance between 2 Slats is 154mm). Finally, use the M4 Allen Key (M) to tighten the Bolts (D) 100%

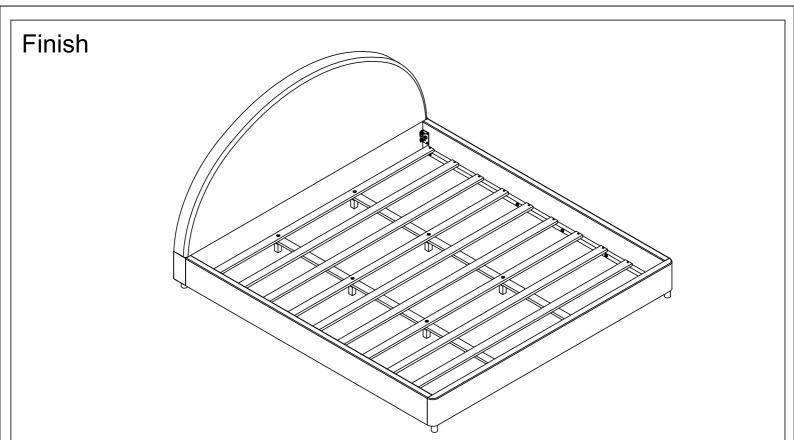

Thank you for your trust and preference in using our products. The product will bring you a peaceful sleep forever