























Assembly Instructions


Care & Maintenance

 	<ul style="list-style-type: none">• Not for commercial use. For residential use only.
 	<ul style="list-style-type: none">• Furniture may scratch floors. We recommend using furniture pads to protect your floors.
 	<ul style="list-style-type: none">• Do not put hot items directly on furniture surface.
 	<ul style="list-style-type: none">• Do not clean furniture with harsh cleansers or polish.
 	<ul style="list-style-type: none">• Do not place furniture under direct sunlight.
 	<ul style="list-style-type: none">• Do not place furniture near heating or cooling vents.
 	<ul style="list-style-type: none">• Do not write on furniture without a padded barrier to protect the surface.
 	<ul style="list-style-type: none">• Do not place furniture outsideFor indoor use only.
 	<ul style="list-style-type: none">• Stains may be removed with mild soap solution and damp cloth.
 	<ul style="list-style-type: none">• Children should not climb or jump on the furniture.
 	<ul style="list-style-type: none">• Dust and pick-upspills using a clean, non-colored, lint-free cloth.





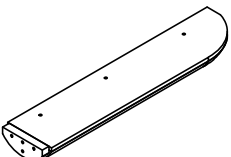
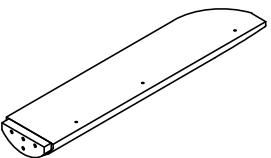
Please look in the box for hardware packs and legs.

Sets often ship in multiple boxes and may arrive a day or two apart.

King Bed N757P331590W







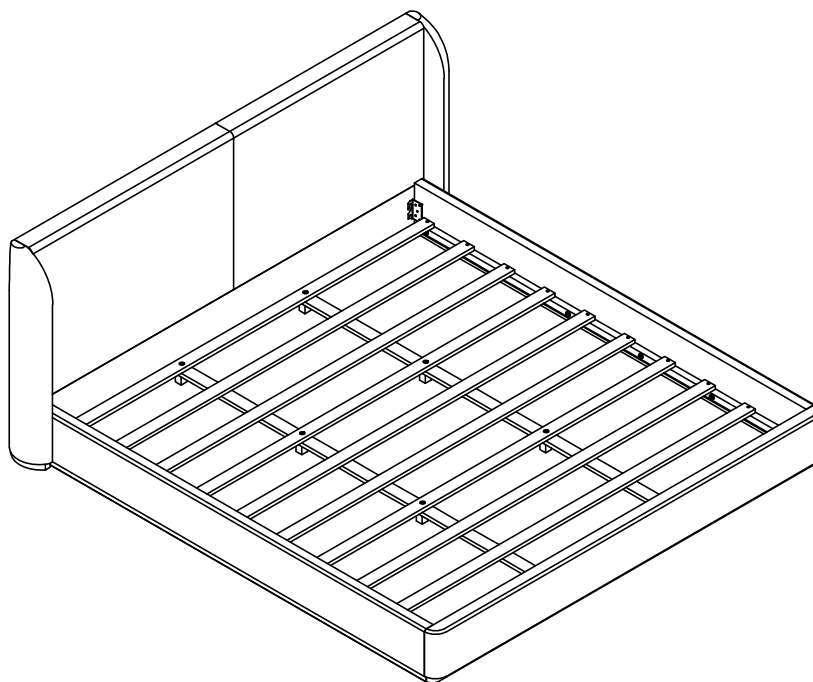



Part List

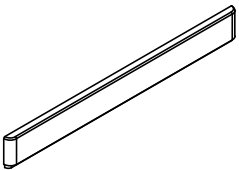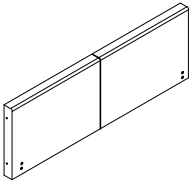Label	Picture	Description	QTY
③		Footboard	1pc
④		Headboard	1pc
⑧		Center Support Leg	8pcs
⑪		Headboard leg	2pcs
⑫		Headboard Wing(R)	1pc
⑬		Headboard Wing(L)	1pc

Part List

N757P357512W

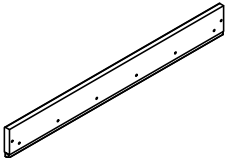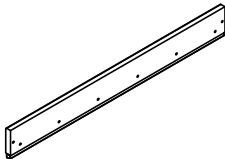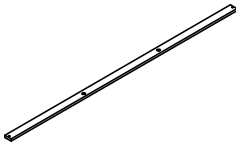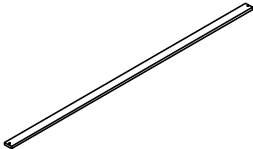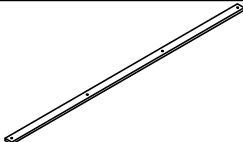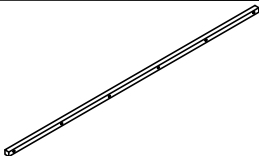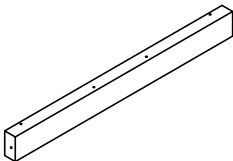












①		Side Rail(R)	1pc
②		Side Rail(L)	1pc
⑤		Slats with 4pre-holes	4pcs
⑥		Slats with 2pre-holes	6pcs
⑦		Middle Support bar	2pcs
⑨		Support Rail	2pcs
⑩		Headboard Storage	1pc



Noted : Slats with 4pre-holes (5) Slats with 2pre-holes (6) and are packaged behind the Headboard Storage (10).


N757P331590W









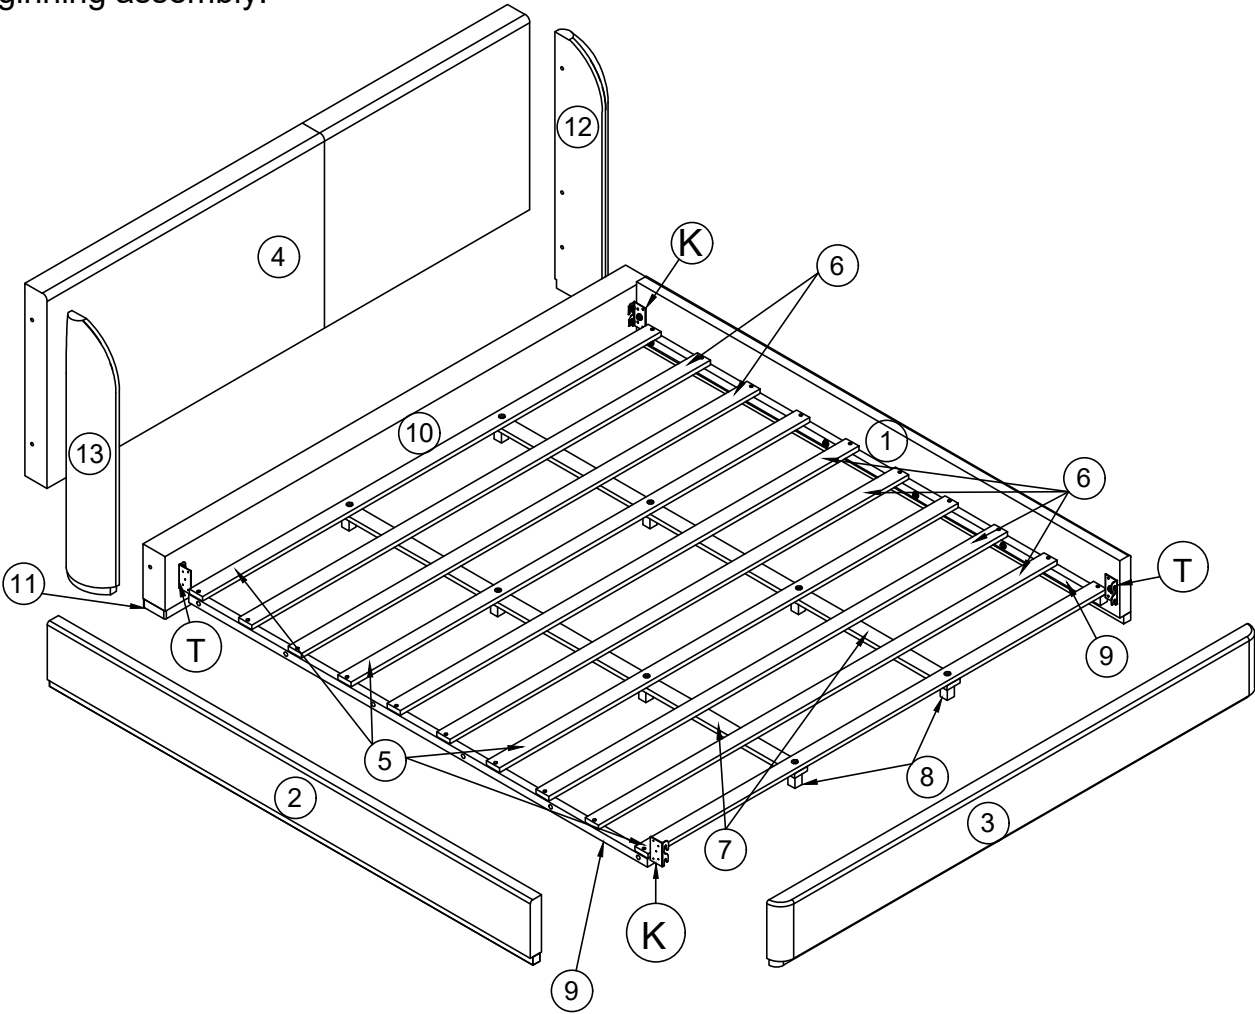


Hardware






Label	Picture	Description	QTY
(A)		Screw(4x30mm)	46+1pcs
(B)		Bolts(5/16x30mm)	12+1pcs
(C)		Bolts(5/16x50mm)	20+1pcs
(D)		Bolts(1/4x50mm)	8+1pcs
(E)		Lock washer(5/16x20mm)	34+1pcs
(F)		Flat washer(5/16x20mm)	28+1pcs
(G)		Lock washer(1/4x18mm)	8+1pcs
(H)		Flat washer(1/4x18mm)	8+1pcs
(T)		Metal pad(L)	2pcs
(K)		Metal pad(R)	2pcs
(M)		Allen Wrench(M4)	1+1
(N)		Bolts(5/16x80mm)	2+1pcs
(P)		Flat washer(5/16x26mm)	6+1pcs

Assembly Preparation

Before Beginning assembly:




A  x 46pcs+1	C  x 20pcs+1	E  x 34pcs+1	G  x 8pcs+1
B  x 12pcs+1	D  x 8pcs+1	F  x 28pcs+1	H  x 8pcs+1
	N  x 2pcs+1	P  x 6pcs+1	M  x 1pcs+1

-  Read the instructions cover to cover
-  Have 2 adults on hand for assembly
-  Do not assemble on flooring or carpet
-  Assemble on a clean, non-marring surface (packing foam)
-  Save all packaging until finished

Assembly Steps

OVERVIEW

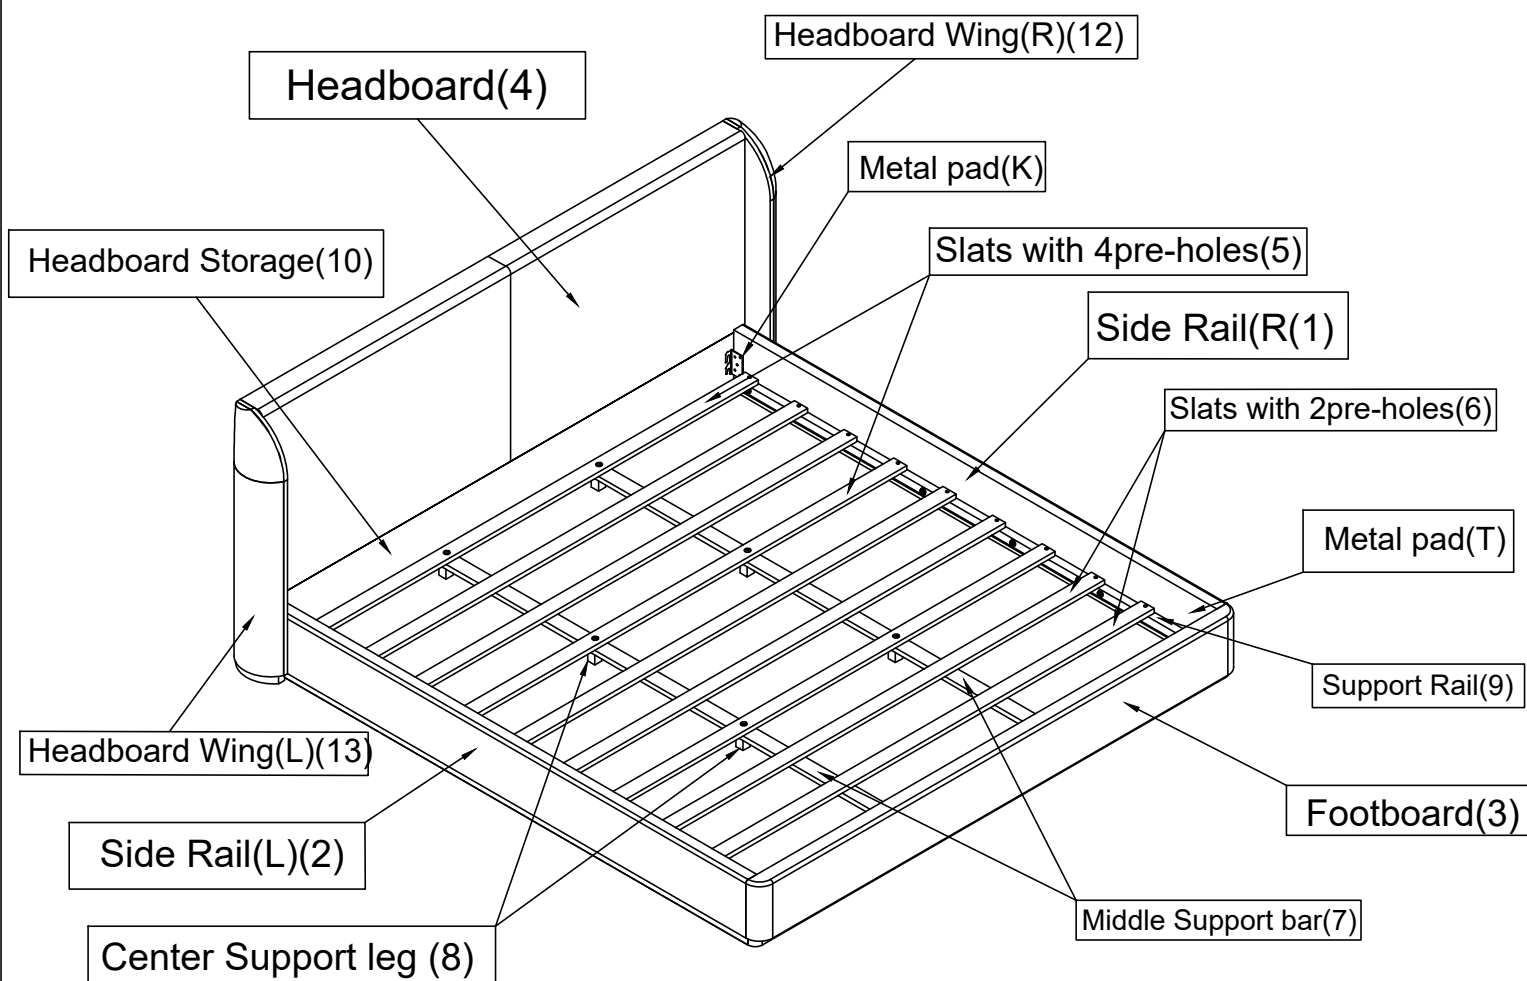


FRONT FACING

This Bed have multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Bed parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Note: It is recommended that you have an adult partner to assist during the entire assembly process.


Step 1

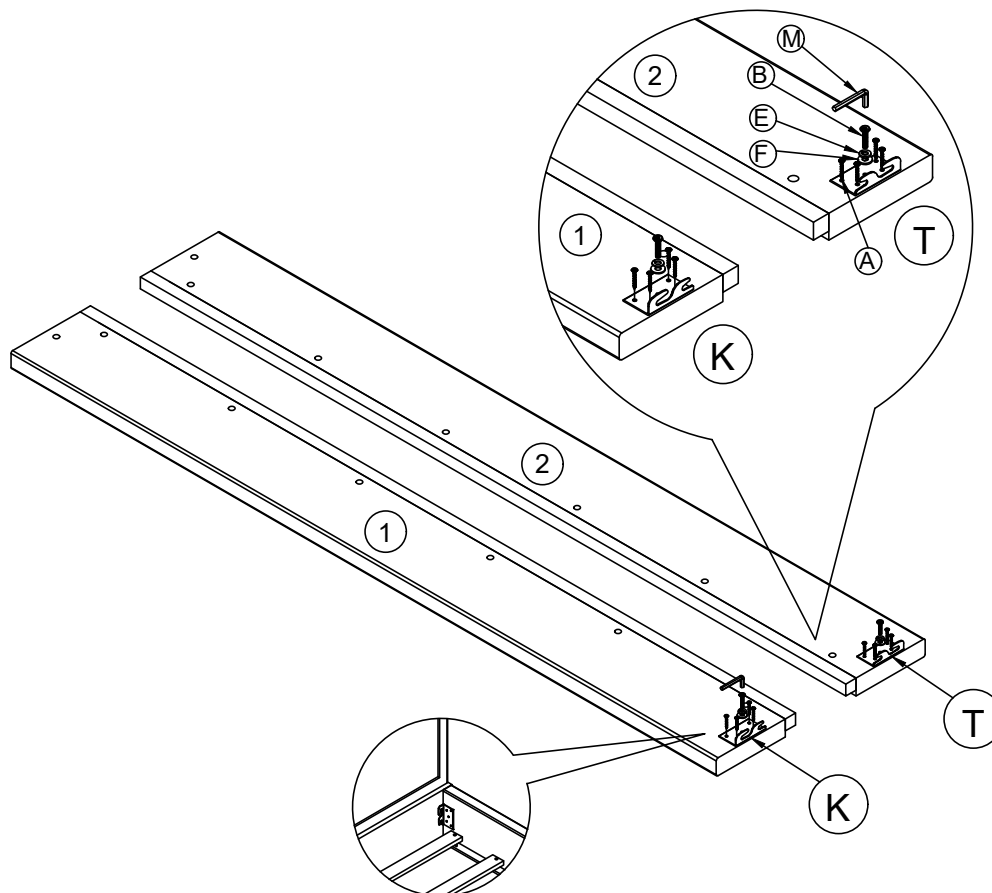

M		M4	100%
A		4x30mm	x8pcs
E		5/16"x20mm	x2pcs
F		5/16"x20mm	x2pcs
M		M4	
B		5/16"x30mm	x2pcs

Attach the Metal pad (K) to the Side Rail (R) (1), attach the Metal pad (T) to the Side Rail (L) (2).
By using the Bolts (B) and Flat Washer (F) with the Lock Washer (E) and Screw (A) to connect the Metal pad
and the Side Rail (Note: The Metal pad look is facing down and this place is connected to the Headboard Storage (10))


Step 2

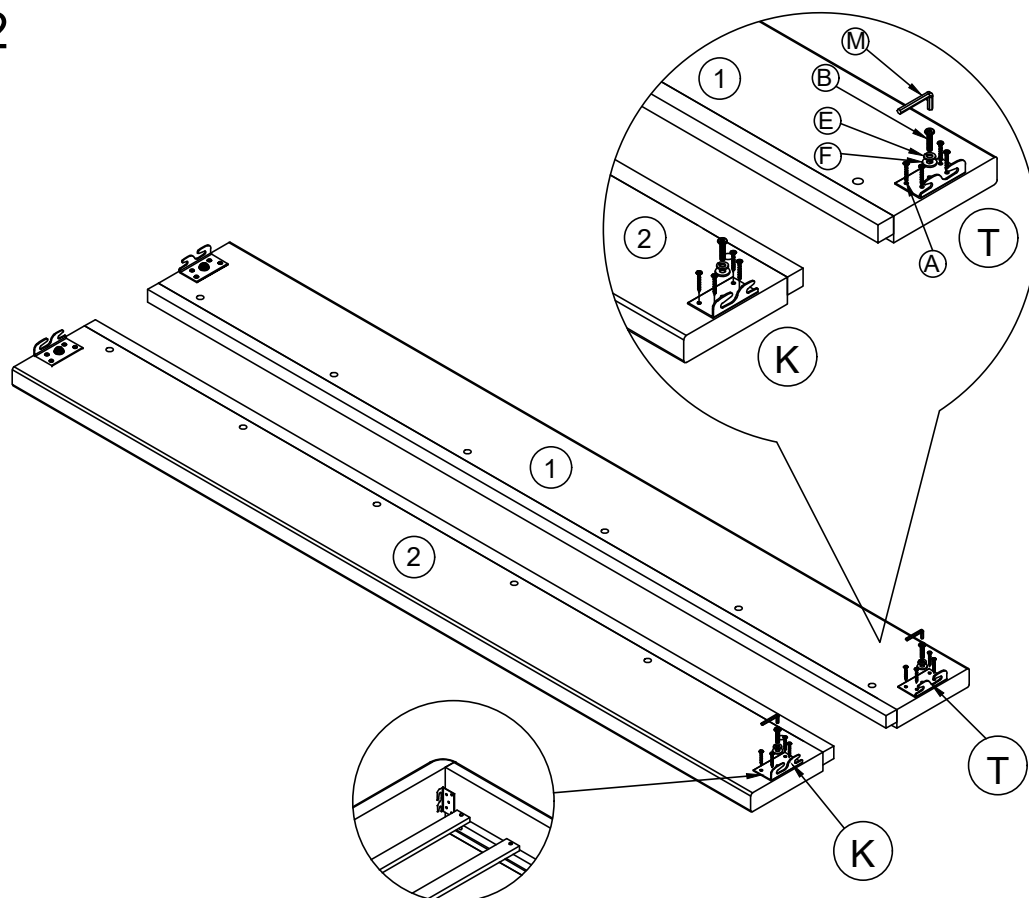

M		M4	100%
A		4x30mm	x8pcs
E		5/16"x20mm	x2pcs
F		5/16"x20mm	x2pcs
M		M4	
B		5/16"x30mm	x2pcs

Use the Metal pad (T) to attach to the Side Rail (1), use the Metal pad (K) to attach the Side Rail (2).
By using the Screw (A) and the Bolts (B) with M4 Allen Wrench (M) to connect the Metal pad and the Side Rail
(Note :The direction of the Metal pad and this place is connected to the Footboard (3)).


Step 3

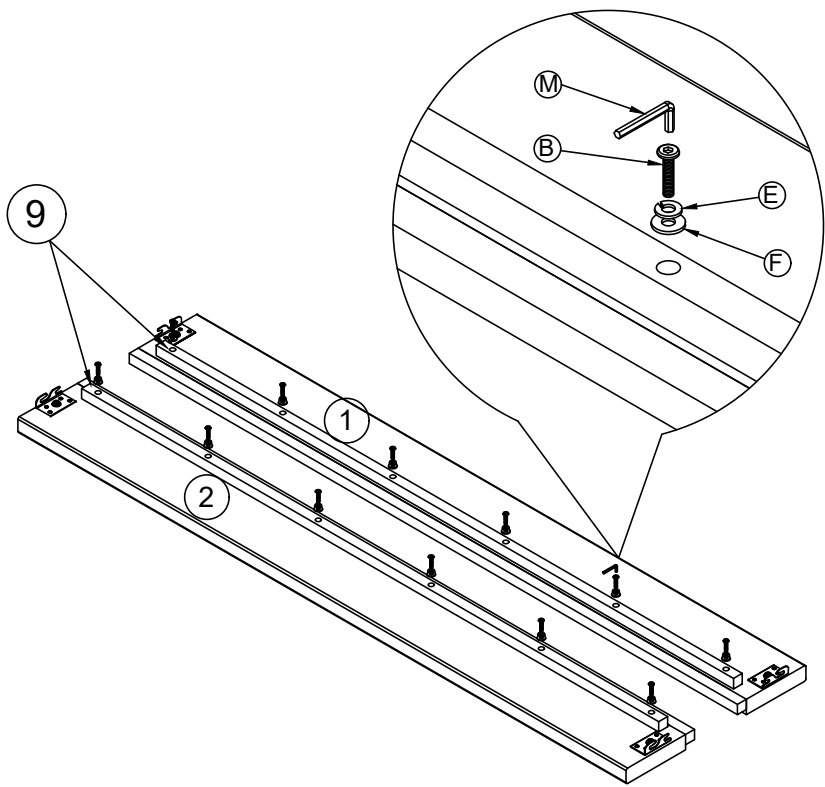

- M M4 100%
- E 5/16"x20mm x12pcs
- F 5/16"x20mm x12pcs
- M M4
- C 5/16"x50mm x12pcs

Attach the Support Rail (9) to the Side Rail (1) and the Side Rail (2).By using the Bolts (C), the Flat Washer(F) and the Lock Washer(E) with M4 Allen Wrench(M)







Step 4

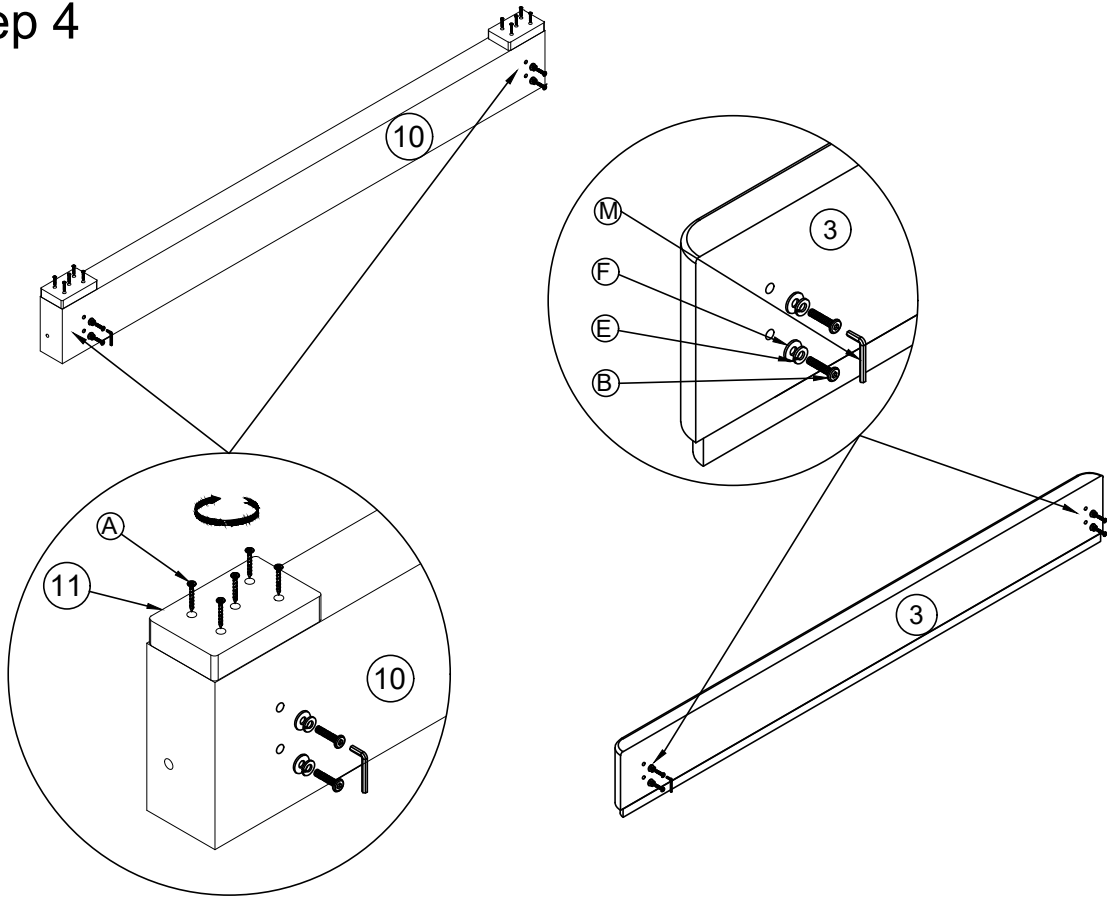

- A 4x30mm x10pcs
- M M4 50%
- E 5/16"x20mm x8pcs
- F 5/16"x20mm x8pcs
- M M4
- B 5/16"x30mm x8pcs




Use Bolts (B) and Lock Washer (E) with Flat Washer (F).Then attach 1/2 Bolts (B) to the Headboard Storage(10) and Footboard (3)
Use 10 Screws (A) to fix shot the 2 Headboard legs(11) into the Headboard Storage(10)

Step 5

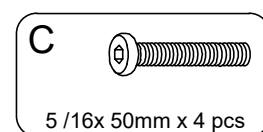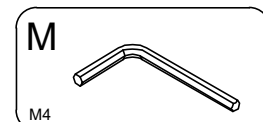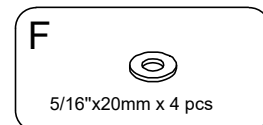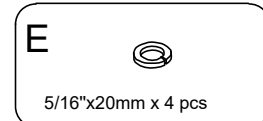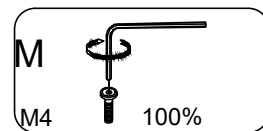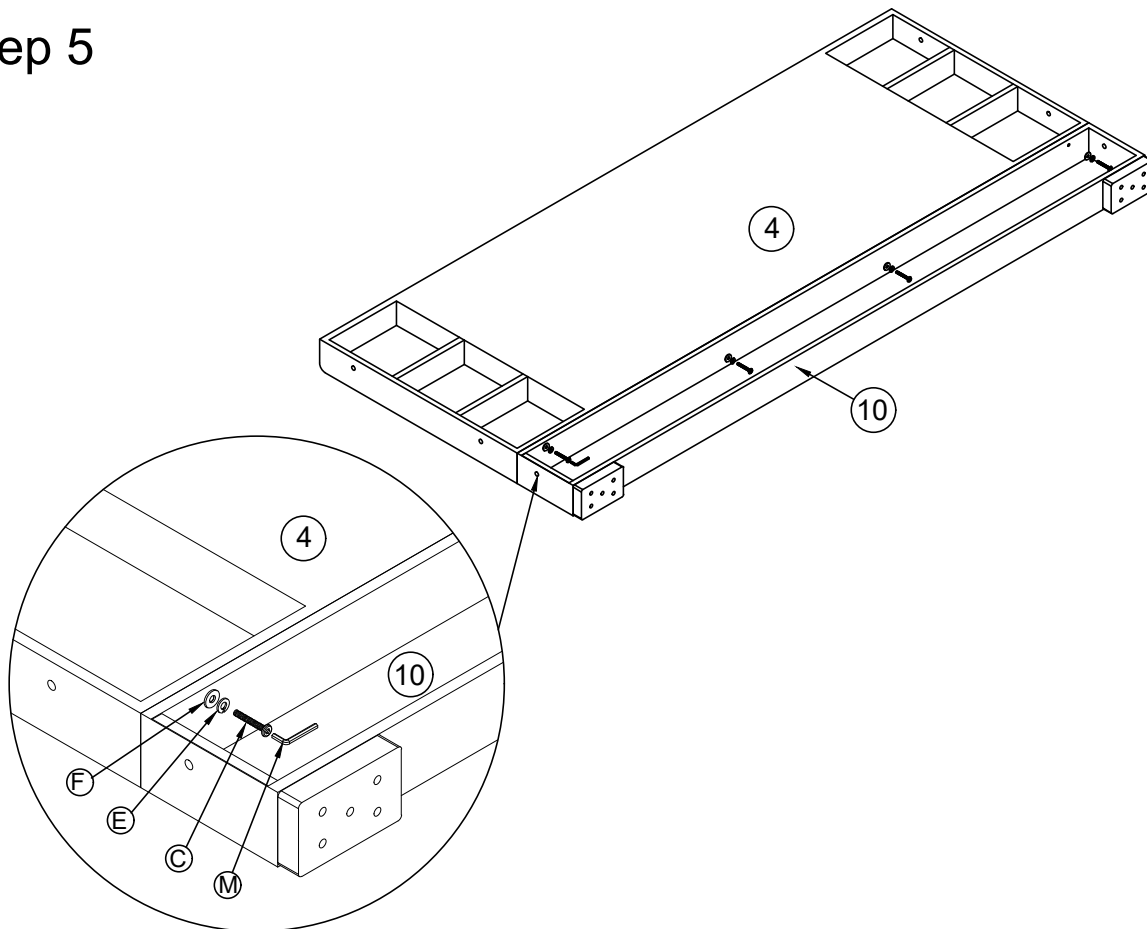


Use the Bolts (C), Lock washer (E) and Flat washer (F) to connect the Headboard (4) and the Headboard Storage (10) then tighten with Allen Wrench (M).

Step 6

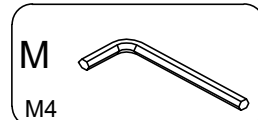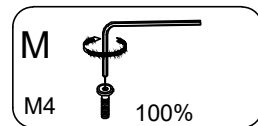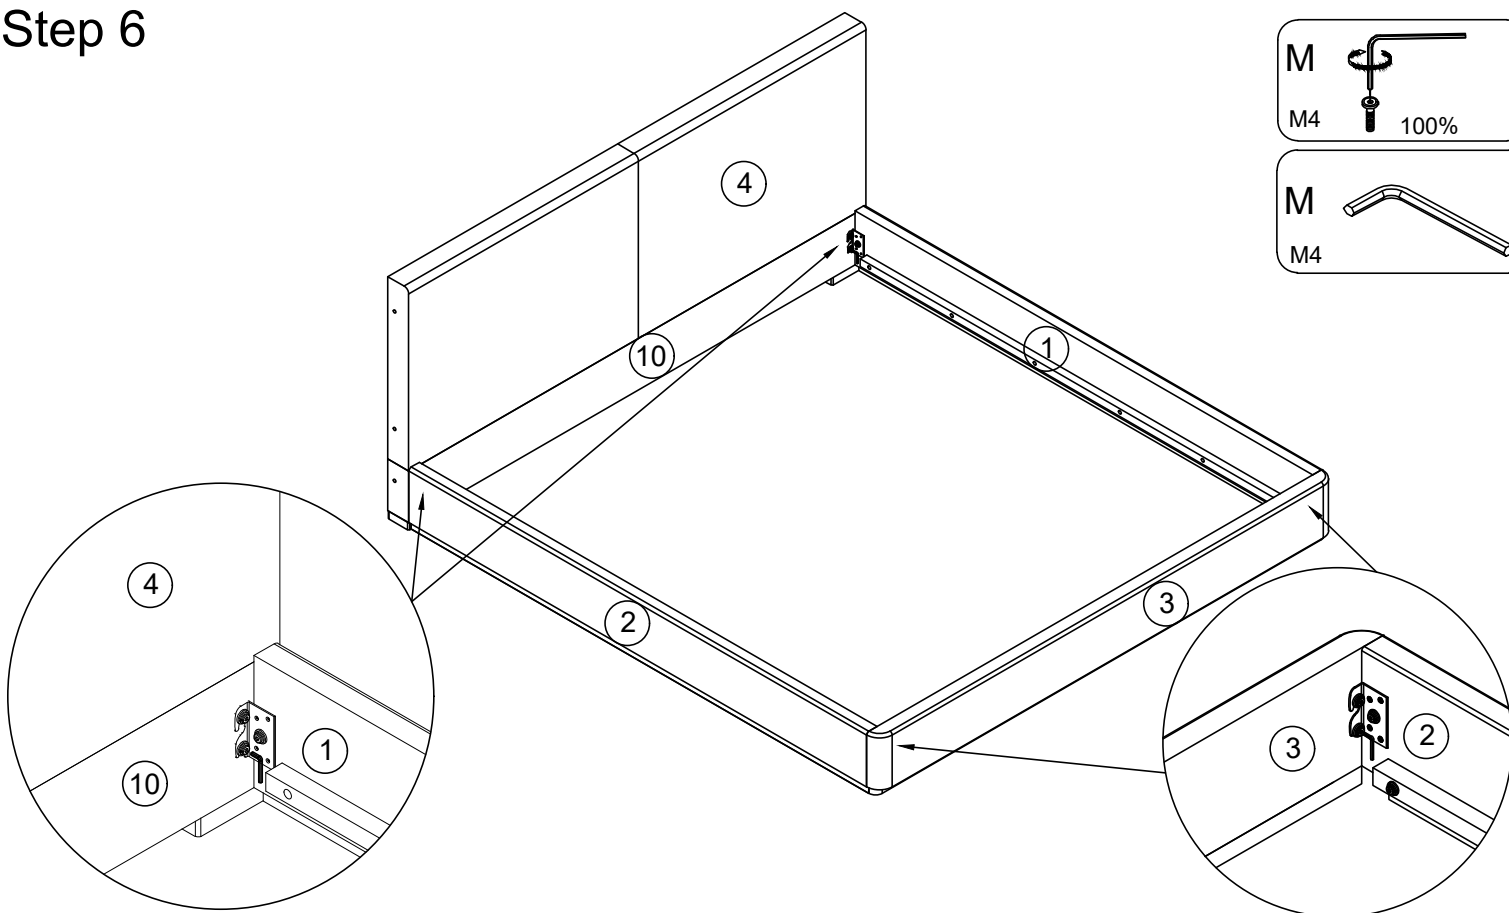


Attach the Side Rail (1) and the Side Rail (2) to the Headboard Storage (10) (Note: the direction of the Metal pad is down), by using M4 Allen Wrench (M) to tighten the Bolts (B). Then attach the Footboard (3) to the Side Rail (1) and the Side Rail (2) (Note: the direction of the Metal pad is down), by using M4 Allen Wrench (M) to tighten the Bolts (B).

Step 7

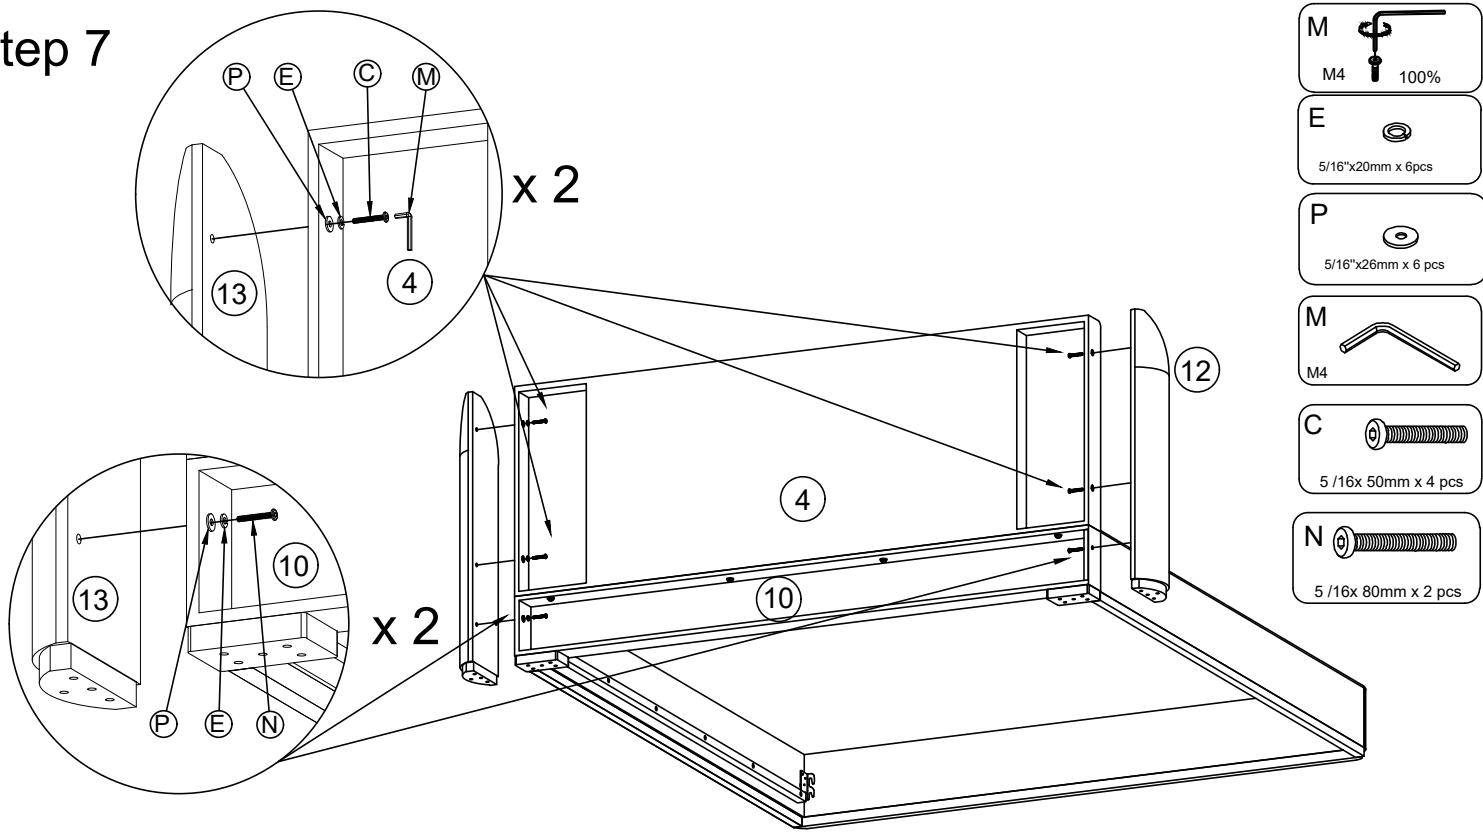


Use the Bolts (C), Lock washer (E) and Flat washer (P) to connect the Headboard Wing (R)(12) and Headboard Wing (L)(13) into Headboard(4) then tighten with Allen Wrench (M). Use the Bolts (N), Lock washer (E) and Flat washer (P) to connect the Headboard Wing (R)(12) and Headboard Wing (L)(13) into Headboard(4) then tighten with Allen Wrench (M).

Step 8

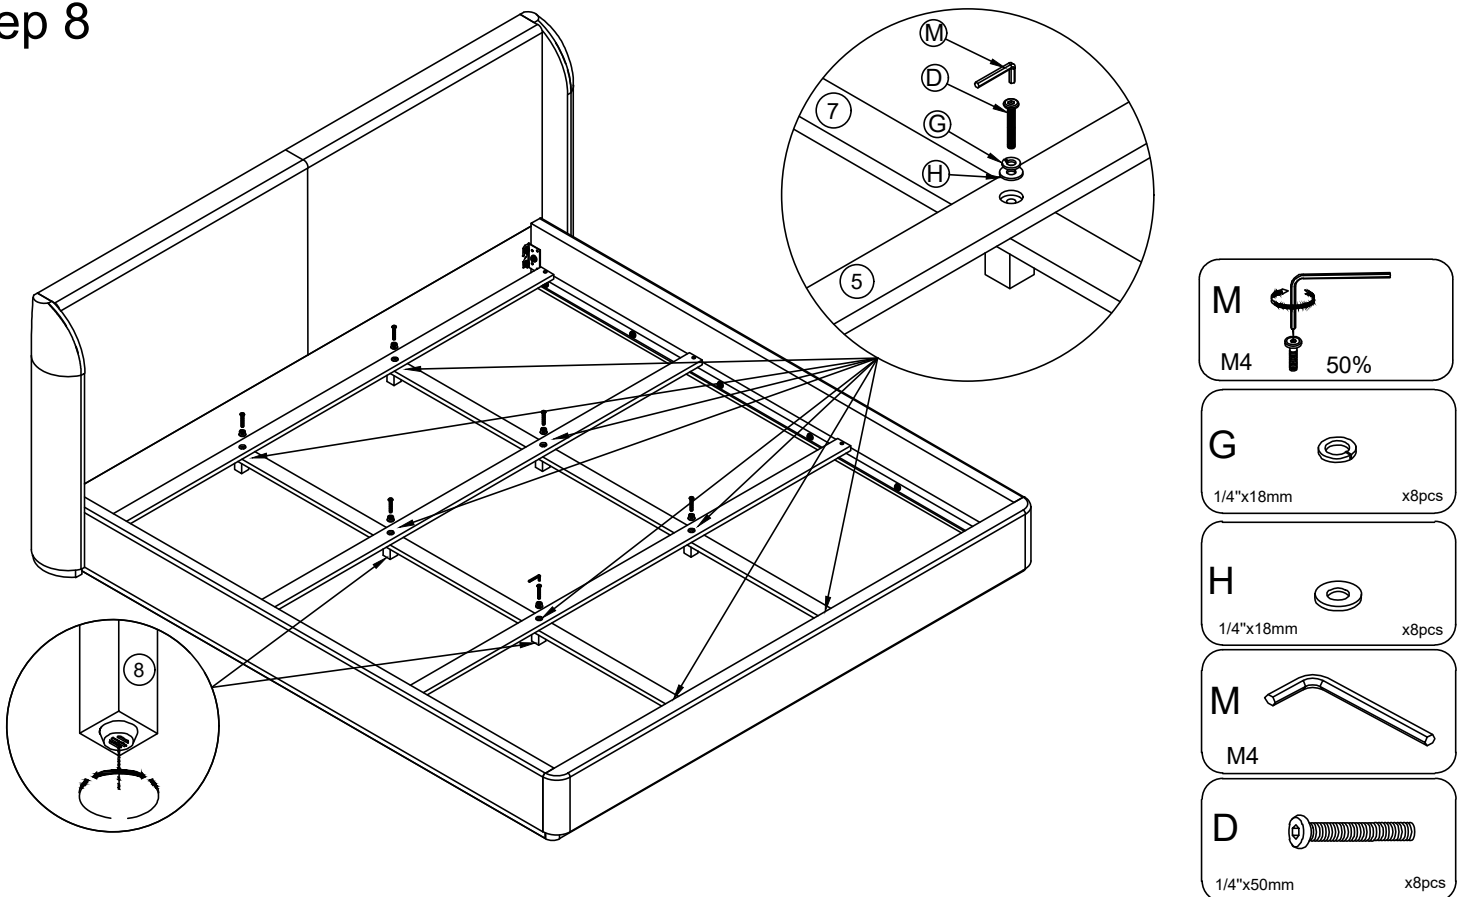


Align the assembly position on the Middle Support Bar (7) with the Center Support Leg (8) and the Slats with 4 pre-holes (5). Then attach the Slats with 4 pre-holes (5) and the Middle Support Bar (7) to the Center Support Leg (8). By using the Bolts (D), Lock Washer (G) with Flat Washer (H) with M4 Allen Wrench (M).

Step 9

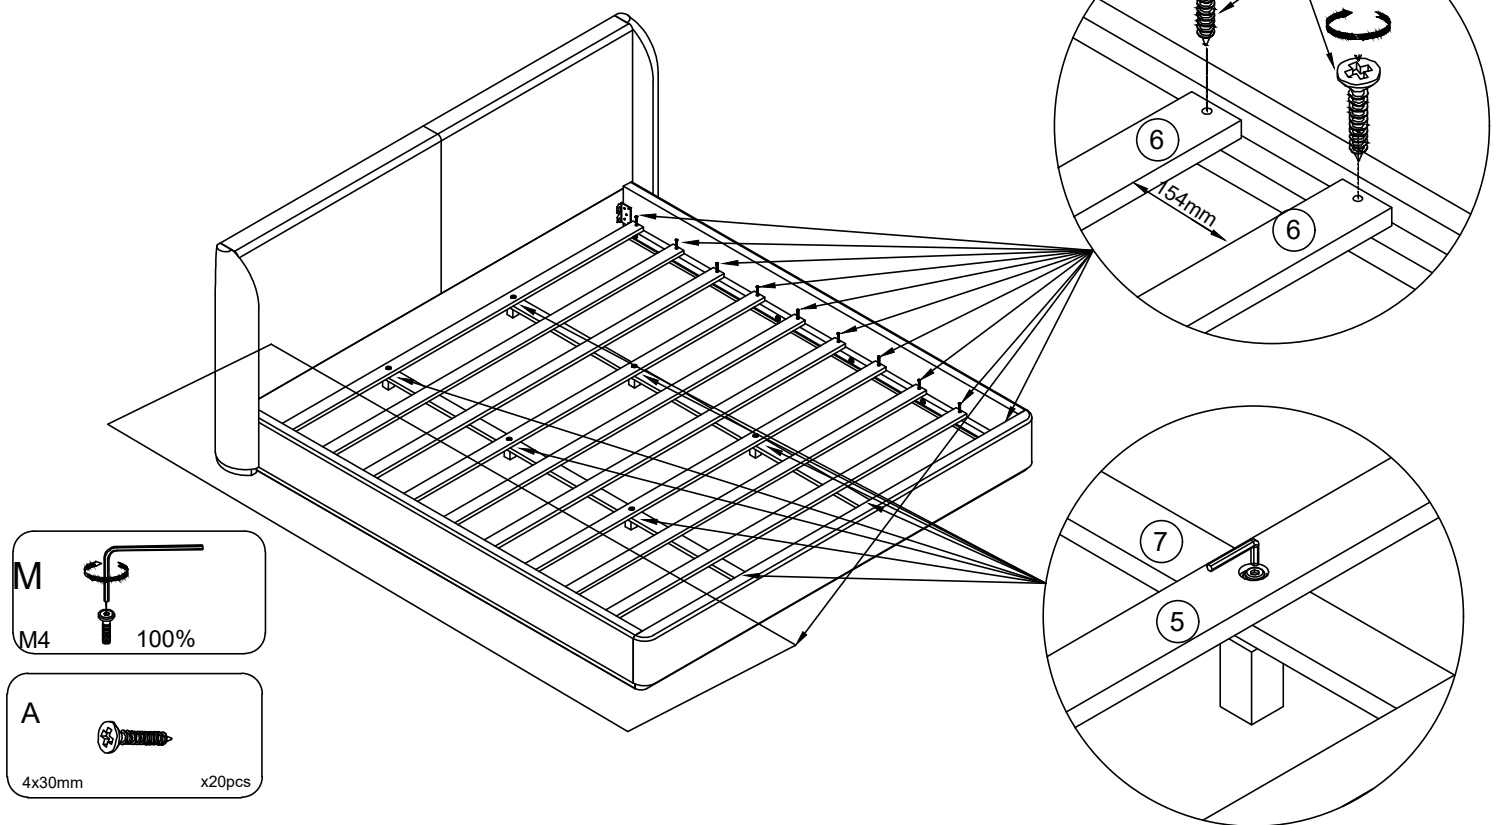

Assemble the Slats with 4pre-holes (5) and the Slat with 2pre-holes to the bed Sides Rail (1) and (2). Use screw A (Note : The distance between 2 Slats is 154mm). Finally, use the M4 Allen Wrench (M) to tighten the Bolts (D) 100%.

Finish

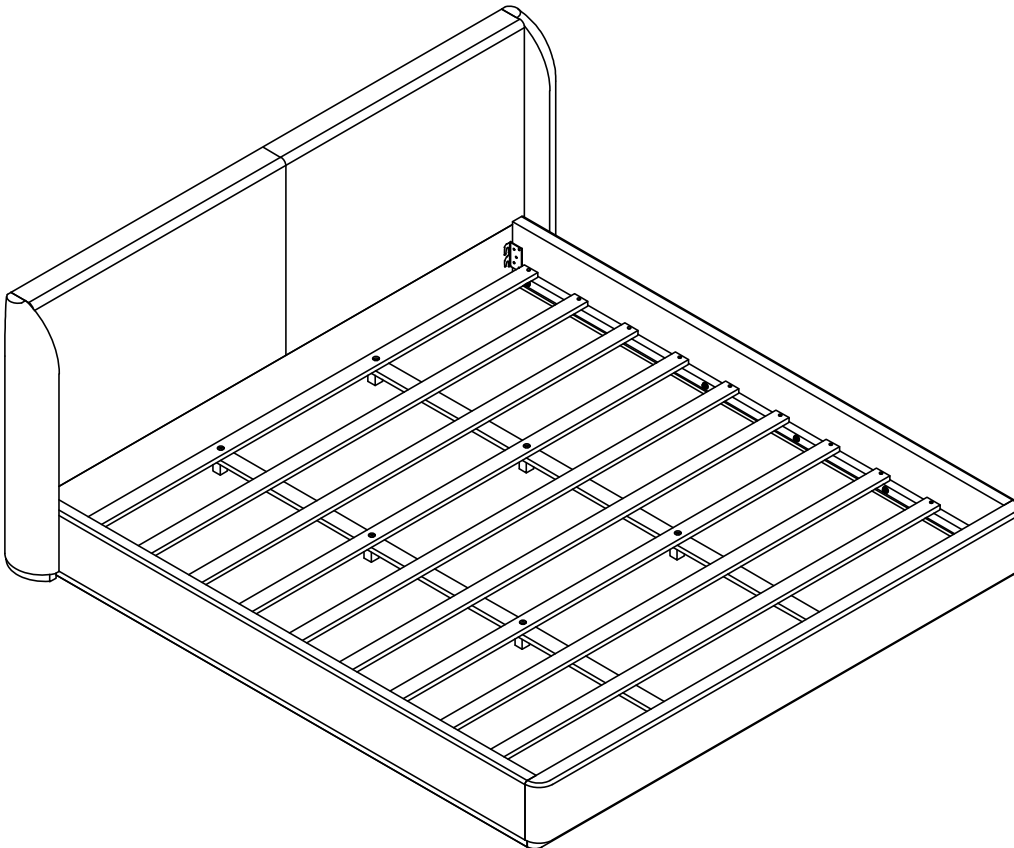

Thank you for your trust and preference in using our products.
The product will bring you a peaceful sleep forever