



# ASSEMBLY INSTRUCTIONS

## FULL TENT FLOOR BED WITH DOOR








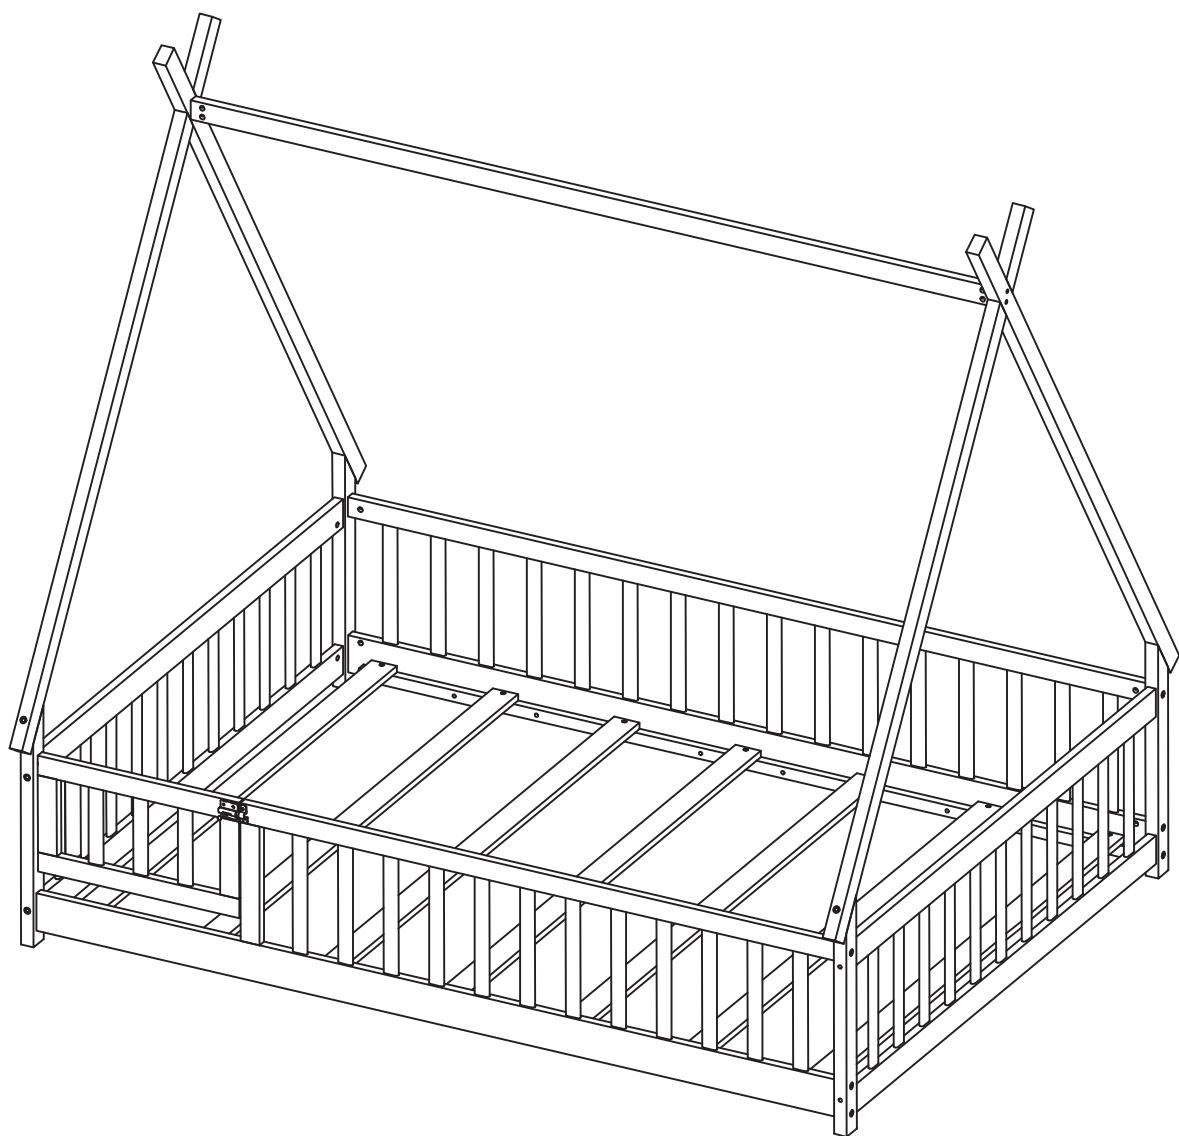


**MK33789**





## Detail View

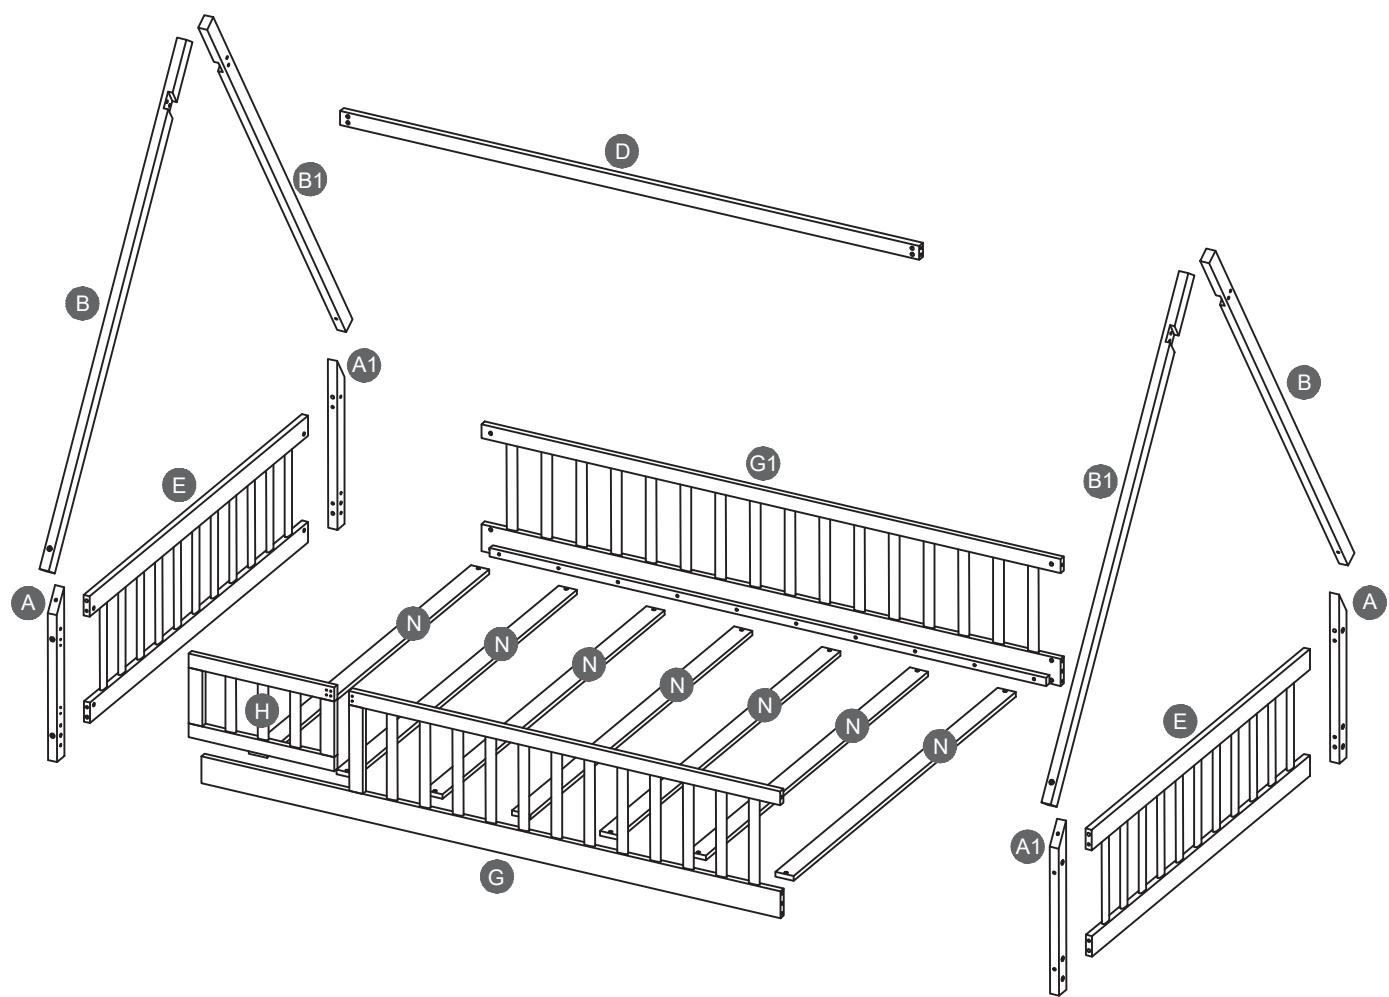



# Part List
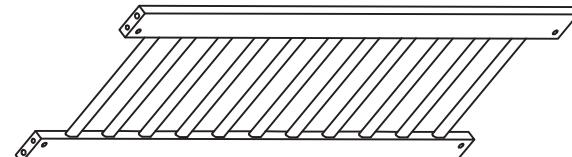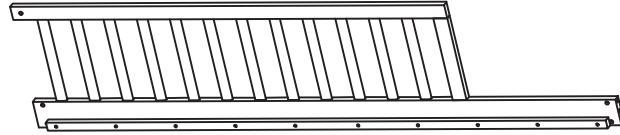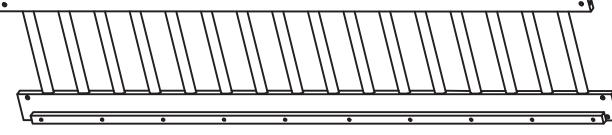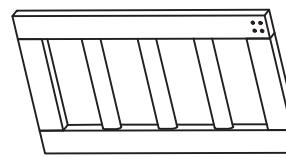
<b>A</b>	<b>A1</b>
	
Leg - 2pcs	Leg - 2pcs
<b>B</b>	<b>B1</b>
	
Top Support - 2pcs	Top Support - 2pcs
<b>D</b>	<b>E</b>
	
Top Rail - 1pc	Hb. Fb. Panel - 2pcs
<b>G</b>	<b>G1</b>
	
Side Rail Front - 1pc	Side Rail Back - 1pc
<b>H</b>	<b>N</b>
	
Door - 1pc	Bed Slats - 7pcs

# Hardware List


<b>1</b>  M6 x 90mm JCBC (8pcs)	<b>2</b>  M6 x 15mm Barrel Nut (23pcs)	<b>3</b>  M10 x 40mm Wood Dowel (12pcs)
<b>4</b>  Sticker Cap (2pcs)	<b>5</b>  M6 x 70mm JCBC (15pcs)	<b>6</b>  20 x 20 x 228mm Wood Block (1pc)
<b>7</b>  M4 x 25mm CSK Screw (14pcs)	<b>8</b>  M6 x 60mm JCBC (4pcs)	<b>9</b>  6 x 24 x 55mm (135°) Hinges (2pcs)
<b>10</b>  10 x 40 x 60mm Lock (1pc)	<b>11</b>  M3.5 x 16mm CSK Screw (14pcs)	<b>12</b>  M4 Allen Key (1pc)

## ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )

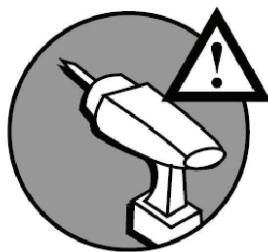


PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


## STEP 1:

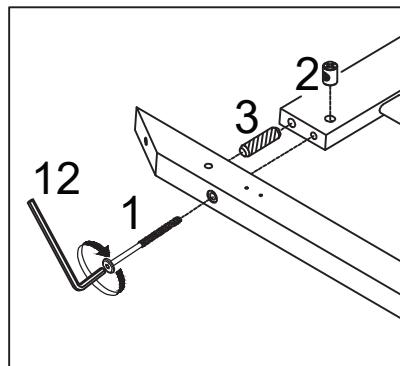


1	2	3
8PCS	8PCS	8PCS

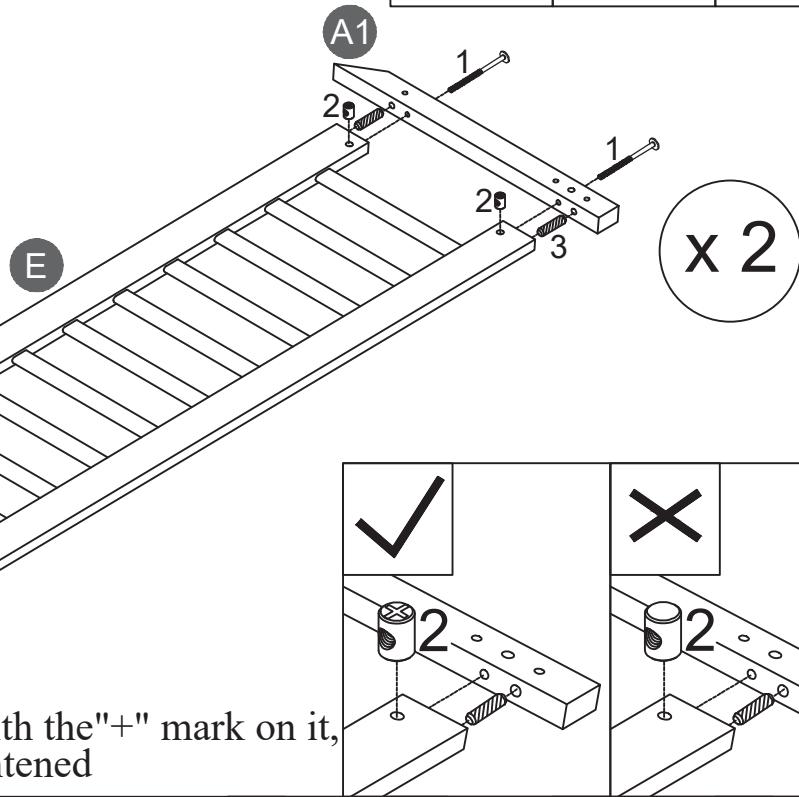

## STEP 2:

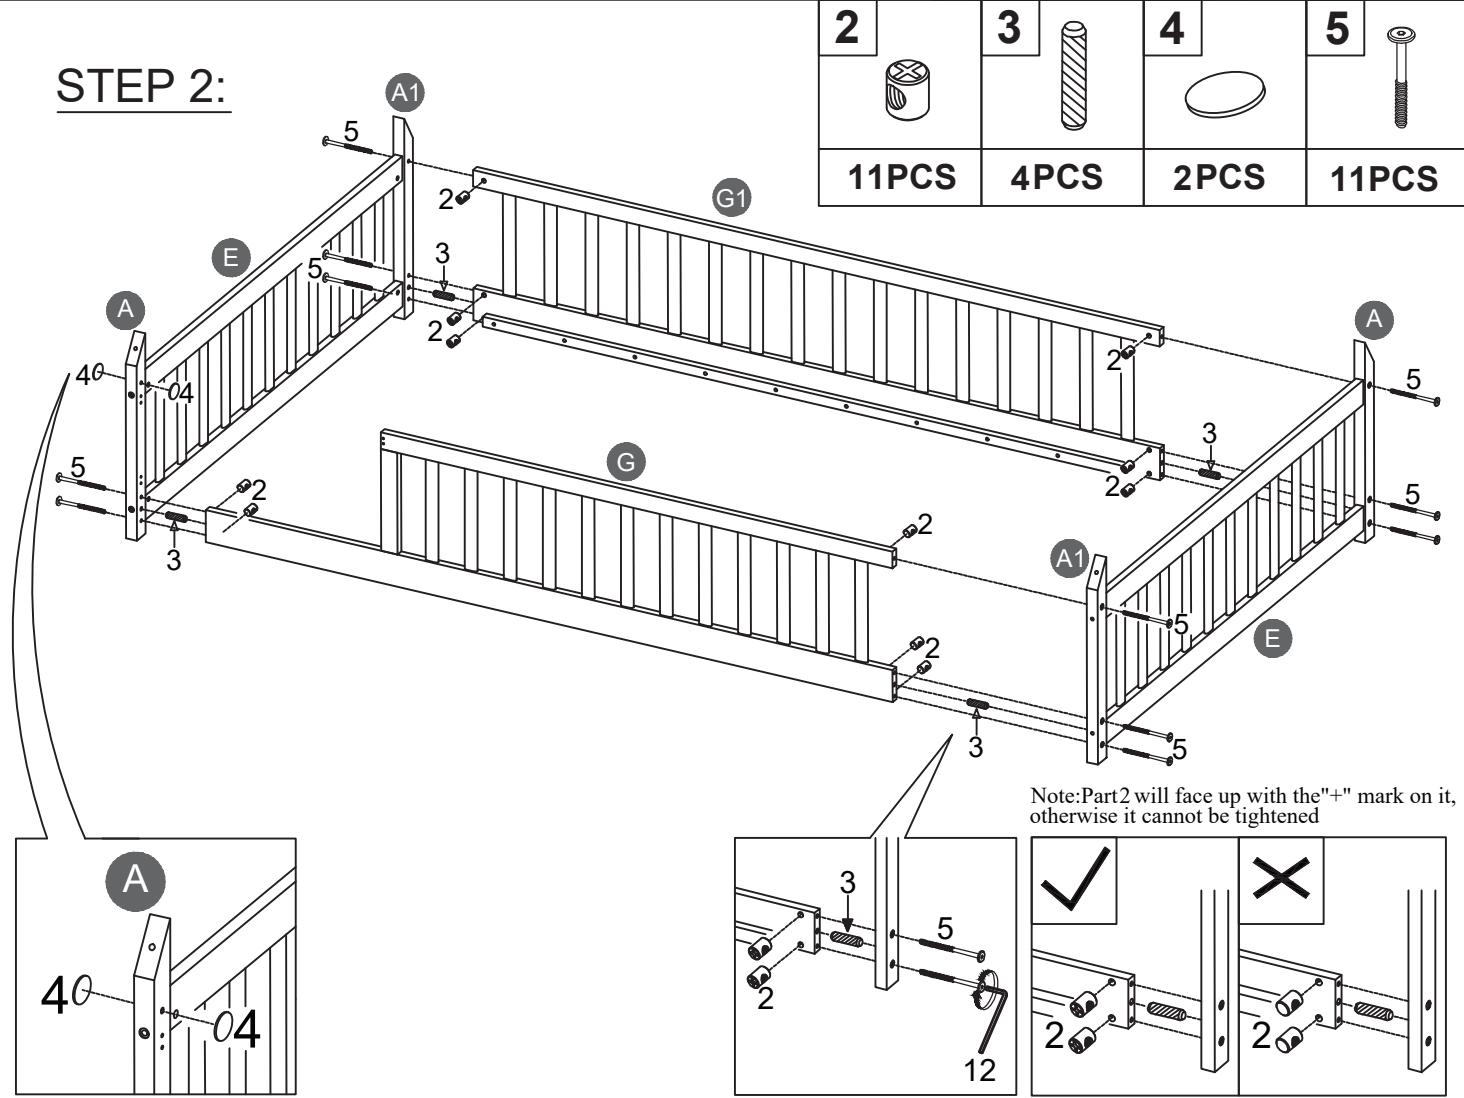


### STEP 3:

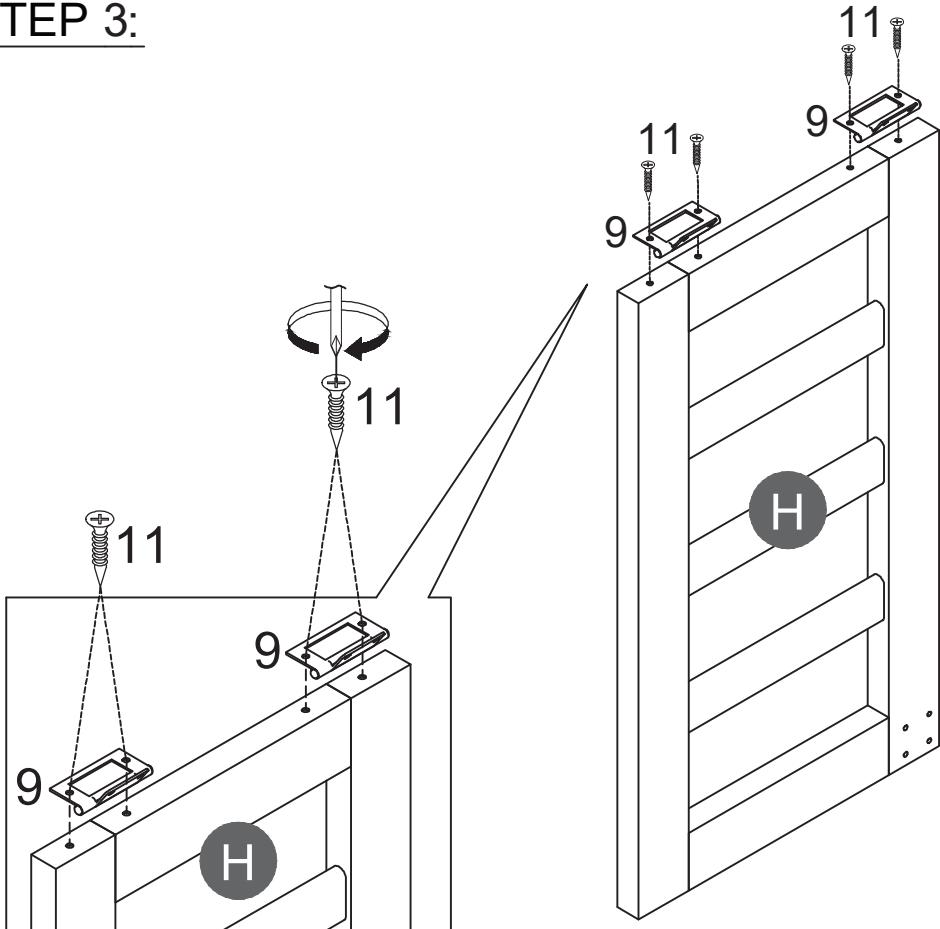

<b>9</b>	<b>11</b>
2PCS	4PCS


### STEP 4:

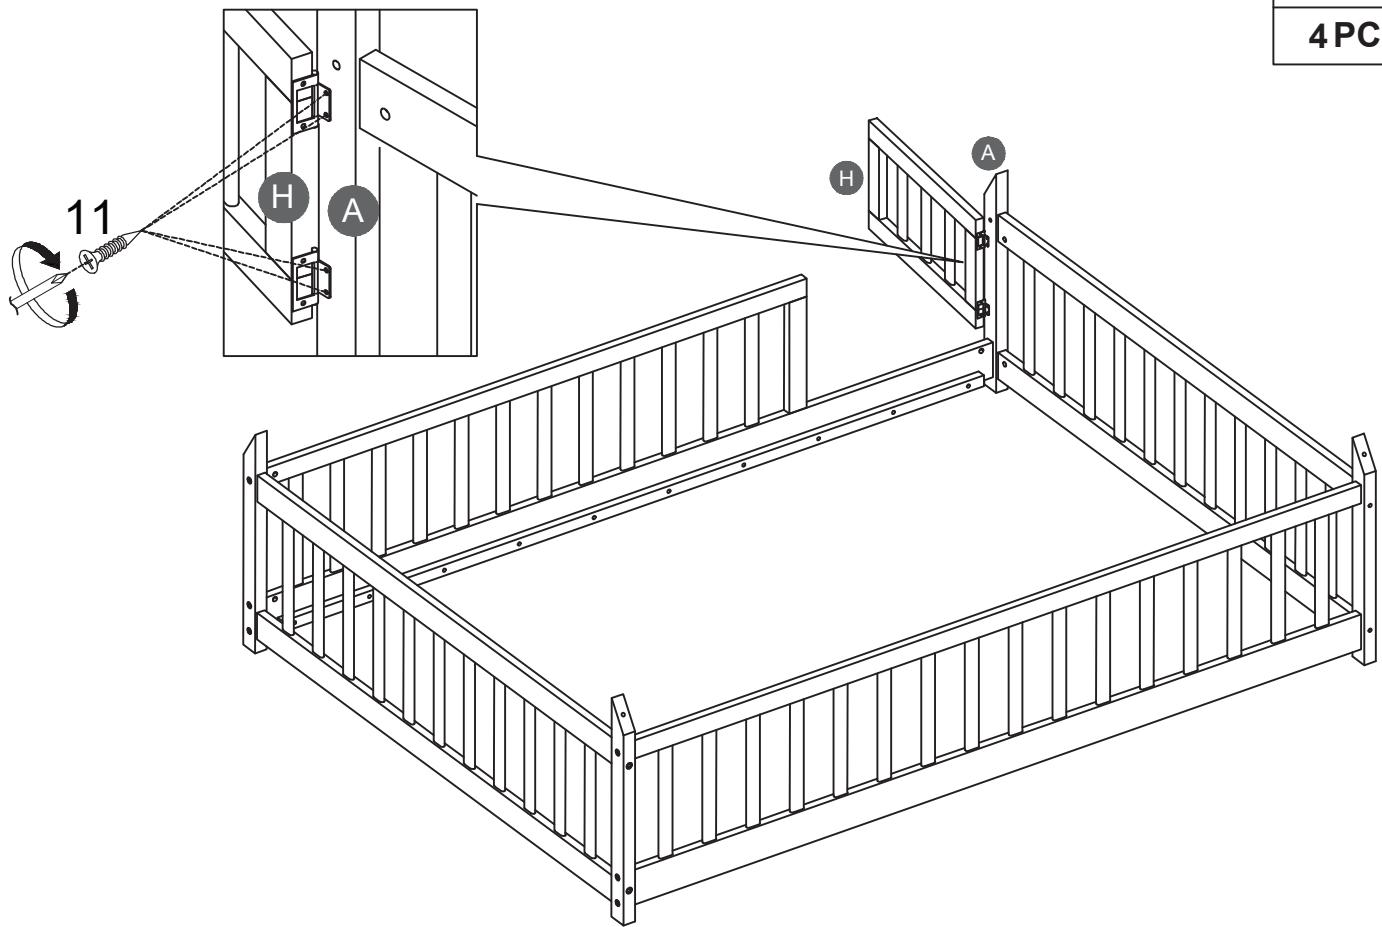

<b>11</b>
4PCS


## STEP 5:

10	11
1 PC	6 PCS

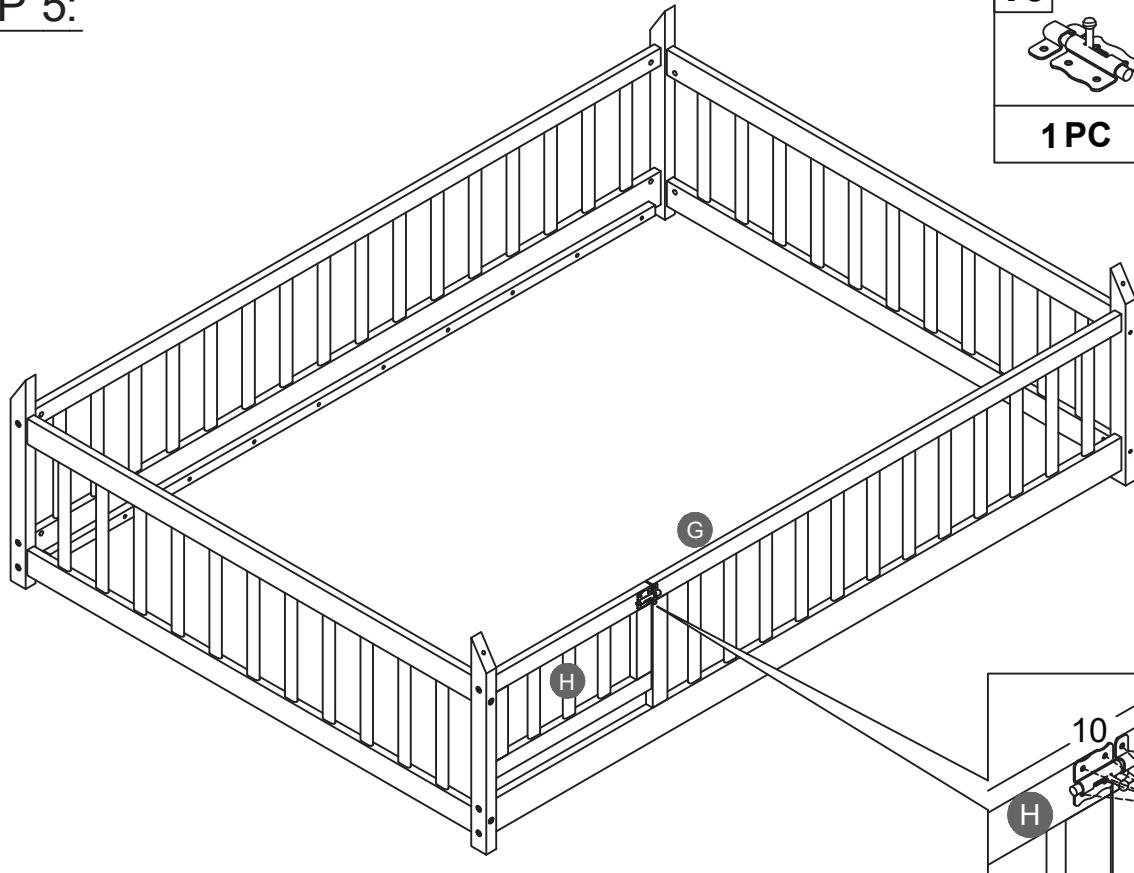


## STEP 6:


2	5
4 PCS	4 PCS

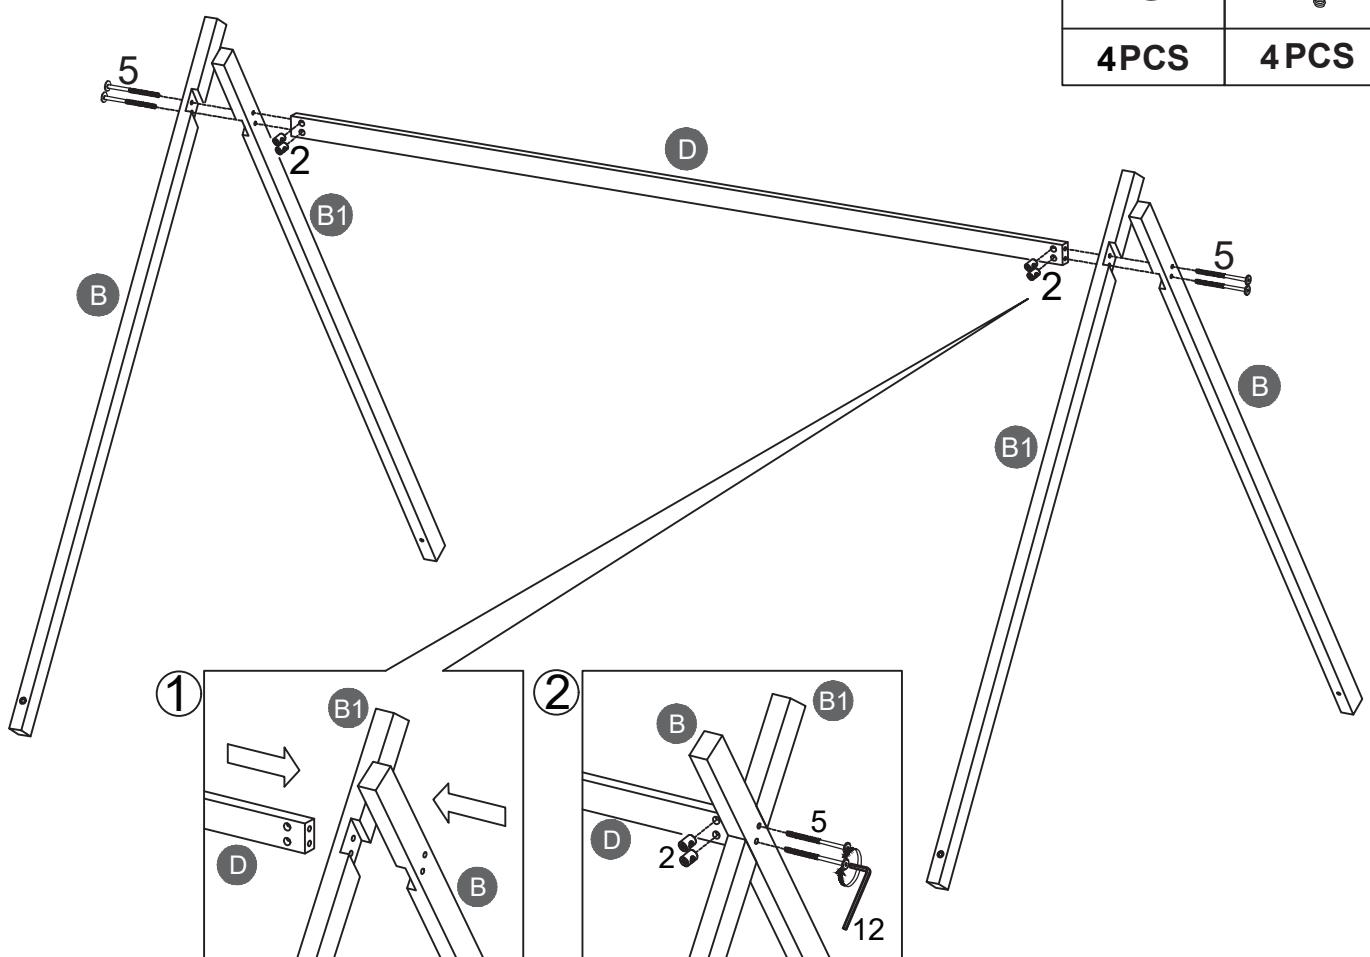


## STEP 7:

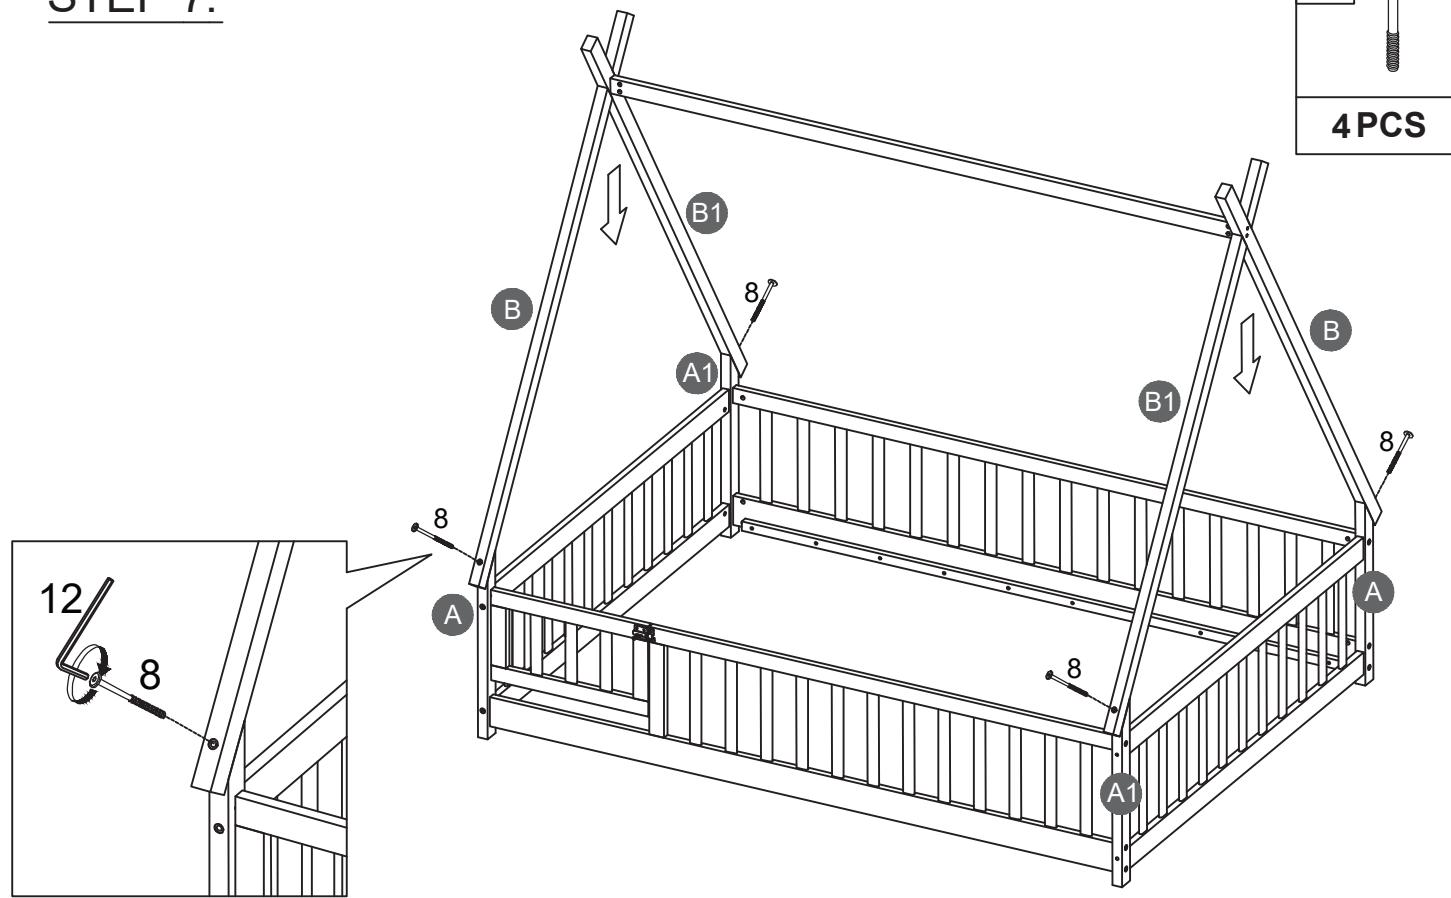

## STEP 8:

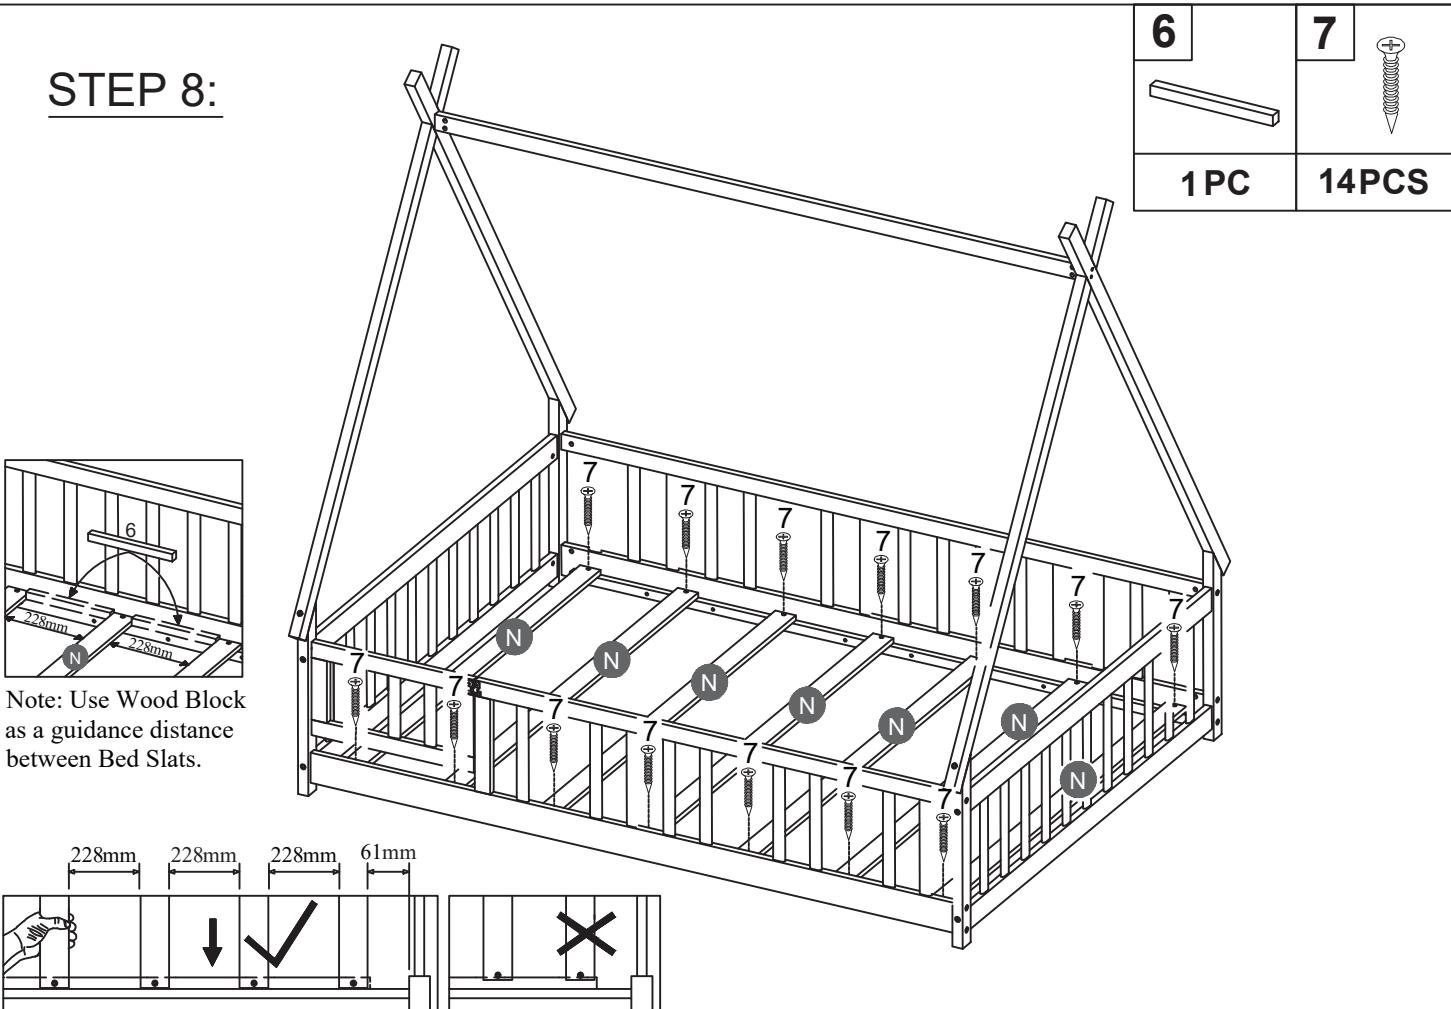

Note: Use Wood Block as a guidance distance between Bed Slats.

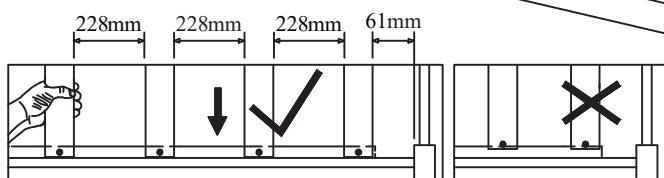

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.