

ASSEMBLY INSTRUCTIONS

TWIN FLOOR BED WITH FENCE, WITHOUT DOOR

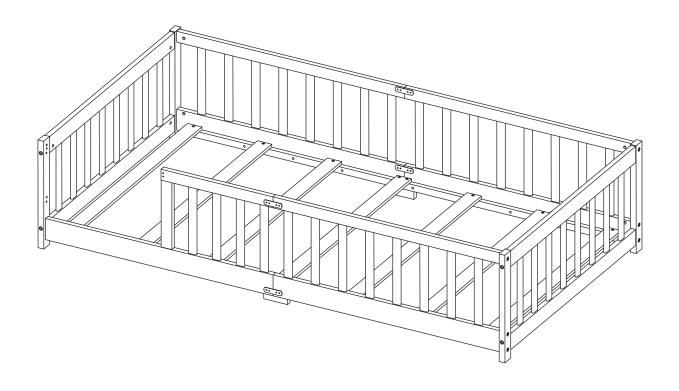


MK33778

Detail View

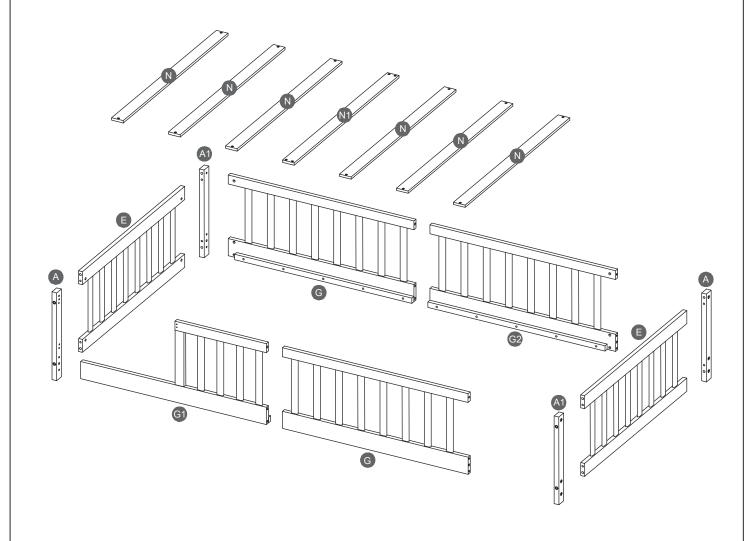


Part List

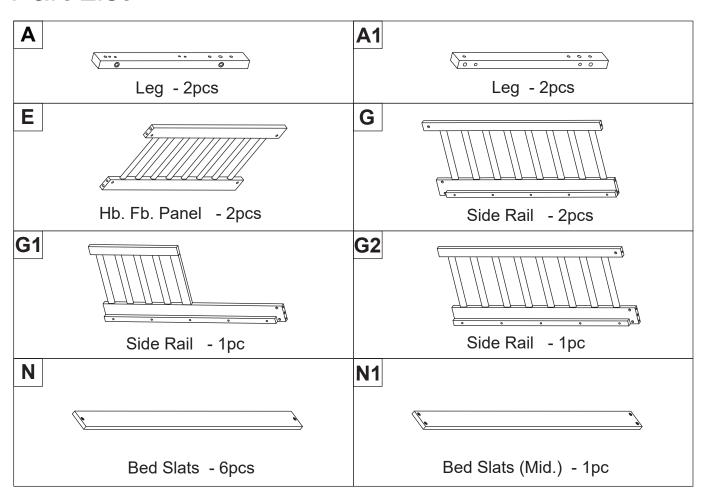

Hardware List

1	2	3
(a)		
M6 x 80mm	M6 x 15mm	M10 x 30mm
JCBC (8pcs)	Barrel Nut (19pcs)	Wood Dowel (Short) (12pcs)
4	M6 x 65mm	6
Metal Bracket (8pcs)	JCBC (11pcs)	Side Rail Bottom Support (2pcs)
7	8 ⊕ ⊕ ₩ ₩ ₩ ₩ ₩ ₩ ₩ ₩ ₩ ₩ ₩ ₩ ₩ ₩ ₩ ₩ ₩	9
CSK Screw (4pcs)	CSK Screw (32pcs)	Sticker Cap (2pcs)
10 (4pcs)	11	12 (†)::::::::::::::::::::::::::::::::::::
M10 x 40mm	20 x 20 x 233mm	M4 x 25mm
Wood Dowel (Long) (6pcs)	Wood Block (1pc)	CSK Screw (16pcs)
M4 Allen Key (1pc)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)





PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS!

