


Assembly Instruction


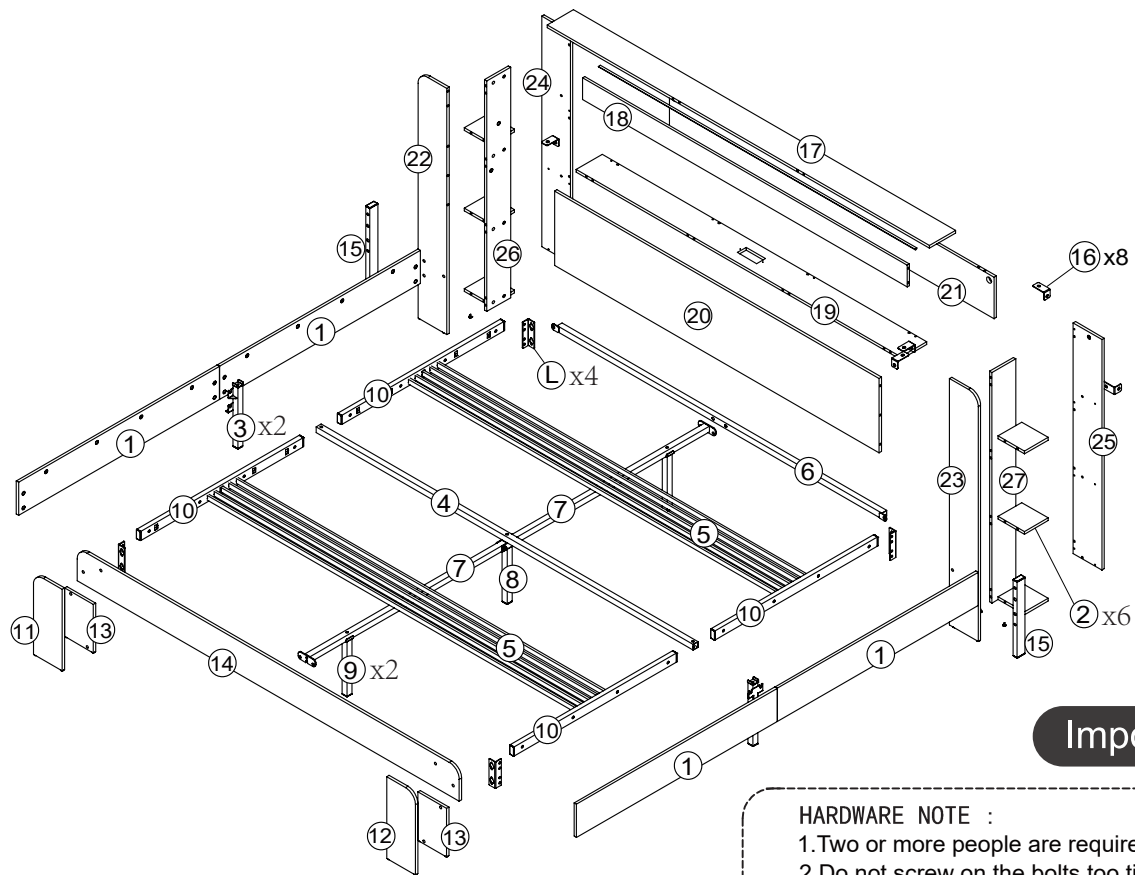






Important Note

HARDWARE NOTE :


1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

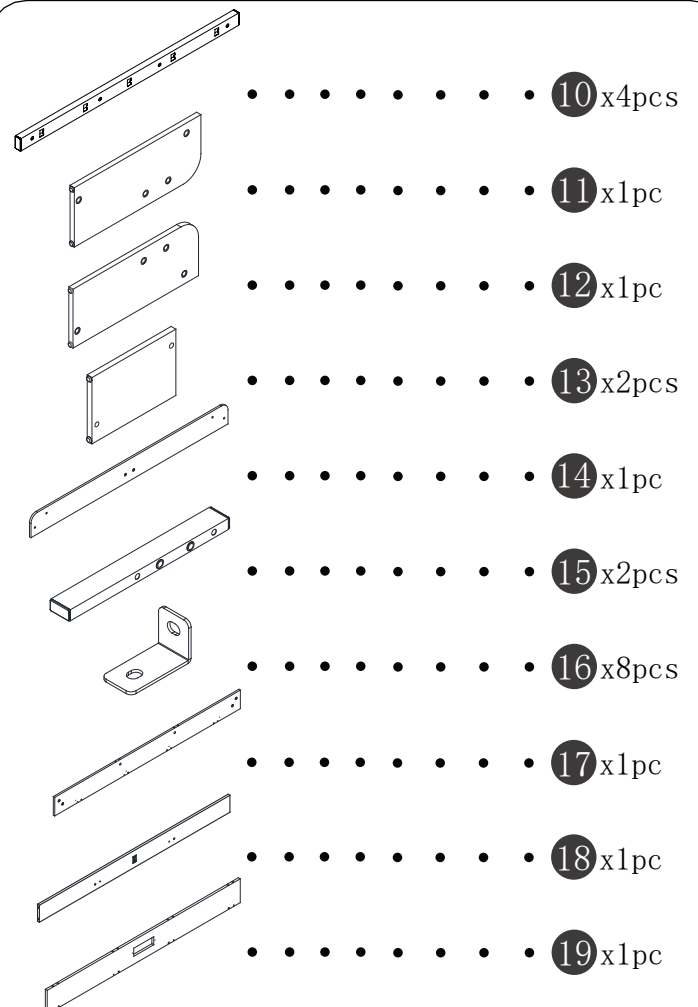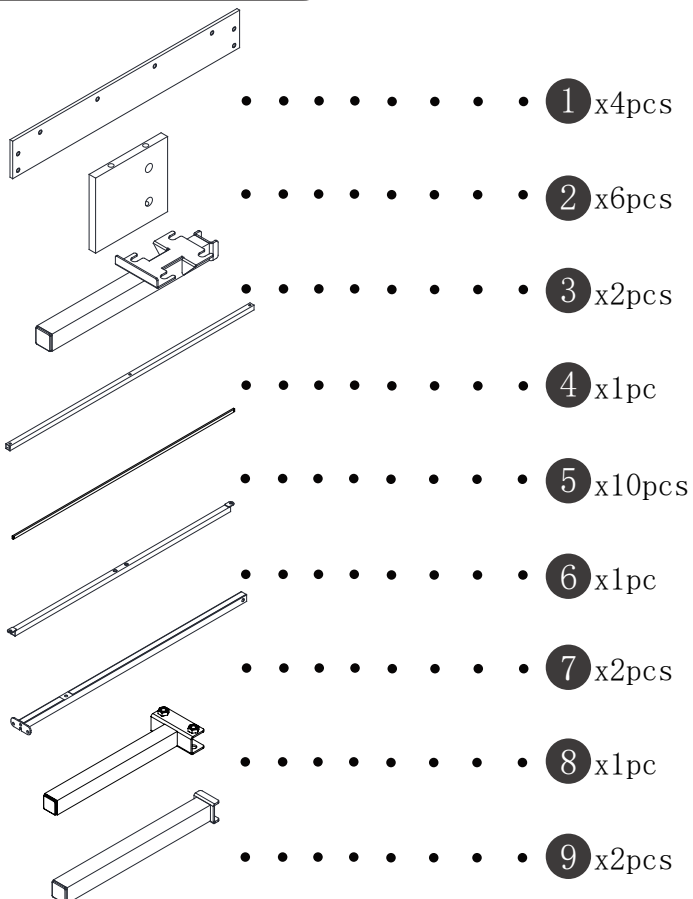

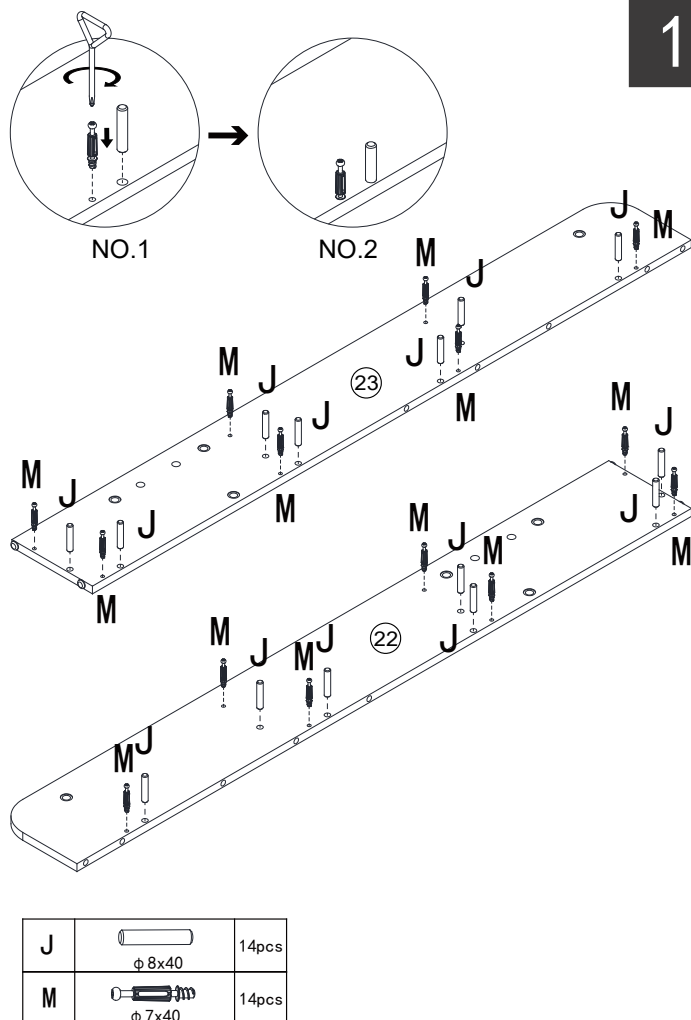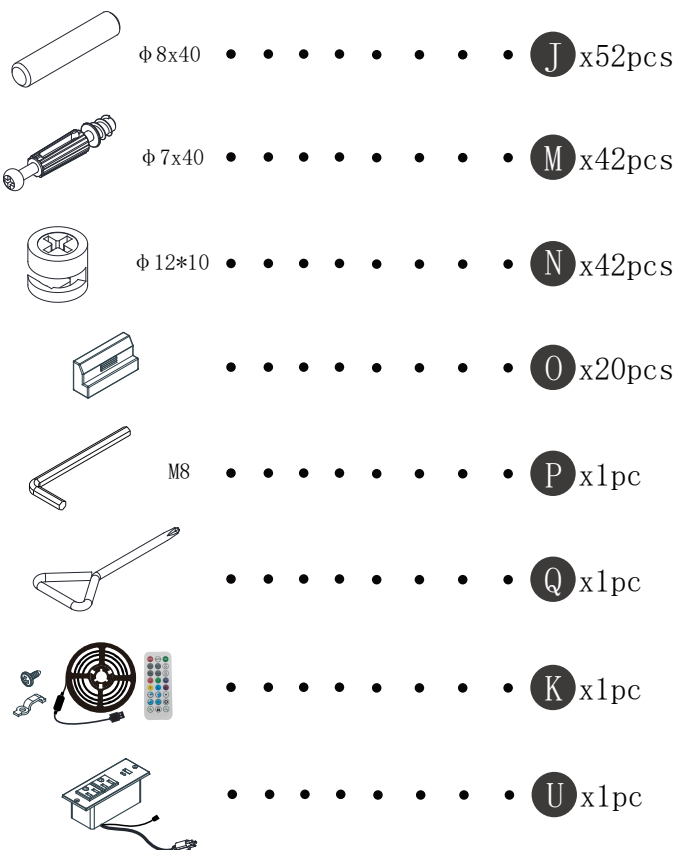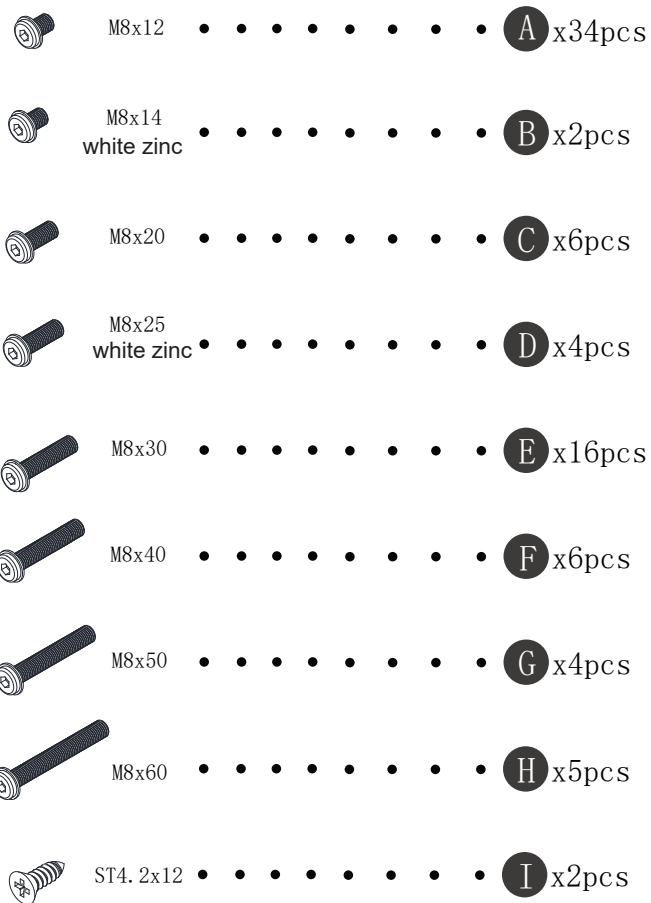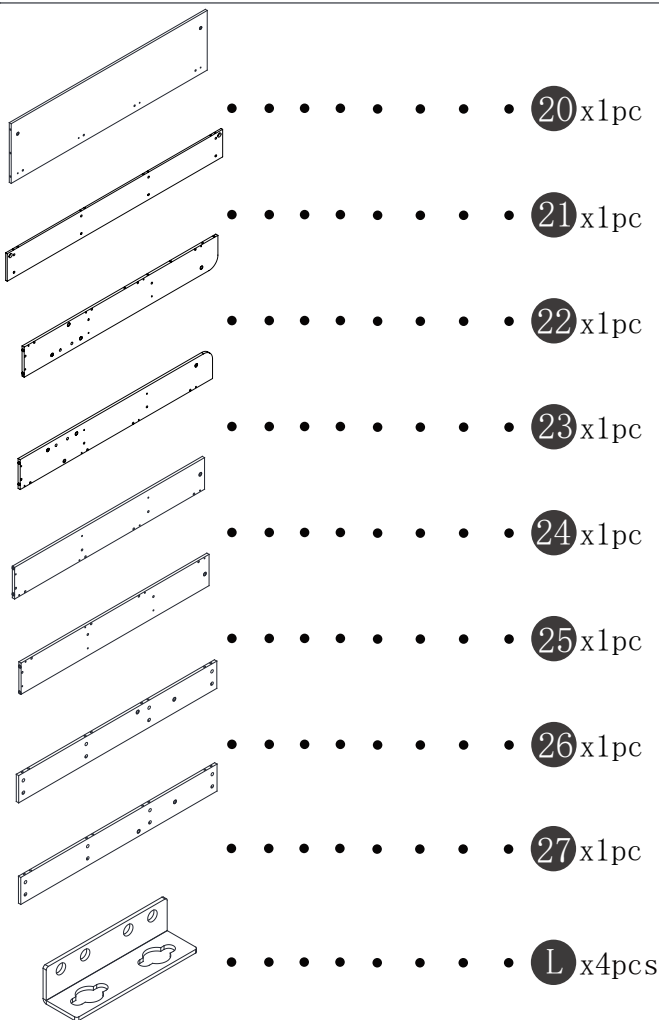


2

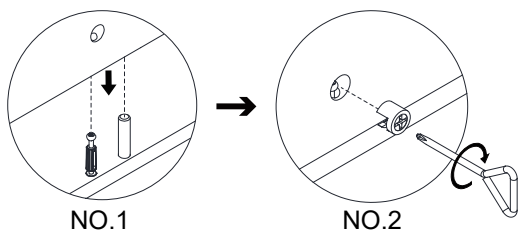

NO.1

NO.2


Please note the orientation of this hole

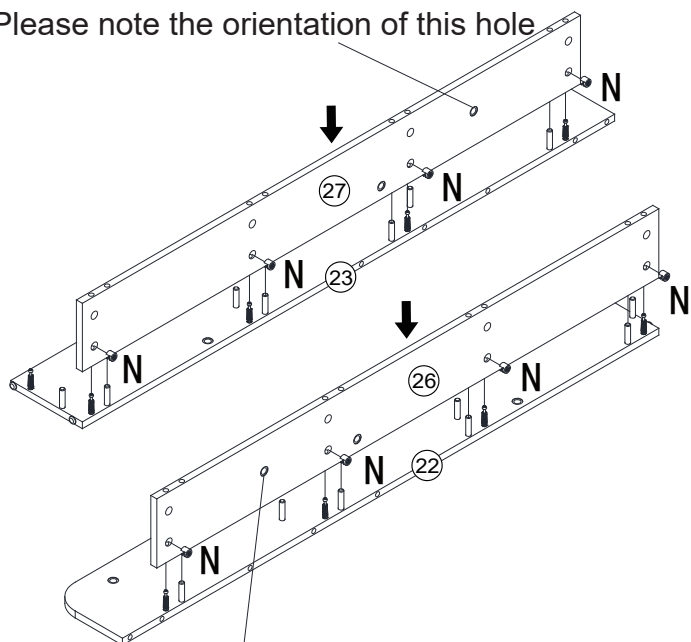

Please note the orientation of this hole


N		8pcs
	$\phi 12 \times 10$	

3

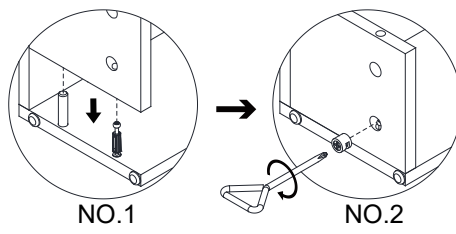



NO.1

NO.2

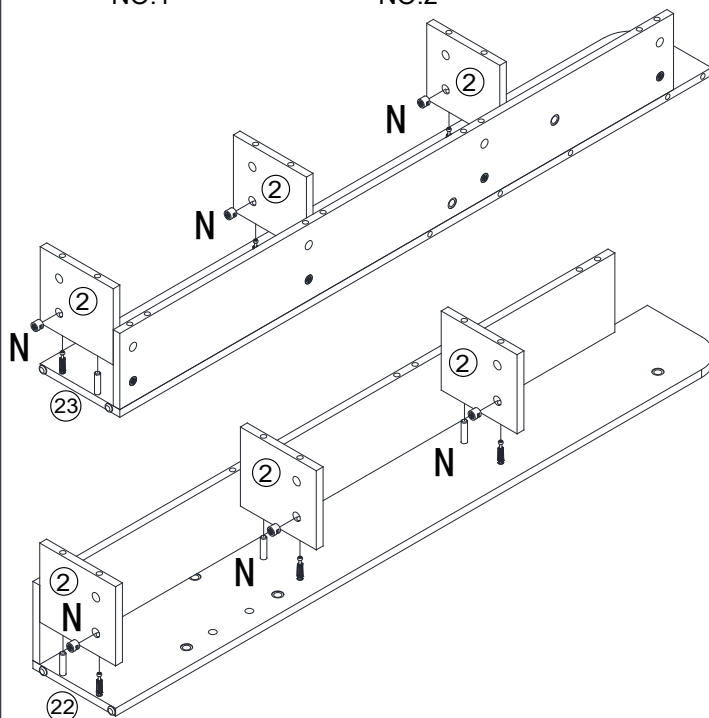


N		6pcs
	$\phi 12 \times 10$	

4

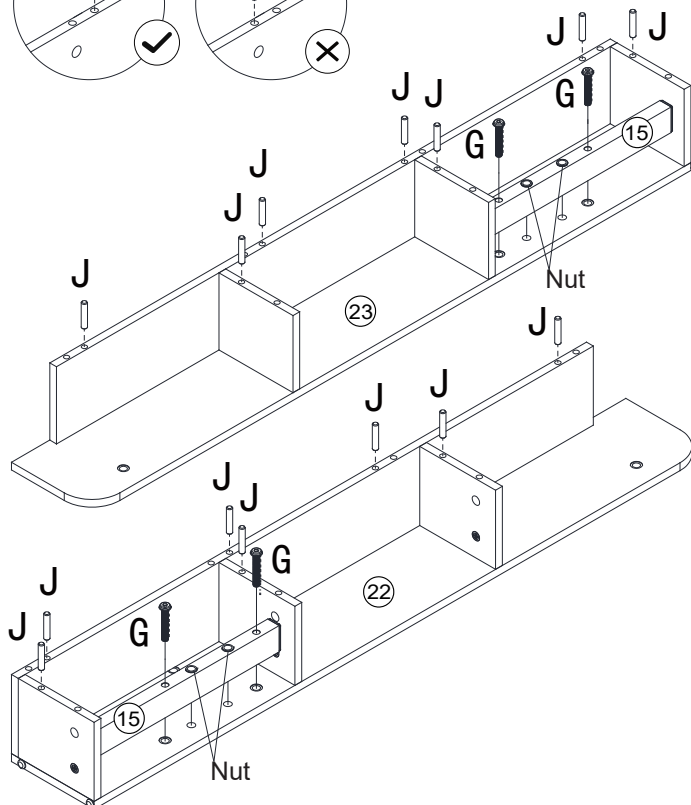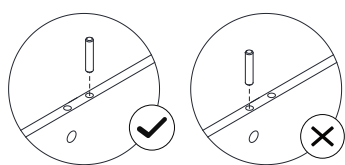


G		4pcs
	M8x50	
J		14pcs
	$\phi 8 \times 40$	

5

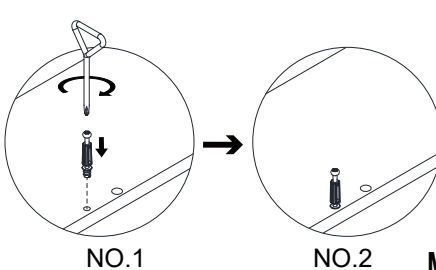


NO.1

NO.2

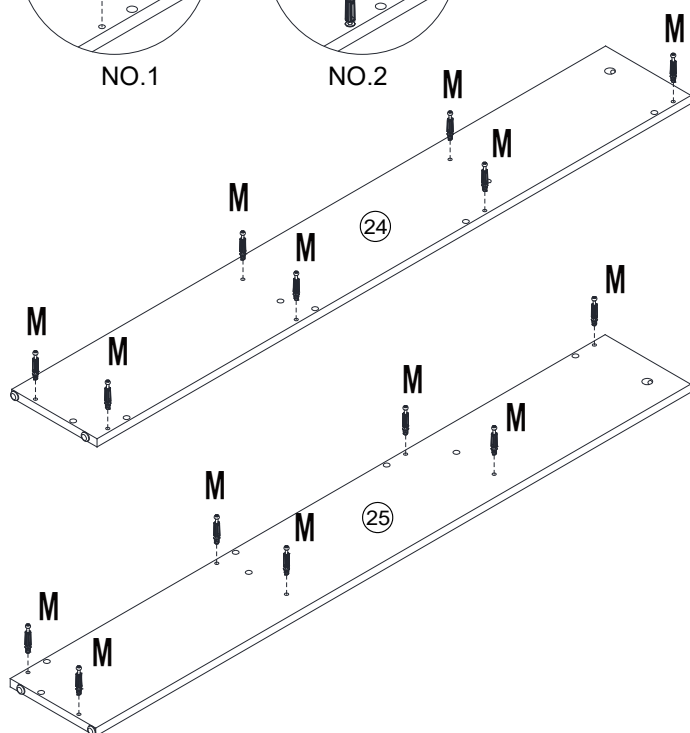


M		14pcs
	$\phi 7 \times 40$	

6

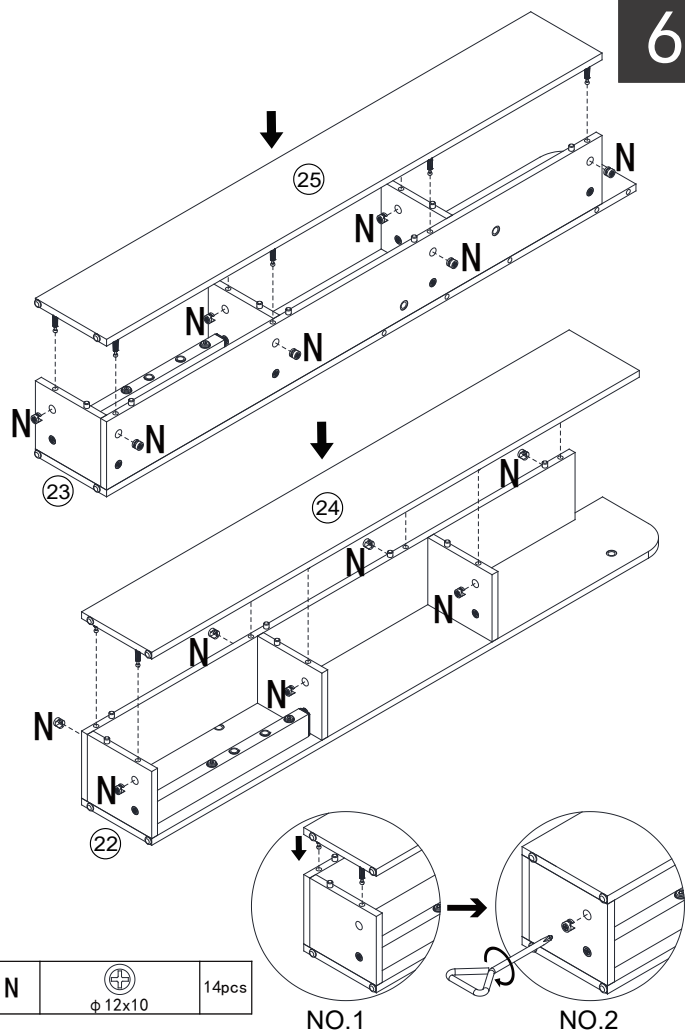


7

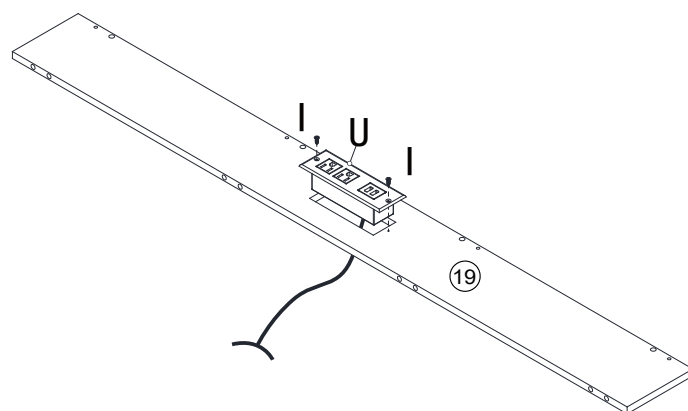


I		2pcs
ST4. 2x12		


8

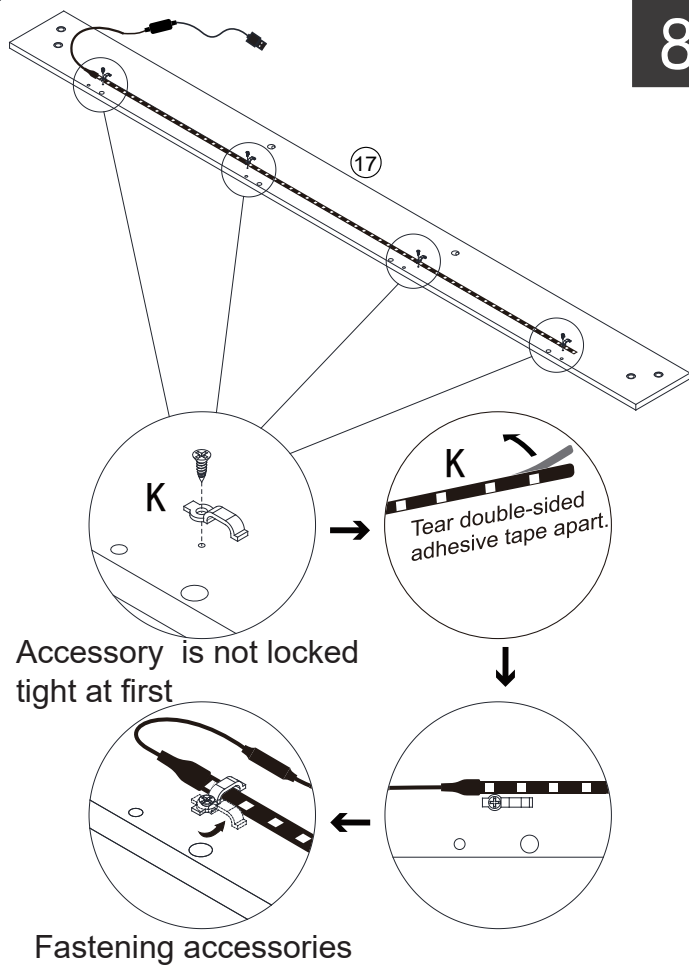

9

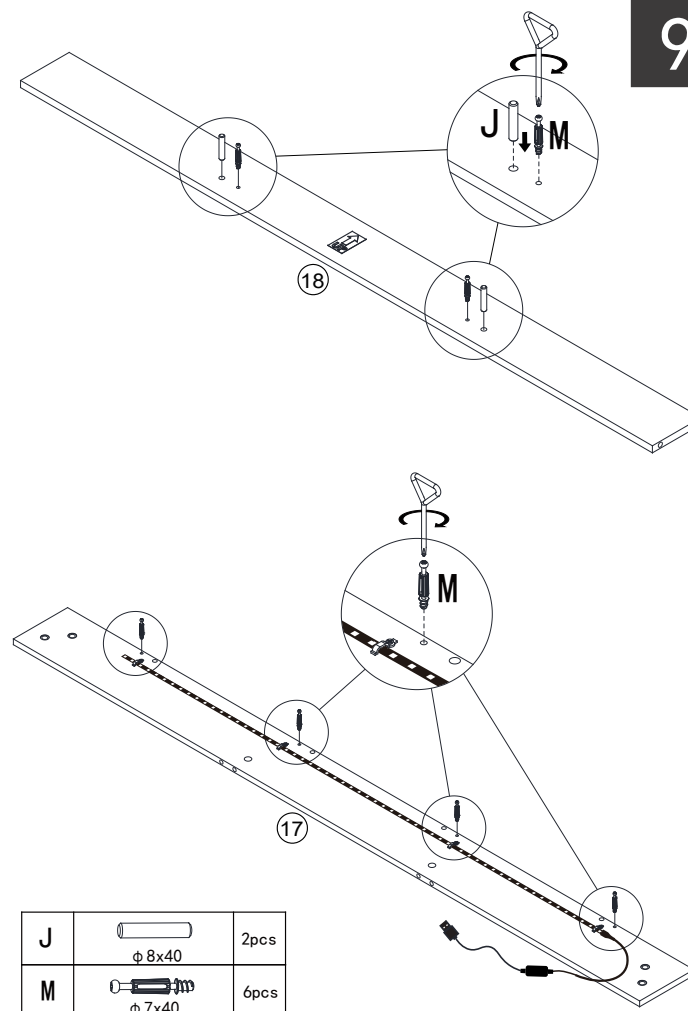


10

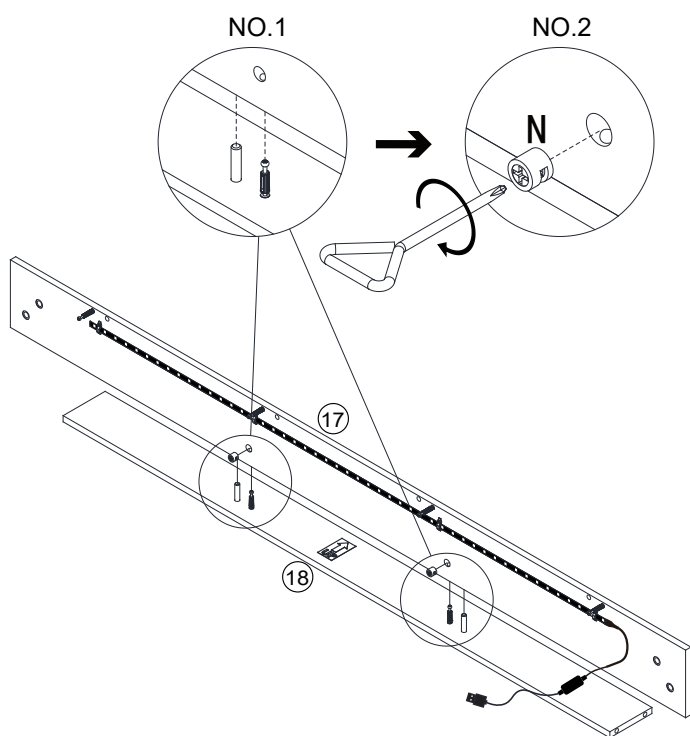


N		2pcs
	$\phi 12 \times 10$	

11

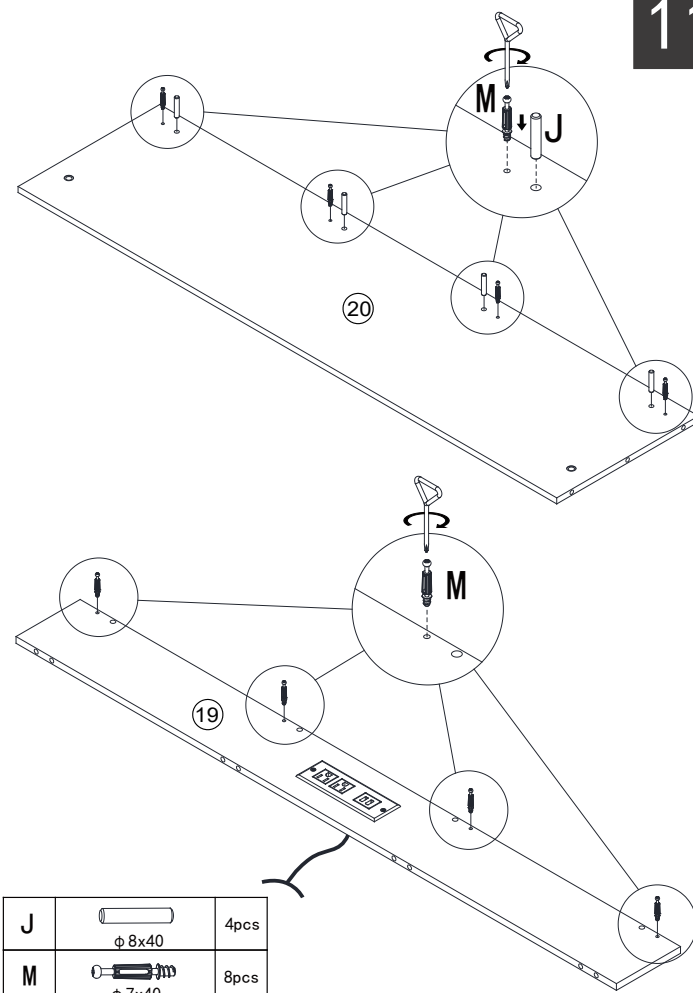


J		4pcs
	$\phi 8 \times 40$	
M		8pcs
	$\phi 7 \times 40$	

12

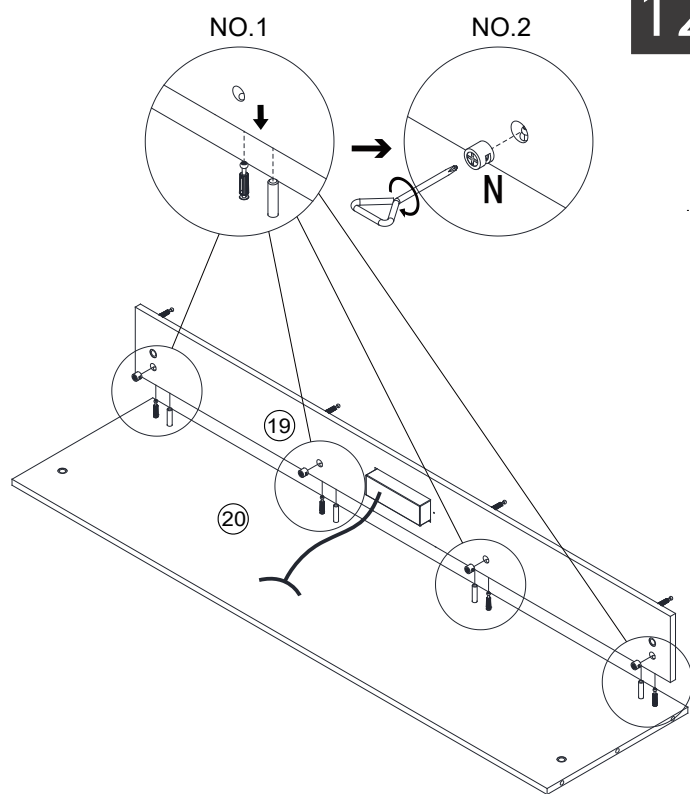

N		4pcs
	$\phi 12 \times 10$	


13

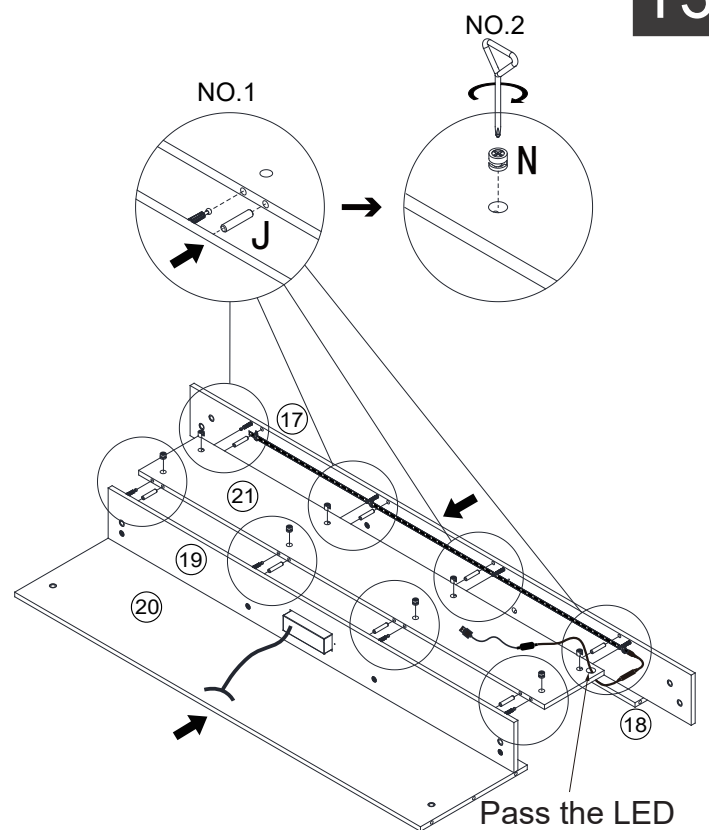

J		8pcs
	$\phi 8 \times 40$	
N		8pcs
	$\phi 12 \times 10$	


Pass the LED
strip connector
through the hole

14

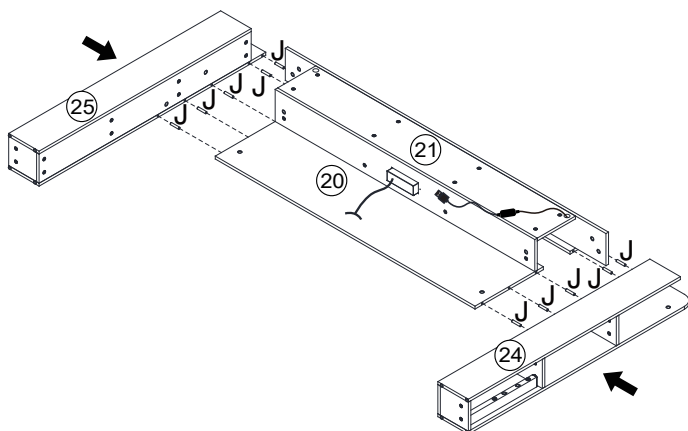


J		10pcs
	φ 8x40	

15

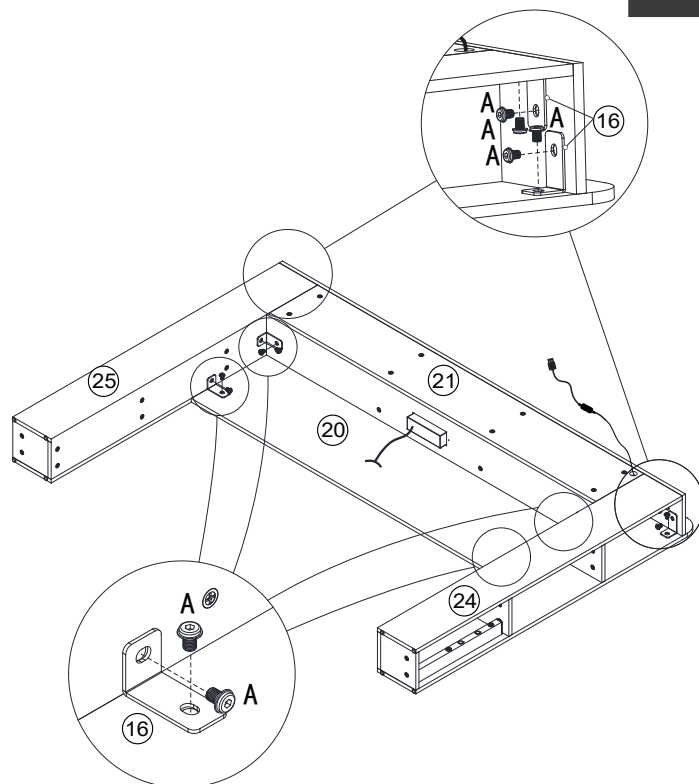

A		16pcs
	M8x12	


16

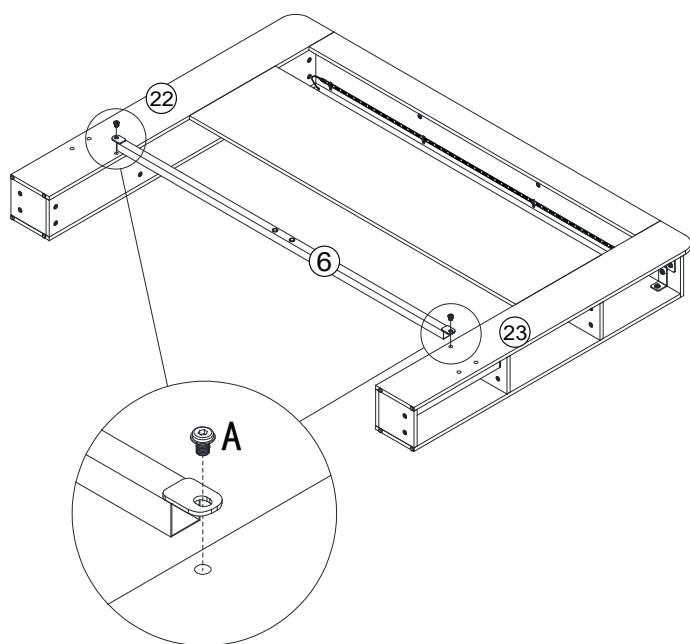

A		2pcs
	M8x12	

17

x2

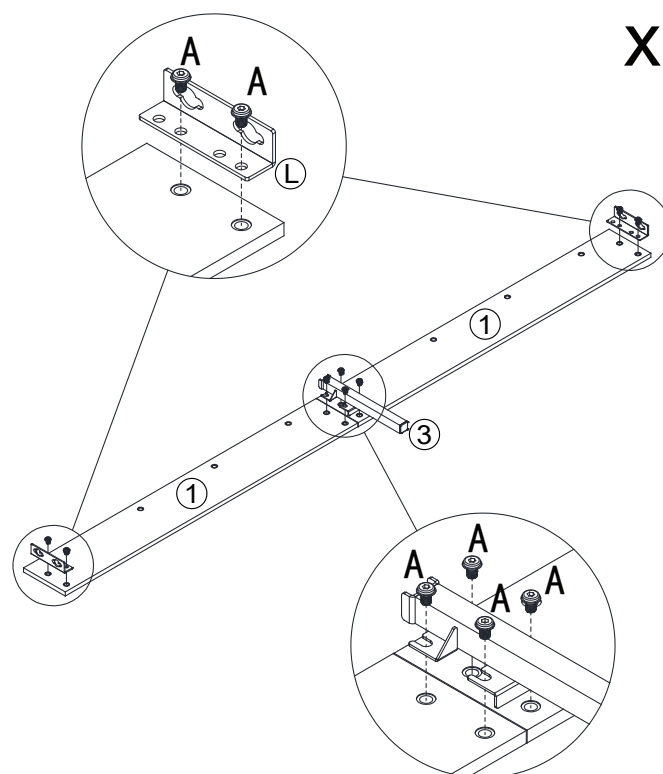


A		16pcs
	M8x12	

18

x2




Note the orientation
of the slot

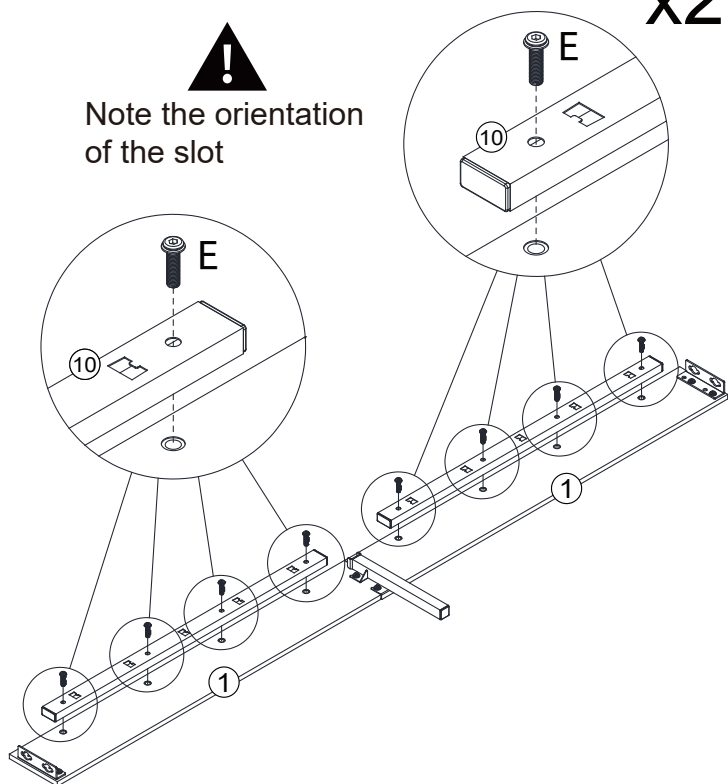

E		16pcs
M8x30		


19

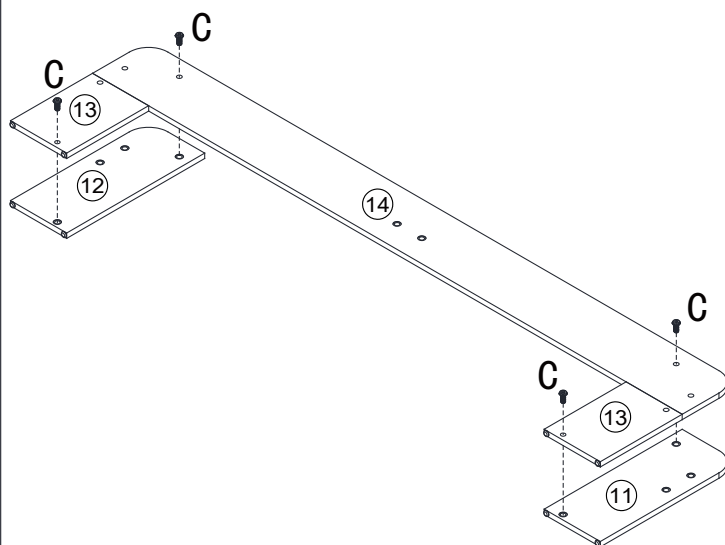

C		4pcs
M8x20		

Tighten screws


20

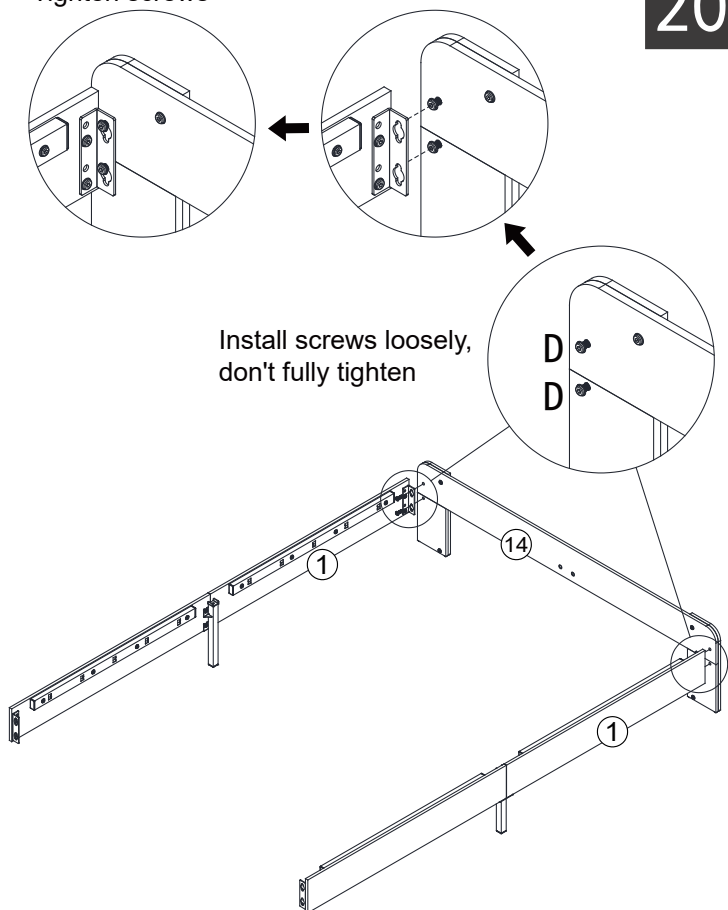

Install screws loosely,
don't fully tighten

D		4pcs
white zinc		
M8x25		

21

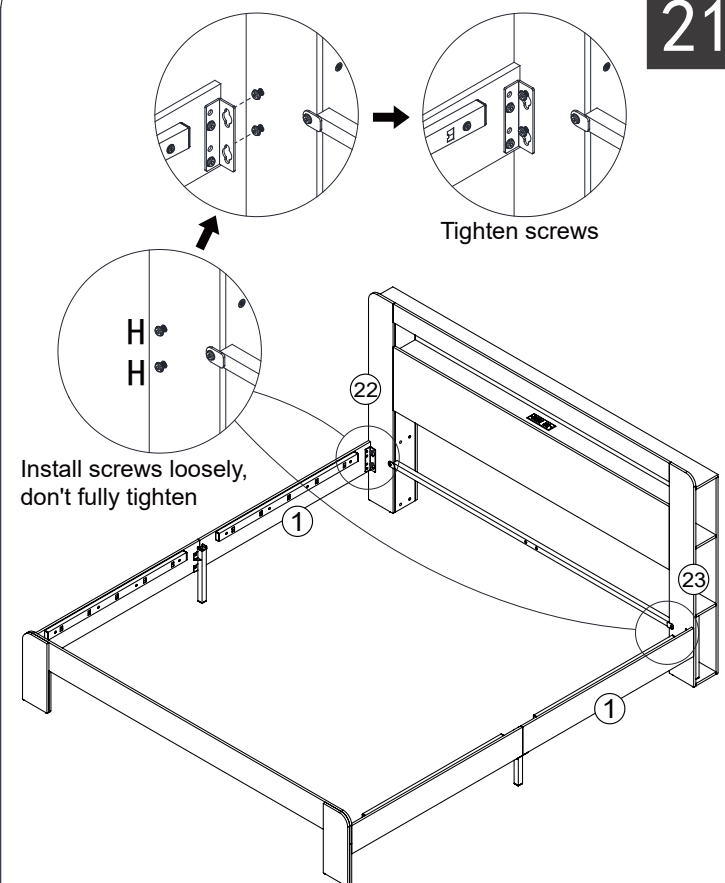


Tighten screws

Install screws loosely,
don't fully tighten

H		4pcs
M8x60		

22

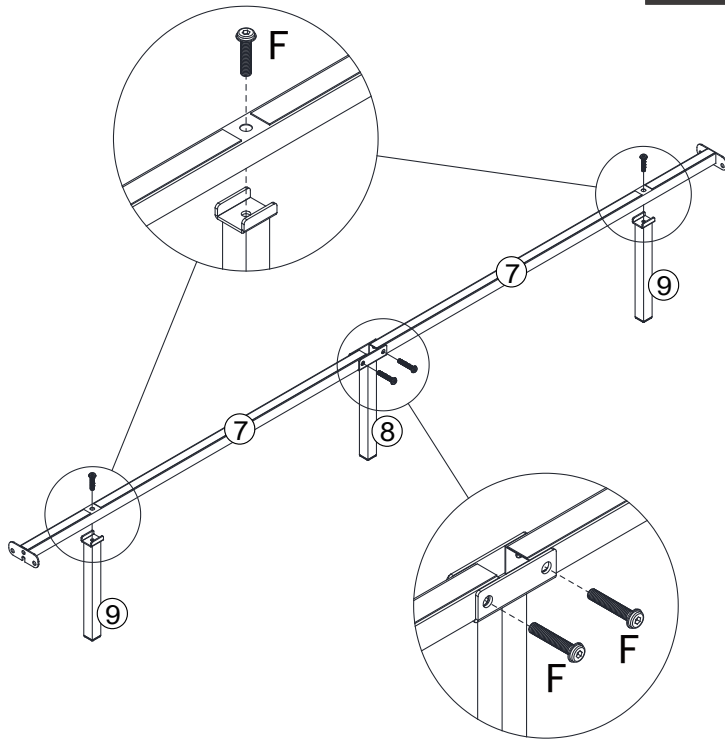


! Do not fully tighten the screws yet.

F		4pcs
	M8x40	

Assemble second

23

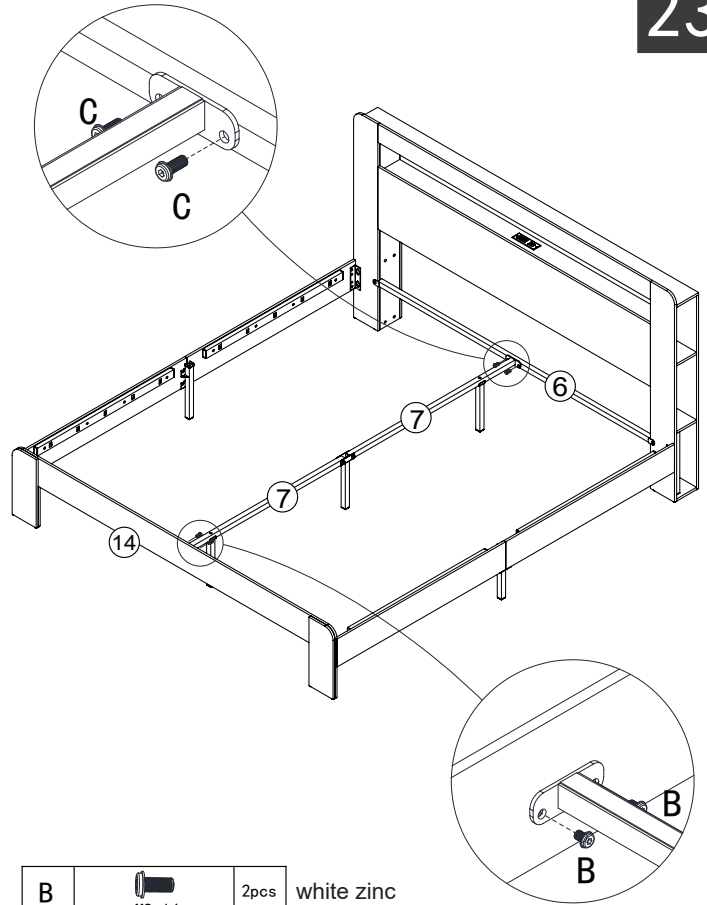


B		2pcs
	M8x14	
C		2pcs
	M8x20	

white zinc


to Assemble first

24

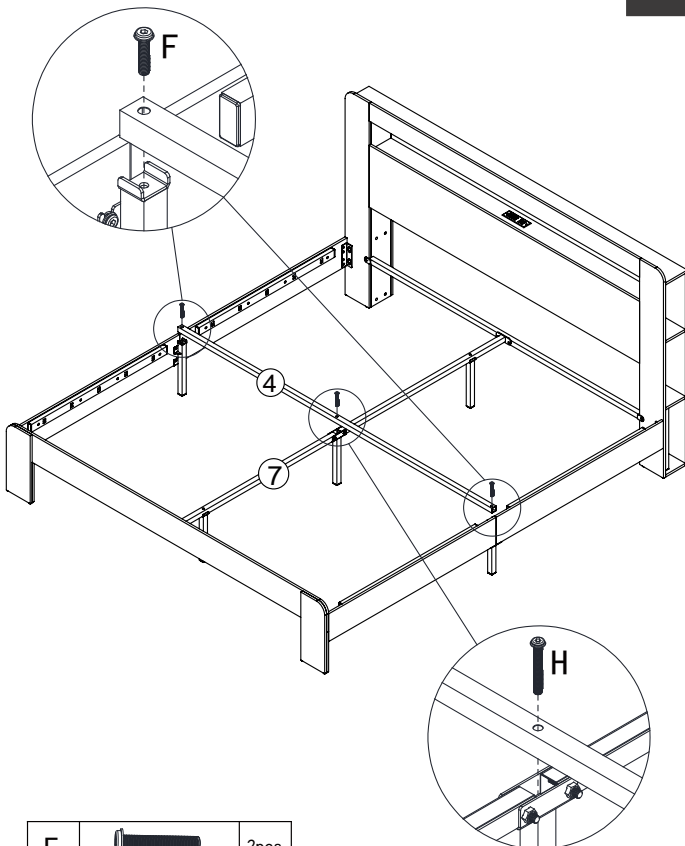


F		2pcs
	M8x40	
H		1pc
	M8x60	


25

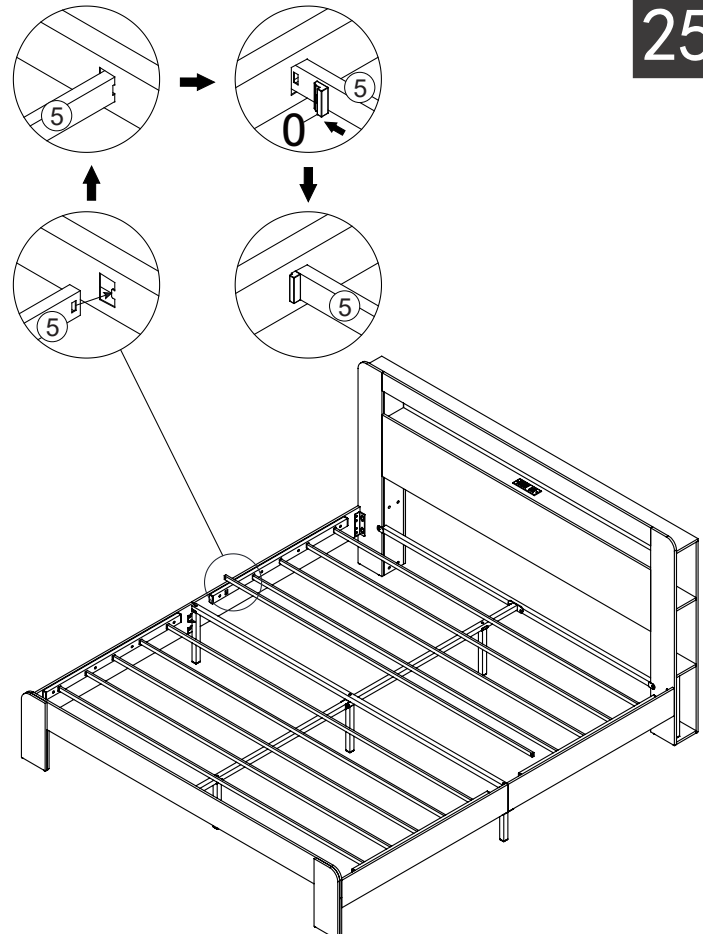

O		20pcs
---	---	-------

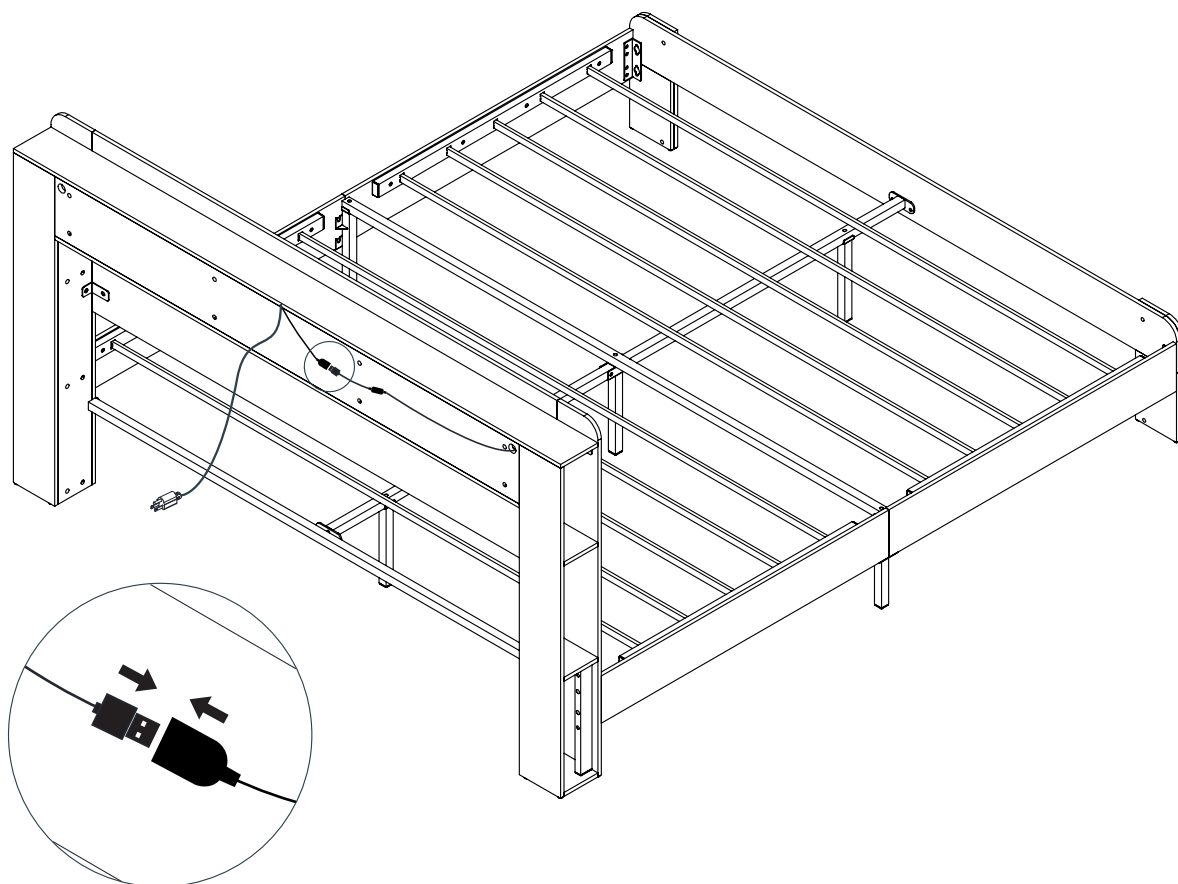

Finish

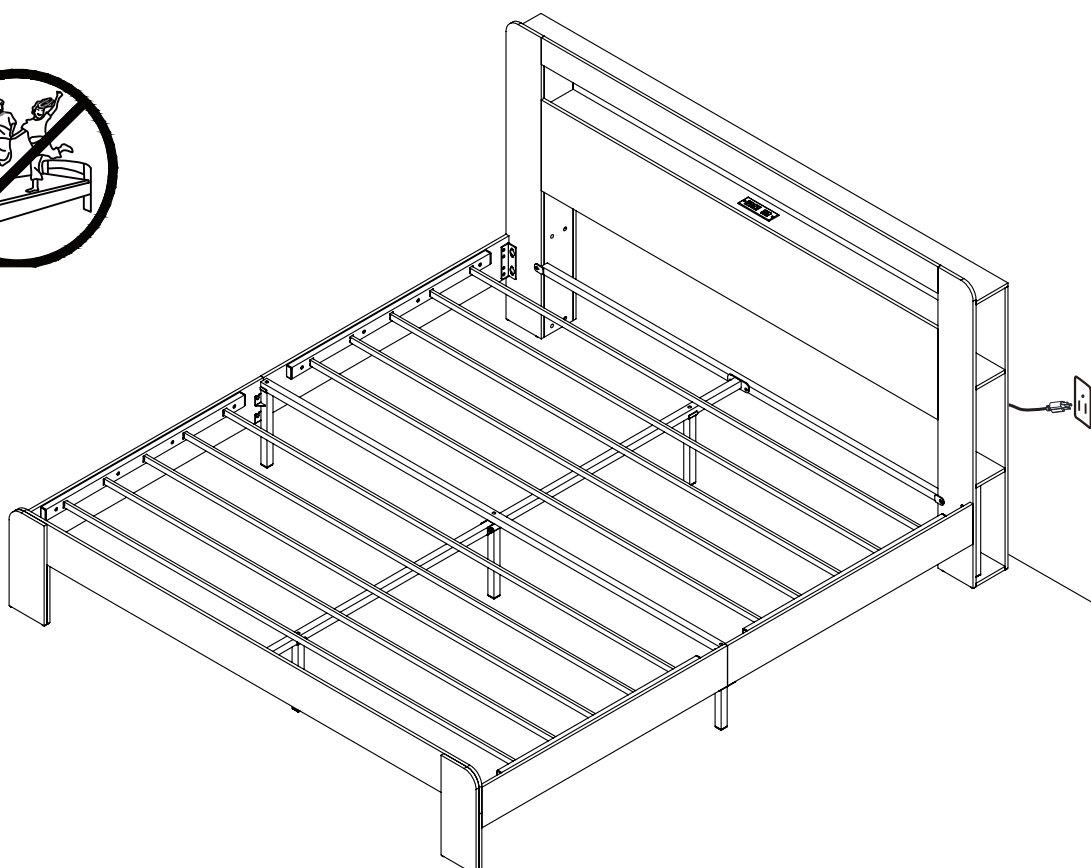

Note: Now you can tighten all the bolts.