













CROSLEY

F U R N I T U R E






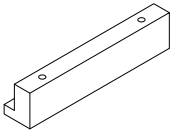

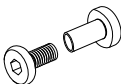


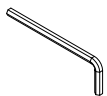

Sideboard CF4232

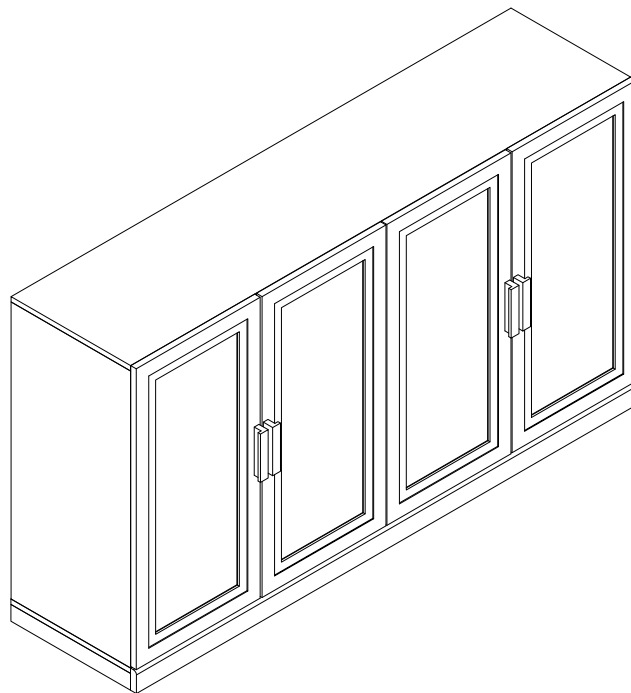

PART LIST

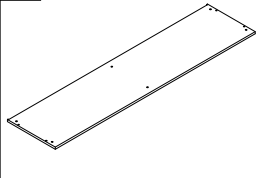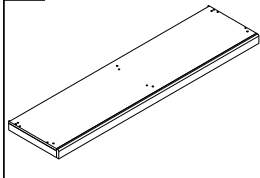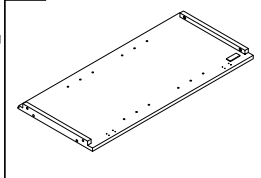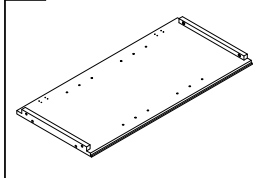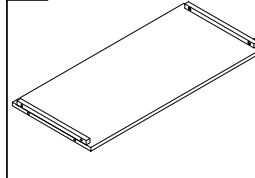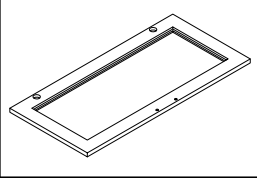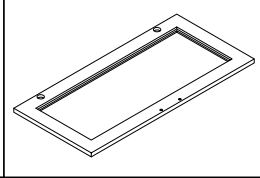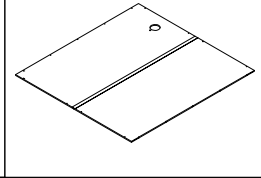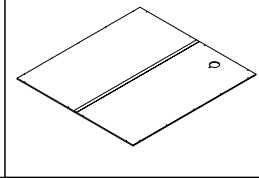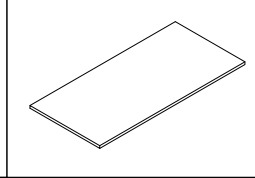
<div data-bbox="145 170 185 210">A</div> 	<div data-bbox="403 170 443 210">B</div> 	<div data-bbox="663 170 703 210">C</div> 	<div data-bbox="924 170 963 210">D</div> 	<div data-bbox="1184 170 1224 210">E</div> 
<div data-bbox="220 398 343 454">Top Panel 1 PC</div>	<div data-bbox="470 398 627 454">Bottom Panel 1 PC</div>	<div data-bbox="751 398 874 454">Left Panel 1 PC</div>	<div data-bbox="1002 398 1137 454">Right Panel 1 PC</div>	<div data-bbox="1241 398 1412 454">Partition Panel 1 PC</div>
<div data-bbox="145 465 185 506">F</div> 	<div data-bbox="403 465 443 506">G</div> 	<div data-bbox="663 465 703 506">H</div> 	<div data-bbox="924 465 963 506">I</div> 	<div data-bbox="1184 465 1224 506">J</div> 
<div data-bbox="212 694 347 750">Door Panel 2 PCS</div>	<div data-bbox="475 694 611 750">Door Panel 2 PCS</div>	<div data-bbox="711 694 898 750">Left Back Panel 1 PC</div>	<div data-bbox="967 694 1169 750">Right Back Panel 1 PC</div>	<div data-bbox="1225 694 1417 750">Adjustable Shelf 4 PCS</div>
<div data-bbox="145 761 185 801">K</div>  <div data-bbox="236 992 319 1048">Cover 2 PCS</div>				

HARDWARE LIST
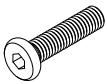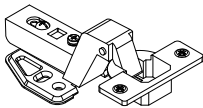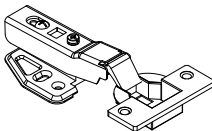
#1  Ø1/4"*25	#2  Ø8*30mm	#3 	#4 	#5  Ø3*14mm
Bolt 12 PCS (Extra 1)	Wood Dowel 12 PCS (Extra 1)	Middle Bend Hinge 4 PCS	Straight Bend Hinge 4 PCS	Screw 48 PCS (Extra 1)
#6 	#7  Ø5/32"*16	#8  Ø1/4"*15	#9 	#10  Ø3*14mm
Handle 4 PCS	Round Head Bolt 8 PCS	Binding Post 2 SETS (Extra 1)	Shelf Holder 16 PCS (Extra 1)	Round Head Screw 28 PCS (Extra 1)
#11 	#12 			
Allen Wrench 1 PC	Safety Strap Kit 1 SET			

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Attach straight bend hinges (part #4) to doors (part F) using screws (part #5) and phillips head screwdriver. Attach middle bend hinges (part #3) to doors (part G) using screws (part #5) and phillips head screwdriver. Attach handles (part #6) to doors (parts F & G) using round head bolts (part #7) and phillips head screwdriver.

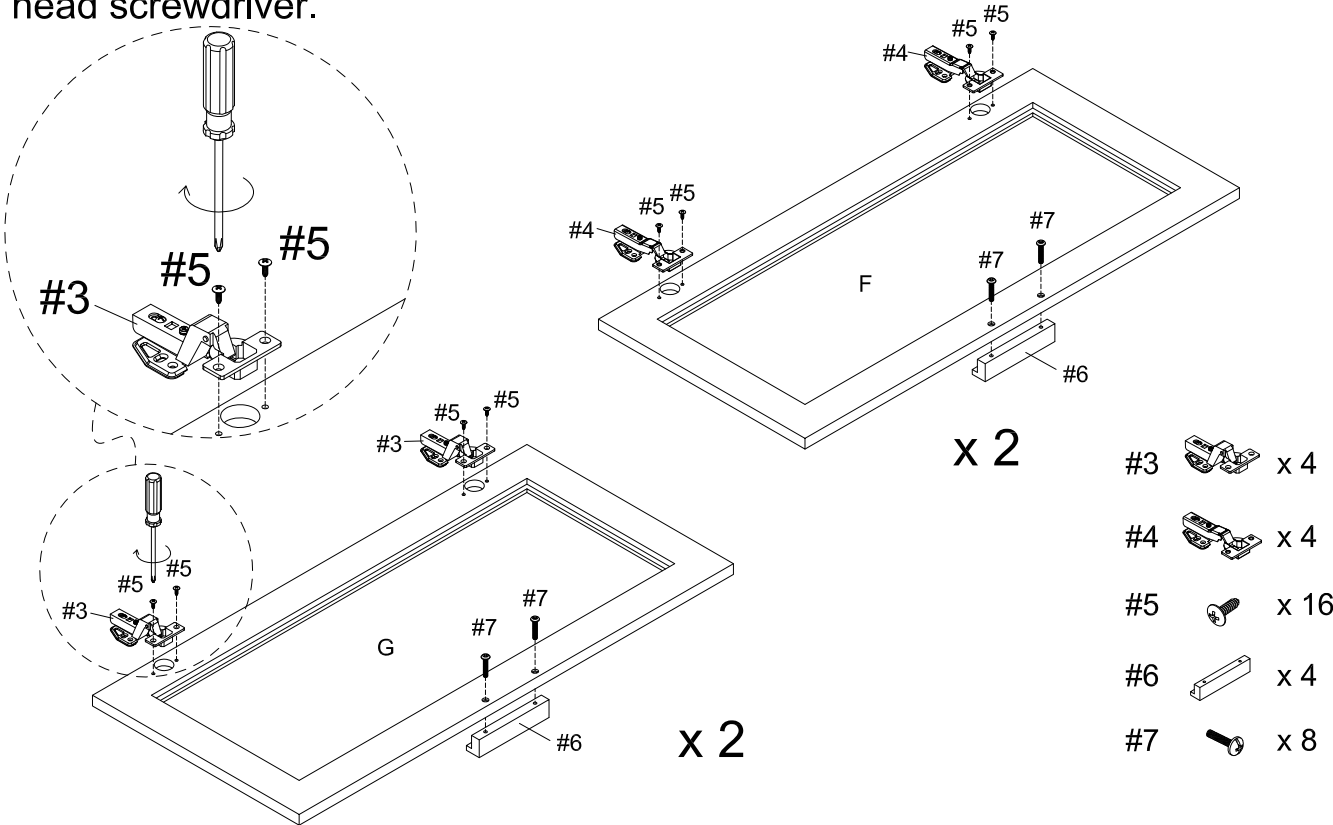


Step 2. Attach covers (part K) to back panels (parts H & I) using binding posts (part #8) and allen wrench (part #11).

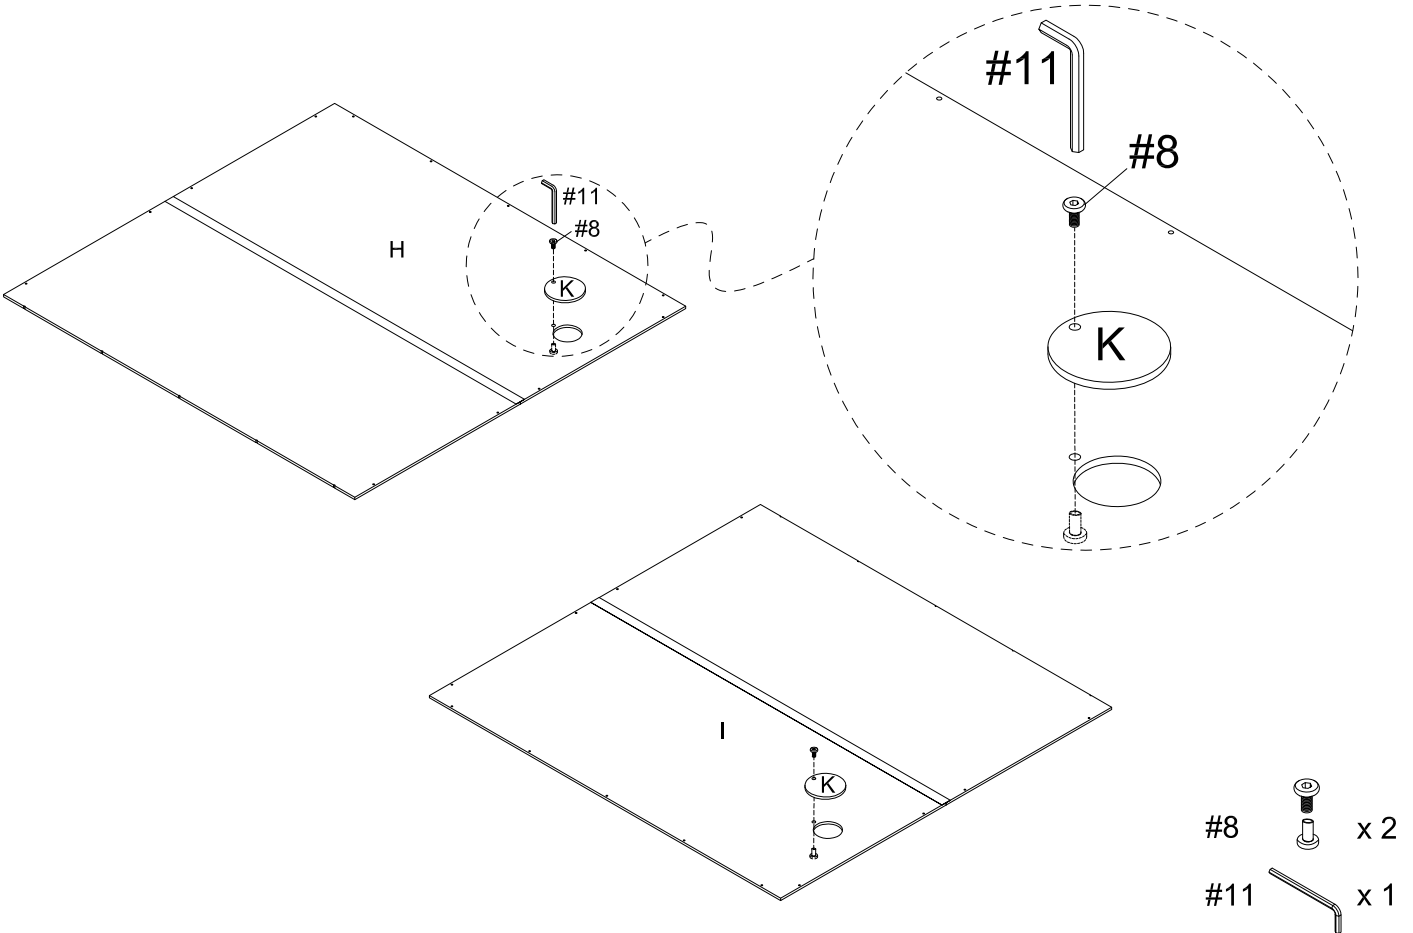


Step 3. Attach panels (parts C, D & E) to bottom panel (part B) using bolts (part #1), wood dowels (part #2) and allen wrench (part #11).

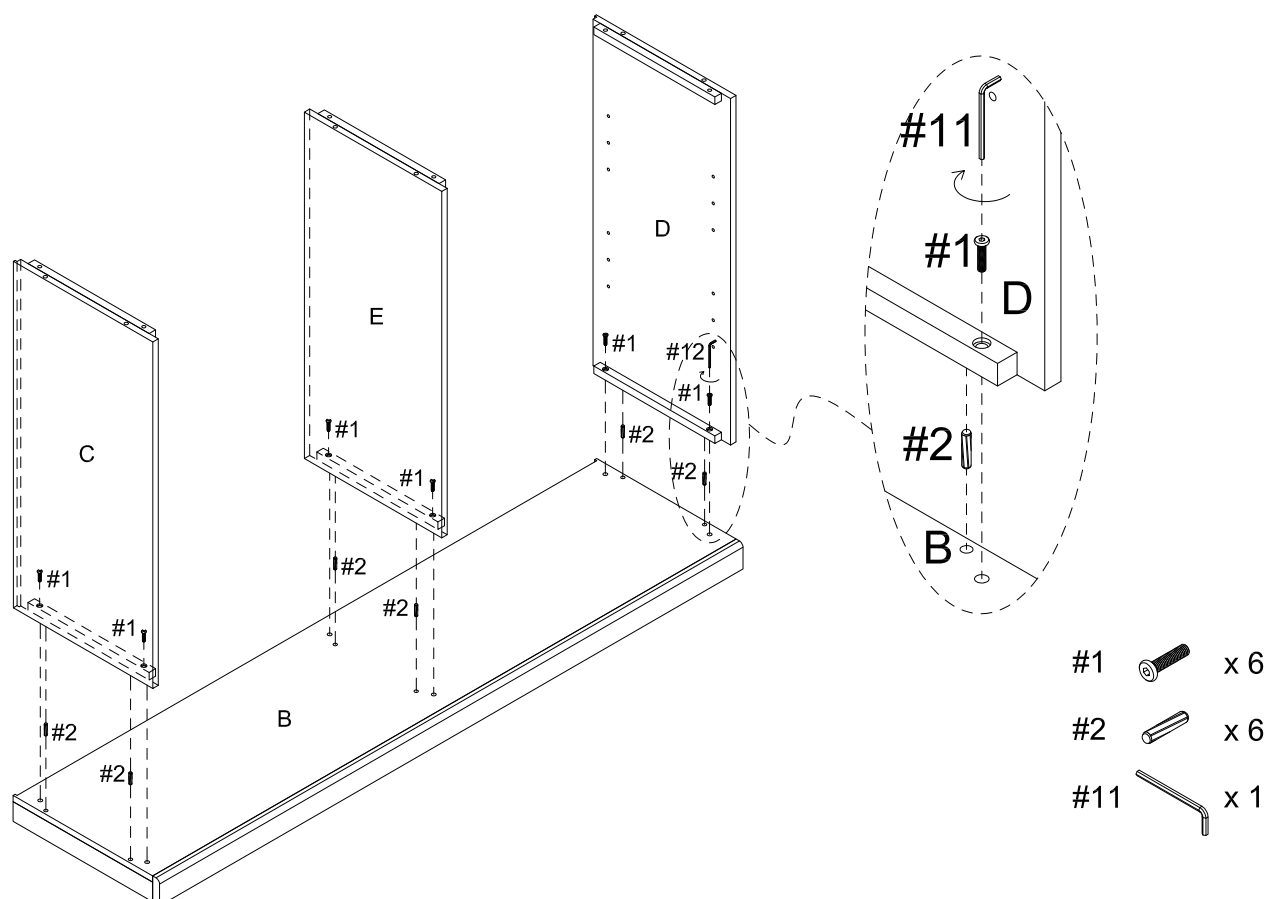


Step 4. Attach top panel (part A) to assembled unit (parts C, D & E) using bolts (part #1), wood dowels (part #2) and allen wrench (part #11).

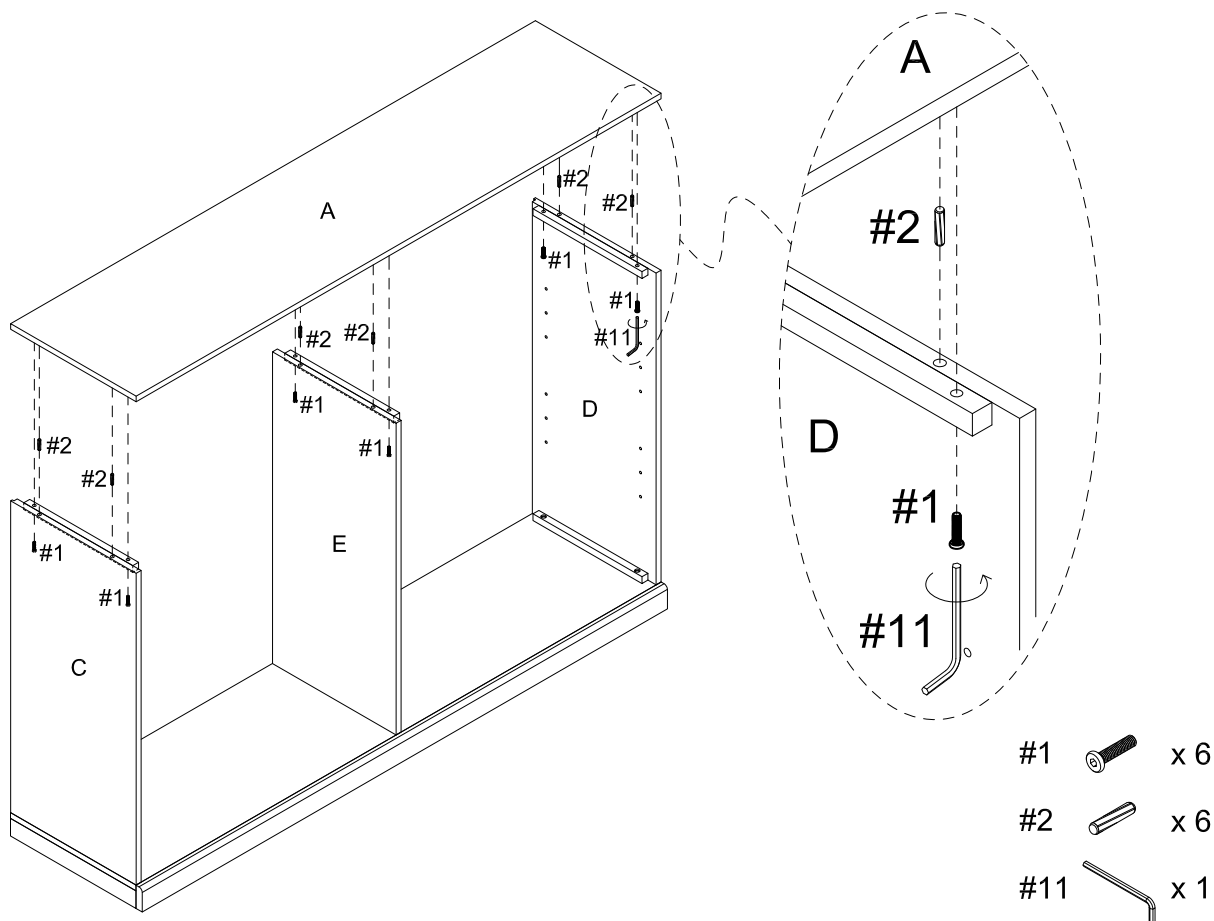


Step 5. Attach back panels (parts H & I) to assembled unit (parts A, B, C, D & E) using round head screws (part #10) and phillips head screwdriver.

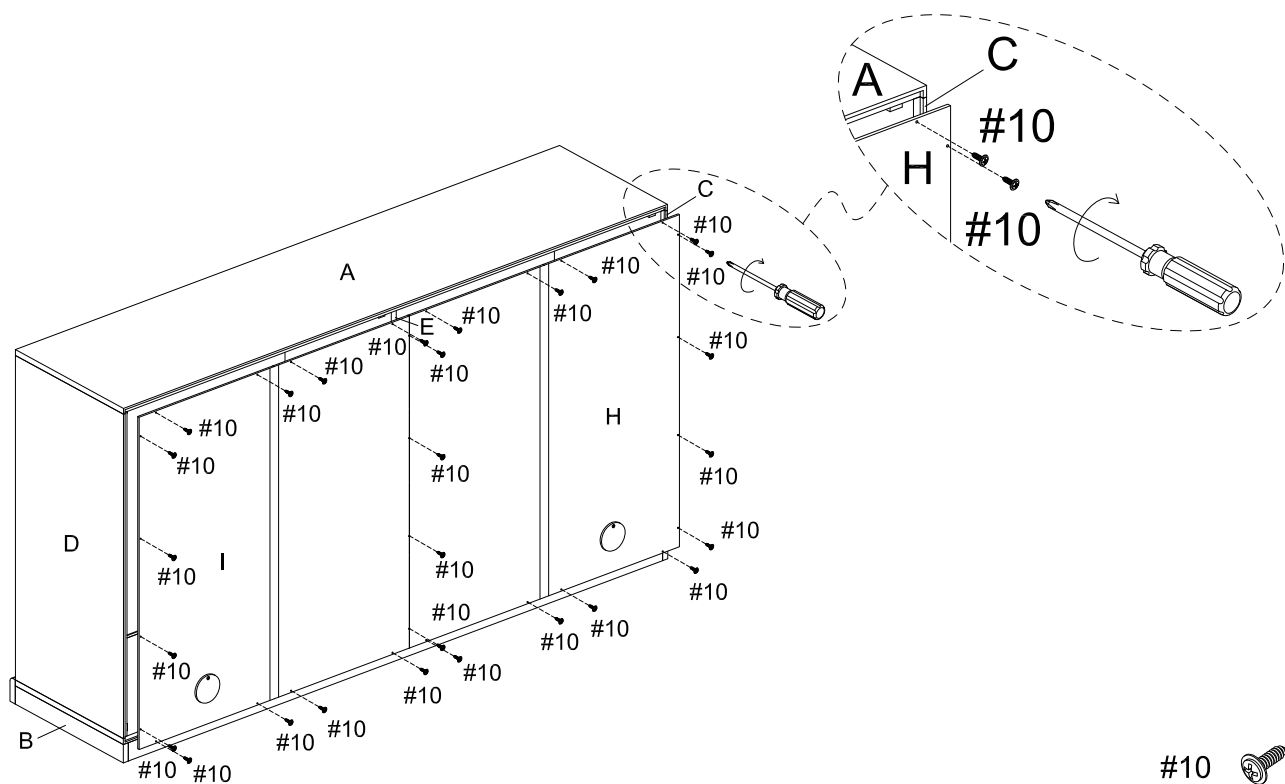

Step 6. Place shelf holders (part #9) into desired position and slide adjustable shelves (part J) into place.

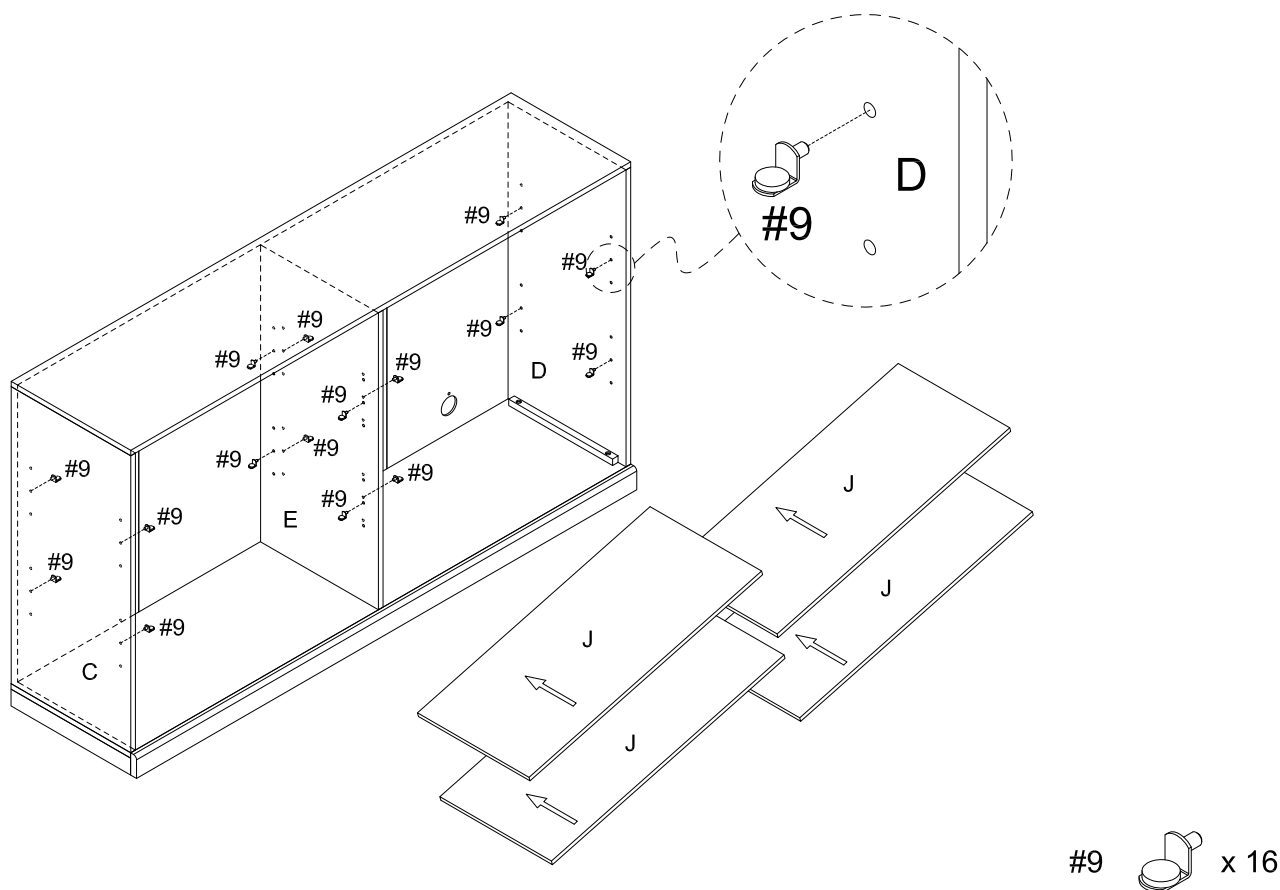


Step 7. Attach doors (parts F & G) to panels (parts C & E) using screws (part #5) and phillips head screwdriver.

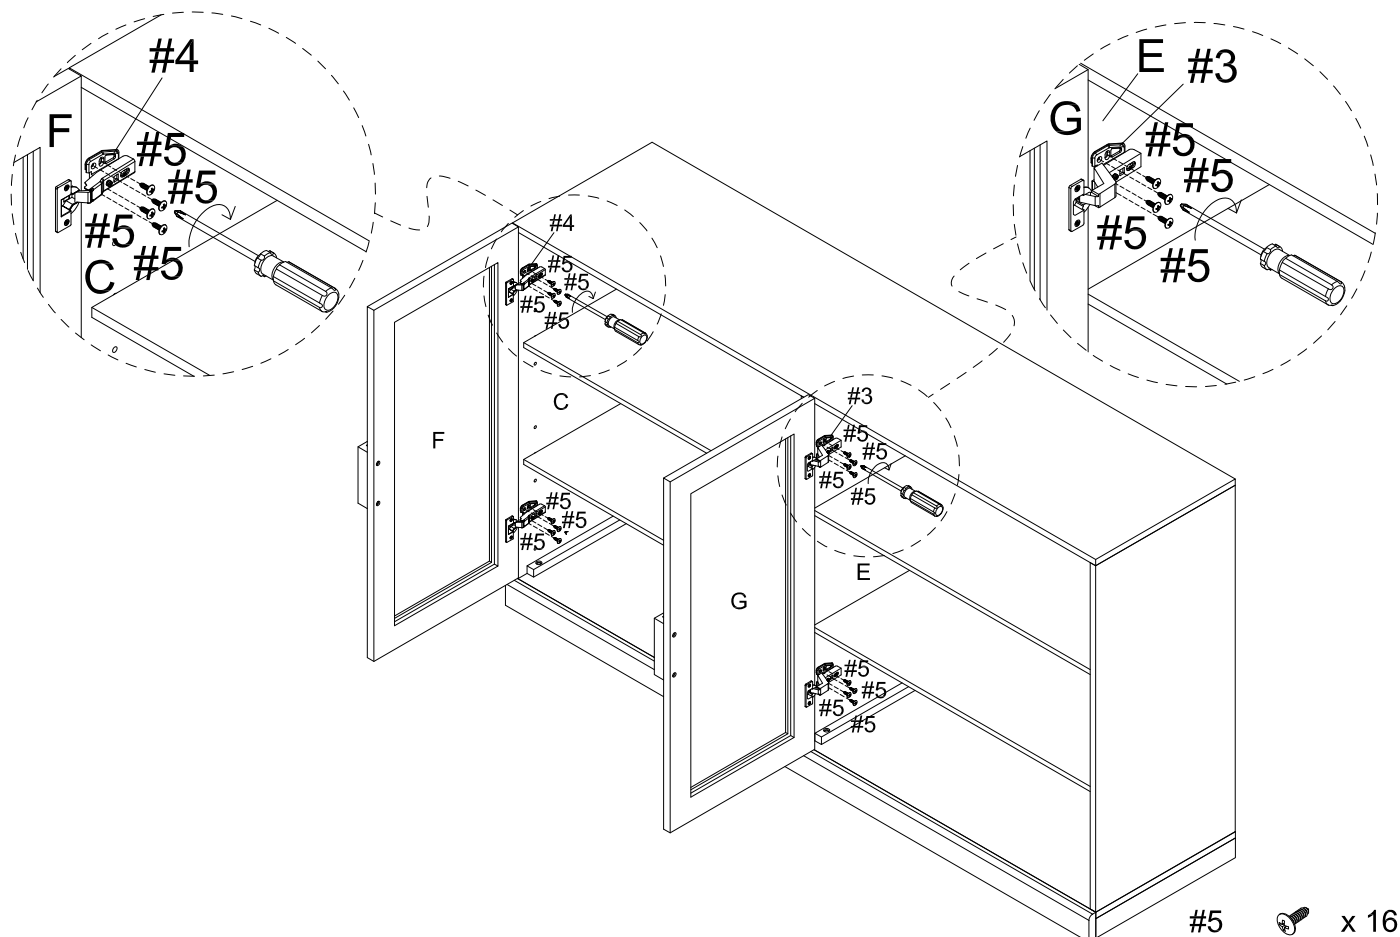







Step 8. Attach doors (parts F & G) to panels (parts D & E) using screws (part #5) and phillips head screwdriver.

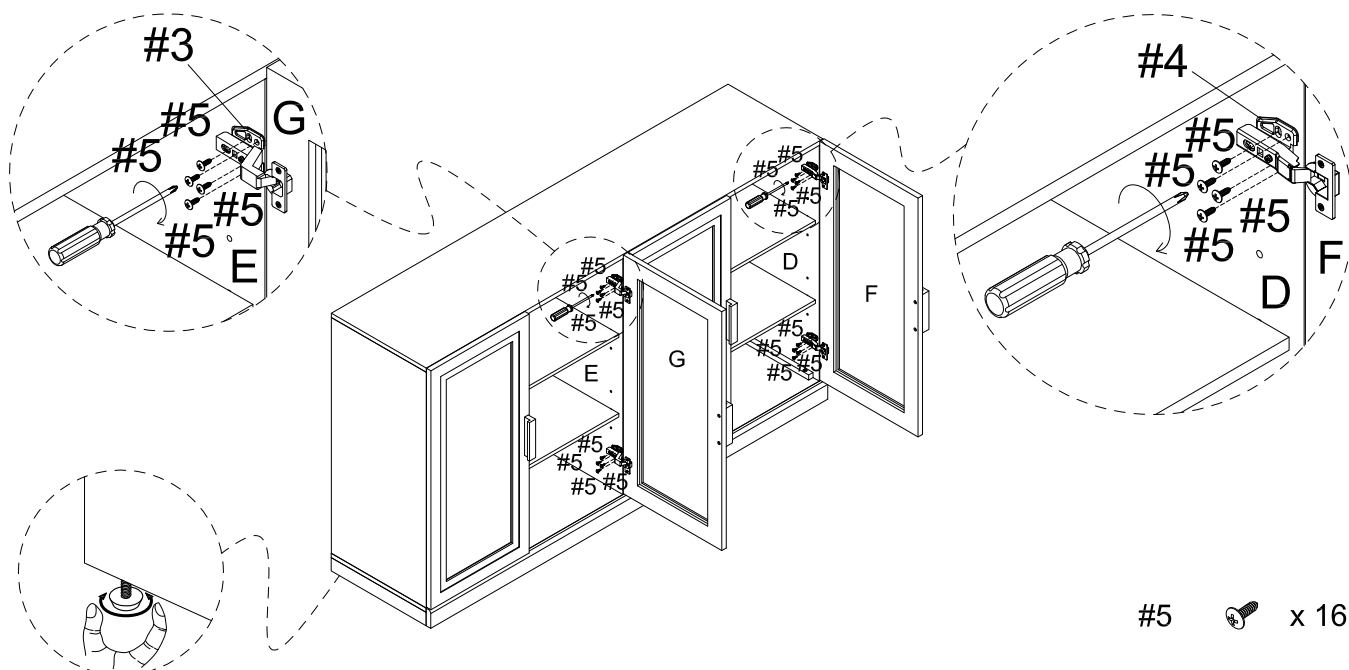Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

Important: Safety strap kit (part #12) must be installed to prevent tipping, damage and/or injury.

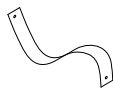


#12	A	B	C	D	E
	 1-1/2"xØ4xD8		 5/8"xØ3xD8		
Safety Strap Kit 1 SET	Long Screw 1 PC	Wall Anchor 1 PC	Short Screw 1 PC	Safety Wall Strap 1 PC	Flat Washer 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury

1. Insert short screw (C) through flat washer (E) and safety wall strap (D) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 1 1/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where safety wall strap (D) is attached. Tap wall anchor (B) into the hole.
3. Insert long screw (A) through safety wall strap (D) into wall anchor (B) using phillips head screwdriver.


Note: This item is not intended for clothing storage use.

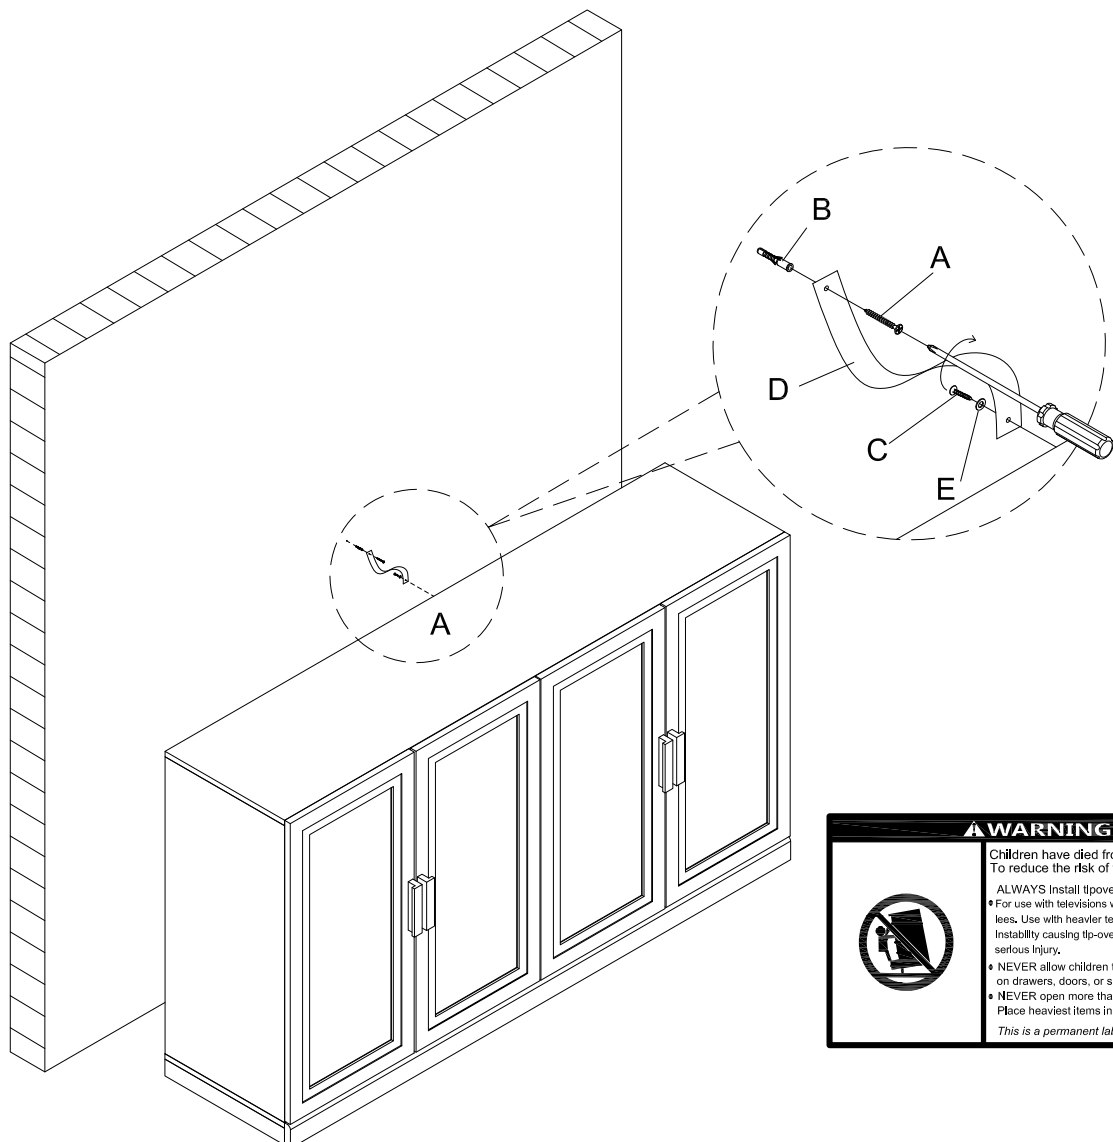

ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).


STEP 1

Open the door

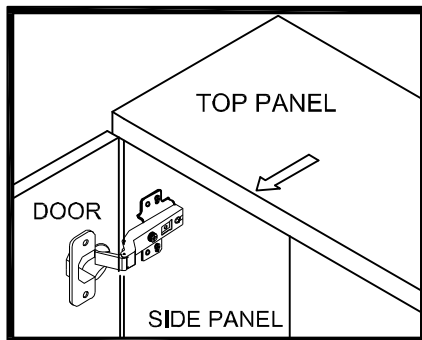


STEP 2

Adjust the gap between door panel and side panel

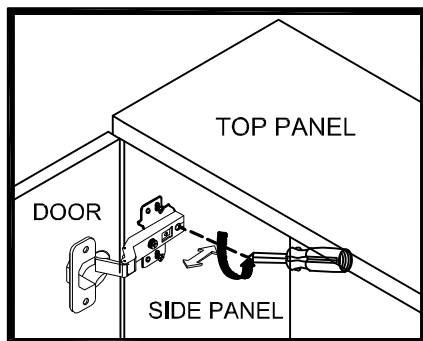


Loosen the screw indicated a little, adjust the hinge to right position (see step 2a & 2b), then tighten the screw.

STEP 2a MOVE DOOR IN

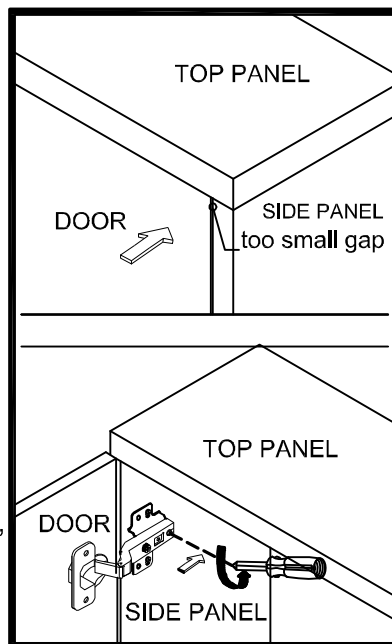

Push the hinge back a little.


STEP 2b MOVE DOOR OUT

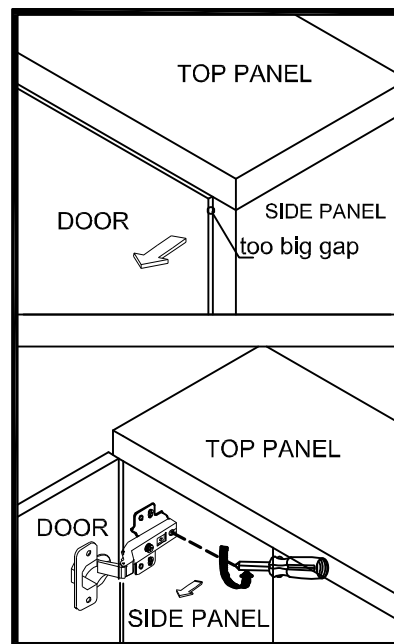

Pull the hinge forward a little.


STEP 3

To adjust the gap between two door

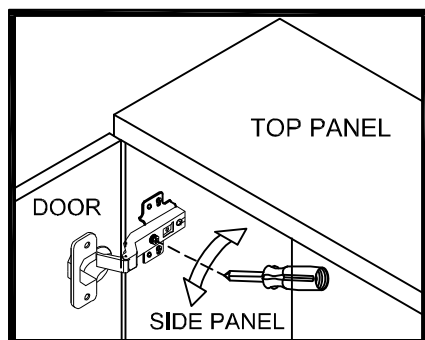


Loosen or tighten the screw indicated a little to adjust the gap between doors panels (see step 3a & step 3b)

STEP 3a MOVE DOOR RIGHT

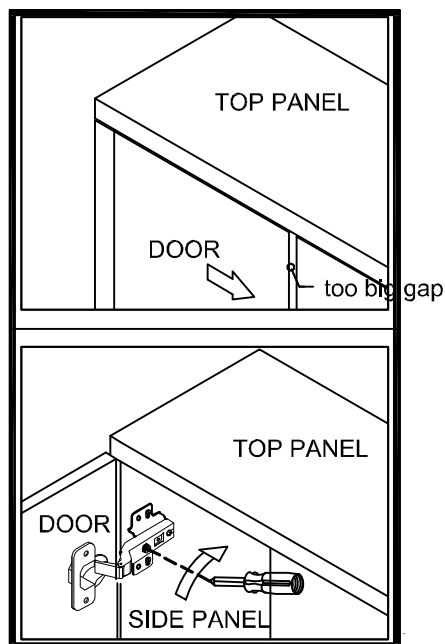

Turn the screw clockwise a little as shown to make the gap small.

STEP 3b MOVE DOOR LEFT

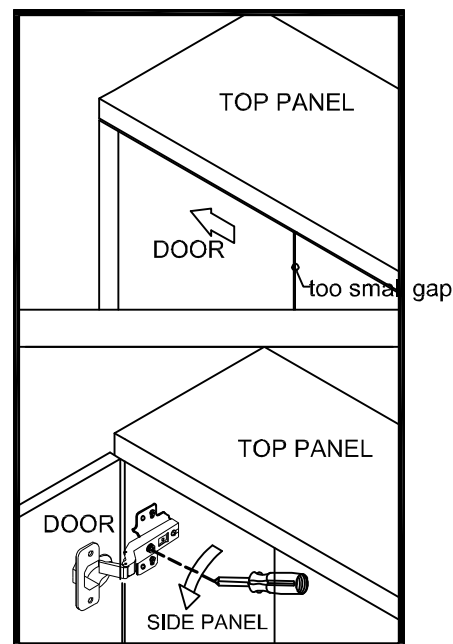

Turn the screw counterclockwise a little as shown to make the gap big.