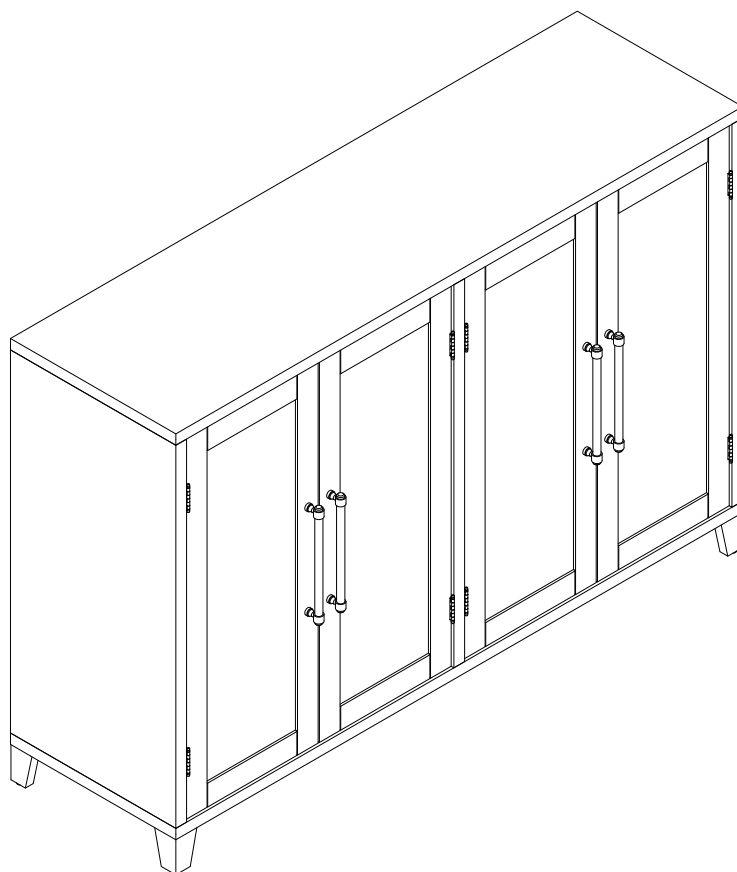


# CROSLEY

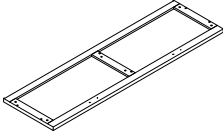
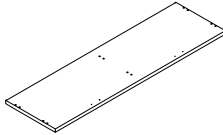
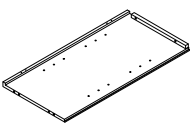
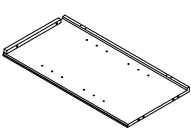
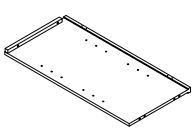
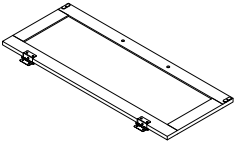


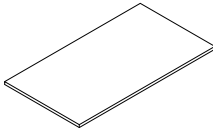


---

## FURNITURE






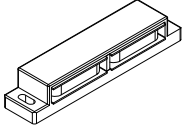






### Sideboard CF4226




# PART LIST

<b>A</b> 	<b>B</b> 	<b>C</b> 	<b>D</b> 	<b>E</b> 
Top Panel 1 PC	Bottom Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Partition Panel 1 PC
<b>F</b> 	<b>G</b> 	<b>H</b> 	<b>I</b> 	<b>J</b> 
Door Panel 4 PCS	Left Back Panel 1 PC	Right Back Panel 1 PC	Adjustable Shelf 4 PCS	Leg 4 PCS
<b>K</b> 				
Support Leg 1 PC				


# HARDWARE LIST

<b>#1</b> 	<b>#2</b> 	<b>#3</b> 	<b>#4</b> 	<b>#5</b> 
Ø1/4"*1"	Ø8*30mm		Ø4*16mm	
Bolt 16 PCS (Extra 1)	Wood Dowel 20 PCS (Extra 1)	Handle 4 PCS	Round Head Bolt 8 PCS (Extra 1)	Shelf Holder 16 PCS (Extra 1)
<b>#6</b> 	<b>#7</b> 	<b>#8</b> 	<b>#9</b> 	<b>#10</b> 
	Ø3*16mm	Ø3*14mm	Ø3*12mm	
Magnet 4 PCS	Long Screw 8 PCS (Extra 1)	Short Screw 16 PCS (Extra 1)	Round Head Screw 28 PCS (Extra 1)	Allen Wrench 1 PC
<b>#11</b> 	<b>ADDITIONAL TOOLS (Not Provided)</b> Note: It is not recommended to use power tools during assembly.  Phillips Head Screwdriver Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.			
Safety Strap Kit 1 SET				

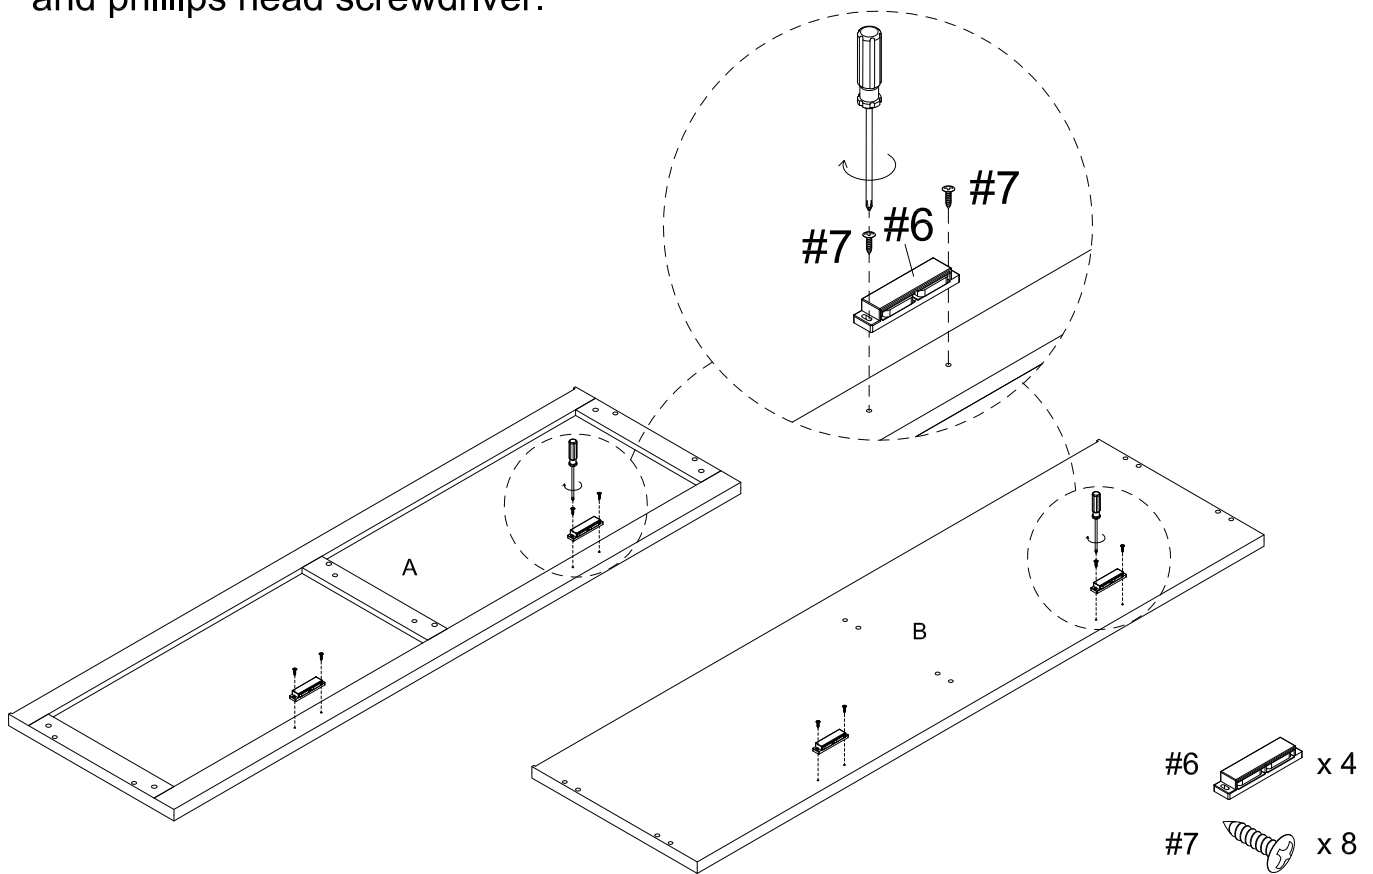
Step 1. Attach magnets (part #6) to panels (parts A & B) using long screws (part #7) and phillips head screwdriver.



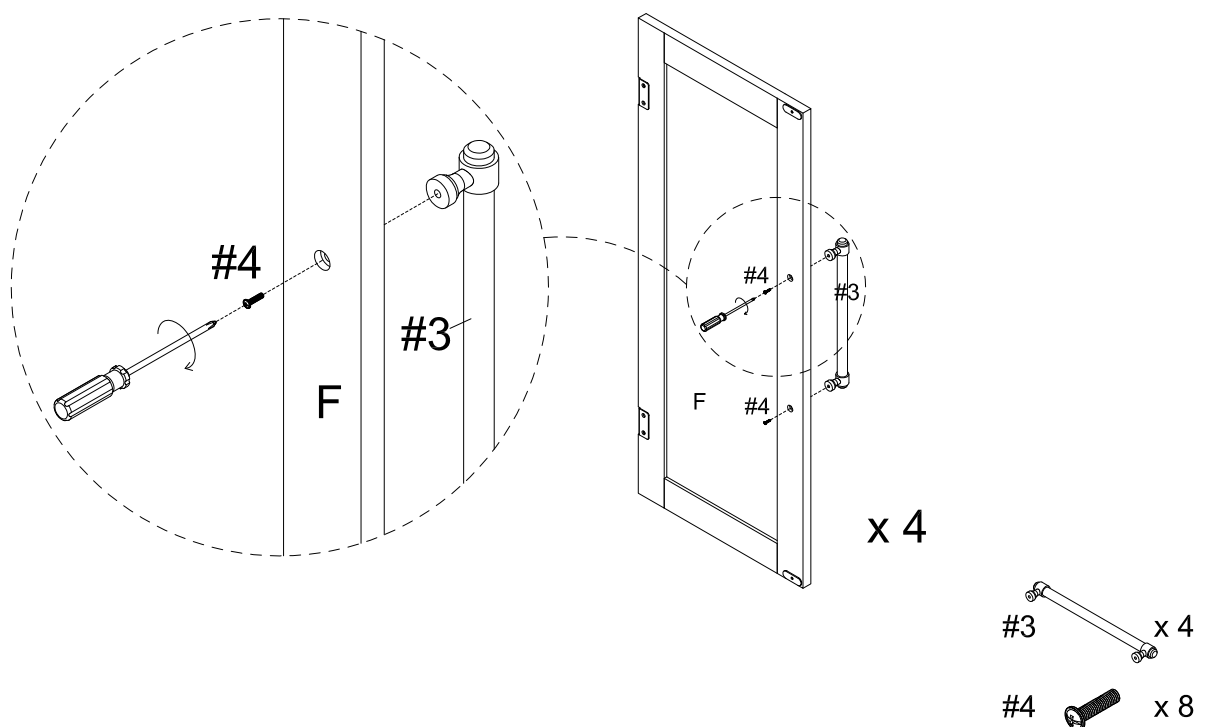
Step 2. Attach handles (part #3) to door panels (part F) using round head bolts (part #4) and phillips head screwdriver.



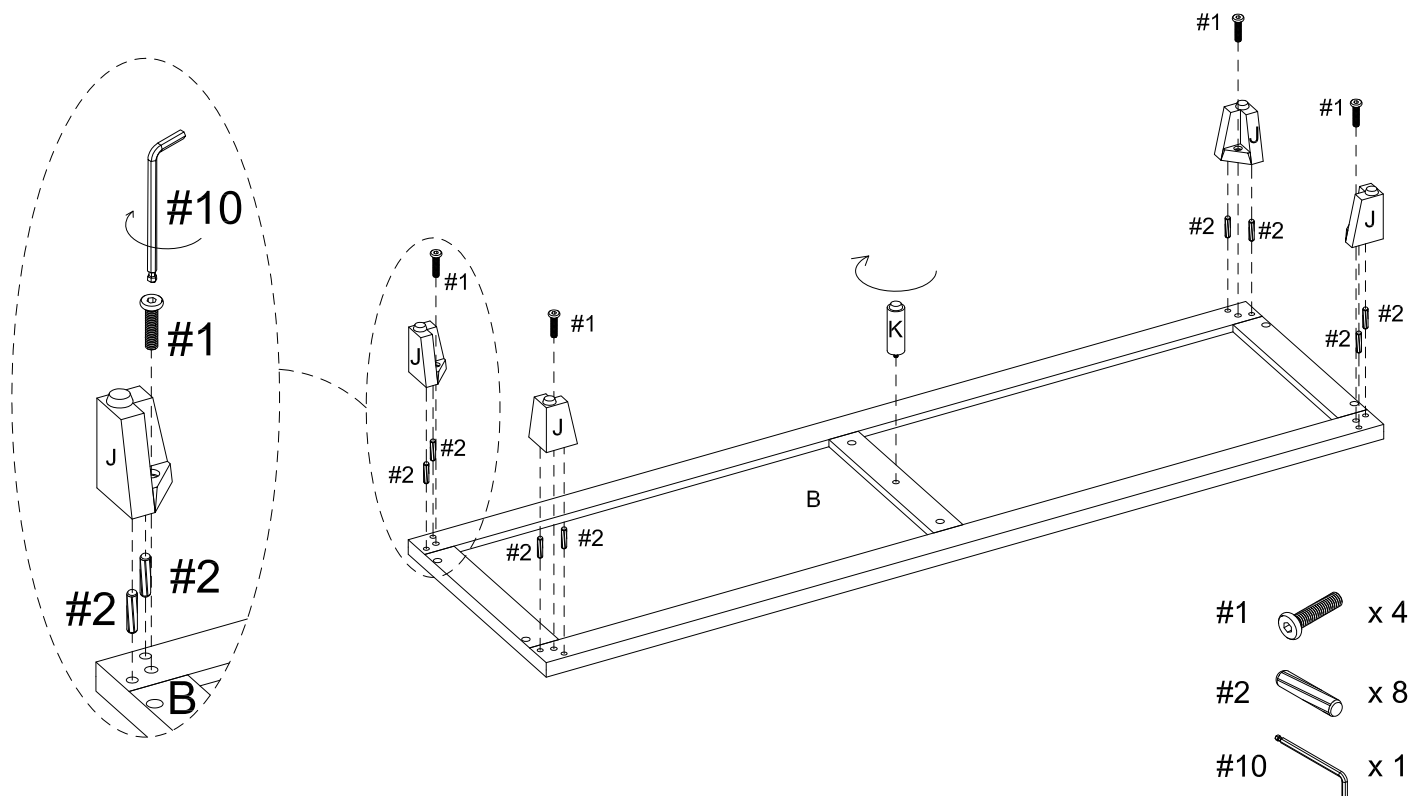
Step 3. Attach legs (part J) and support leg (part K) to bottom panel (part B) using bolts (part #1), wood dowels (part #2) and allen wrench (part #10).



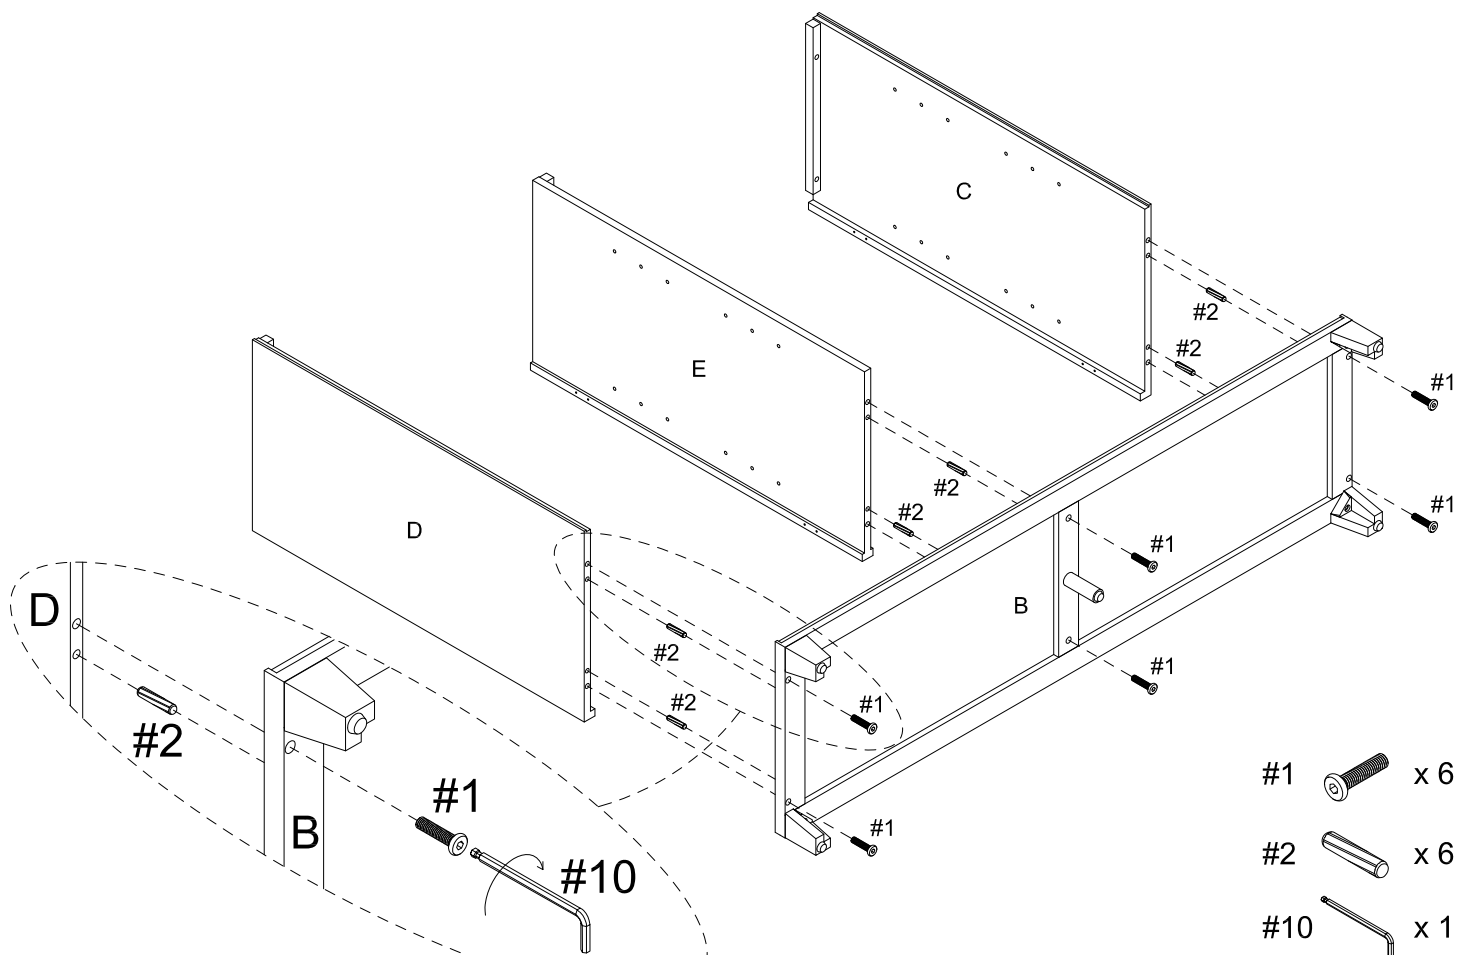
Step 4. Attach bottom panel (part B) to panels (parts C, D & E) using bolts (part #1), wood dowels (part #2) and allen wrench (part #10).



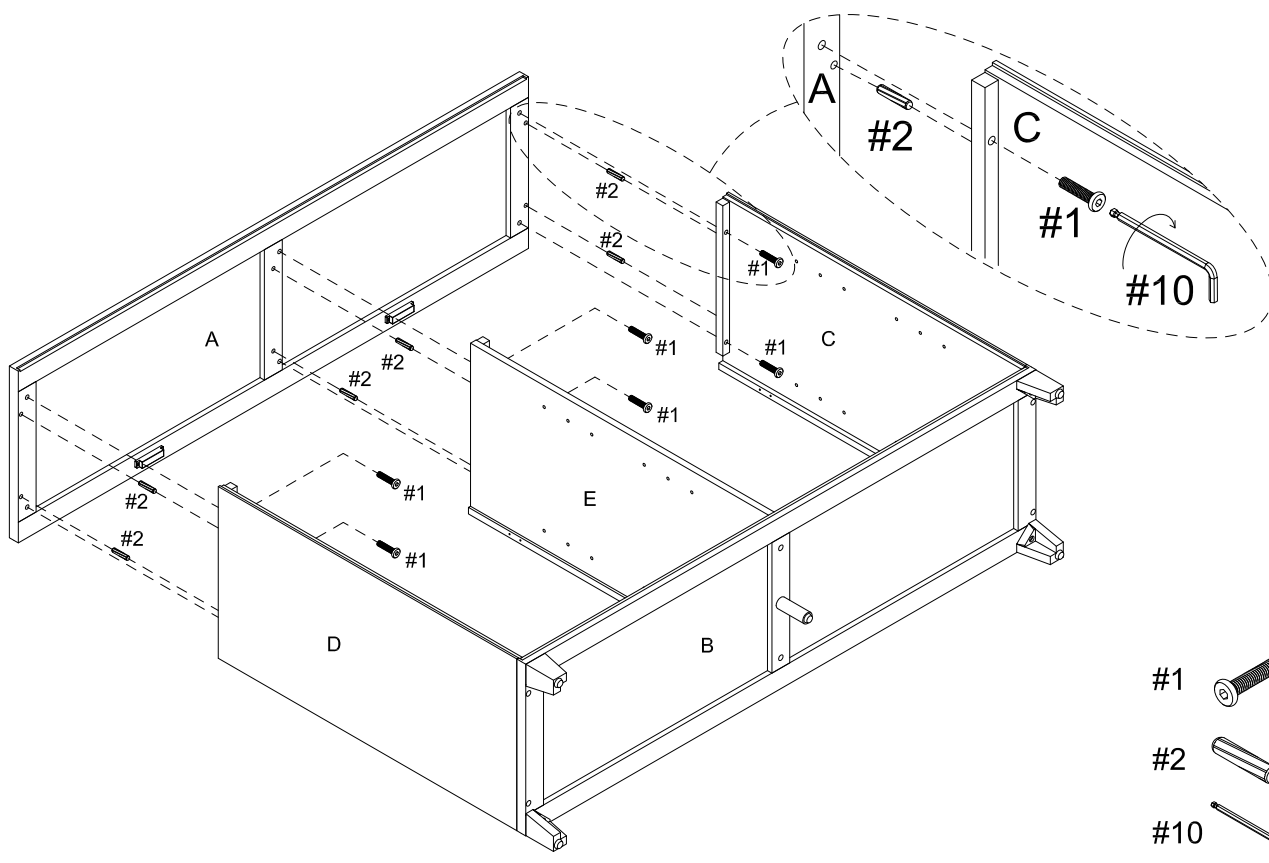
Step 5. Attach top panel (part A) to panels (parts C, D & E) using bolts (part #1) , wood dowels (part #2) and allen wrench (part #10).



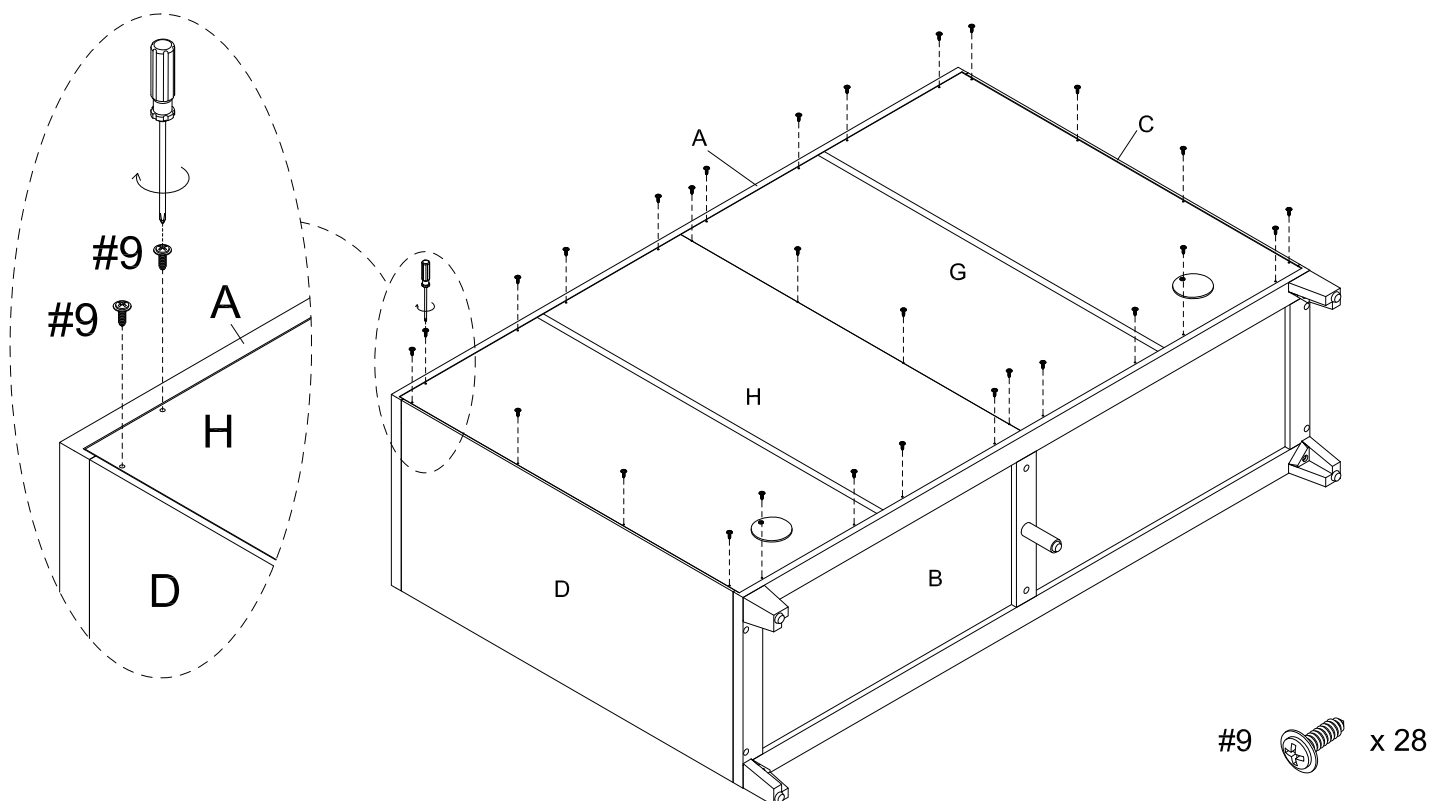Step 6. Attach back panels (parts G & H) to assembled unit (parts A, B, C, D & E) using round head screws (part #9) and phillips headscrewdriver.



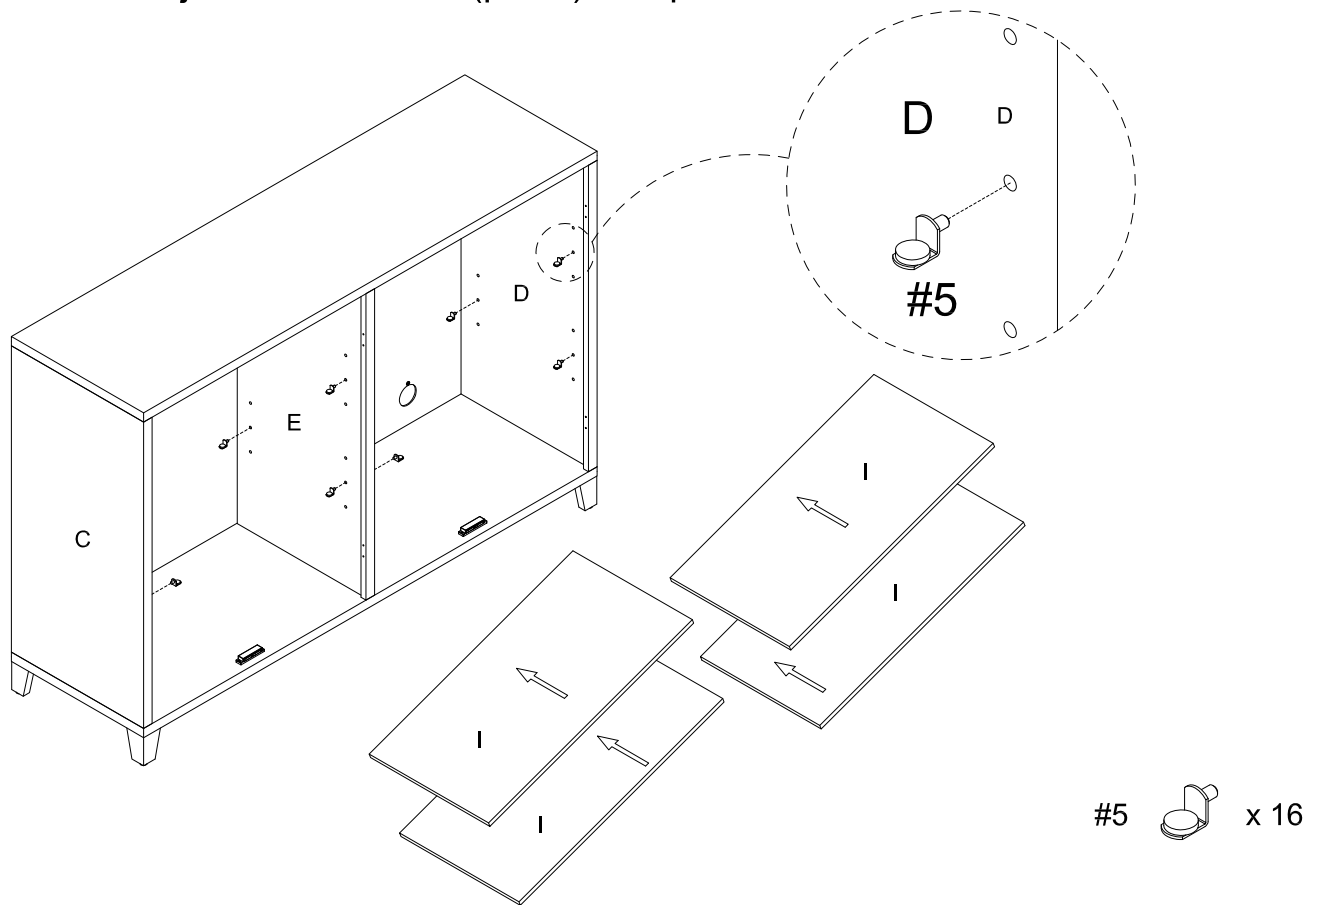
**Step 7.** Carefully turn unit upright. Place shelf holders (part #5) into desired position and slide adjustable shelves (part I) into place.








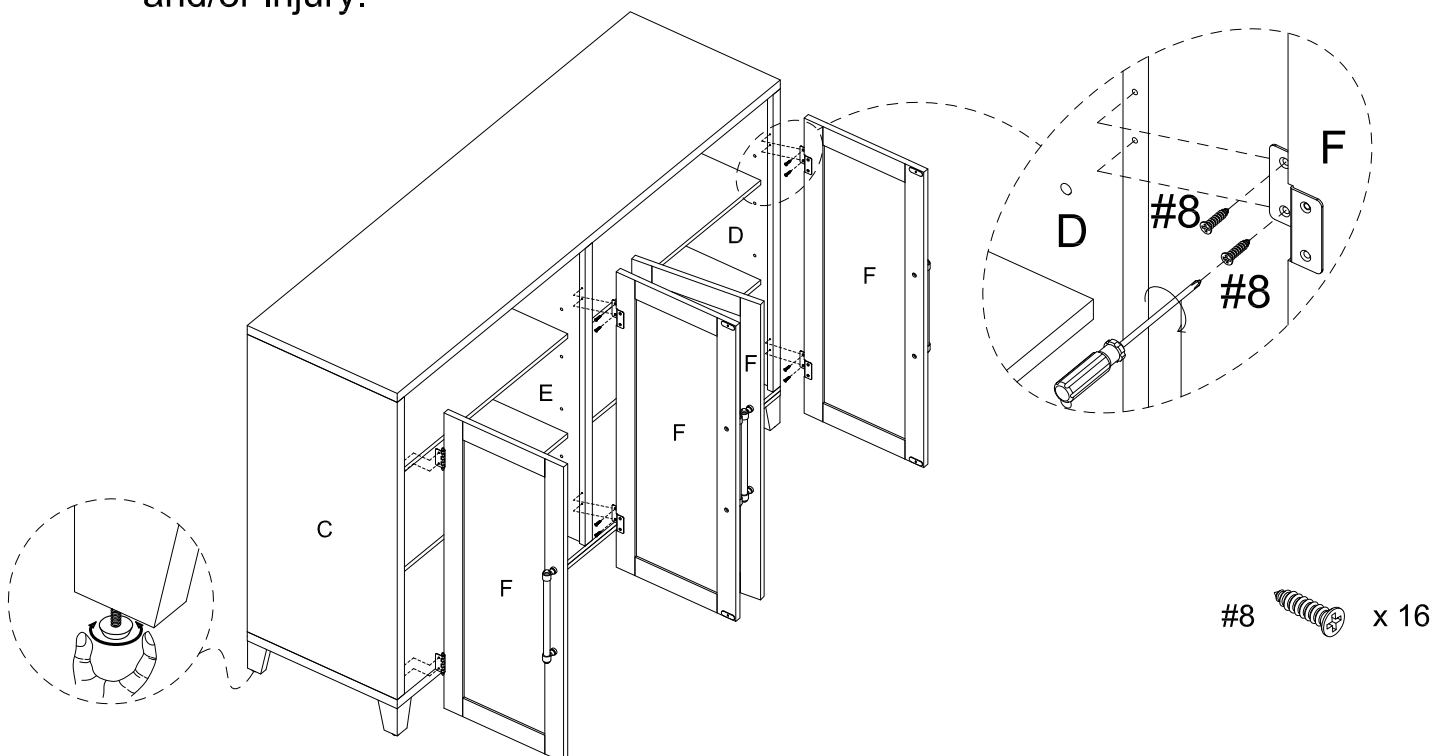
**Step 8.** Attach door panels (part F) to assembled unit (parts C, D & E) using short screws (part #8) and phillips head screwdriver.

**Note:** It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjustable leveler as needed until it's firmly in contact with the floor in new location.

**Important:** Safety strap kit (part #11) must be installed to prevent tipping, damage and/or injury.



#11	A	B	C	D	E
	 1-1/2"xØ4xD8		 5/8"xØ3xD8		
Safety Strap Kit 1 SET	Long Screw 1 PC	Wall Anchor 1 PC	Short Screw 1 PC	Safety Wall Strap 1 PC	Flat Washer 1 PC

## SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury

1. Insert short screw (C) through flat washer (E) and safety wall strap (D) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where safety wall strap (D) is attached. Tap wall anchor (B) into the hole.
3. Insert long screw (A) through safety wall strap (D) into wall anchor (B) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

