



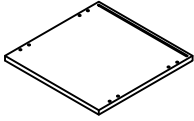







CROSLEY
FURNITURE


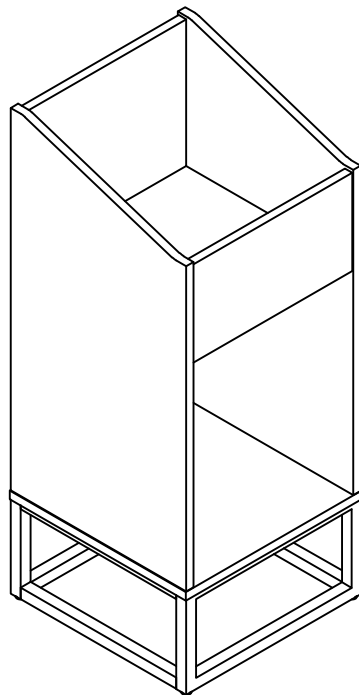







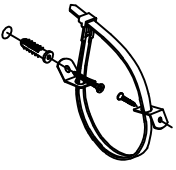
Small Record Storage Stand
CF1132



PARTS LIST


A2	B2	C2	D2	E2
				
Fixed Shelf Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Front Panel 1 PC
F2	G2	H2	I2	
				
Upper Back Panel 1 PC	Lower Back Panel 1 PC	Metal Leg Frame 2 PCS	Metal Bar 4 PCS	

HARDWARE LIST

#1	#2	#3	#4	#5
				
1/4"*12mm	7*38mm			8*30mm
Bolt 12 PCS (Extra 1)	Screw 4 PCS (Extra 1)	Cam Bolt 8 PCS (Extra 1)	Cam Lock 8 PCS (Extra 1)	Wood Dowel 10 PCS (Extra 1)
#6	#7	#8	#9	#10
				
	3*15mm		M4	
Back Bracket 4 PCS (Extra 1)	Short Screw 4 PCS (Extra 1)	Cam Sticker 8 PCS (Extra 1)	Allen Wrench 1 PC	Safety Strap Kit 1 SET

ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.





Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Screw cam bolts (part #3) into panels (parts B2 & C2) using phillips head screwdriver.



Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

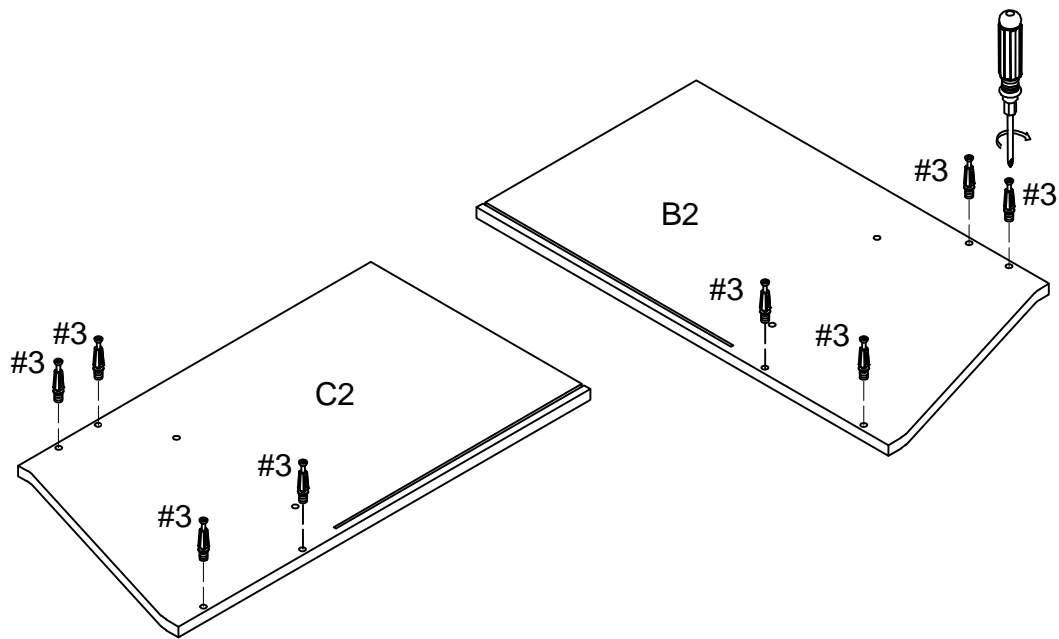

#3  x8

Step 2. Attach panels (parts A2 & E2) to left panel (part B2) using cam locks (part #4), wood dowels (part #5) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

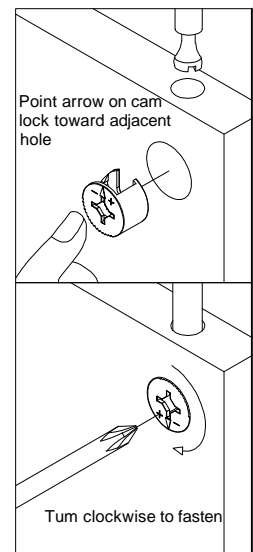
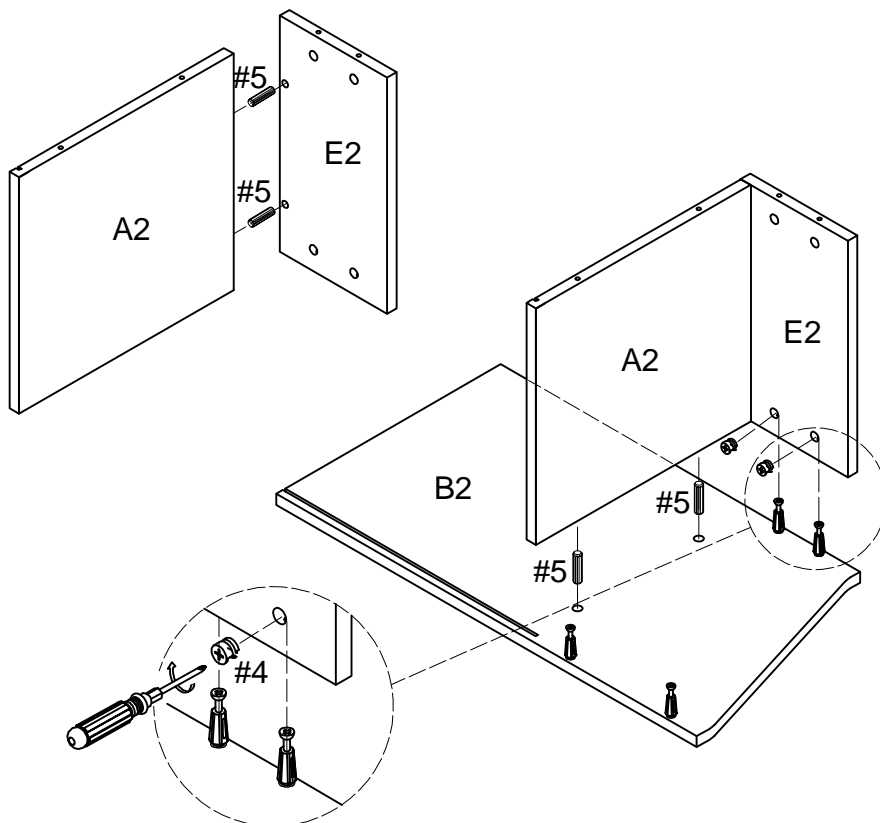


#4  x2

#5  x4

Step 3. Attach upper back panel (part F2) to left panel (part B2) using cam locks (part #4) and phillips head screwdriver.



Note: Cam locks must rotate a full 180°. See pictured insert.

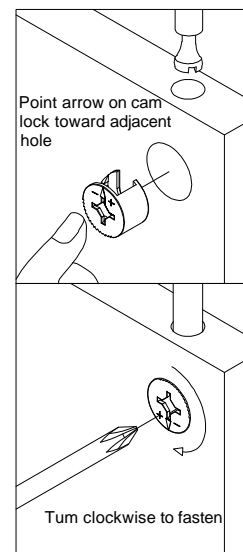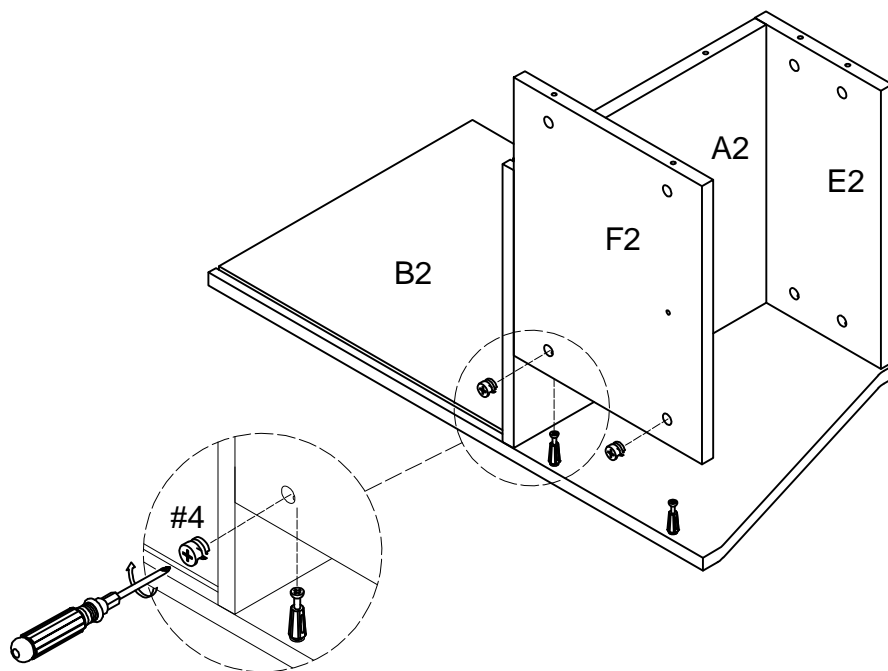

#4  x2

Step 4. Attach right panel (part C2) to assembled unit (parts A2, E2 & F2) using cam locks (part #4), wood dowels (part #5) and phillips head screwdriver.


Note: Cam locks must rotate a full 180°. See pictured insert.

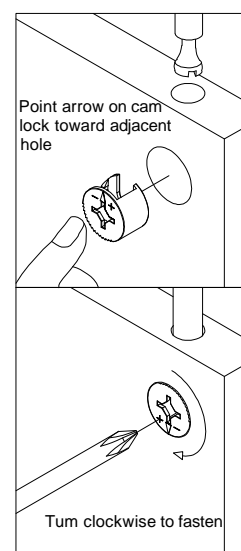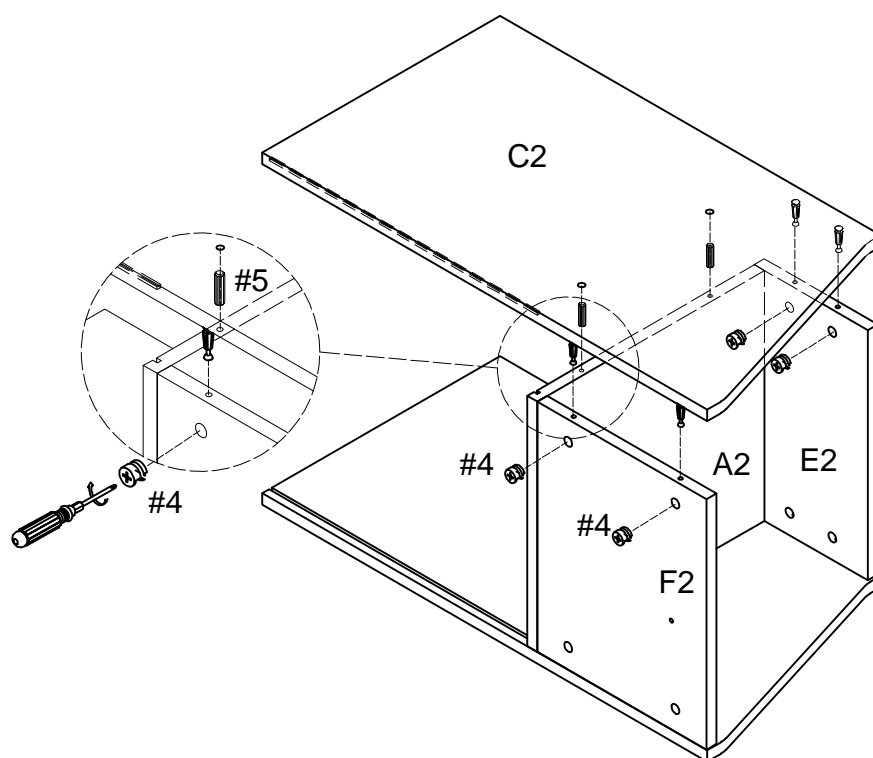


#4  x4

#5  x2


Step 5. Insert lower back panel (part G2) to assembled unit (parts A2, B2 & C2).

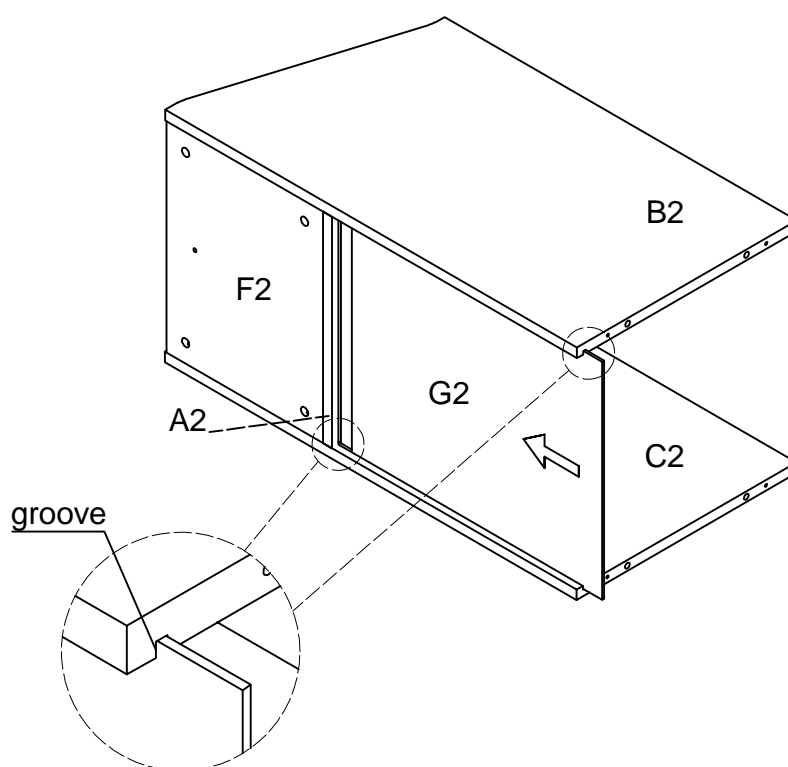


Step 6. Attach bottom panel (part D2) to assembled unit (parts B2, C2 & G2) using screws (part #2), wood dowels (part #5) and allen wrench (part #9).

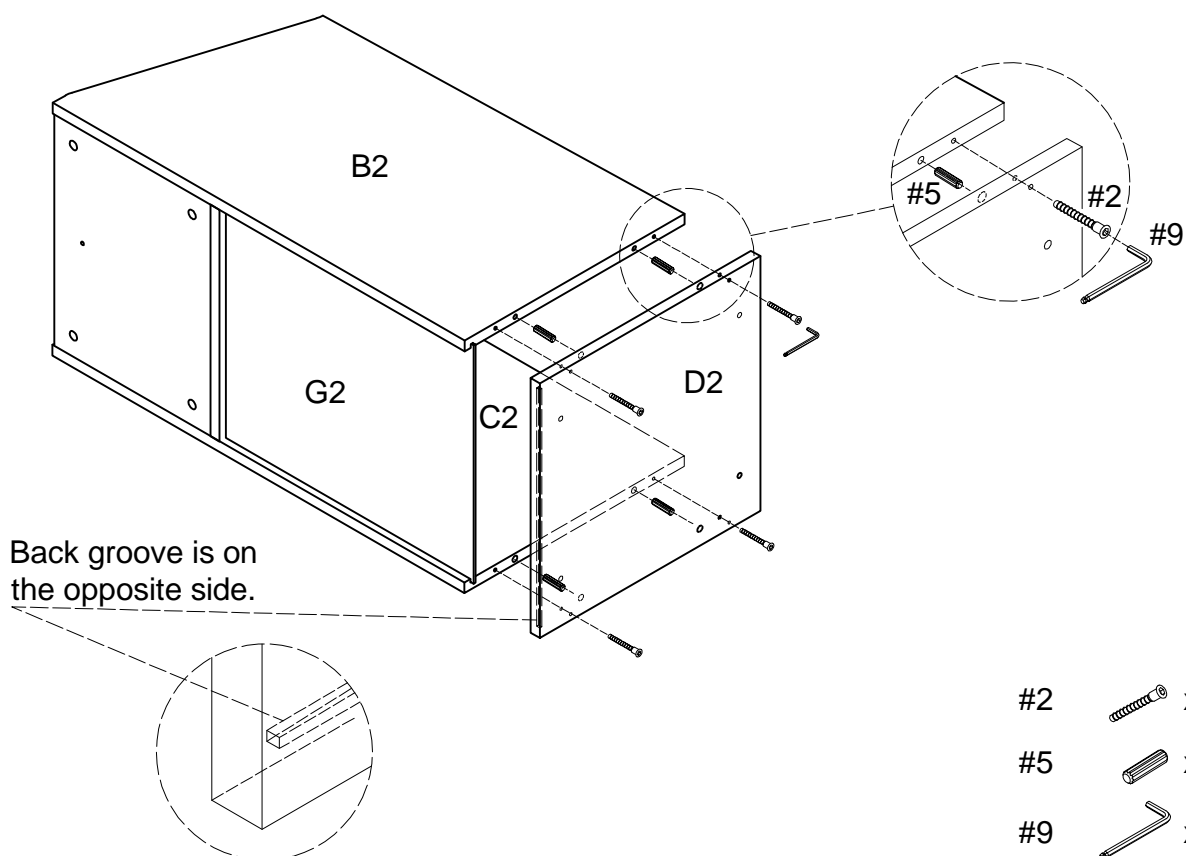


Step 7. Insert metal leg frames (part H2) into metal bars (part I2). Secure using bolts (part #1) and allen wrench (part #9).

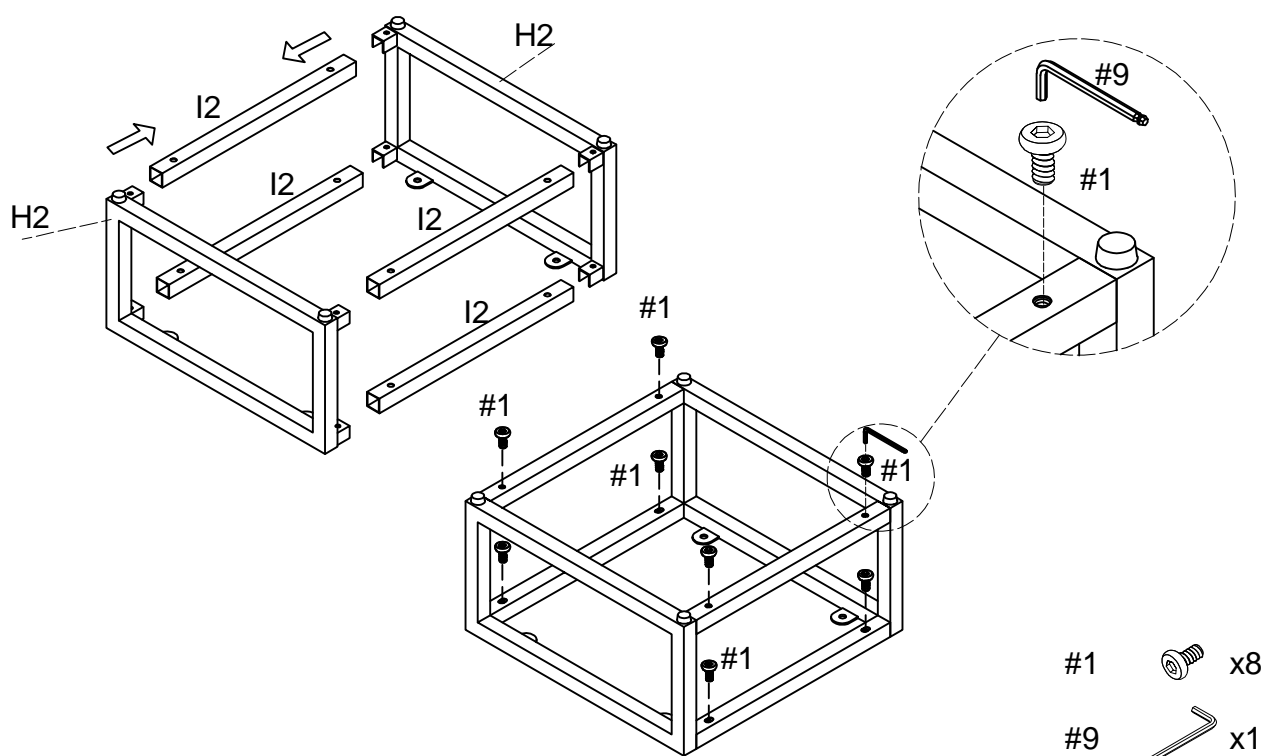

Step 8. Attach assembled unit (parts H2 & I2) to bottom panel (part D2) using bolts (part #1) and allen wrench (part #9).

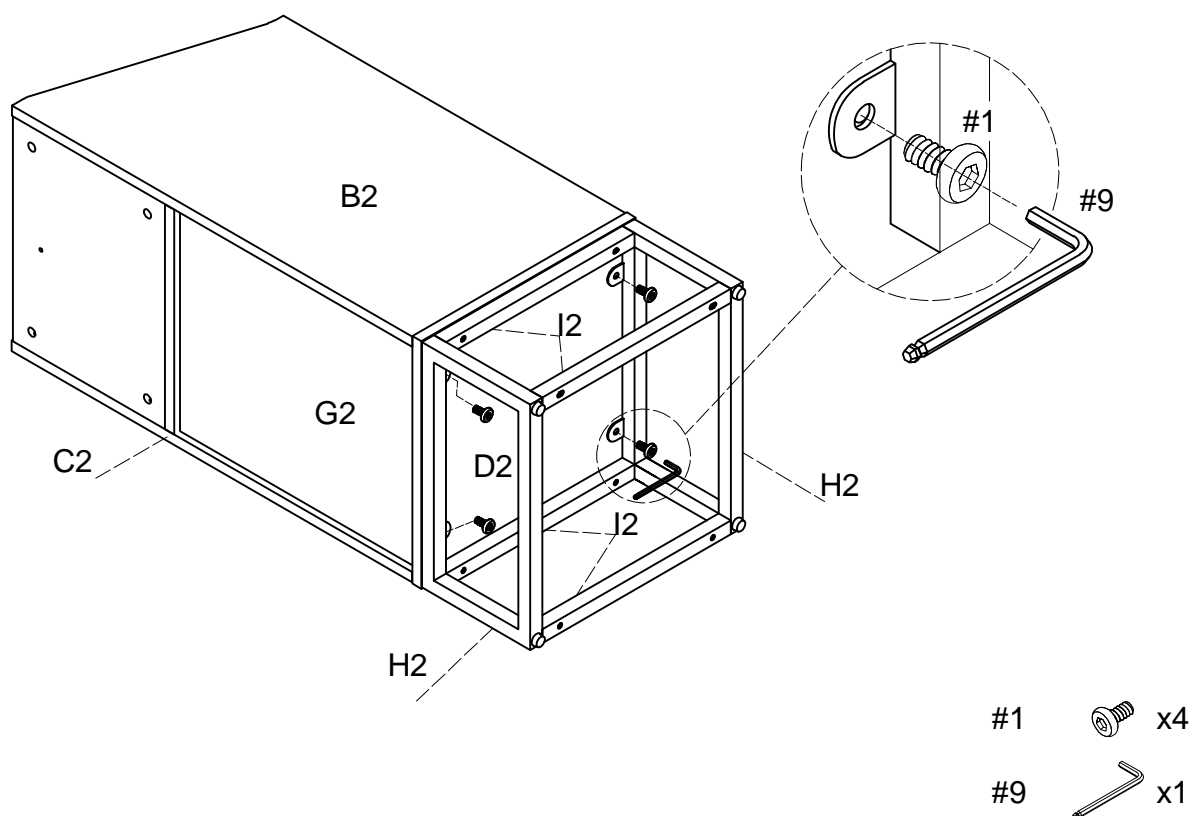

Step 9. Secure back brackets (part #6) at the corner of lower back panel (part G2) using short screws (part #7) and phillips head screwdriver.

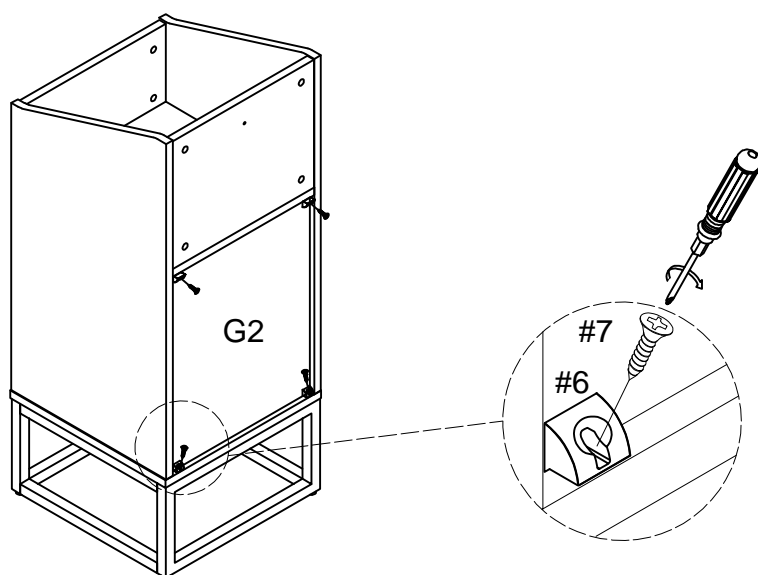

#6  x4



#7  x4

Step 10. Using cam stickers (part #8) cover all cam locks (part #4).







NOTE: It is important to adjust levelers once fully assembled and upright.

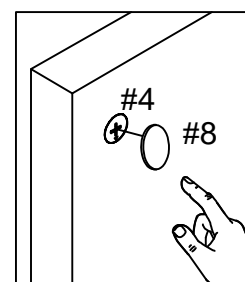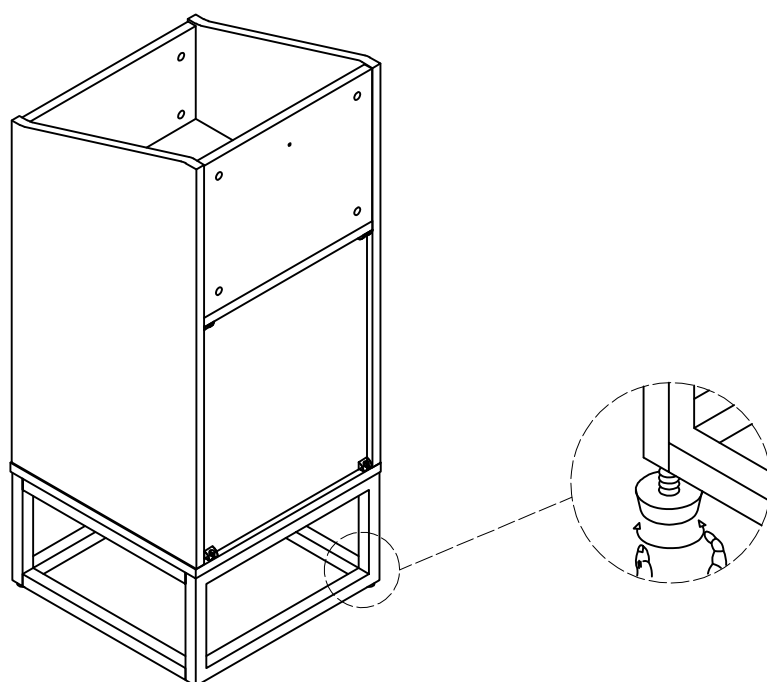Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

Important: Safety strap kit (part #10) must be installed to prevent tipping damage and/or injury.

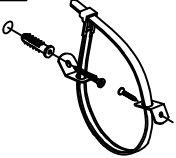

#8  x8


#10	A	B	C	D	E
			 8*3*15mm	 8*4*35mm	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to upper back panel (part F2) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in upper back panel (part F2) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

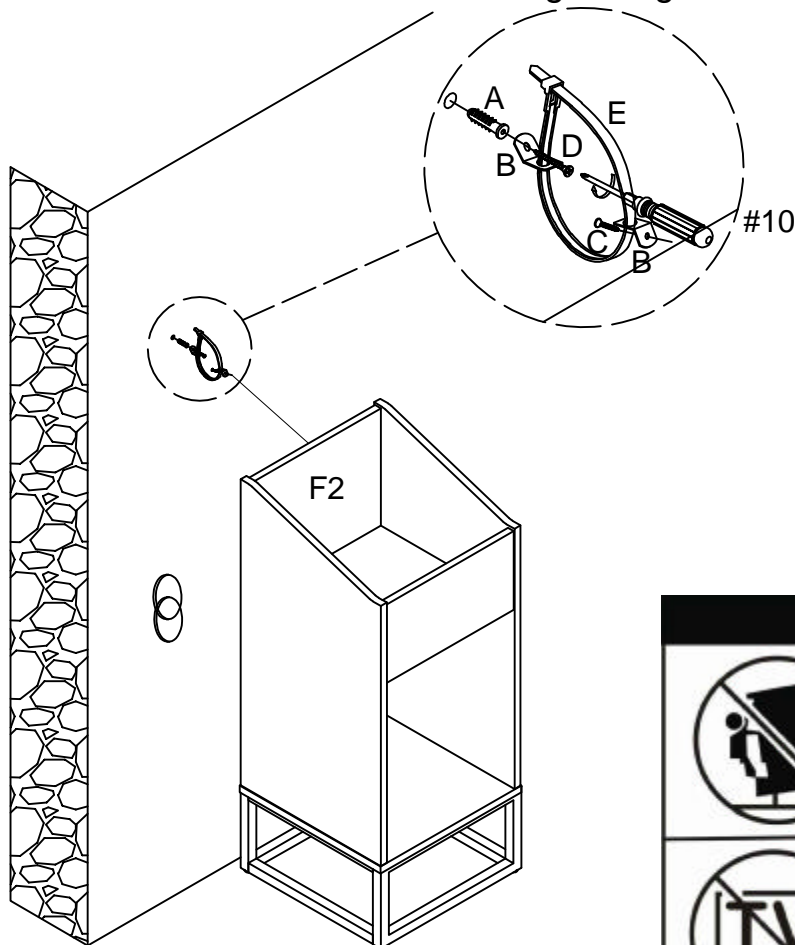

⚠ WARNING	
	<p>Children have died from furniture tipover. To reduce the risk of furniture tipover:</p> <ul style="list-style-type: none"> • ALWAYS install tipover restraint provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers.
	<p>This is a permanent label. Do not remove!</p>