
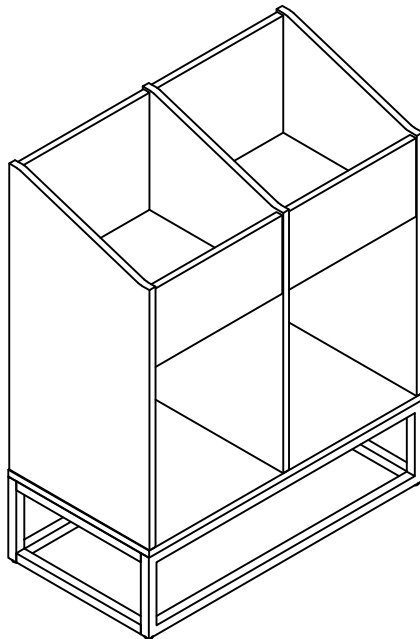



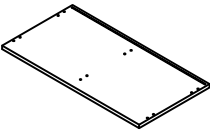



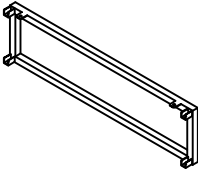

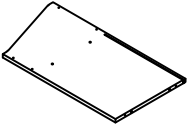



CROSLEY
FURNITURE











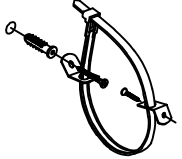
Medium Record Storage Stand
CF1133



PARTS LIST


<div>A2</div> <div></div>	<div>B2</div> <div></div>	<div>C2</div> <div></div>	<div>D2</div> <div></div>	<div>E2</div> <div></div>
Fixed Shelf Panel 2 PCS	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Right Front Panel 1 PC
<div>F2</div> <div></div>	<div>G2</div> <div></div>	<div>H2</div> <div></div>	<div>I2</div> <div></div>	<div>J2</div> <div></div>
Right Upper Back Panel 1 PC	Lower Back Panel 2 PCS	Metal Leg Frame 2 PCS	Metal Bar 4 PCS	Partition Panel 1 PC
<div>K2</div> <div></div>	<div>L2</div> <div></div>			
Left Upper Back Panel 1 PC	Left Front Panel 1 PC			

HARDWARE LIST

#1  1/4"*12mm Bolt 12 PCS (Extra 1)	#2  7*38mm Screw 6 PCS (Extra 1)	#3  Cam Bolt 16 PCS (Extra 1)	#4  Cam Lock 16 PCS (Extra 1)	#5  8*30mm Wood Dowel 14 PCS (Extra 1)
#6  8*50mm Long Wood Dowel 2 PCS (Extra 1)	#7  Back Bracket 8 PCS (Extra 1)	#8  3*15mm Short Screw 8 PCS (Extra 1)	#9  Cam Sticker 16 PCS (Extra 1)	#10  M4 Allen Wrench 1 PC
#11  Safety Strap Kit 1 SET				

ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Screw cam bolts (part #3) into panels (parts B2 & C2) using phillips head screwdriver.

Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

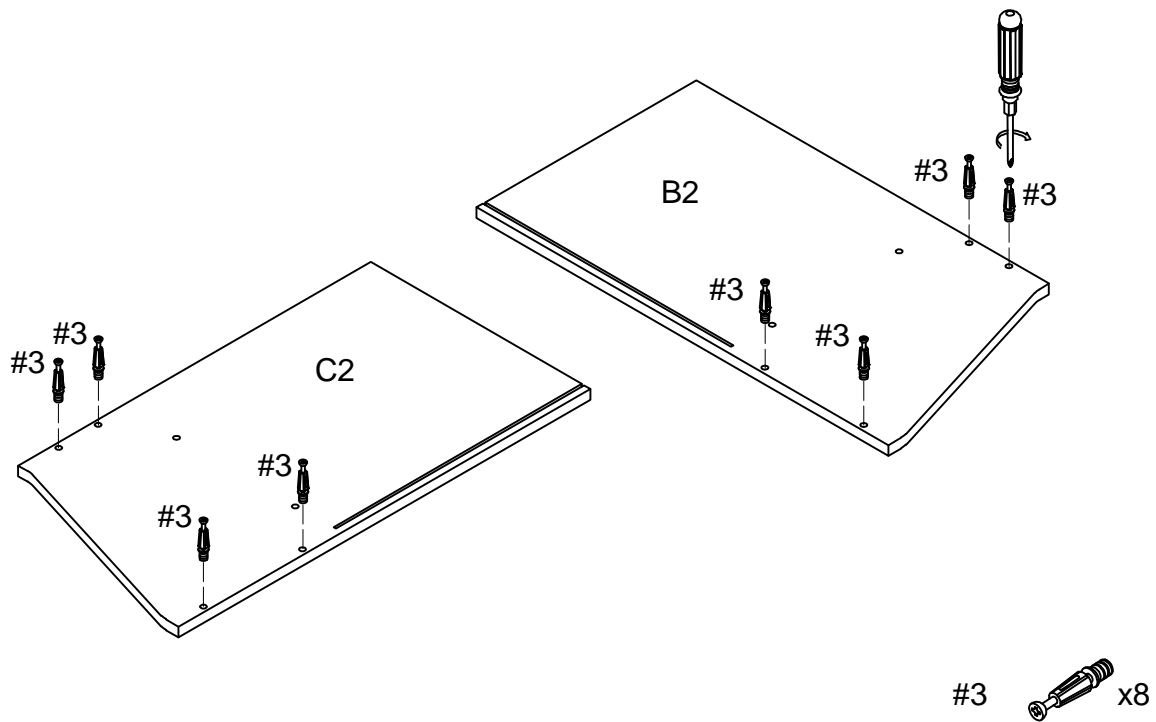



Step 2. Screw cam bolts (part #3) into partition panel (part J2) using phillips head screwdriver.

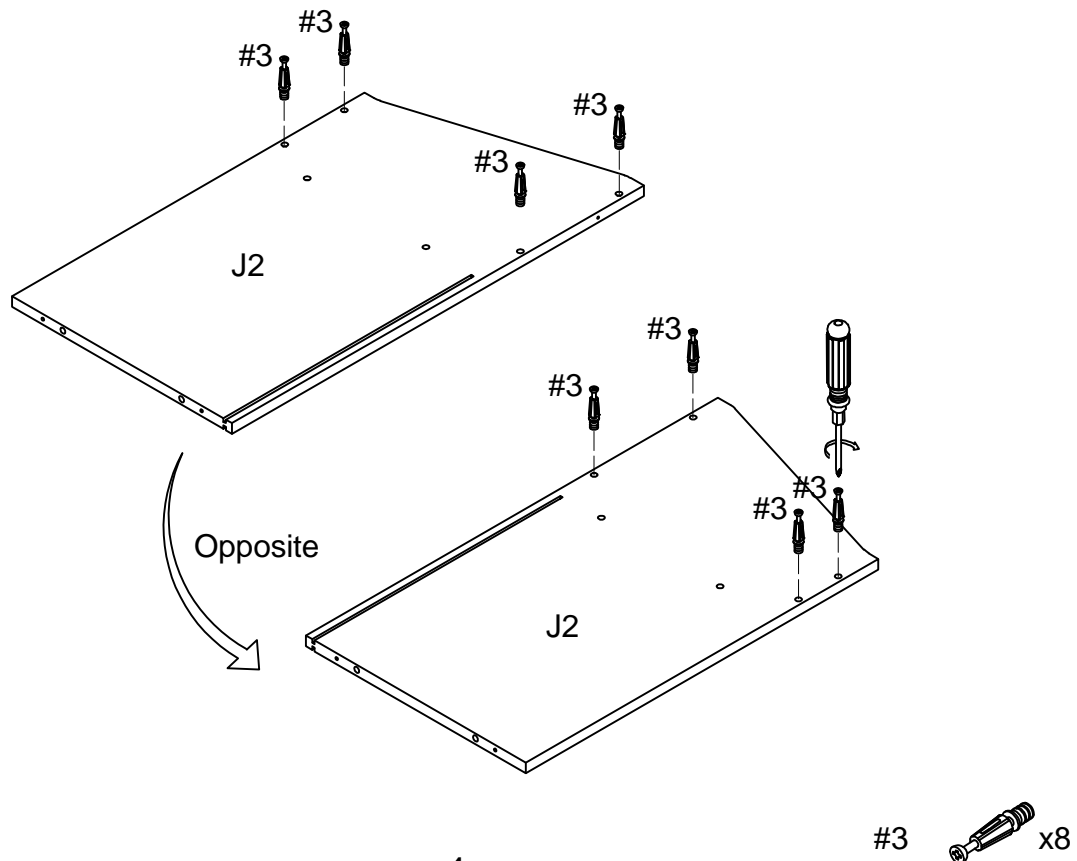

Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.



Step 3. Attach panels (parts A2 & L2) to left panel (part B2) using cam locks (part #4), wood dowels (part #5) and phillips head screwdriver.

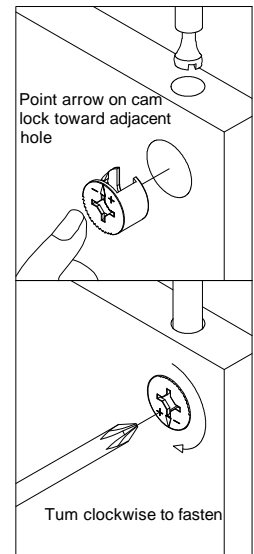
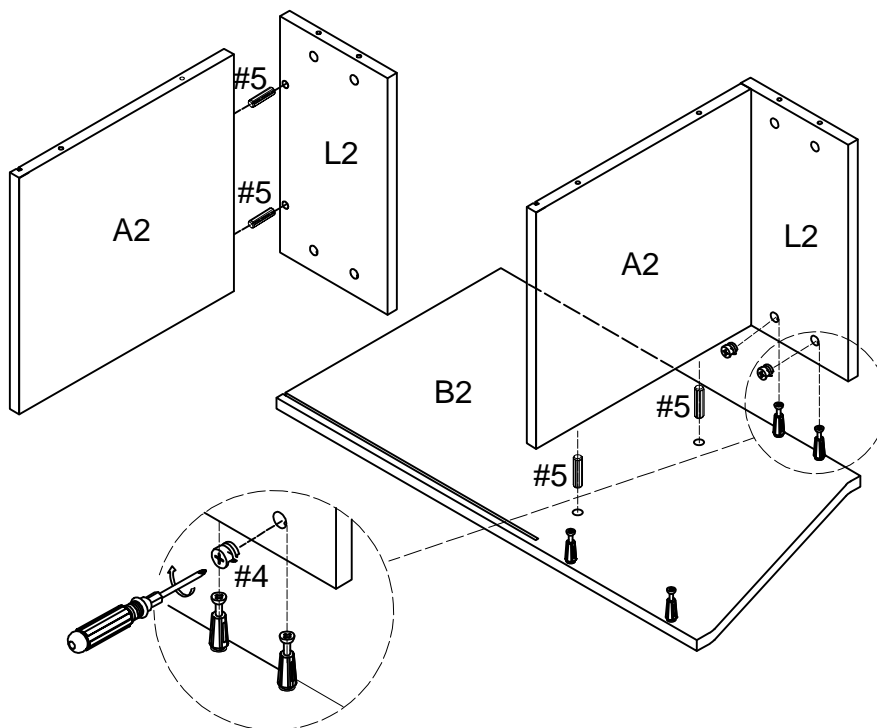
Note: Cam locks must rotate a full 180°. See pictured insert.



#4  x2
#5  x4


Step 4. Attach left upper back (part K2) to left panel (part B2) using cam locks (part #4) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

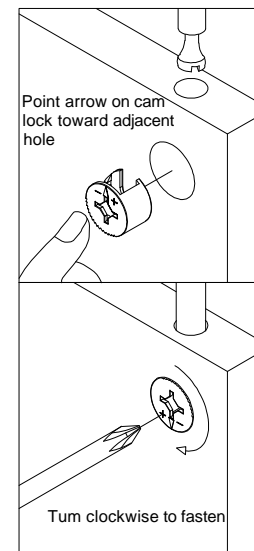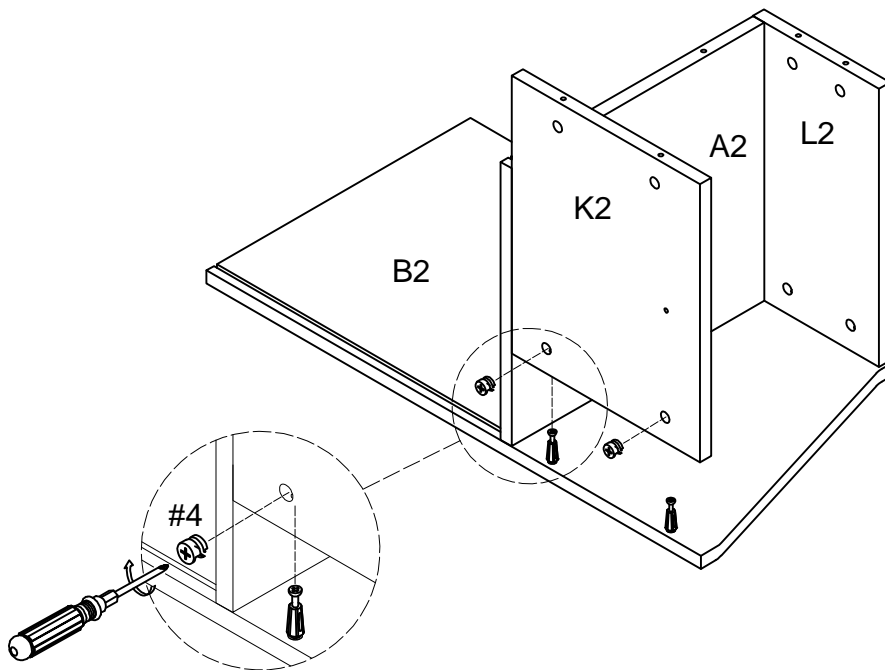


#4  x2

Step 5. Attach partition panel (part J2) to assembled unit (parts A2, K2 & L2) using cam locks (part #4), long wood dowels (part #6) and phillips head screwdriver.
 Note: Cam locks must rotate a full 180°. See pictured insert.


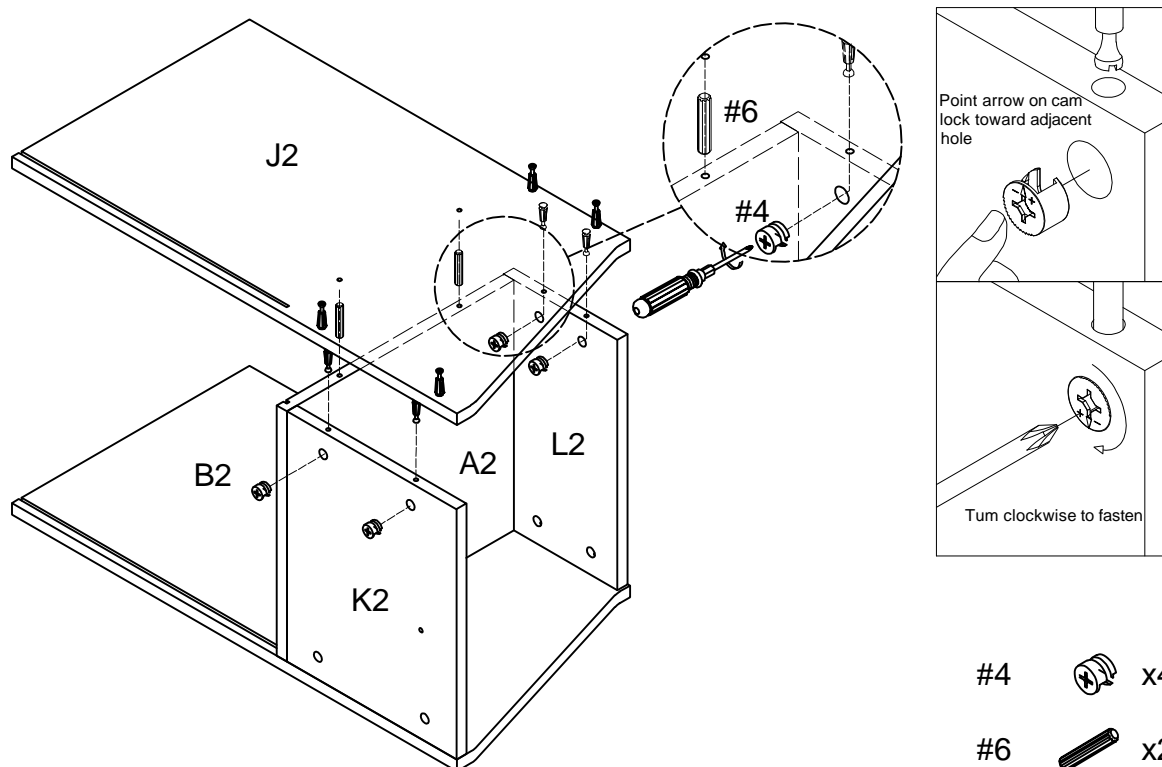


Step 6. Attach panels (parts A2 & E2) to partition panel (part J2) using cam locks (part #4), wood dowels (part #5) and phillips head screwdriver.
 Note: Cam locks must rotate a full 180°. See pictured insert.

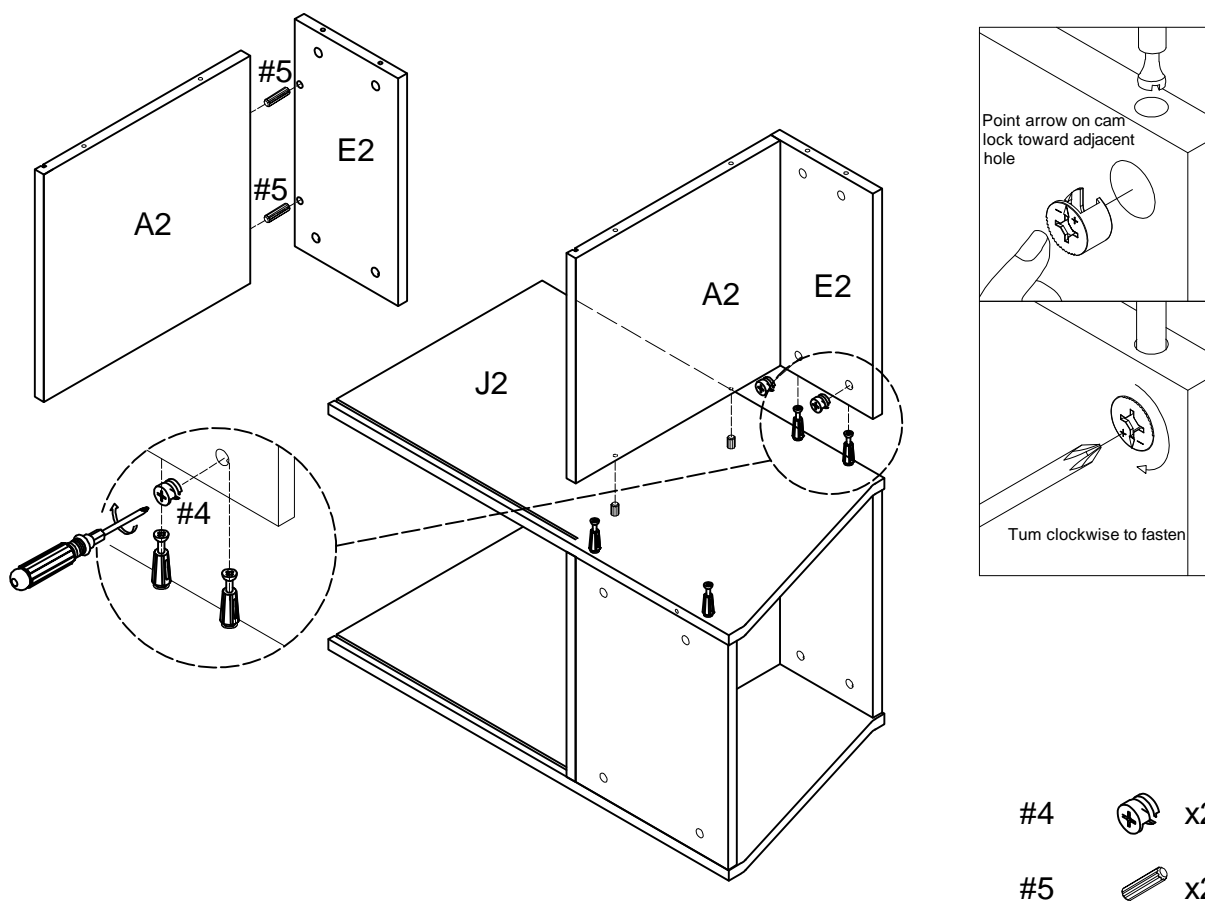

Step 7. Attach right upper back panel (part F2) to partition panel (part J2) using cam locks (part #4) and phillips head screwdriver.



Note: Cam locks must rotate a full 180°. See pictured insert.

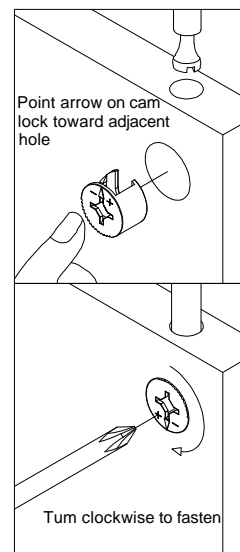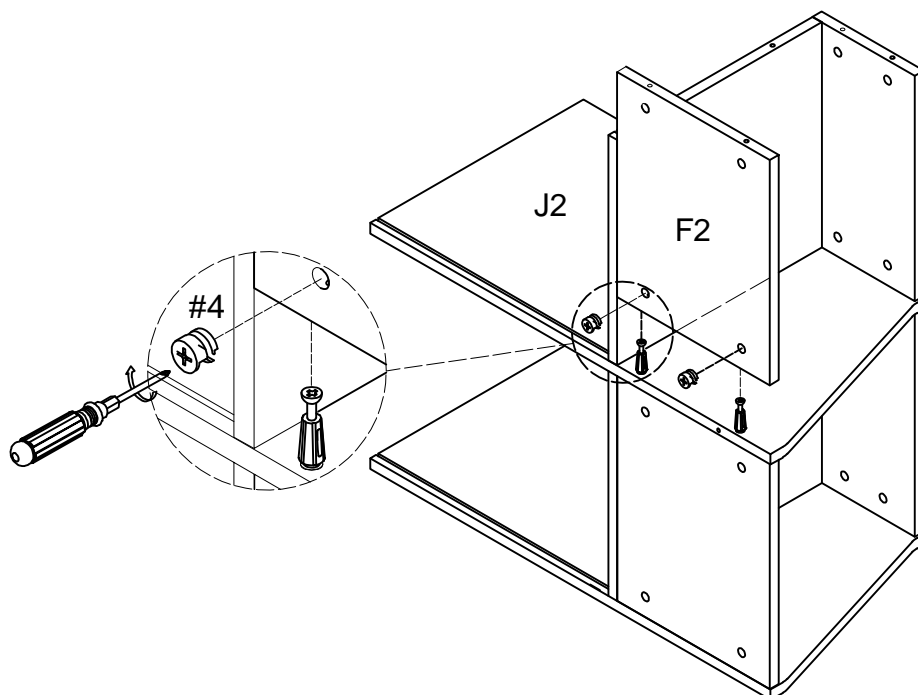

#4  x2

Step 8. Attach right panel (part C2) to assembled unit (parts A2, E2 & F2) using cam locks (part #4), wood dowels (part #5) and phillips head screwdriver.


Note: Cam locks must rotate a full 180°. See pictured insert.

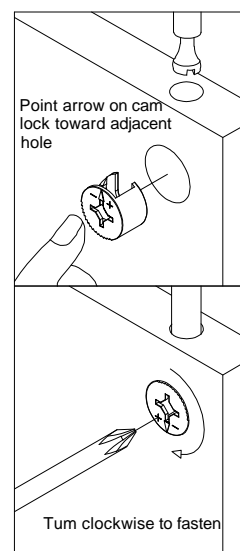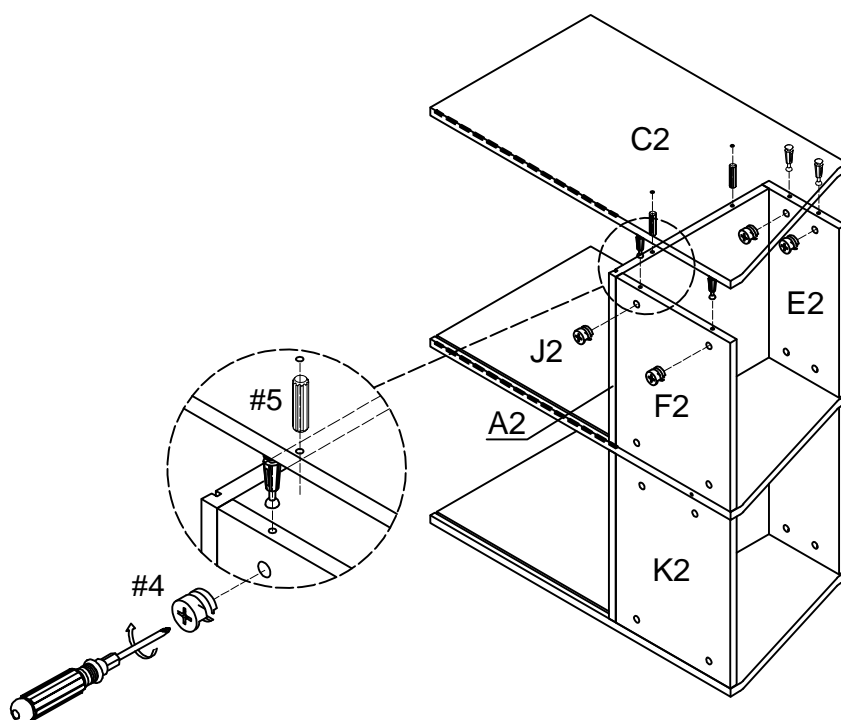


#4  x4

#5  x2


Step 9. Insert lower back panels (part G2) to assembled unit (parts A2, B2, C2 & J2).

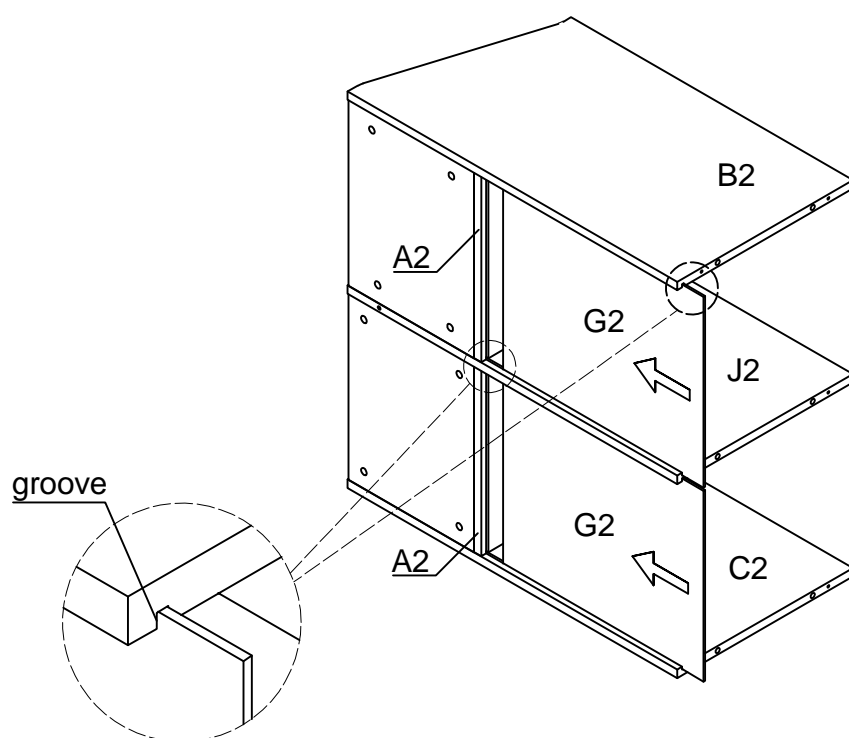


Step 10. Attach bottom panel (part D2) to assembled unit (parts B2, C2, G2 & J2) and using wood dowels (part #5), screws (part #2) and allen wrench (part #10).

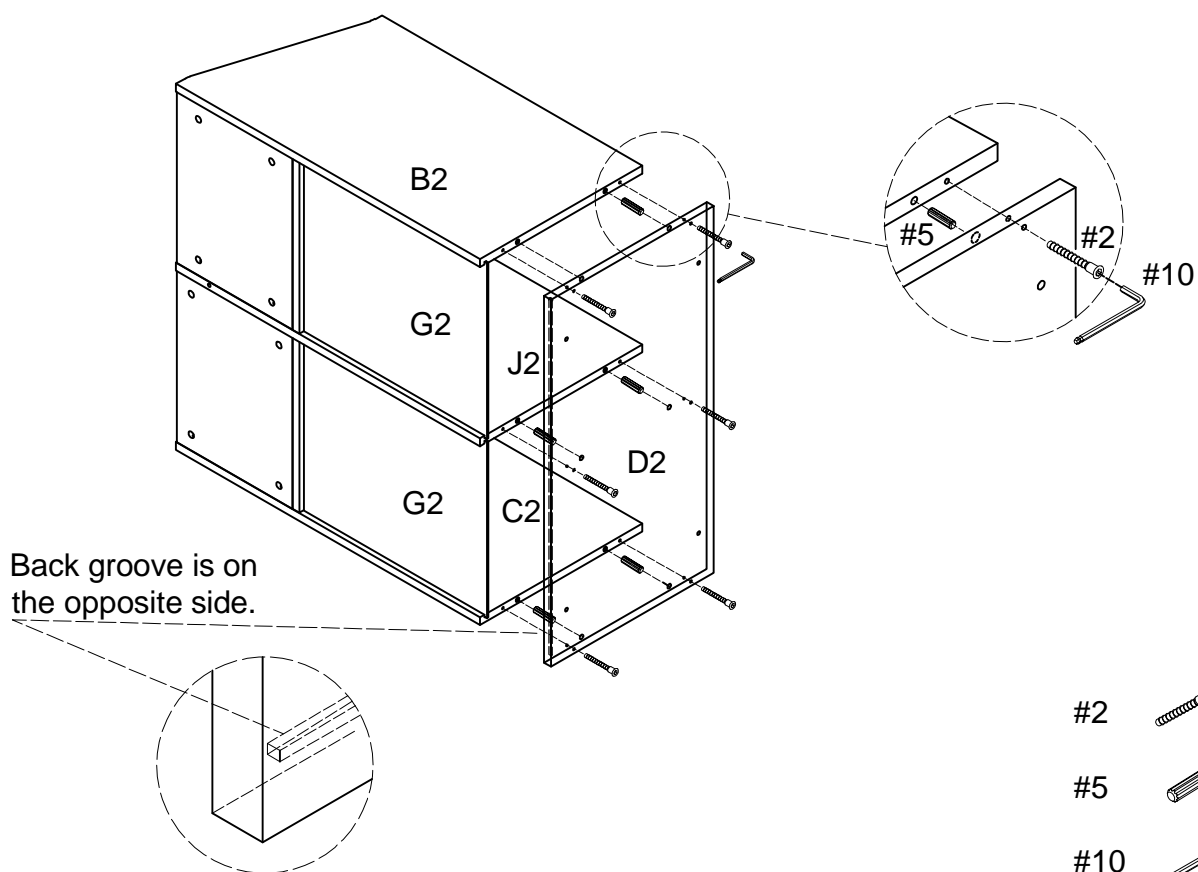


Step 11. Insert metal leg frames (part H2) into metal bars (part I2). Secure using bolts (part #1) and allen wrench (part #10).

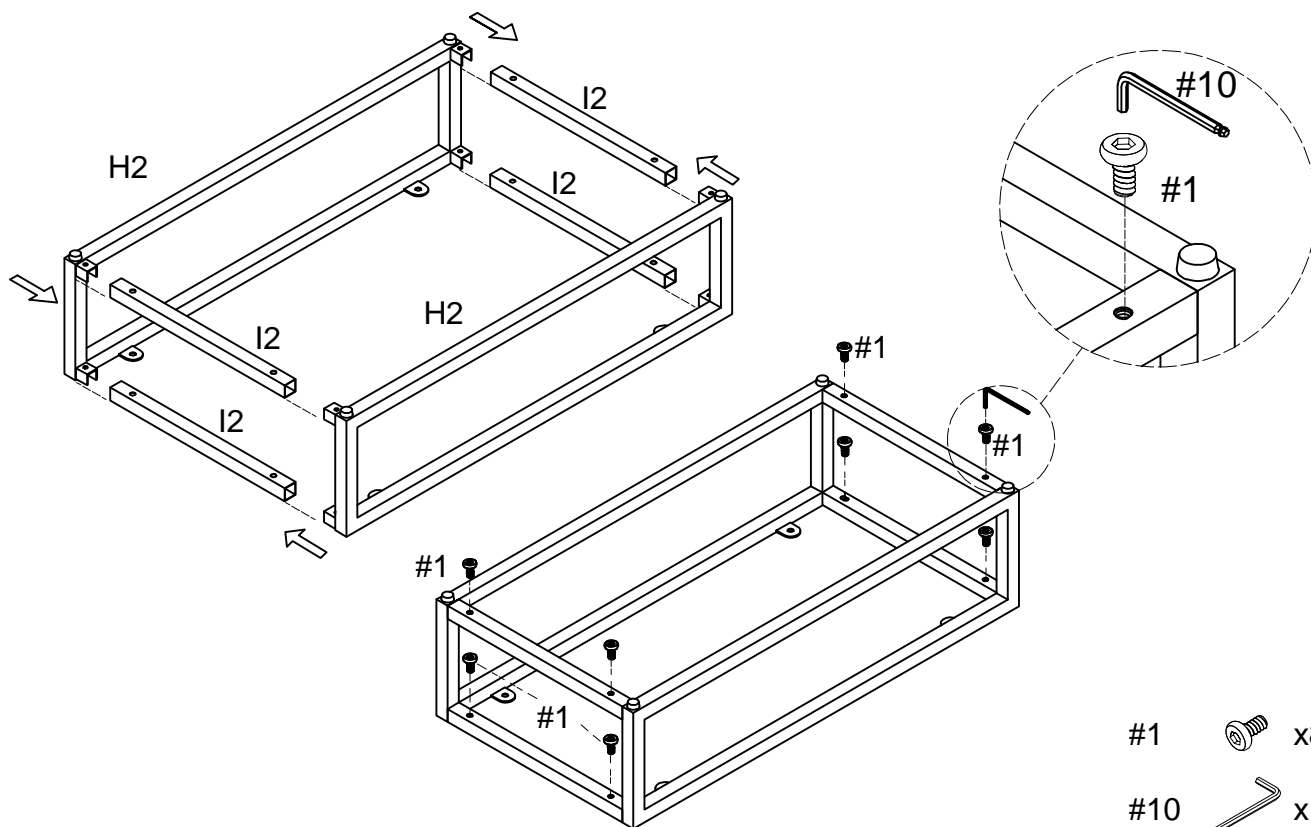

Step 12. Attach assembled unit (parts H2 & I2) to bottom panel (part D2) using bolts (part #1) and allen wrench (part #10).

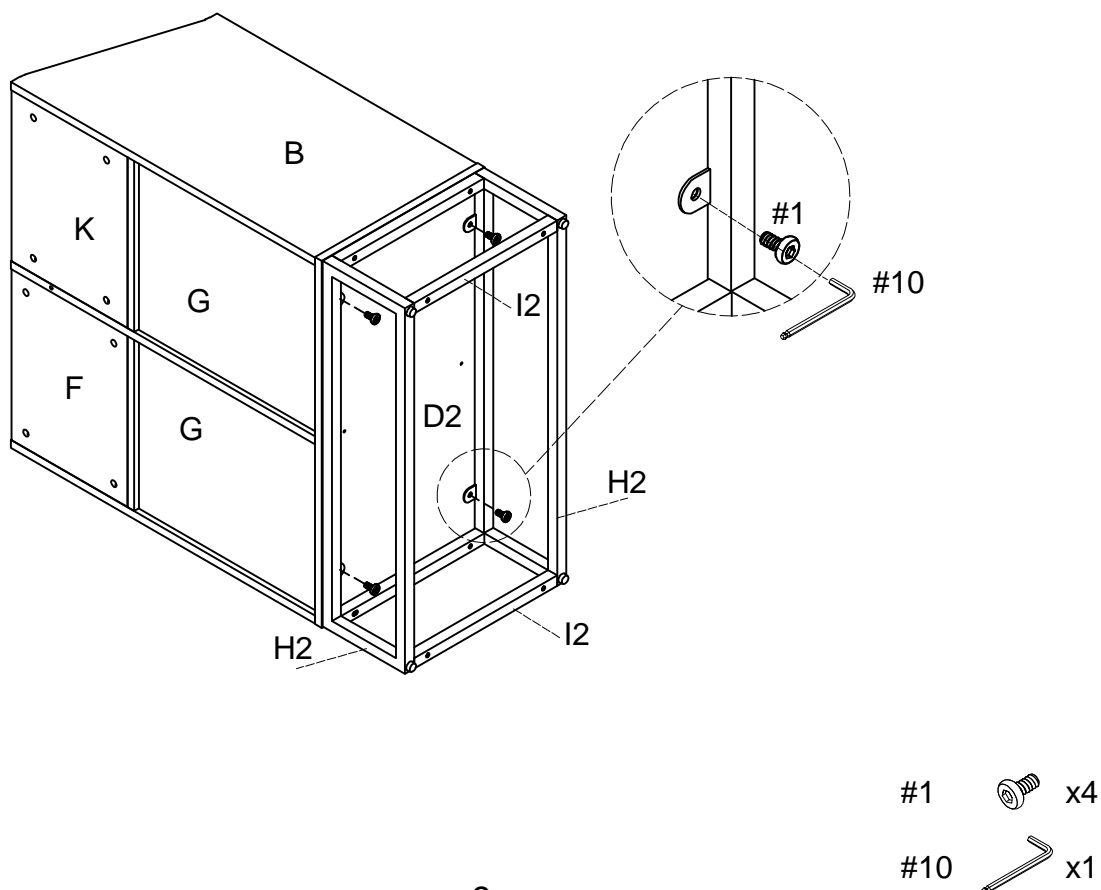


Step 13. Secure back brackets (part #7) at the corner of lower back panels (part G2) using short screws (part #8) and phillips head screwdriver.

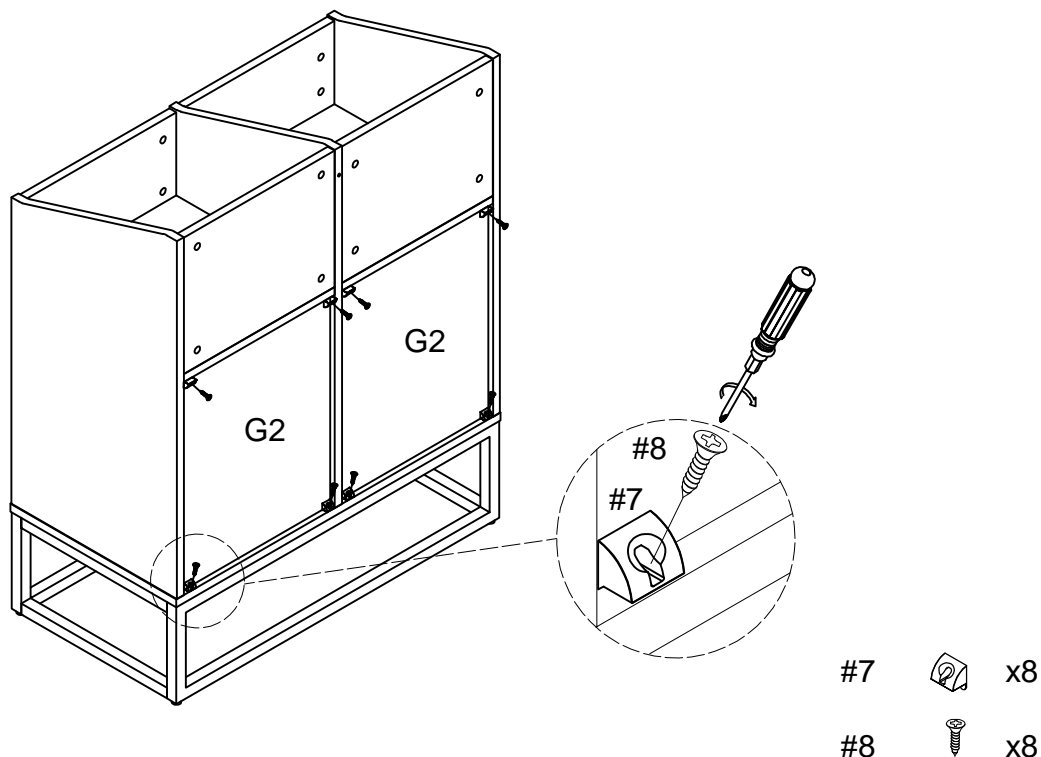







Step 14. Using cam stickers (part #9) cover all cam locks (part #4).

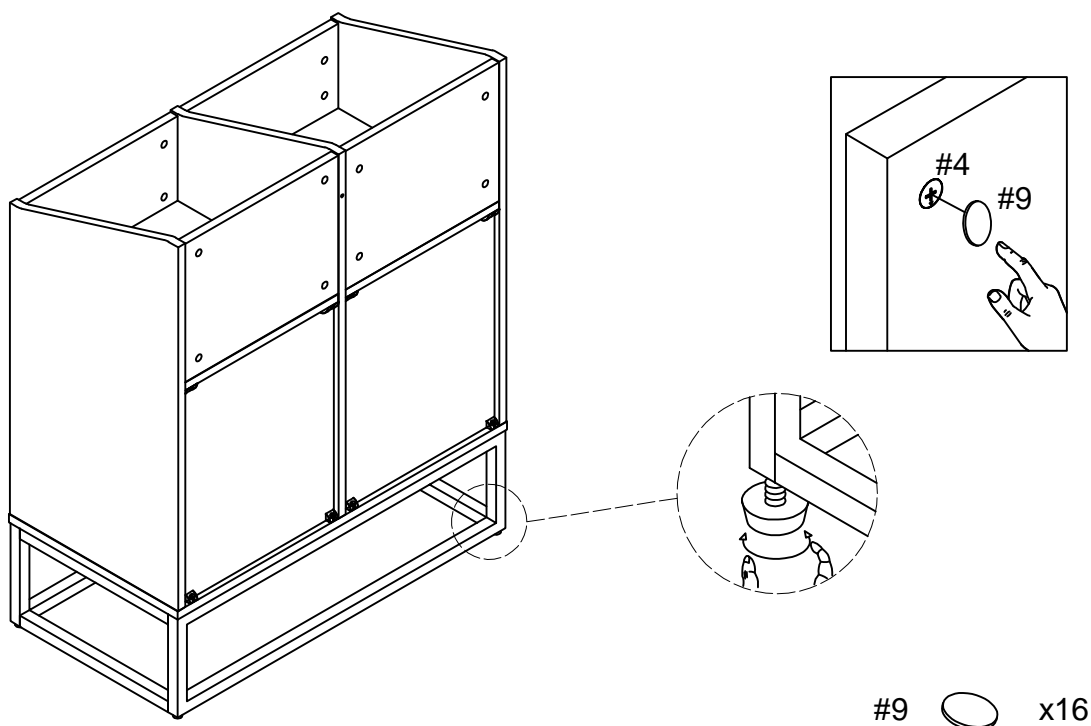NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

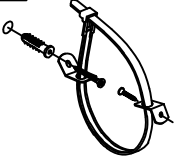Important: Safety strap kit (part #11) must be installed to prevent tipping damage and/or injury.




#11	A	B	C	D	E
			 8*3*15mm	 8*4*35mm	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to partition panel (part J2) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in partition panel (part J2) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

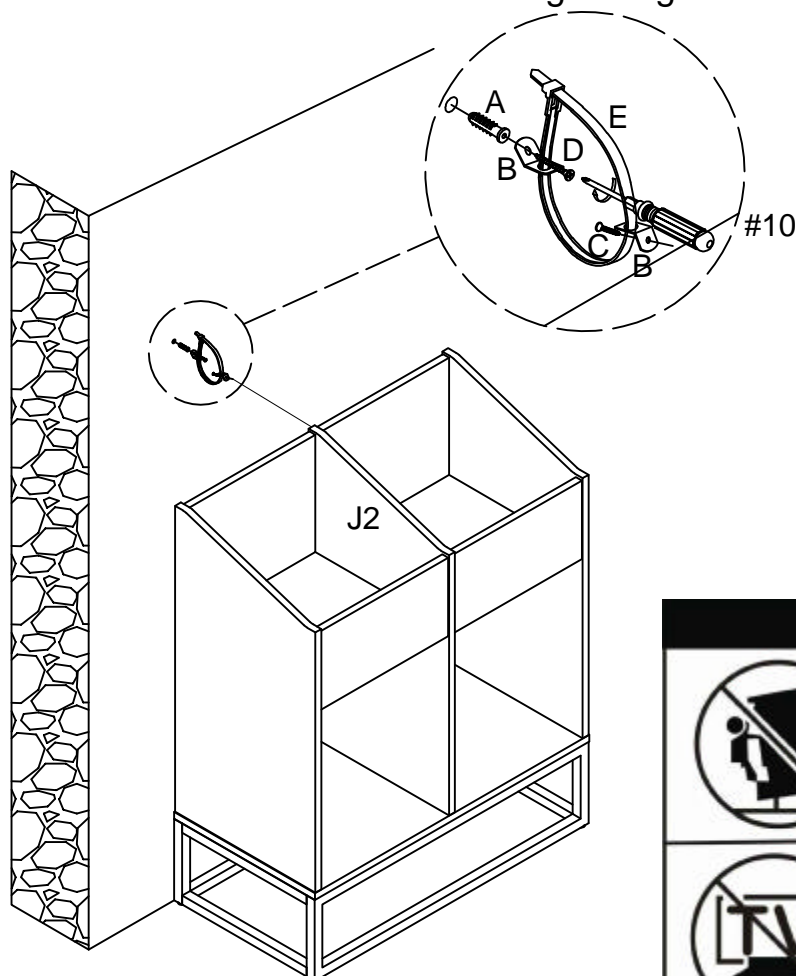

⚠ WARNING	
	<p>Children have died from furniture tipover. To reduce the risk of furniture tipover:</p> <ul style="list-style-type: none"> • ALWAYS install tipover restraint provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers.
	<p>This is a permanent label. Do not remove!</p>