



Record Storage Media Console CF1151

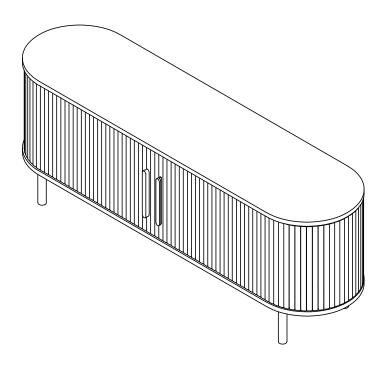

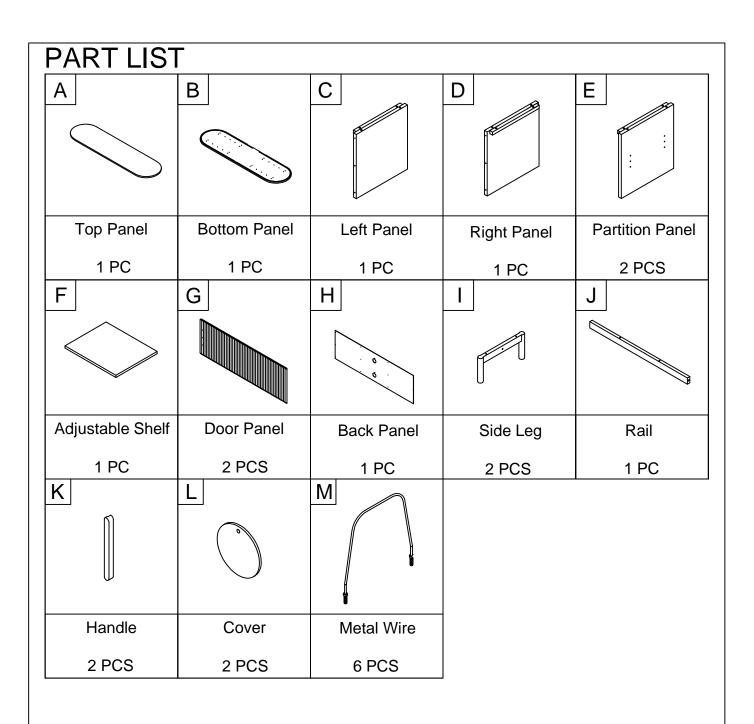

HARDWARE LIST				
#1	#2	#3	#4	#5
		@	0	0
7*38mm	Ø1/4"*25mm	Ø1/4"*51mm	Ø1/4"*11mm	Ø1/4"*13mm
Tapping Bolt	Short Bolt	Long Bolt	Spring Washer	Flat Washer
10 PCS (Extra 1)	8 PCS (Extra 1)	6 PCS (Extra 1)	14 PCS (Extra 1)	14 PCS (Extra 1)
#6	#7	#8	#9	#10
	8*30mm		8*3*12mm	5/32"*16mm
Hex Nut	Wood Dowel	Shelf Holder	Round Head Screw	Round Head Bolt
12 PCS (Extra 1)	16 PCS (Extra 1)	4 PCS (Extra 1)	12 PCS (Extra 1)	6 PCS (Extra 1)
#11	#12	#13	#14	
•			2	
	M4	M2)	
Binding Post	Allen Wrench	Small Allen Wrench	Wrench	
2 SETS (Extra 1)	1 PC	1 PC	1 PC	


ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.




Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Attach metal wires (part M) to bottom panel (part B) using hex nuts (part #6) and wrench (part #14).

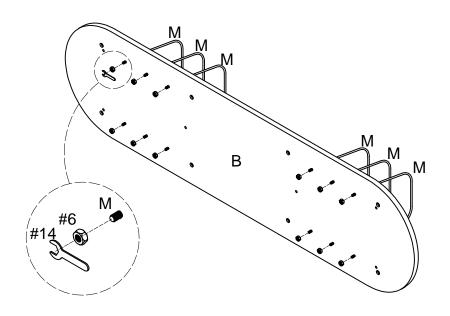

Step 2. Attach covers (part L) to back panel (part H) using binding posts (part #11) and small allen wrench (part #13).

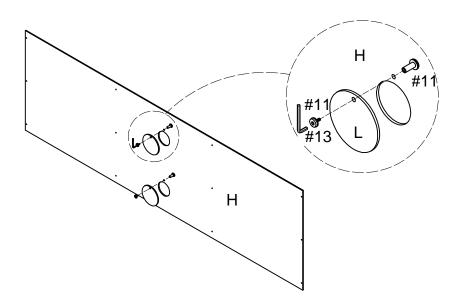


Step 3. Attach handles (part K) to doors (part G) using round head bolts (part #10) and phillips head screwdriver.

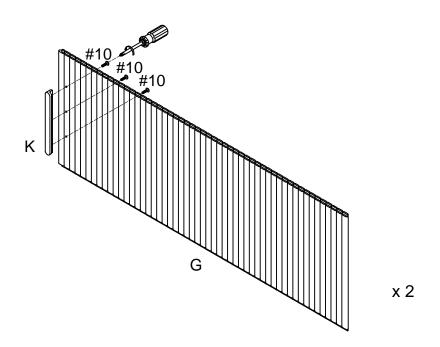


#10 **x** 6

Step 4. Attach side legs (part I) to rail (part J) using tapping bolts (part #1) and allen wrench (part #12).

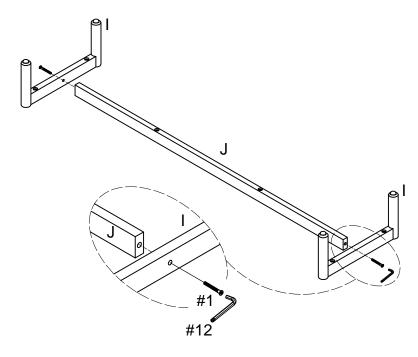


#1 _® x 2 #12 x 1


Step 5. Attach panels (parts C, D & E) to top panel (part A) using wood dowels (part #7), short bolts (part #2), spring washers (part #4), flat washers (part #5) and allen wrench (part #12).

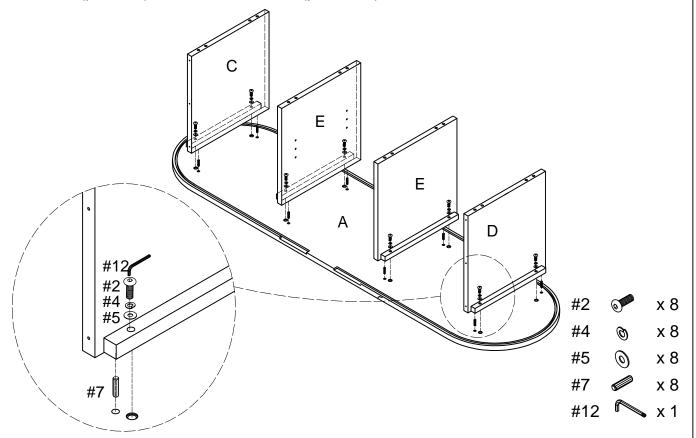


Step 6. Attach bottom panel (part B) to panels (parts C, D & E) using wood dowels (part #7), tapping bolts (part #1) and allen wrench (part #12).

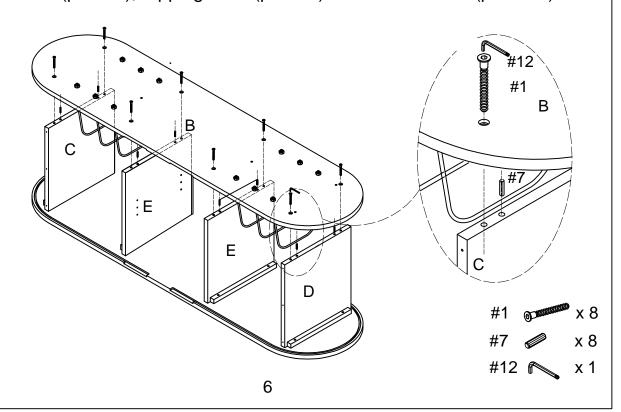


Step 7. Attach assembled unit (parts I & J) to bottom panel (part B) using long bolts (part #3), spring washers (part #4), flat washers (part #5) and allen wrench (part #12).

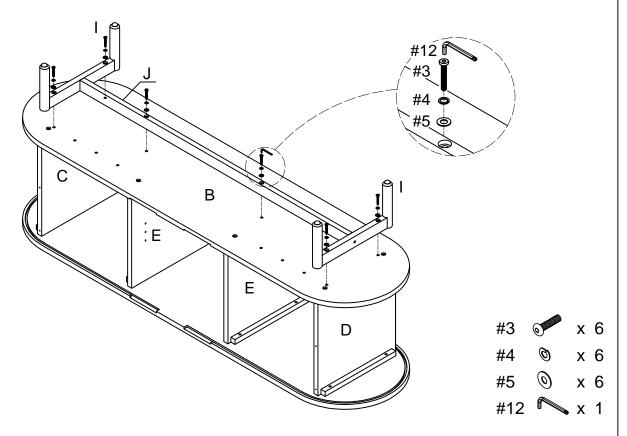


Step 8. Carefully turn unit upright. Attach back panel (part H) to assembled unit (parts C, D & E) using round head screws (part #9) and phillips head screwdriver.

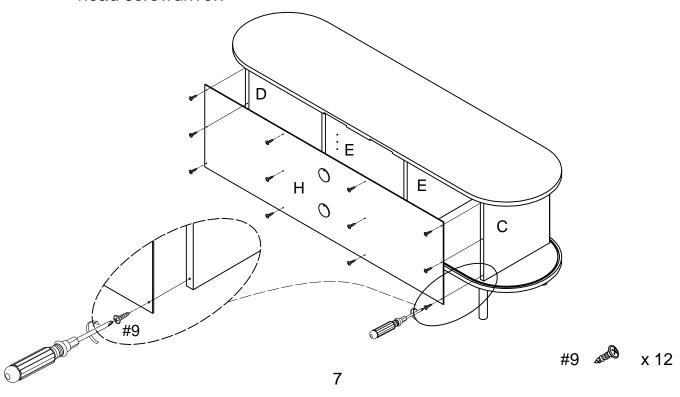

Step 9. Slide door (part G) to the left groove of panels (parts A & B) from the back left opening to the front is the right door.

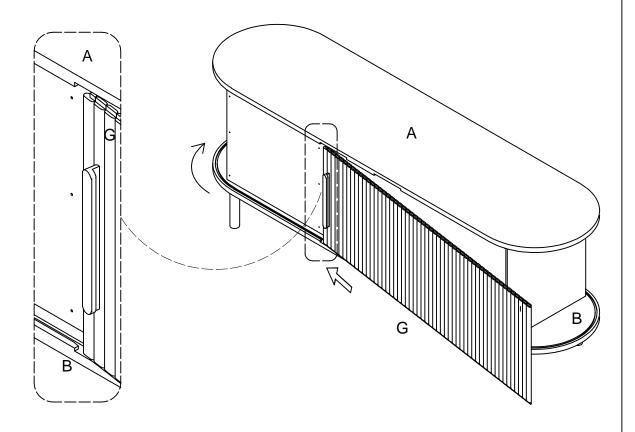

Step 10. Slide door (part G) to the right groove of panels (parts A & B) from the back right opening to the front is the left door.

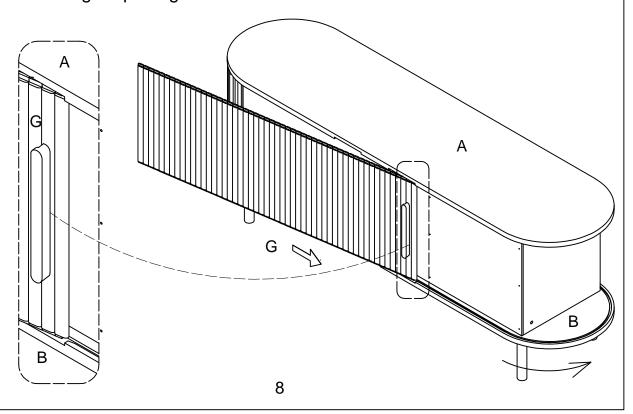

Step 11. Insert shelf holders (part #8) and slide adjustable shelf (part F) into place.

NOTE: It is important to adjust levelers once fully assembled and upright.

Extend adjustable leveler until it's firmly in contact with the floor.

If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

