










CROSLEY

FURNITURE







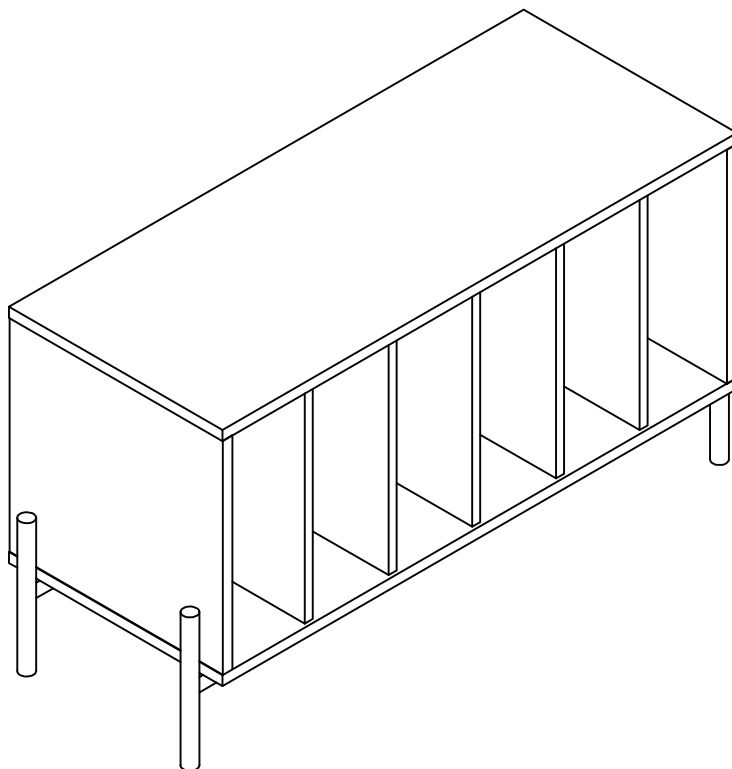



Medium Record
Storage Console
CF1155

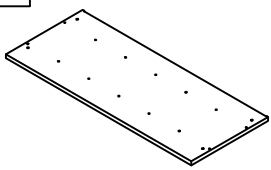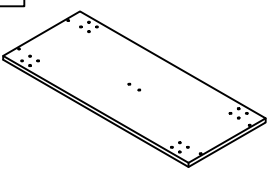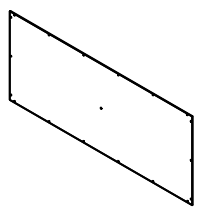

PART LIST


A		B		C		D		E	
Top Panel 1 PC		Left Panel 1 PC		Right Panel 1 PC		Partition Panel 5 PCS		Bottom Panel 1 PC	
F		G		H					
Back Panel 1 PC		Leg 4 PCS		Support Leg 1 PC					

HARDWARE LIST

#1		#2		#3		#4		#5	
Ø8mm*1-1/8"		Ø1/4"*1/2"		Ø1/4"*1-1/8"		Ø1/4"*2"			
Wood Dowel 28 PCS (Extra 1)		Short Bolt 18 PCS (Extra 1)		Medium Bolt 4 PCS (Extra 1)		Long Bolt 4 PCS (Extra 1)		Barrel Nut 4 PCS (Extra 1)	
#6		#7		#8		#9		#10	
Ø1/4"*11mm		Ø1/4"*13mm		Ø3*15mm				Ø4mm	
Spring Washer 8 PCS (Extra 1)		Flat Washer 8 PCS (Extra 1)		Screws 19 PCS (Extra 1)		Cover 4 PCS (Extra 1)		Allen Wrench 1 PC	

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.

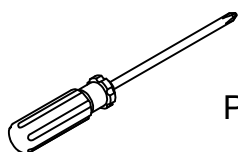


Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Attach left and right panels (parts B & C) to top panel (part A) using wood dowels (part #1), flat washers (part #7), spring washers (part #6), medium bolts (part #3) and allen wrench (part #10).

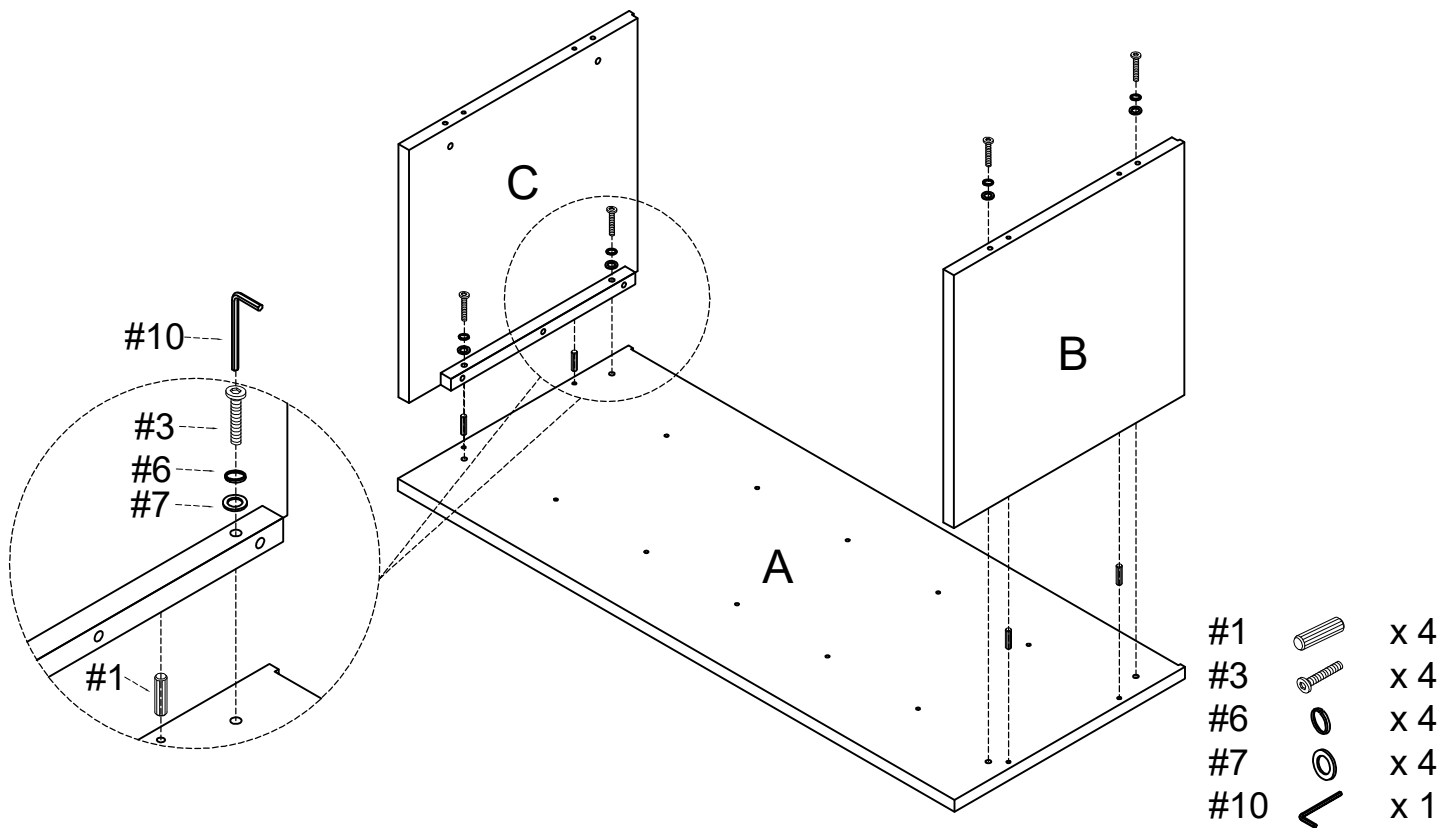


Step 2. Attach partition panels (part D) to top panel (part A) using wood dowels (part #1).

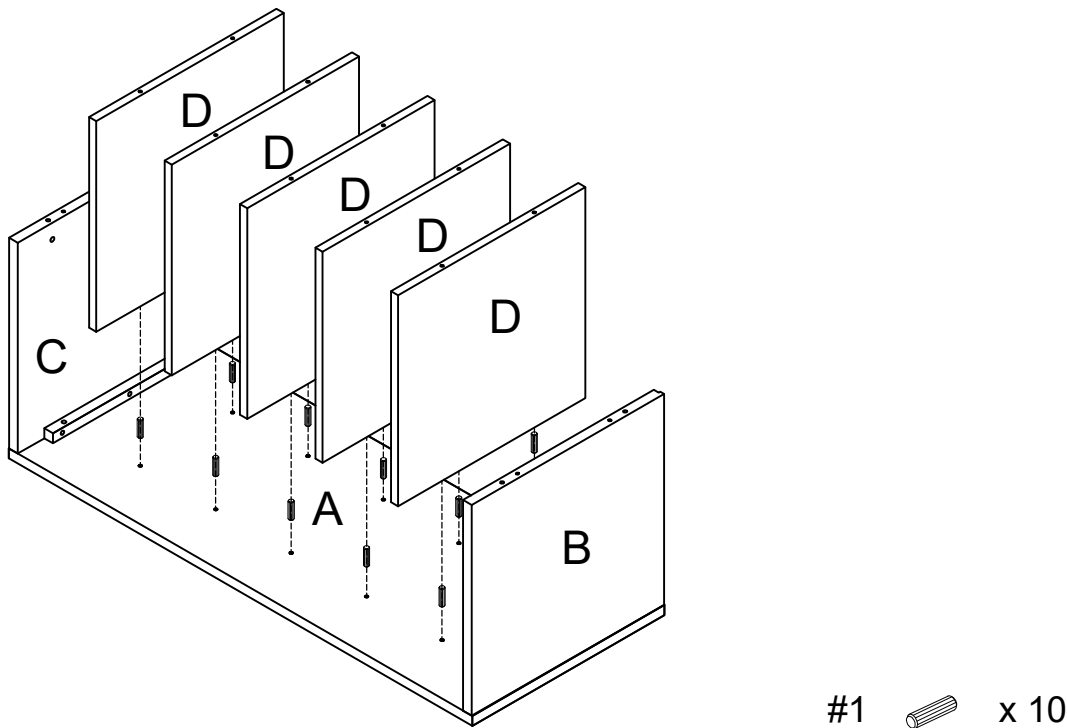


Step 3. Attach bottom panel (part E) to panels (parts B, C & D) using wood dowels (part #1), barrel nut (part #5), flat washers (part #7), spring washers (part #6), long bolts (part #4) and allen wrench (part #10). Attach covers (part #9) to the hole of barrel nut (part #5).

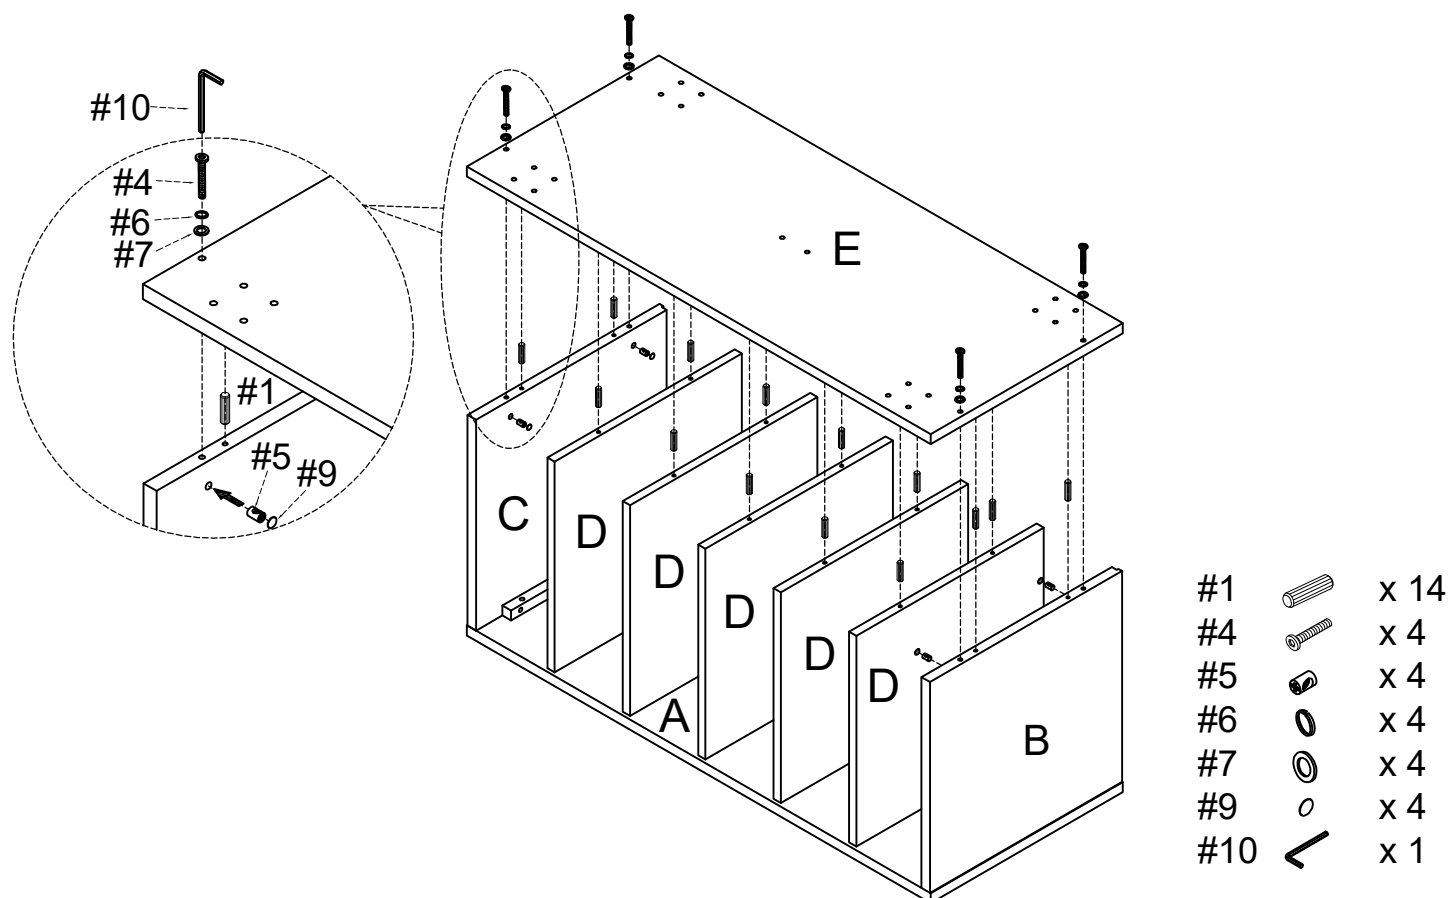

Step 4. Attach legs (part G) and supporting leg (part H) to bottom panel (part E) using short bolts (part #2) and allen wrench (part #10).

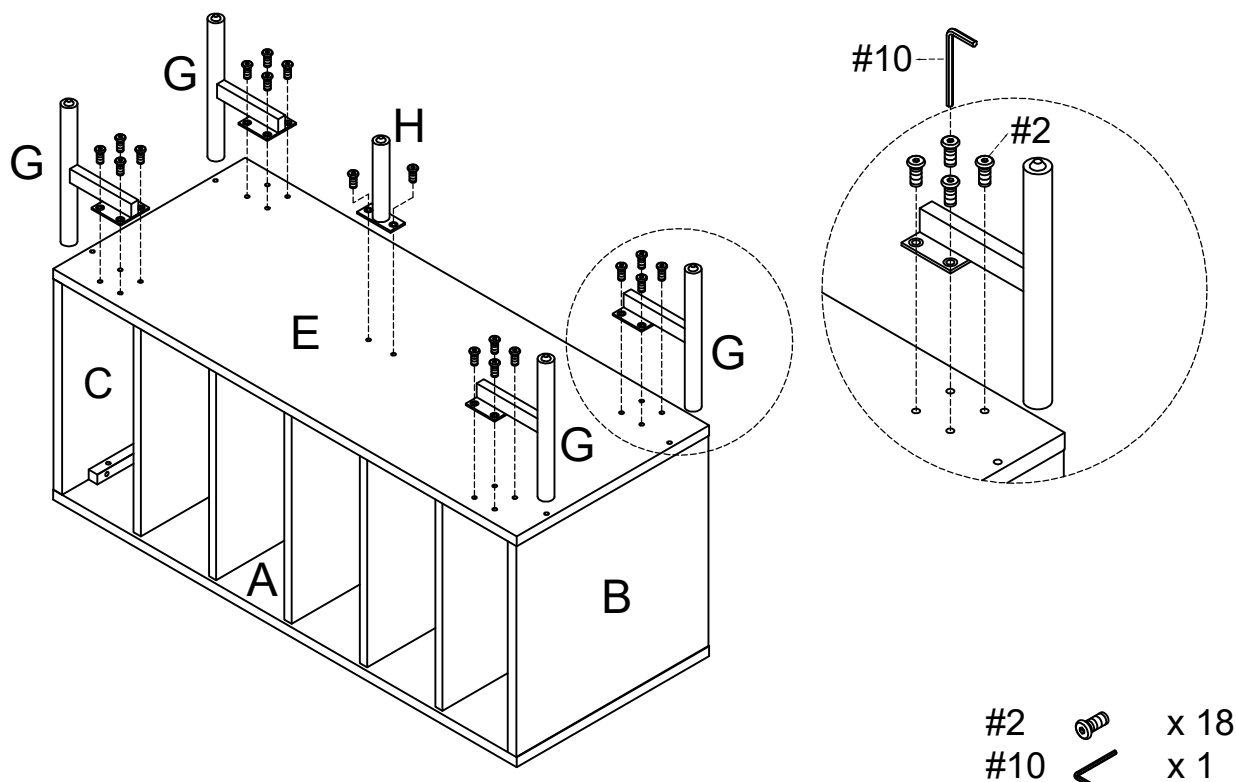

Step 5. Carefully turn unit upright. Attach back panel (part F) to assembled unit (parts A, B, C, D & E) using screws (part #8) and phillips head screwdriver.

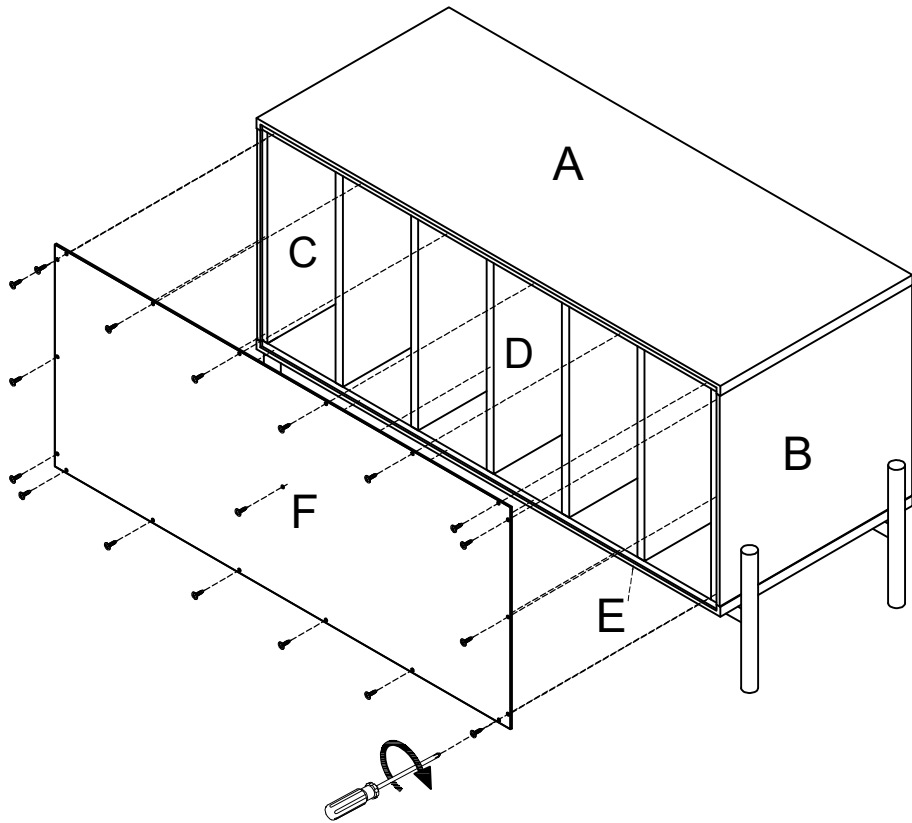

#8  x 19

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

