



# ASSEMBLY INSTRUCTIONS

## FULL CANOPY FRAME FLOOR BED






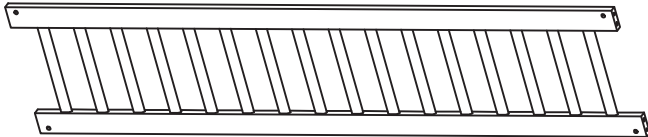


**MK33808**

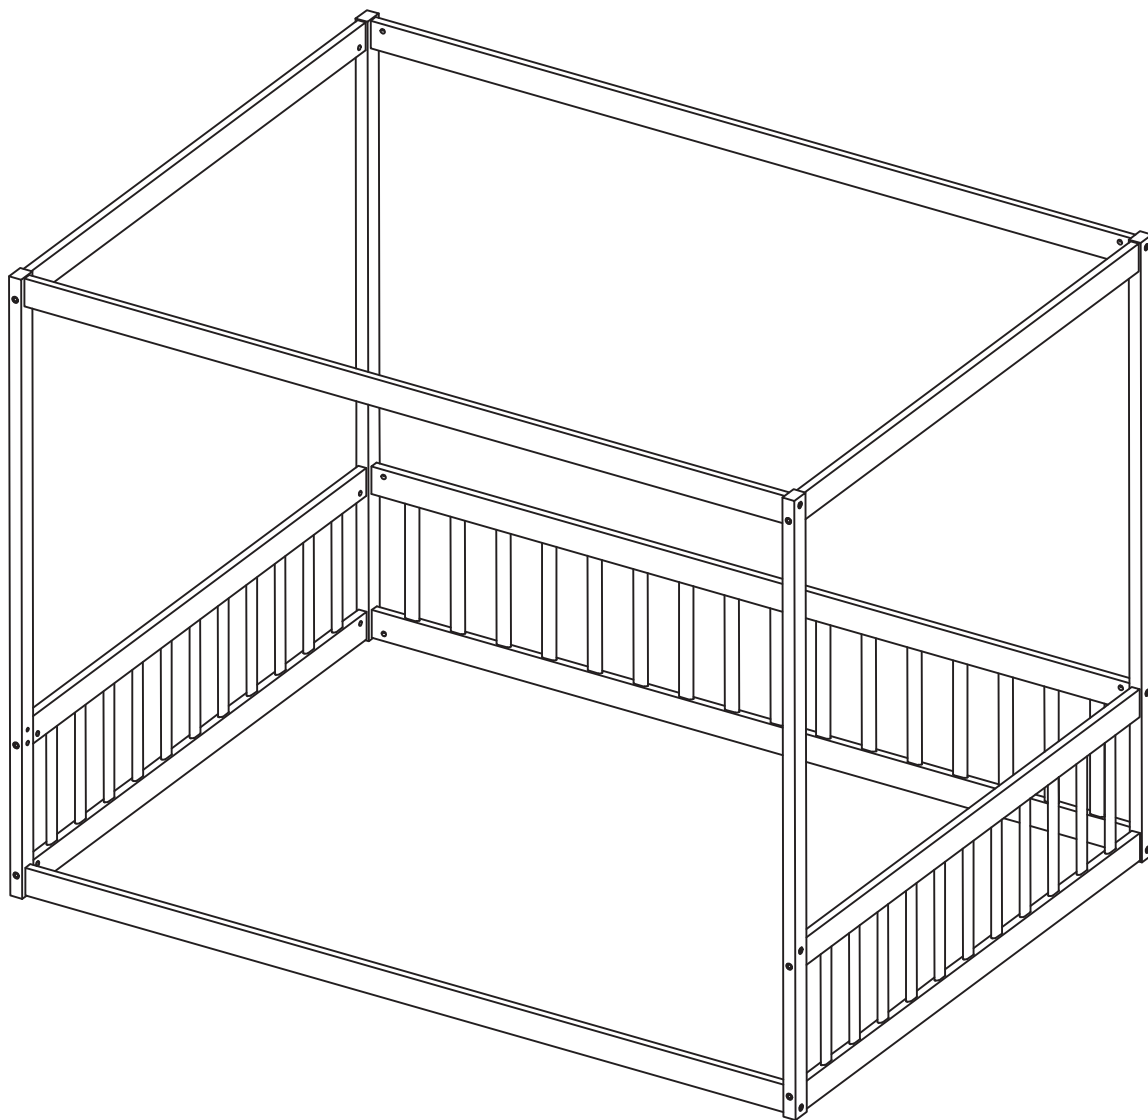


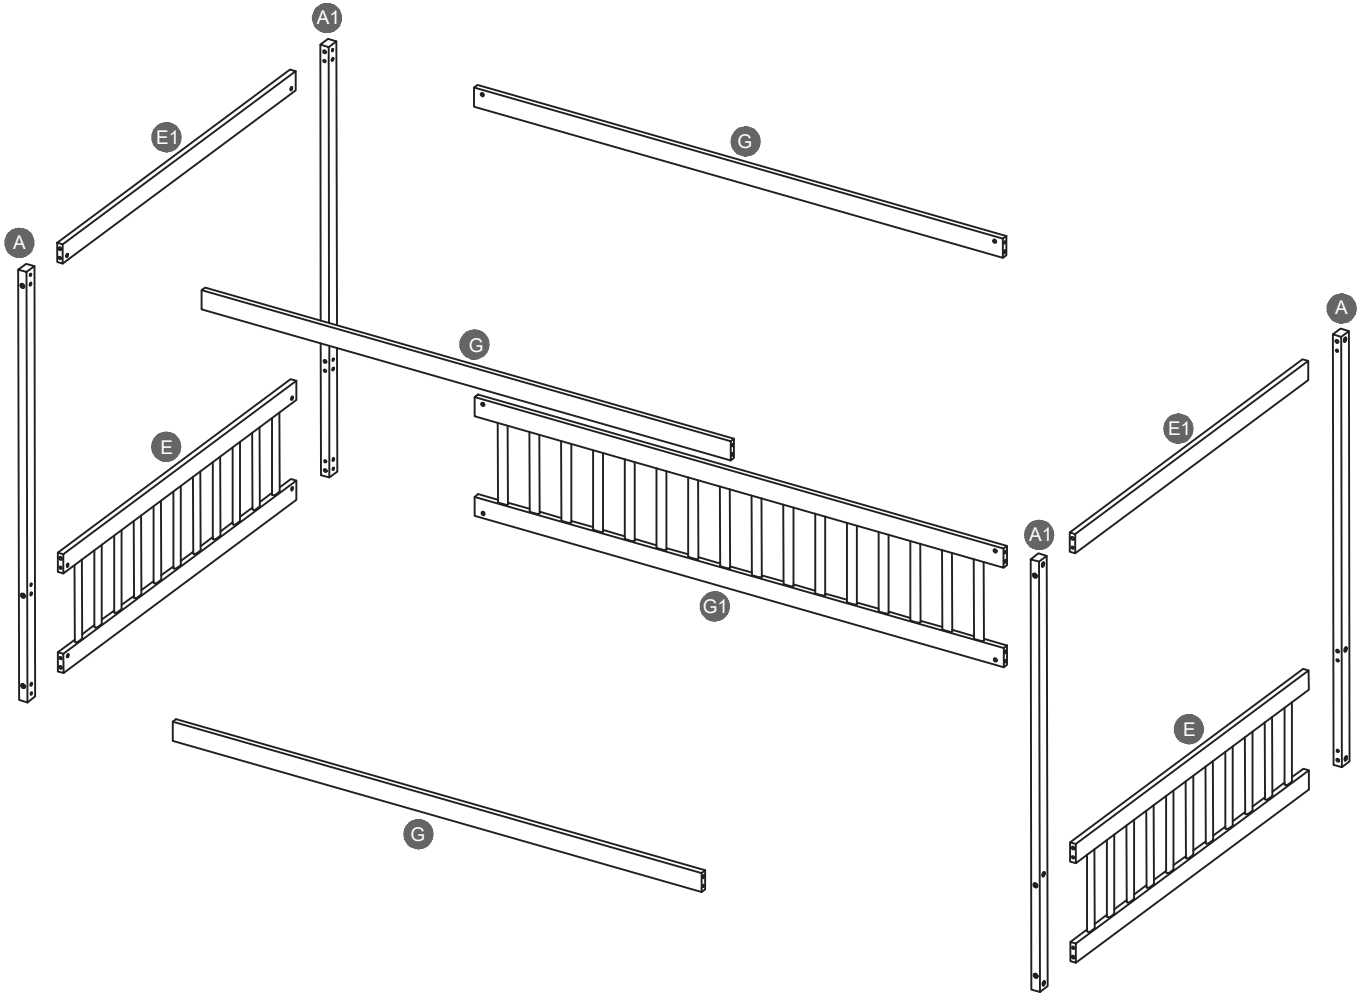


Detail View

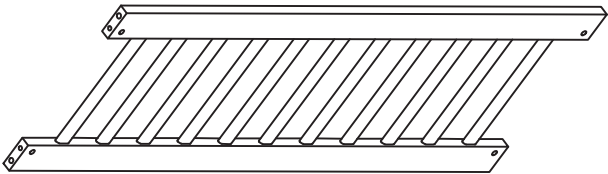


# Part List

<div>A</div> <div></div> <div>Leg - 2pcs</div>	<div>A1</div> <div></div> <div>Leg - 2pcs</div>
<div>E</div> <div></div> <div>Hb. Fb. Panel - 2pcs</div>	<div>E1</div> <div></div> <div>Hb. Fb. Top Panel - 2pcs</div>
<div>G</div> <div></div> <div>Side Rail Front &amp; Guardrail Upper - 3pcs</div>	<div>G1</div> <div></div> <div>Side Rail Back - 1pc</div>

# Hardware List


<b>1</b>  M6 x 80mm JCBC (12pcs)	<b>2</b>  M6 x 15mm Barrel Nut (22pcs)	<b>3</b>  M10 x 40mm Wood Dowel (22pcs)
<b>4</b>  M6 x 70mm JCBC (10pcs)	<b>5</b>  Sticker Cap (6pcs)	<b>6</b>  M4 Allen Key (1pc)

## ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )



**PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !**

**STEP 1:**

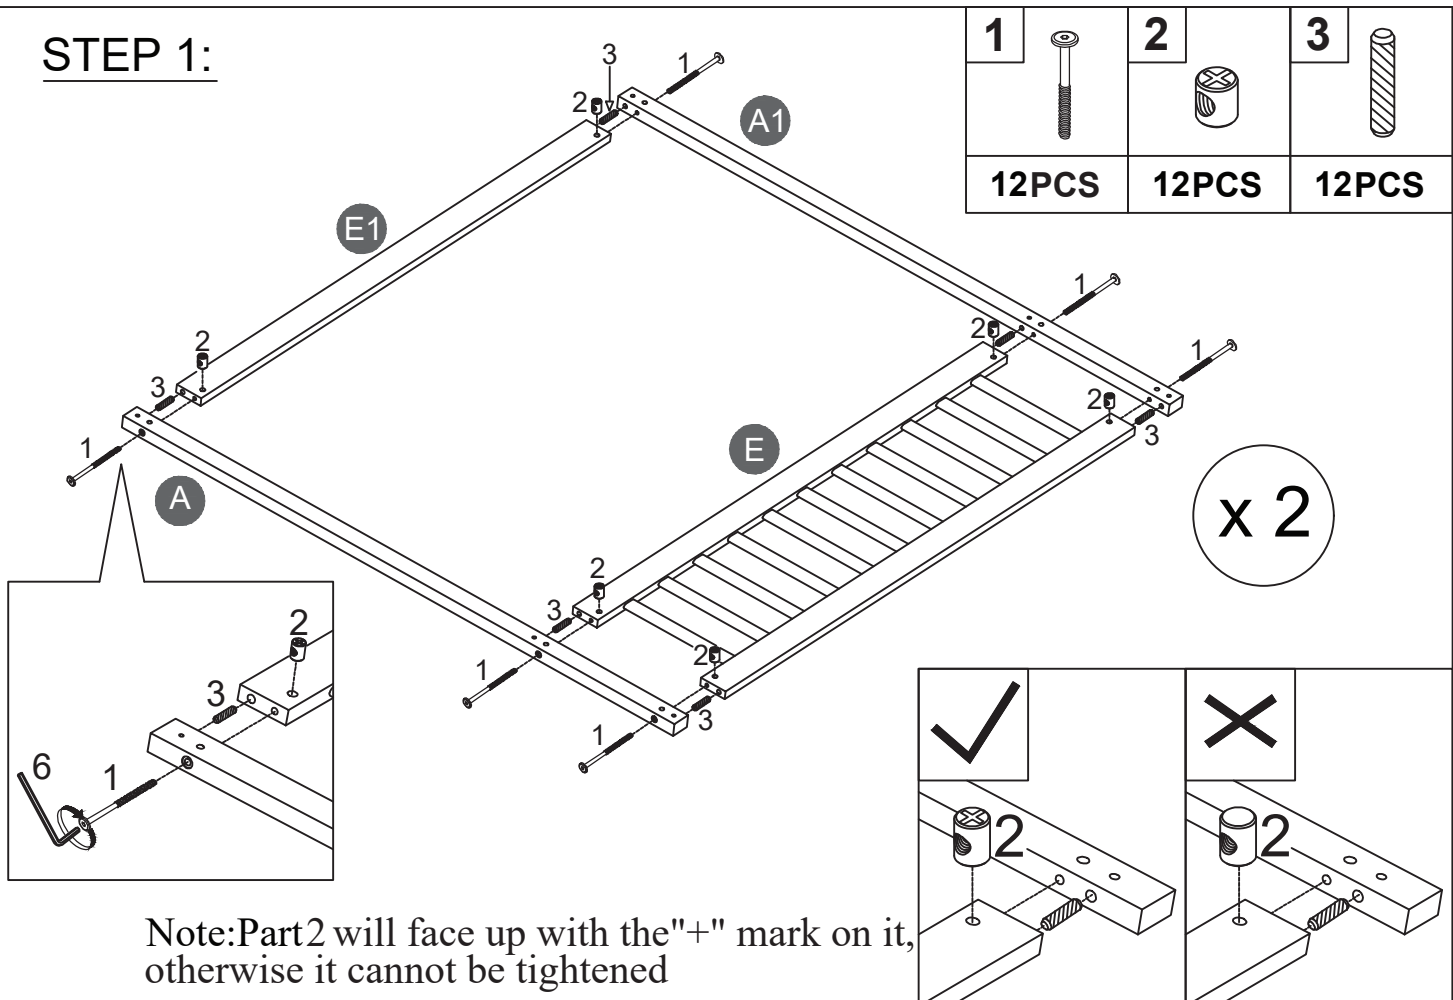

**STEP 2:**

