



# ASSEMBLY INSTRUCTIONS

## TWIN TENT FLOOR BED WITH DOOR






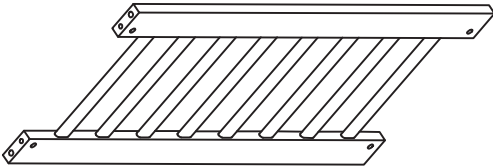
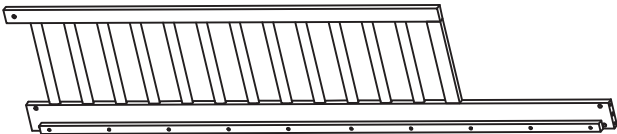
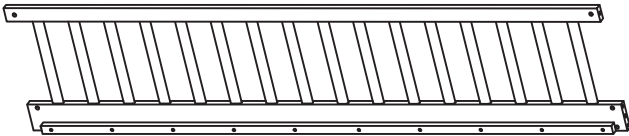
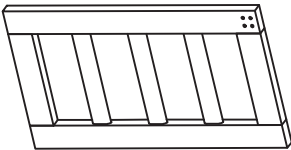



**MK33788**

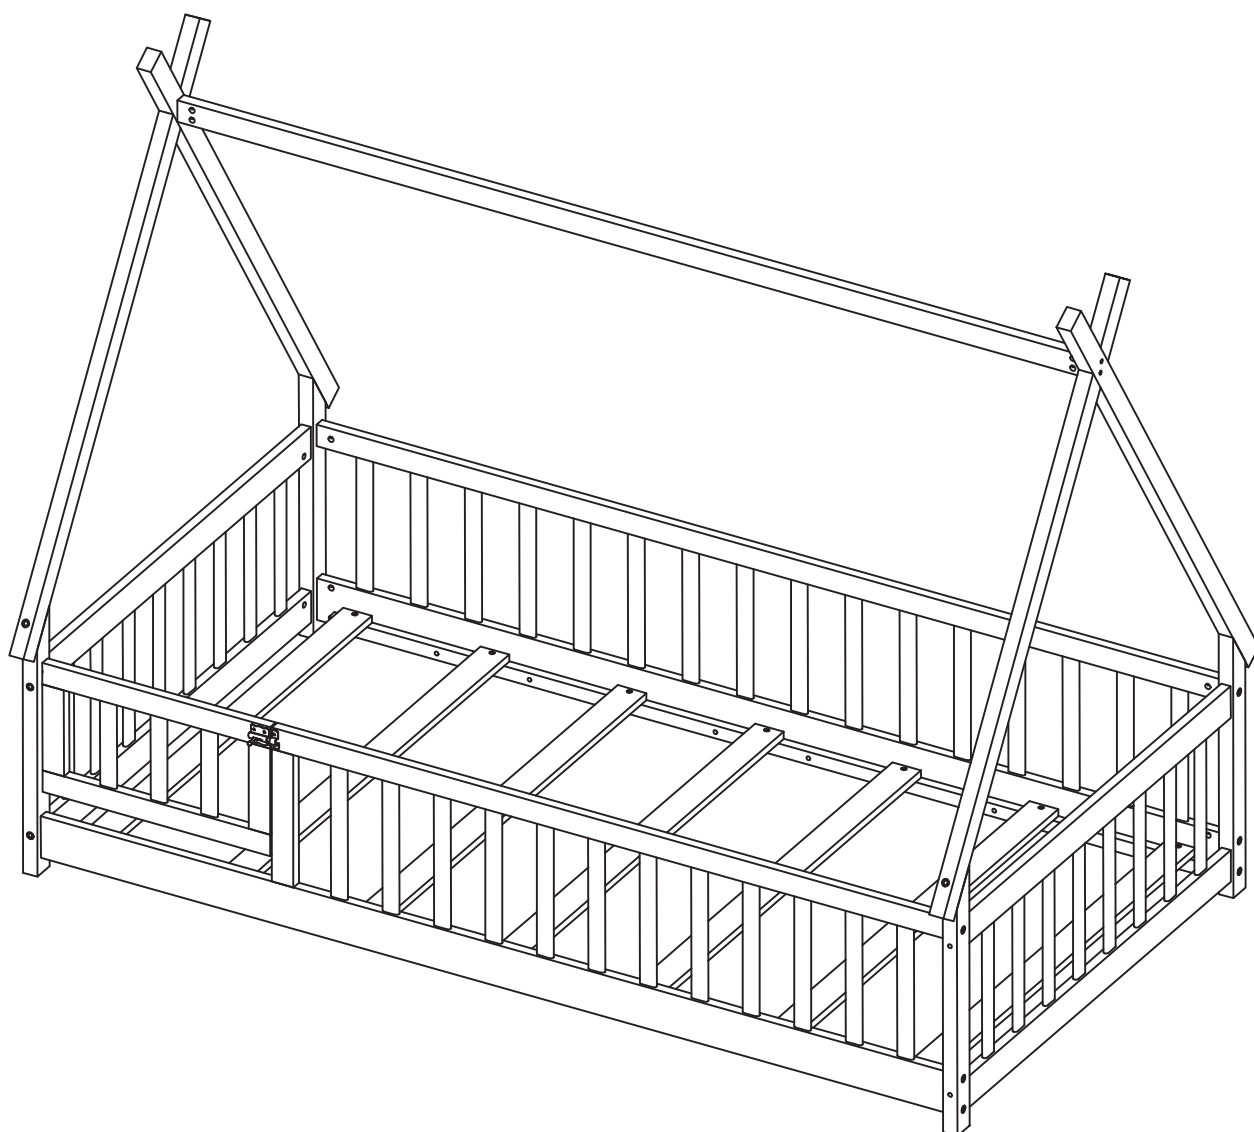


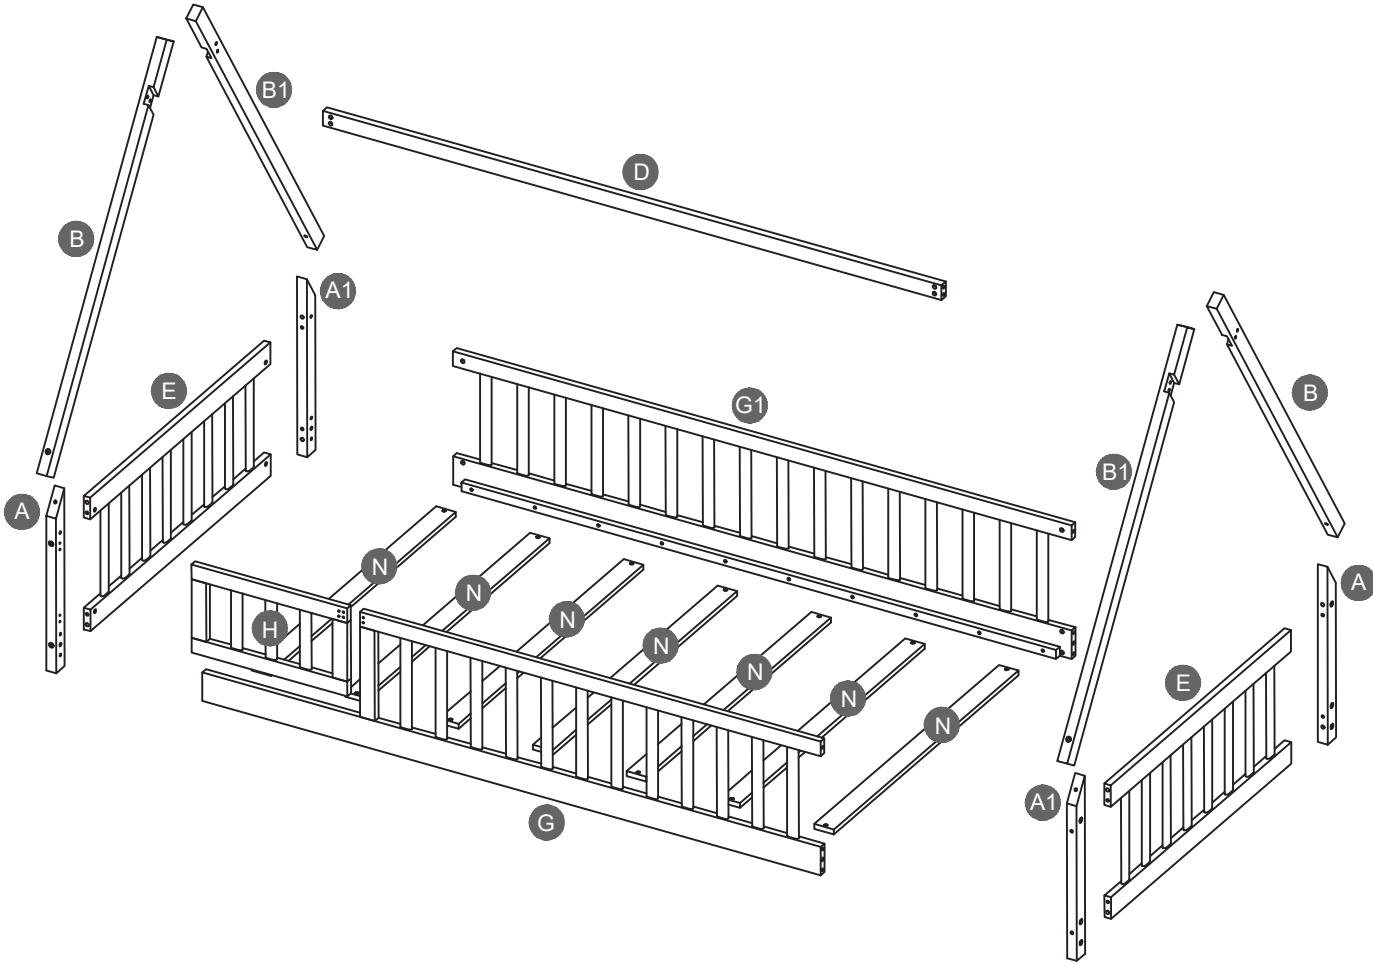








Detail View




# Part List

<div>A</div> <div></div> <div>Leg - 2pcs</div>	<div>A1</div> <div></div> <div>Leg - 2pcs</div>
<div>B</div> <div></div> <div>Top Support - 2pcs</div>	<div>B1</div> <div></div> <div>Top Support - 2pcs</div>
<div>D</div> <div></div> <div>Top Rail - 1pc</div>	<div>E</div> <div></div> <div>Hb. Fb. Panel - 2pcs</div>
<div>G</div> <div></div> <div>Side Rail Front - 1pc</div>	<div>G1</div> <div></div> <div>Side Rail Back - 1pc</div>
<div>H</div> <div></div> <div>Door - 1pc</div>	<div>N</div> <div></div> <div>Bed Slats - 7pcs</div>

# Hardware List


<b>1</b>	 M6 x 90mm JCBC (8pcs)	<b>2</b>	 M6 x 15mm Barrel Nut (23pcs)	<b>3</b>	 M10 x 40mm Wood Dowel (12pcs)
<b>4</b>	 Sticker Cap (2pcs)	<b>5</b>	 M6 x 70mm JCBC (15pcs)	<b>6</b>	 20 x 20 x 233mm Wood Block (1pc)
<b>7</b>	 M4 x 25mm CSK Screw (14pcs)	<b>8</b>	 M6 x 60mm JCBC (4pcs)	<b>9</b>	 6 x 24 x 55mm (135°) Hinges (2pcs)
<b>10</b>	 10 x 40 x 60mm Lock (1pc)	<b>11</b>	 M3.5 x 16mm CSK Screw (14pcs)	<b>12</b>	 M4 Allen Key (1pc)

## ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )




**PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !**


## STEP 1:

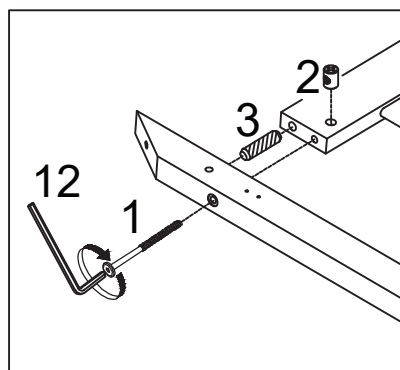


1		2		3	
	8PCS		8PCS		8PCS

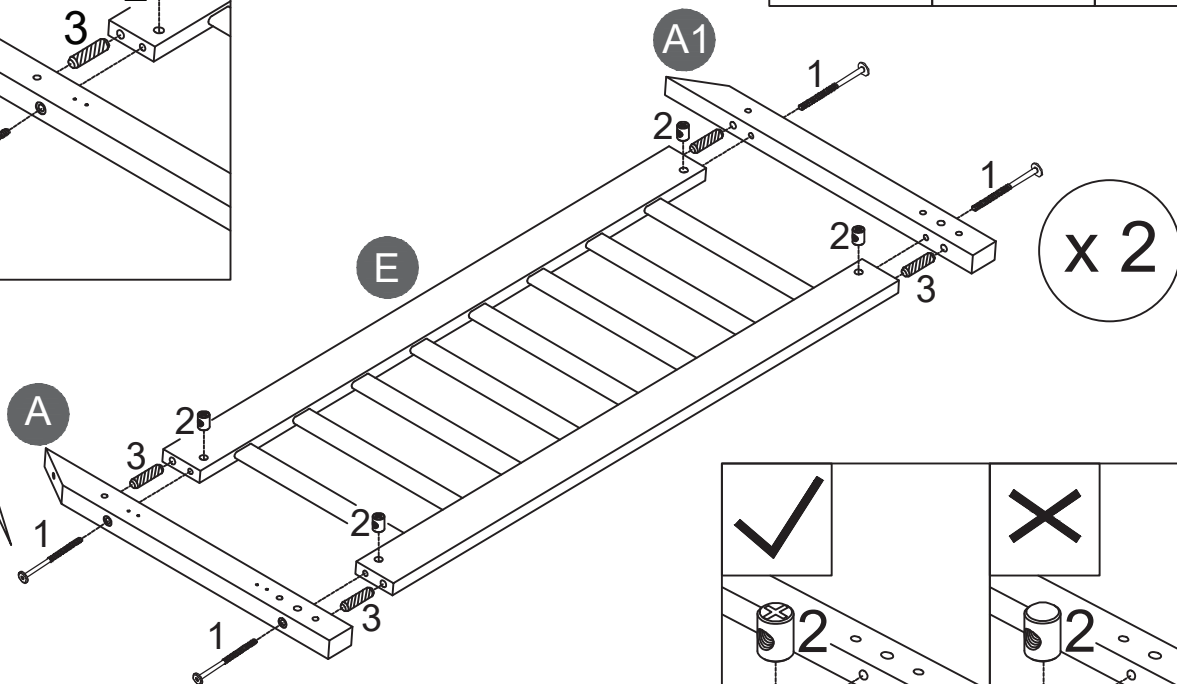


Note: Part 2 will face up with the "+" mark on it, otherwise it cannot be tightened

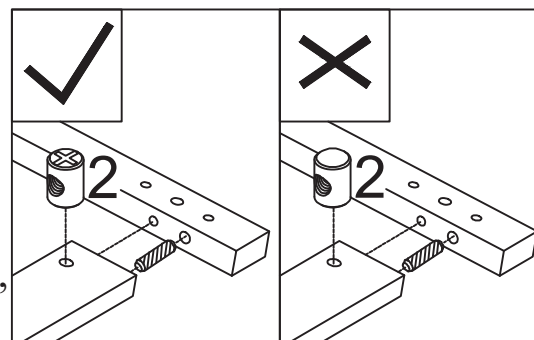


## STEP 2:

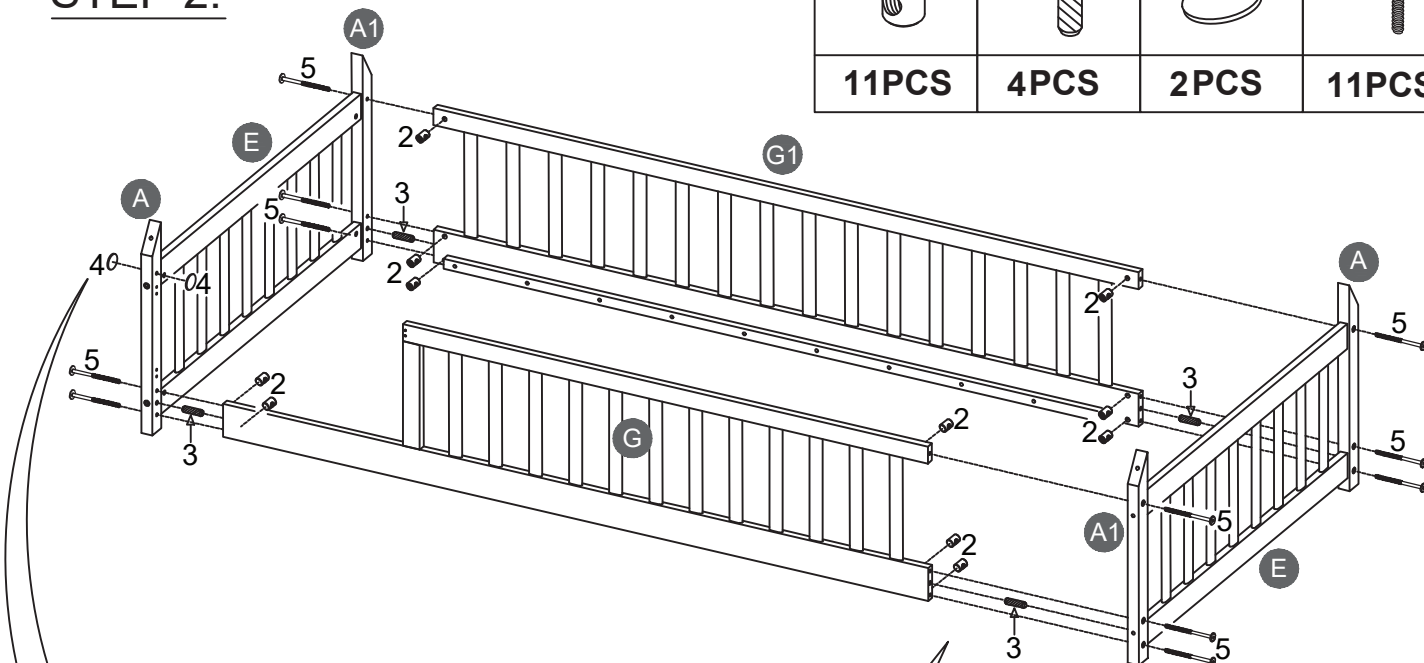


2		3		4		5	
	11PCS		4PCS		2PCS		11PCS

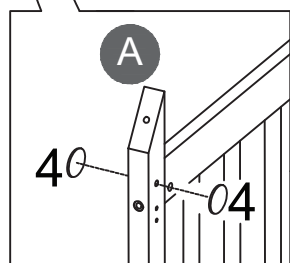



Note: Part 2 will face up with the "+" mark on it, otherwise it cannot be tightened

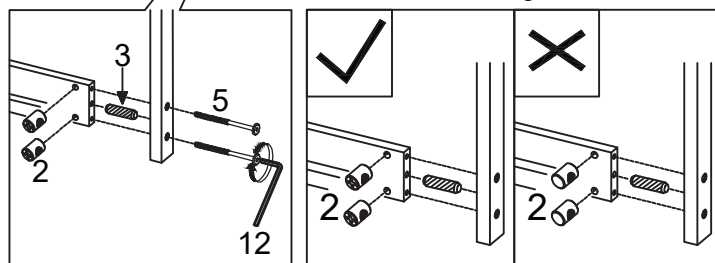



### STEP 3:

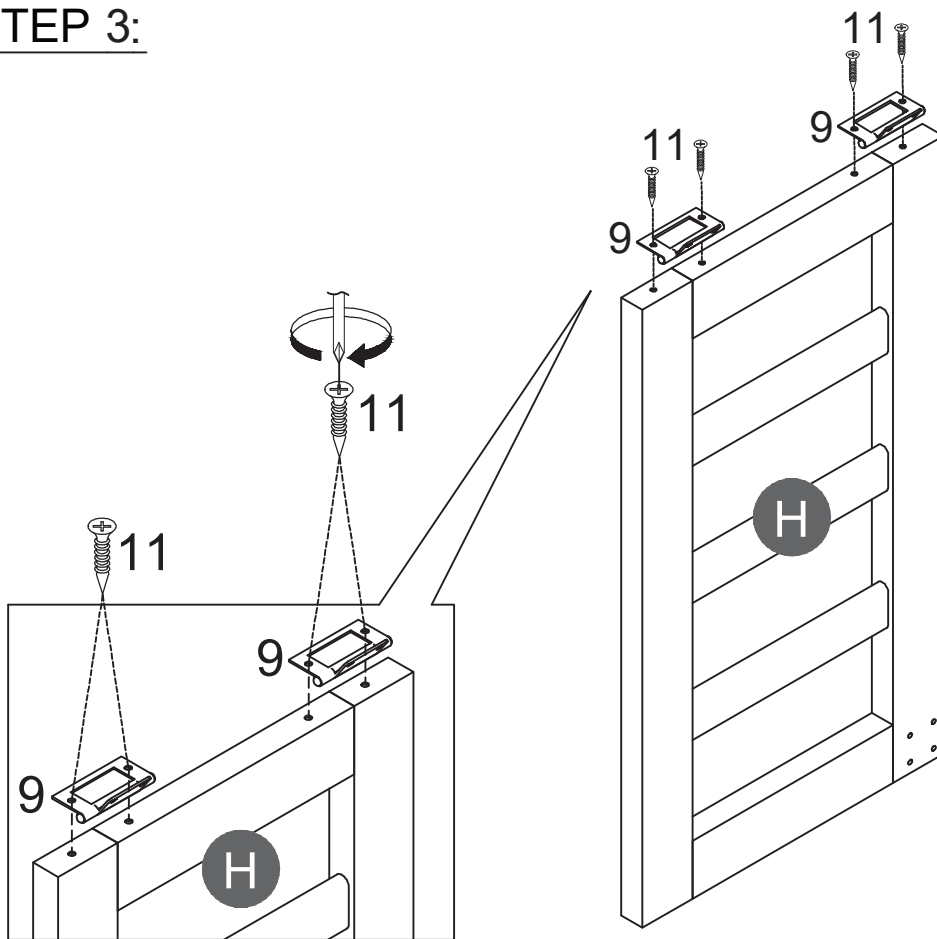



<b>9</b>	<b>11</b>
	
<b>2PCS</b>	<b>4PCS</b>



### STEP 4:

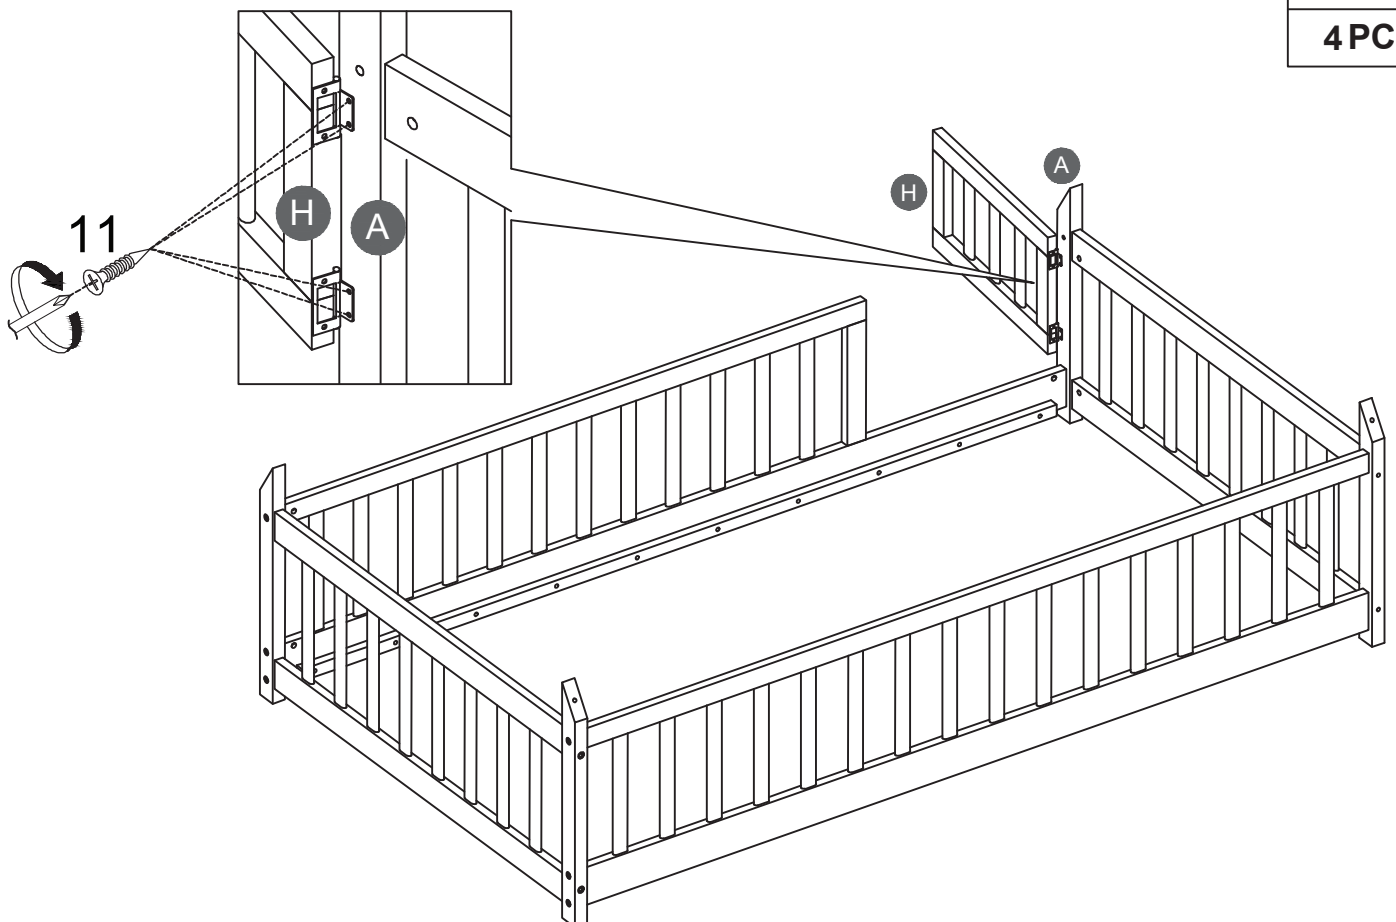



<b>11</b>

<b>4PCS</b>

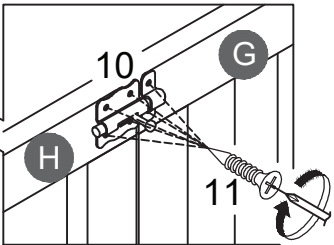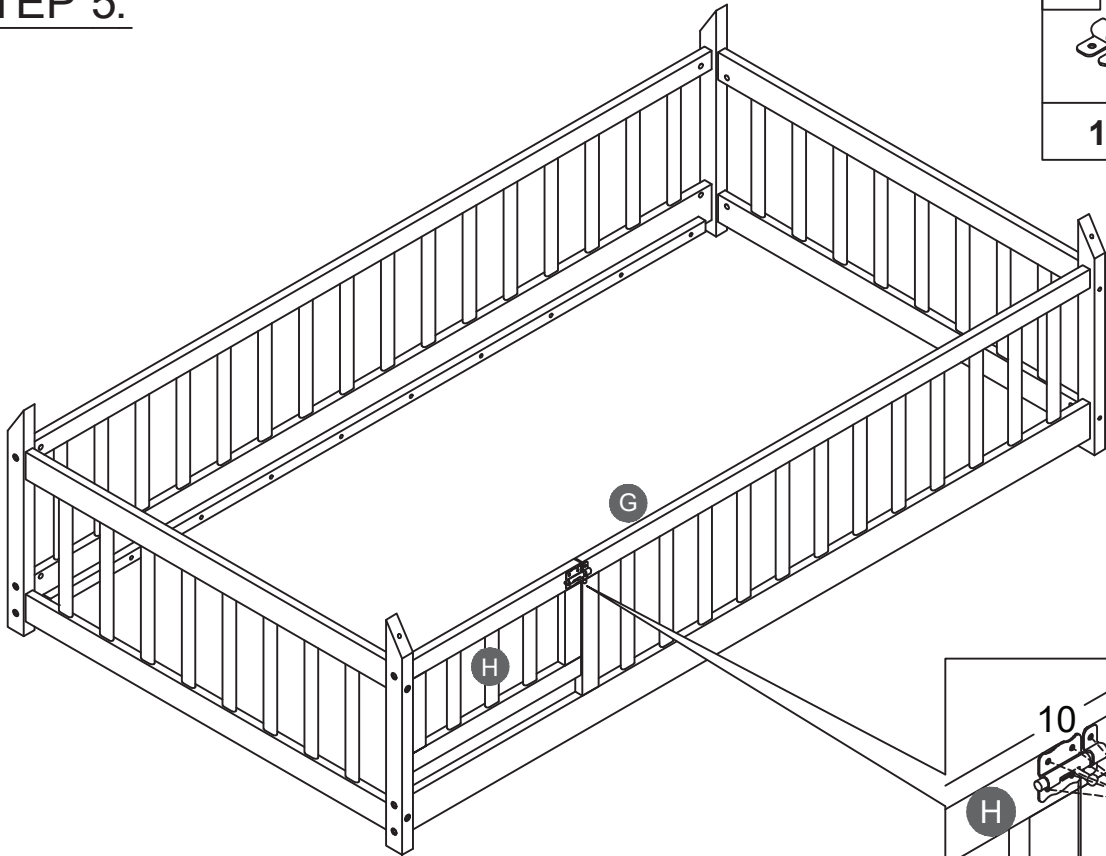
# STEP 5:

<b>10</b>	<b>11</b>
	
<b>1 PC</b>	<b>6 PCS</b>



# STEP 6:

<b>2</b>	<b>5</b>
	
<b>4 PCS</b>	<b>4 PCS</b>


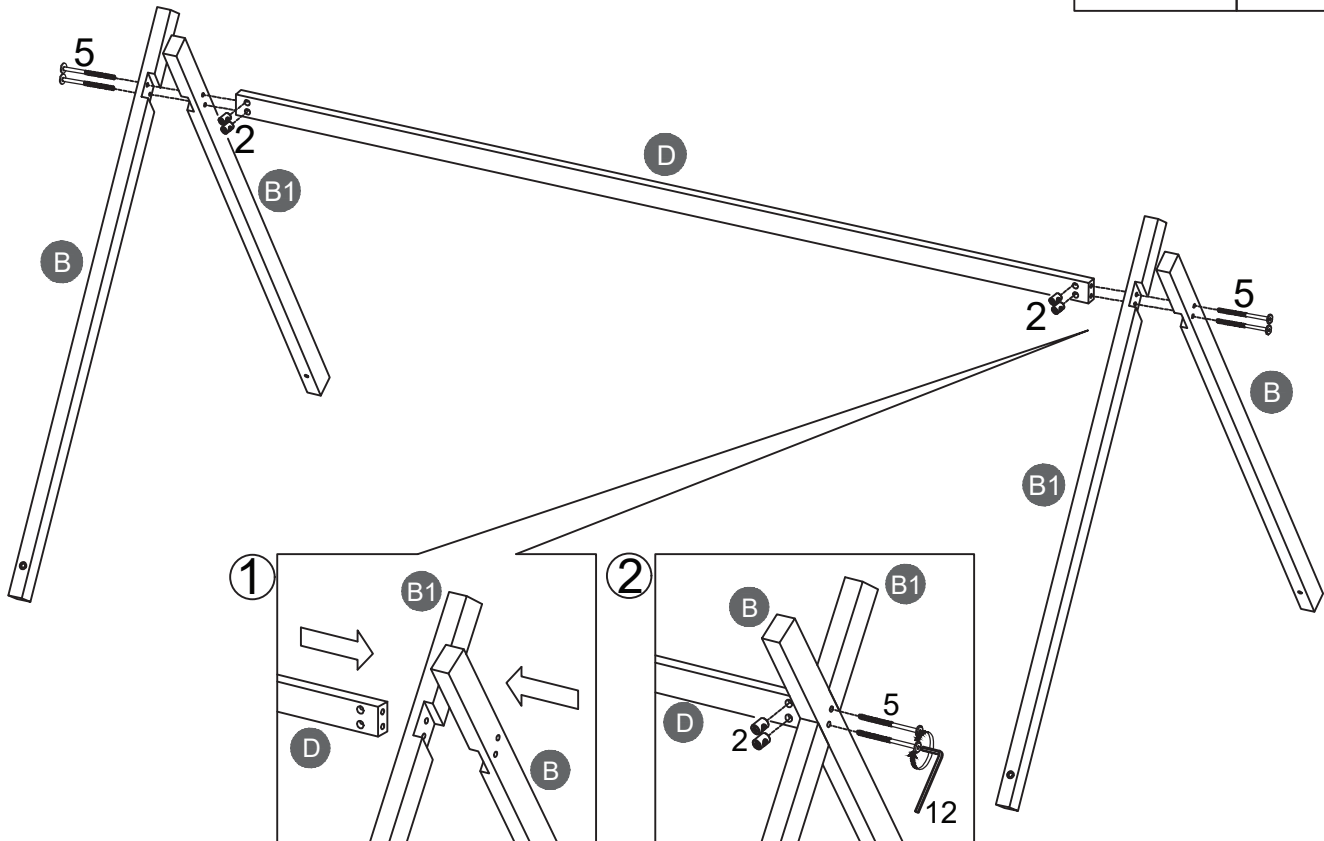


## STEP 7:

8



4PCS

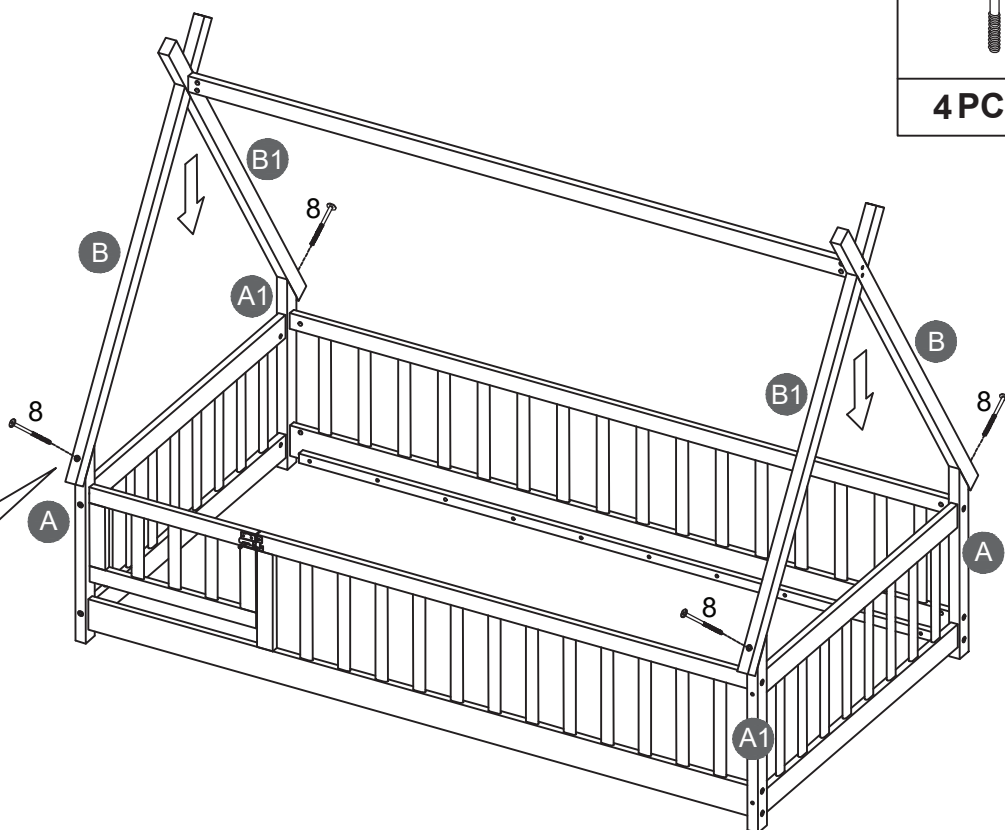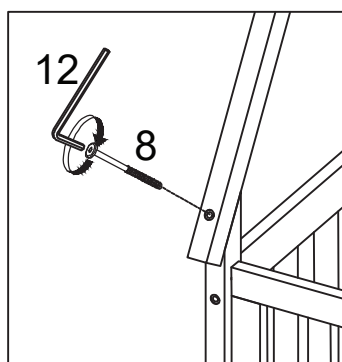

## STEP 8:

6




1 PC



7



14PCS

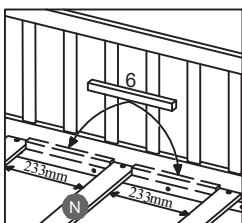

Note: Use Wood Block as a guidance distance between Bed Slats.

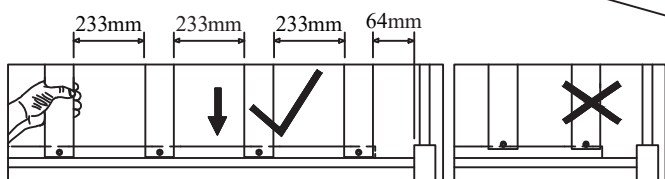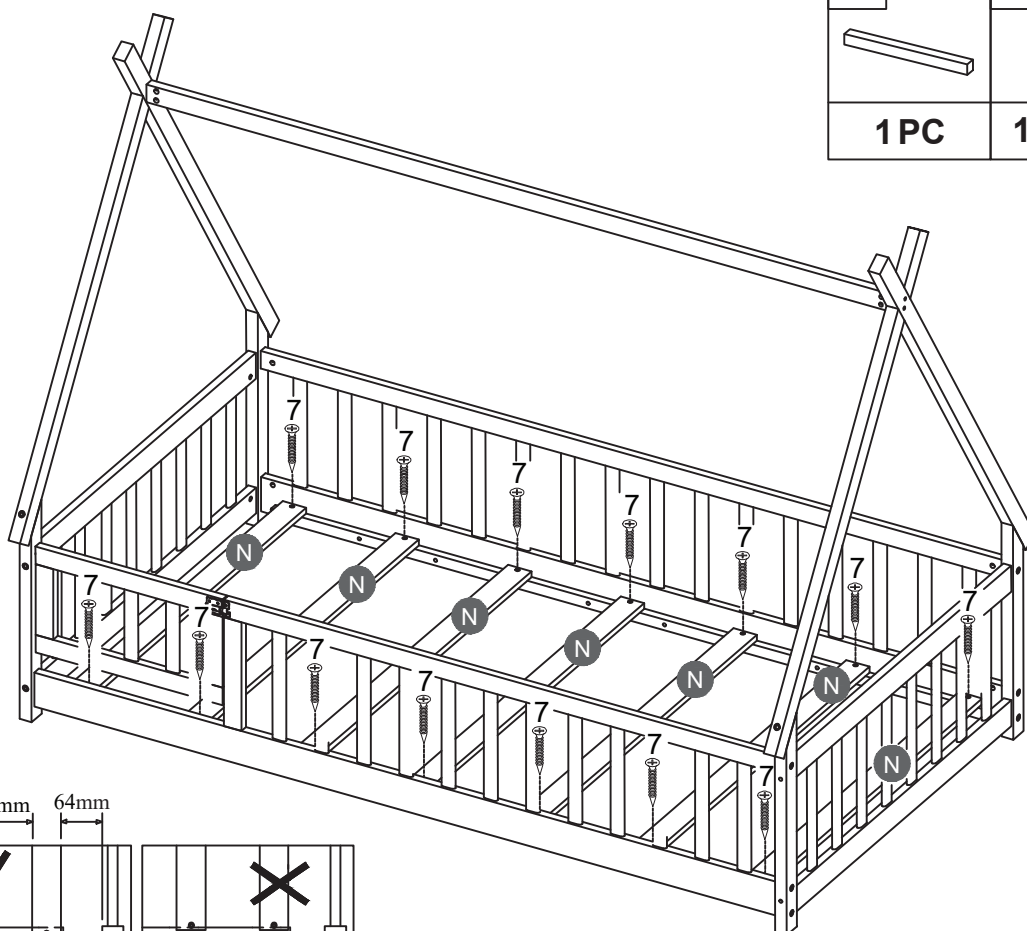

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.