



# ASSEMBLY INSTRUCTION 261T

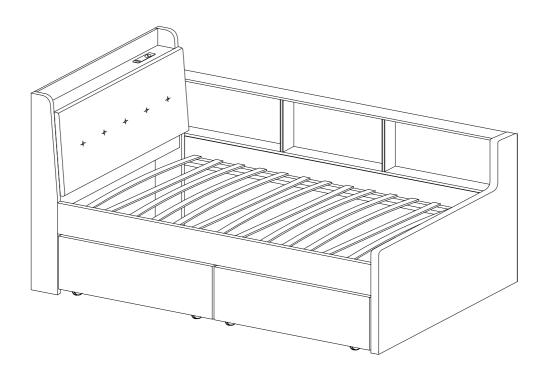

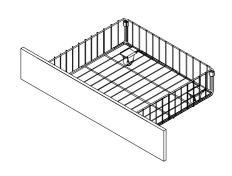


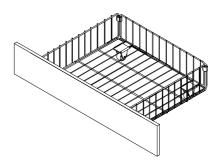


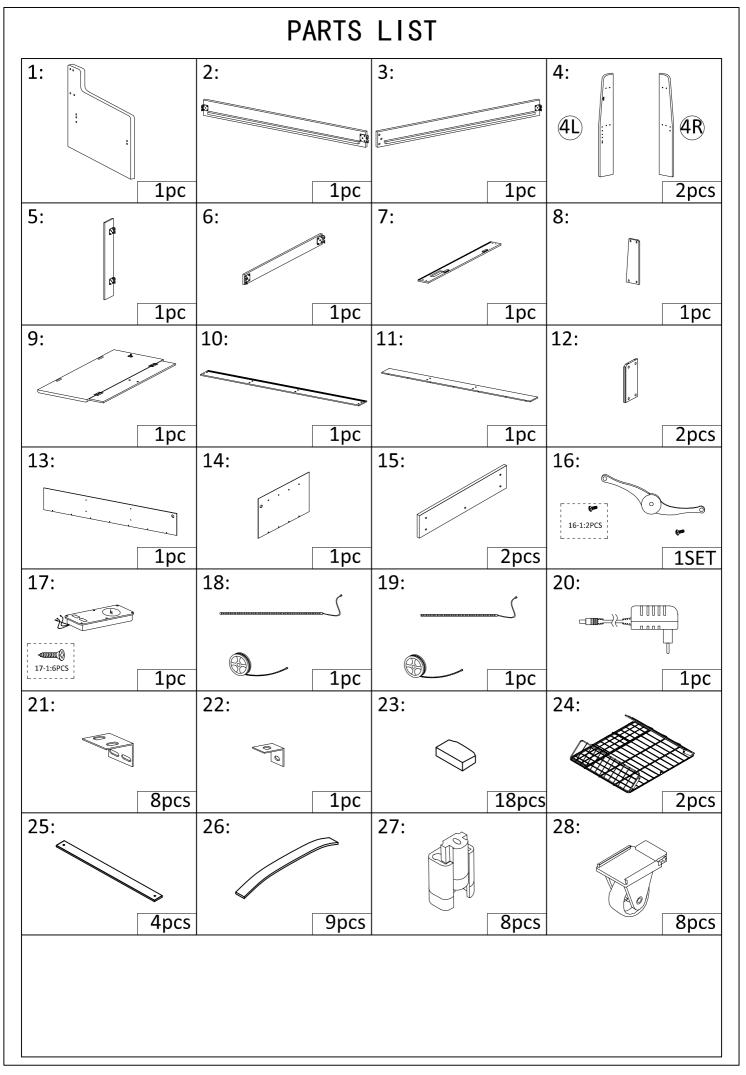



# HARDWARE LIST


		Dooroom	(hononomonom
M8*20mm	M8*35mm	M6*15mm	M6*70mm
A: 14pcs	B: 3pcs	C:44pcs	D: 8pcs
M8	M8*19mm	M6	M6*16mm
E: 17pcs	F: 17pcs	G: 52+1pcs	H: 52+1pcs
			√mmmm — G
M6			8*30mm
l: 8pcs	J: 12pcs	K: 12+1pcs	L: 19+1pcs
<(?)	M8	M6	M6
M: 4pcs	N: 1pc	O: 1pc	P: 1pc
Q: 1pc	R: 2pcs		

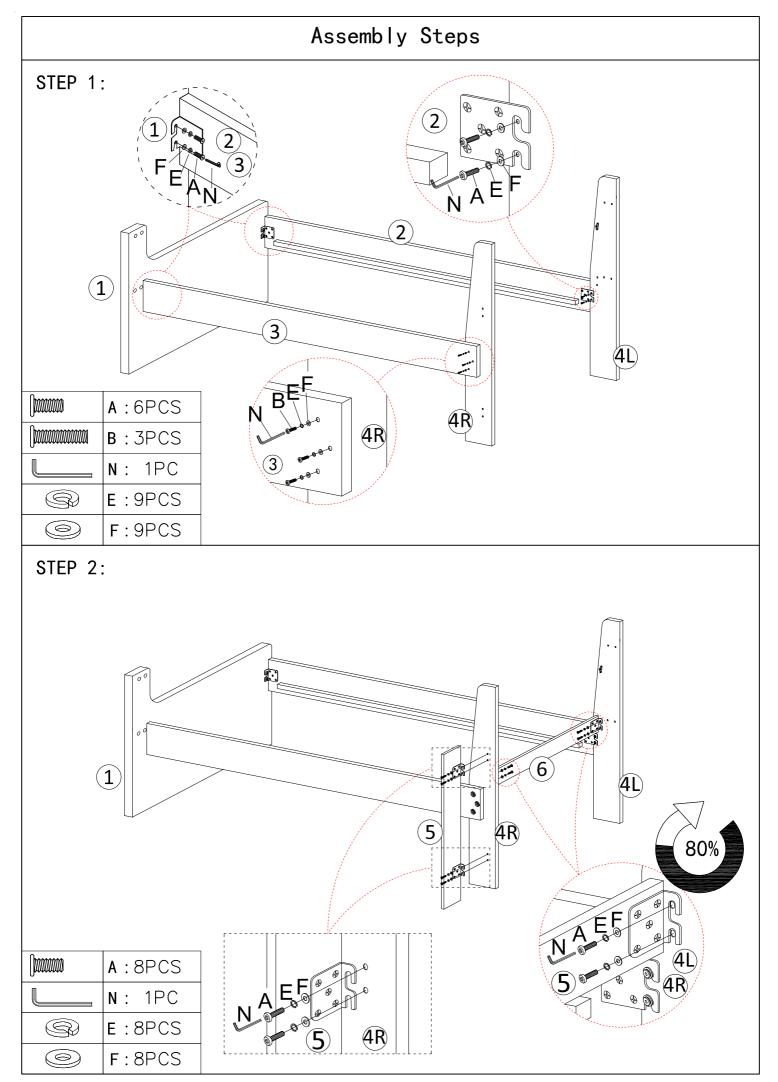

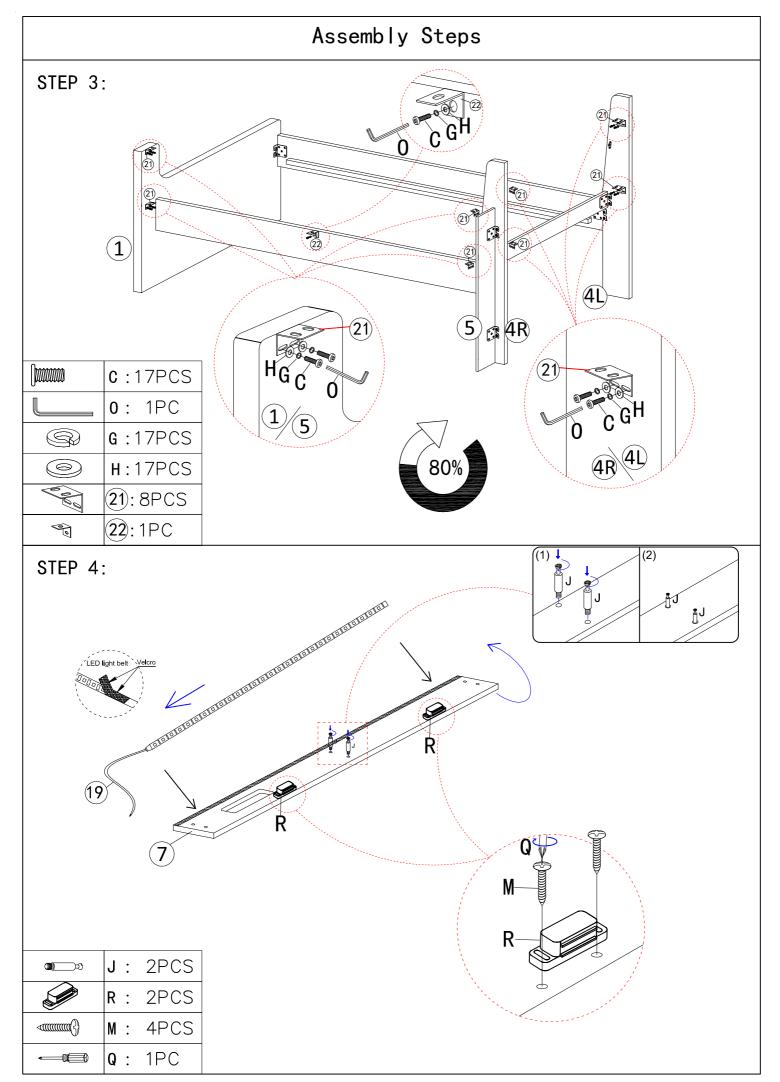


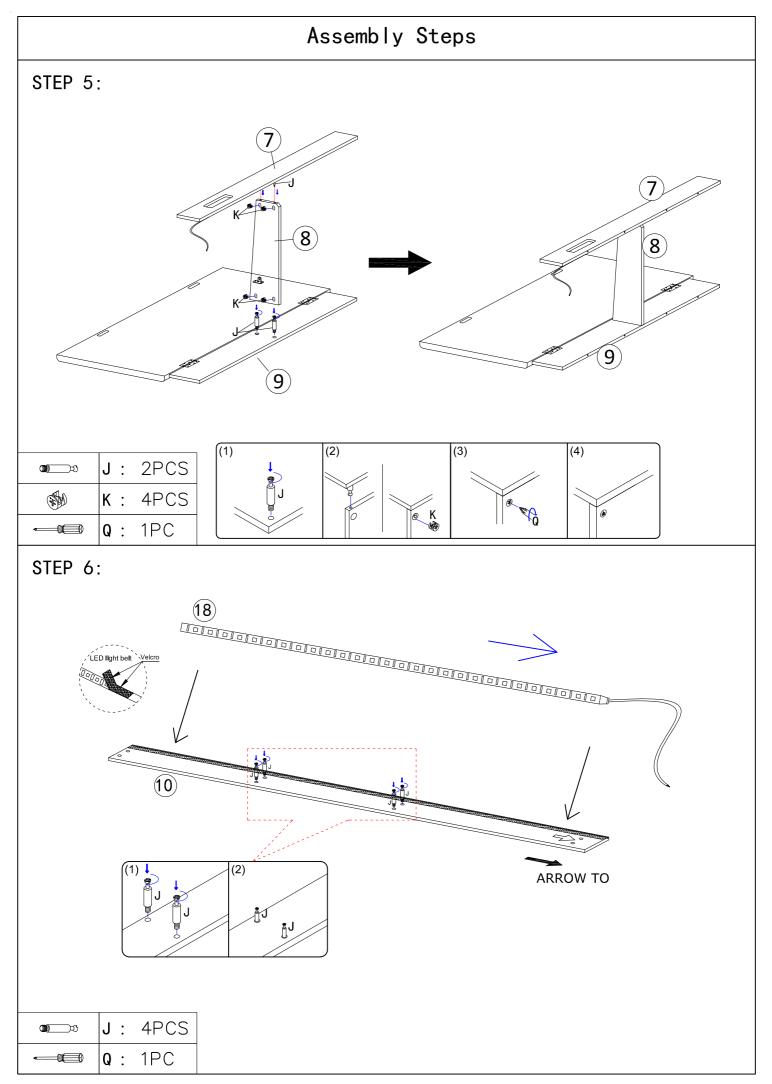


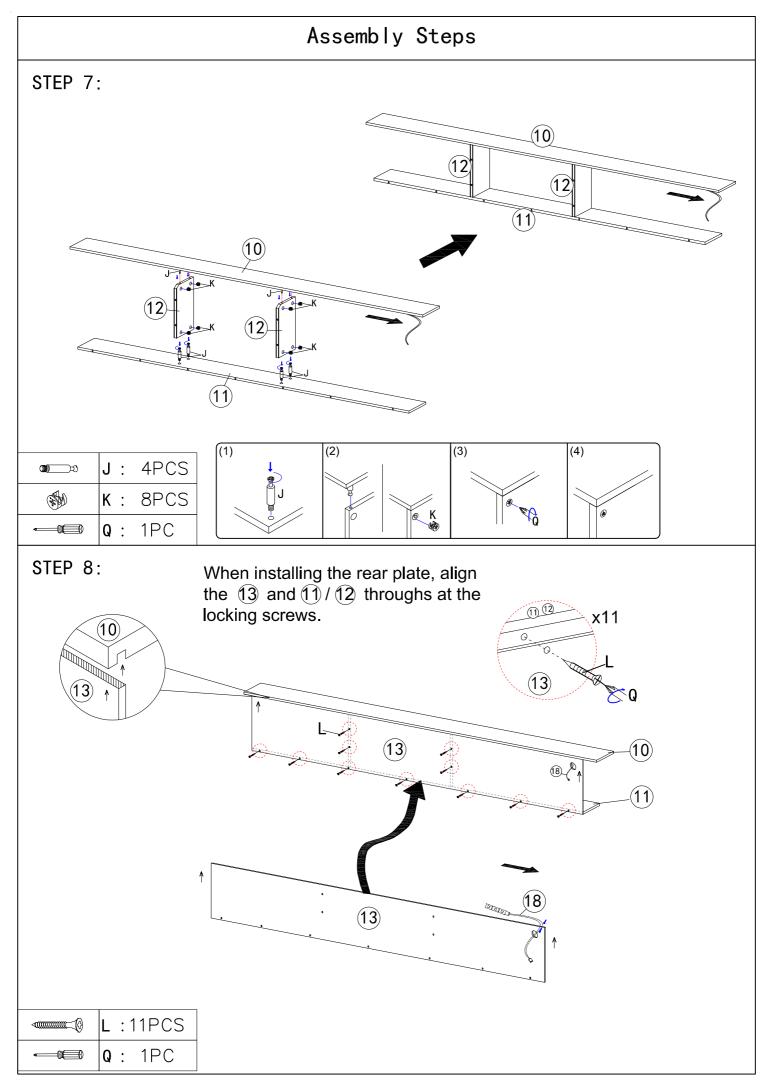

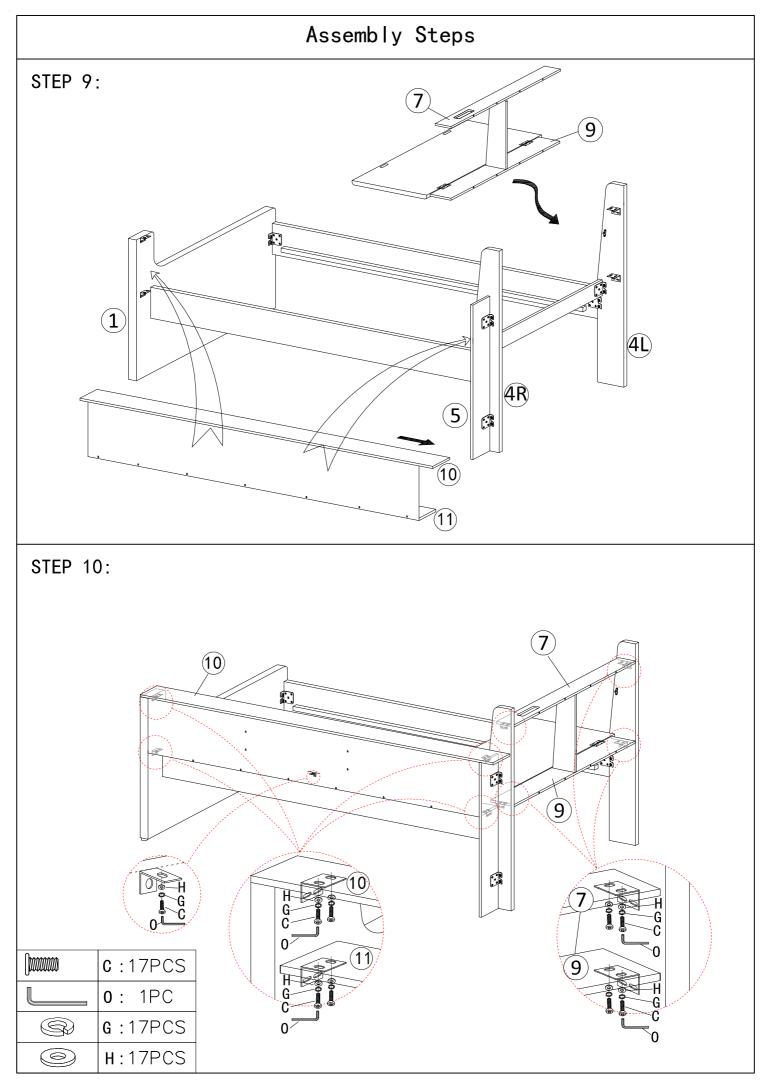

**PAGE 8 OF 15** 

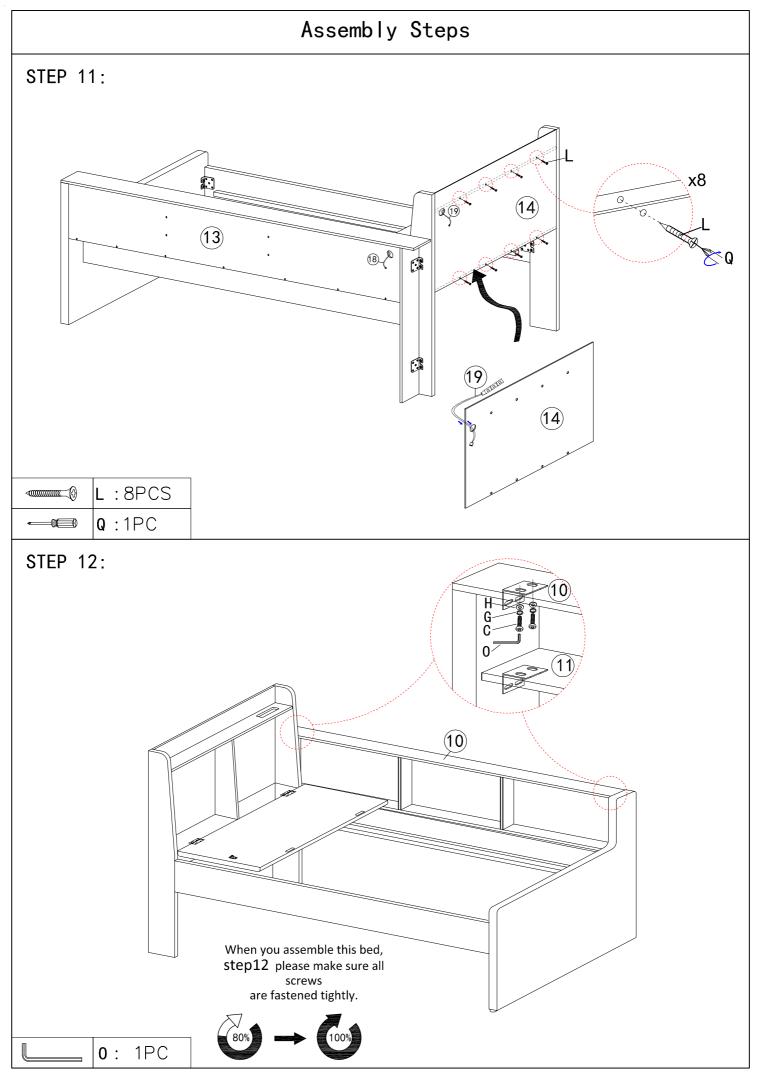

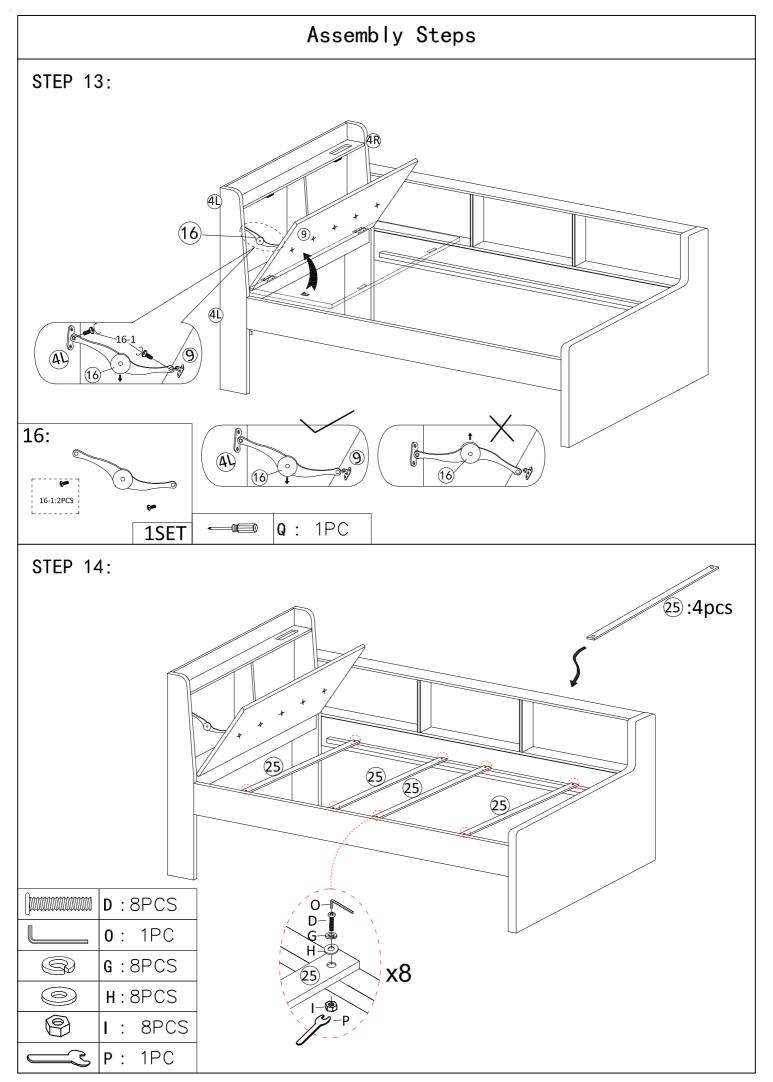


PAGE 10 OF 15




PAGE 11 OF 15

## Assembly Steps


#### **STEP 17:**

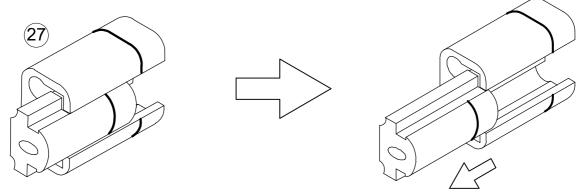

You can pull the buckle out by following the direction indicated by the arrow

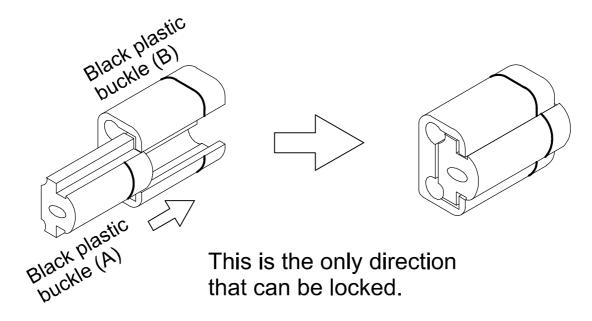

#### STEP 18:

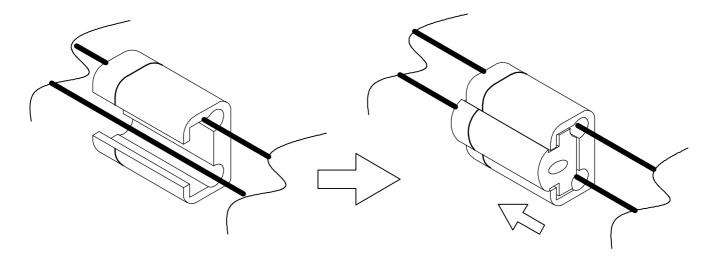


Place round iron tube as shown for better drawer assembly

# Assembly Steps STEP 19: 24 x2 STEP 20: 24 x 2 **27**) MI 27) x 8PCS


## Assembly Steps

#### STEP 21:

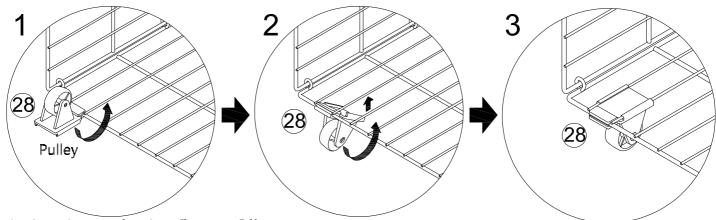

1. As shown in the figure Clip the pulley into position first

2. Then push the pulley to the side, clamp the iron wire at the edge.

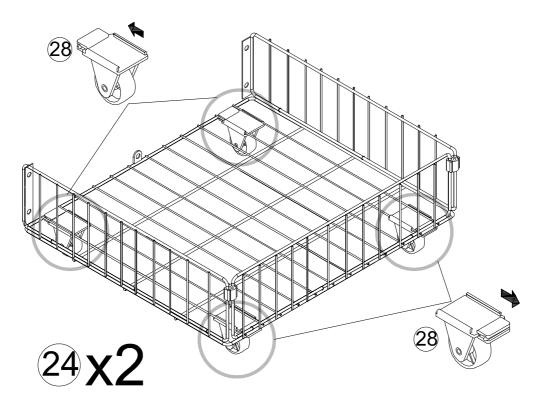

Place the round iron tubes as shown for better assembly of the drawers.

28x 8PCS

