# Assembly Instructions

Caution: You must read this before you proceed

### **Care & Maintenance**







 Furniture may scratch floors. We recommend using furniture pads to protect your floors.



• Do not put hot items directly on furniture surface.



• Do not clean furniture with harsh cleansers or polish.



Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



• Do not write on furniture without a padded barrier to protect the surface.



• Do not place furniture outside . For indoor use only.



 Stains may be removed with mild soap solution and damp cloth.



• Children should not climb or jump on the furniture.



 Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in carton for hardware packs and legs. Sets often ship in multiple boxes and may arrive a day or two apart.

# **Upholstered Bed** N769P292572K/N769P292572E




Parts List		N769P292572K	
Label	Picture	Description	QTY
А		Headboard	1
В	<i>δ.</i>	Right Post	1
С	6	Left Post	1
D		Right Headboard Leg	1
Е		Left Headboard Leg	1
F		Side Panel	4
G		Footboard	1
Н		Back Center Rail	1

Parts L	<u>is</u> t N	N769P292572K	
Label	Picture	Description	QTY
I		Front Center Rail	1
J		Side Leg	2
К	8	Support Leg	1
L		Center Leg	1
М		Cross Brace	1
N		Back Slat	1
0		Front Slat	1
Р		V-Bracket	4
Q		Footboard Leg	2
R		Headboard Bracket	6

Hardware N769P292572K					
Label	Picture	Description	QTY		
1)		Bolt Ø5/16"×45mm	5		
2		Bolt Ø5/16"×35mm	5		
3		Bolt Ø5/16"×25mm	10		
4		Bolt Ø5/16"× 19mm	28		
5		Bolt Ø1/4" x 45mm	1		
6	CITITIO	Screw M4 X 30mm	8		
7		L-Allen Key 4mm	1		
8		Screwdriver (Not provided)	1		

# **Assembly Preparation**

Before Beginnin g Assembly

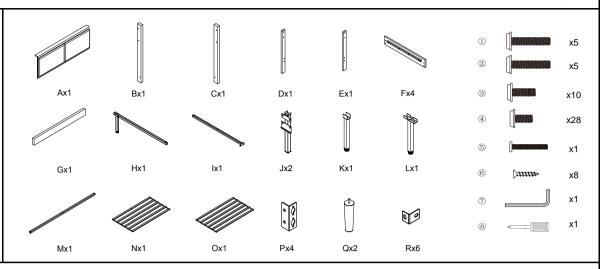



- · Read instructions, cover to cover-
- **1** 2x
- Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




Assemble on a clean non-marring surface (packing foam)-




Save all packaging until finished-

# Assembly Steps


### Overview

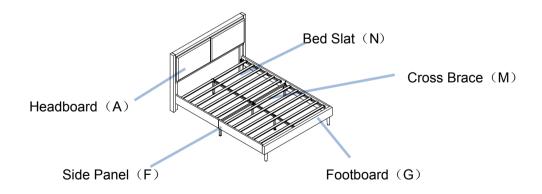


This Upholstered Bed has multiple parts and may require up to some 30 minutes to assemble. To give you an overview of the Upholstered Bed parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

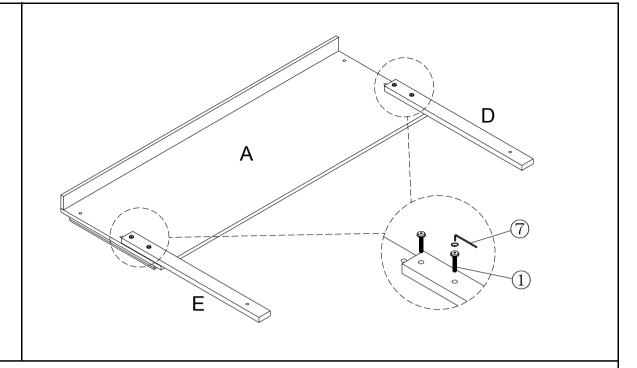


Attached Right Headboard Leg (D) and Left Headboard Leg (E) to Headboard (A) by using Bolt (1) and L-Allen Key (7).

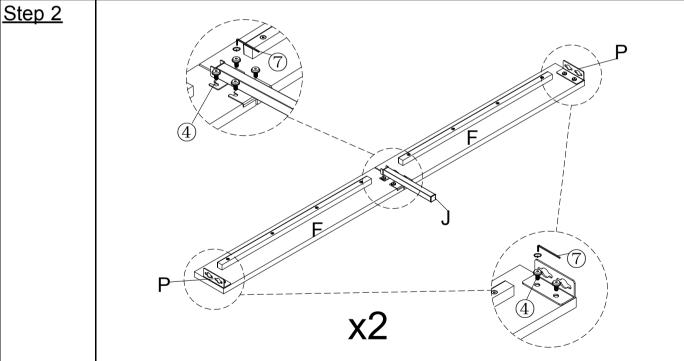


Attached Side Leg (J) to Side Panel (F) by using Bolts (4) and Attached V-Bracket (P) to Side Panel (F) by using Bolts (4) and L-Allen Key(7).

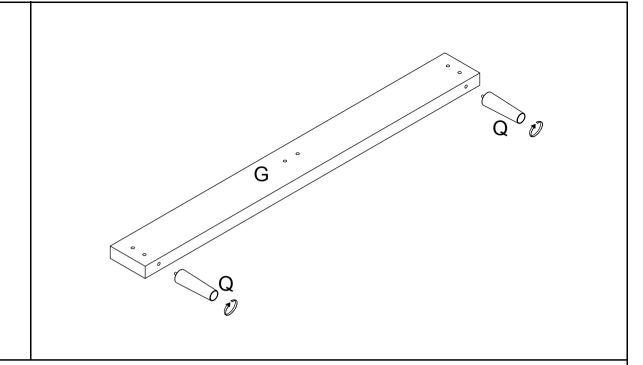

Attached Footboard Leg (Q) to Footboard (G).

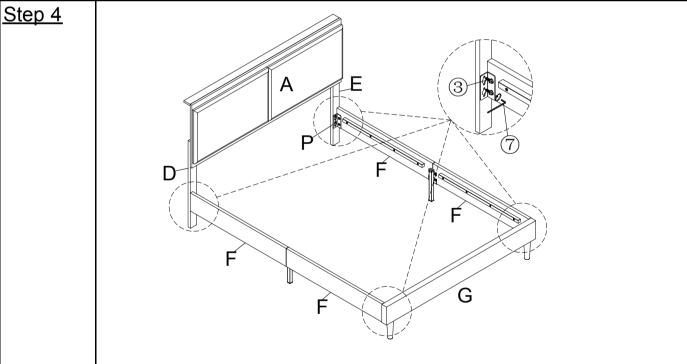


Attached V-Bracket (P) and Side Panel (F) to Right Headboard Leg (D) and Left Headboard Leg (E) by using Bolts (③) and L-Allen Key (⑦), AttachedV-Bracket (P) and Side Panel (F) to Footboard (G) by using Bolts (3) and L-Allen Key(7).

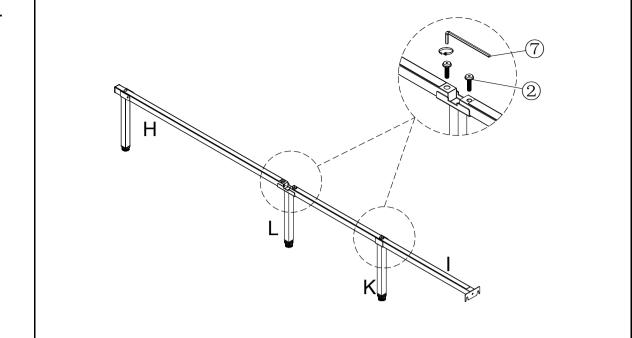


Attached Front Center Rail (I) to Support Leg (K) by using Bolts (②) and L-Allen Key (⑦), Attached Front Center Rail (I) and Back Center Rail (H) to Center Leg (L) by using Bolts (②) and L-Allen Key (⑦).

# Step 6

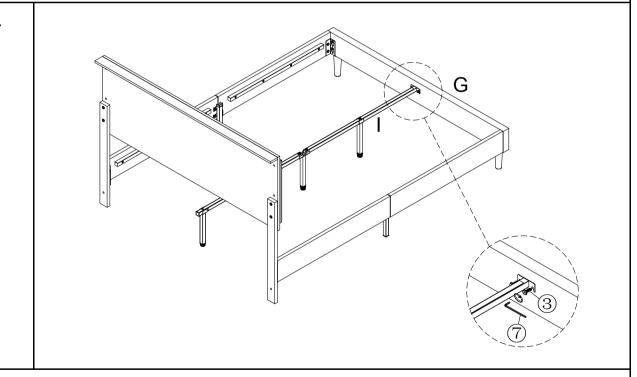


Attached Front Center rail (I) to Footboard (G) by using Bolts (③) and L-Allen Keg (⑦).

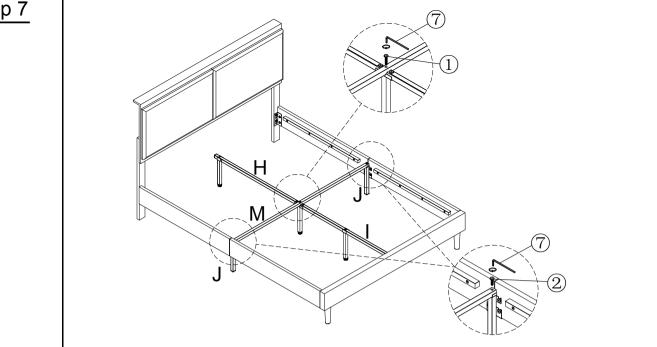


Attached Cross Brace (M) to Side Leg (J) by using Bolts (②) and L-Allen Key (⑦), Attached Cross Brace (M) to Center Leg (L) by using Bolt (①) and L-Allen Key(⑦).


### Step 8

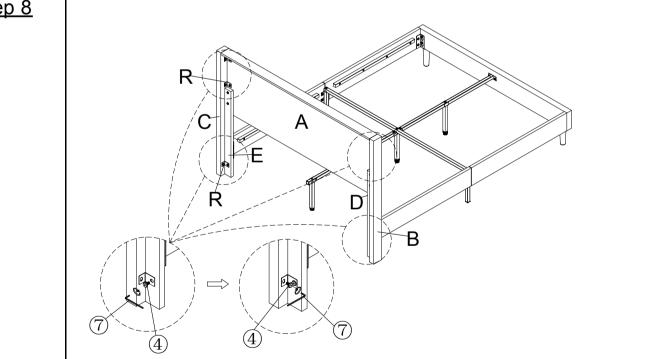

Attached Headboard Bracket (R) to Headboard (A) and Right Post (B) and Right Headboard Leg (D) by using Bolts (4) and L-Allen Keg (7), Attached Headboard Bracket (R) to Headboard (A) and Left Post (C) and Left Headboard Leg (E) by using Bolts (4) and L-Allen Keg (7).

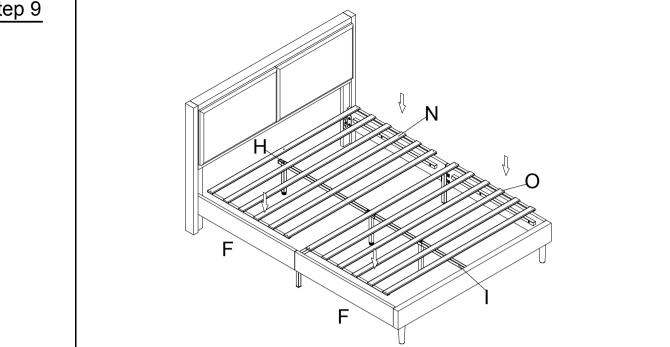

Attached Back Slat (N) to Side Panel (F) and Back Center Rail (H), Attached Front Slat (O) to Side Panel (F) and Front Center Rail (I).

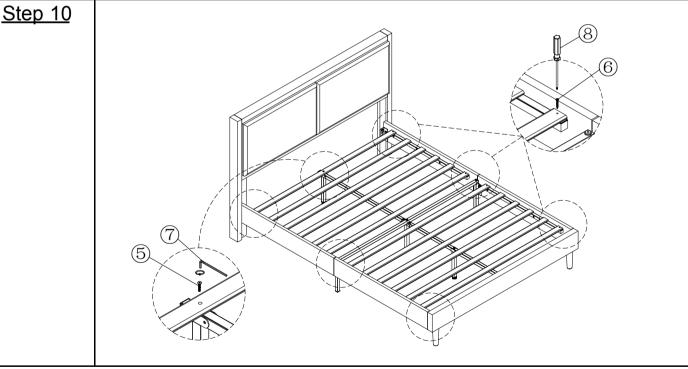

Attached Back Slat (N) to Side Panel (F) and Back Center Rail (H) by using Screws (6) and Screwdriver (8) Bolt (5) and L-Allen Key (7), Attached Front Slat (O) to Side Panel (F) and Front Center Rail (I) by using Screws (6) and Screwdriver (8).



Your Upholstered Bed is ready for use. This Upholstered Bed can only be used on a flat, level surface.