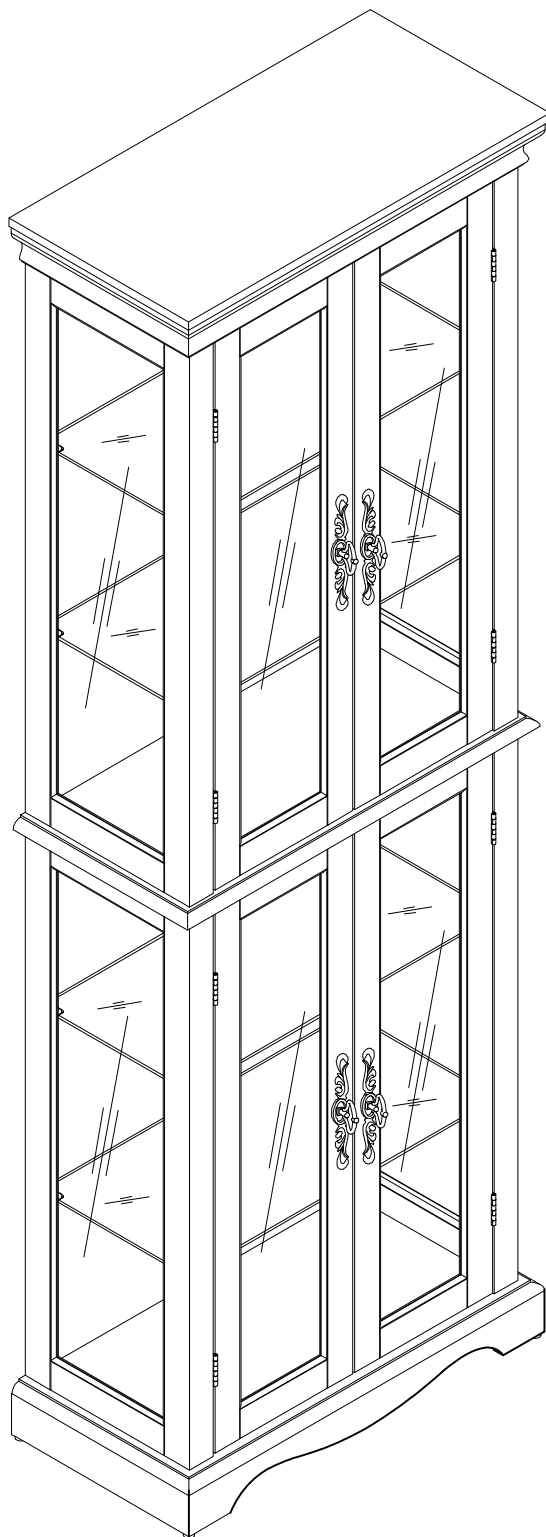


# Square 4 Doors Glass Cabinet

Item: YL-006

## Assembly Instruction

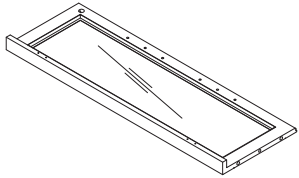
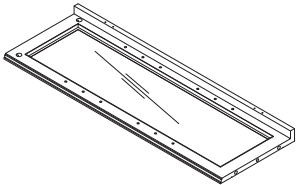
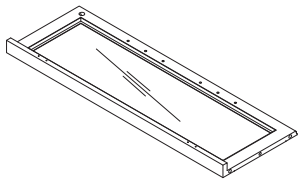
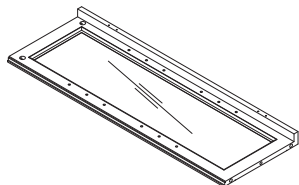
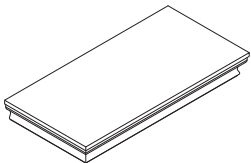
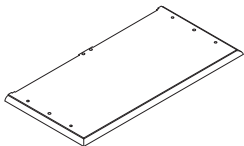


MADE IN CHINA

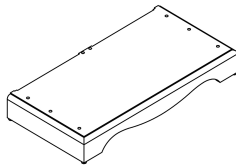
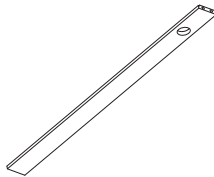
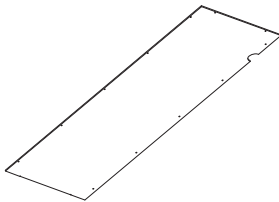
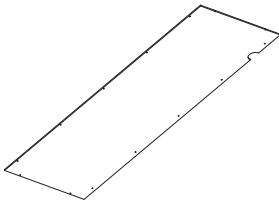
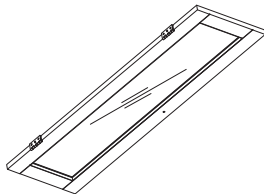
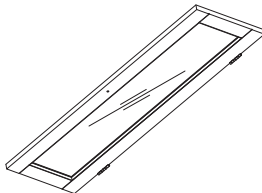
# ASSEMBLY INSTRUCTION

Page 2 of 11

## Part List:

ITEM	DESCRIPTION	PART	QTY
1	Upper left side		1
2	Upper right side		1
3	Lower left side		1
4	Lower right side		1
5	Top panel		1
6	Middle panel		1

## Part List:

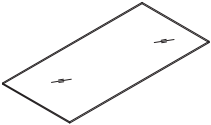

ITEM	DESCRIPTION	PART	QTY
7	Base		1
8	Back post		2
9	Upper back panel		2
10	Lower back panel		2
11	Left door		2
12	Right door		2

MADE IN CHINA


# ASSEMBLY INSTRUCTION

Page 3 of 11










## Part List:

ITEM	DESCRIPTION	PART	QTY
13	Glass shelf		4
14	Lamp unit		1










## Part List:

ITEM	DESCRIPTION	PART	QTY
15	Lamp Bulb	 120V 4W Type T Bulb	1

## Hardware List:

ITEM	DESCRIPTION	PART	QTY
A	Camlock bolt		9
B	Camlock		9
C	Wooden dowel	 Φ8*30mm	13
D	Bolt	 Φ6*32mm	9
E	Allen wrench		1
F	Knob		4
G	Machine screw	 Φ 4*25mm	4
H	Short wood screw	 Φ3*15mm	30
I	Magnet		2

## Hardware List:

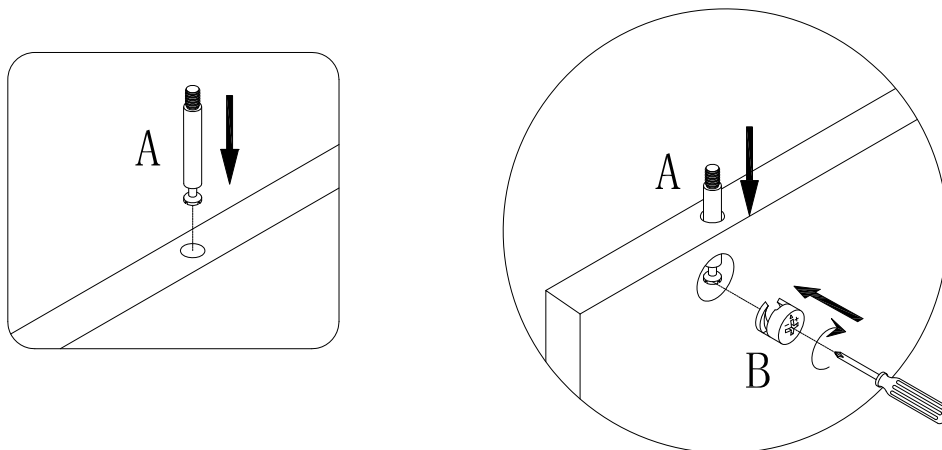
ITEM	DESCRIPTION	PART	QTY
J	Handle		4
K	Back screw	 Φ3*12 mm	54
L	Shelf support		17
M	Safety wall strap		1
N	Plastic anchor		1
O	Mounting screw	 Φ4*38mm	1
Q	Wooden dowel	 Φ8*50mm	2
R	Short wood screw	 Φ3*12 mm	2
S	Sticker for B: Camlock	 Φ 20mm	9

Tip: It is recommended to keep all hardware in a box to avoid loss during installation.

MADE IN CHINA

- \* Required screwdriver & mallet, not included.
- \* Before discarding packing materials, please check to make sure that all parts and hardware is present.
- \* Two people needed for assembly.
- \* Please follow the instructions closely; do not over tighten screws or bolts unless instructed.
- \* Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.

## Guideline For Assembling of Cam Lock(A & B)






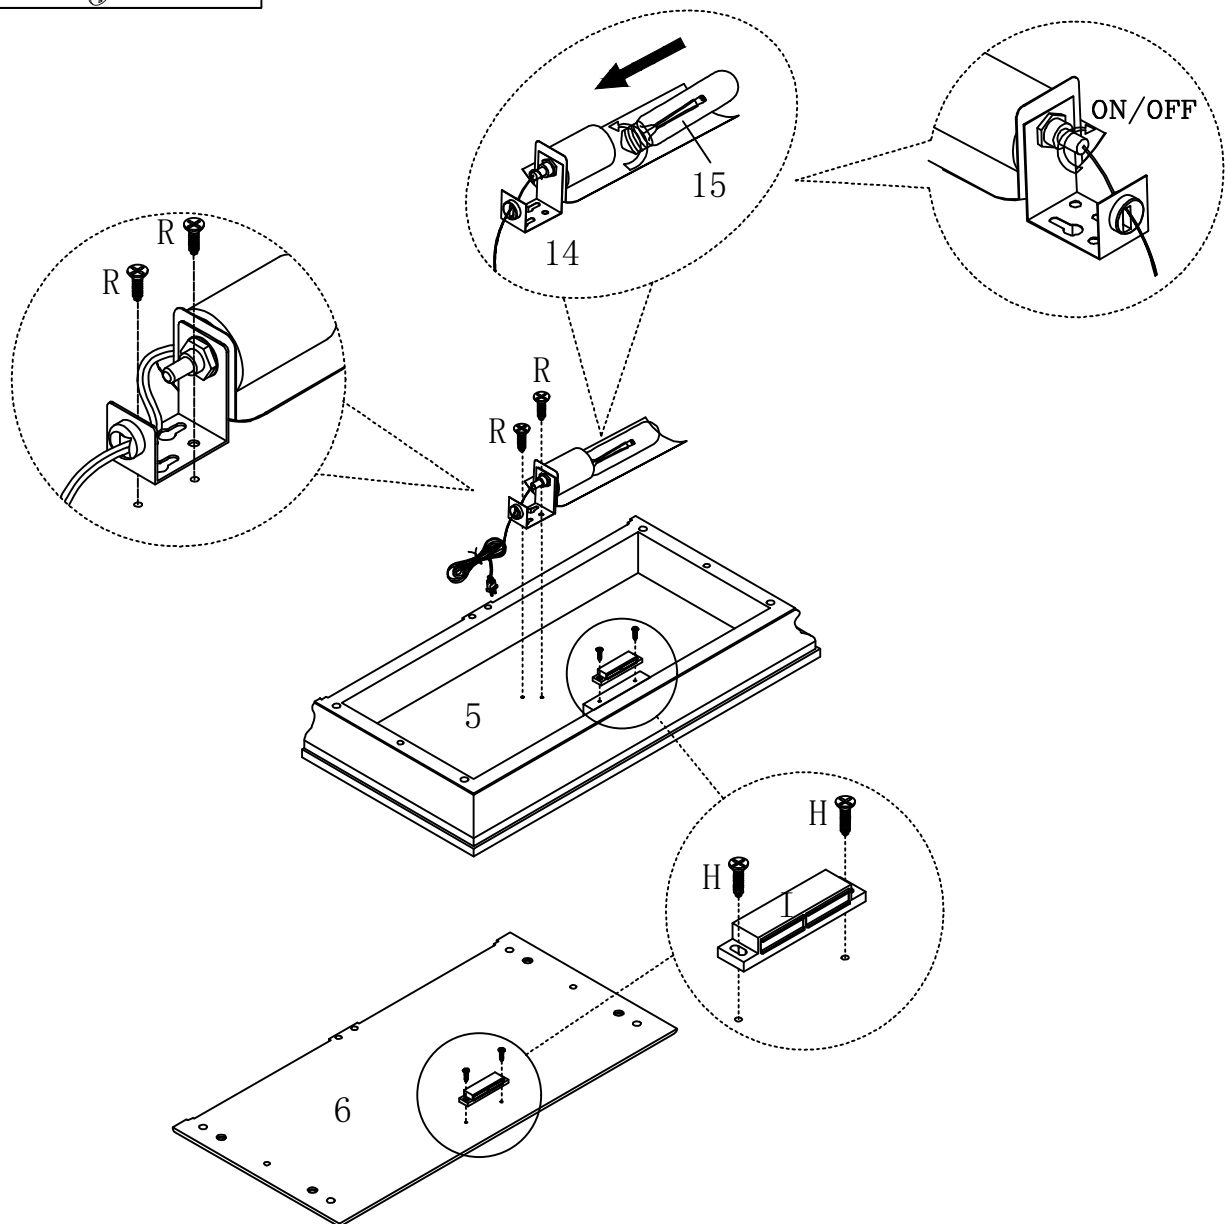
Screw camlock bolt (A) to wood part.

Do not assemble camlock (B) unless instructed.

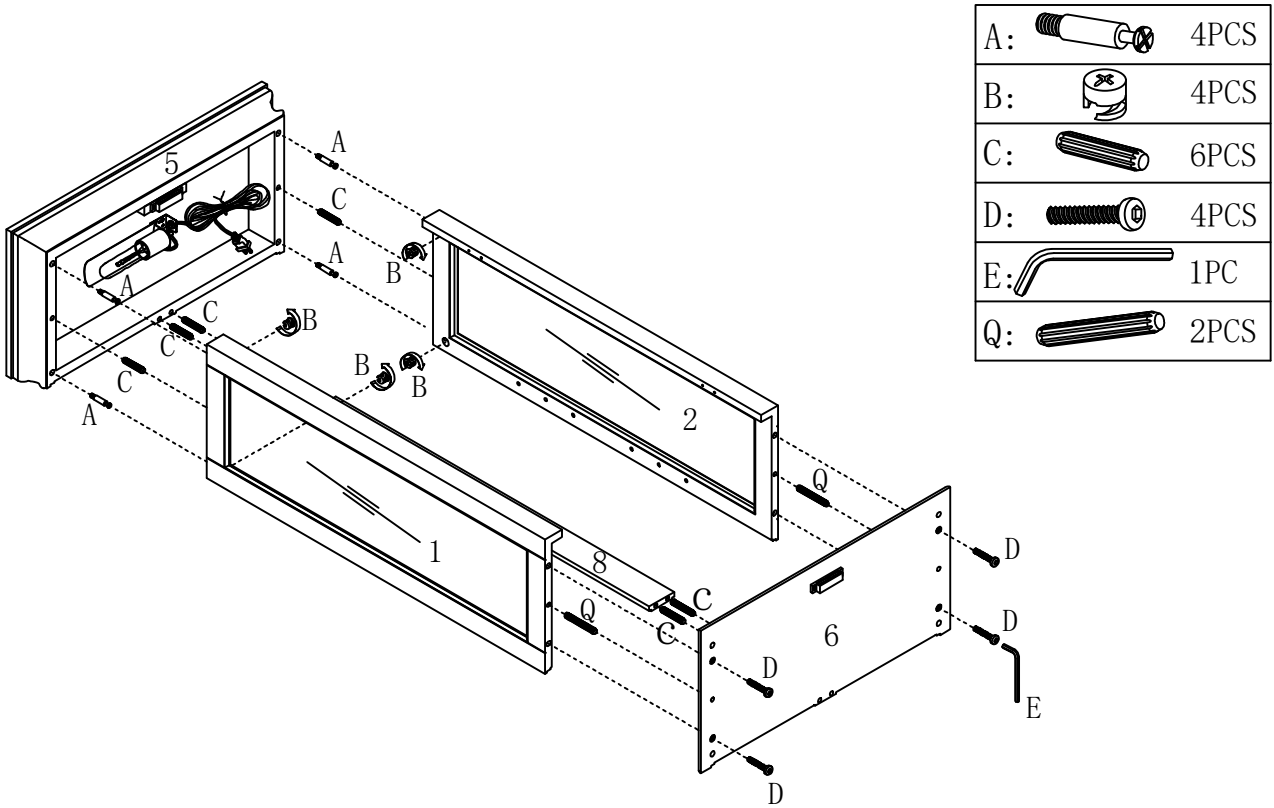
To assemble camlock (B), ensure long side of the + is facing the bolt (A) before inserting into hole.

## STEP 1

H:		4PCS
I:		2PCS
R:		2PCS

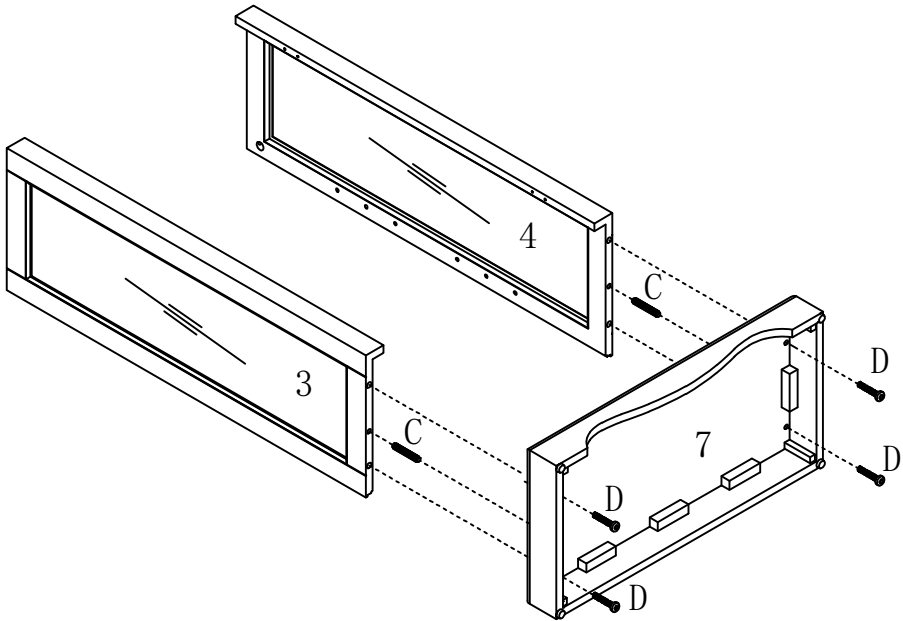


STEP 2






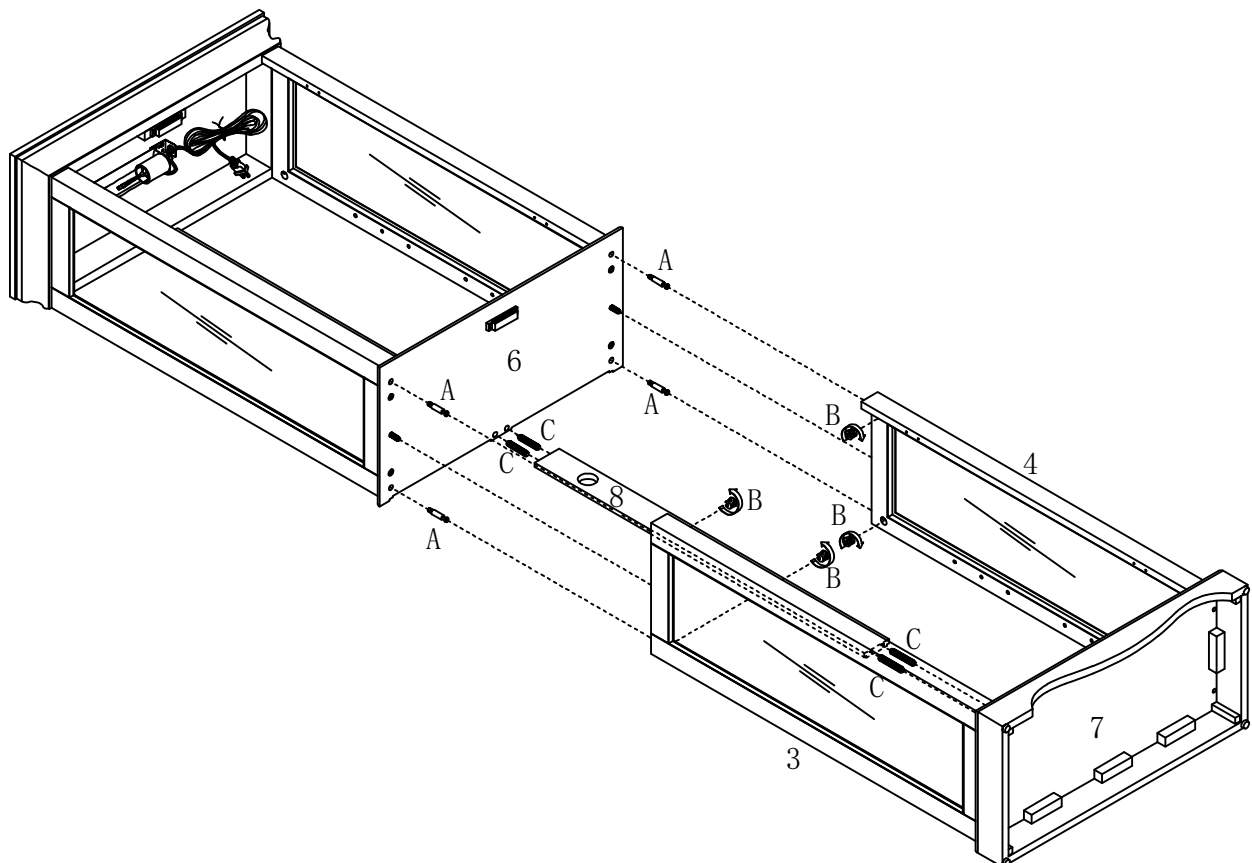
STEP 3

C:		2PCS
D:		4PCS





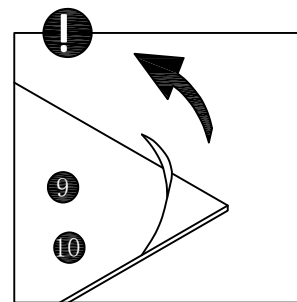
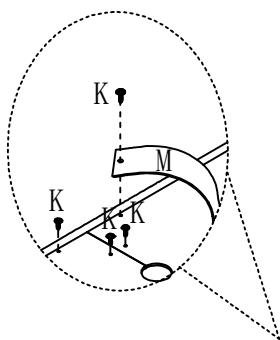
## STEP 4

A:		4PCS
B:		4PCS
C:		4PCS

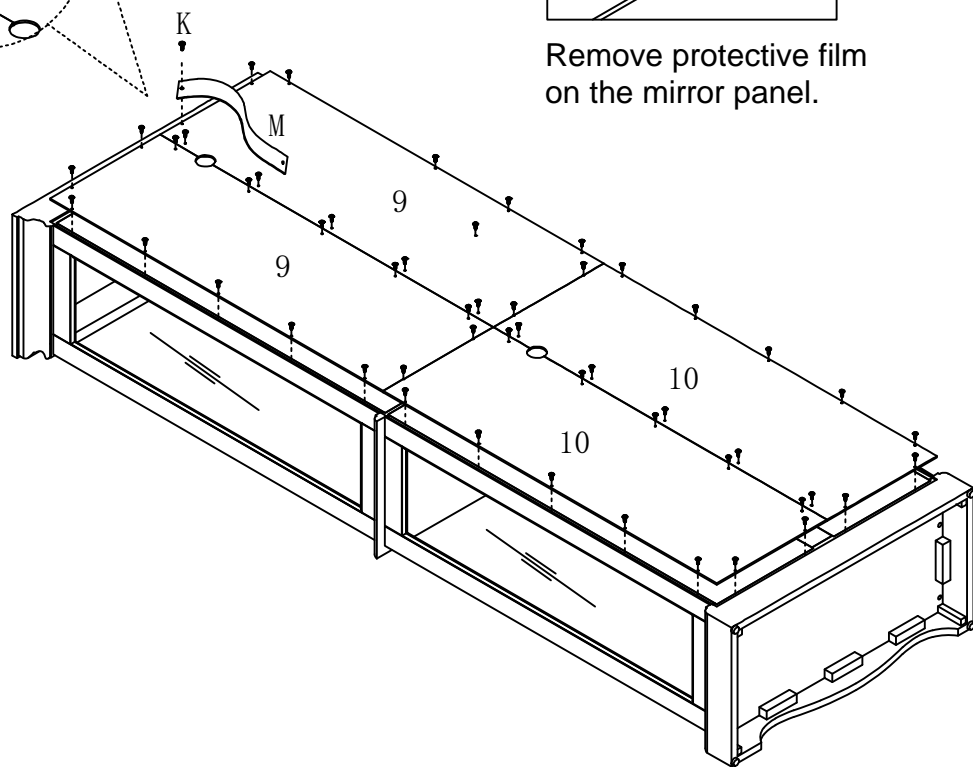


## STEP5

K:		52PCS
M:		1PC







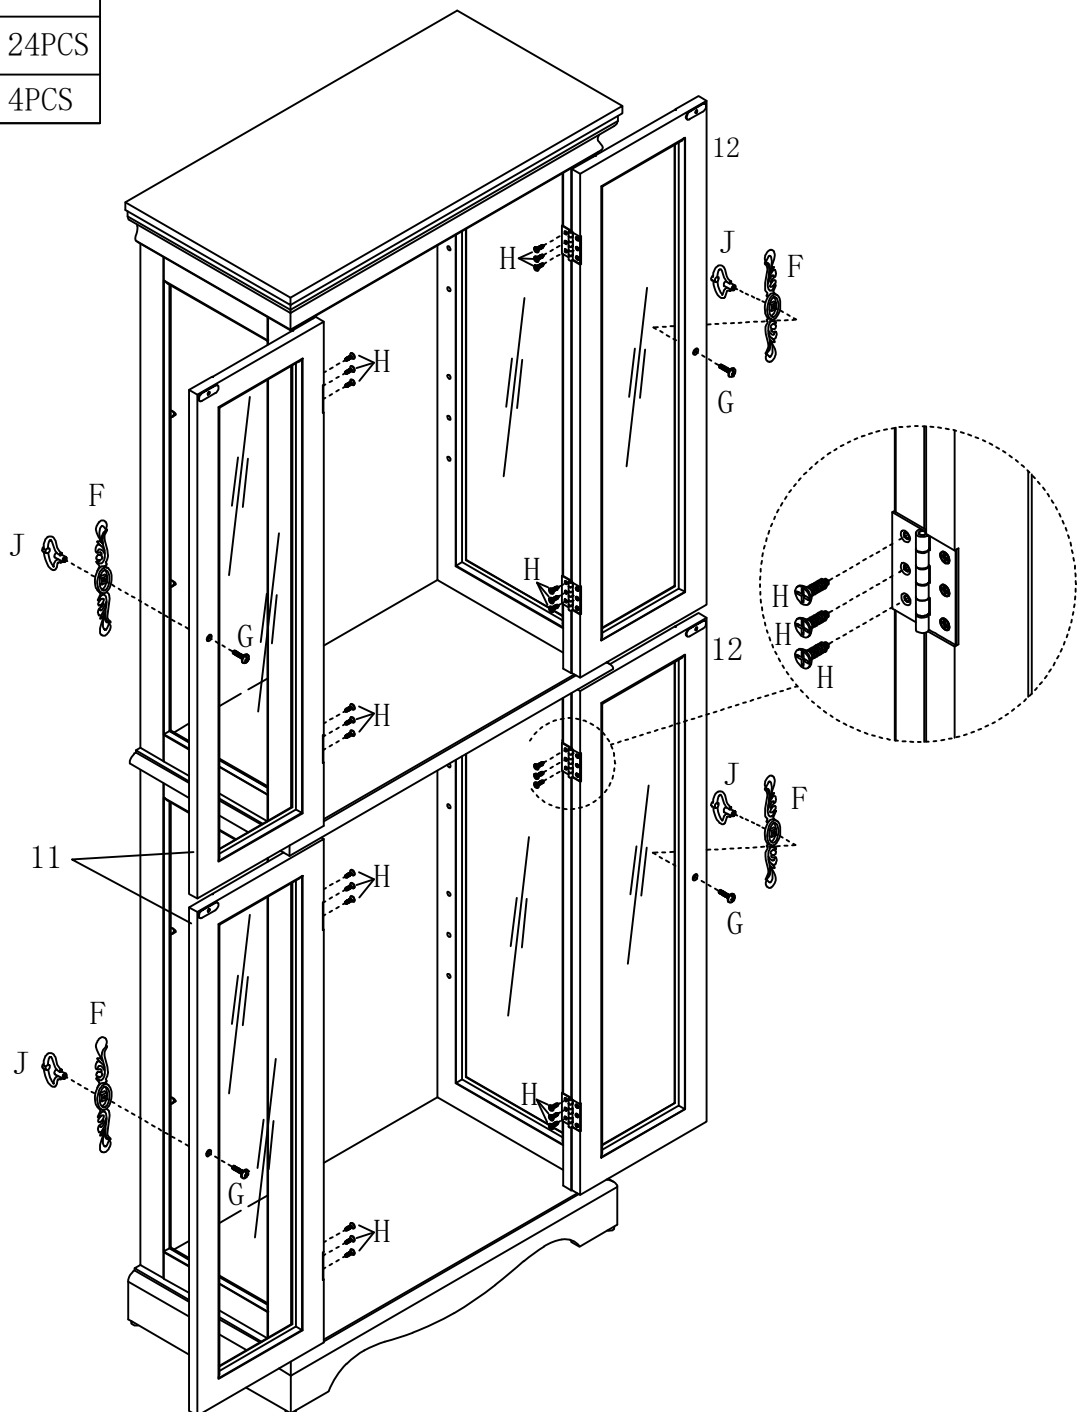
Remove protective film  
on the mirror panel.






## STEP 6

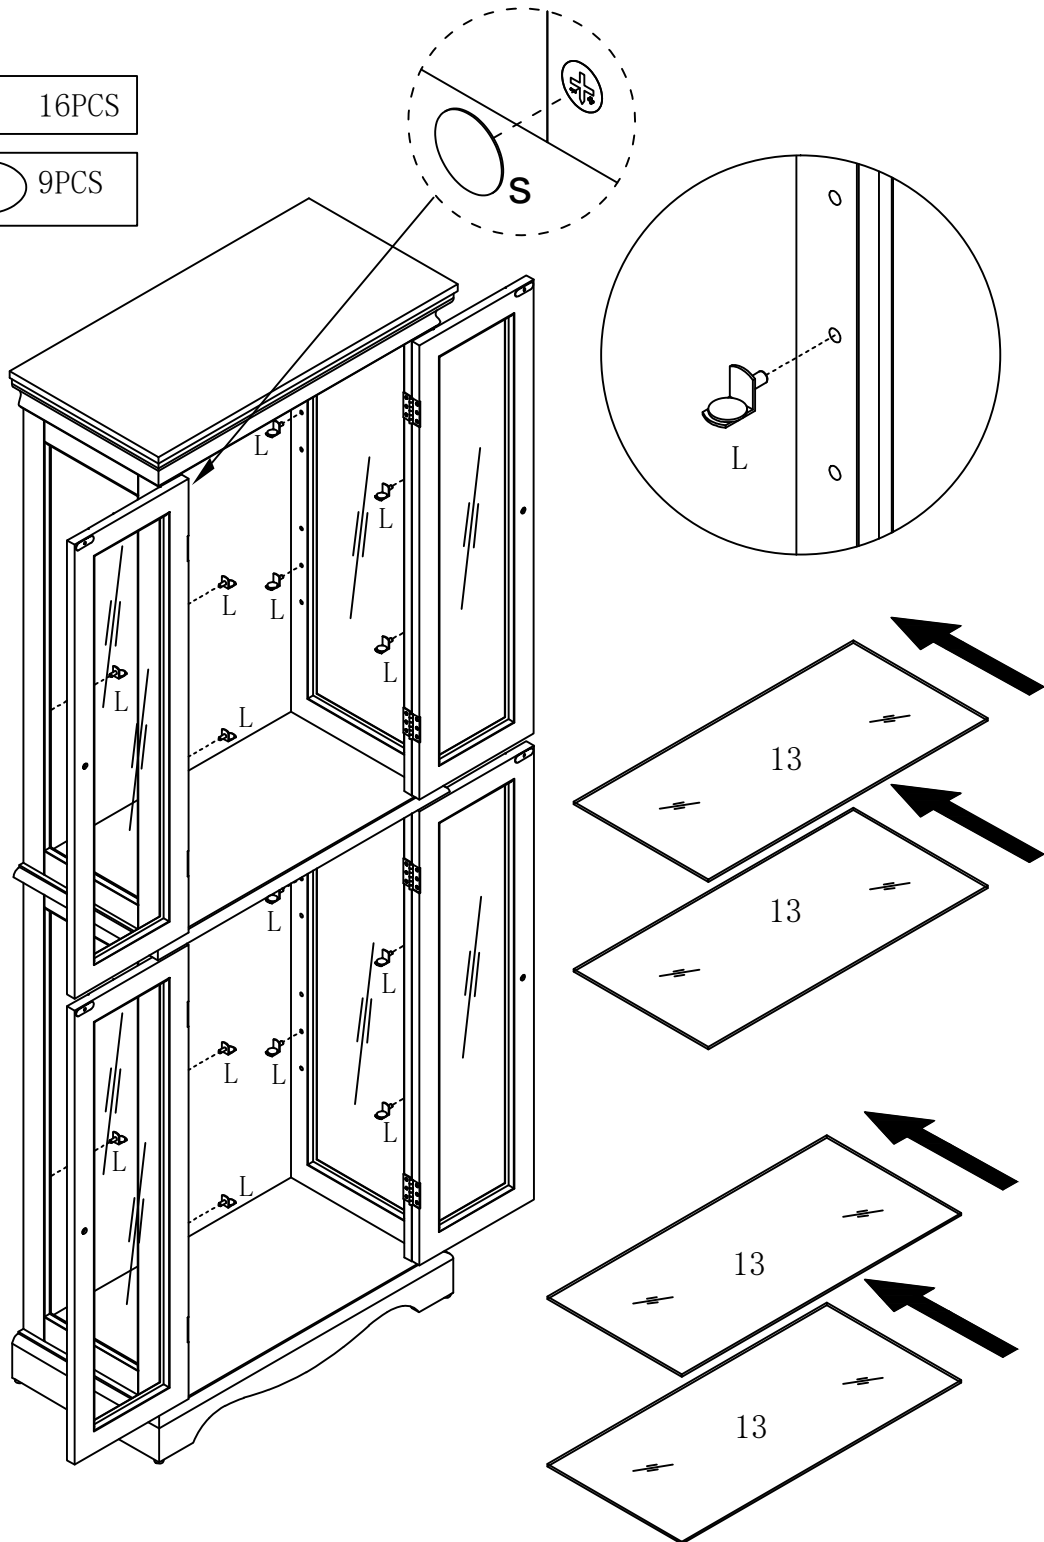
F:		4PCS
G:		4PCS
H:		24PCS
J:		4PCS





## STEP 7

L:  16PCS

S:  9PCS



## STEP8

N:		1PC
O:		1PC

