



ASSEMBLY INSTRUCTIONS *COASTER FINE FURNITURE*



Fine Furniture for every stage of life

315956Q(B1&B2)
Queen Bed

ITEM: 315956Q (B1&B2)

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

35 MINUTES

PARTS IDENTIFICATION


B1 (BOX 1)

A HEADBOARD

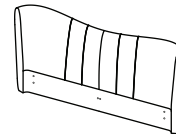

1PC

B FOOTBOARD PANEL



1PC

B2 (BOX 2)

C FOOTBOARD LEG



2PCS

D BED SLATS WITH 1 HOLE



3PCS

E BED SLATS WITHOUT HOLES



2PCS

F CENTER RAIL



1PC

G CENTER RAIL SUPPORT WITH LEVELER




3PCS

H WOOD CLEAT



2PCS

I LEFT BED RAIL




1PC

J RIGHT BED RAIL



1PC

K CONCEAL PANEL



5PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 315956Q (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.











WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 315956Q(B2)

1	ALLEN WRENCH (Φ4 X 95mm- ZINC)		1PC
2	SHORT BOLT (Φ6 X 30mm- RBW)		8PCS
3	MEDIUM BOLT (Φ6 X 45mm- RBW)		4PCS
4	LONG BOLT (Φ6 X 60mm- RBW)		3PCS
5	SHORT FLAT HEAD SCREW (Φ4 X 25mm- RBW)		10PCS
6	LONG FLAT HEAD SCREW (Φ4 X 32mm- RBW)		12PCS
7	LOCK WASHER (Φ6 - RBW)		8PCS
8	FLAT WASHER (Φ7 X 19mm X 2.0 - RBW)		8PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **315956Q (B1&B2)**




ASSEMBLY INSTRUCTIONS

STEP 1

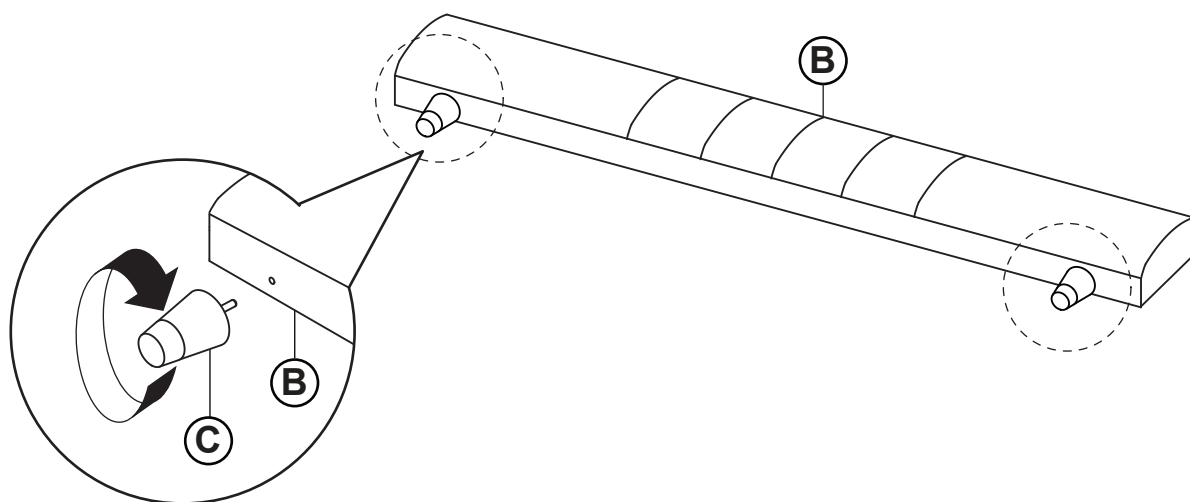

STEP 2

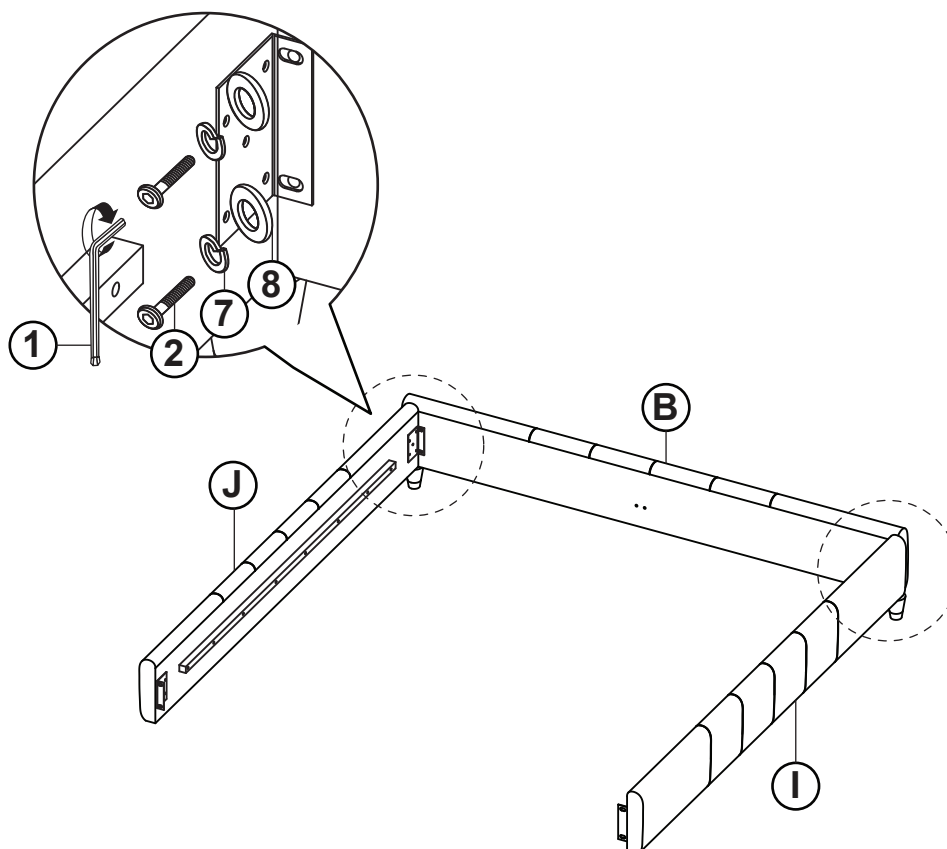


ITEM: 315956Q (B1&B2)


ASSEMBLY INSTRUCTIONS



STEP 3

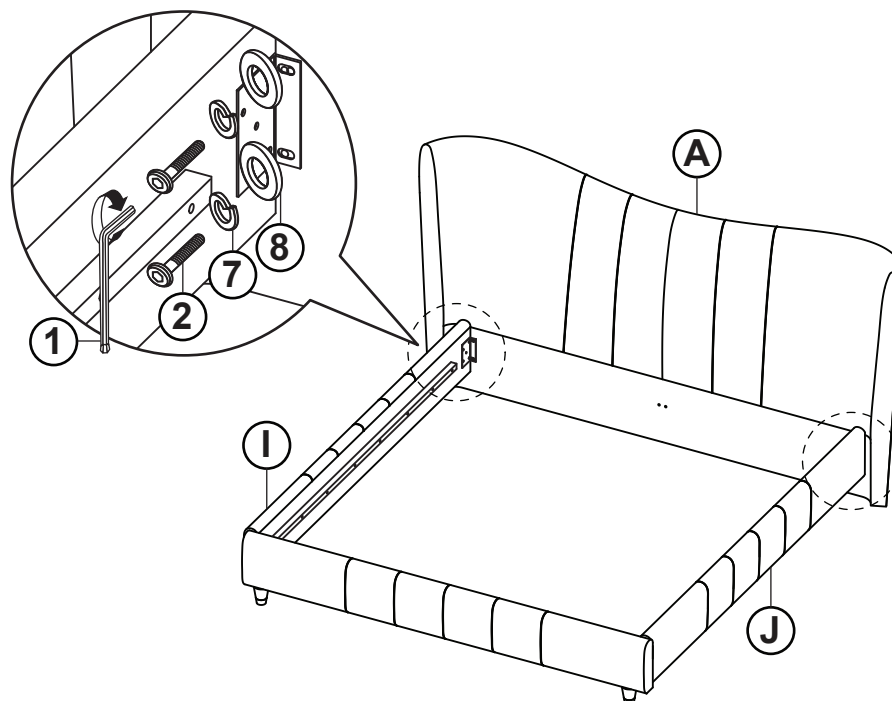

STEP 4

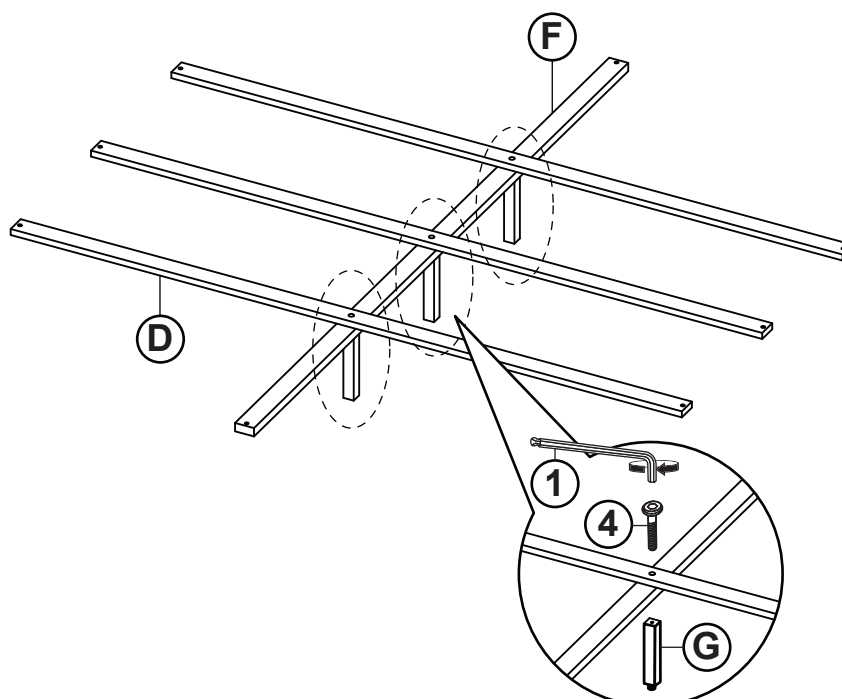


ITEM: **315956Q (B1&B2)**


ASSEMBLY INSTRUCTIONS



STEP 5

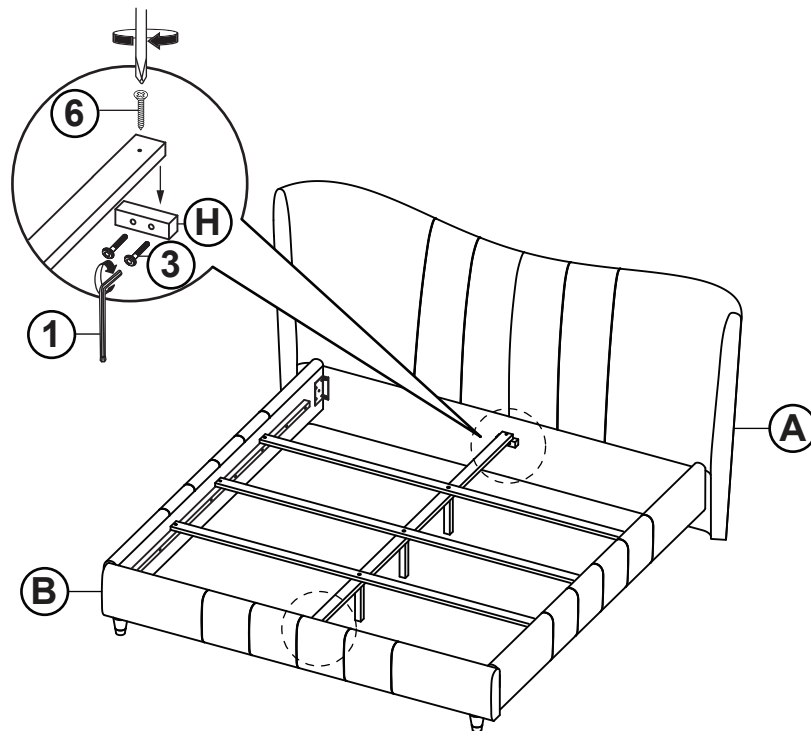

STEP 6

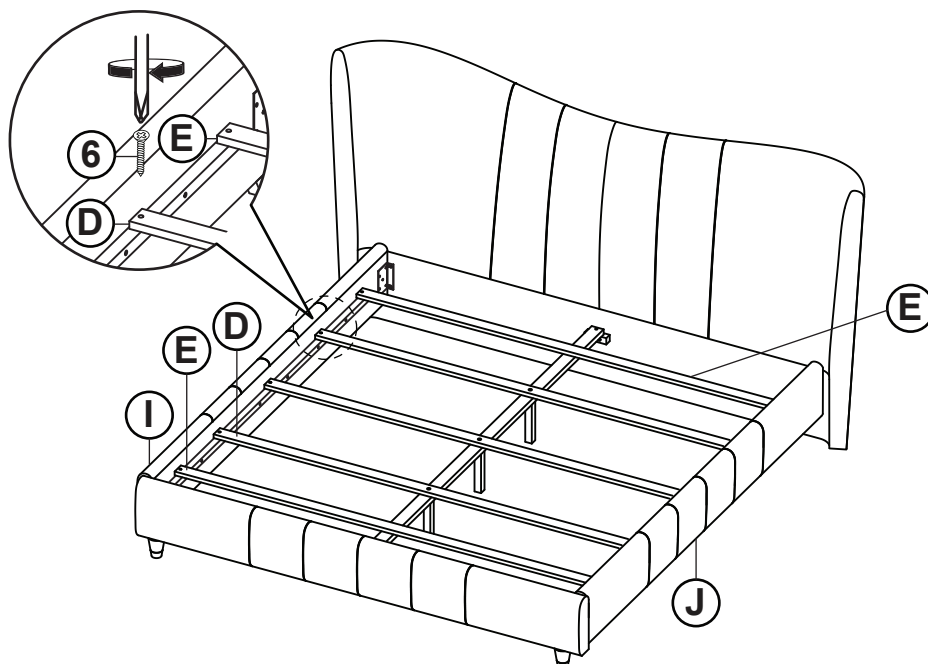


ITEM: **315956Q (B1&B2)**




ASSEMBLY INSTRUCTIONS


STEP 7

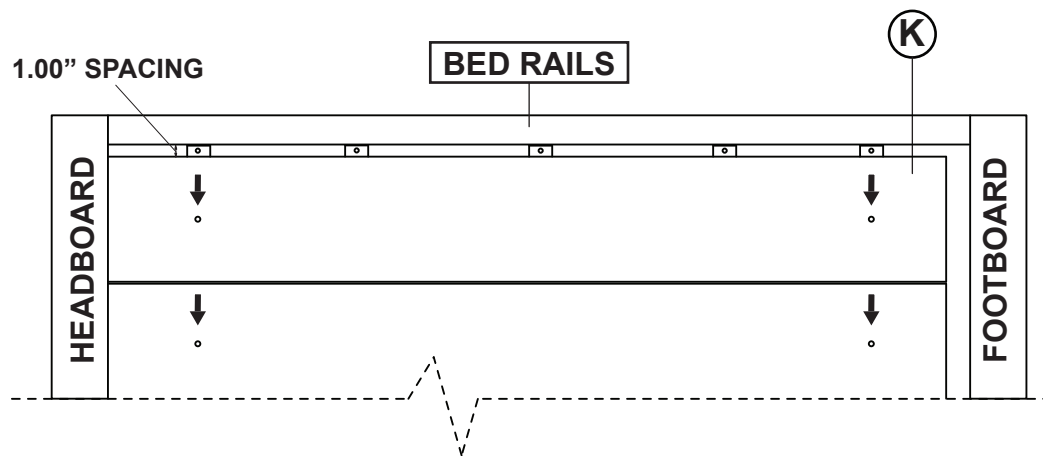

TIGHTEN THE FLAT HEAD SCREW(5) BY FOLLOW THE ARROW AS SHOWN.

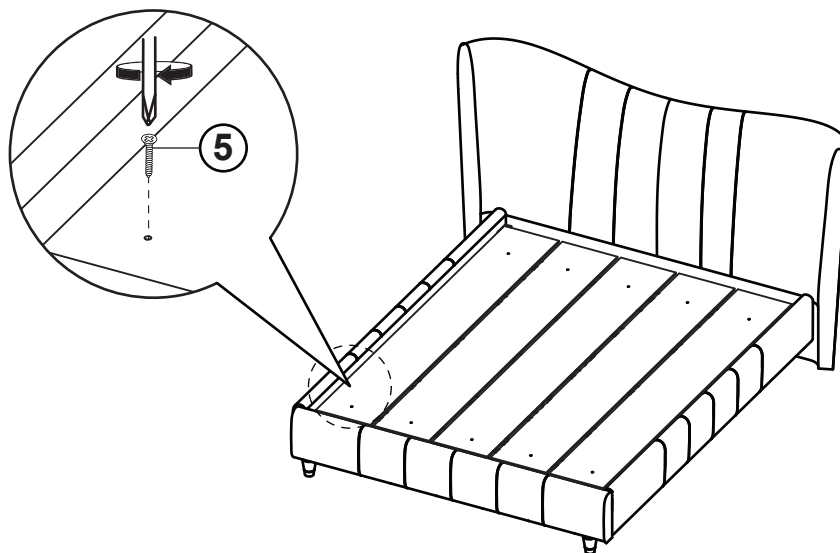


STEP 8 COMPLETE

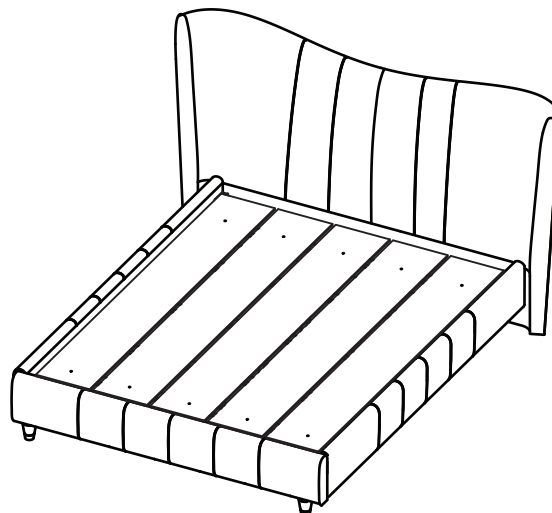

ITEM: **315956Q (B1&B2)**



Inner Size : 61.00"W x 81.25"D

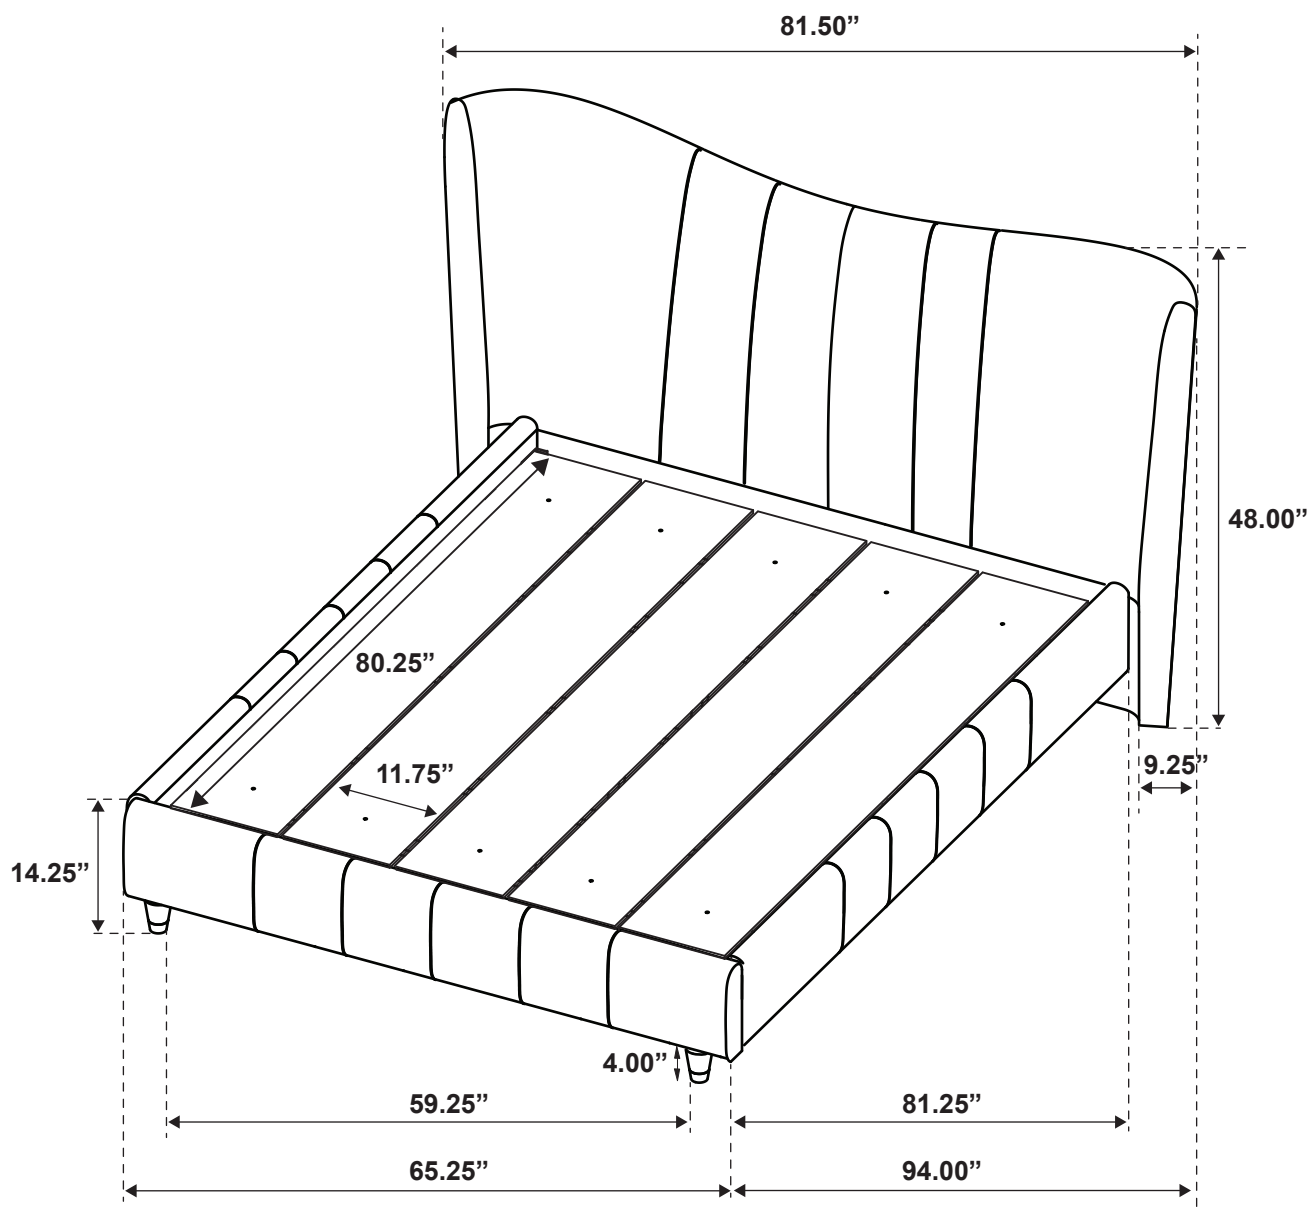

Note: Dimension tolerance $\pm 5\%$