

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**222661Q(B1-B4)**  
**Queen Bed**

# ITEM: 222661Q(B1-B4)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

35 MINUTES

## PARTS IDENTIFICATION

### B1 (BOX 1)

A HEADBOARD PANEL



1PC

B HEADBOARD SUPPORT



2PCS

C ADAPTER



1PC

### B2 (BOX 2)

D LEFT WING



1PC


E RIGHT WING



1PC

### B3 (BOX 3)

F FOOTBOARD PANEL



1PC

### B4 (BOX 4)

G FOOTBOARD LEG



2PCS

H BED SLAT




5PCS

I BED SLAT SUPPORT WITH LEVELER



5PCS

J LEFT BED RAIL



1PC

K RIGHT BED RAIL



1PC

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 222661Q(B1-B4)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.










### WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B4 (BOX 4) - HARDWARE PACK IS LOCATED IN 222661Q(B4)

1	<b>ALLEN WRENCH</b> (Φ4 X 95mm- ZINC)		1PC
2	<b>SHORT BOLT</b> (Φ6 X 30mm - RBW)		4PCS
3	<b>MEDIUM BOLT</b> (Φ6 X 45mm - RBW)		17PCS
4	<b>LONG BOLT</b> (Φ6 X 60mm - RBW)		6PCS
5	<b>FLAT HEAD SCREW</b> (Φ4 X 32mm - RBW)		10PCS
6	<b>LOCK WASHER</b> (Φ6 - RBW)		22PCS
7	<b>FLAT WASHER</b> (Φ7 X 19mm X 2.0 - RBW)		22PCS

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **222661Q(B1-B4)**




## ASSEMBLY INSTRUCTIONS

### STEP 1

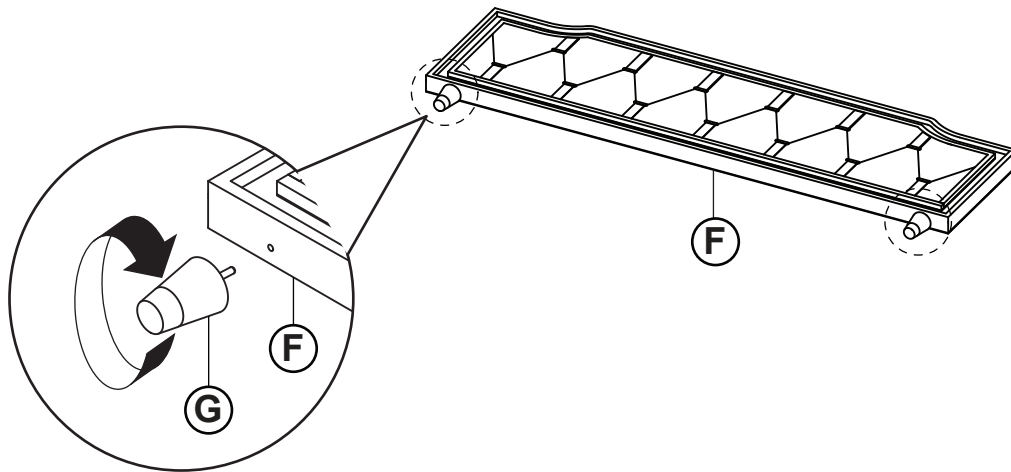


### STEP 2

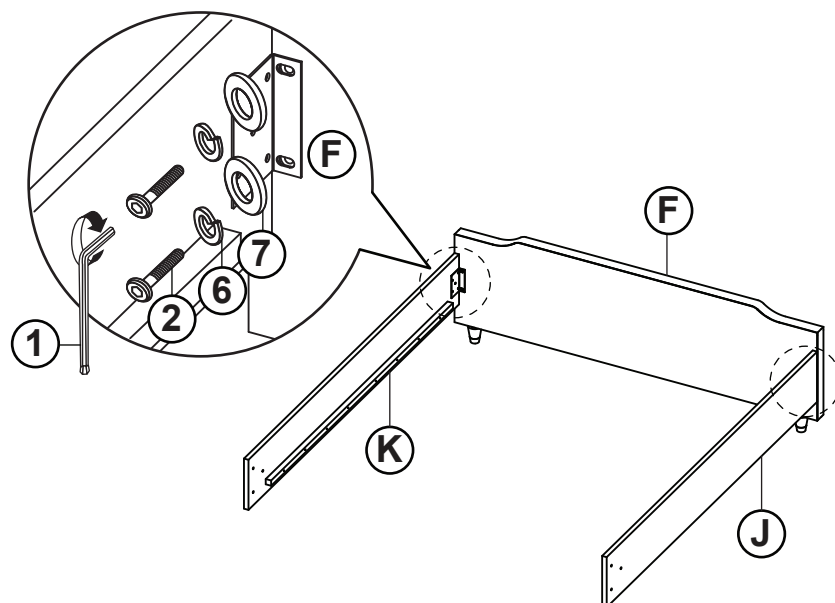

### STEP 3

Hand tighten all the bolts

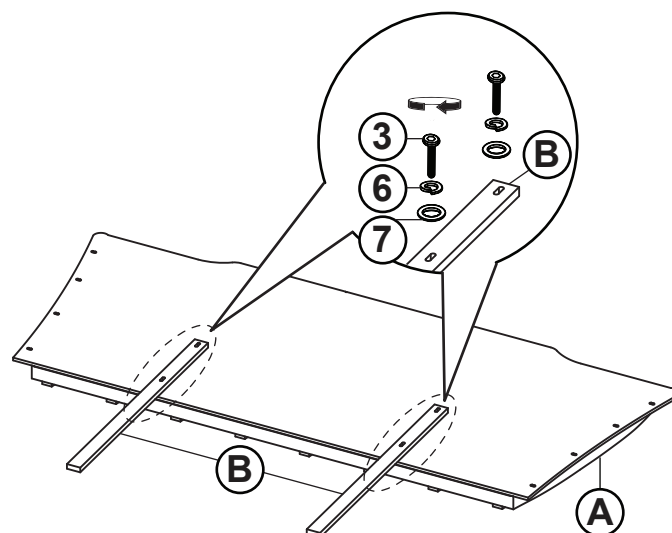


ITEM: **222661Q(B1-B4)**



## ASSEMBLY INSTRUCTIONS


### **STEP 4**

Hand tighten all the bolts

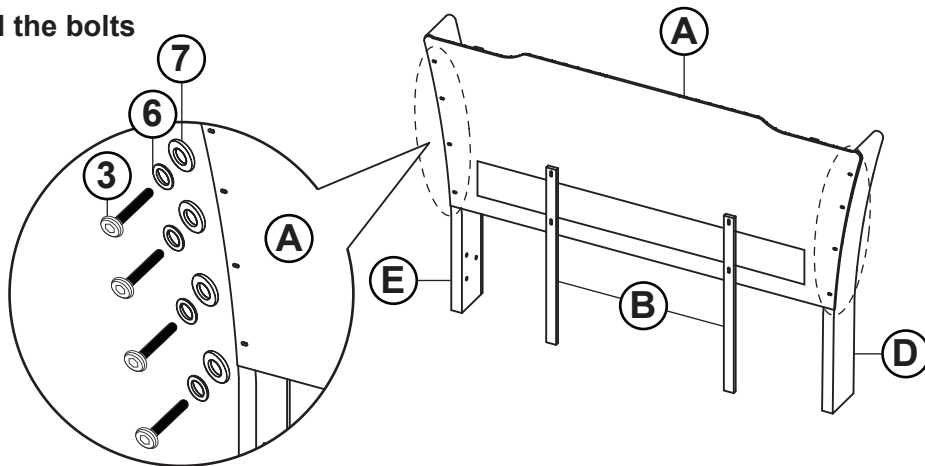


### **STEP 5**

Fully tighten all the bolts  
using Allen Wrench (1)  
at Step 3,4 & 5

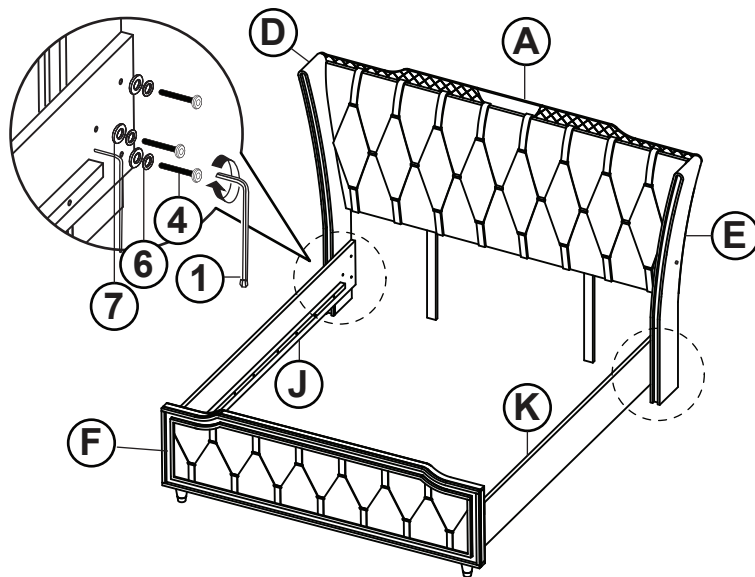

### **STEP 6**

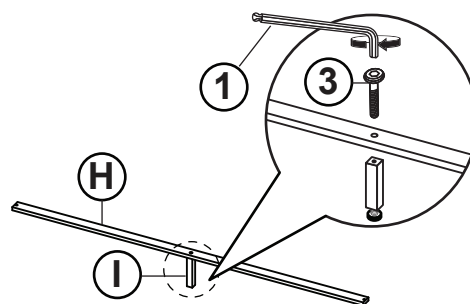


ITEM: **222661Q(B1-B4)**




## ASSEMBLY INSTRUCTIONS


### STEP 7

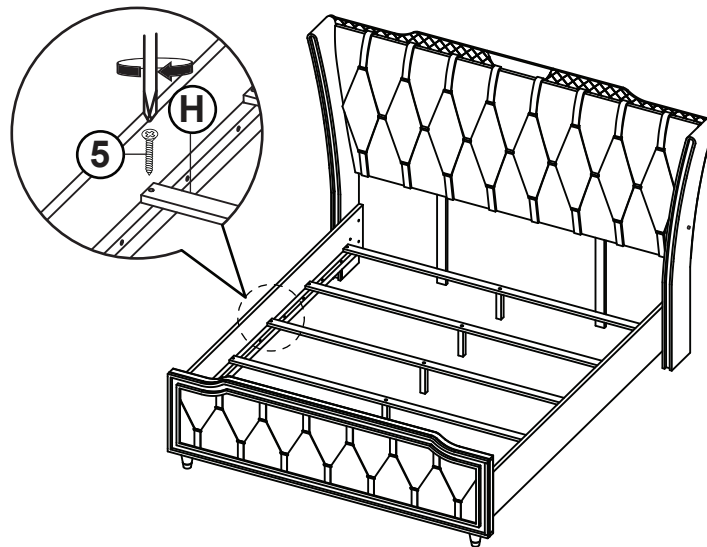

### STEP 8

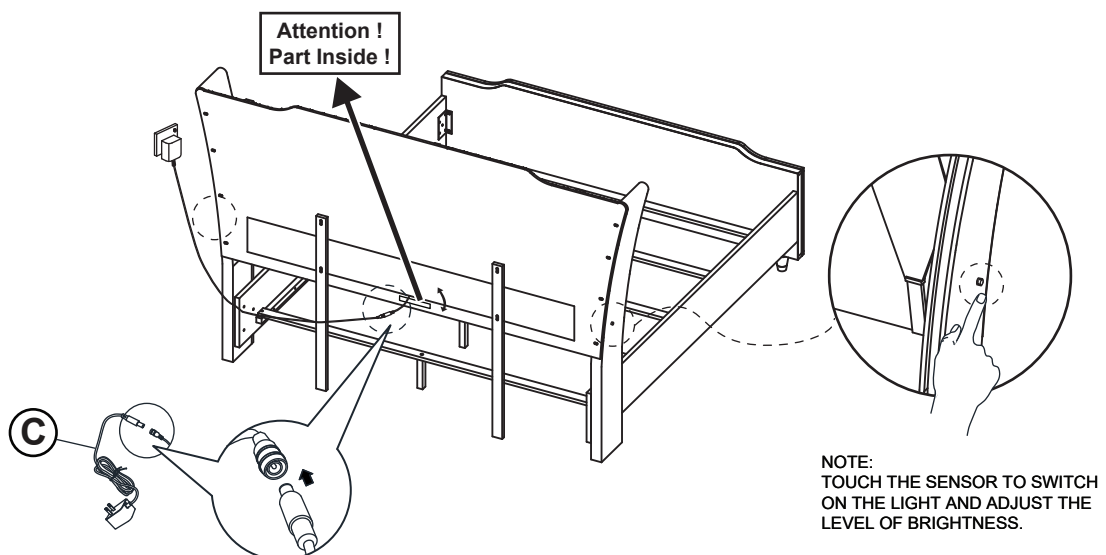


### STEP 9 **COMPLETE**

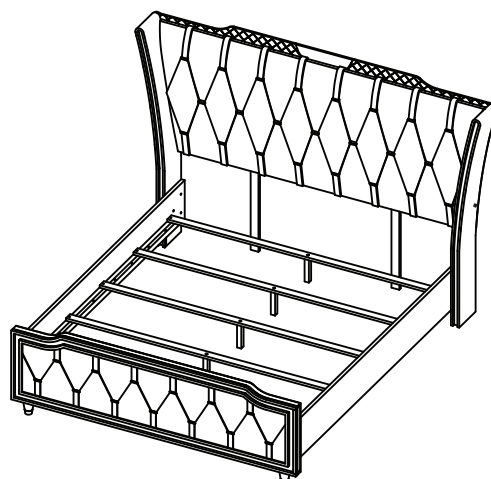

ITEM: **222661Q(B1-B4)**



Inner Size : 61.25"W x 80.75"D

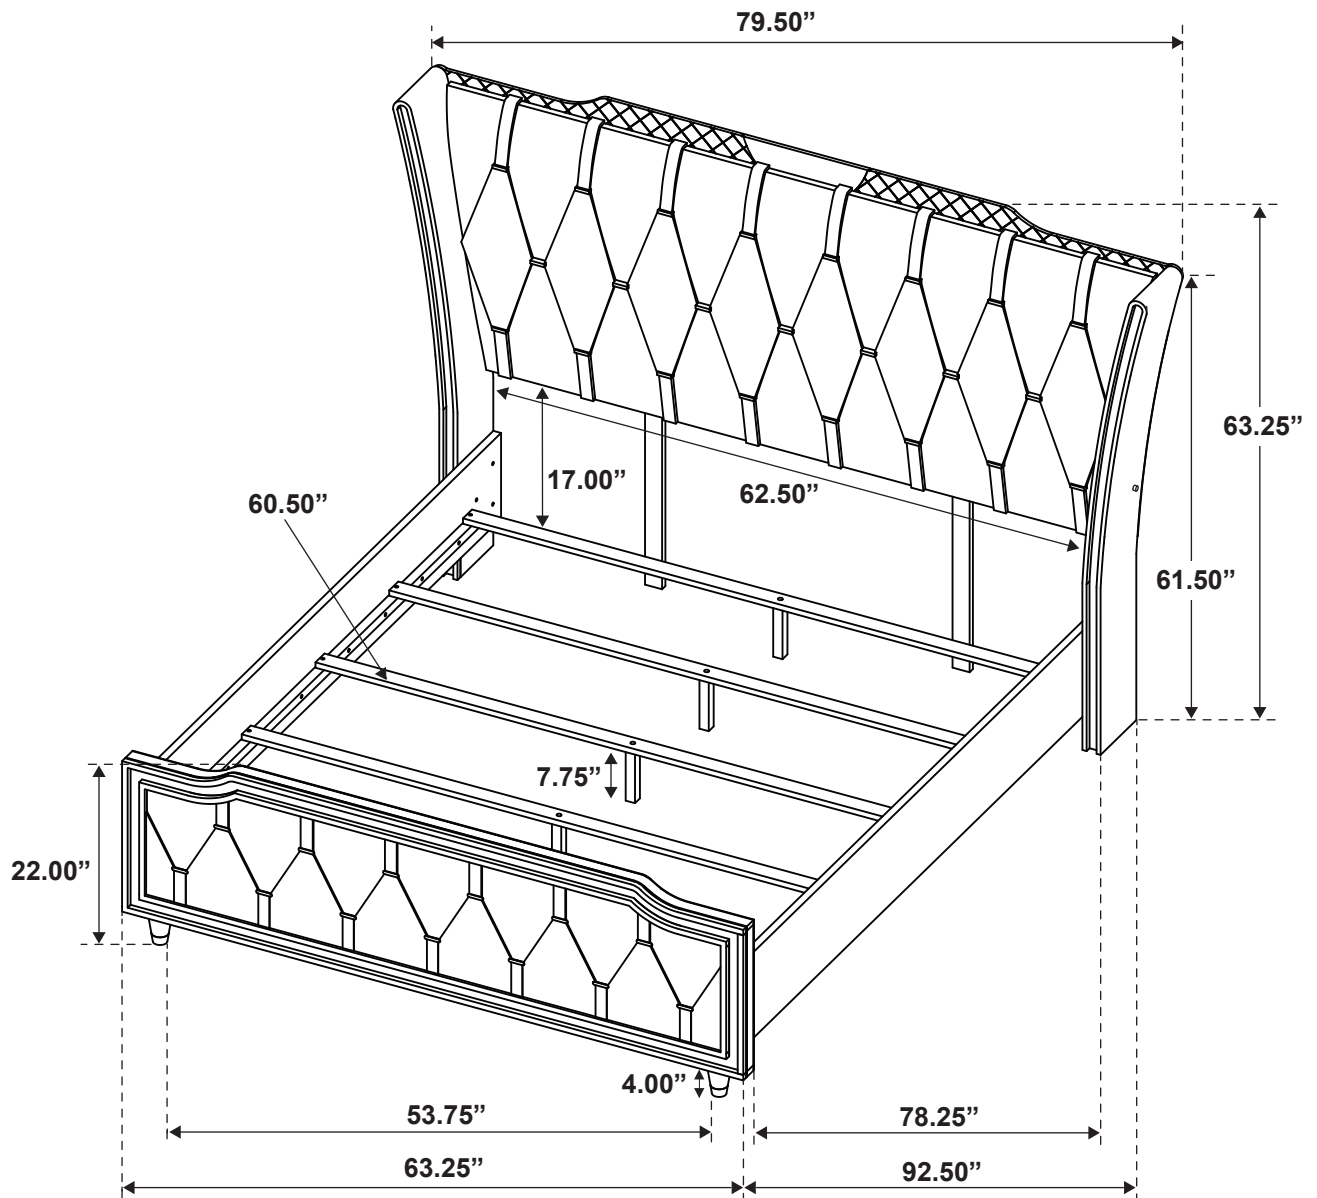

Note: Dimension tolerance  $\pm 5\%$