


# Assembly Instructions

ITEM# N719P330968

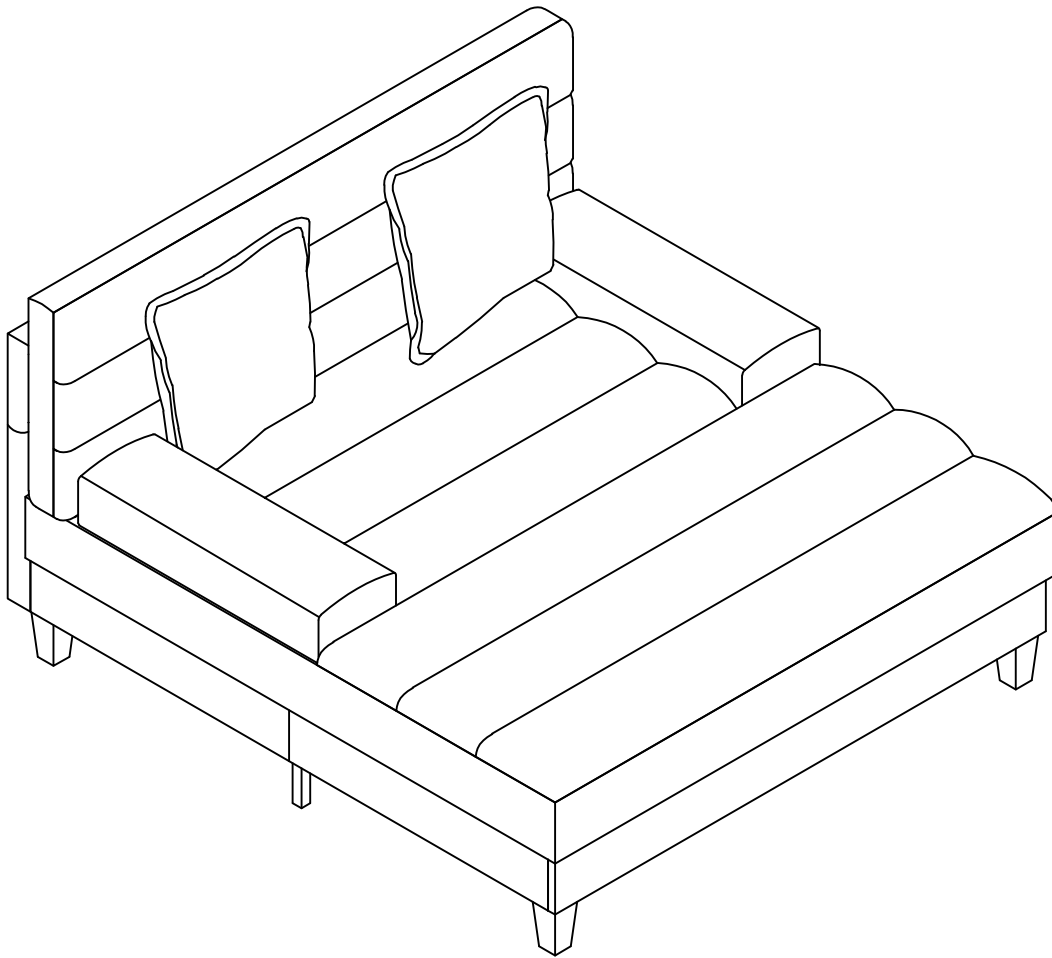

## IMPORTANT NOTE

\*\*Place all parts on a lean and smooth surface such as a rug or carpet to avoid the parts from being scratched.

\*\*Before you begin, please review the assembly instruction step by step.











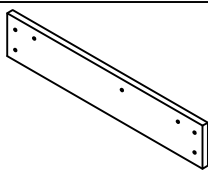

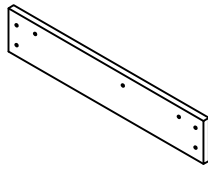

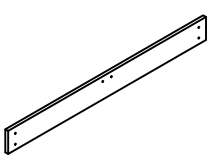


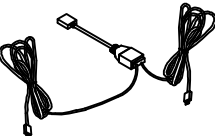



\*\*Return & Warranty Policy:

-We strive to offer the highest quality products. We also provide positive solutions with replacements or refund if needed.


-If the item is damaged or defective, please take photos to show the problem and email to the seller.

-Please do not return back the product before contact the seller.

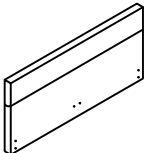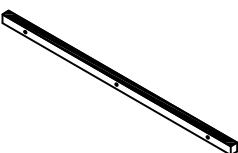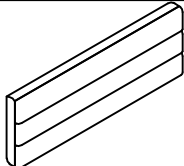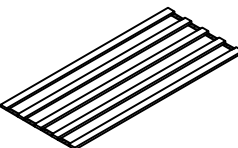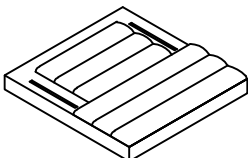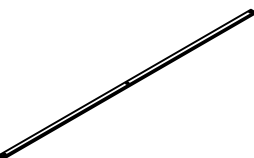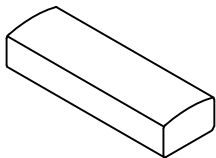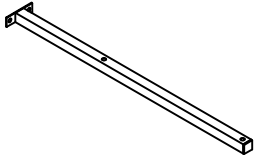



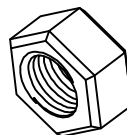

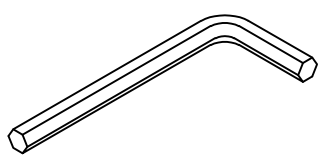
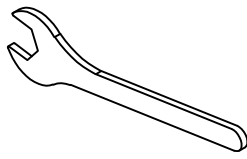
# PART LISTS BOX 1: N719P330968

Part NO.	Part Image	Part Name	QTY	Part NO.	Part Image	Part Name	QTY
①		Backrest	1	⑫		Pine Strip	4
②		Back Cushion	1	⑬		Batten	2
③		Seat Cushion	1	⑭		Middle iron support bar	1
④		Arm Cushion	2	⑮		Middle iron bar	2
⑤		Pillow	2	⑯		Middle iron foot	1
⑥		Side Panel	2	⑰		Iron foot	2
⑦		Side Panel	2	⑱		Light strip	1
⑧		Back Side Panel	1	⑲		Controller	1
⑨		Plastic Foot	4	⑳		Connect the power cord	1
⑩		Foot hardware	4	㉑		Adapter	1
⑪		Bedside foot	2				


# Sofa Overall Assembly Drawing

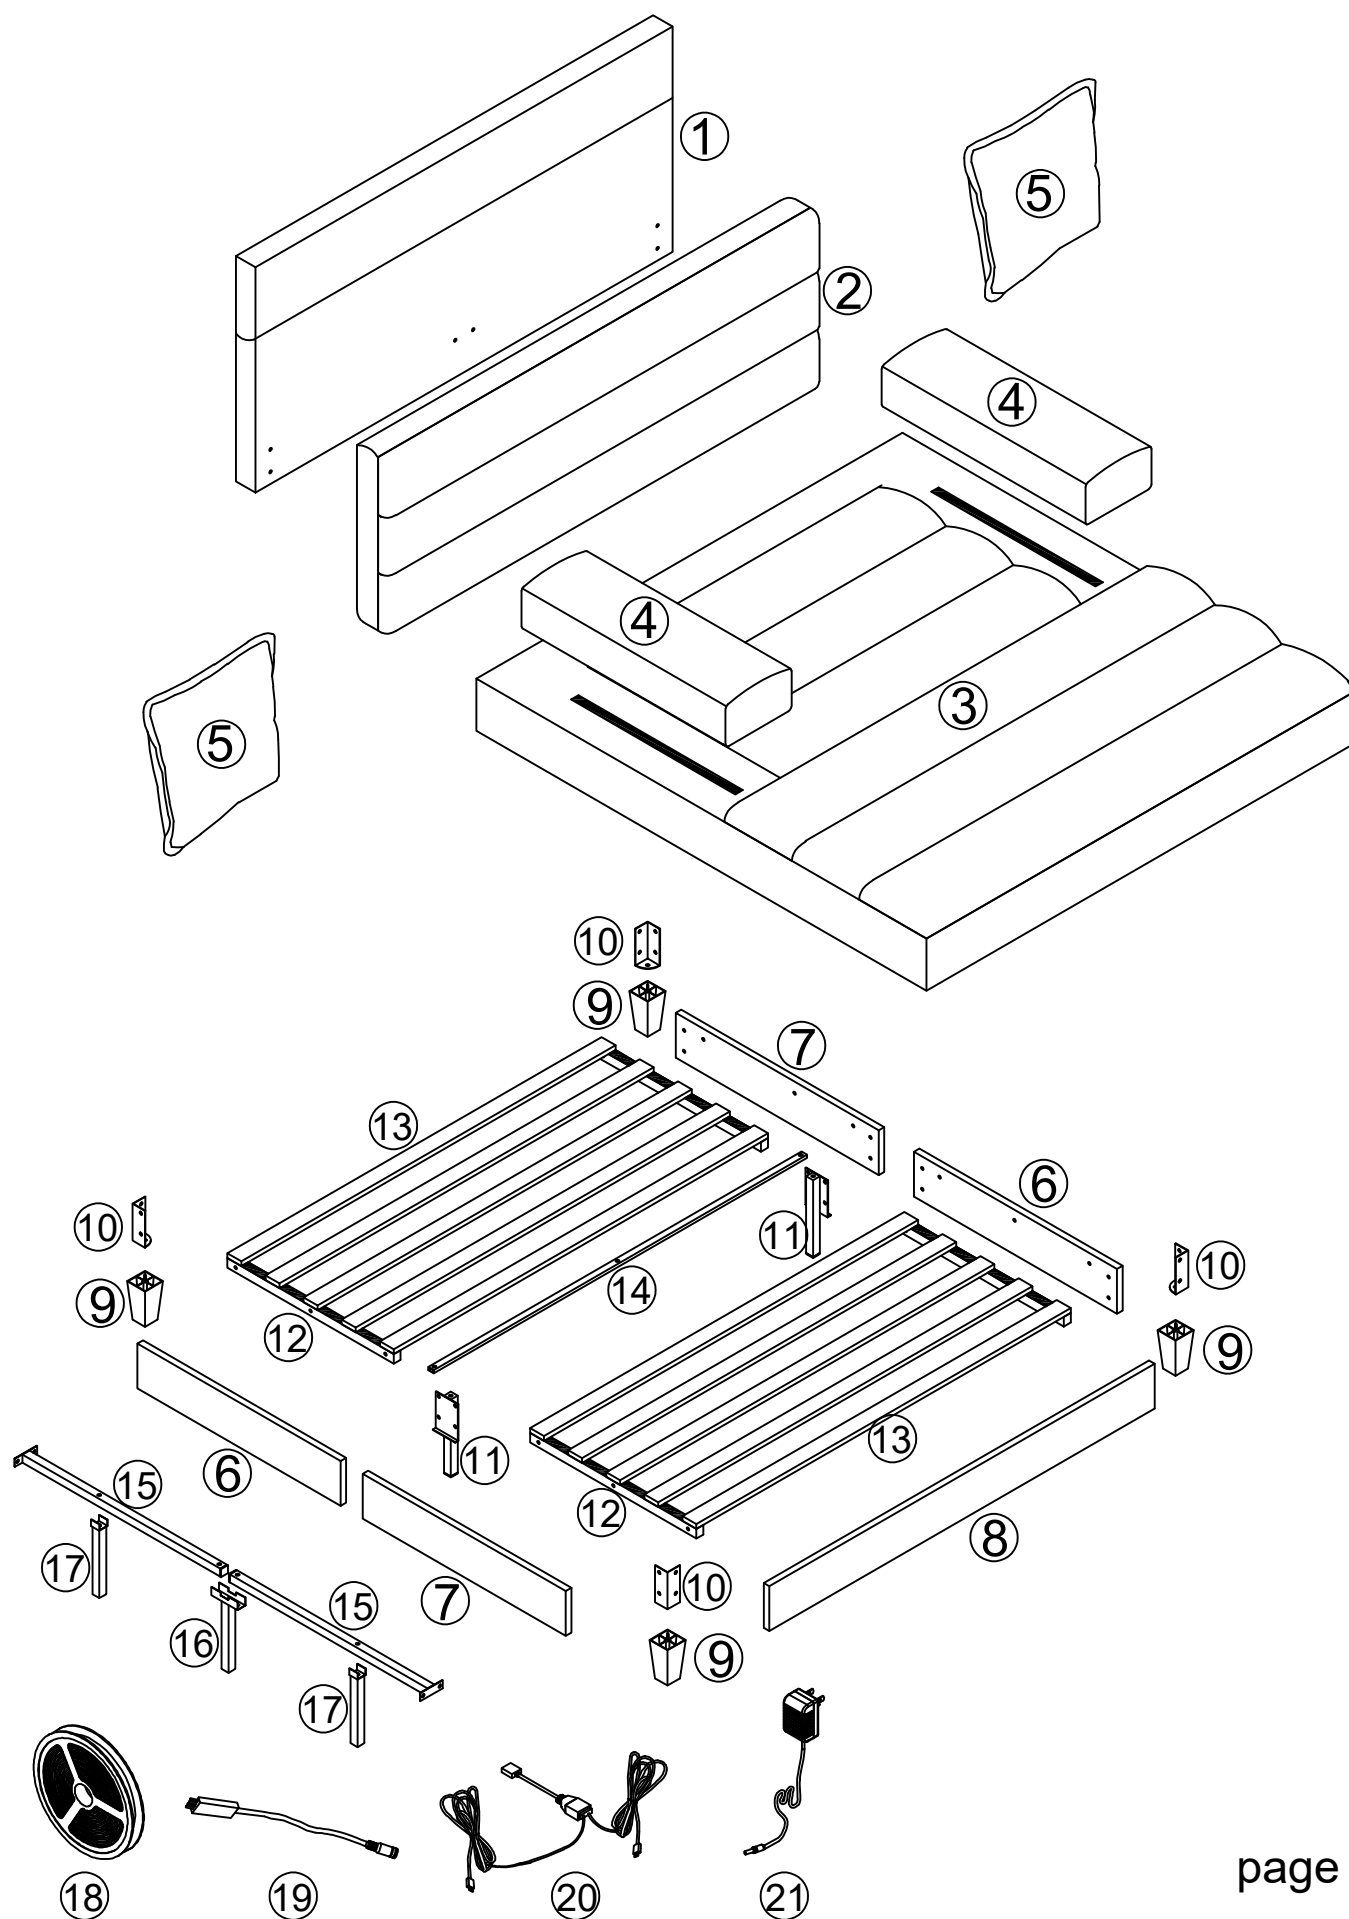






# Hardware List

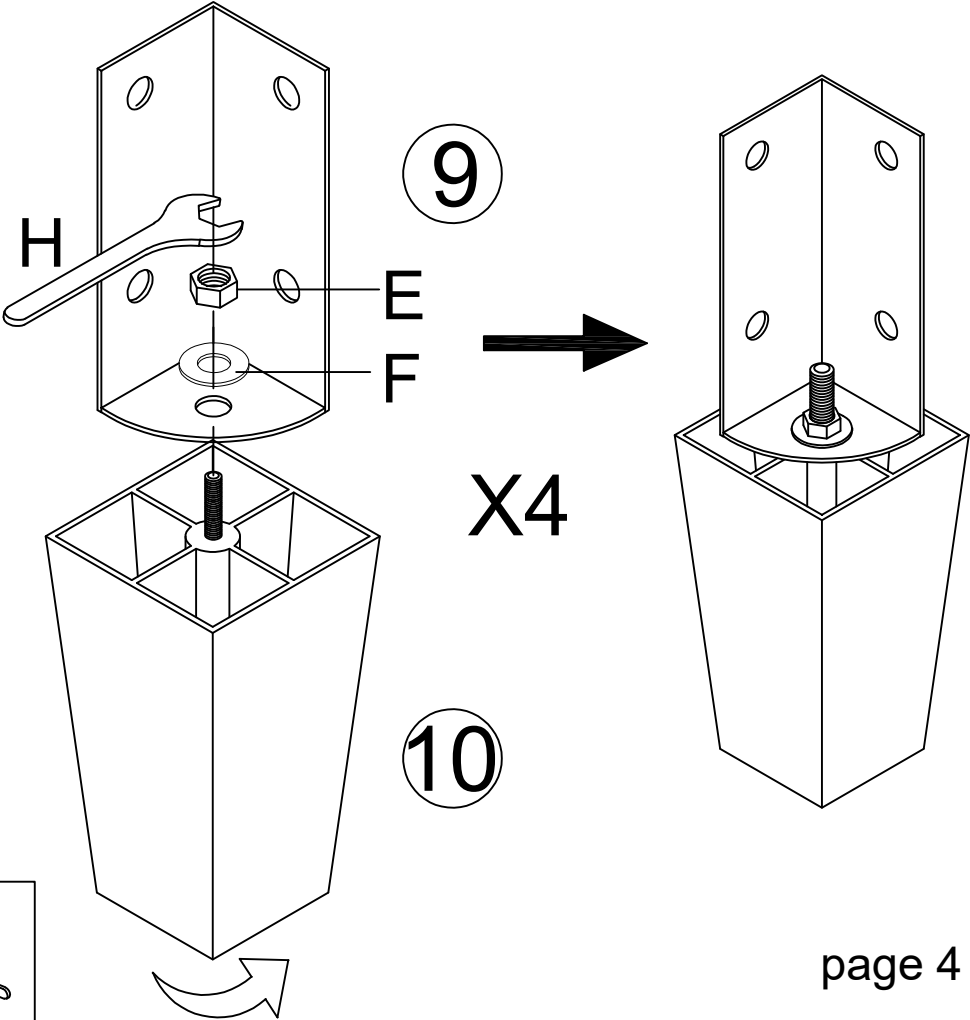
<div>Ax1 PCS</div> <div></div> <div>5/16X45mm</div>	<div>Bx16+1 PCS</div> <div></div> <div>5/16X40mm</div>	<div>Cx8 PCS</div> <div></div> <div>5/16X25mm</div>
<div>Dx22+2 PCS</div> <div></div> <div>5/16X15mm</div>	<div>Ex4 PCS</div> <div></div> <div>5/16</div>	<div>Fx4 PCS</div> <div></div> <div>Ø19X5/16</div>
<div>Gx1 PC</div> <div></div> <div>5/16</div>	<div>Hx1 PC</div> <div></div> <div>5/16</div>	



## STEP 1




⑩ x4 	⑨ x4 	
E x 4 	F x 4 	H x 1 
5/16	5/16	5/16

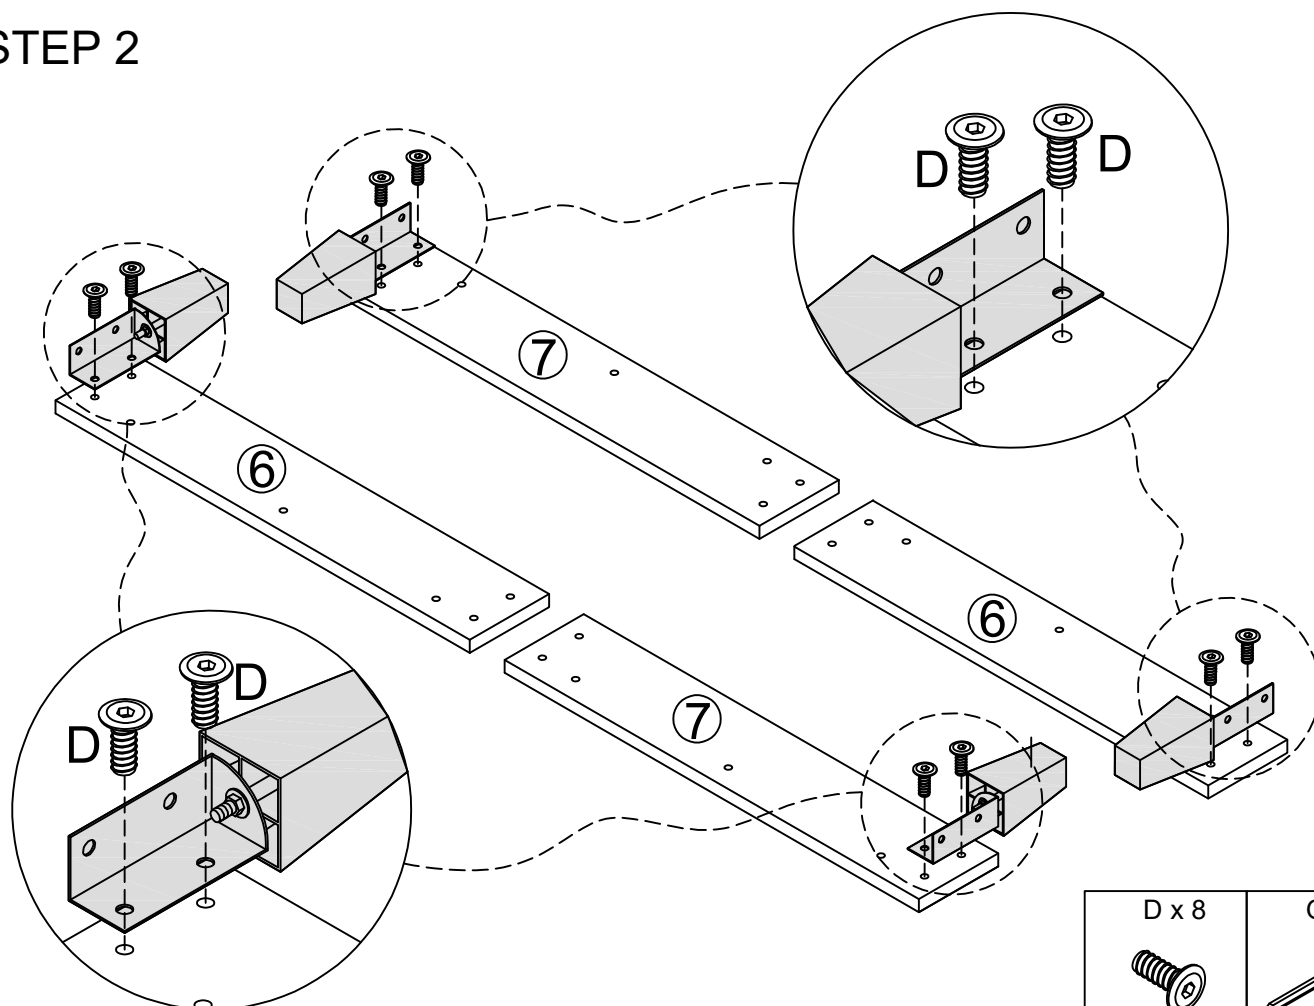


## STEP 2




D x 8	G x 1
	
5/16X15mm	5/16

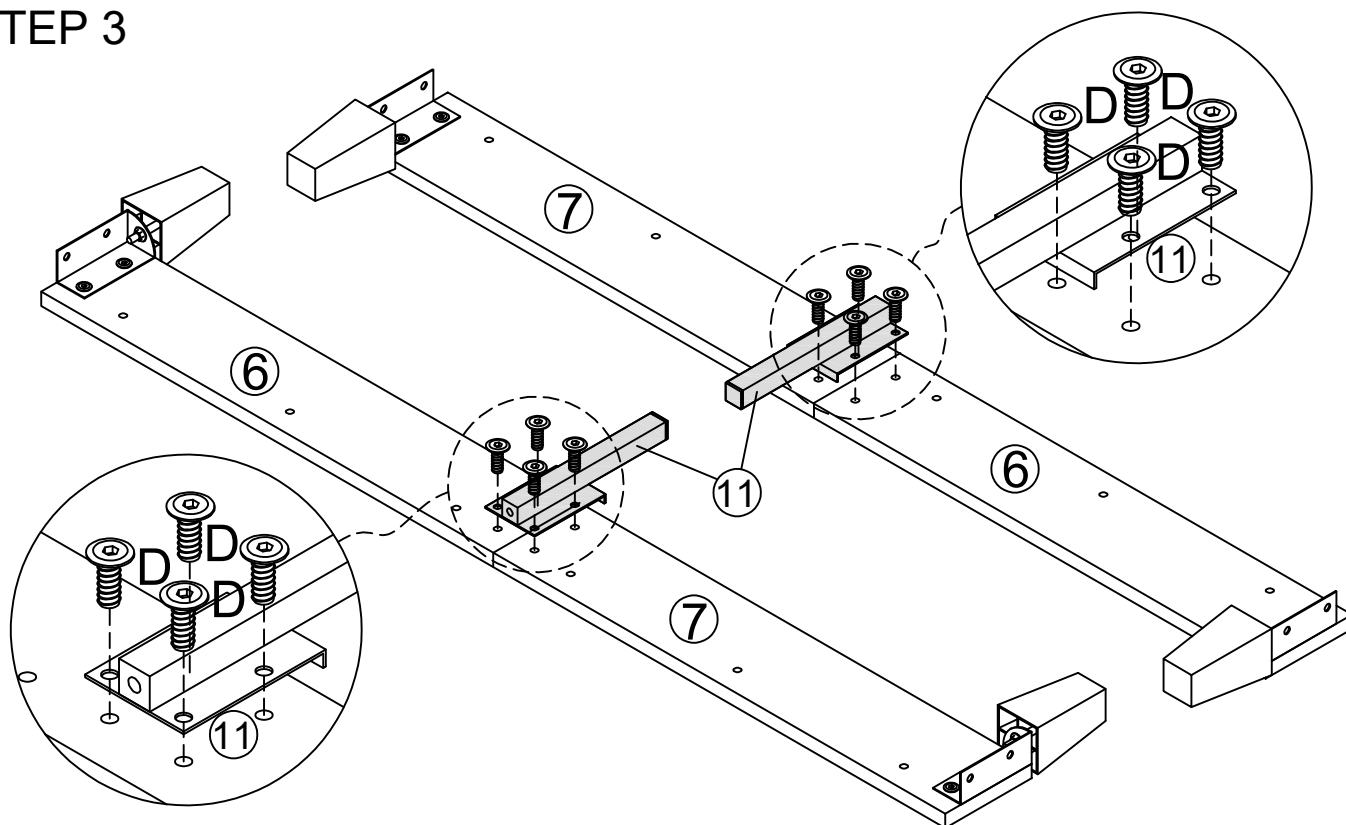


## STEP 3




D x 8	G x 1	11 x 2
		
5/16X15mm	5/16	

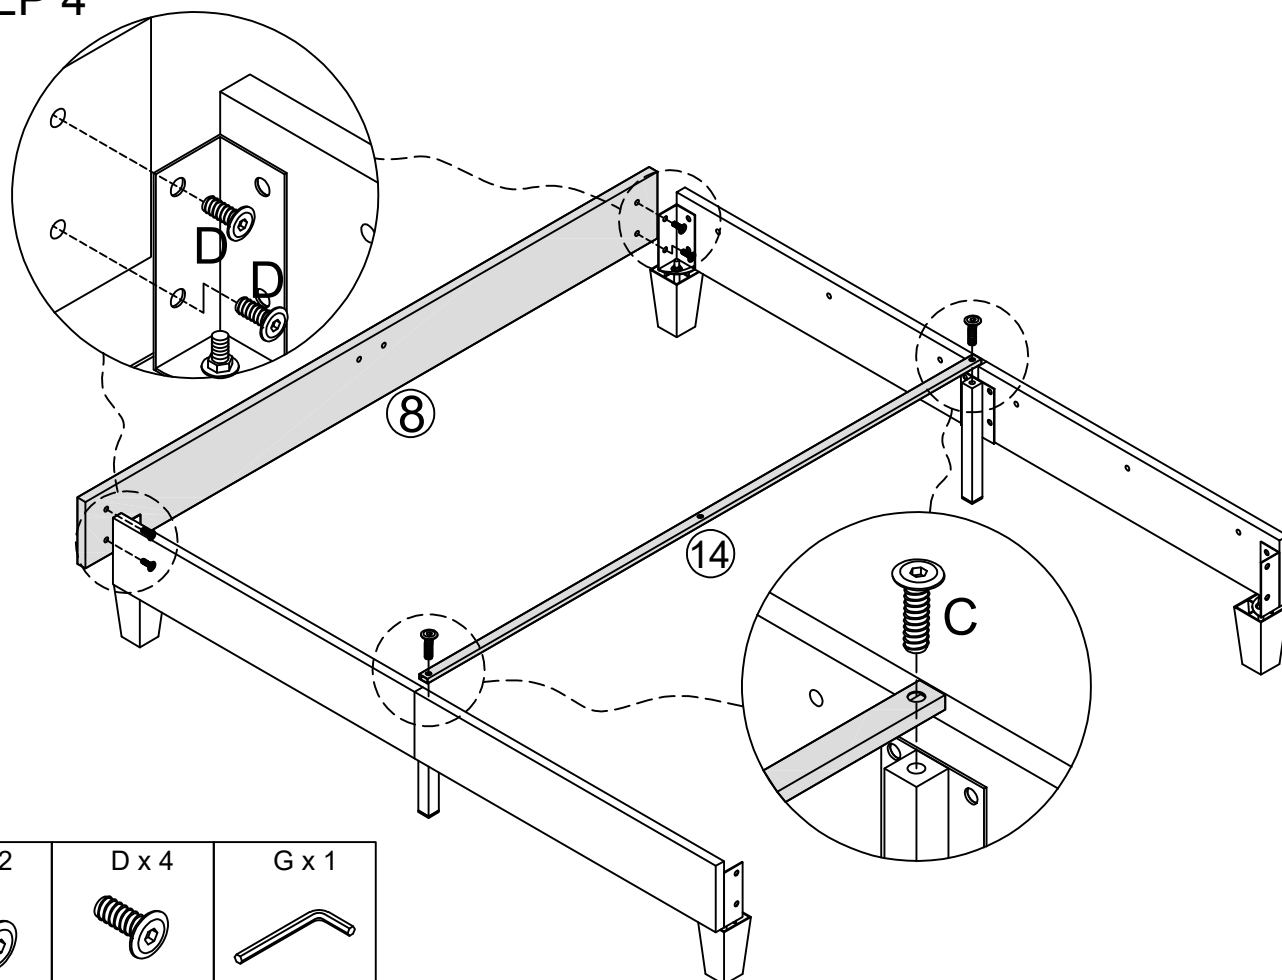

## STEP 4





C x 2	D x 4	G x 1
		
5/16X25mm	5/16X15mm	5/16
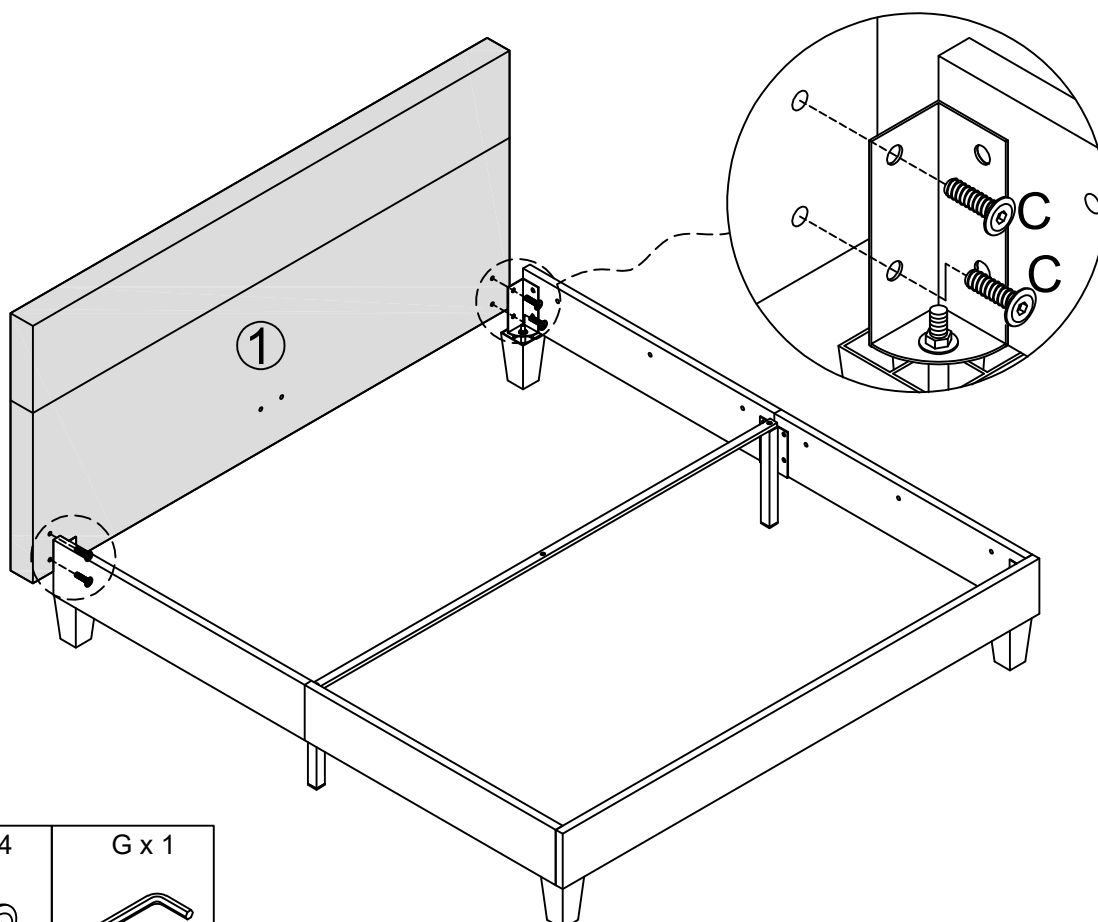
## STEP 5





C x 4	G x 1
	
5/16X25mm	5/16


## STEP 6

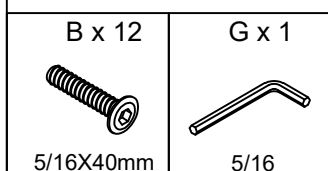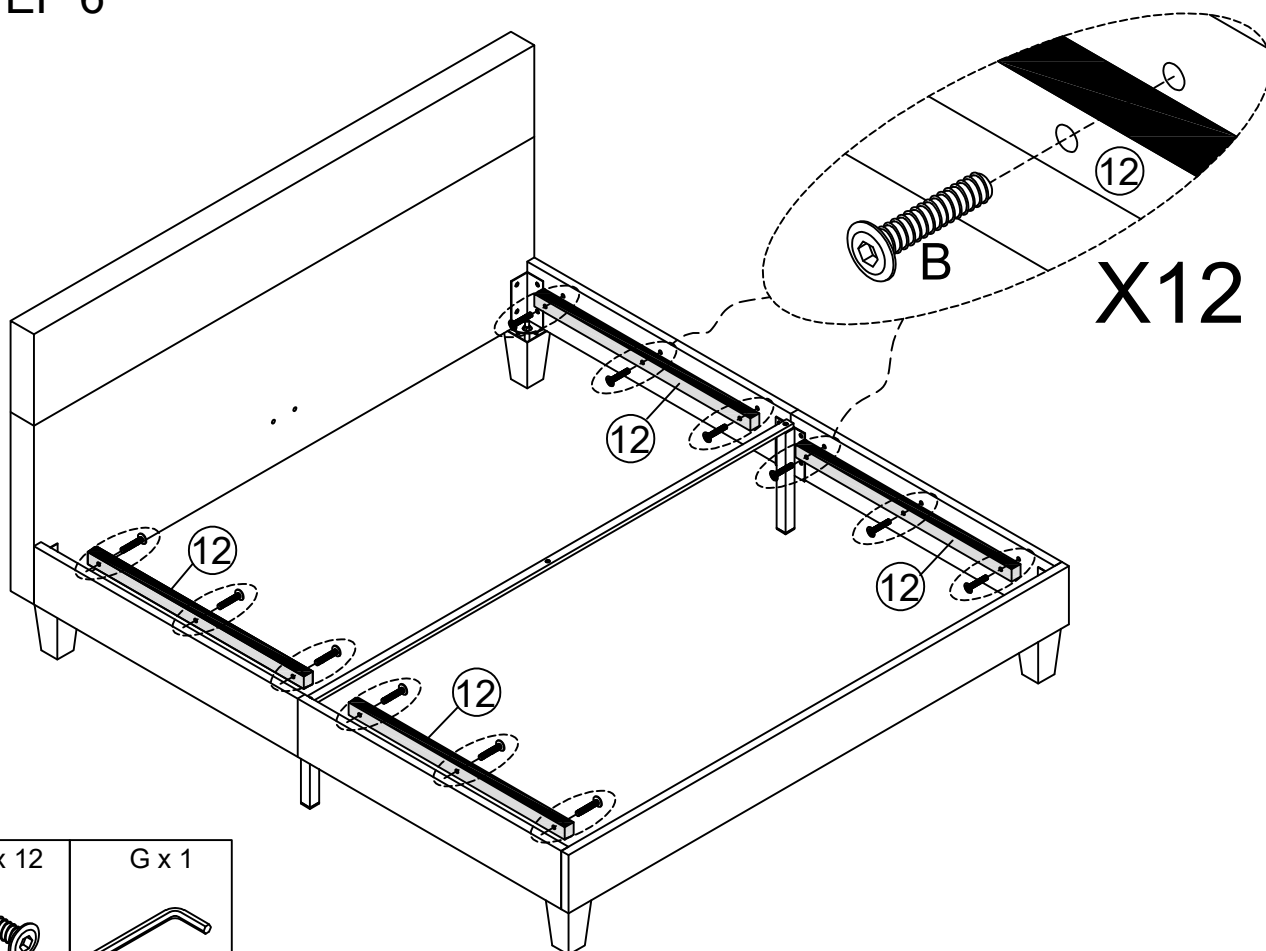

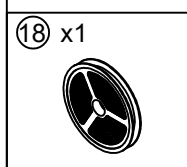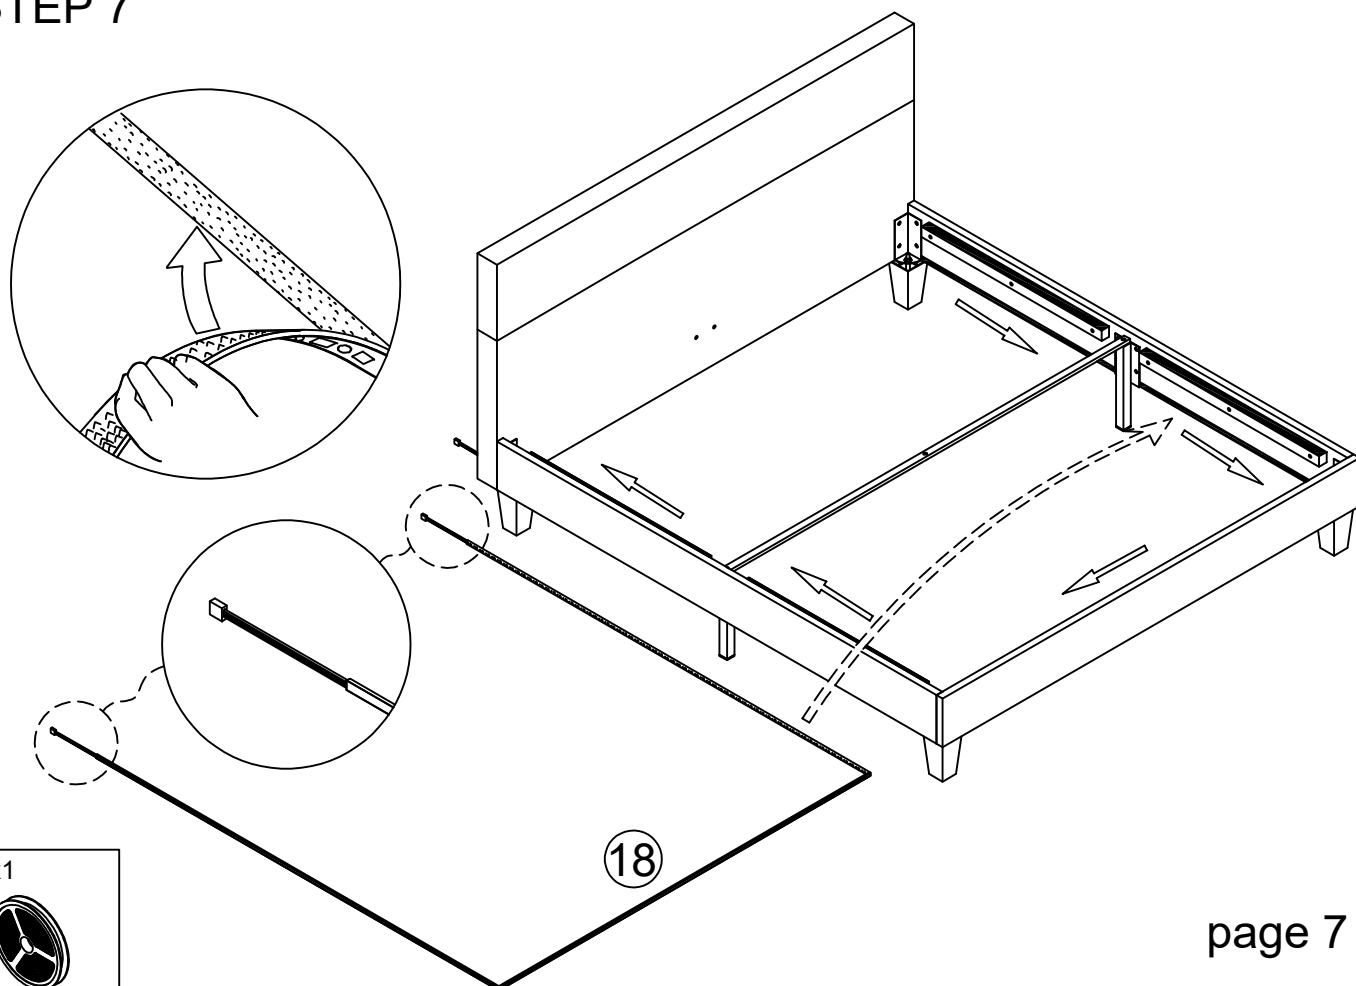

## STEP 7




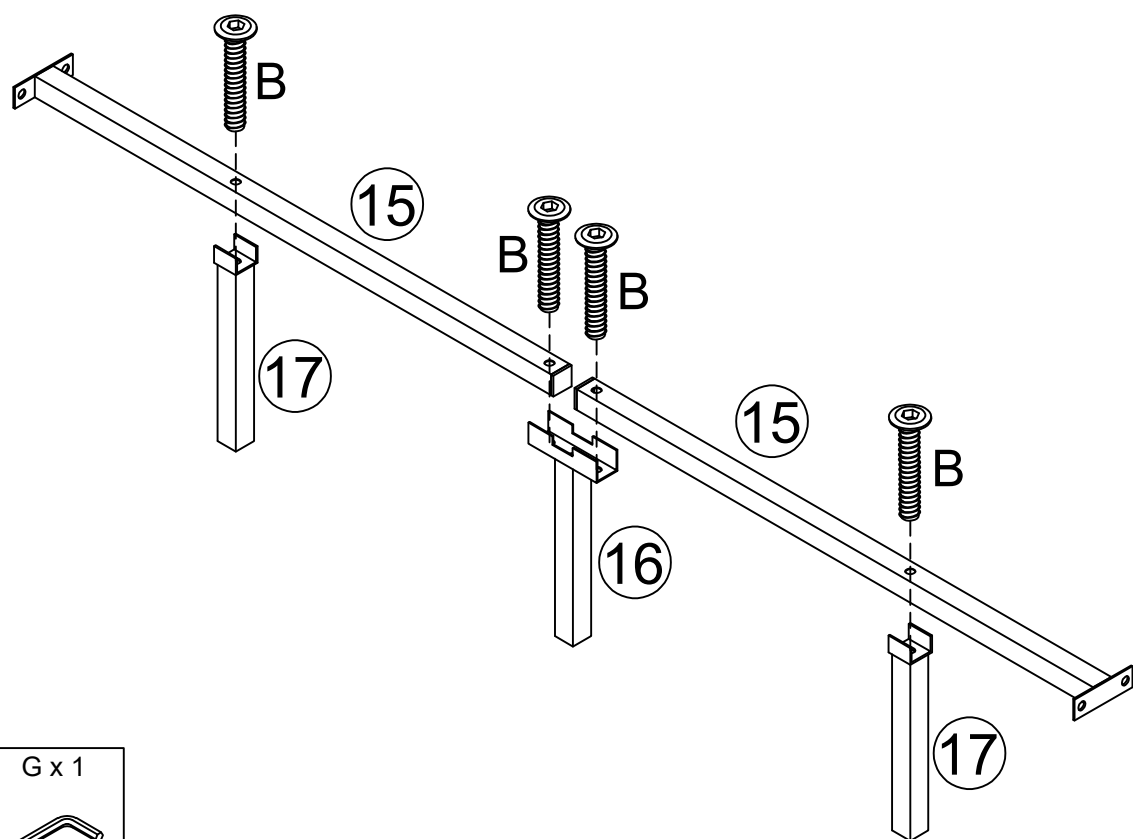



STEP 8

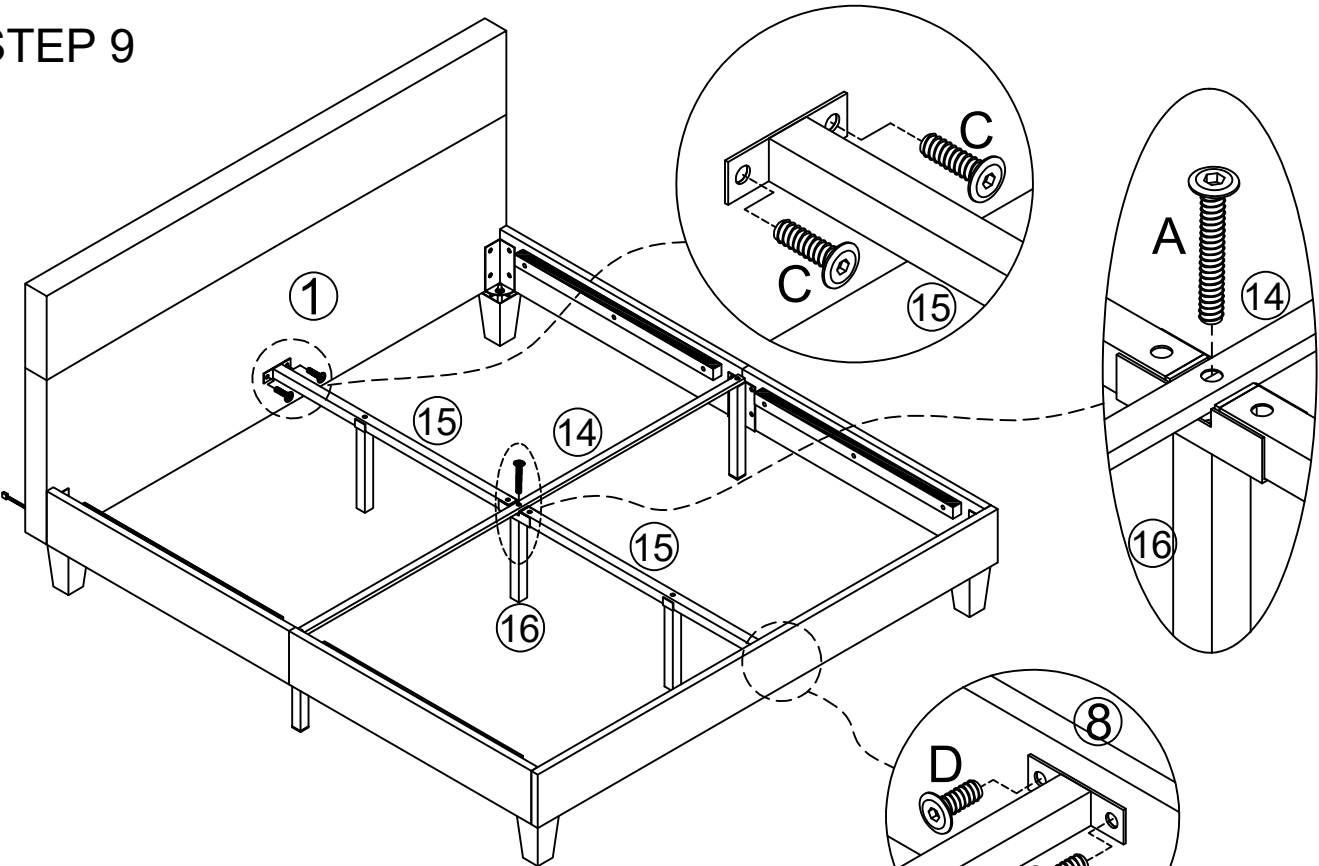

B x 4	G x 1
	
5/16X40mm	5/16


STEP 9




A x 1	C x 2	D x 2	G x 1
			
5/16X45mm	5/16X25mm	5/16X15mm	5/16




## STEP 10

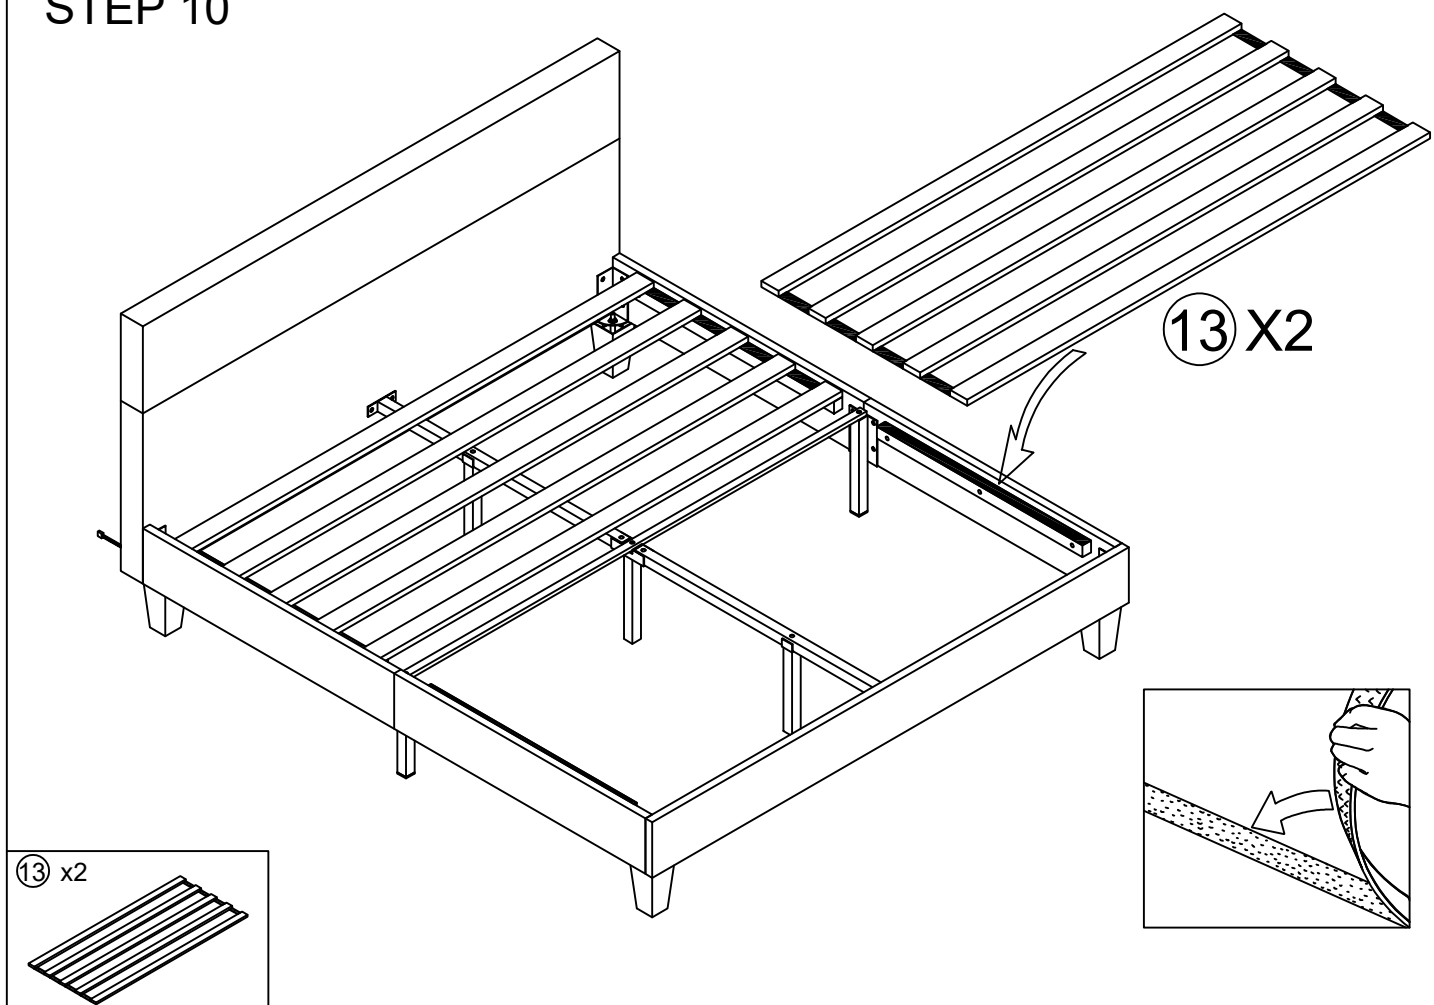


## STEP 11

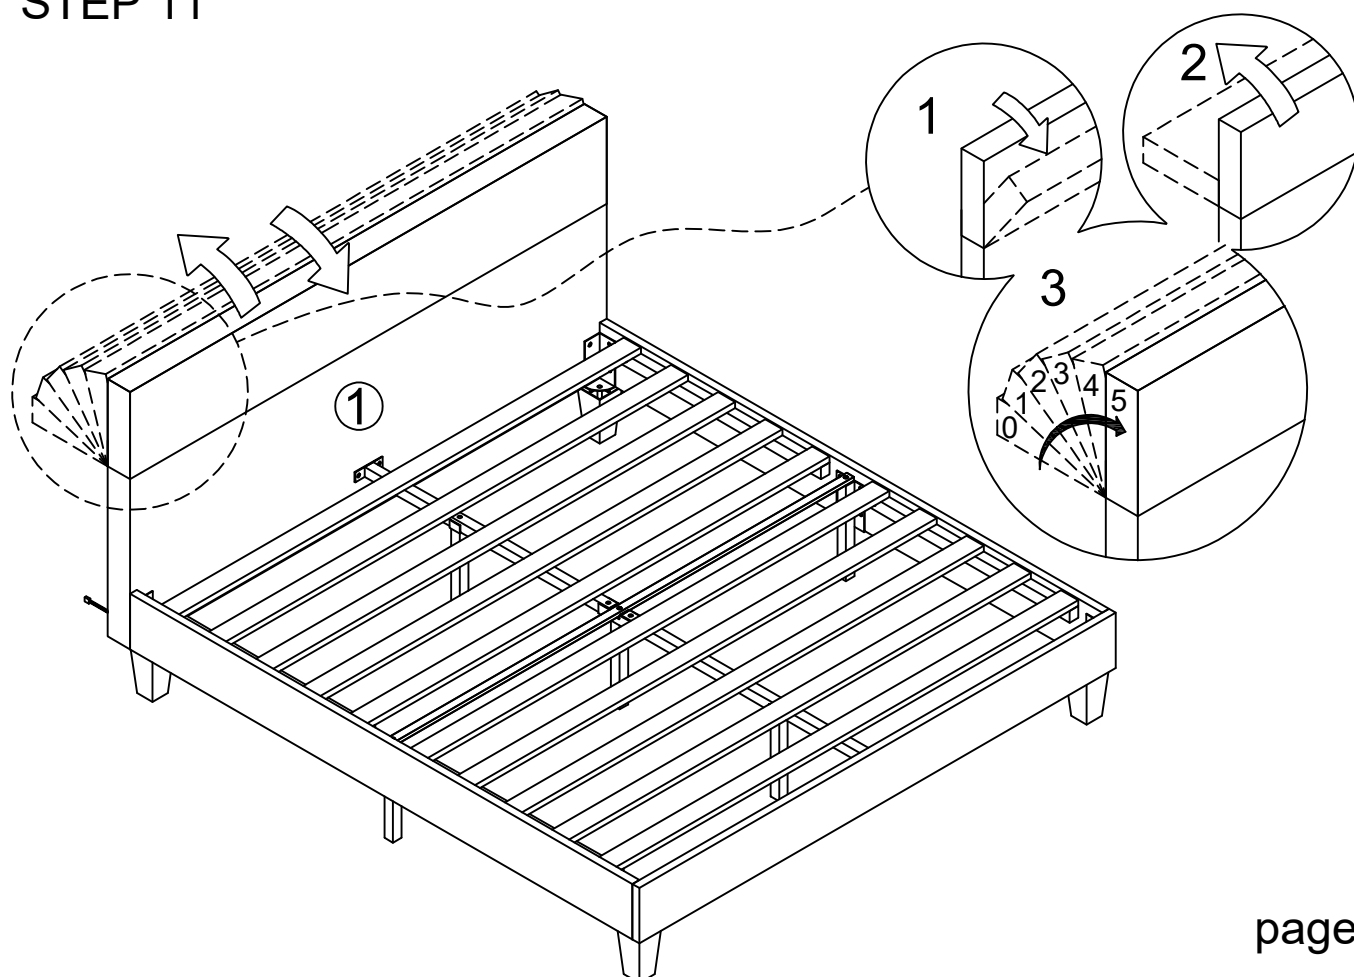


## STEP 12

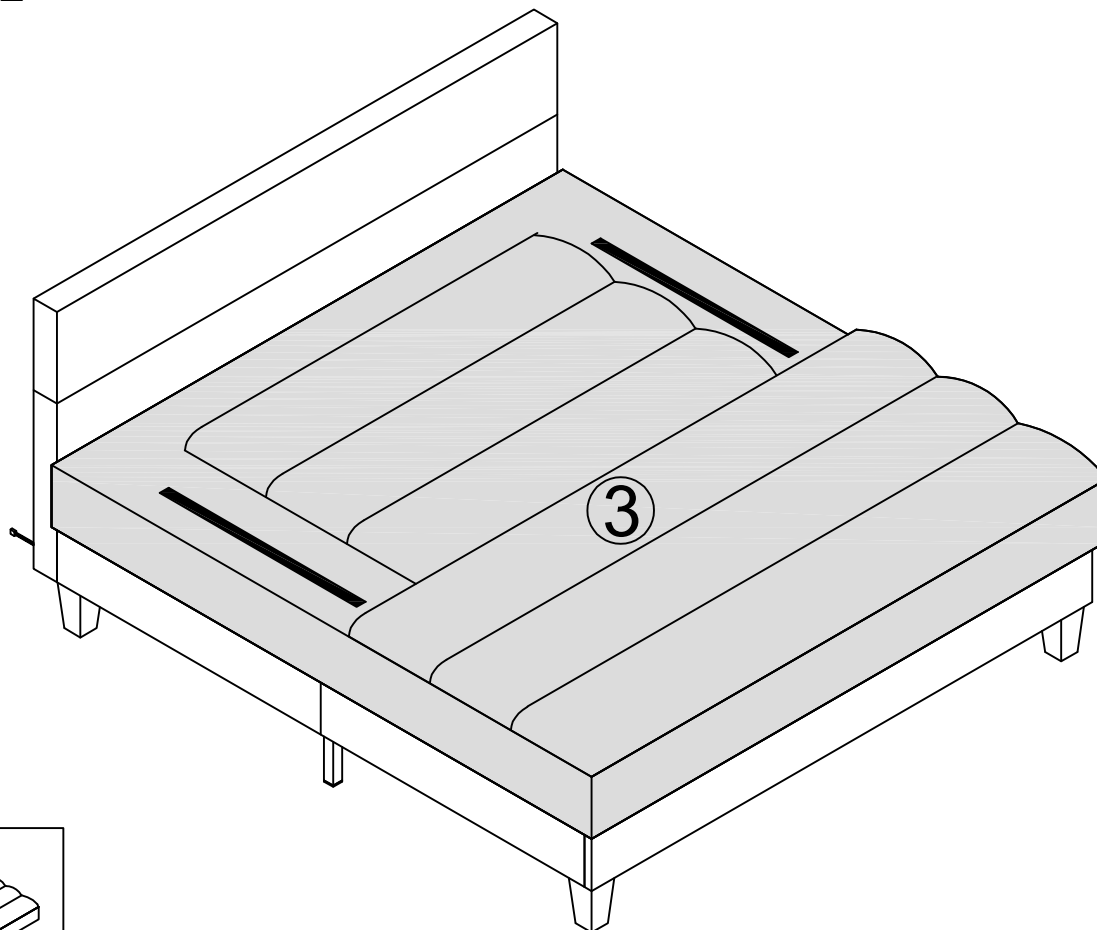


## STEP 13

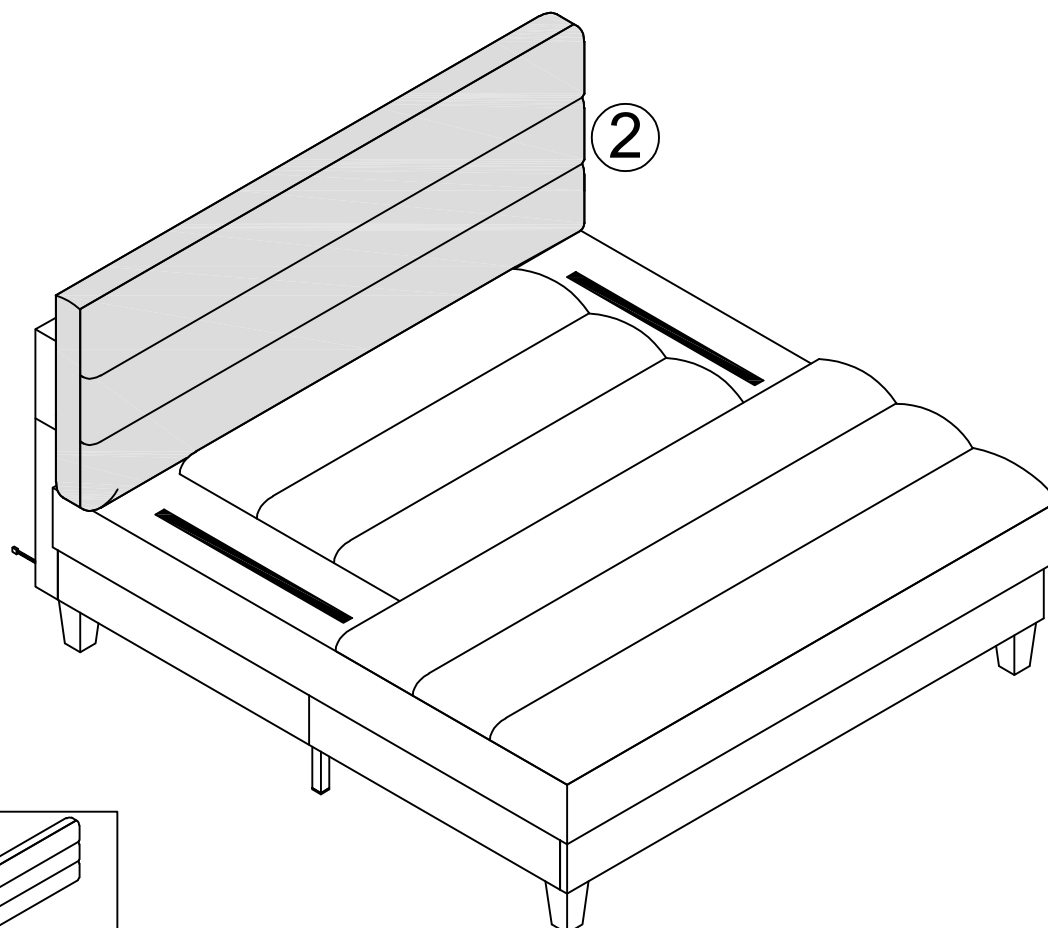


## STEP 14

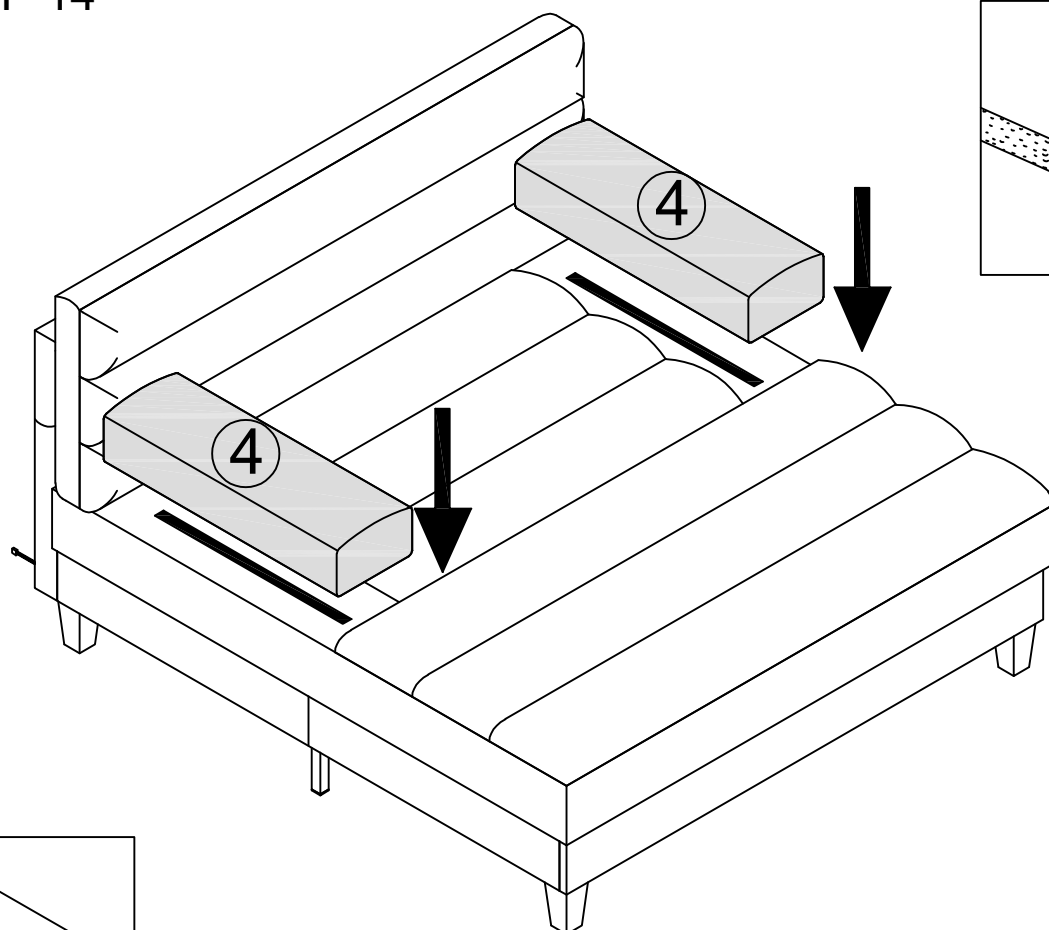

④ x2

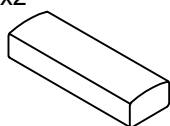


## STEP 15

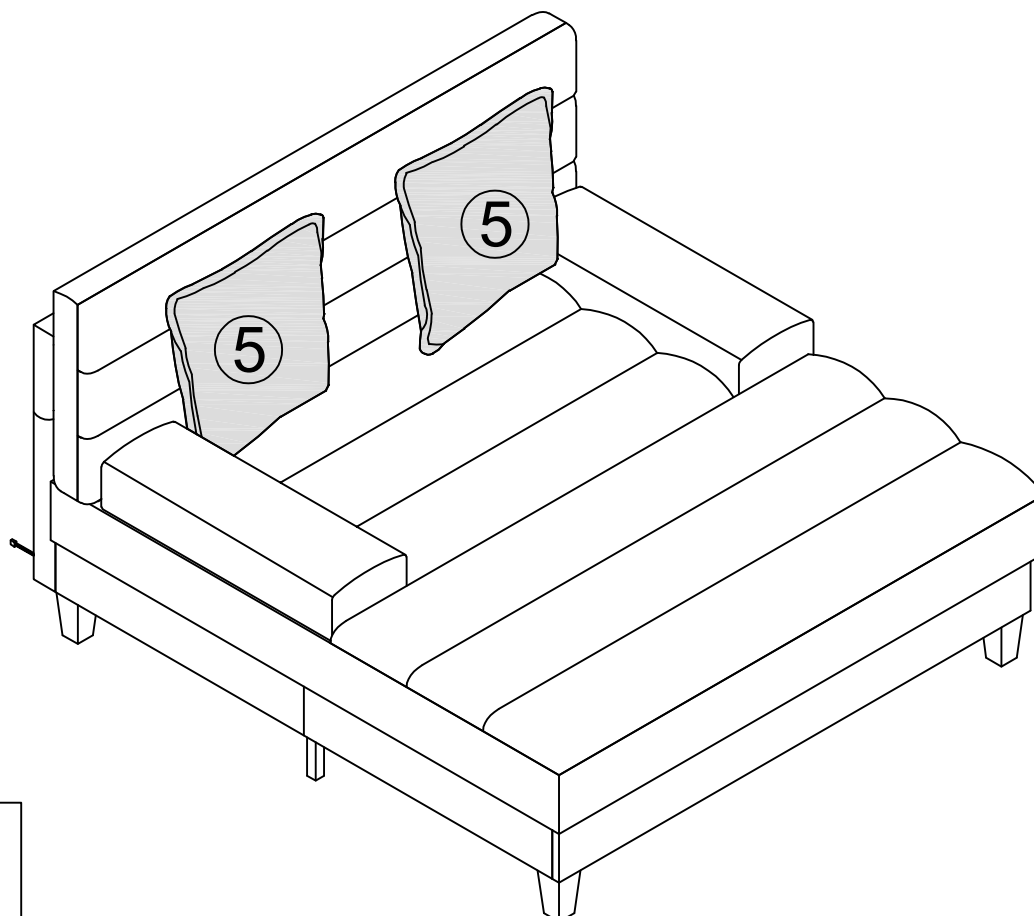


⑤ x2



## STEP 16

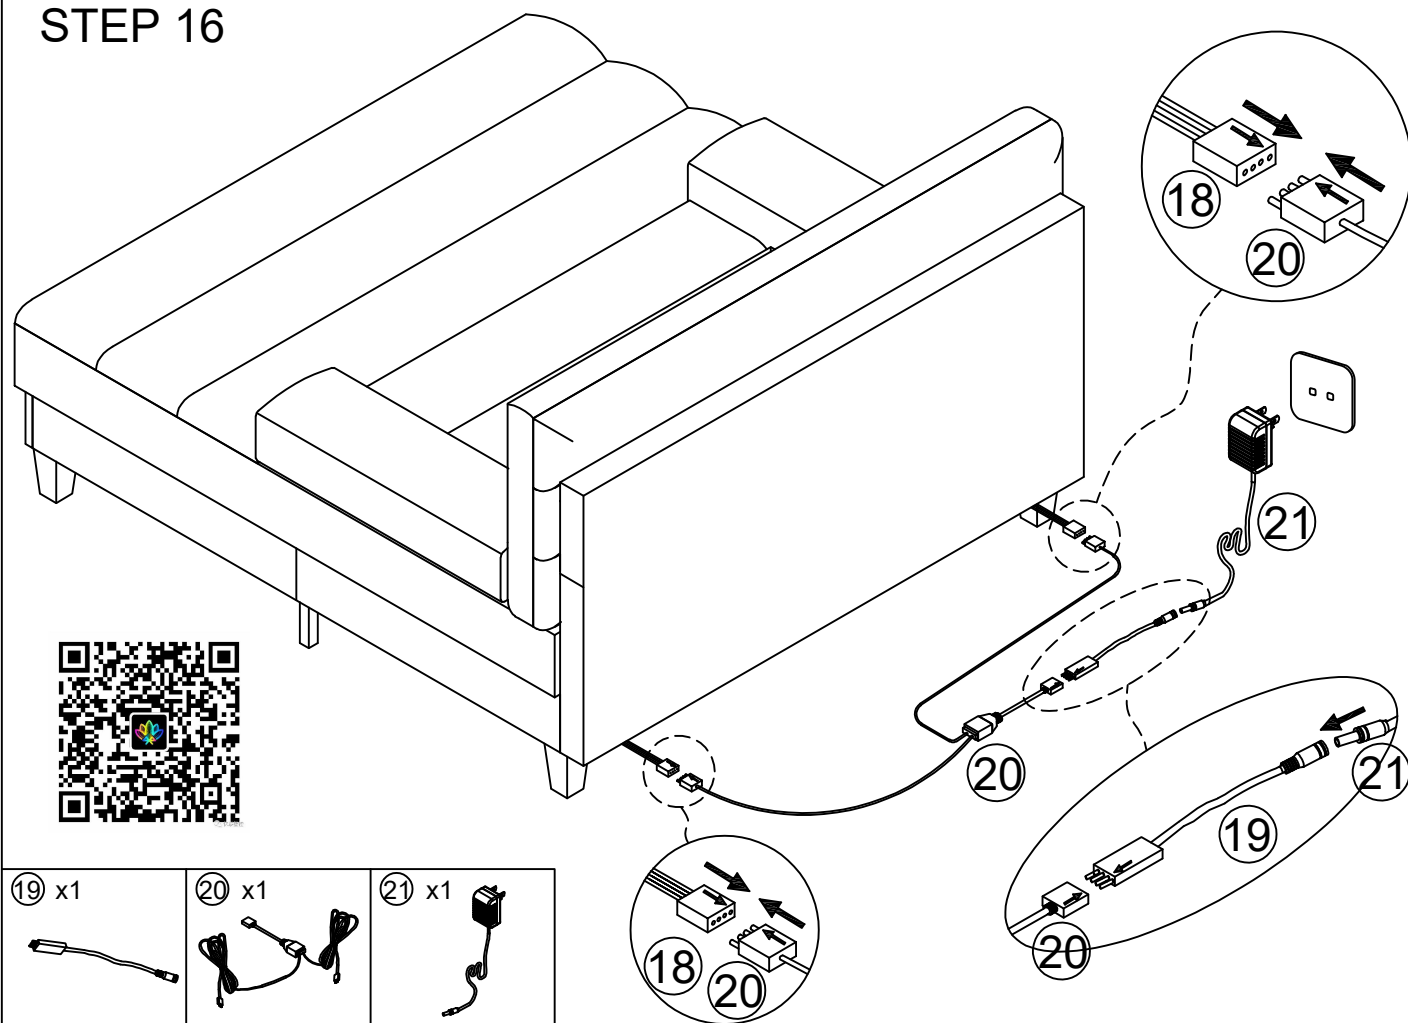

## Finish

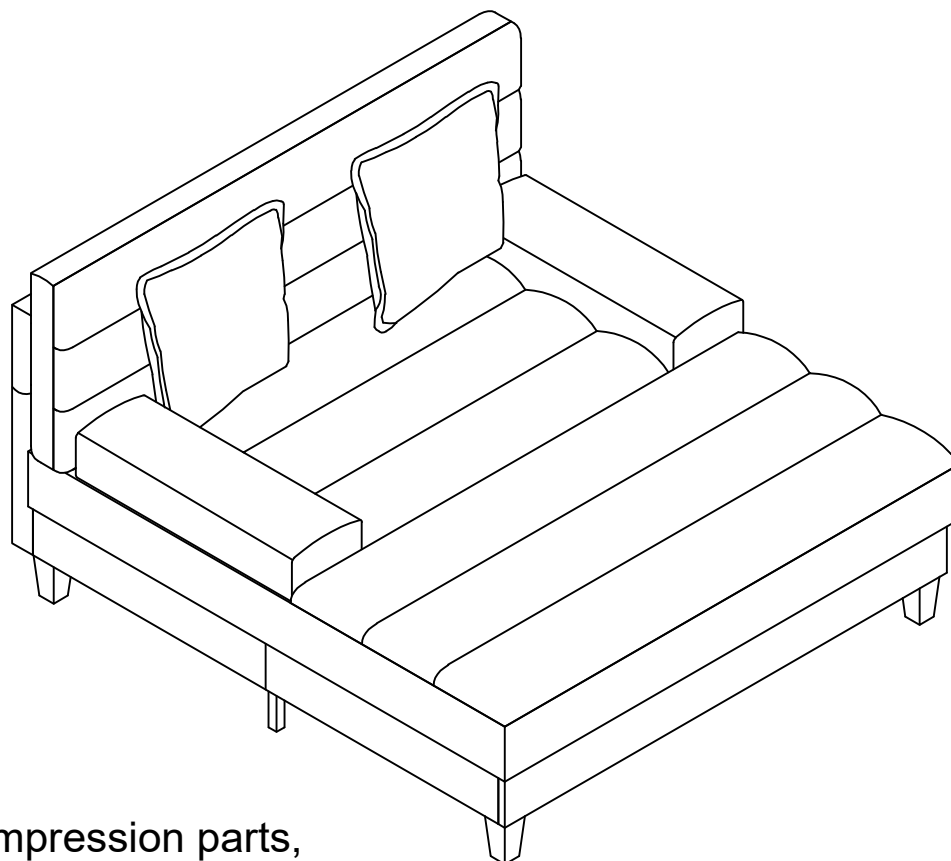

The product has compression parts,  
Please pat them by hand and wait 72 hours,  
the cushions will be recover.