


INSTALLATION OF FLEXIBLE FABRIC BACK WALLCOVERING MATERIALS INSTALLING INSTRUCTIONS

SINGLE-PIECE WALLCOVERING: WIDTH:300 CM(118") / LENGTH: UNLIMITED WEIGHT: 285 GR / M²

1. RECOMMENDED TOOLS

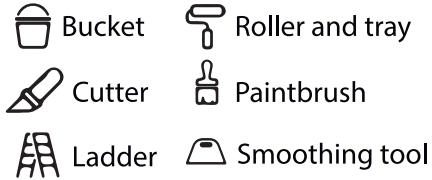


2. CONTROLLING MURAL

Unfold the pleated areas and lay the mural flat on the floor to fully see the design. Check the orientation and design of the mural.




3. PREPARING THE WALL

Make sure the wall surface is smooth, clean, dry and sound. Flaking paint and loose wallpaper should be removed, and any uneven surfaces must be filled. Apply the adhesive on the wall. Use the paintbrush for corners. After wallpaper adhesive is applied, installation of the product must be finished in 10-20 min.

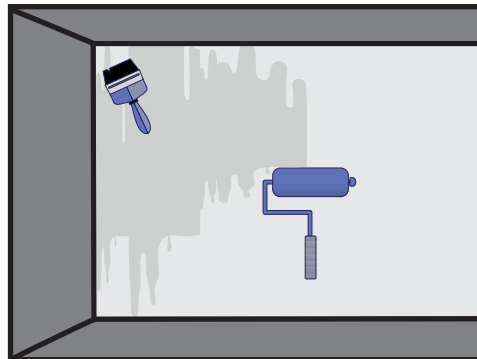


4. APPLYING THE PRODUCT

We recommend performing the wall application with two people. Hold the mural vertically in the left corner of your wall, and make sure the direction of the pattern is from left to right. It is essential that the first length is vertically straight.

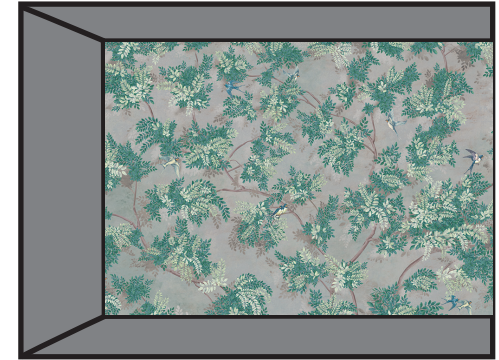

5. COMPLETING THE INSTALLATION

Start applying the product to the wall from the left side, moving towards the right. Avoid applying excessive pressure to the surface of the mural. Our wallcoverings can be removed before they dry, so if you need to make adjustments on certain areas of the wall, simply remove it and try applying it correctly again. Cut off any excess.

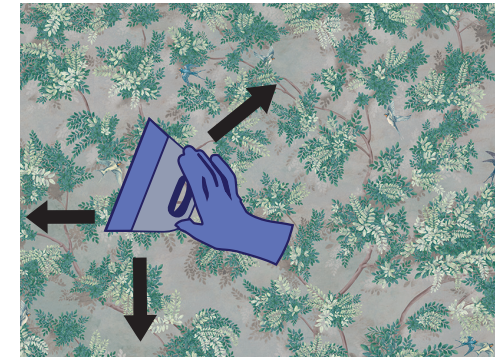

Surface:

Water Base Chemical Coating

Back Side:

Acrylic Foam Coating

Surface Texture

