


## HEADBOARD SET ASSEMBLY INSTRUCTION (TOTAL 1 BOX)

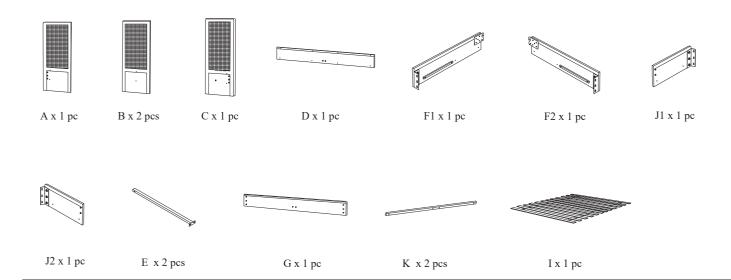

Please read over the instructions, it will be a time-saver in the long run.

Note: Before assembly, please be sure to work on a soft flat surface to avoid any damage to the finish.

Please leave bolts loosened until all bolts are placed before tightening completely.

Part#	Picture	Description	QTY	Location	Part#	Picture	Description	QTY	Location
Н		Center leg	1	Embossed film wrap	S	0	Spring Washer Ø8	38	Hardware Pack
L		Legs	2	Embossed film wrap		0	Spring Washer Ø8	4	Already in Place
M	1	Bolt Ø8x70mm	11	Hardware Pack	T	0	Spring Washer Ø6	12	Already in Place
N	<b>1</b>	Bolt Ø8x50mm	16	Hardware Pack	U	9	Nut Ø8	11	Hardware Pack
0	<b>1</b>	Bolt Ø8x25mm	8	Already in Place	V		Screws 4x30mm	24	Hardware Pack
P	<b>1</b>	Bolt Ø6x25mm	12	Already in Place	W		"L" Wrenches Ø4	1	Hardware Pack
Q	0	Flat Washer Ø8x22mm	38	Hardware Pack	X		"L" Wrenches Ø5	1	Hardware Pack
	0	Flat Washer Ø8x22mm	4	Already in Place	Y	0	Spanner Ø14	1	Hardware Pack
R	0	Flat Washer Ø6x16mm	12	Already in Place					

