

# Assembly Instructions

**Caution : You must read this before you proceed.**

## Care & Maintenance



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Not for commercial use. For residential use only.



- Stains may be removed with mild soap solution and damp cloth.



- Children should not climb or jump on the furniture.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

# **WARNING!!**


## **Furniture Tipping Risk.**

**Serious risk of severe or fatal crush injuries can occur from furniture tipping over if not secured.**

**Children like to climb on furniture and Unsecured furniture can pose a serious danger.**

**Please follow all instructions and install the tip-over restraints provided.**

## **King Size Bed**

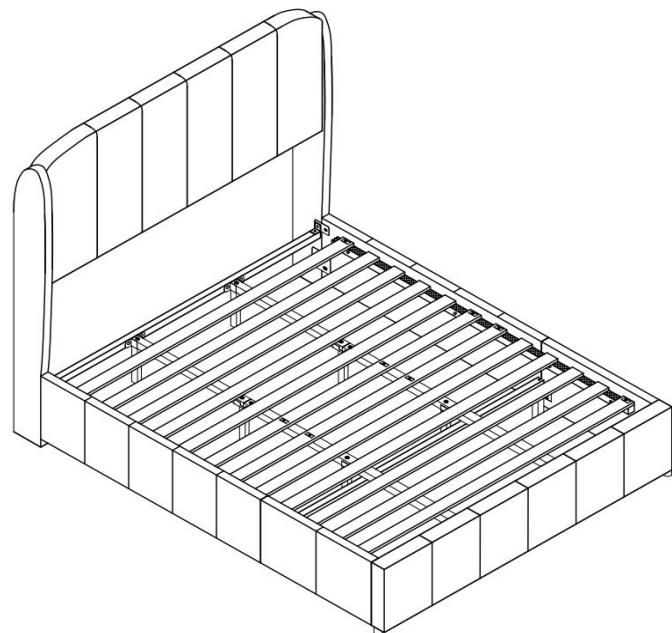









**NOTE : This Bed is NOT a TOY.**

**Keep your child / children at bay during the assembly process.**

**The BED is HEAVY.**

**To prevent injury to yourself or damage to the product a minimum of two adults are required whenever moving or lifting the product.**

# Parts List


No.	Picture	Description	Qty
①		Headboard	1
②		Footboard	1
③		Side wings-Left	1
④		Side wings-Right	1
⑤		Side rails-Right &Front	1
⑥		Side rails-Right &Rear	1
⑦		Side rails-Left&Rear	1
⑧		Side rails-Left&Front	1
⑨		Cross Slat With Mounting Position	1
⑩		Cross Slat Without Mounting Position	1
⑪		Side bars-Front	2
⑫		Side bars-Rear	2
⑬		Middle bars-Front	2
⑭		Middle bars-Rear	2
⑮		Straight Slats	1
⑯		Back of Fabric	1

# Hardware

No.	Picture	Description	Qty
A		Bolts(M8*18mm)	39
B		Bolts(M8*40mm)	17
C		Bolts(M8*45mm)	21
D		Self-tapping Screw(M3.5*30mm)	13
E		Coner Brackets	2
F		Metal Brackets	2
G		Nut	7
H		Metal Brackets	2
I		Metal Brackets	2
J		Metal Brackets	4
K		Middle feet-U shape(21cm)	2
L		Support feet-Front(21cm)	2
M		Support feet-Side(16.5cm)	2
N		Middle feet(21cm)	2
O		Plastic Feet(5*6cm)	2
P		Washer	9
Q		Spanner	1
R		Cross Wrench	1
S		Allen Wrench	1

# Assembly Preparation

## Before Beginning Assembly:

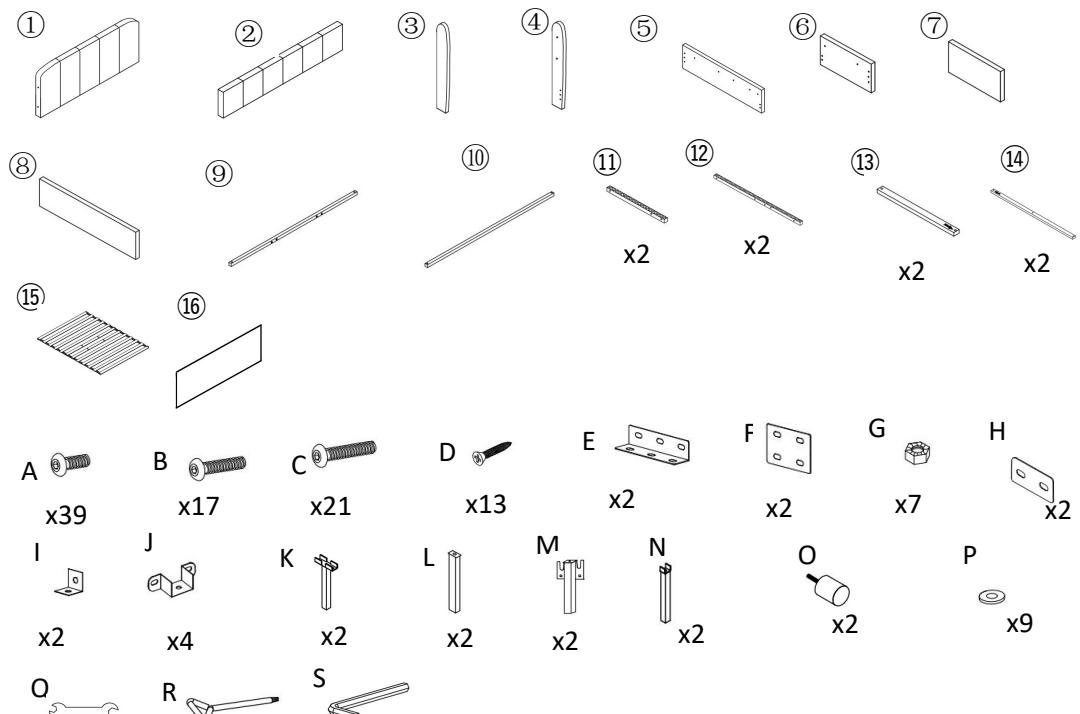

- Read instructions, cover to cover-



- Have 2 or 3 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-




- Save all packaging until finished-

## Assembly Steps

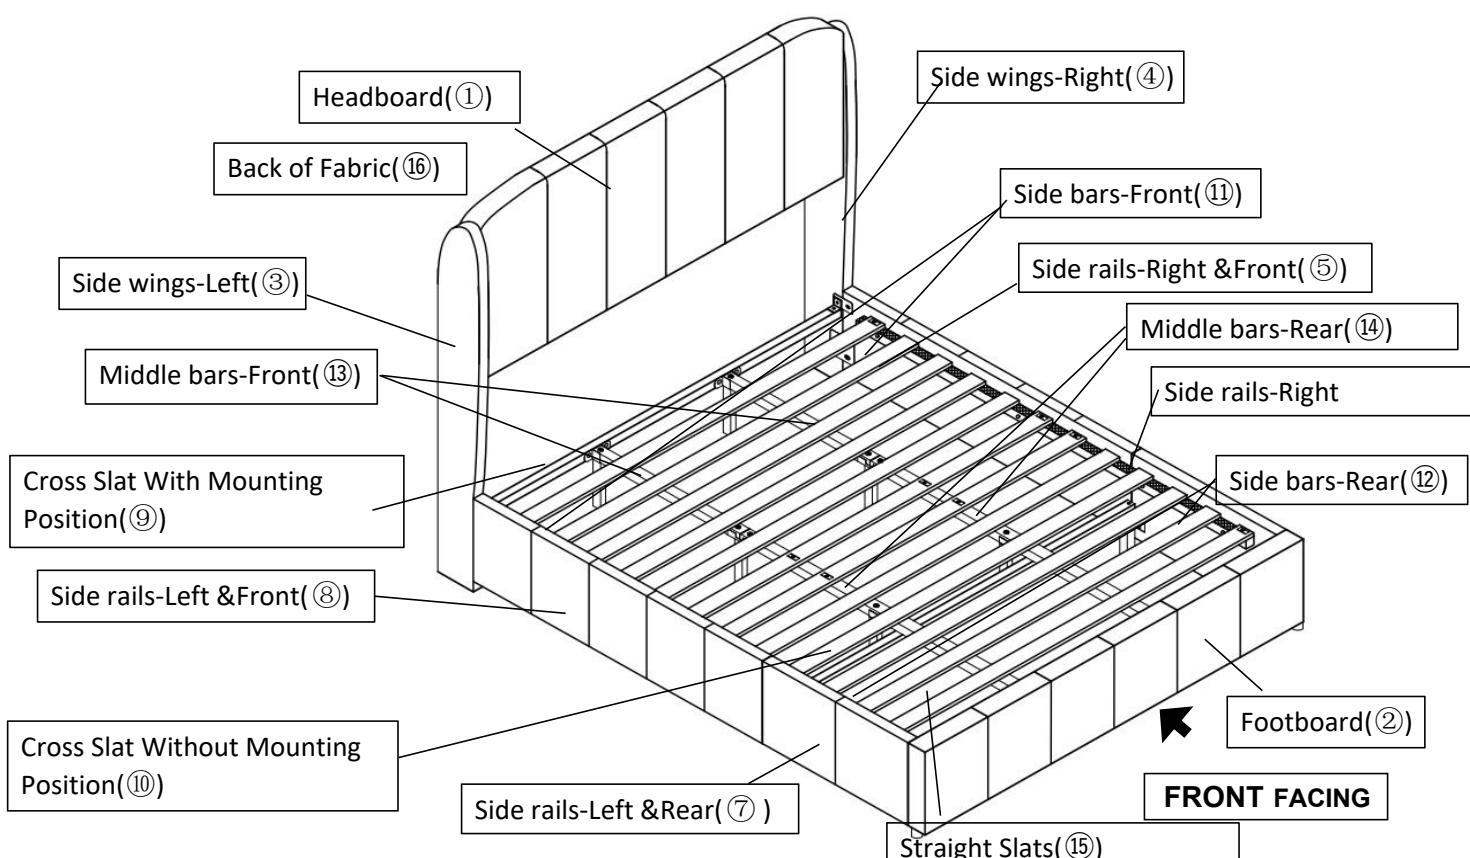

This Bed has multiple parts and may require up to 60 minutes to assemble. To give you an overview of the Bed parts, the above picture is to help you put the various Bed parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


## **Step 1**

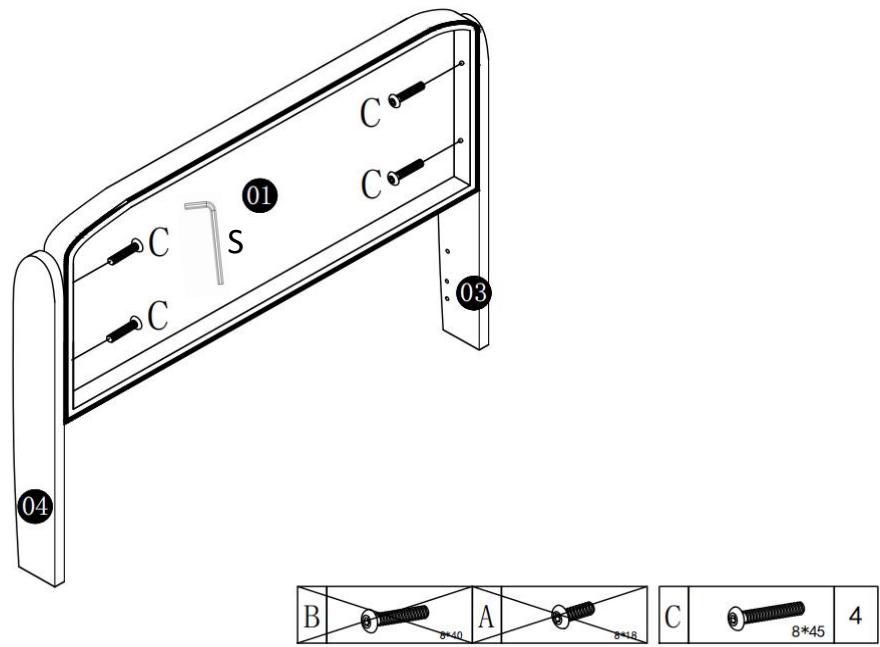

First **attach** the Side wings-Right (④) and Side wings-Left (③) to the Headboard (①) using Bolts (C) and Allen Wrench (S)


Please note that the shapes of Bolts (A) and (B) and (C) are similar. Please install according to the instructions and distinguish them!

## **Step 2**

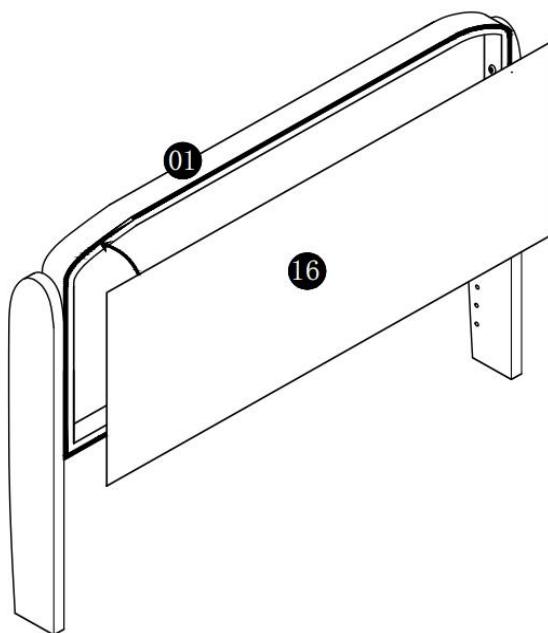

Attach Back of Fabric ( ⑯) to the back velcro of Headboard (①)


### Step 3

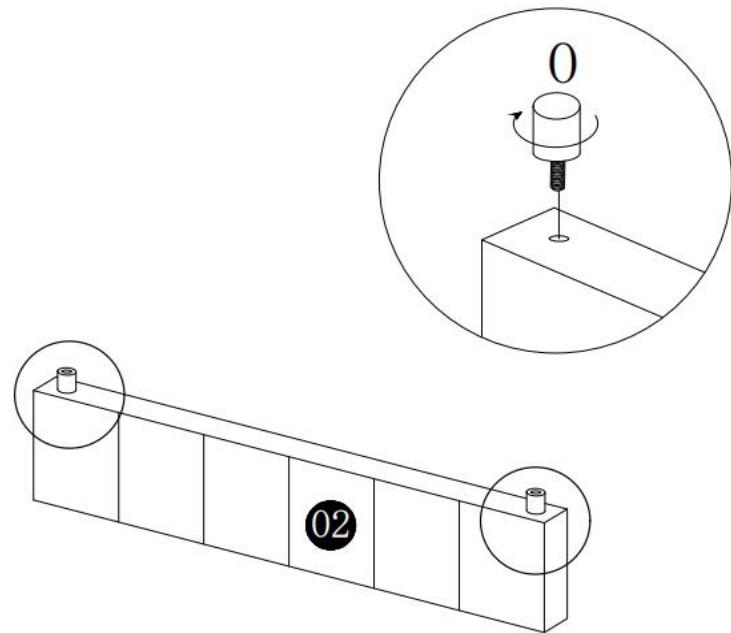

0		5*6cm	2
---	--	-------	---

Fix the Plastic feet(0) to the Footboard(②).

### Step 4

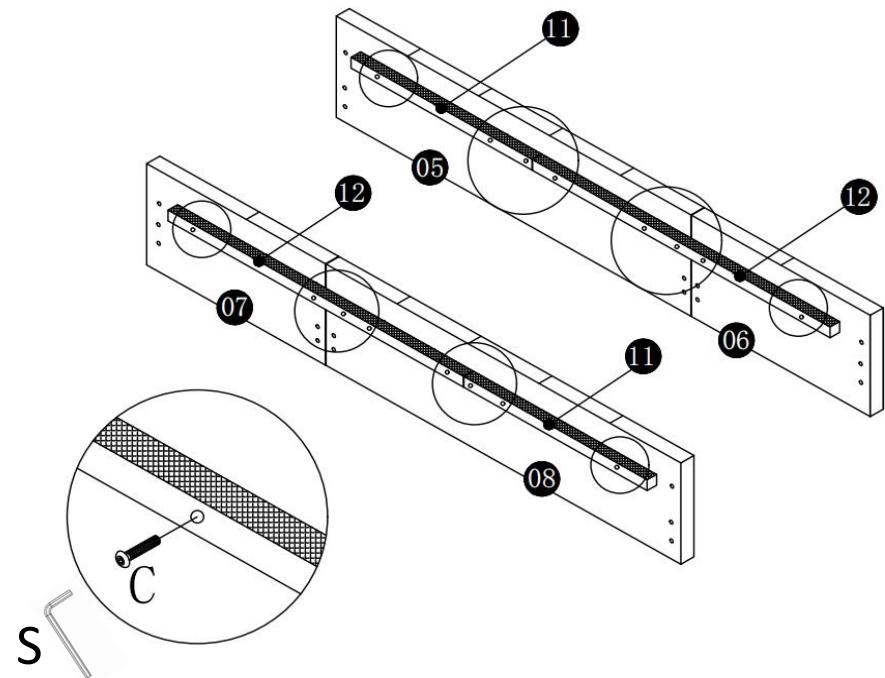

S		1
---	--	---


B		8*40	A		8*40	C		8*45	16
---	--	------	---	--	------	---	--	------	----

First put the Side rails-Right &Front(⑤) with Side rails-Right &Rear(⑥) together, and use the Bolts (C) assemble the Side bars-Front(⑪) to the Side rails-Right &Front(⑤), and use the Bolts (C) assemble the Side bars-Rear(⑫) to the Side rails-Right &Rear(⑥).

Second put the Side rails-Left &Rear(⑦) with the Side rails-Left &Front(⑧) together, and use the Bolts (C) assemble the Side bars-Rear(⑫) to the Side rails-Left &Rear(⑦), and use the Bolts (C) assemble the Side bars-Front(⑪) to the Side rails-Left &Front(⑧).

Please note that the shapes of Bolts (A) and (B) and (C) are similar. Please install according to the instructions and distinguish them!

## Step 5

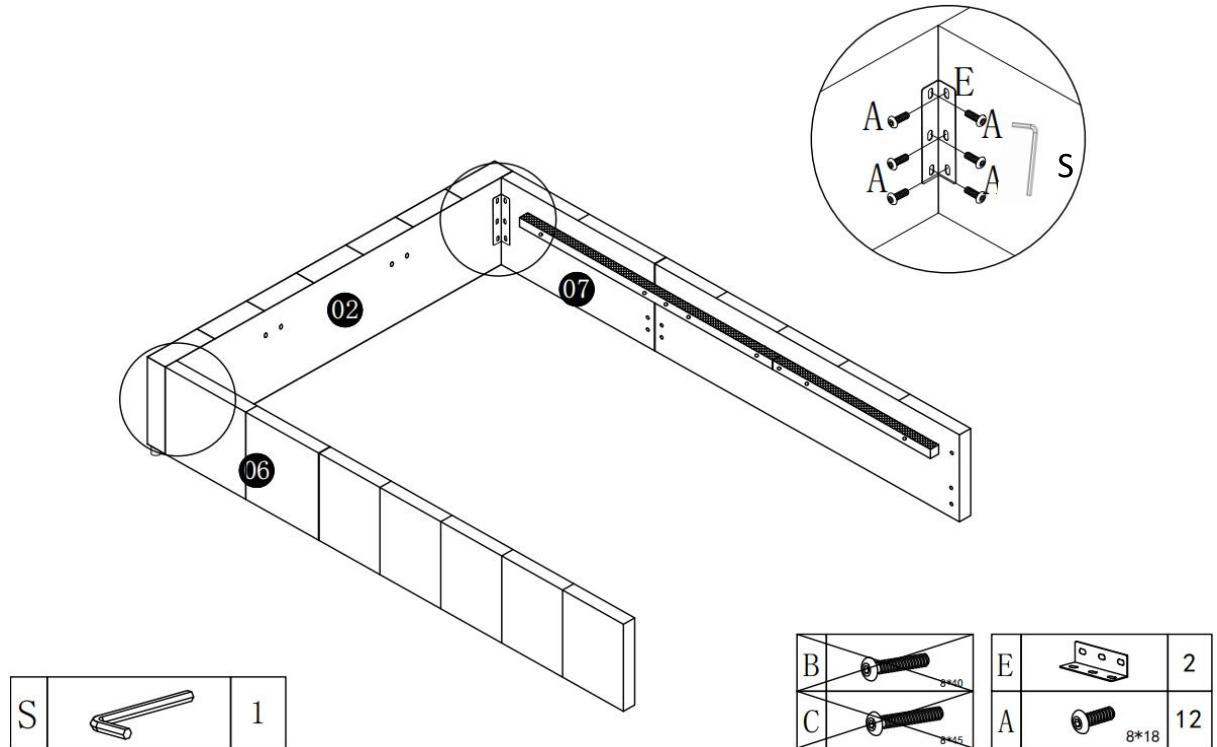


First put Side rails-Left&Rear(⑦) together with the left side of Footboard(②). The Footboard(②) and Side rails-Left &Rear(⑦) are assembled using Bolts(A) and Coner Brackets(E).

Second place Side rails-Right&Rear(⑥) with the right side of Footboard(②) and connect the two sections using Bolts(A) and Coner Brackets(E).

Please note that the shapes of Bolts (A) and (B) and (C) are similar. Please install according to the instructions and distinguish them!

## Step 6

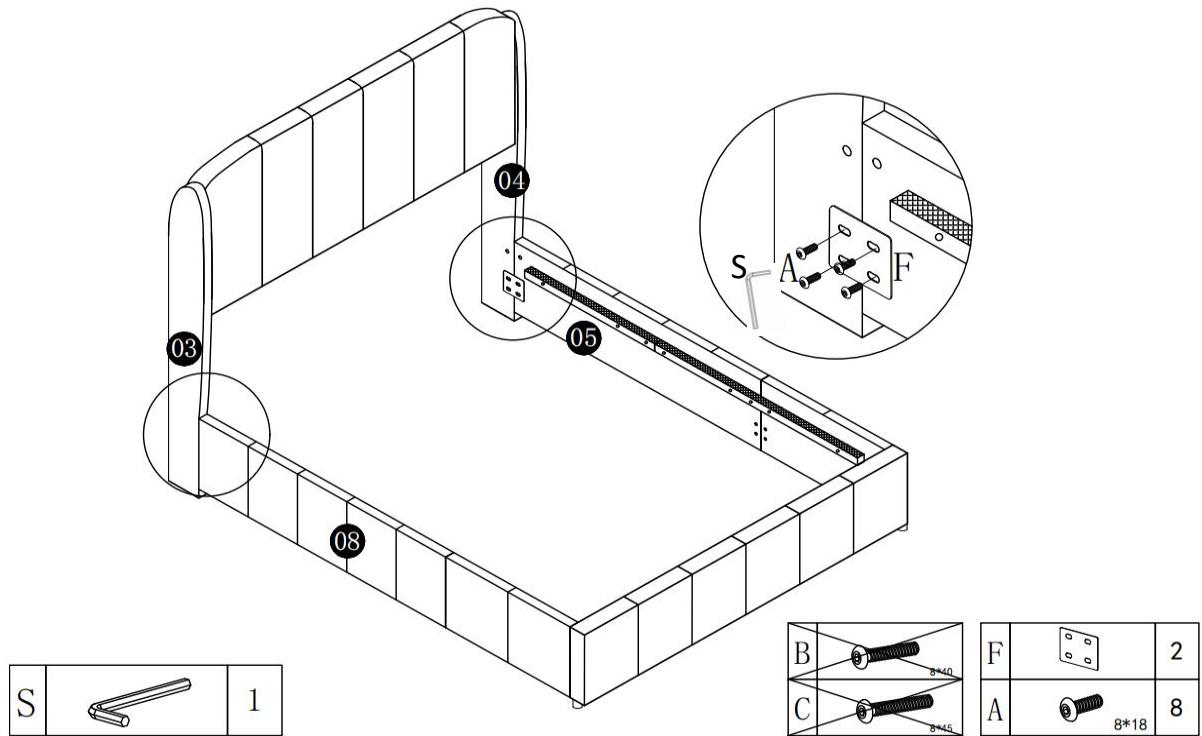


First put Side wings-Right(④) and Side rails-Right &Front(⑤) together, then assemble them using Bolts(A) and Metal Brackets(F).

Second put Side wings-Left(③) and Side rails-Left &Front(⑧)together, then assemble them using Bolts(A) and Metal Brackets(F).

Please note that the shapes of Bolts (A) and (B) and (C) are similar. Please install according to the instructions and distinguish them!

## Step 7

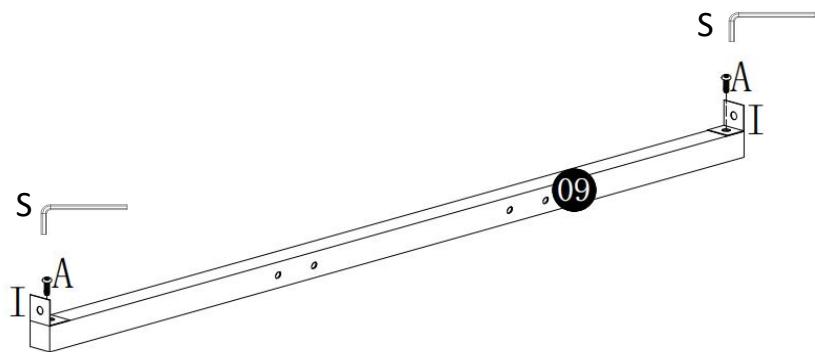


S		1
---	--	---

B		8*40	I		2
C		8*40	A		8*18 2

Attach the Metal Brackets(I) into the Cross Slat With Mounting Position(⑨) using Allen Wrench(S) and Bolts(A) Up.

Please note that the shapes of Bolts (A) and (B) and (C) are similar. Please install according to the instructions and distinguish them!

## Step 8

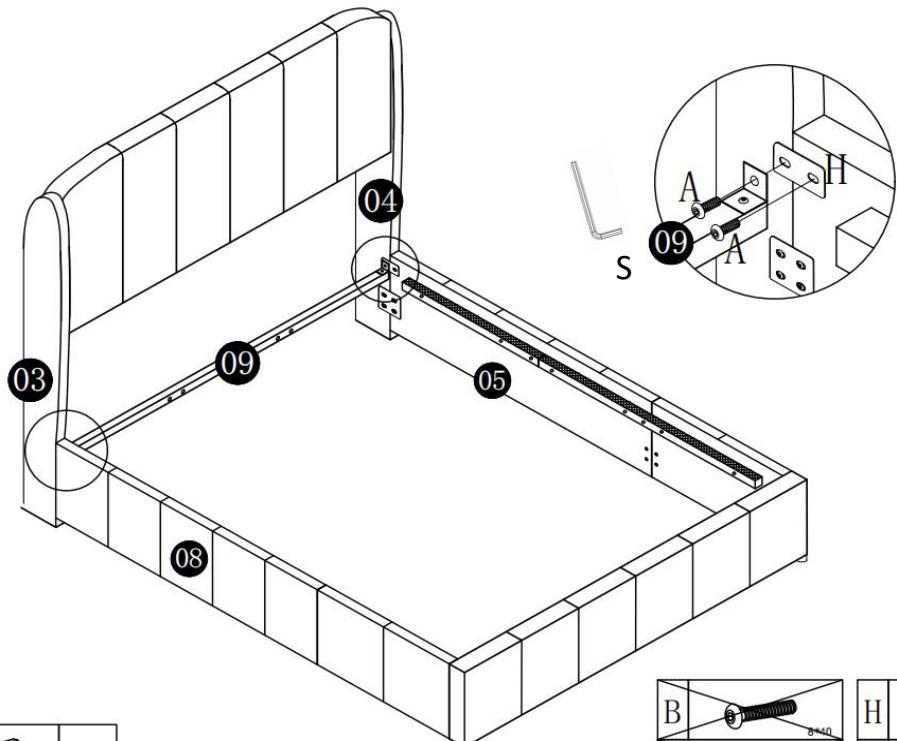

S		1
---	--	---




B		8*40	H		2
C		8*45	A		8*18 4

First, Assemble the Metal Brackets(I) ,Brackets(H) and Metal Side Wings-Right(④) together using Allen Wrench(S) and Bolts(A). See pic.

Second, Assemble the Metal Brackets(I) ,Brackets(H) and Side wings-Left(③) together using Allen Wrench(S) and Bolts(A). See pic.

Please note that the shapes of Bolts (A) and (B) and (C) are similar. Please install according to the instructions and distinguish them.

## **Step 9**

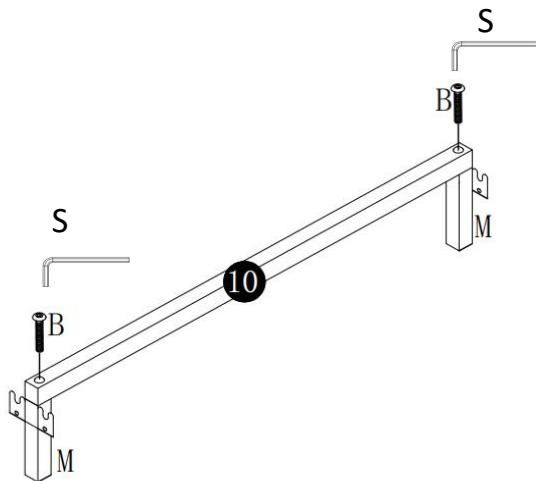


M		2
B		2

Assemble the Support feet-Side(16.5cm)(M) into the Cross Slat Without Mounting Position(⑩) using Allen Wrench(S) and Bolts(B) Up.

Please note that the shapes of Bolts (A) and (B) and (C) are similar. Please install according to the instructions and distinguish them!

## **Step 10**

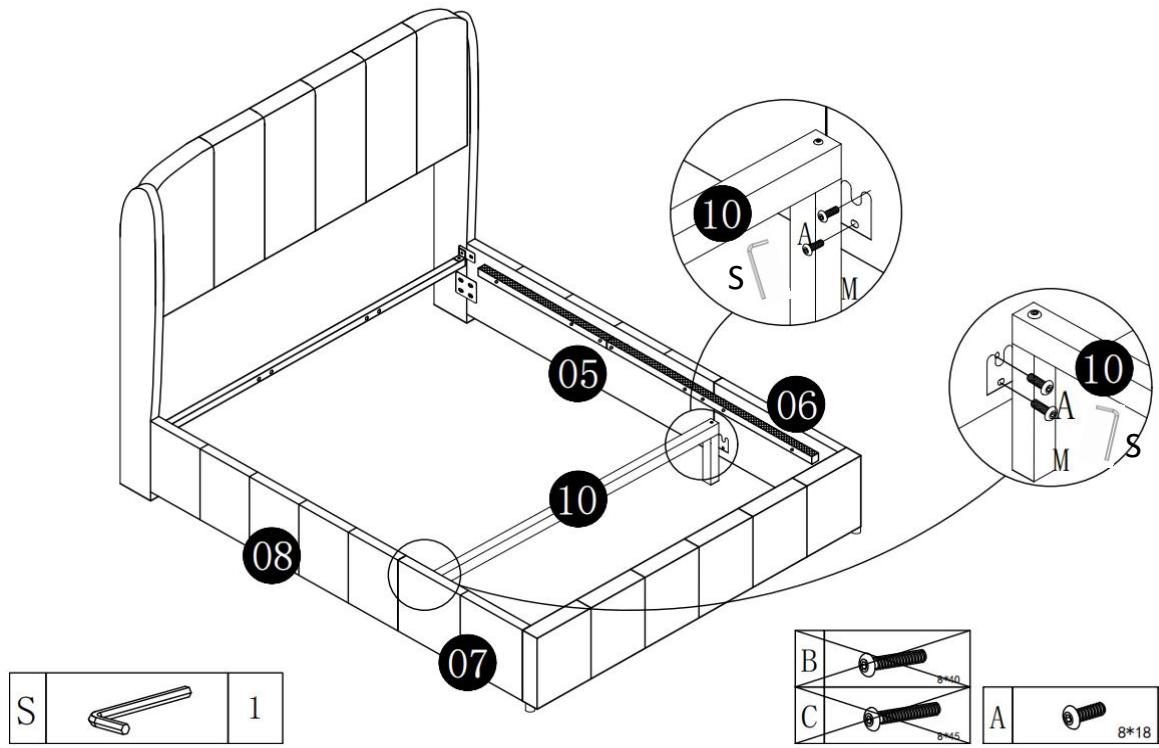


First,Assemble the Support feet-Side(16.5cm)(M) and Right rails together using Allen Wrench(S) and Bolts(A).

Second, Assemble the Support feet-Side(16.5cm)(M) and Left rails together using Allen Wrench(S) and Bolts(A).

Please note that the shapes of Bolts (A) and (B) and (C) are similar. Please install according to the instructions and distinguish them!

## Step 11x2

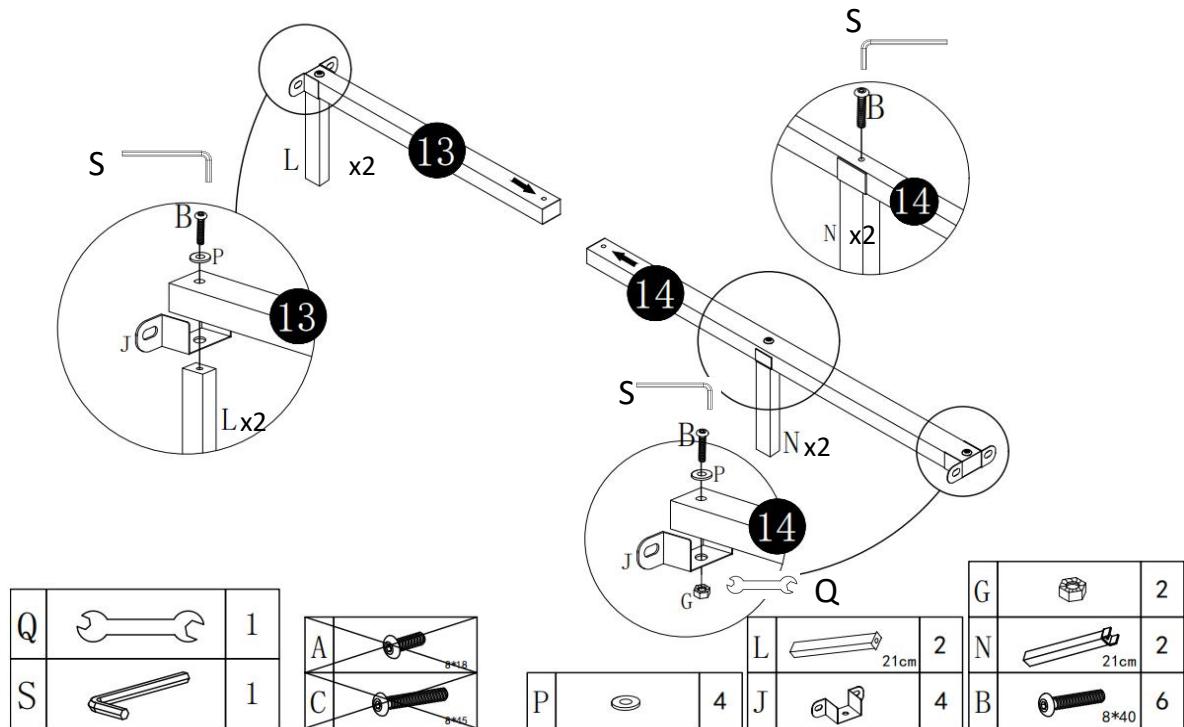


First, Using the Allen Wrench(S) to make the Bolts(B) and Washer(P) and Metal Brackets(J) to assemble the Middle bars(13) and Support feet Front(24cm)(L) together.

Second, Using the Allen Wrench(S) and Spanner(Q) to make the Bolts(B) , and Washer(P) and Nut(G) to assemble the Middle bars(14) and Metal Brackets(J) together.

Third, using Allen Wrench(S) and Bolts(B) to make the Middle feet(24cm)(N) assemble to the Middle bars(14), as shown above, and please repeat this step.

Please note that the shapes of Bolts (A) and (B) and (C) are similar. Please install according to the instructions and distinguish them!

## Step 12x2

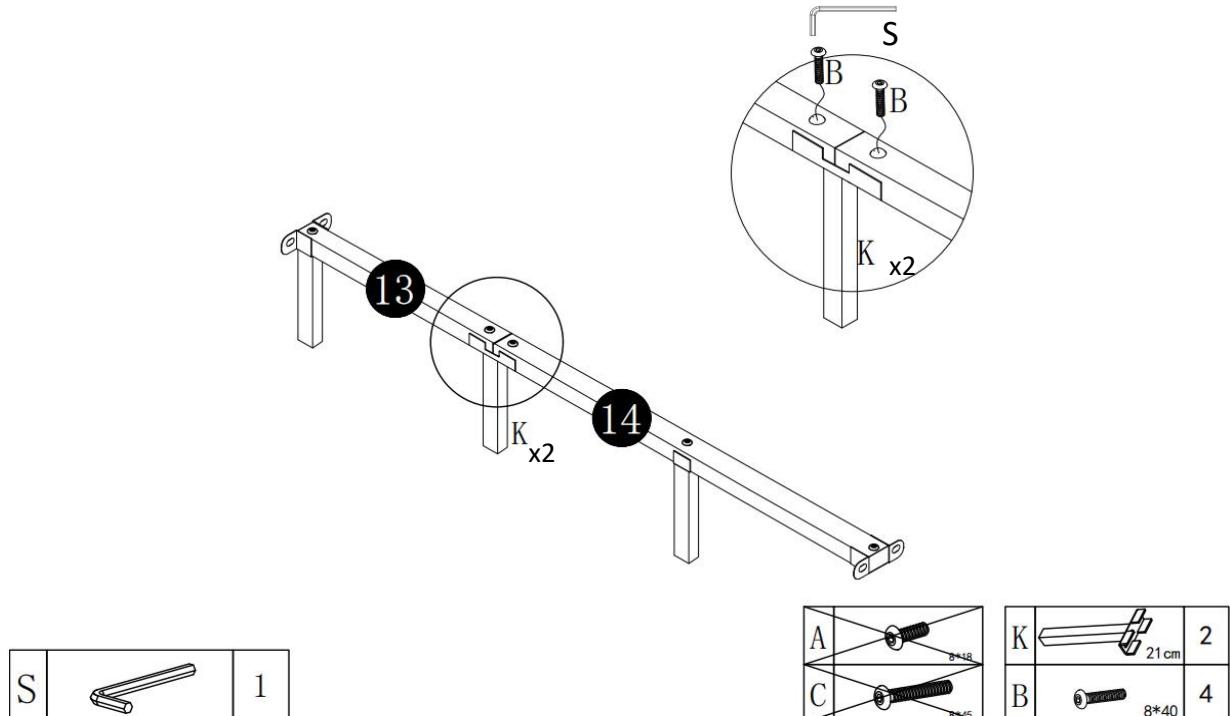


Using the Allen Wrench(S) and Bolts(B) to connect Middle feet-U shape(24cm)(K) to the 2 Middle bars (13 and 14).

Please repeat this step.

Please note that the shapes of Bolts (A) and (B) and (C) are similar. Please install according to the instructions and distinguish them!

## Step 13

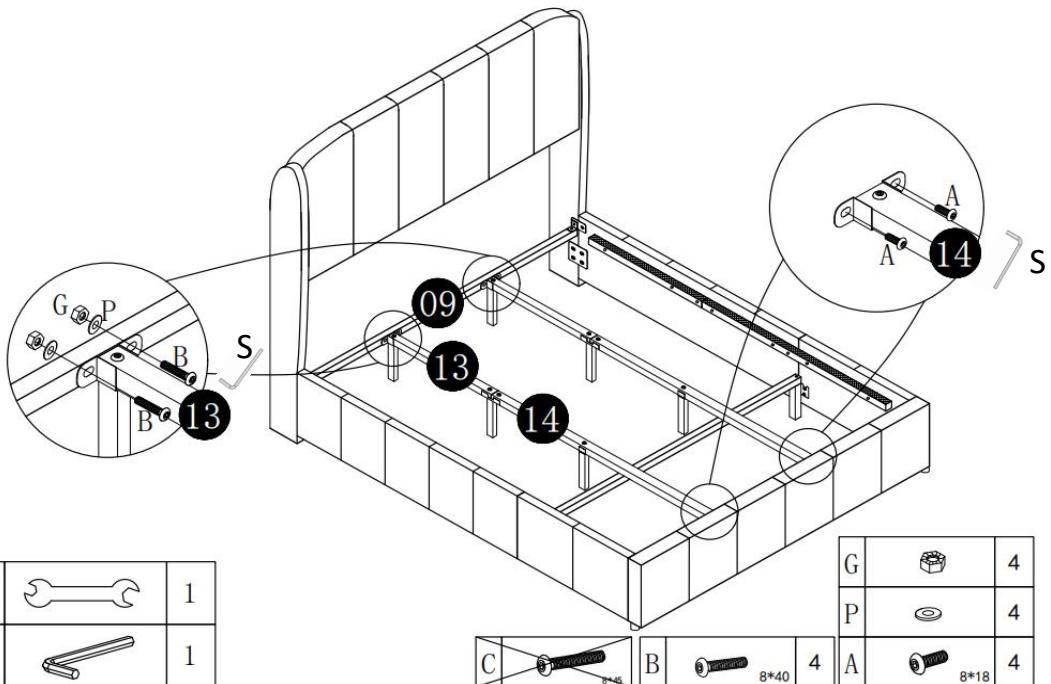


First, Find the tools Allen Wrench(S) and Spanner(Q) and use the Bolts(B) to assemble the Metal Brackets(J) into the Cross Slat With Mounting Position(⑨).Please repeat this step.

Second, the Metal Brackets(J) and Footboard (②) are assembled using the Allen wrench (S) and with Bolts (A). Please repeat this step.

Please note that the shapes of Bolts (A) and (B) and (C) are similar. Please install according to the instructions and distinguish them!

## Step 14

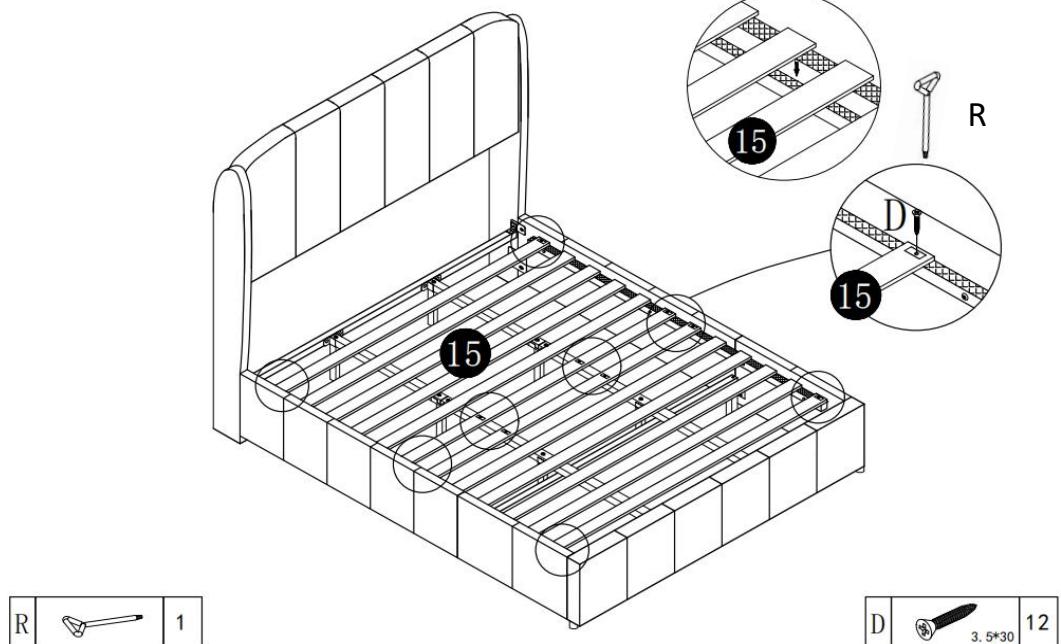

Assembly the Straight Slats(⑯),put the part on the frame,like above pic, and than use the Cross Wrench(R) to fix the Self-tapping screw(D) into the Side bars(Left ⑪&⑫ and right⑬&⑭) and Middle bar(⑯).

Your Bed is ready for use.

Note: After assembly and before using the bed, inspect to make sure all parts are properly connected and securely fastened.

### WARNING

Serious or fatal crushing injuries can occur from tipping furniture. To help prevent tip-over: ALWAYS secure this furniture to the wall using a Safety Restraint Device. See product instructions for more ways to help prevent furniture tip-over.