


# ASSEMBLY INSTRUCTIONS


## DESK TABLE

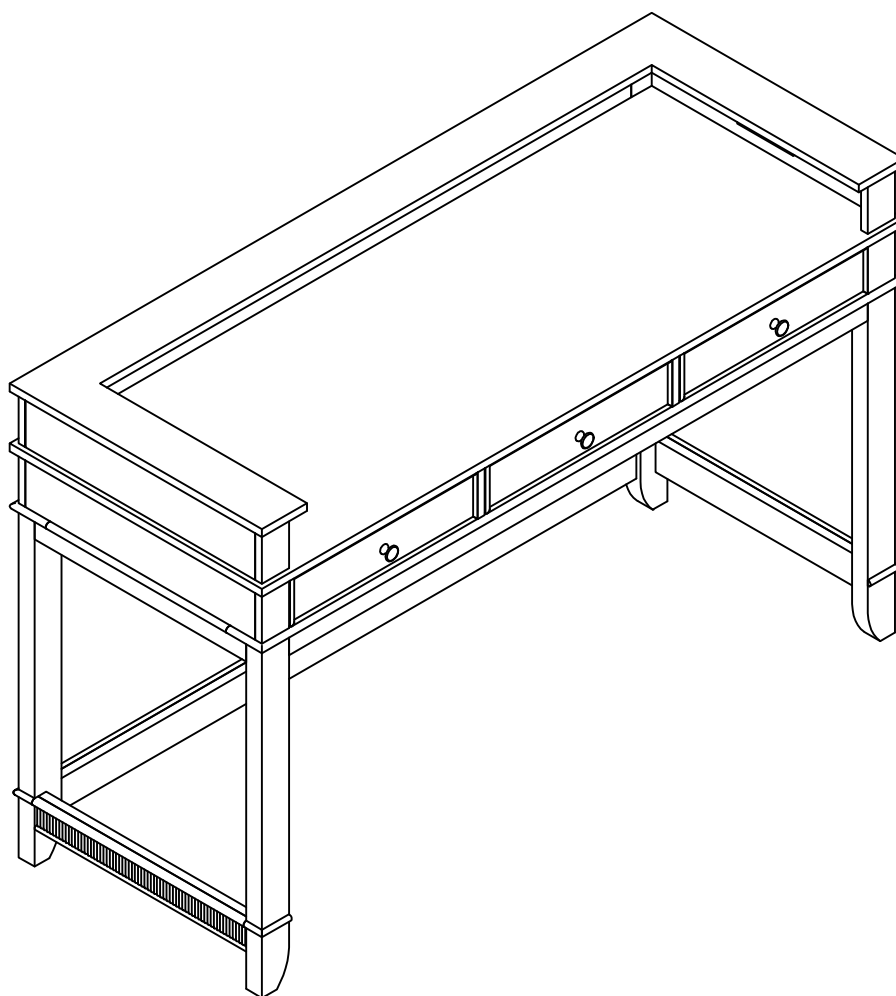










N715P336424
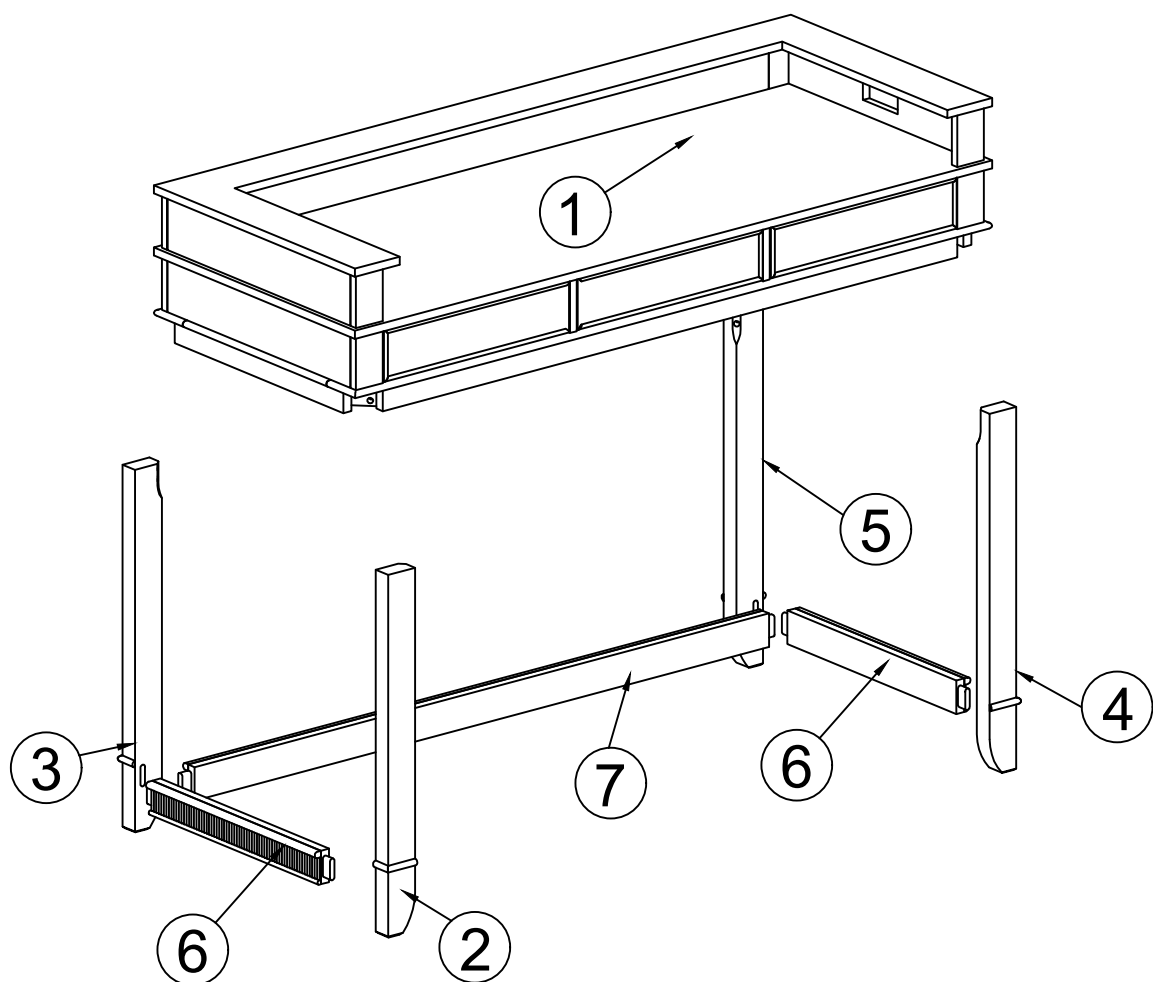
### IMPORTANT NOTE :

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.



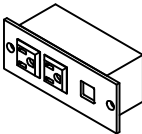
### Hardware List For One DeskTable


|   |   |   |  |
|---|---|---|--|
| <div><div>A</div><div><br/>Ø1/4" x 50mm<br/>BOLT (8PCS)</div></div>        |   | <div><div>B</div><div><br/>Ø1/4" x 11mm<br/>LOCK WASHER (8PCS)</div></div> |  |
| <div><div>C</div><div><br/>Ø1/4" x 18mm<br/>FLAT WASHER (8PCS)</div></div> |   | <div><div>D</div><div><br/>4MM<br/>ALLEN (1PC)</div></div>                 |  |
| <div><div>E</div><div><br/>M4 x 45mm<br/>SCREW (6PCS)</div></div>          |   | <div><div>F</div><div><br/>USB (1PC)</div></div>                           |  |
| <div><div>G</div><div><br/>M4 x 12mm<br/>SCREW (2PCS)</div></div>          | <div><div>H</div><div><br/>KNOB (3PCS)</div></div> | <div><div>K</div><div><br/>M4x 35mm<br/>BOLT (3PCS)</div></div>            |  |
| 2 OF 8  |   |   |  |

# Part List For One Desk Table


|                      |             |                       |
|----------------------|-------------|-----------------------|
| ①                    | ②           | ③                     |
| TABLE TOP (1PC)      | LEG 1 (1PC) | LEG 2 (1PC)           |
| ④                    | ⑤           | ⑥                     |
| LEG 3 (1PC)          | LEG 4 (1PC) | SHORT STRETCHER(2PCS) |
| ⑦                    |             |                       |
| LONG STRETCHER (1PC) |             |                       |

STEP 1:

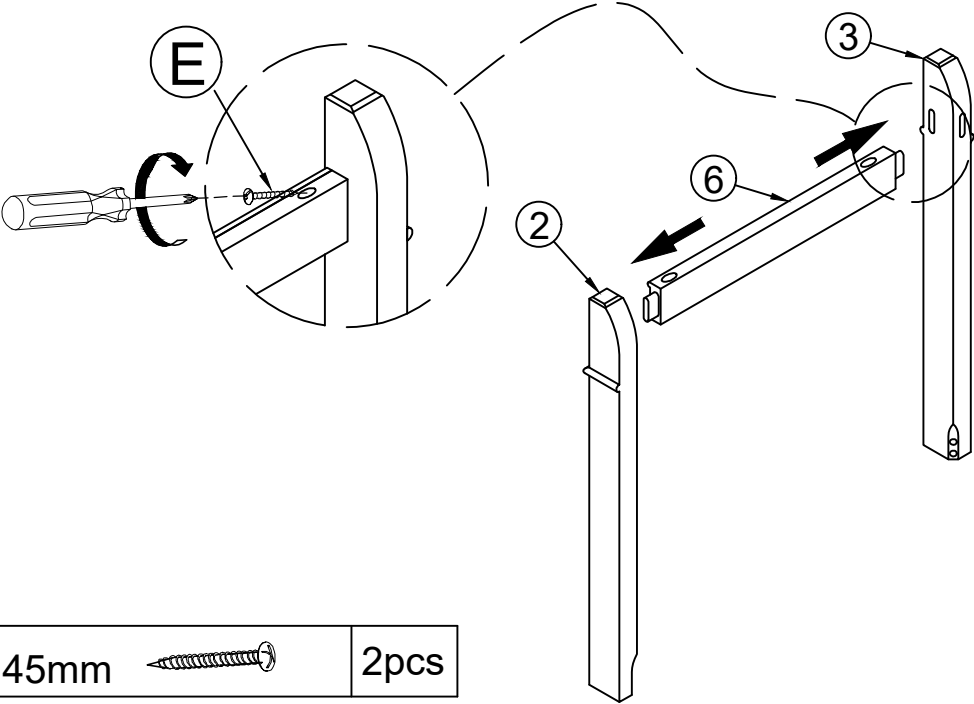


|   |           |   |      |
|---|-----------|---|------|
| E | M4 x 45mm |  | 2pcs |
|---|-----------|---|------|



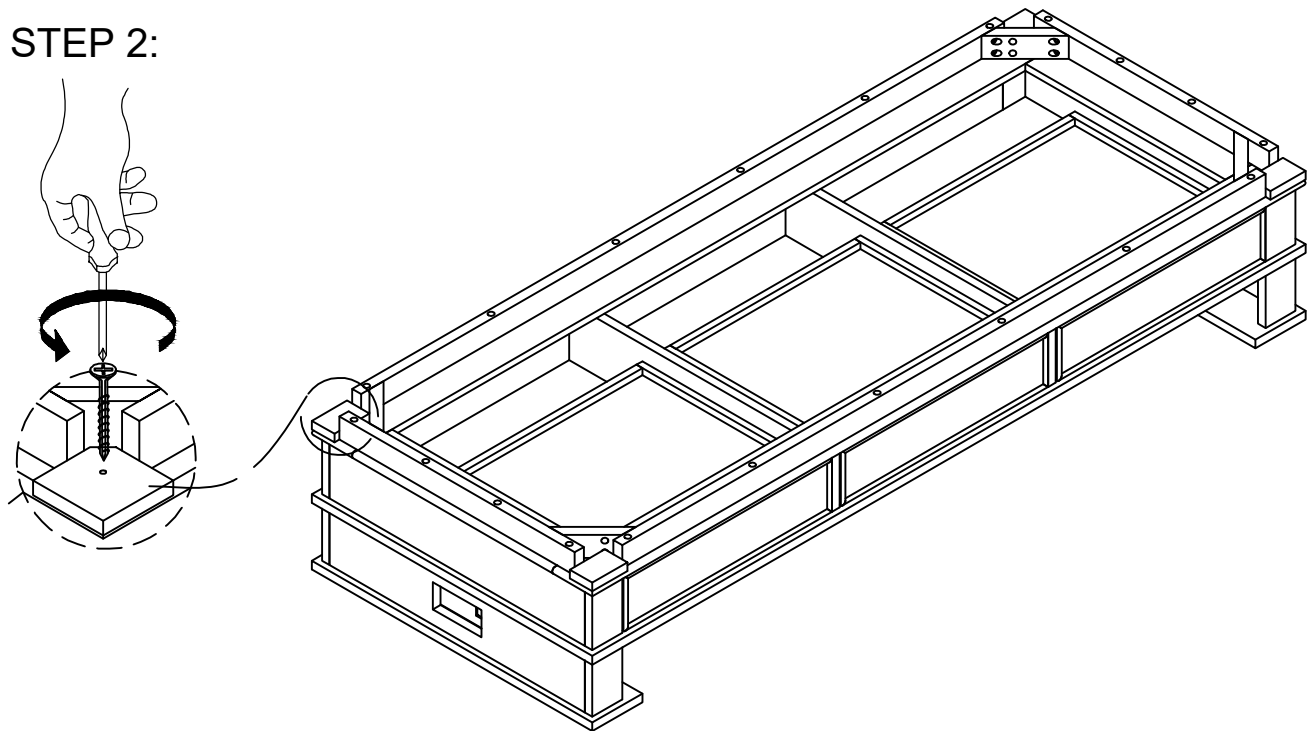

STEP 2:

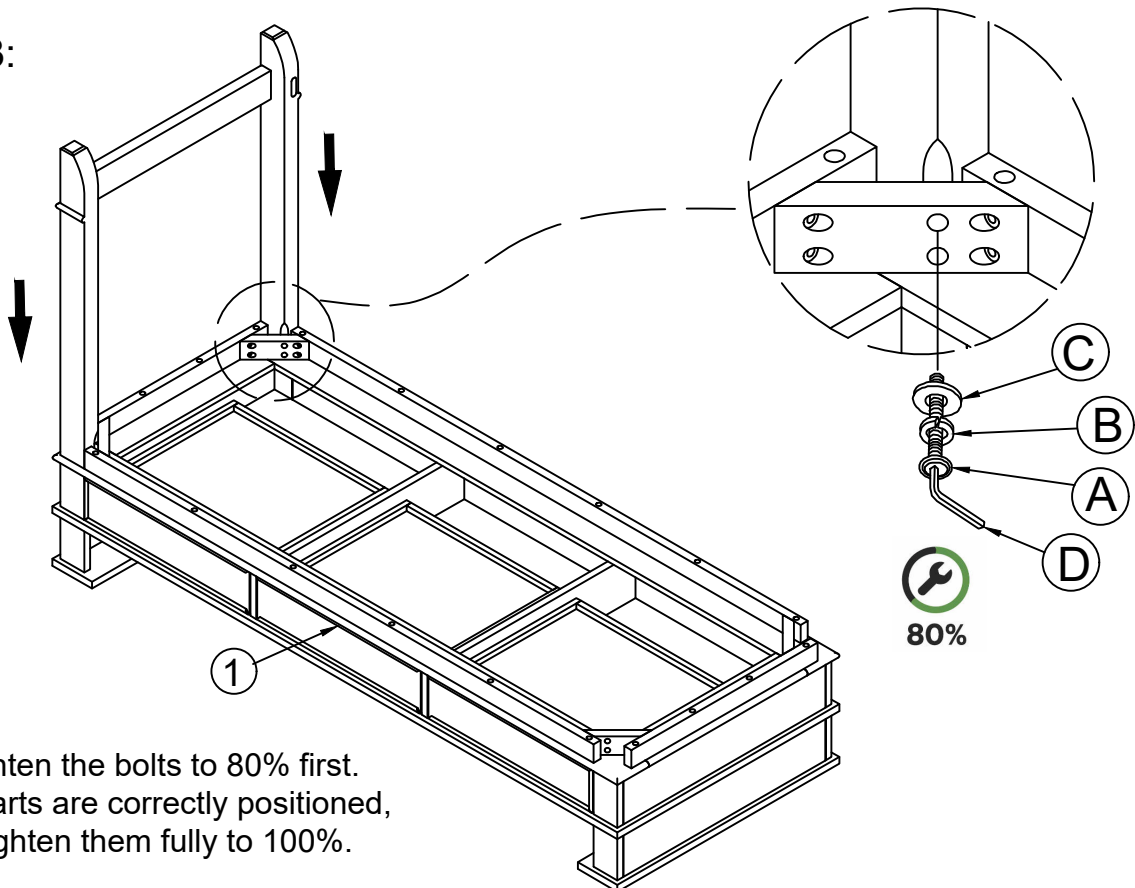


STEP 3:




**Note:** Tighten the bolts to 80% first.  
After all parts are correctly positioned,  
you can tighten them fully to 100%.

|   |            |   |      |   |            |   |      |
|---|------------|---|------|---|------------|---|------|
| A | Ø1/4"x50mm |  | 4pcs | B | Ø1/4"x11mm |  | 4pcs |
| C | Ø1/4"x18mm |  | 4pcs | D | 4mm        |  | 1pc  |

## STEP 4:

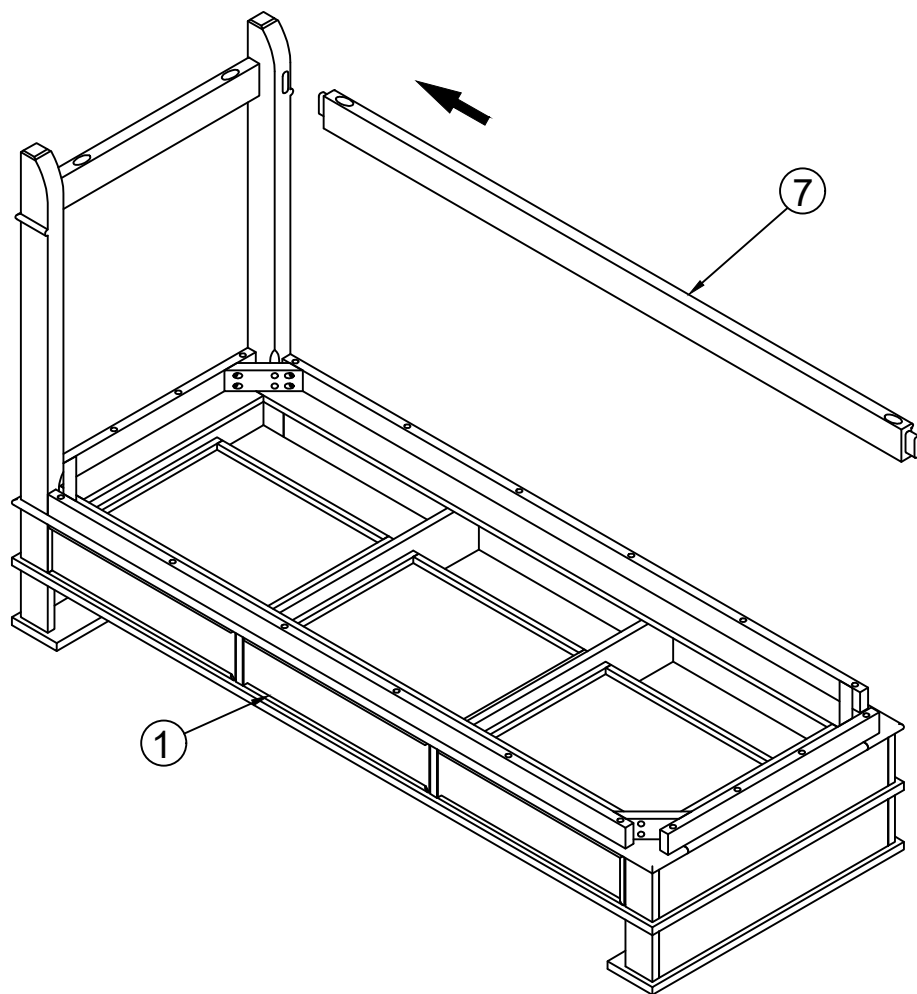

## STEP 5:

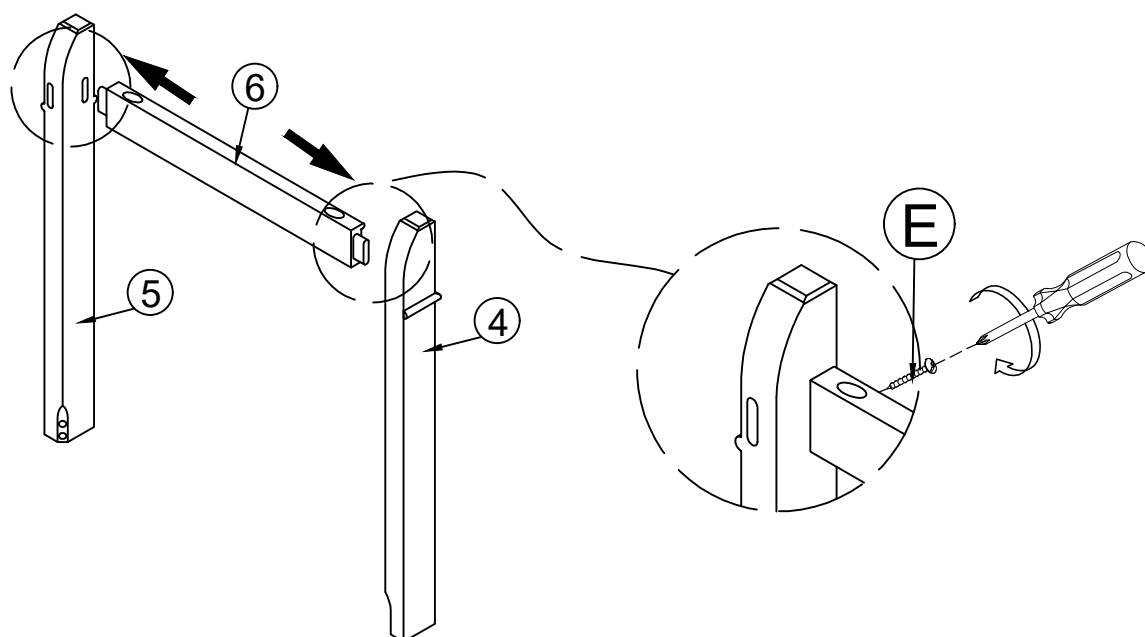


E






M4 x 45mm

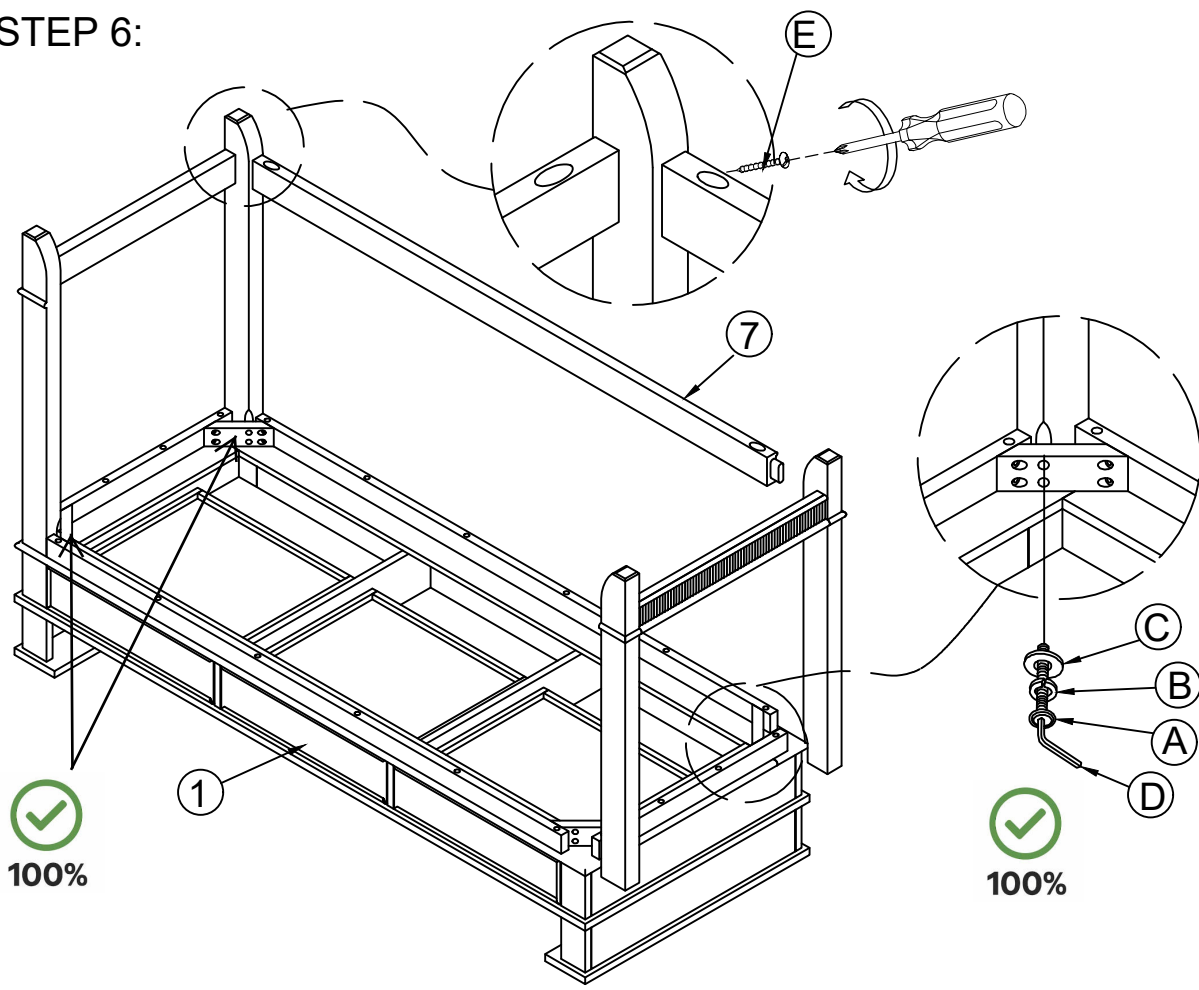


2pcs

STEP 6:




|   |            |   |      |   |            |   |      |
|---|------------|---|------|---|------------|---|------|
| A | Ø1/4"x50mm |  | 4pcs | B | Ø1/4"x11mm |  | 4pcs |
| C | Ø1/4"x18mm |  | 4pcs | D | 4mm        |  | 1pc  |
| E | M4 x 45mm  |  | 2pcs |   |            |   |      |

STEP 7:

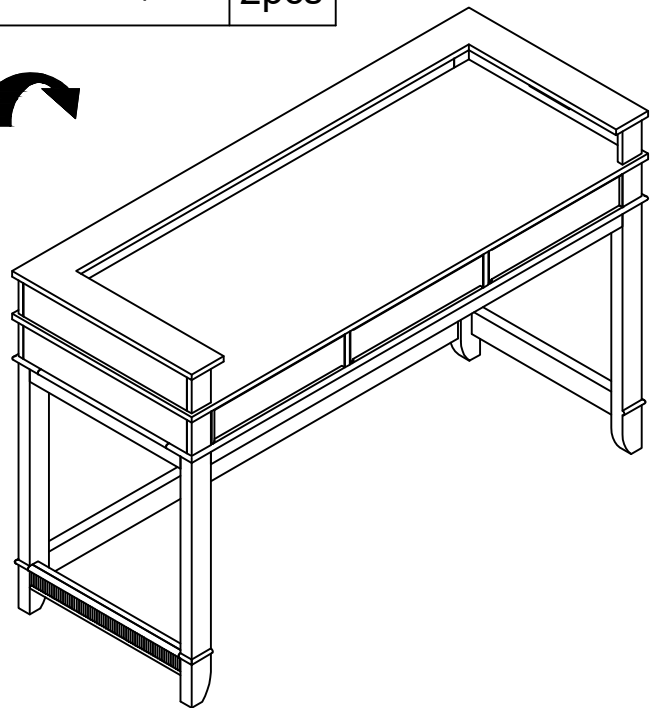

## STEP 8:

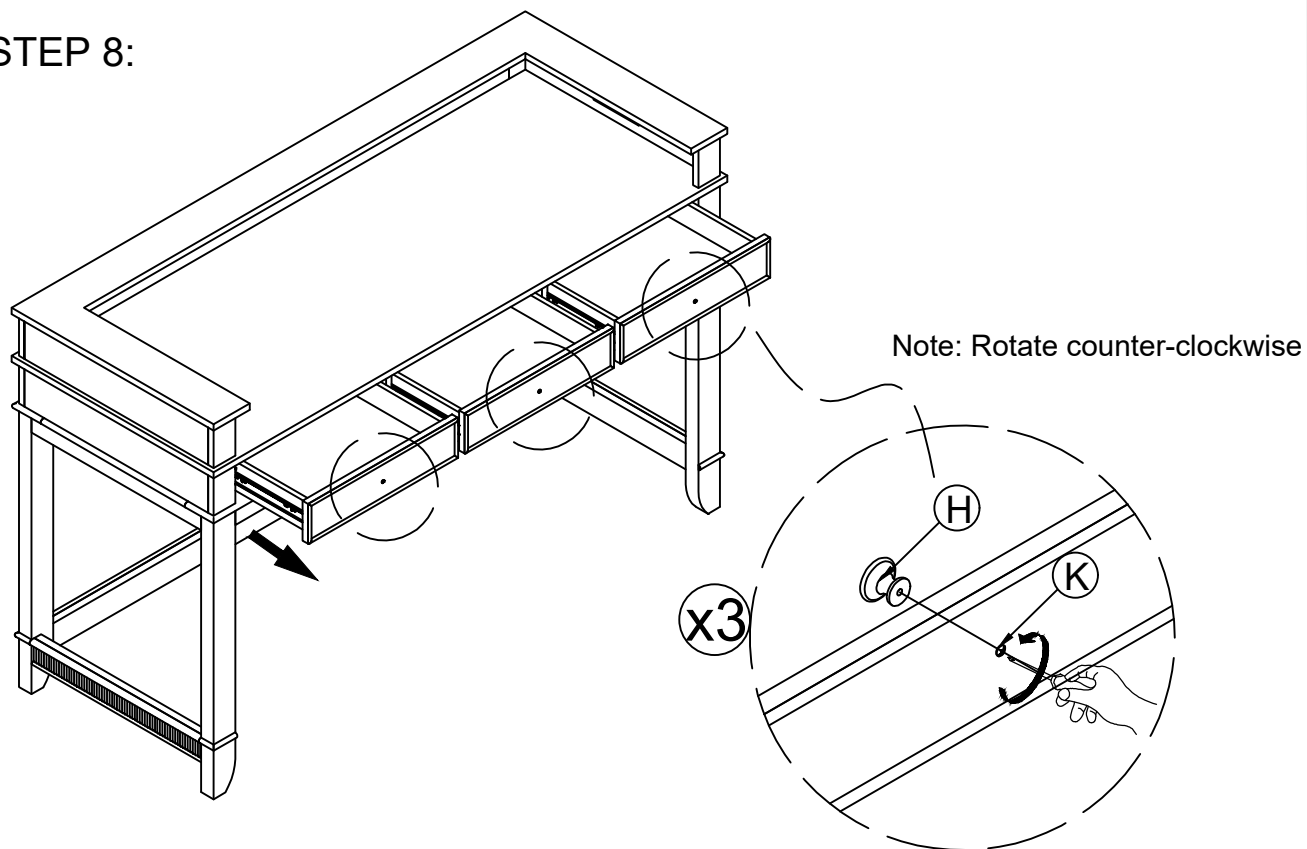

**H**

KNOB



3pcs


**K**

M4x 35mm




3pcs

## STEP 9:

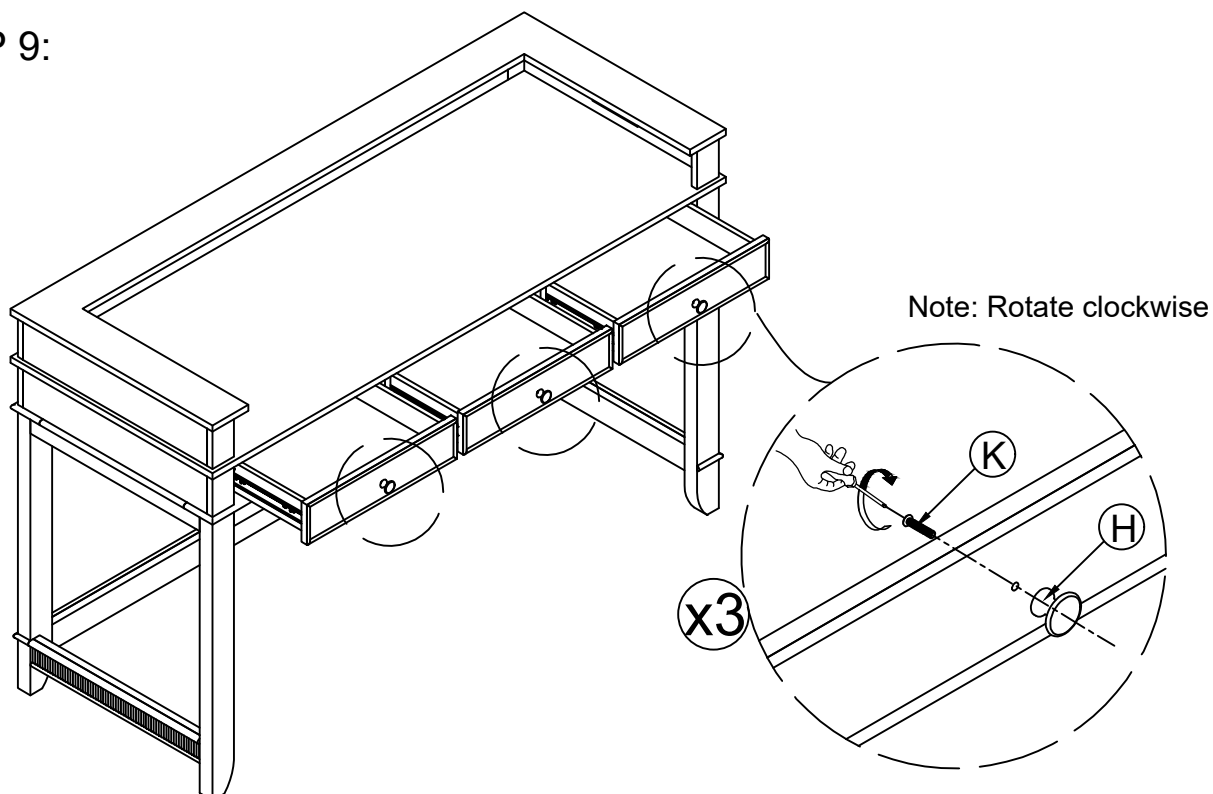

STEP 10:

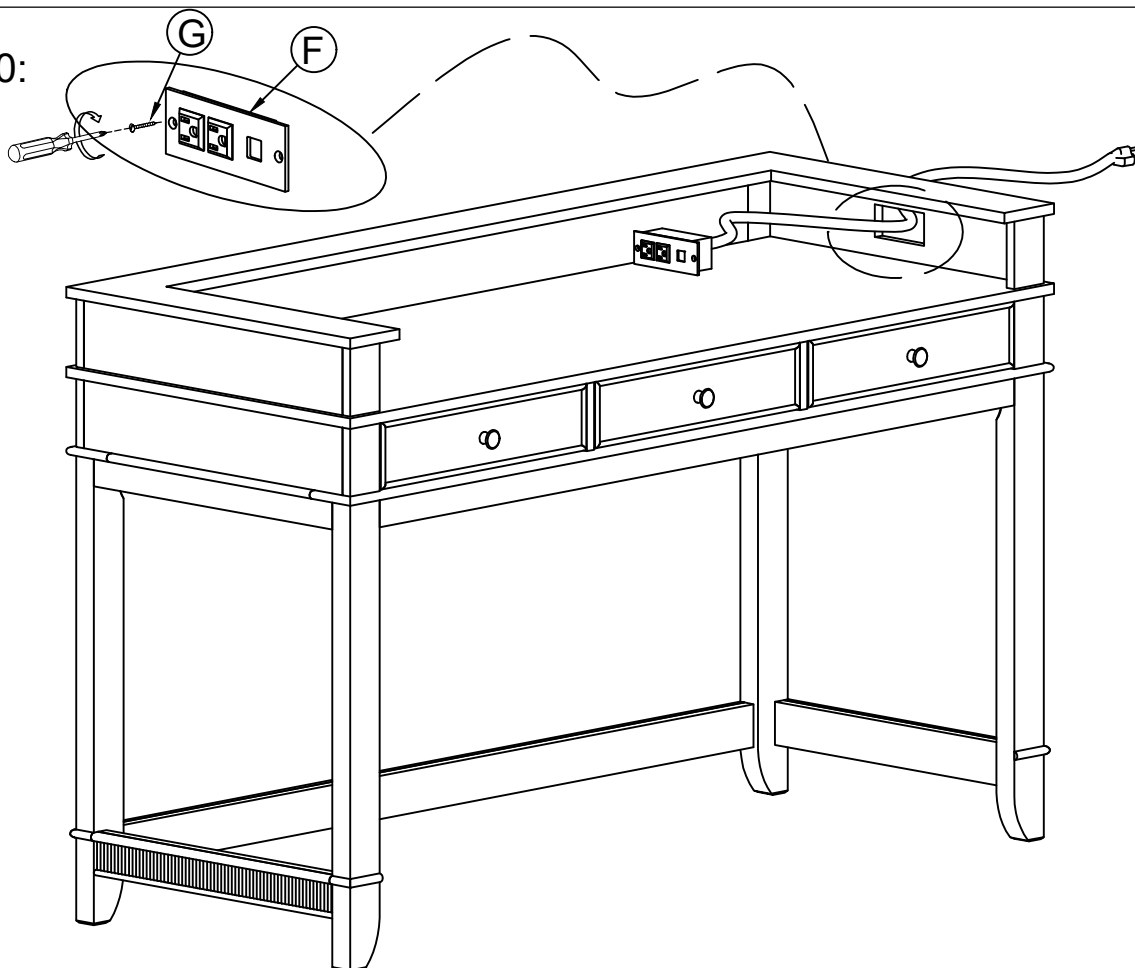

**F**

USB



1pc

**G**

M4 x 12mm



2pcs

STEP 11:

