


TSP-848


0.8m Bathroom cabinet

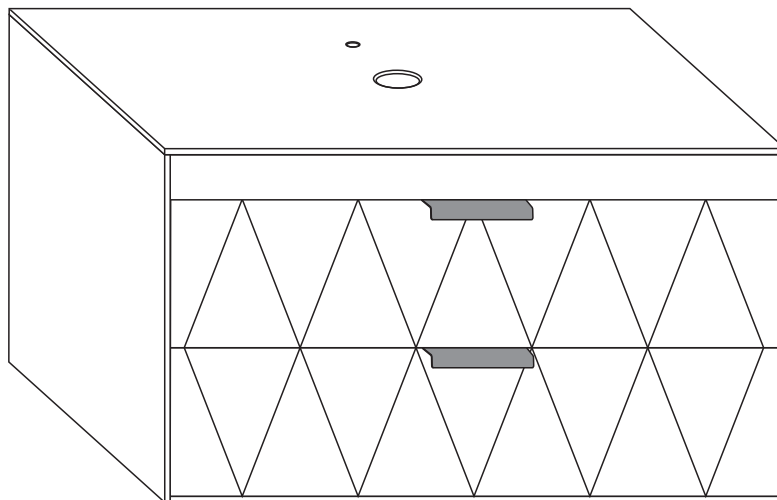


L800*W480*H415MM

Installation Instructions









Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.

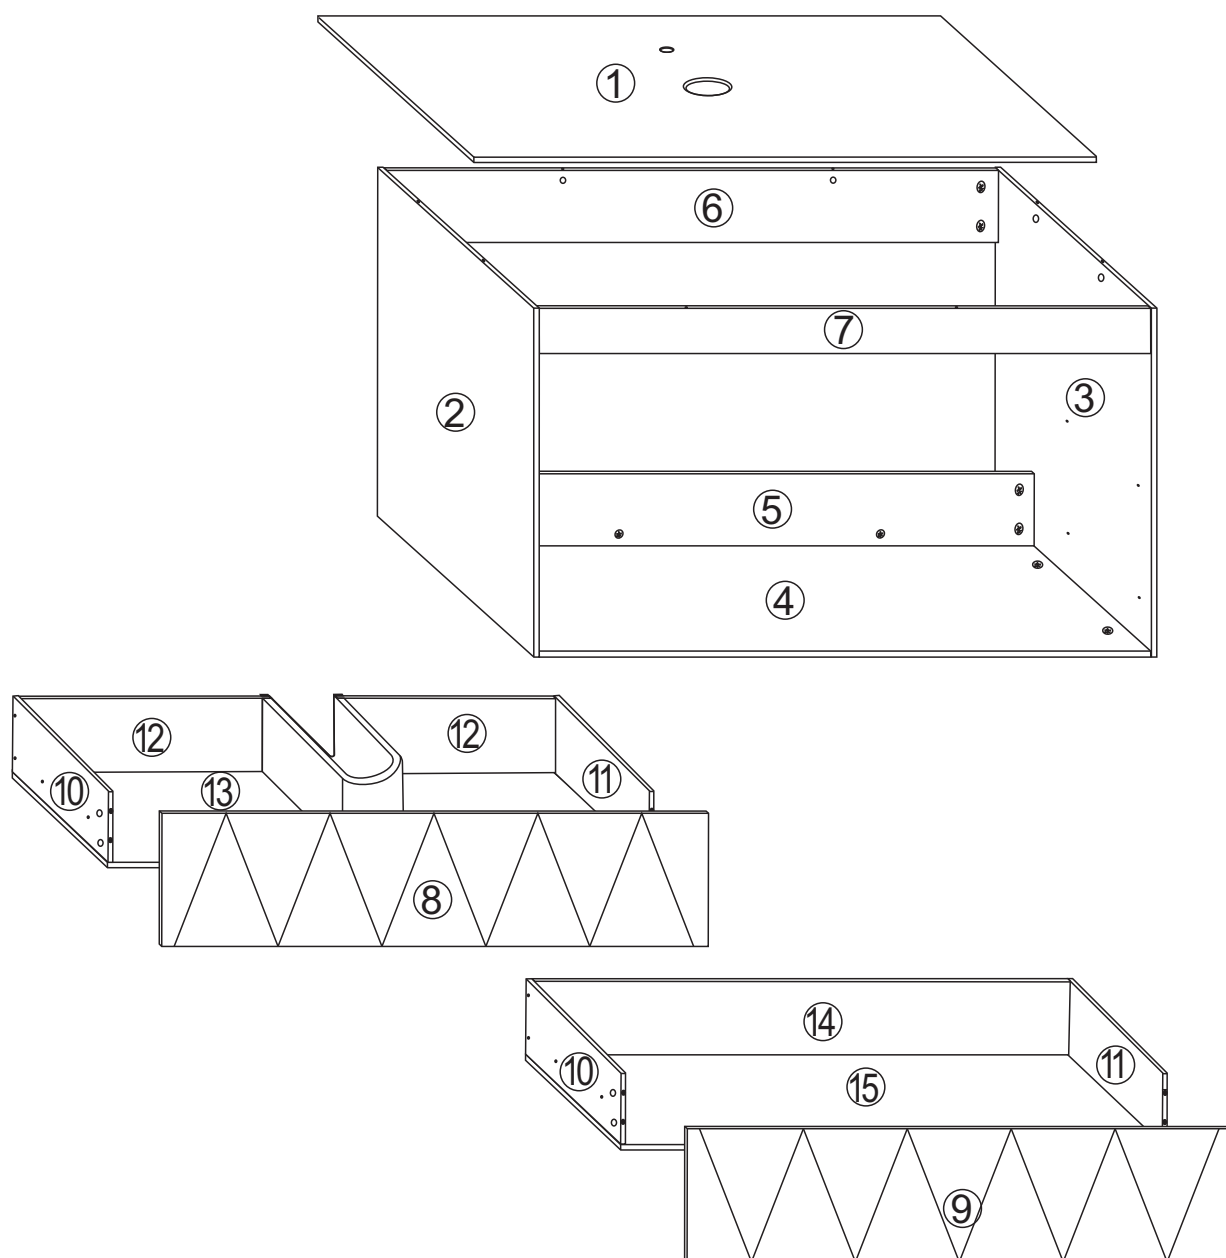

Disassembly and installation of accessories

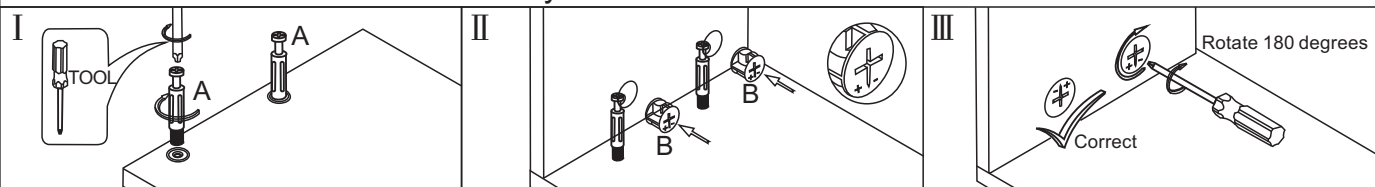


A 38 PCS	B 38 PCS	C 61 PCS	D 20 PCS	E 4 PCS	F 4 SETS	G 2 PCS	H 2 PCS
		 3.5*14 mm	 3.5*35 mm		 Expansion screw		
I 2 PCS							
							

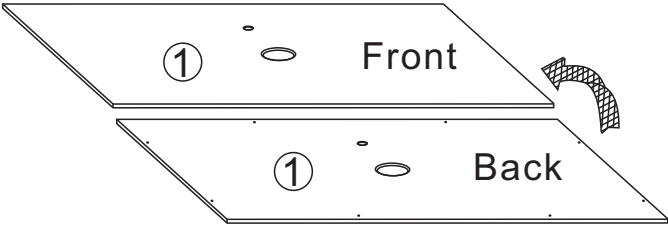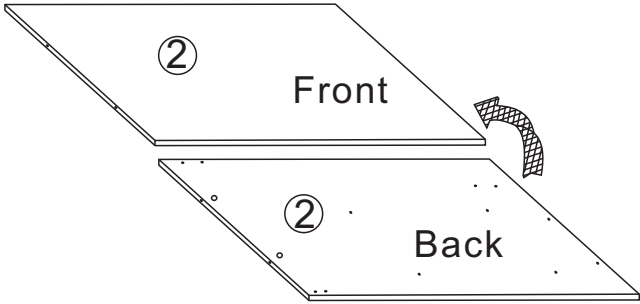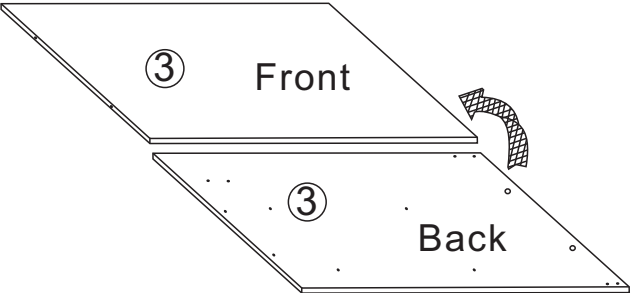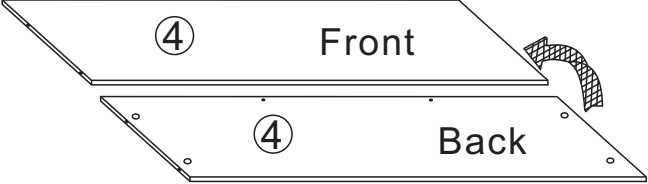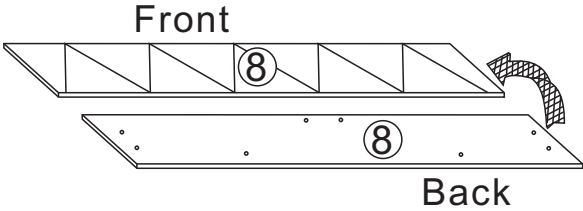1  1 PCS	2  1 PCS
3  1 PCS	4  1 PCS
5  1 PCS	6  1 PCS
7  1 PCS	8  2 PCS

9 1 PCS	10 2 PCS
11 2 PCS	12 1 PCS
13 1 PCS	14 1 PCS
15 1 PCS	


1

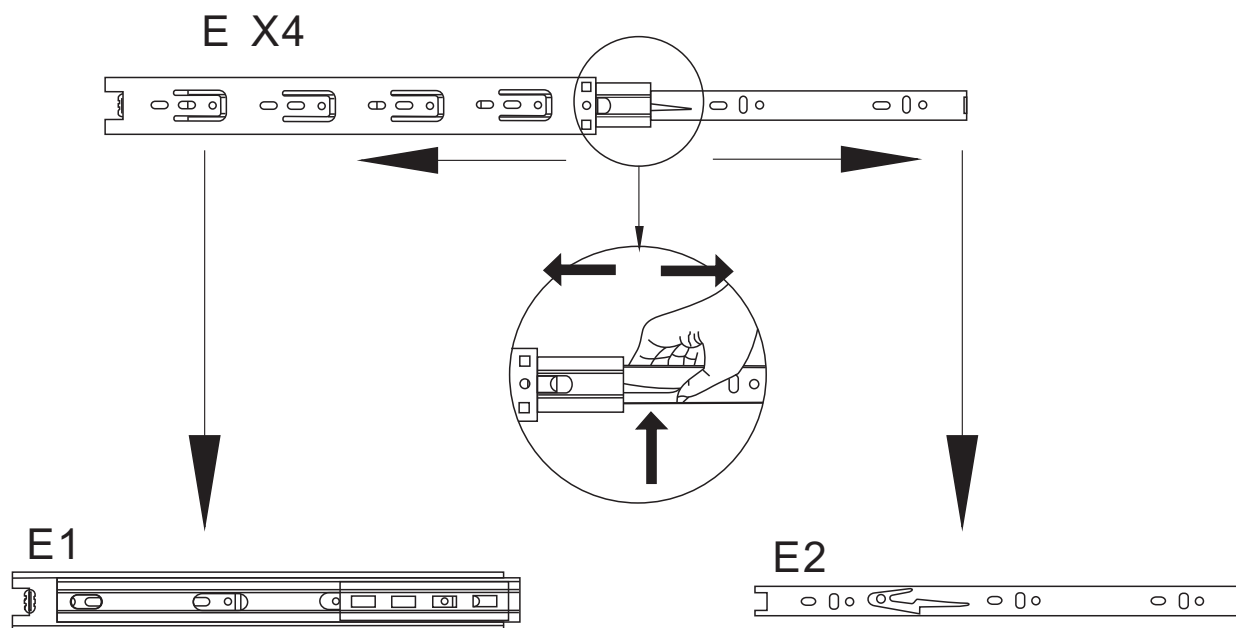

E 4 PCS



2

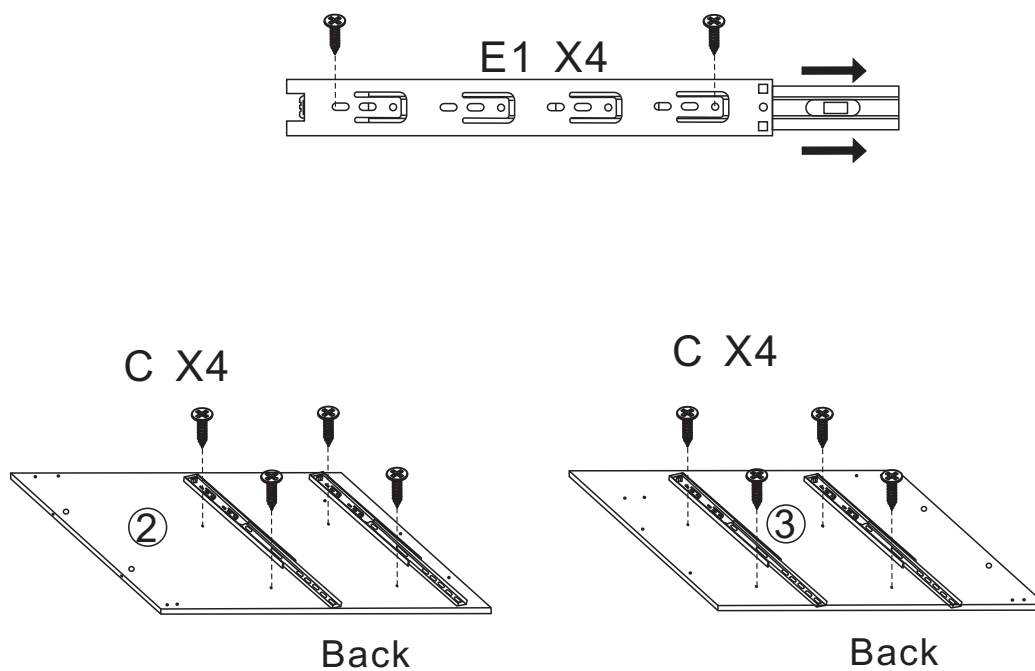


C 8 PCS

3.5*14 mm

E1 4 PCS




3

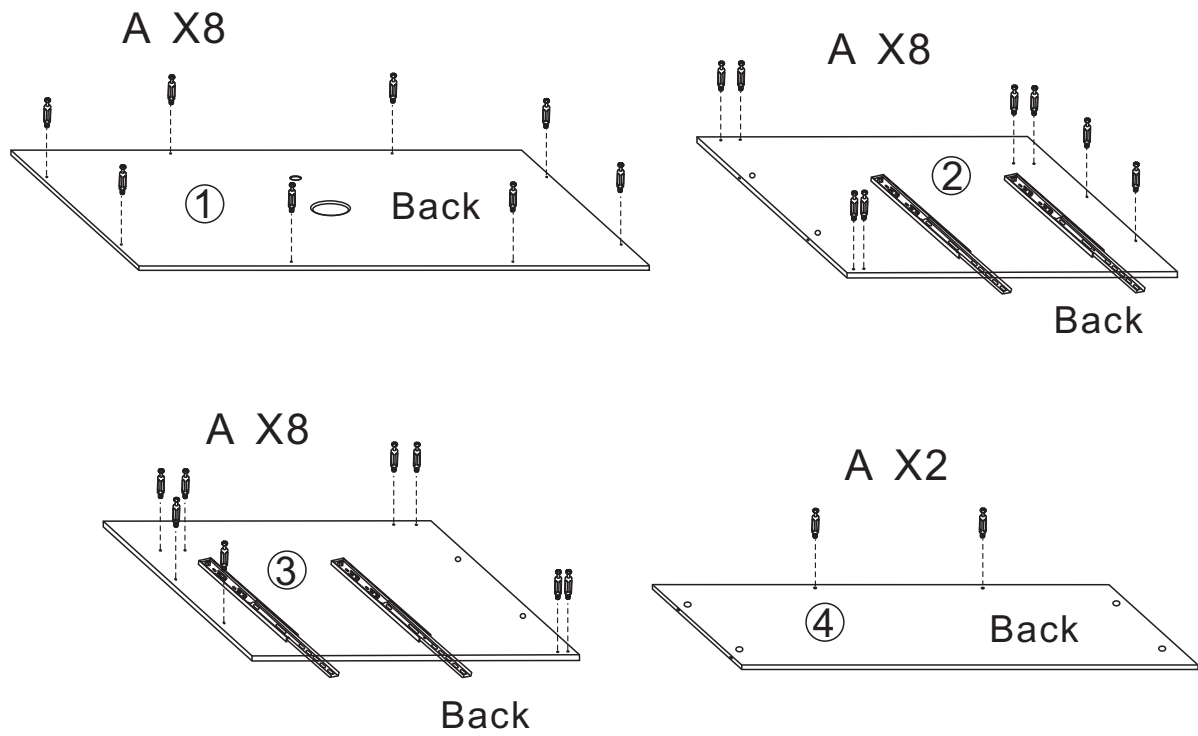

A 26PCS




4

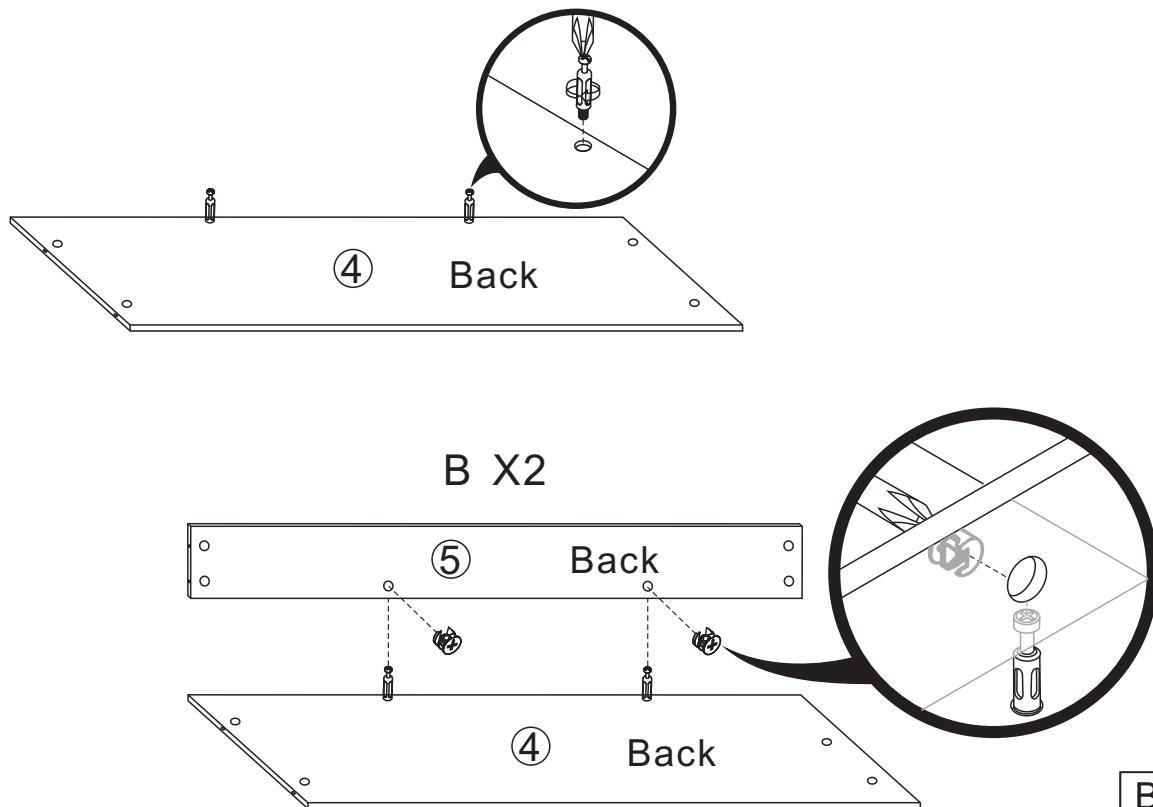


B 2PCS




5

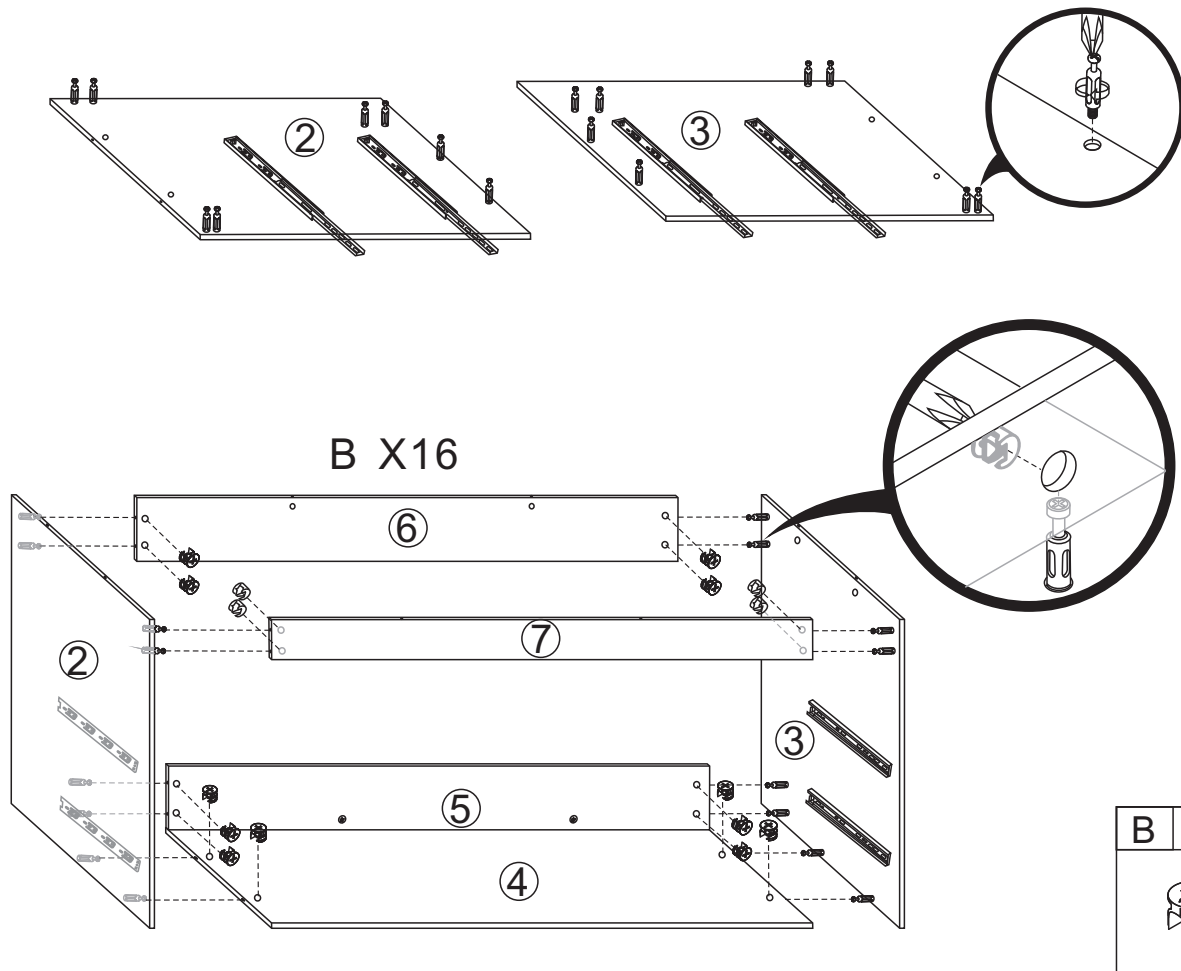

6

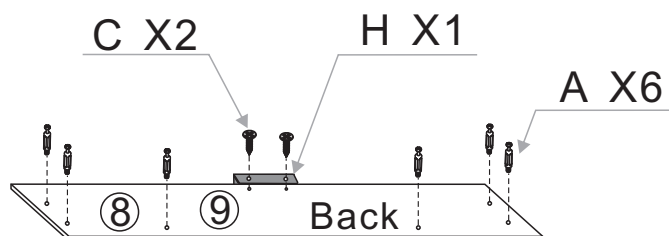


The screw installation method for both Board⑧and Board⑨is the same

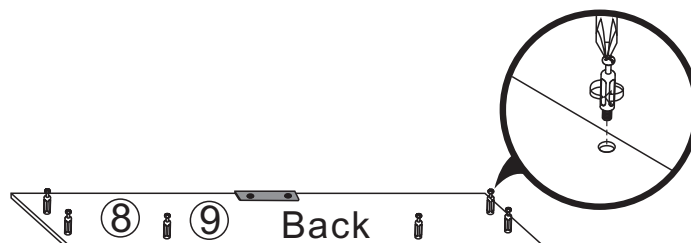


A	12 PCS	C	4 PCS	H	2 PCS
		3.5*14 mm			

7

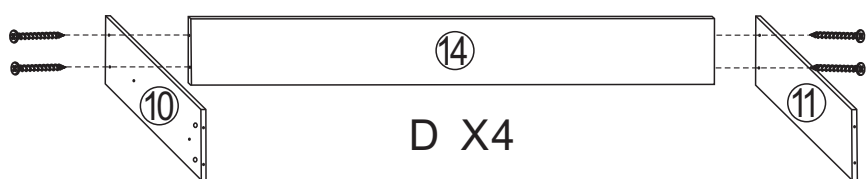

D X4

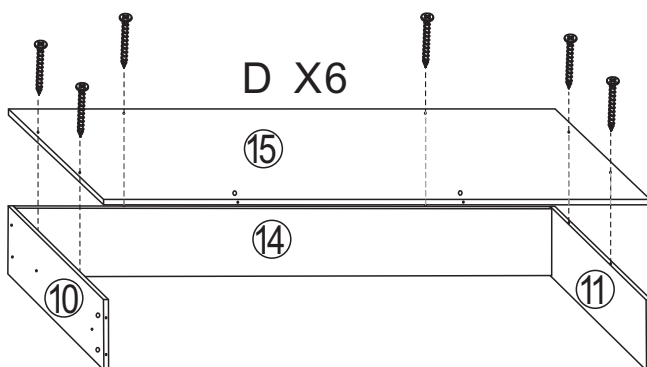


D X6

D 10 PCS




3.5*35 mm


8

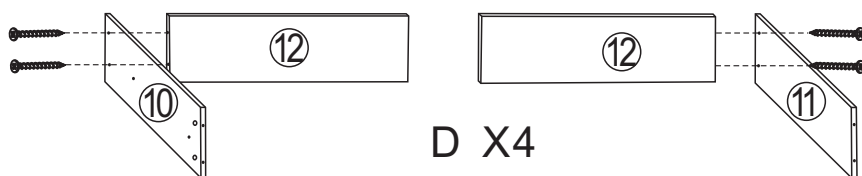

D X4

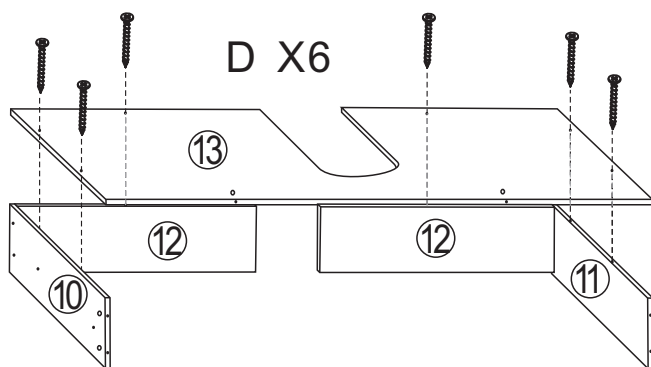


D X6

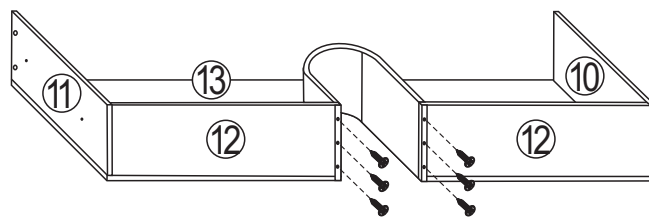

C X6

C X9

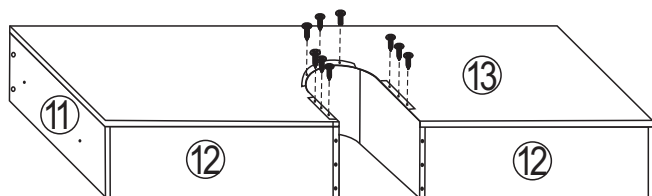

C 15 PCS




3.5*14 mm

D 10 PCS



3.5*35 mm


9

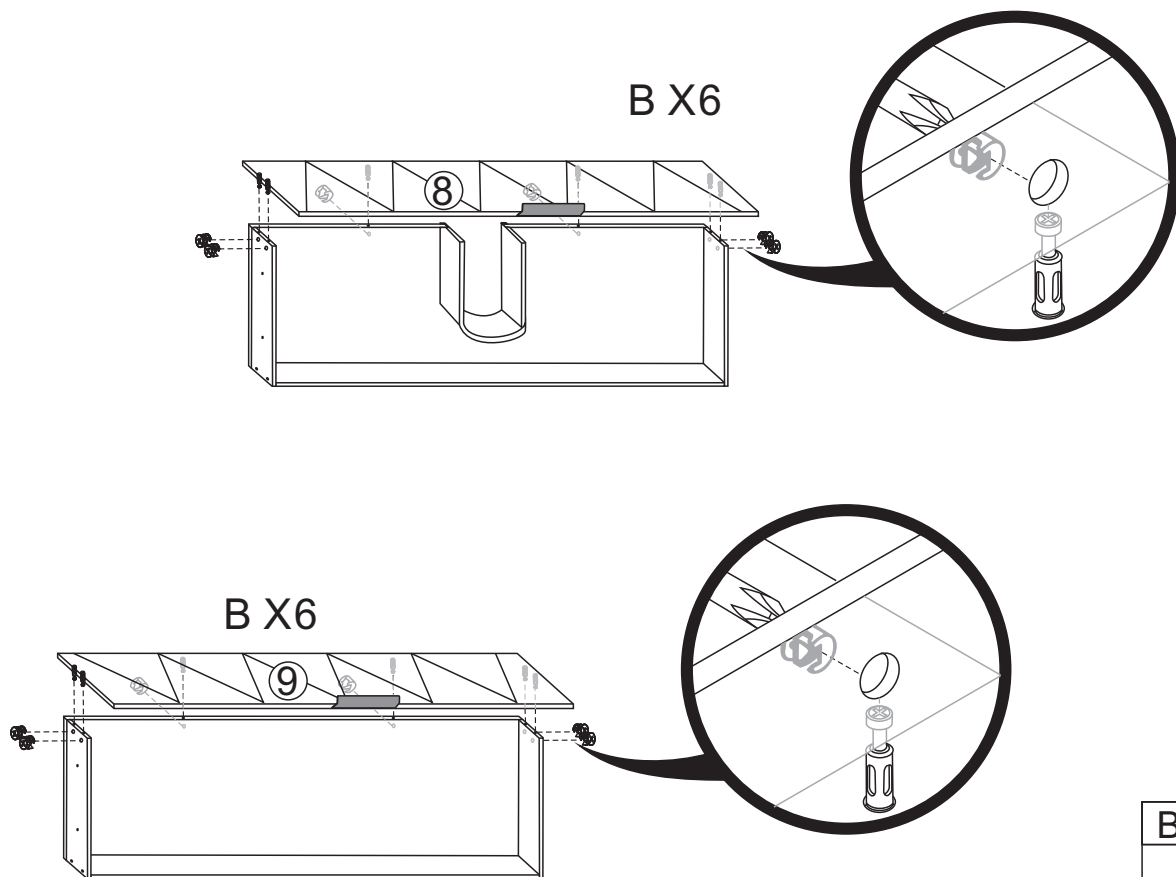

B 12 PCS



10

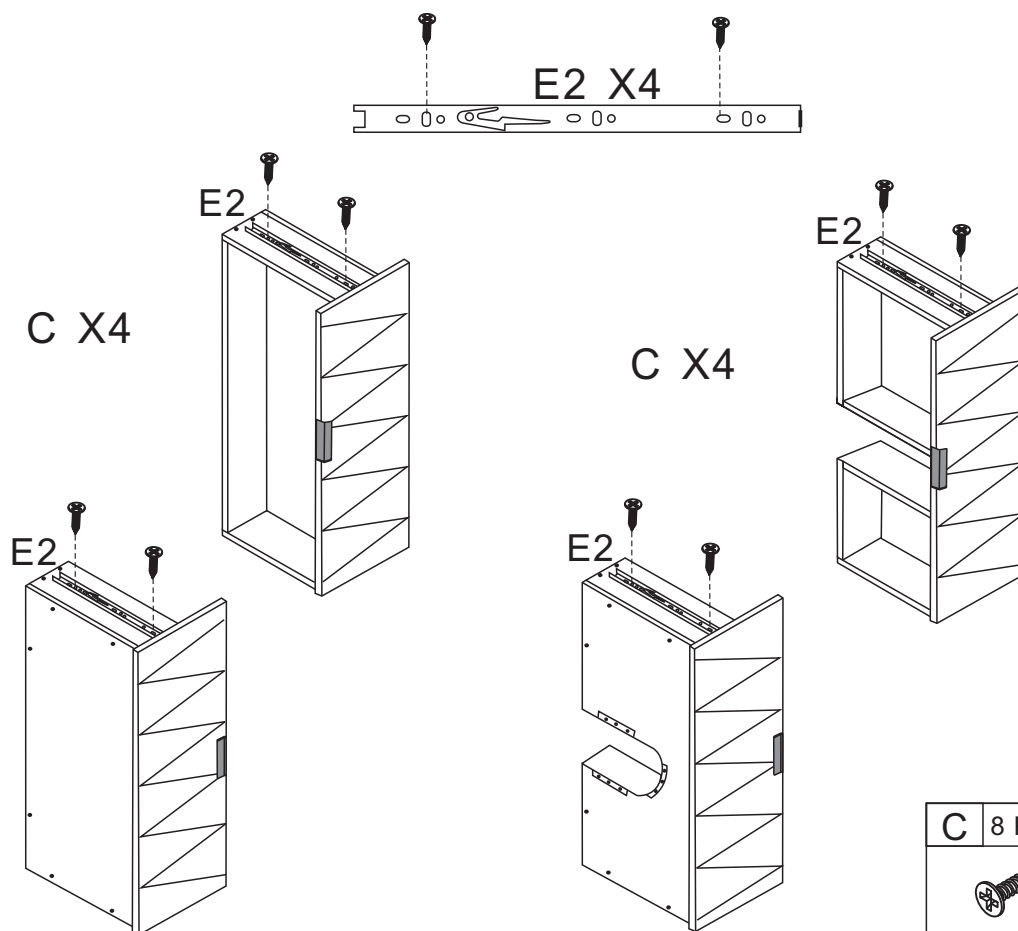

E2 X4

C 8 PCS




3.5*14 mm


E2 4 PCS




11

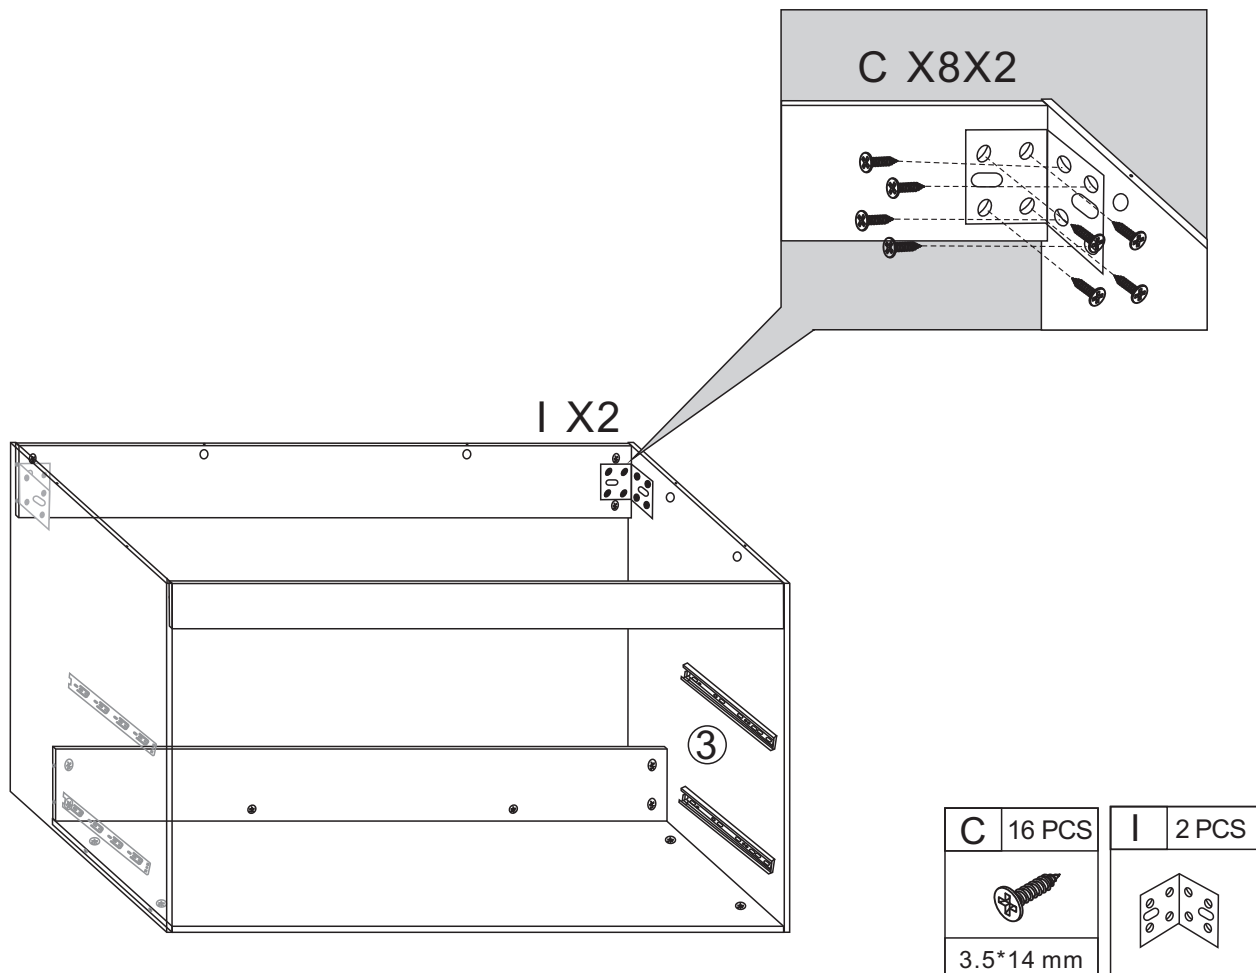


12

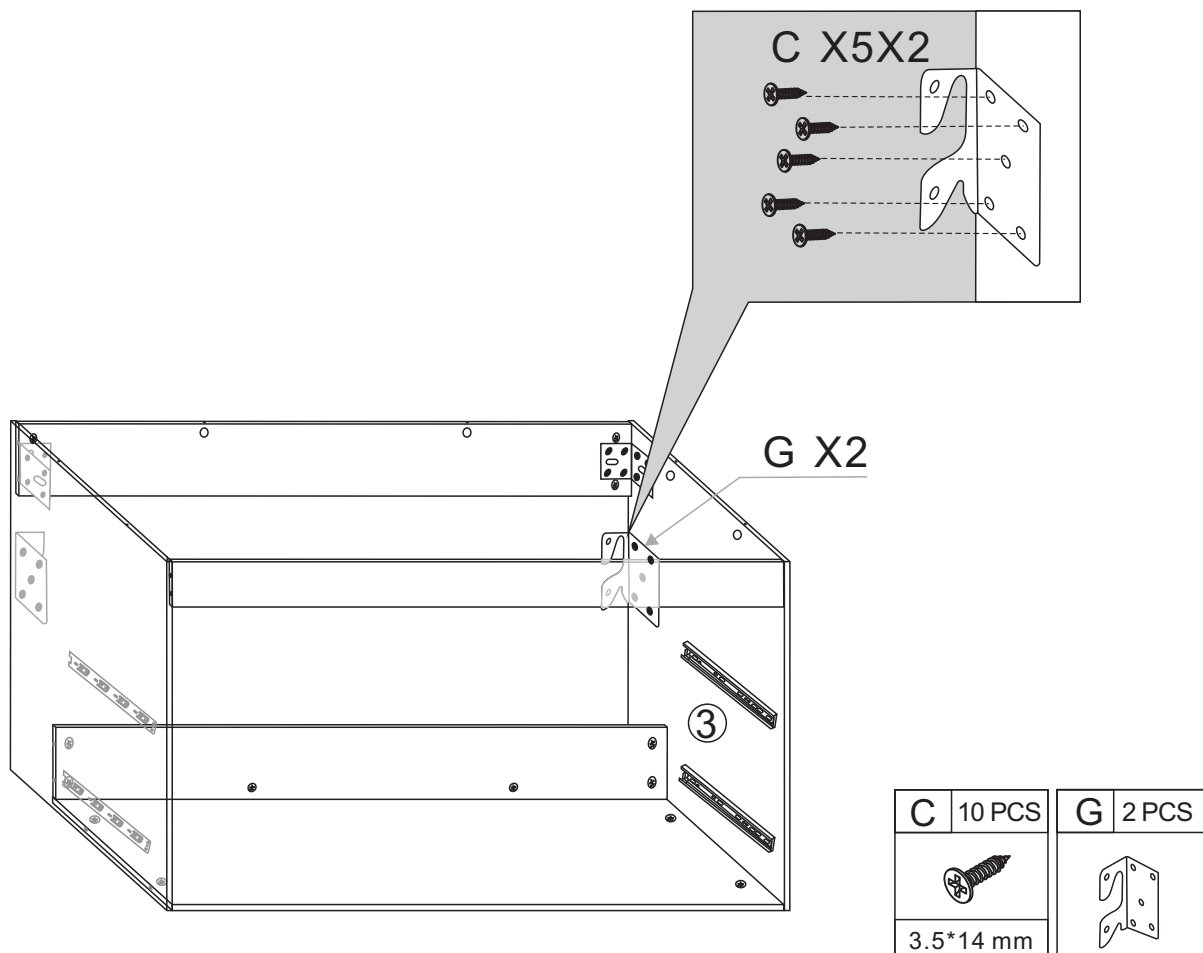

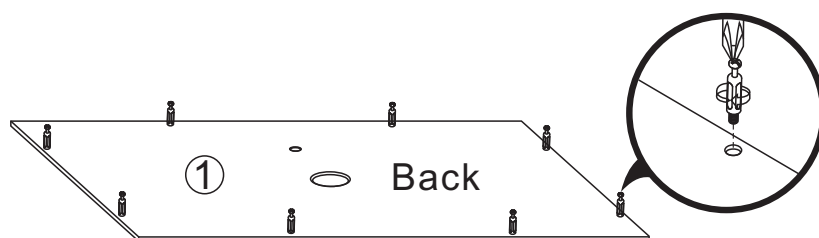


B X8

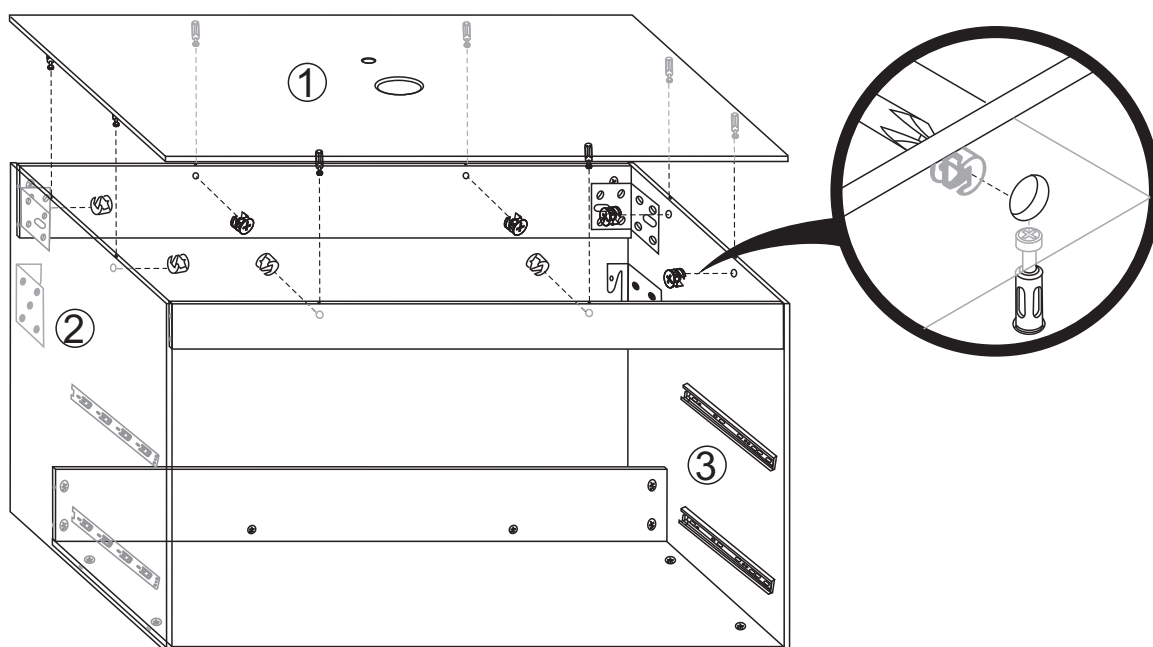


B 8 PCS



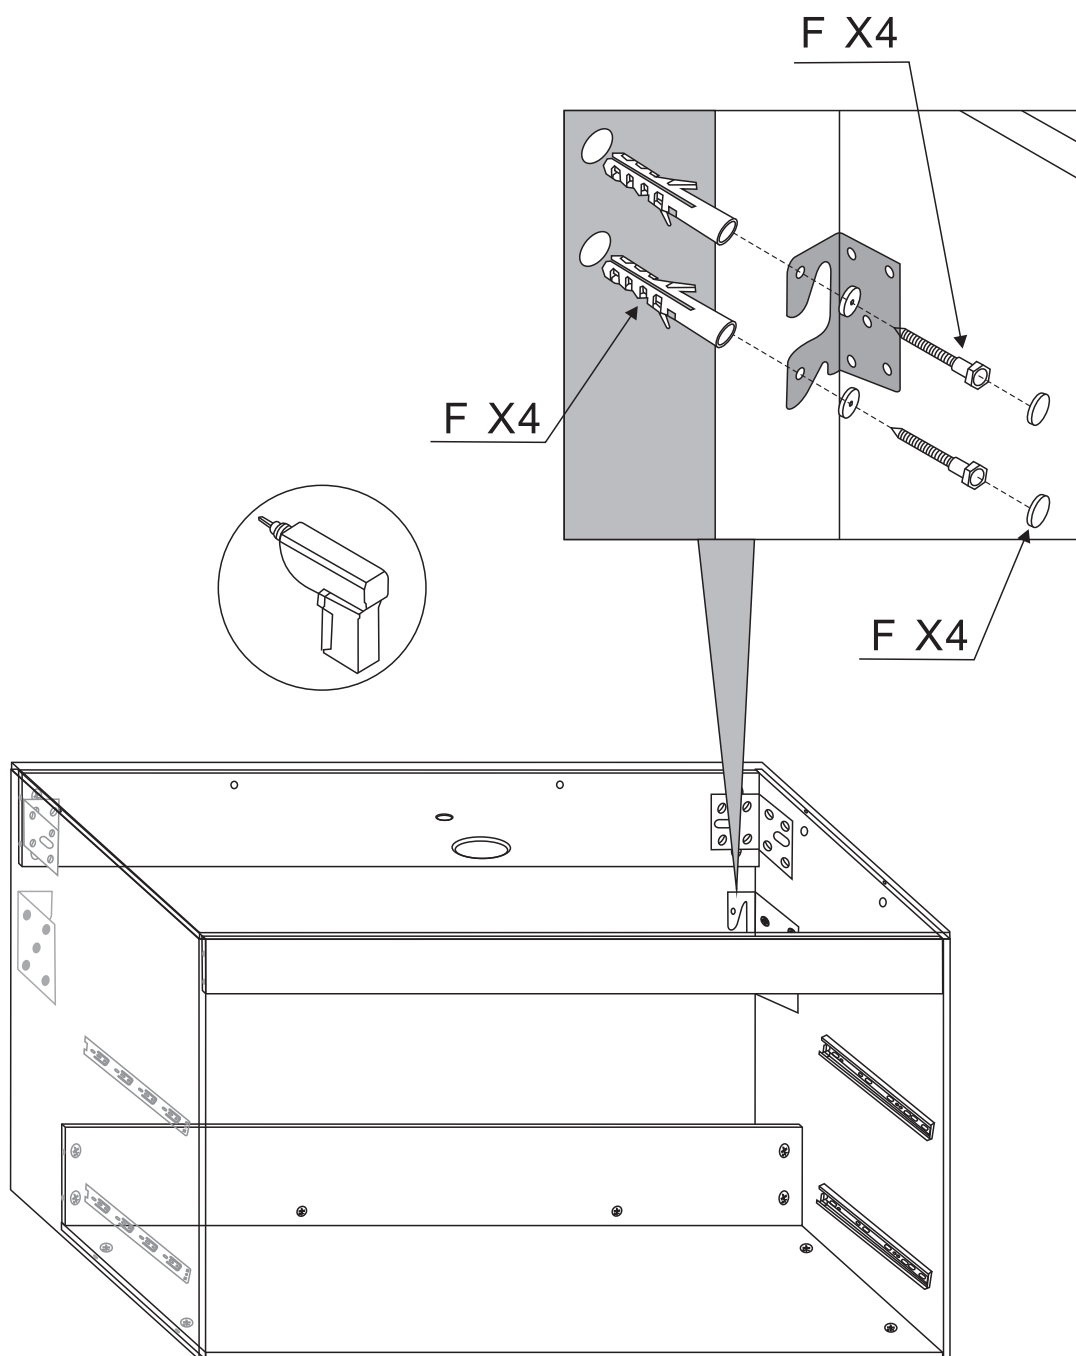

F	4 SETS
	
Expansion screw	

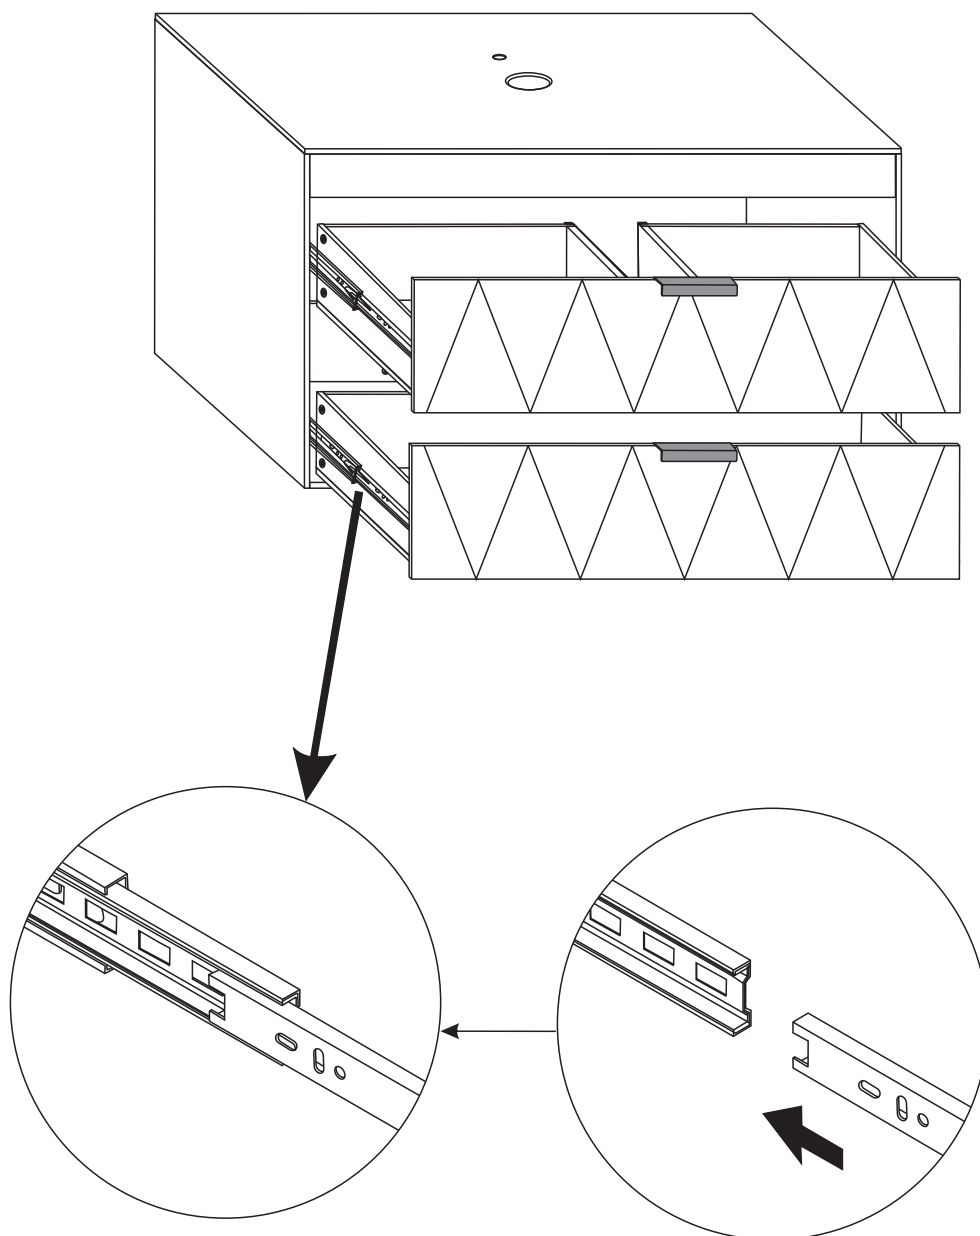

OK