
ODS-5301#

Bathroom cabinet

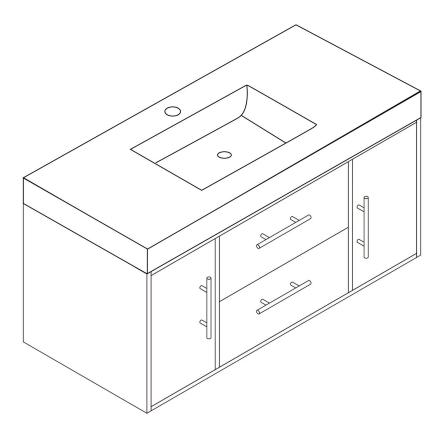






L1000*W500*H550mm


Installation Instructions

Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.

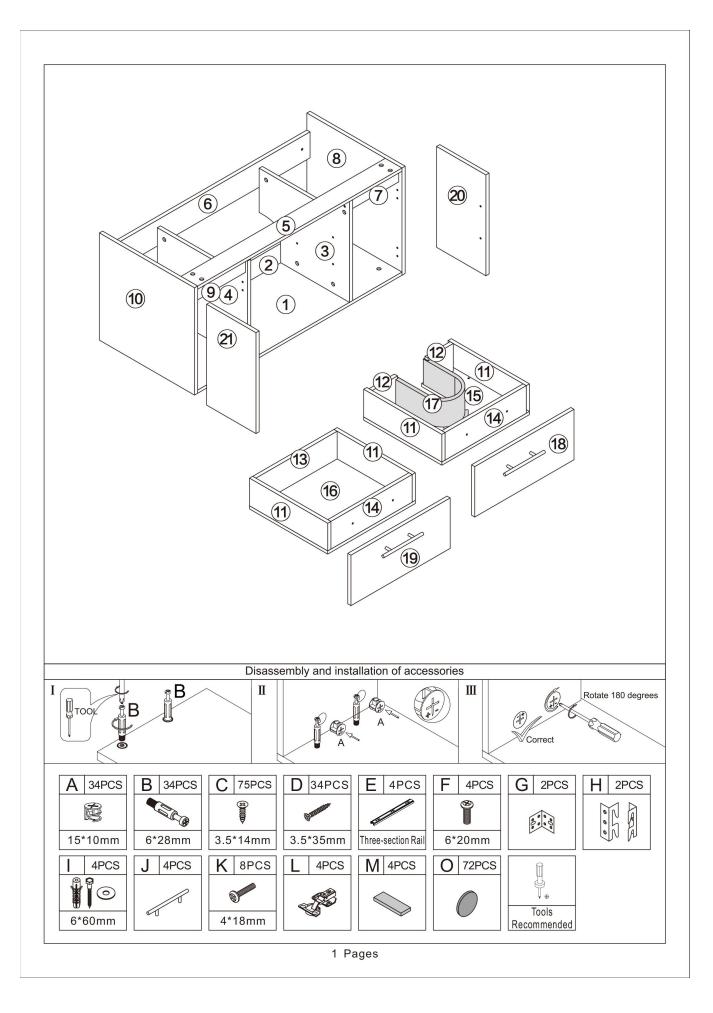


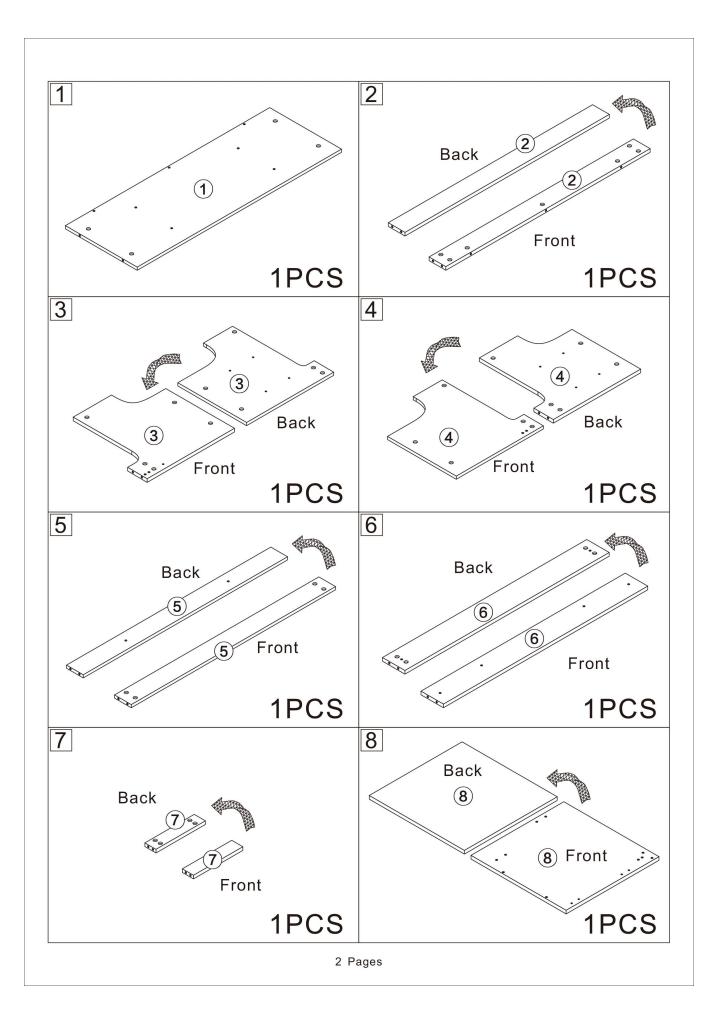


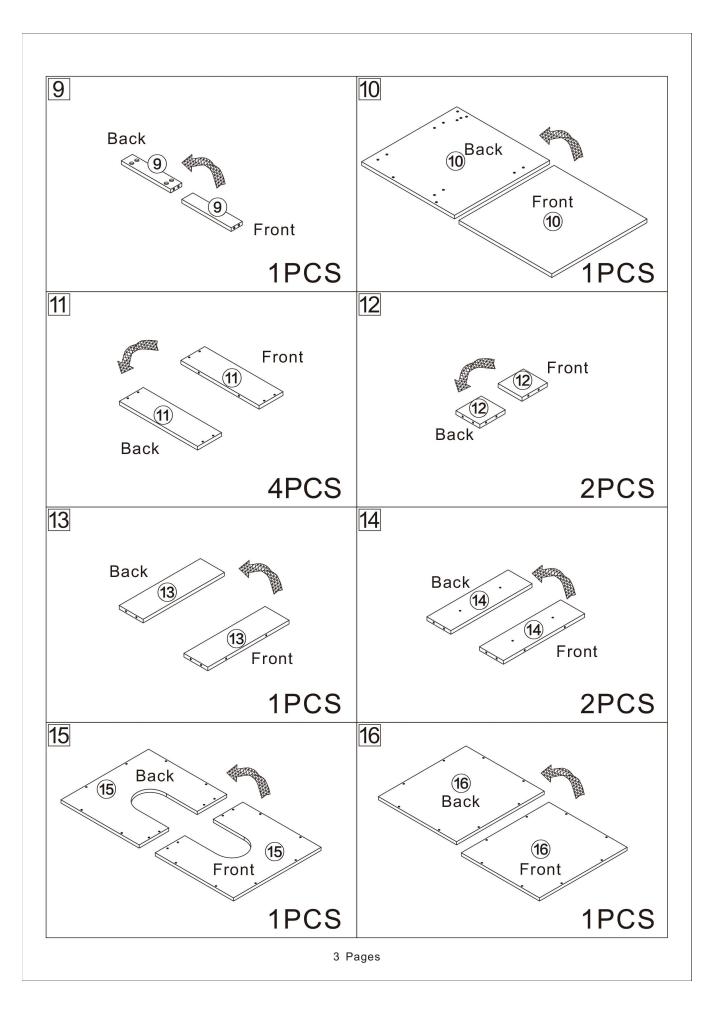


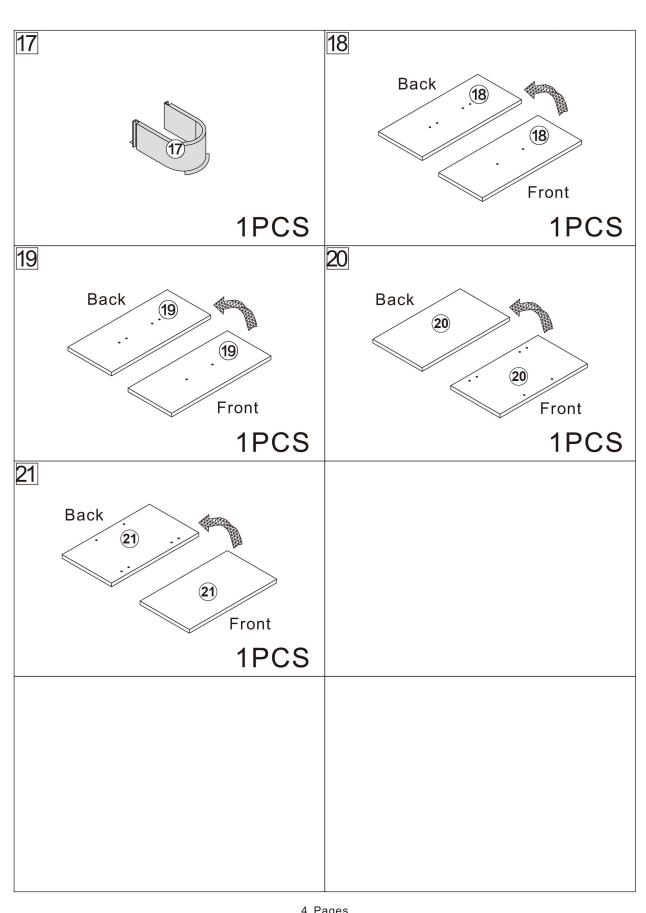



4 Pages

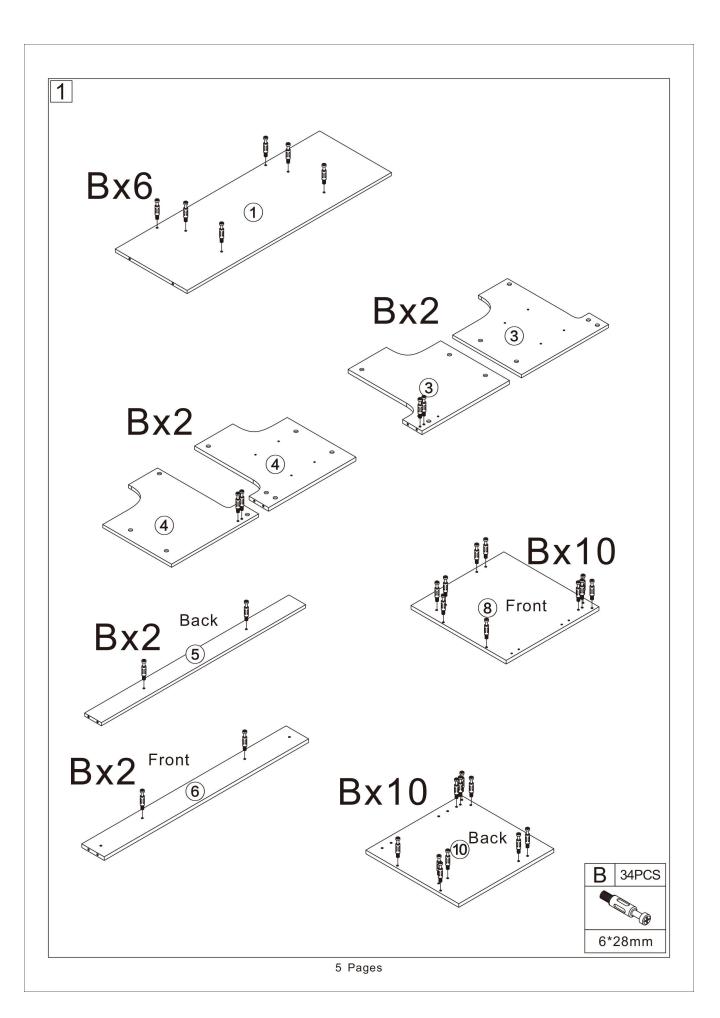


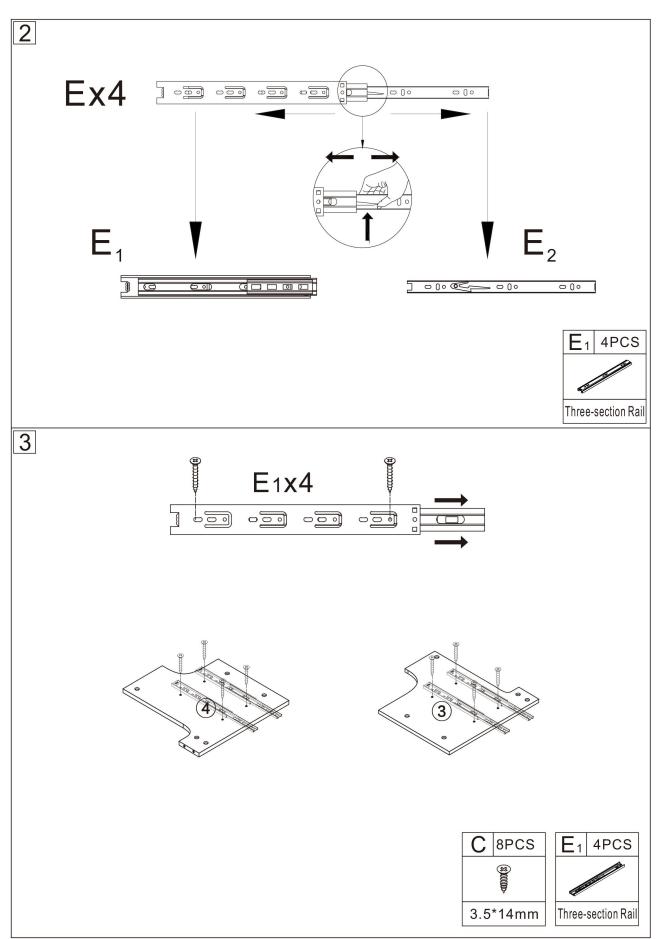


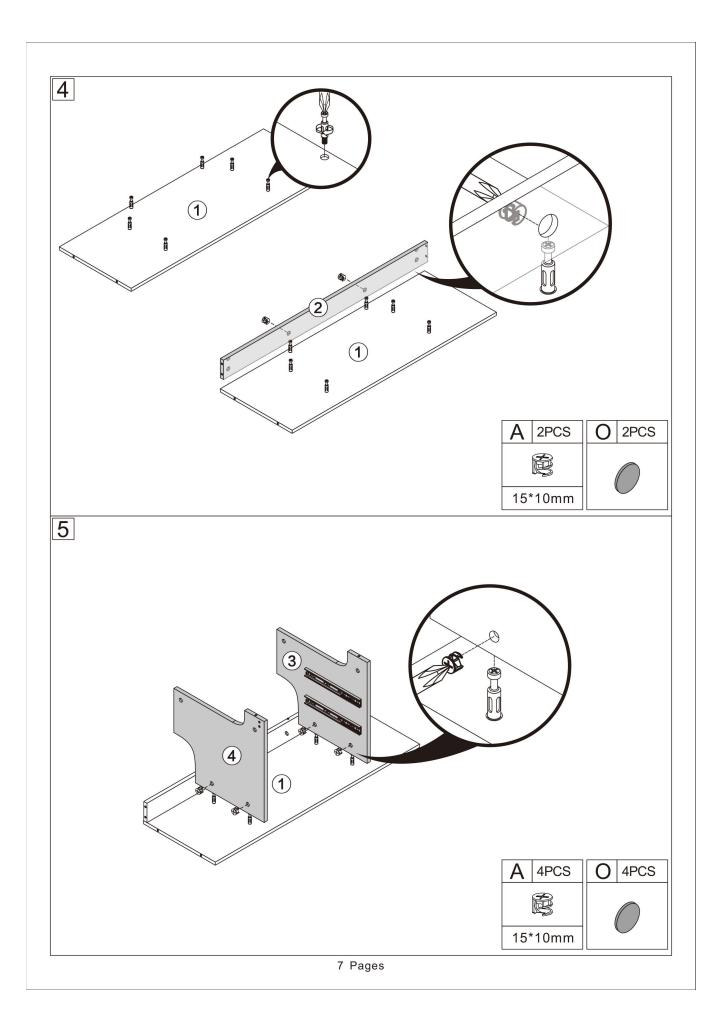


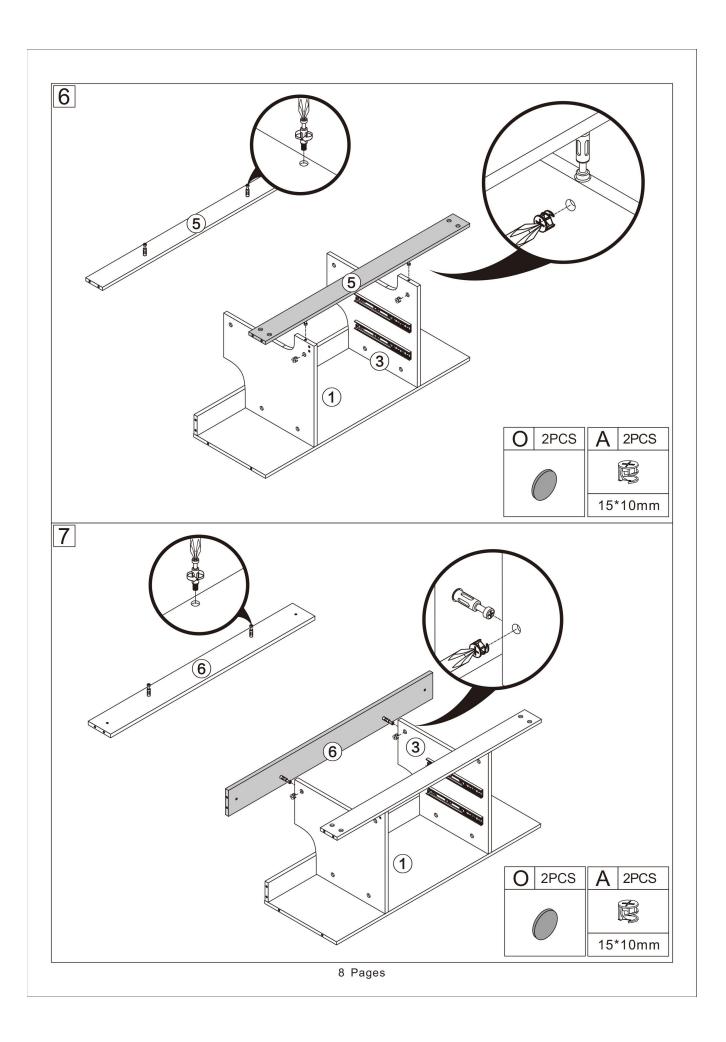

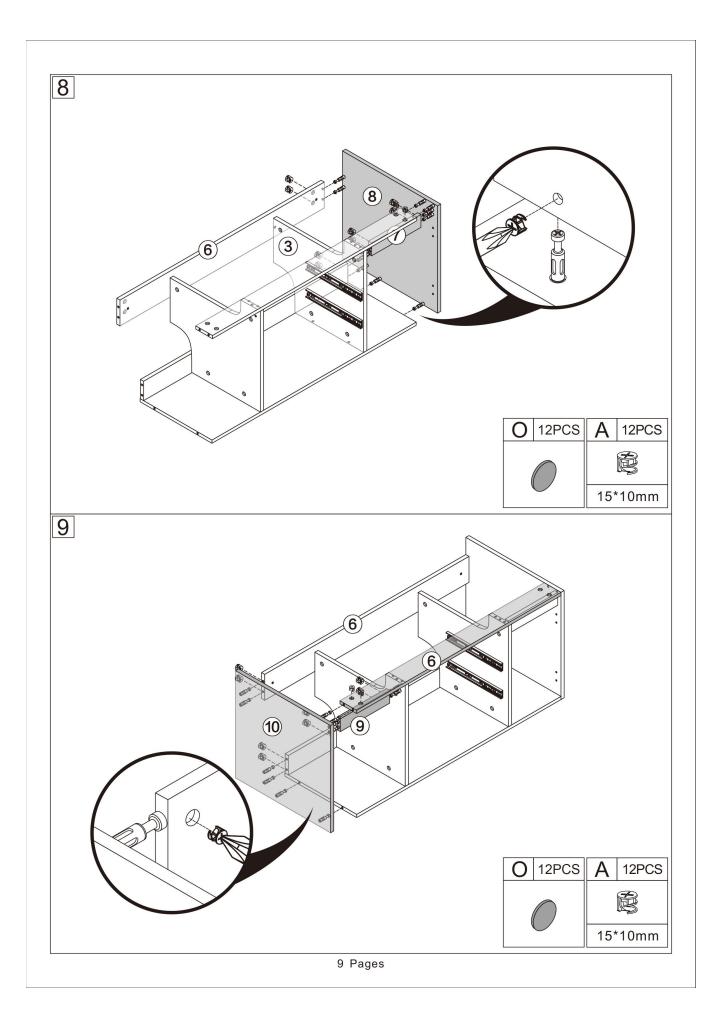


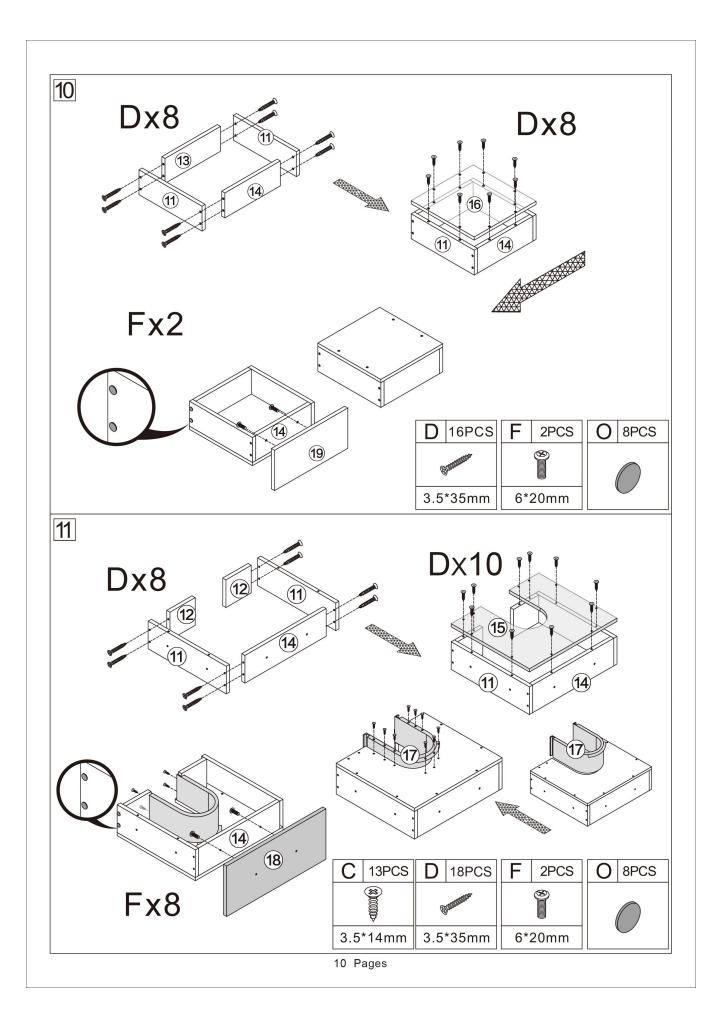


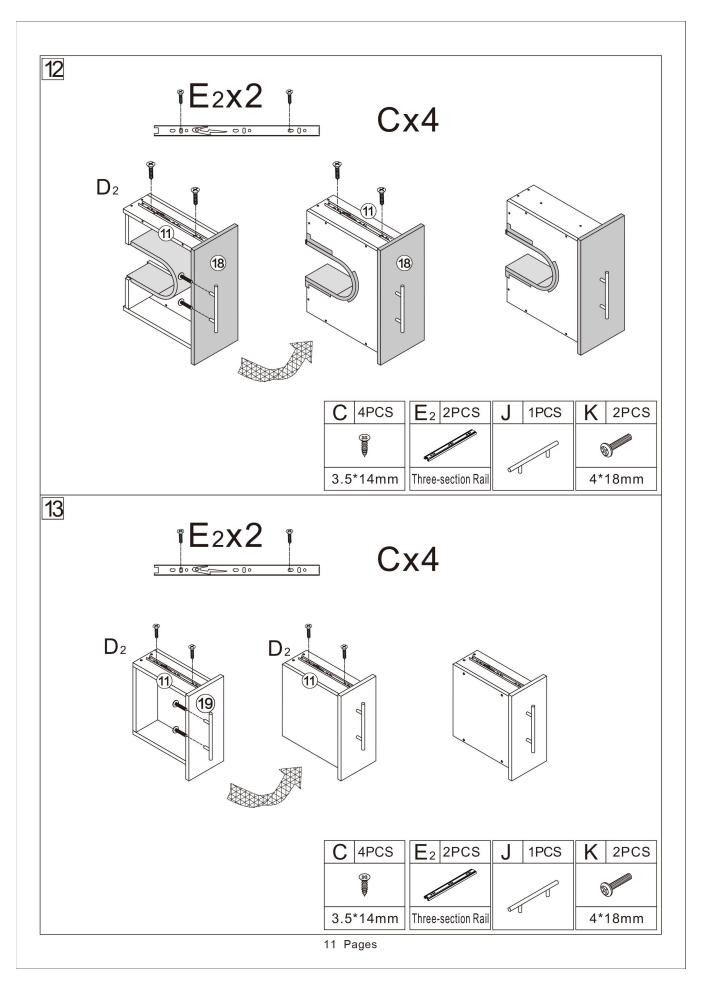

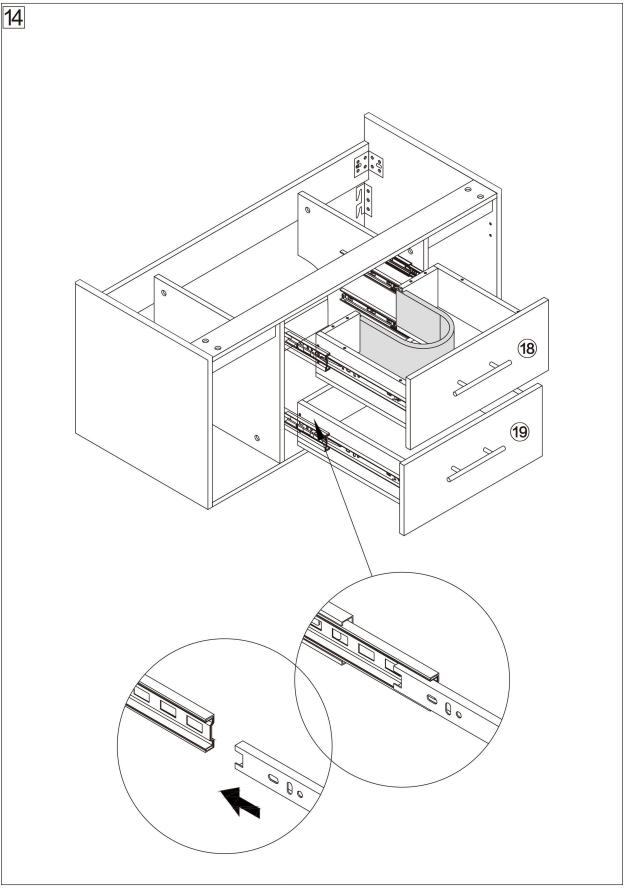

12 Pages

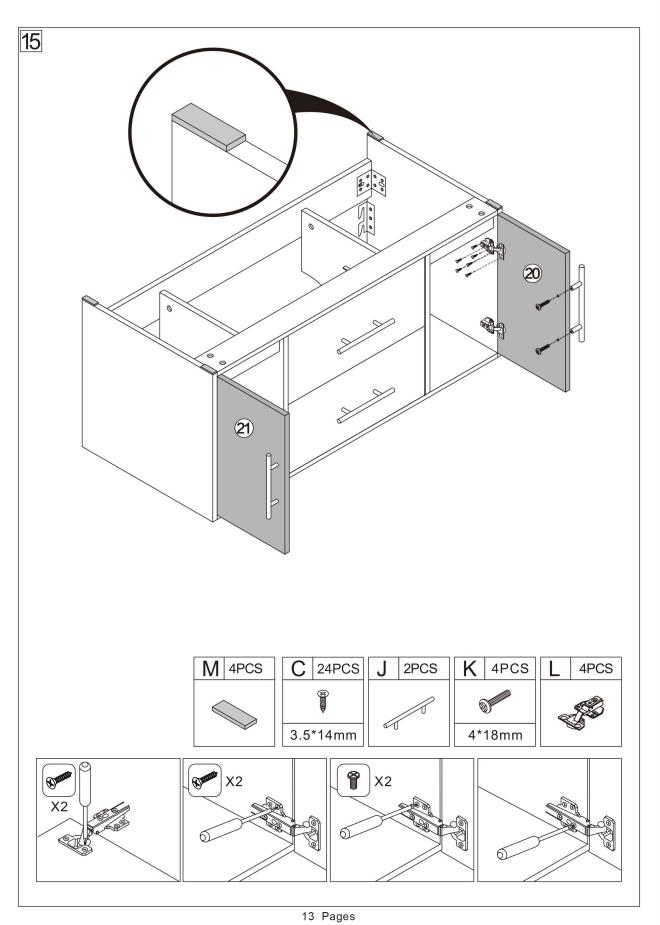

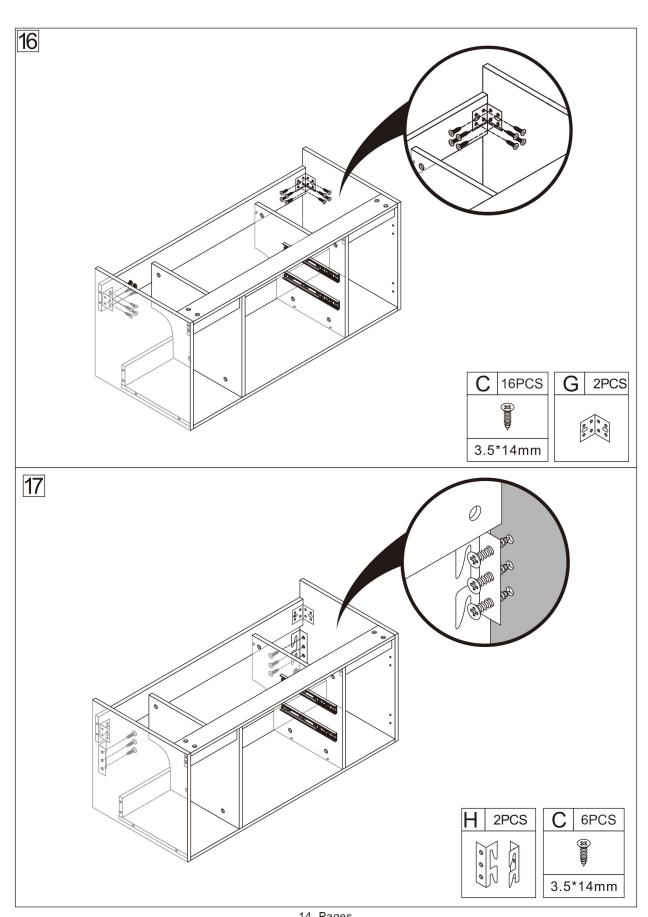

14 Pages

